


Windshield Outside Moisture Sensor Replacement

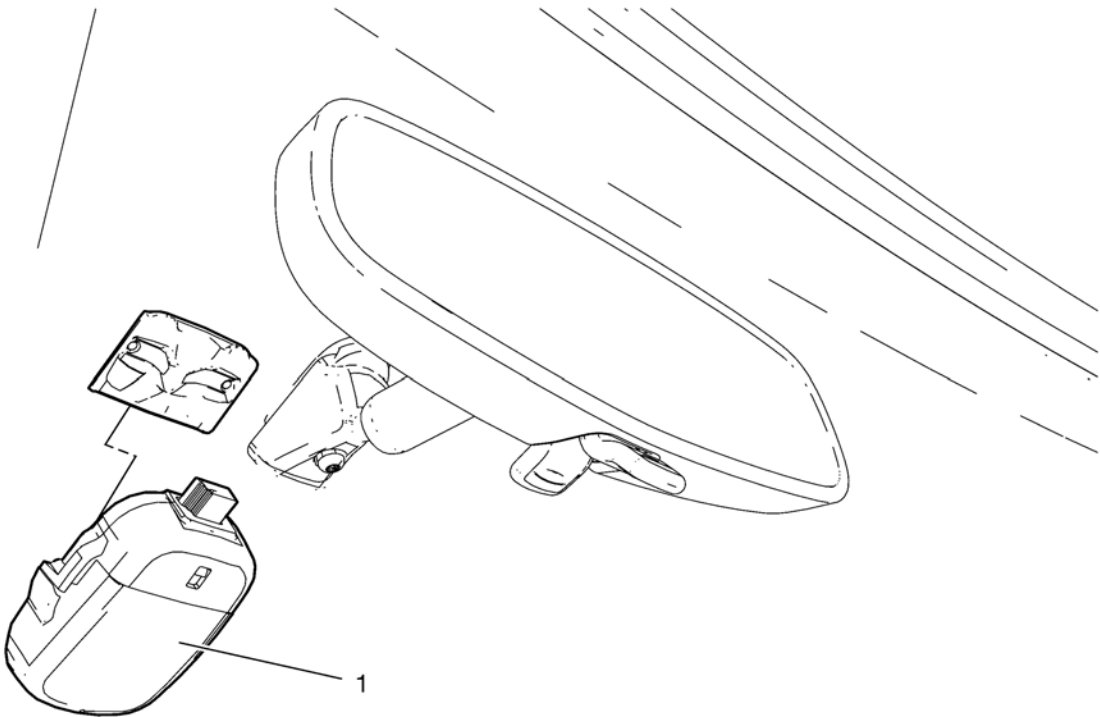

Callout	Component Name
Preliminary Procedure Remove the windshield outside moisture sensor cover. Refer to Windshield Outside Moisture Sensor Cover Replacement .	
1	Windshield Outside Moisture Sensor Tip Pull the windshield outside moisture sensor down to remove from bracket.