




12. Remove 4 fasteners (1) for the engine side cover on both sides.

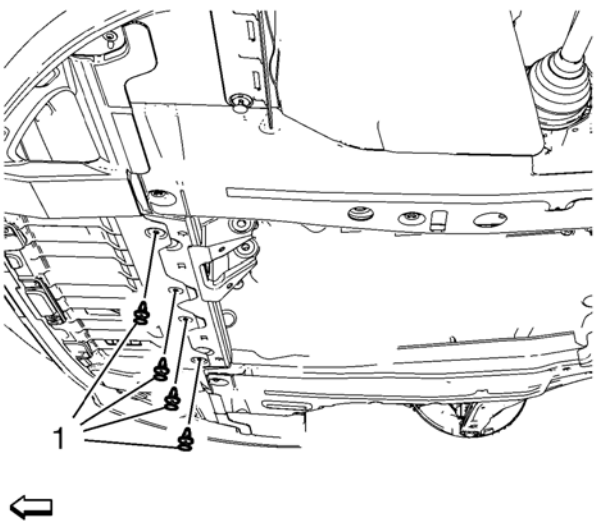

13. Remove 4 fasteners (1) for the front engine compartment cover.

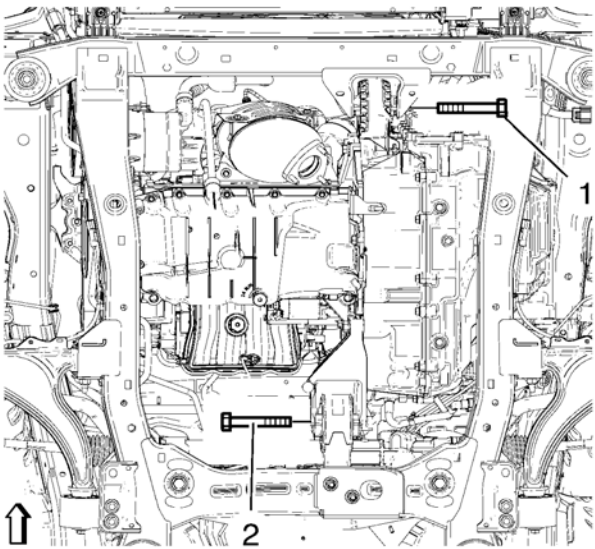

14. Remove the front and rear transmission mount bracket bolts (1, 2).

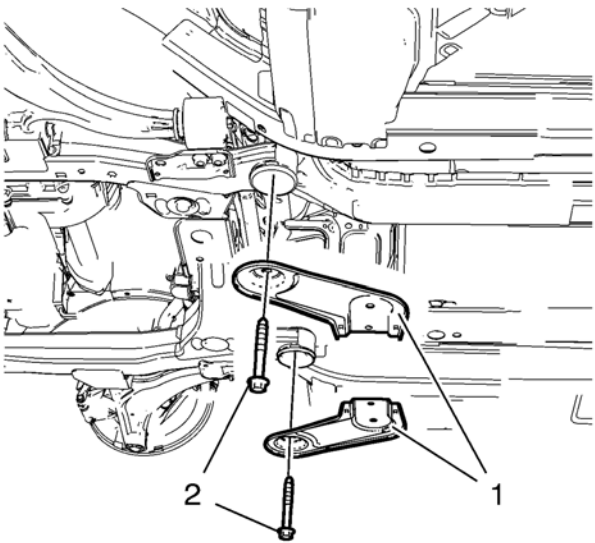

15. Remove and DISCARD 2 rear suspension frame bolts (2).
Remove rear frame reinforcements (1).

