



12. Remove 4 fasteners (1) of front engine compartment cover.

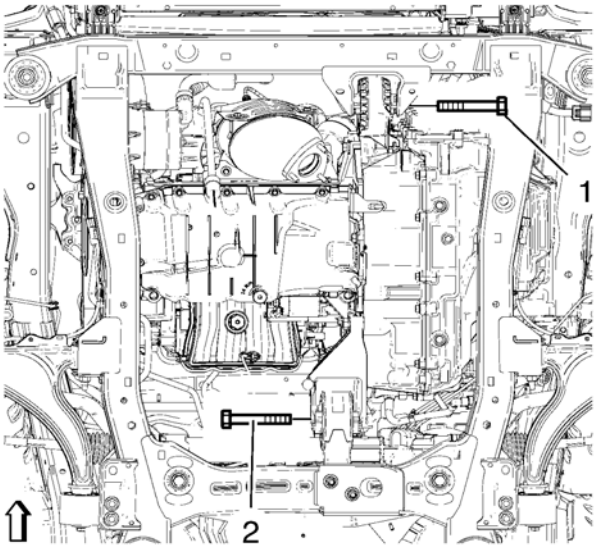

13. Remove the front (1) and the rear (2) transmission mount bracket bolts.

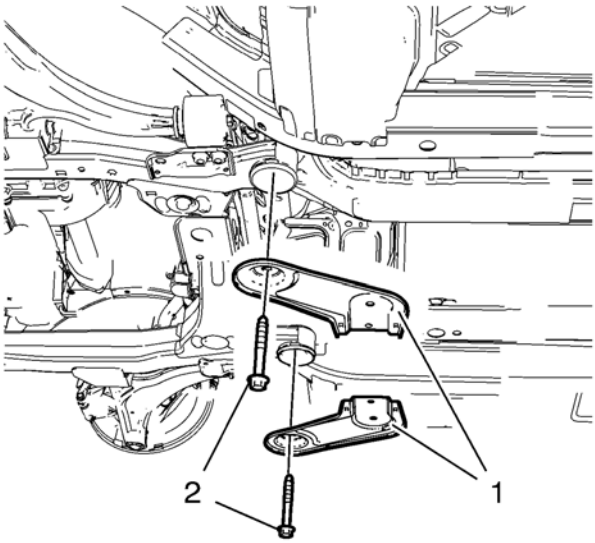

14. Remove and DISCARD 2 rear suspension frame bolts (2).  
Remove rear frame reinforcements (1).

