


Rear Side Door Adjustment

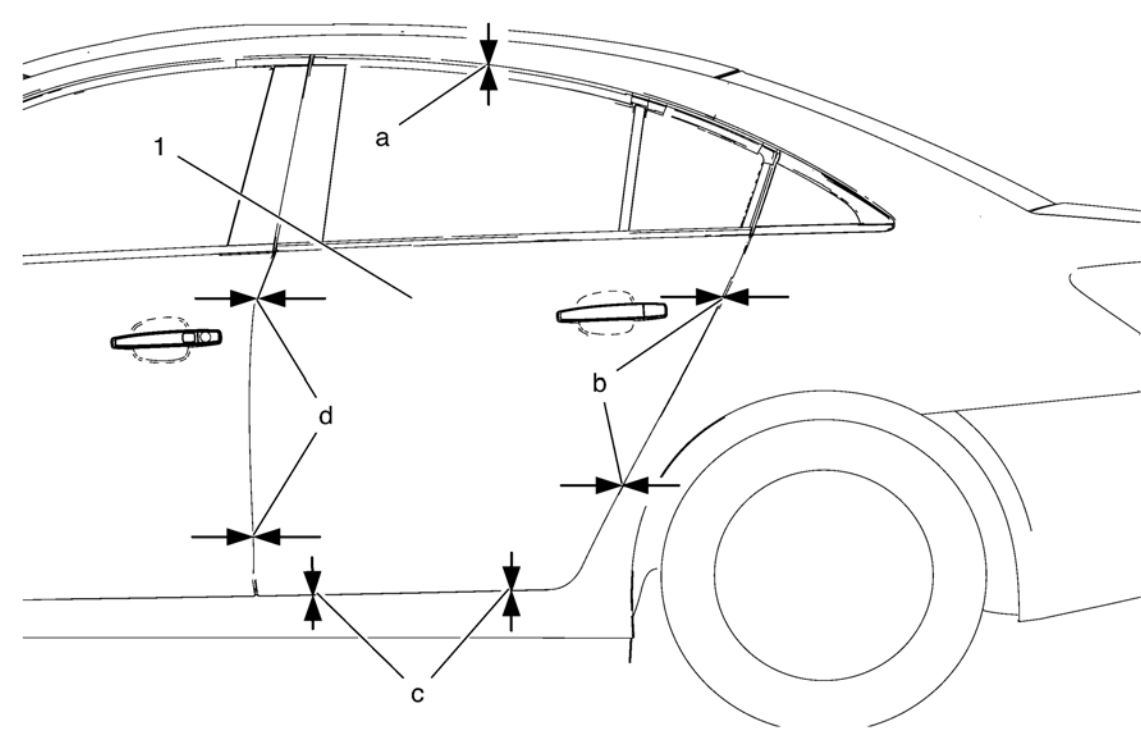

Callout	Component Name
1	<p>Rear Side Door</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Procedure</p> <ol style="list-style-type: none">Loosen the rear door hinge bolt (Qty: 4) to adjust the rear door.Adjust the rear door in order to obtain an even gap between the rear door and the roof, the quarter outer panel, the rocker panel and the front side door and so that the rear door is flush with the roof, the quarter outer panel, the rocker panel and the front side door. <p>Adjustment</p> <ul style="list-style-type: none">Rear side door to roof (a) 6.0 mm ± 1.0 mm (0.24 in ± 0.04 in)Rear side door to quarter outer panel (b) 3.5 mm ± 0.75 mm (0.14 in ± 0.03 in)Rear side door to rocker panel (c) 4.5 mm ± 1.0 mm (0.18 in ± 0.04 in)Rear side door to front side door (d) 3.5 mm ± 0.75 mm (0.14 in ± 0.03 in) <p>Tighten 25 N·m (19 lb ft)</p>