


Tail Lamp Replacement

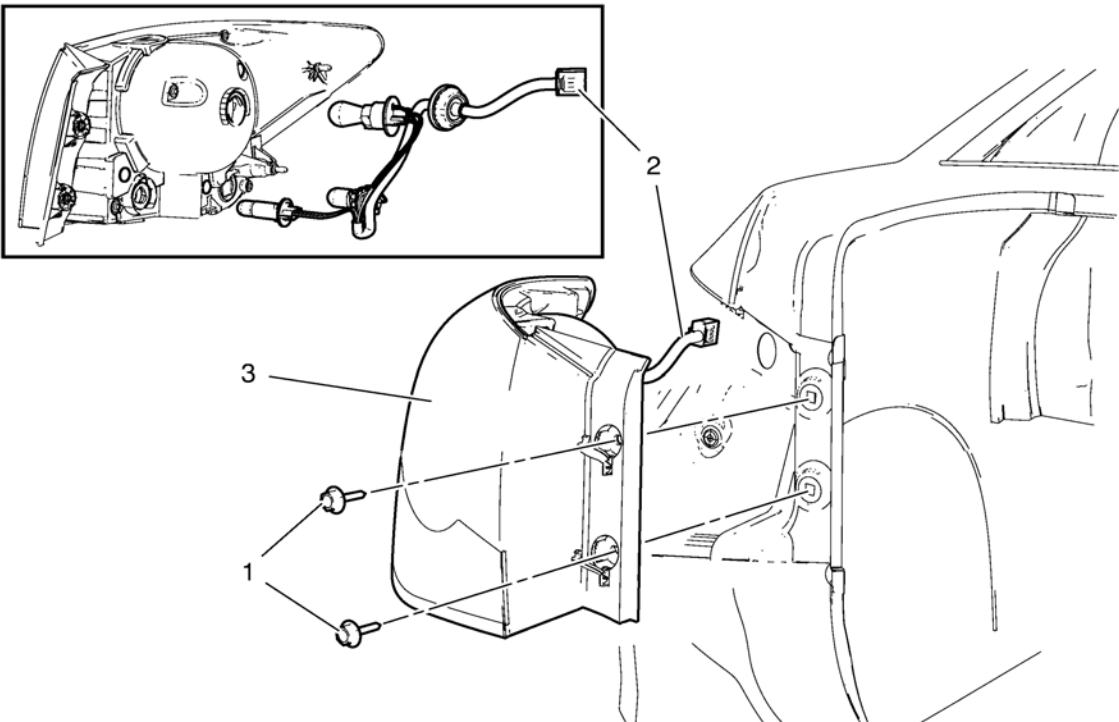

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Open and support the rear compartment lid.</p> <p>2. Remove the body side trim panel replacement in order to expose the tail lamp pocket nuts. Refer to Body Side Trim Panel Replacement - Left Side.</p>	
1	<p>Tail Lamp Bolt (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 2.5 N·m (22 lb ft)</p>
2	<p>Tail Lamp Control Module with Bulb Assembly</p> <p>Tip Rotate the control module with bulbs counterclockwise and remove from the tail lamp housing.</p>
3	<p>Tail Lamp Assembly</p> <p>Warning: Refer to Halogen Bulb Warning in the Preface section.</p> <p>Procedure</p> <p>1. Using a blunt tool, tap gently on the tail lamp studs before attempting to remove the tail lamp assembly from the lamp pocket.</p> <p>2. Pull the tail lamp assembly rearward.</p> <p>3. Disconnect the tail lamp control module with bulbs assembly electrical connector.</p>