


Wheel Alignment - Steering Wheel Angle and/or Front Toe Adjustment

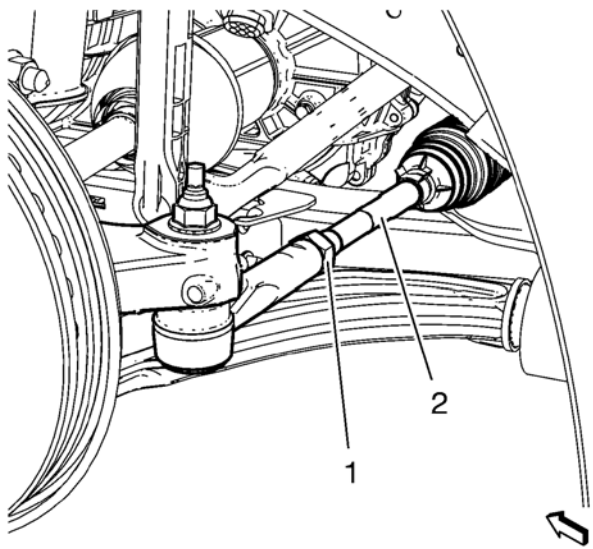

1. Ensure that the steering wheel is set in a straight ahead position.
2. Loosen the tie rod jam nut (1).
3. Adjust the toe to specification by turning the adjuster (2). Refer to [Wheel Alignment Specifications](#).

Caution: Refer to [Fastener Caution](#) in the Preface section.

4. Tighten the tie rod jam nut (1) to **35 N·m (26 lb ft)**.