


Steering Angle Sensor Replacement

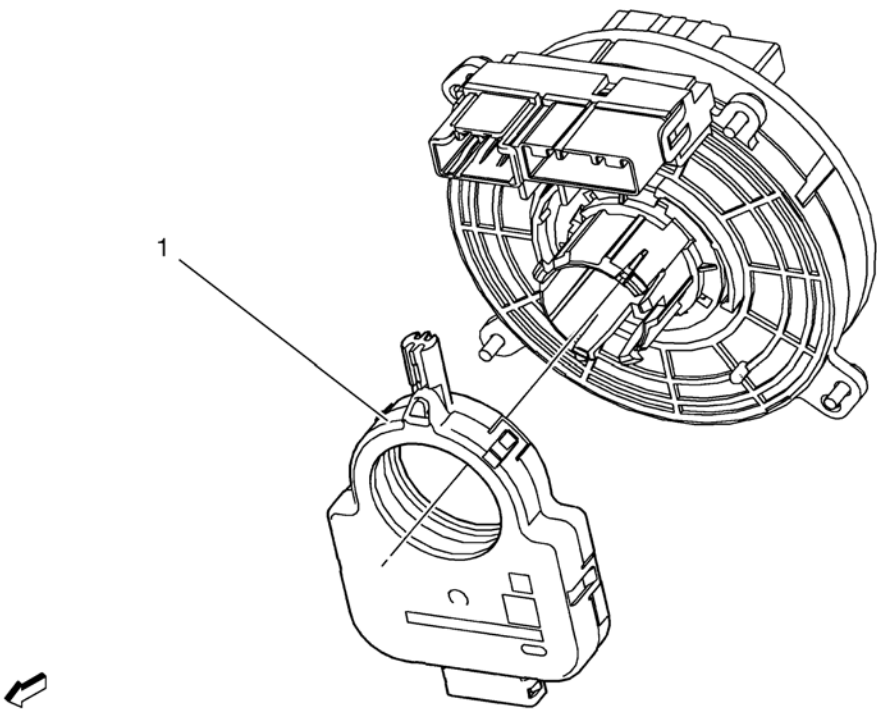

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the steering wheel inflatable restraint module coil. Refer to Steering Wheel Inflatable Restraint Module Coil Replacement.</p>	
1	<p>Steering Wheel Position Sensor</p> <p>Warning: Never rotate the steering angle sensor. Rotating the steering angle sensor could limit the operation of the electronic power steering (EPS) system, and result in personal injury.</p> <p>Procedure</p> <ol style="list-style-type: none">1. Press in the clip on the inflatable restraint steering wheel module clock-spring coil to remove the sensor.2. Calibrate the steering angle sensor. Refer to Power Steering Control Module Calibration.