



Rear Spring Insulator Replacement

Removal Procedure

1. Raise and suitably support the vehicle. Refer to [Lifting and Jacking the Vehicle](#).
2. Support the rear axle with a tall jack stand near the shock absorber.
3. Remove the lower shock bolt. Refer to [Shock Absorber Replacement](#).
4. Using the tall jack stands, slowly lower the rear axle in order to remove tension from the rear springs.

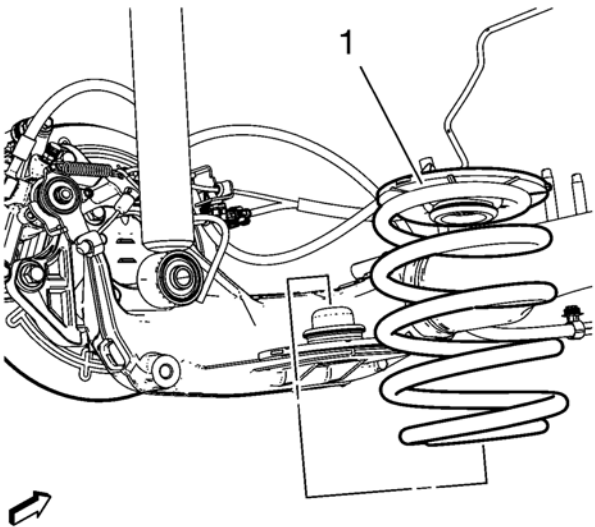


5. Remove the spring (1).

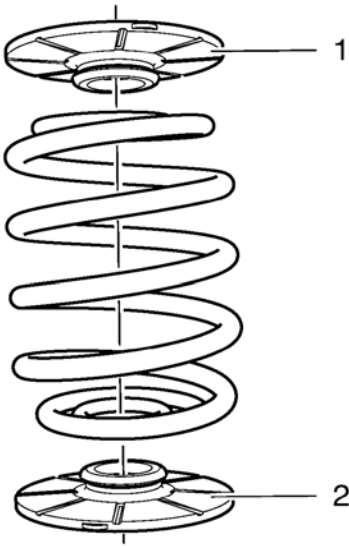

6. Remove the lower and upper rear spring insulators (1, 2).

Installation Procedure

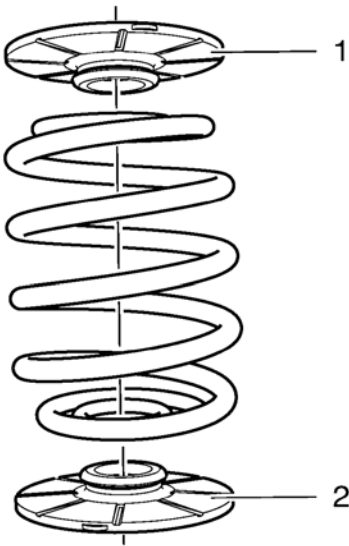

Note: The rear springs are indexed with the colored tag toward the rear of the vehicle. No up/down or side to side orientation is required.

1. Install the lower and upper rear spring insulators (1, 2).