


Rear Seat Cushion Cover and Pad Replacement

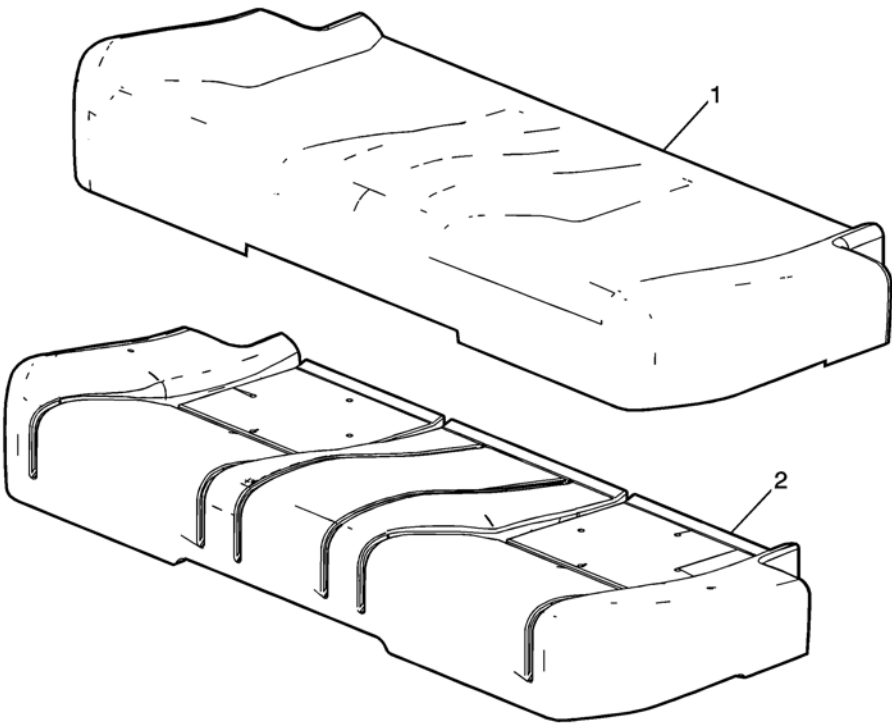

Callout	Component Name
Preliminary Procedure Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement .	
1	Rear Seat Cushion Cover Procedure <div>1. Remove the hog rings that secure the rear seat cushion cover to the pad. 2. Remove seat cushion cover from Velcro.</div>
2	Rear Seat Cushion Pad