


## Front Seat Cushion Outer Trim Panel Replacement

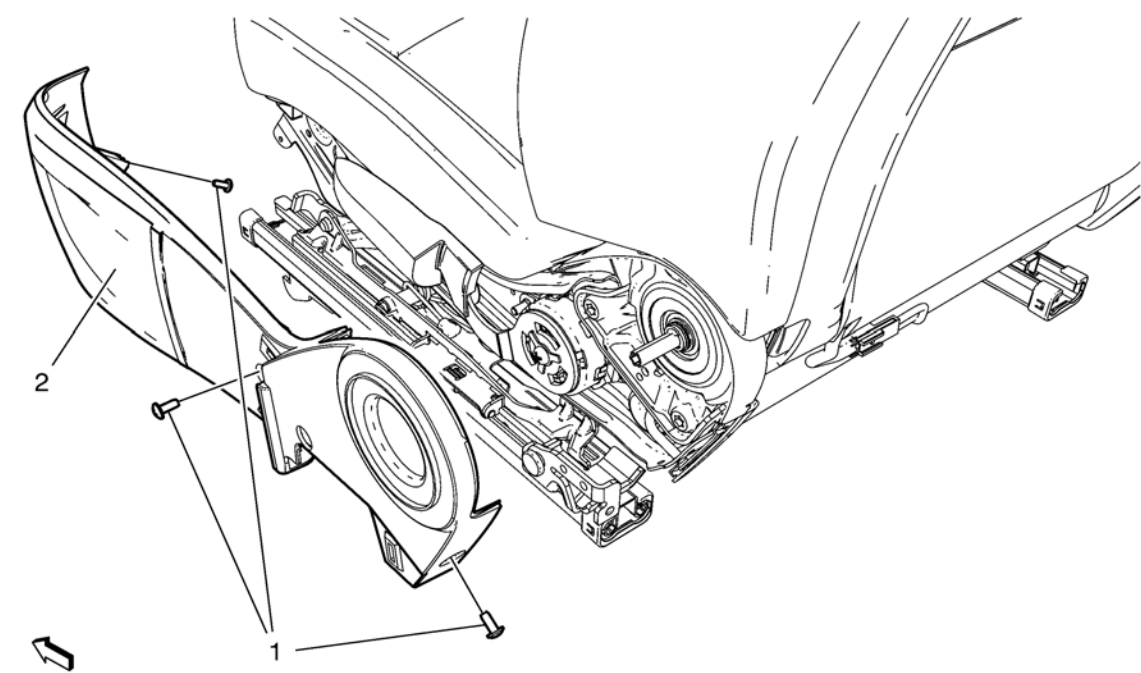

Callout	Component Name
<b>Preliminary Procedure</b>  1. Driver or passenger seat replacement. Refer to <a href="#">Driver or Passenger Seat Replacement</a> 2. Remove front seat adjuster handle, if equipped. Refer to <a href="#">Front Seat Adjuster Replacement</a> 3. Remove the front seat recliner handle. Refer to <a href="#">Driver or Passenger Seat Recliner Handle Replacement</a>	
1	Seat Cushion Outer Trim Panel Screw (Qty: 3)  <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.  <b>Tighten</b> 2.5 N·m (22 lb in)
2	Seat Cushion Outer Trim Panel