



11. Install and tighten 4 fasteners (1) to the engine side cover on both sides.

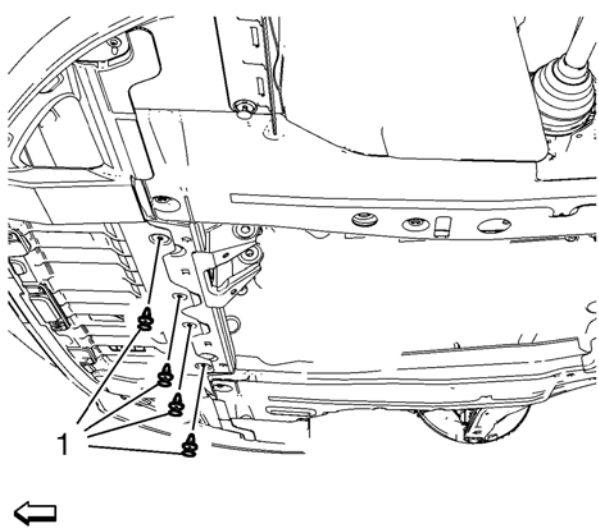

12. Install and tighten 4 fasteners (1) to the front engine compartment cover.
13. Install the front compartment insulator, if equipped.
14. Install the engine shield, if equipped.
15. Install the exhaust flexible pipe. Refer to [Exhaust Flexible Pipe Replacement](#).

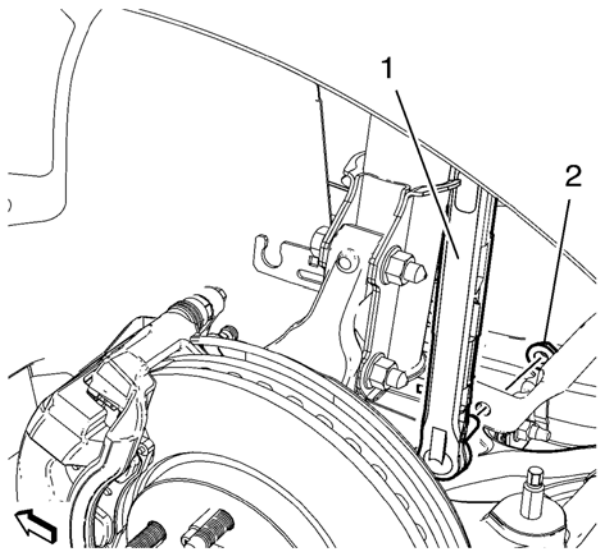

16. Install and tighten lower stabilizer link shaft nut (2) on both sides to **35 N·m (26 lb ft)**
17. Lower the vehicle.
18. Install the front tire and wheel assemblies. Refer to [Tire and Wheel Removal and Installation](#)