

Front Wheel Bearing and Hub Replacement


Special Tools

EN-45059 Torque Angle Sensor Kit


For equivalent regional tools, refer to [Special Tools](#).

Removal Procedure

1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#).
2. Remove the brake rotor. Refer to [Front Brake Rotor Replacement](#).

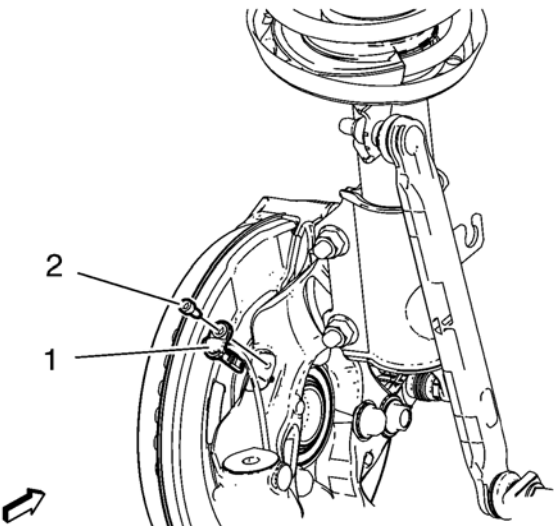

3. Remove the wheel speed sensor screw (2).
4. Remove the wheel speed sensor (1) from the steering knuckle.
5. Remove the wheel drive shaft from the front wheel bearing/hub. Refer to front wheel drive shaft replacement [Front Wheel Drive Shaft Replacement - Left Side](#) and/or [Front Wheel Drive Shaft Replacement - Right Side](#).

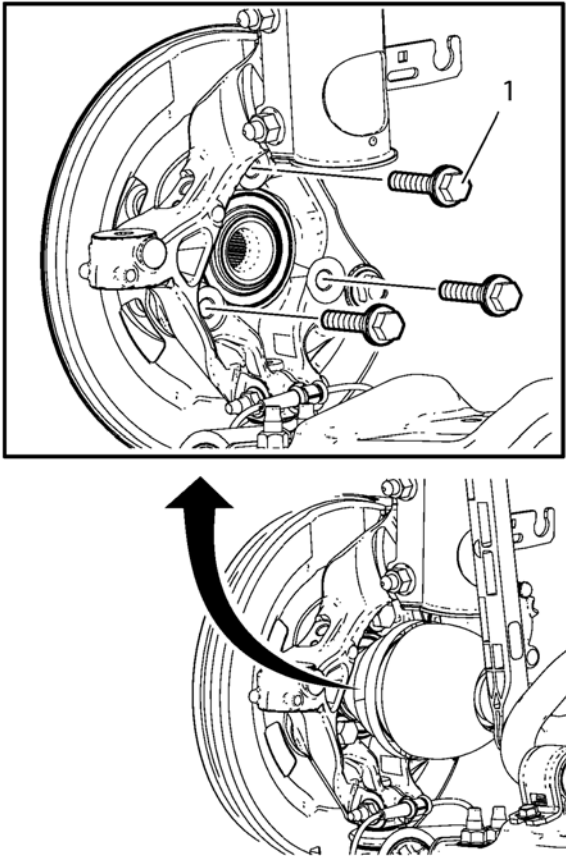

6. Remove and discard the front wheel bearing/hub bolts (1).

