


Roof Side Rail Inflatable Restraint Module Replacement

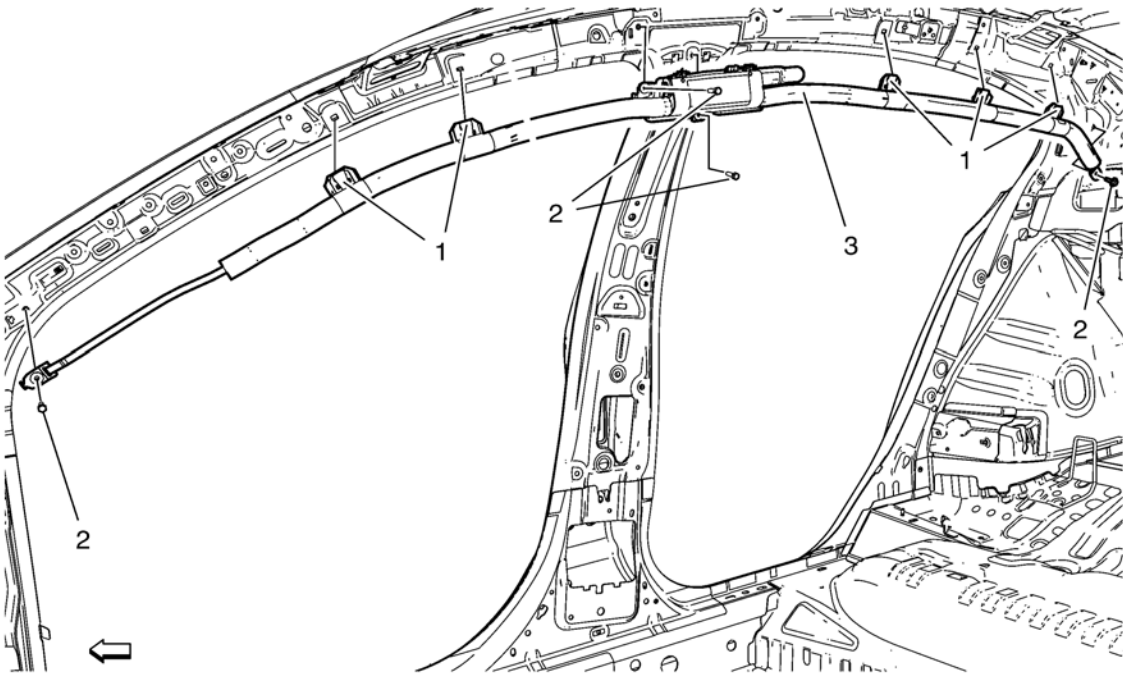

Callout	Component Name
<p><b>Warning:</b> In order to prevent SIR deployment, personal injury, or unnecessary SIR system repairs, do not strike the door or the door pillar in the area of the side impact sensor (SIS). Turn OFF the ignition and remove the key when performing service in the area of the SIS.</p> <p><b>Warning:</b> When performing service on or near the SIR components or the SIR wiring, the SIR system must be disabled. Refer to SIR Disabling and Enabling . Failure to observe the correct procedure could cause deployment of the SIR components, personal injury, or unnecessary SIR system repairs.</p> <p><b>Preliminary Procedure</b></p> <ol style="list-style-type: none"><li>1. Disable SIR system. Refer to <a href="#">SIR Disabling and Enabling</a>.</li><li>2. Remove the headliner. Refer to <a href="#">Headlining Trim Panel Replacement</a>.</li></ol>	
1	Inflatable Restraint Roof Rail Retainer (Qty: 5)
2	Inflatable Restraint Roof Rail Bolt (Qty: 4) <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 9.5 N·m (84 lb in)
3	Inflatable Restraint Roof Rail Module Assembly