



12. Remove the rear coil spring lower seat insulators (1) from the axle.


Installation Procedure

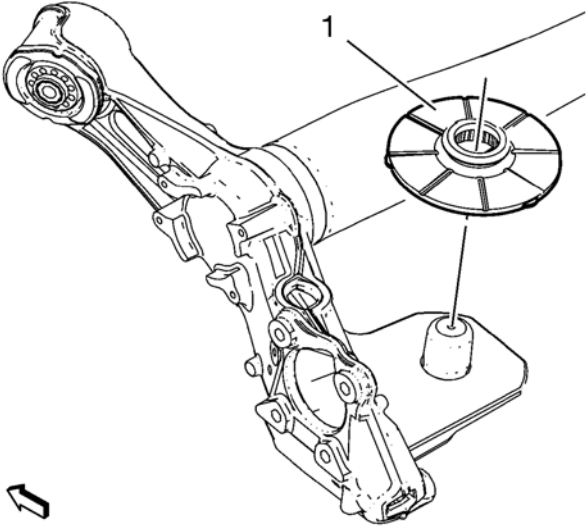

1. Install the rear coil spring lower seat insulators (1) to the axle.

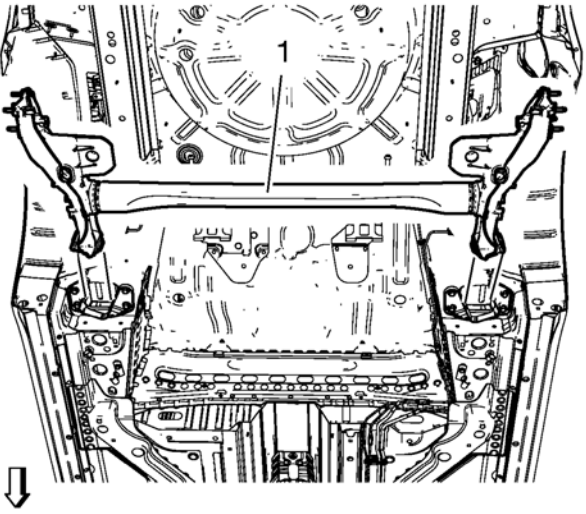

2. Raise the axle (1) into position.

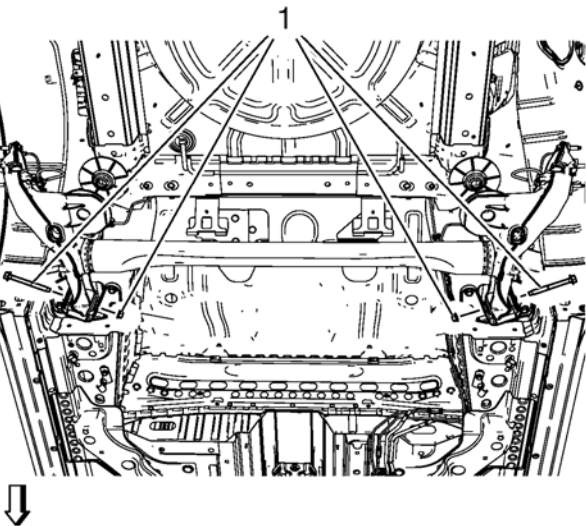

3. Loosely install the both axle bushing bolts (1) and nuts.