


Front Fog Lamp Bezel Replacement

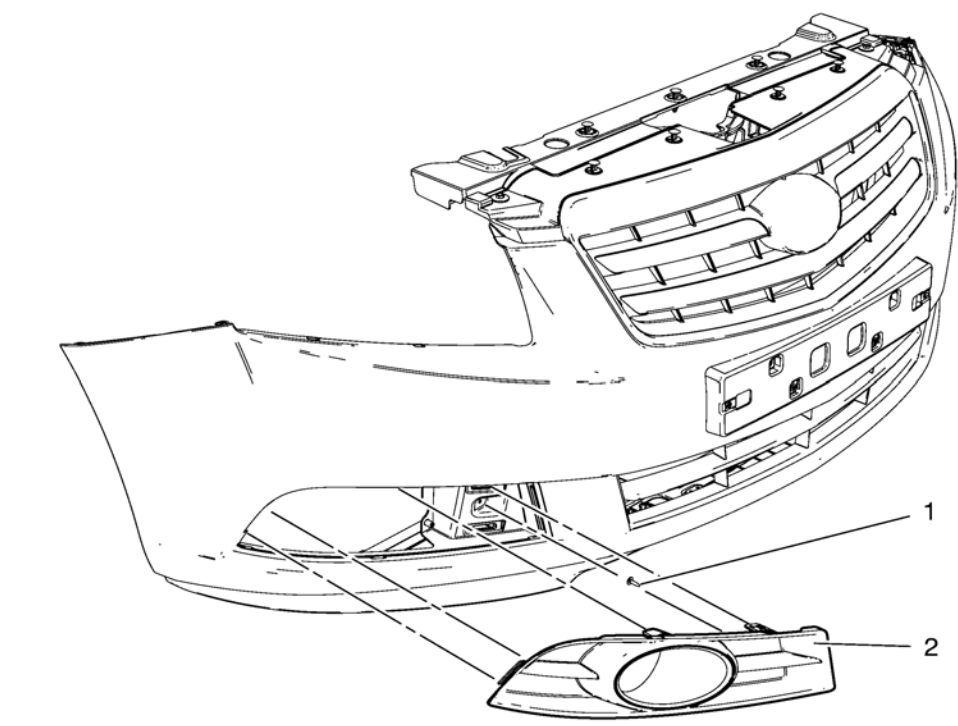

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>1. Remove front bumper fascia. Refer to <a href="#">Front Bumper Fascia Replacement</a>.</p> <p>2. Remove front fog lamp. Refer to <a href="#">Front Fog Lamp Replacement</a>.</p>	
1	<p>Front Fog Lamp Bezel Screw</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 2.5 N·m (23 lb in)</p>
2	<p>Front Fog Lamp Bezel</p> <p><b>Procedure</b></p> <p>1. Disengage the 4 inner retainer tabs securing the bezel to the front bumper fascia.</p> <p>2. Pull outward from the outer edge in order to release the outer retention clips securing the bezel to the front bumper fascia.</p> <p>3. Remove the front fog lamp bezel.</p>