

Stabilizer Shaft Insulator Replacement


Special Tools

- CH 904 Underframe
- EN 45059 Torque Angle Sensor Kit
- CH 49289 Centering Adapter


For equivalent regional tools, refer to [Special Tools](#).

Removal Procedure

1. Turn the front wheels to the straight forward position and secure the steering wheel from moving.

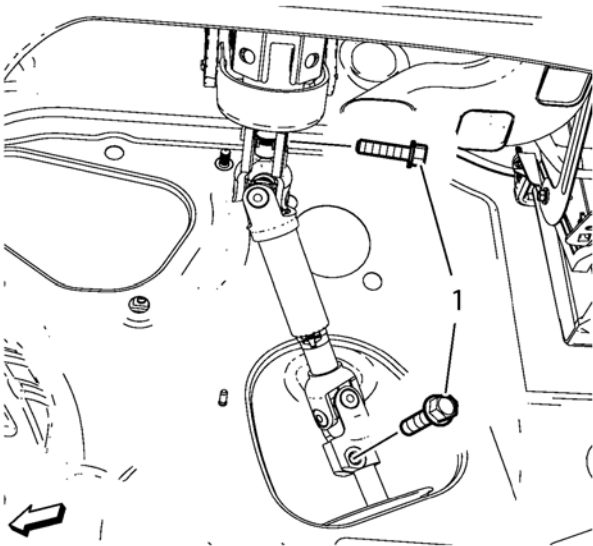

2. Remove the 2 lower steering intermediate shaft bolts (1).
3. Remove the steering intermediate shaft from the steering gear.
4. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#)
5. Remove the tire and wheel assemblies. Refer to [Tire and Wheel Removal and Installation](#)
6. Remove the front compartment insulator, if equipped.
7. Remove the engine shield, if equipped.
8. Remove the exhaust flexible pipe. Refer to [Exhaust Flexible Pipe Replacement](#).

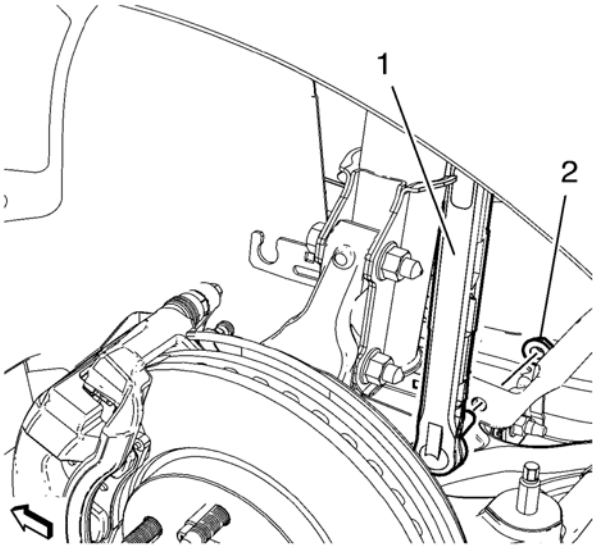

9. Remove lower stabilizer link shaft nut (2) on both sides.
10. Remove stabilizer link shaft (1) from stabilizer shaft.
11. Remove stabilizer link shaft (1) from stabilizer.

