


Rear Seat Buckle Side Belt Replacement

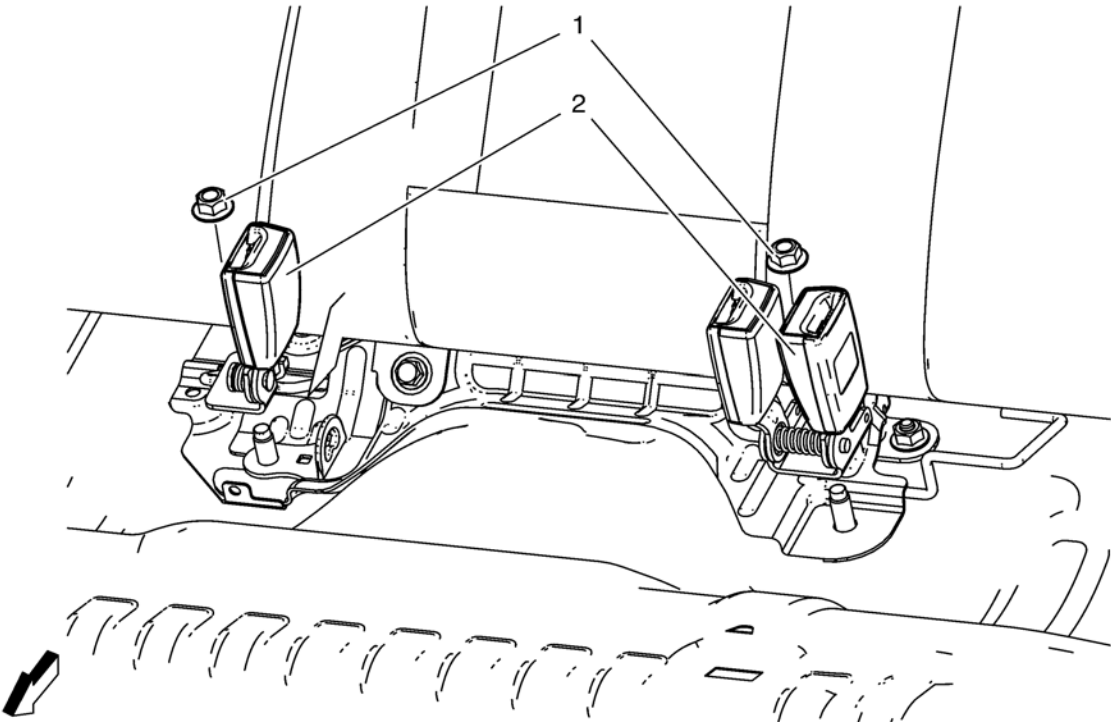

Callout	Component Name
Preliminary Procedure Remove the Rear Seat Cushion. Refer to Rear Seat Cushion Replacement .	
1	Rear Seat Rear Bracket Nut Caution: Refer to Fastener Caution in the Preface section. Tighten 45 N·m (33 lb ft)
2	Rear Seat Belt Buckle Assembly