


## Rear Compartment Lid Hinge Torque Rod Replacement

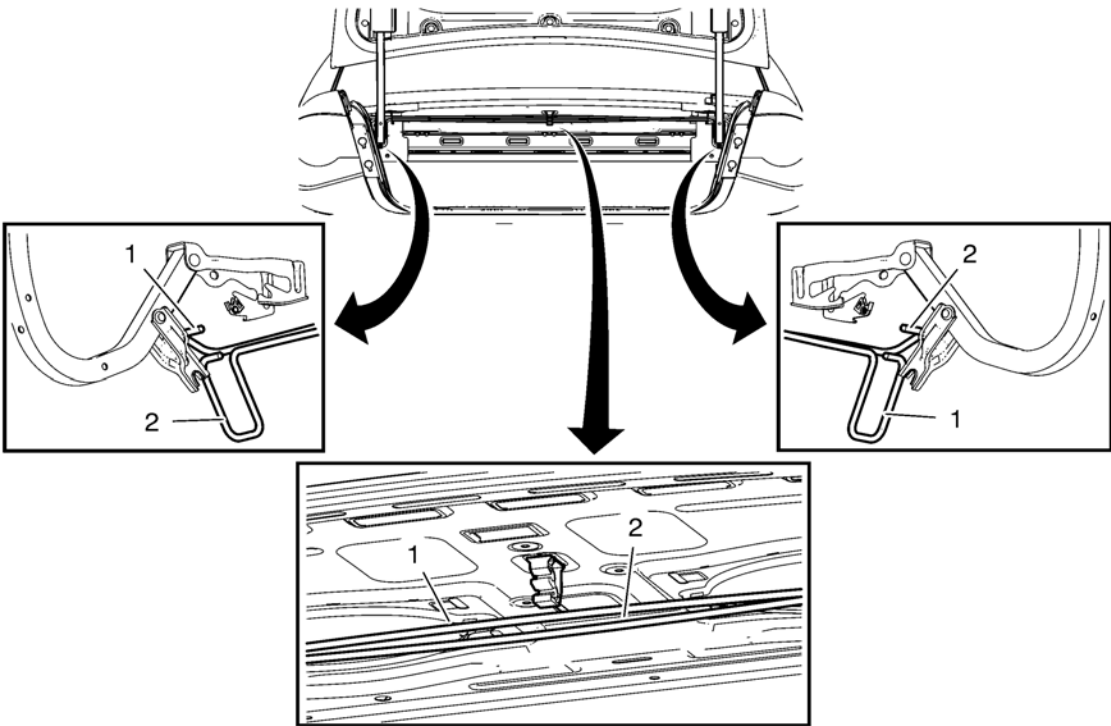

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>Remove rear compartment lid. Refer to <a href="#">Rear Compartment Lid Replacement</a>.</p> <p><b>Special Tools</b></p> <p>BO-125 Torque Rod Lifter</p> <p>For equivalent regional tools, refer to <a href="#">Special Tools</a>.</p>	
1	<p>Rear Compartment Lid Hinge Torque Rod - Right Side</p> <p><b>Tip</b> Only use the special tool to remove and install the rear compartment lid hinge torque rod.</p>
2	<p>Rear Compartment Lid Hinge Torque Rod - Left Side</p> <p><b>Tip</b> Only use the special tool to remove and install the rear compartment lid hinge torque rod.</p>