



Floor Air Outlet Replacement

Removal Procedure


1. Remove the instrument panel assembly. Refer to [Instrument Panel Assembly Replacement](#).

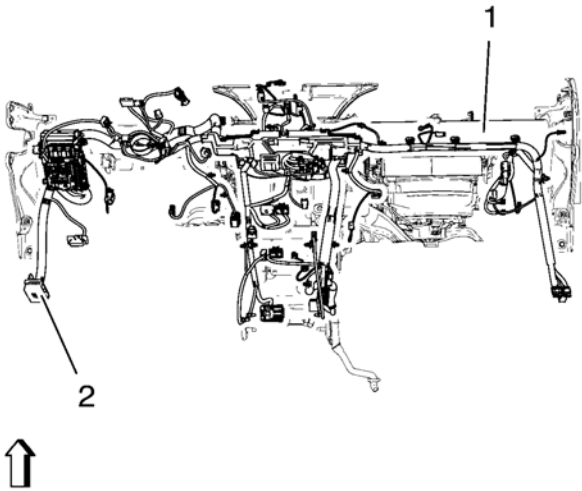

2. Remove the instrument panel wiring harness (2) from the instrument panel tie bar (1).
Disconnect the electrical connectors.

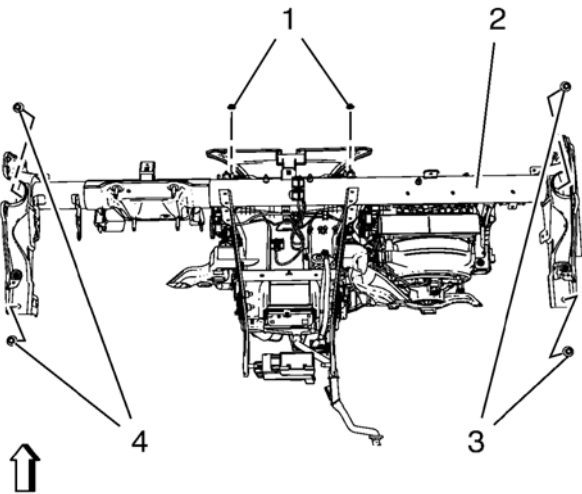

3. Remove the instrument panel tie bar (2).
 - Remove the 4 instrument panel tie bar bolts (3, 4).
 - Remove the 2 instrument panel tie bar nuts (1).
4. Remove the heater wiring harness.

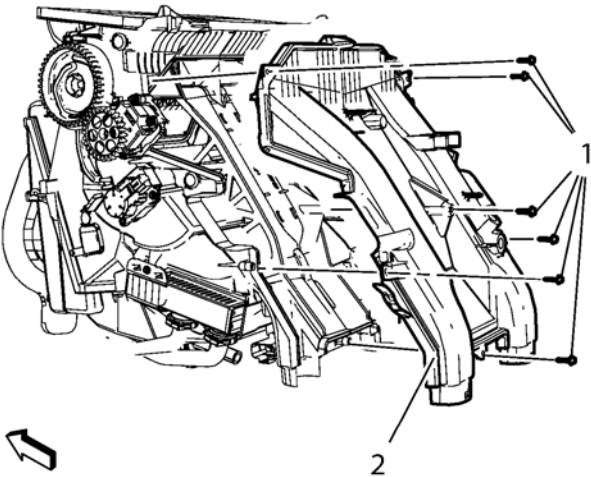

5. Remove the floor air outlet (2).
Remove the 6 floor air outlet bolts (1).

Installation Procedure