


Inflatable Restraint Side Impact Sensor Replacement

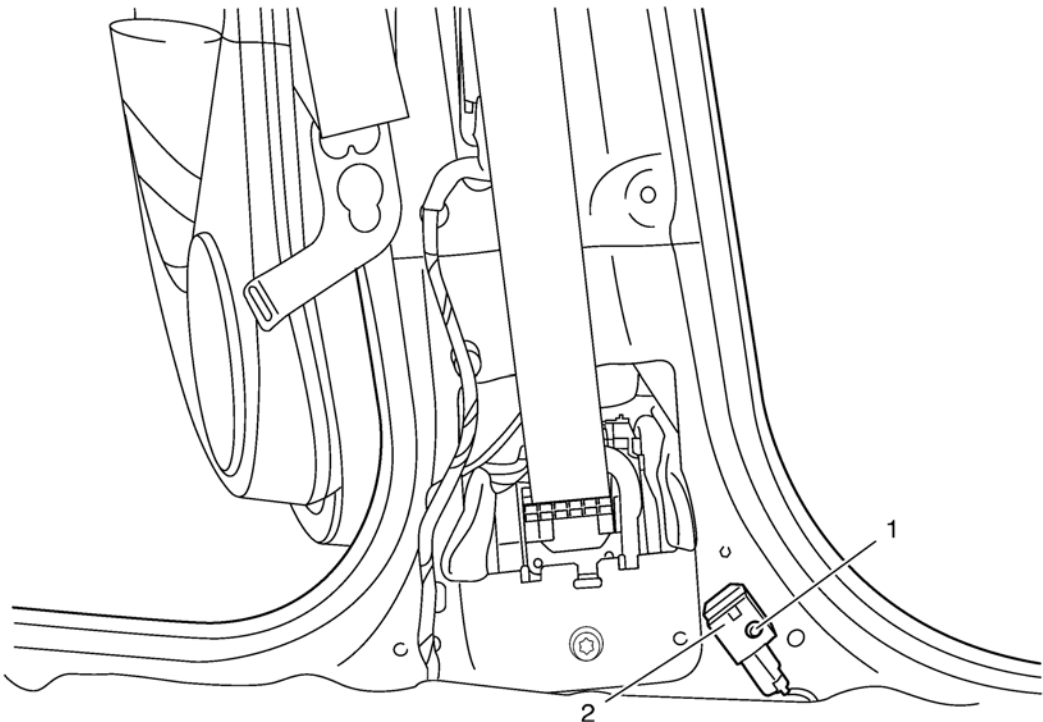

Callout	Component Name
<p>Warning: Refer to SIR Warning in the Preface section.</p> <p>Warning: Refer to SIR Inflator Module Handling and Storage Warning in the Preface section.</p> <p>Warning: Following the deployment of a side impact air bag, inspect the following parts for damage. Replace these parts if necessary:</p> <ul style="list-style-type: none">• The seat cushion frame• The seat recliner, if equipped• The seat adjuster• The seat back frame <p>Failure to do so may cause future personal injury.</p> <p>Preliminary Procedure</p> <ol style="list-style-type: none">1. Disable the SIR system. Refer to SIR Disabling and Enabling2. Remove center pillar lower garnish molding. Refer to Center Pillar Lower Garnish Molding Replacement	
1	<p>Inflatable Restraint Side Impact Sensor Screw</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 7.5 N·m (66 lb in)</p>
2	<p>Inflatable Restraint Side Impact Sensor Assembly</p> <p>Procedure</p> <ol style="list-style-type: none">1. Disconnect electrical connector.2. Loosen the bolts and slide the sensor out of the keyhole slots. <p>Tip The bolt is integral to the sensor assembly, DO NOT remove separately.</p>