


Engine Shield Replacement

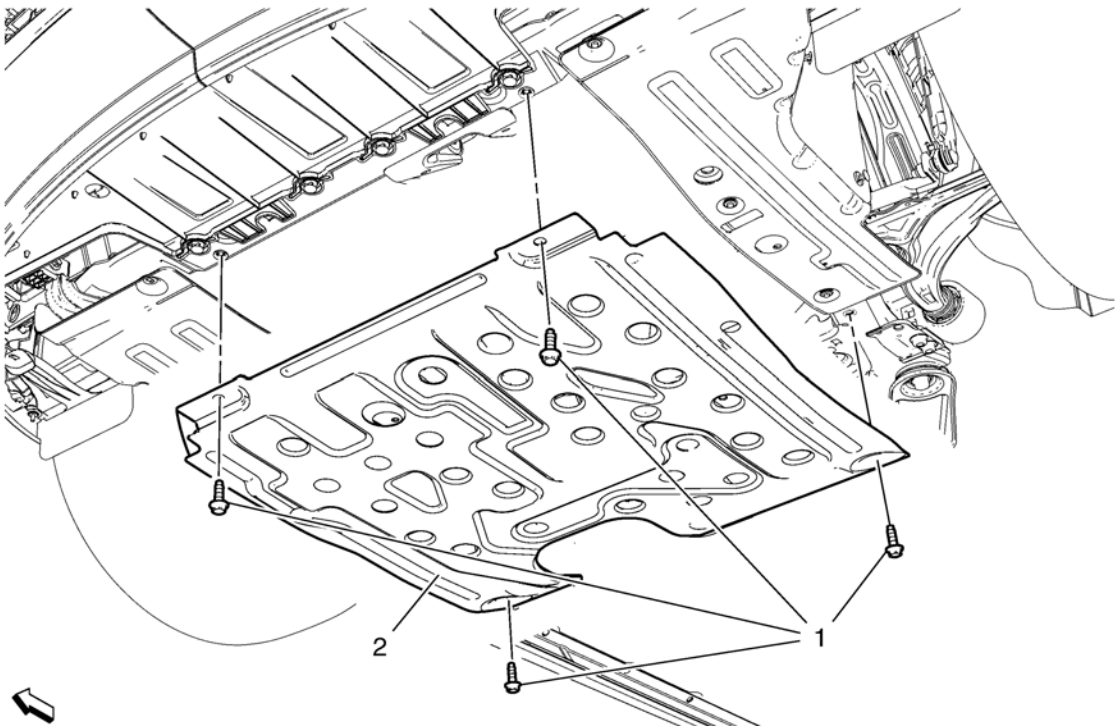

| Callout | Component Name |
|---|---|
| Preliminary Procedure Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle . | |
| 1 | Engine Shield Bolt (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 40 N·m (30 lb ft) |
| 2 | Engine Shield |