


15. Place a 12 V minimum/2A minimum power source, such as a vehicle battery, near the shorted end of the harness.
16. Connect the SIR deployment harness wires to the power source. Deployment of the Inflator module will occur when contact is made.

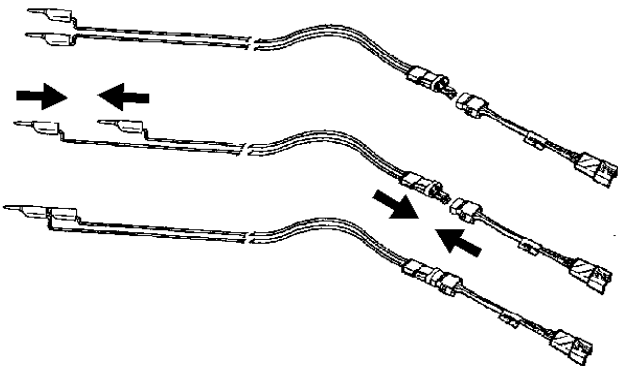

17. Disconnect the SIR deployment harness from the power source after the inflator module deploys.
18. If the inflator module did not deploy, disconnect the adapter and discontinue the procedure and contact the Technical Assistance Group.

If deployment was successful, proceed to the following steps.

**Warning:** Refer to [SIR Deployed Inflator Modules Are Hot Warning](#) in the Preface section.

19. Seat one banana plug into the other in order to short the deployment harness leads.
20. Put on a pair of shop gloves.
21. Disconnect the pigtail adapter from the inflator module as soon as possible.
22. Inspect the pigtail adapter and the SIR deployment harness. Replace as needed.
23. Dispose of the deployed inflator module through normal refuse channels.
24. Wash your hands with a mild soap.

Deployment Inside Vehicle - Vehicle Scrapping Procedure

Deploy the inflator modules inside of the vehicle when destroying the vehicle or when salvaging the vehicle for parts. This includes, but is not limited to, the following situations:

- The vehicle has completed all useful life.
- Irreparable damage occurred to the vehicle in a non-deployment type accident.
- Irreparable damage occurred to the vehicle during a theft.
- The vehicle is being salvaged for parts to be used on a vehicle with a different VIN, as opposed to rebuilding as the same VIN.

**Warning:** Refer to [SIR Inflatable Module Deployment Outside Vehicle Warning](#) in the Preface section.

1. Lower the driver and passenger windows.
2. Turn the ignition switch to the OFF position and remove the ignition key.
3. Check that all inflator modules which will be deployed are mounted securely.
4. Remove all loose objects from the front seats.