



# Intermediate Steering Shaft Replacement

## Removal Procedure

1. Turn the steering wheel to the straight forward position and support it from movement.

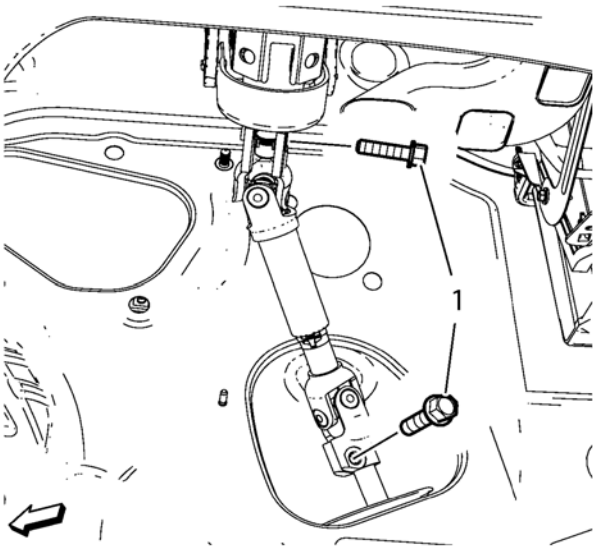


2. Remove the 2 intermediate steering shaft bolts (1).

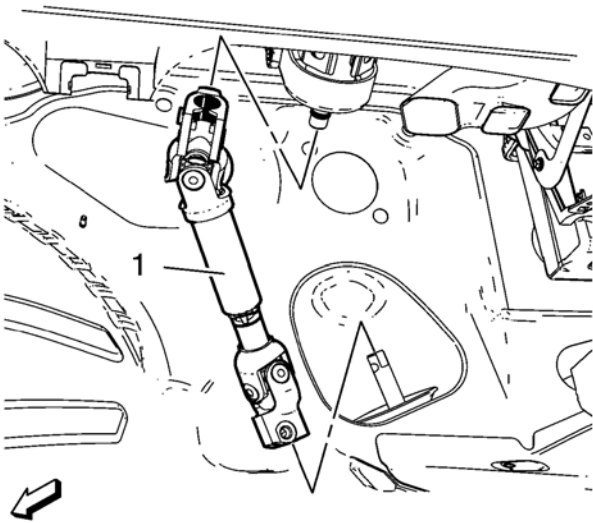

3. Remove the intermediate steering shaft (1).

## Installation Procedure

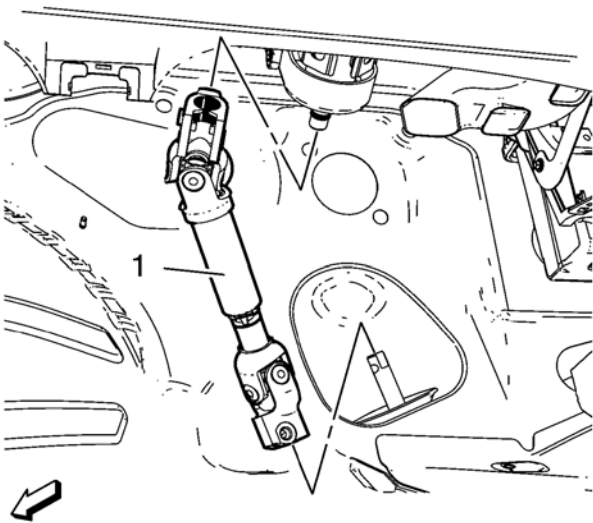

1. Install the intermediate steering shaft (1).