


Power Steering Fluid Reservoir Replacement

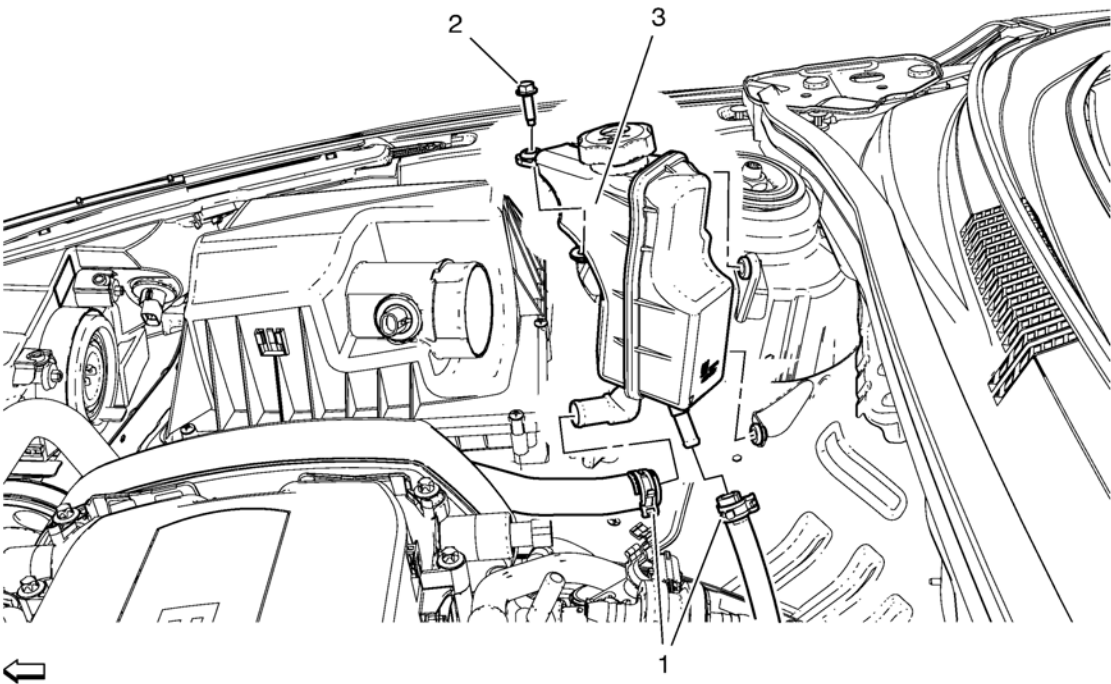

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Remove as much power steering fluid from the remote power steering fluid reservoir as possible.</p> <p>2. Place drain pans under the vehicle as needed.</p>	
1	<p>Hose Clamp</p> <p>Procedure</p> <p>1. Compress the power steering fluid reservoir outlet and inlet hose clamp from the power steering fluid reservoir.</p> <p>2. Remove outlet and inlet hose from power steering fluid reservoir.</p>
2	<p>Power Steering Fluid Reservoir Screw</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 9 N·m (80 lb in)</p>
3	<p>Power Steering Fluid Reservoir</p> <p>Procedure</p> <p>Fill and bleed the power steering system. Refer to Power Steering System Bleeding.</p> <p>Tip Clean any excess power steering fluid from the vehicle.</p>