



- 1. Install condenser.
- 2. Install A/C refrigerant pressure sensor. Refer to [Air Conditioning \(A/C\) Refrigerant Pressure Sensor Replacement](#).

**Caution:** Refer to [Fastener Caution](#) in the Preface section.

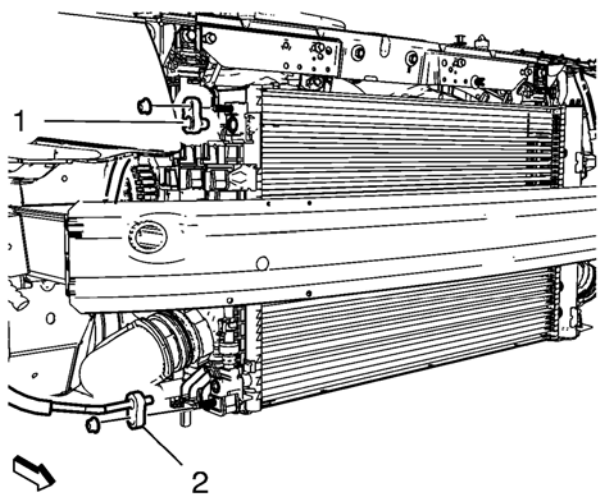

- 3. Install condenser hose (1, 2) and condenser hose bolt and tighten to **19 N·m (15 lb ft)**.
- 4. Install A/C compressor and condenser hose to condenser. Refer to [Air Conditioning Compressor and Condenser Hose Replacement](#).
- 5. Install radiator support. Refer to [Radiator Support Replacement](#).

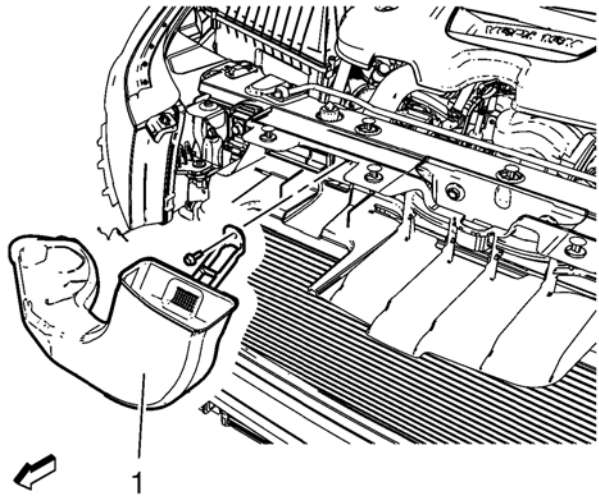

- 6. Install air intake duct (1).
- 7. Install front bumper fascia. Refer to [Front Bumper Fascia Replacement](#).
- 8. Connect battery negative cable. Refer to [Battery Negative Cable Disconnection and Connection](#).
- 9. Evacuate and charge the refrigerant system. Refer to [Refrigerant Recovery and Recharging](#).