


Stabilizer Shaft Link Replacement

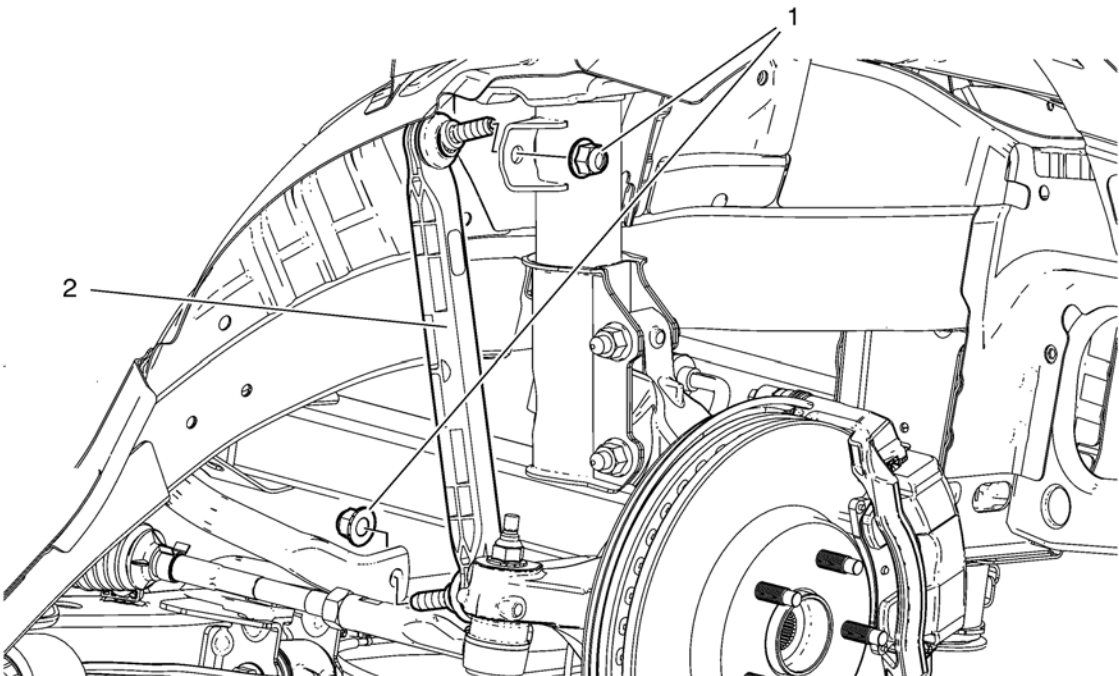

| Callout | Component Name |
|--|---|
| <p>Preliminary Procedure</p> <p>1. Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle.</p> <p>2. Remove the front tire and wheel assemblies. Refer to Tire and Wheel Removal and Installation.</p> | |
| 1 | <p>Stabilizer Shaft Link Nut (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Procedure</p> <p>Discard the old stabilizer shaft link nut and use NEW ONLY.</p> <p>Tighten 65 N·m (48 lb ft)</p> |
| 2 | Stabilizer Shaft Link |