
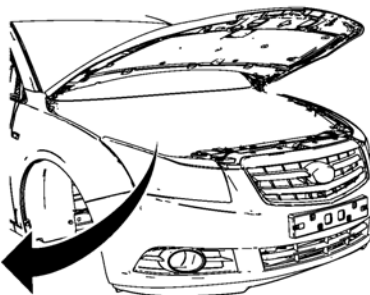


Power Steering Pump Replacement

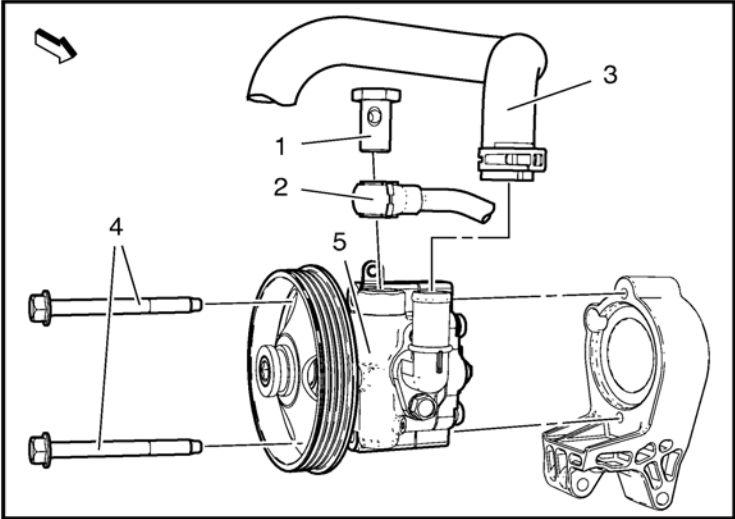

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Remove the power steering pump belt. Refer to Power Steering Pump Belt Replacement.</p> <p>2. Place drain pans under the vehicle as needed.</p>	
1	<p>Power Steering Gear Inlet Hose Hollow Screw</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 21 N·m (16 lb in)</p>
2	<p>Power Steering Gear Inlet Hose</p>
3	<p>Power Steering Reservoir Outlet Hose</p>
4	<p>Power Steering Pump Bolt (Qty: 2)</p> <p>Tighten 22 N·m (17 lb ft)</p>
5	<p>Power Steering Pump</p> <p>Procedure</p> <p>Fill and bleed the power steering system. Refer to Power Steering System Bleeding.</p> <p>Tip Clean any excess power steering fluid from the vehicle.</p>