



8. Remove the wheel bearing/hub assembly (1) from the rear axle assembly and brake backing plate.

Installation Procedure

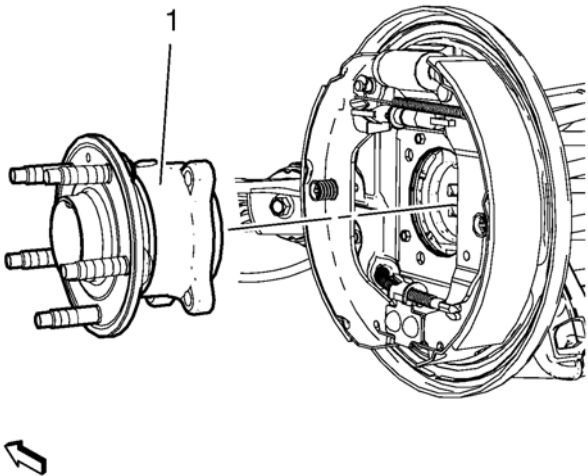

1. Install the wheel bearing/hub assembly (1) to the brake backing plate and the rear axle assembly.

Caution: Refer to [Fastener Caution](#) in the Preface section.

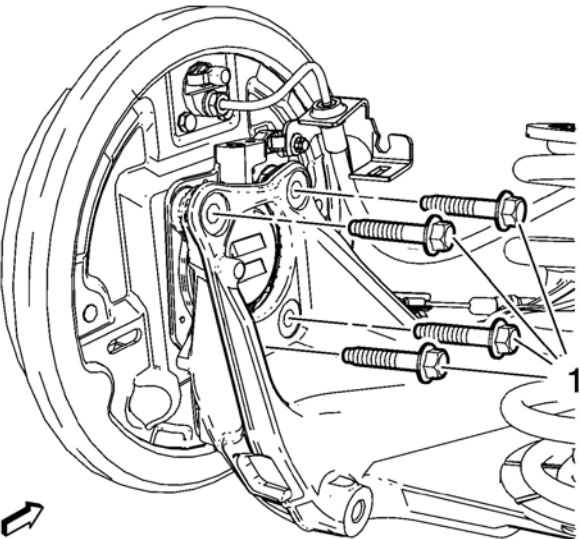

Note: Tighten the bolts evenly, in a cross-pattern.

2. Install the wheel bearing/hub mounting bolts (1) and tighten to **50 N·m (37 lb ft) + 40°** , using the EN 45059 kit.
Tighten the bolts evenly, in a cross-pattern.