


Driver or Passenger Seat Retractor Side Belt Replacement

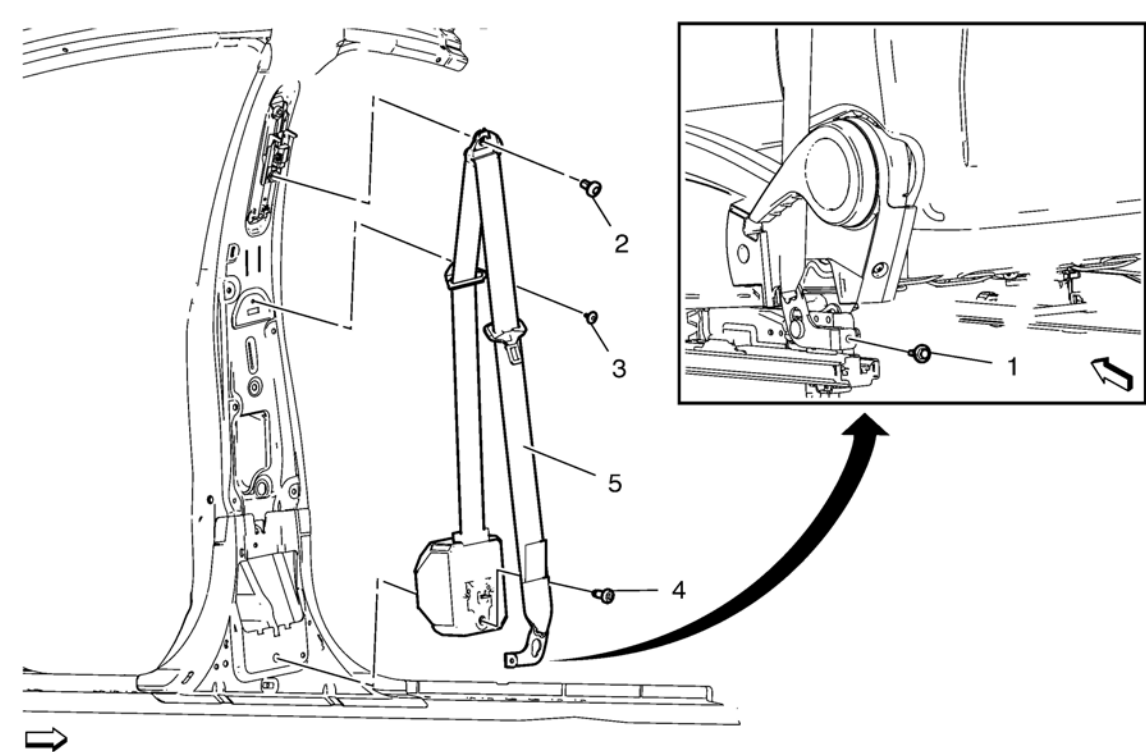

Callout	Component Name
<p><b>Warning:</b> Refer to <a href="#">SIR Warning</a> in the Preface section.</p> <p><b>Warning:</b> In order to prevent accidental deployment and the risk of personal injury, do not dispose of an undeployed inflatable restraint seat belt pretensioner as normal shop waste. Undeployed seat belt pretensioners contain substances that could cause severe illness or personal injury if their sealed containers are damaged during disposal. Use the following deployment procedures to safely dispose of an undeployed seat belt pretensioner. Failure to observe the following disposal methods may be a violation of federal, state, or local laws.</p> <p><b>Warning:</b> Refer to <a href="#">SIR Seatbelt Pretensioner Handling Warning</a> in the Preface section.</p> <p><b>Preliminary Procedure</b></p> <ol style="list-style-type: none"><li>Remove the Center Pillar Upper Garnish Molding. Refer to <a href="#">Center Pillar Upper Garnish Molding Replacement</a>.</li><li>Remove the Front Seat Outer Recliner Upper Finish Cover. Refer to <a href="#">Front Seat Outer Recliner Upper Finish Cover Replacement</a>.</li></ol>	
1	Front Seat Belt Anchor Plate Bolt <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 9 N·m (80 lb in)
2	Front Seat Belt Retractor D Ring Bolt <b>Tighten</b> 45 N·m (33 lb ft)
3	Front Seat Shoulder Belt Guide Retainer
4	Front Seat Shoulder Belt Retractor Assembly Bolt <b>Tighten</b> 45 N·m (33 lb ft)
5	Front Seat Retractor Side Belt Assembly