


Floor Air Outlet Duct Replacement - Right Side (Right Hand Drive)


Removal Procedure

1. Remove instrument outer trim cover -- right side. Refer to [Instrument Panel Outer Trim Cover Replacement - Right Side](#).
2. Remove instrument panel lower trim pad cover -- left side. Refer to [Instrument Panel Lower Trim Pad Cover Replacement](#).

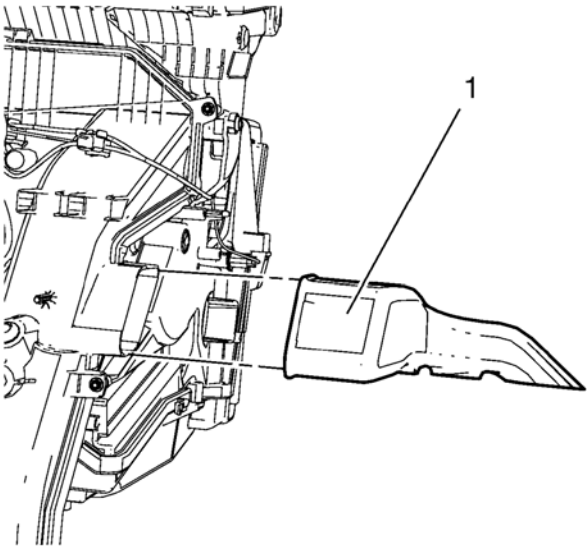

3. Remove floor air outlet duct (1) -- right side.

Installation Procedure

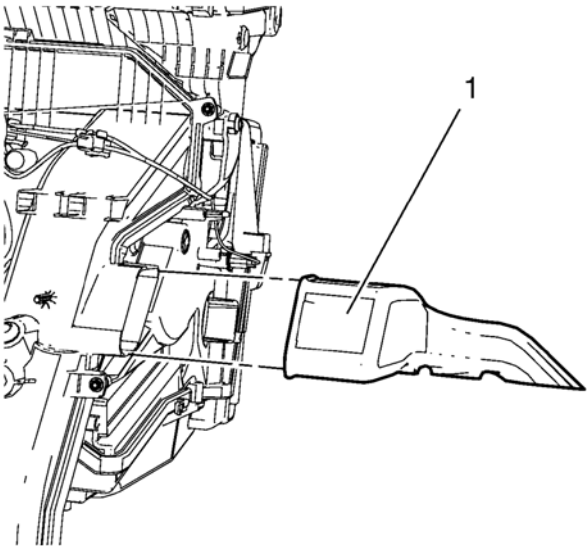

1. Install floor air outlet duct (1) -- right side.
2. Install instrument panel lower trim pad cover -- left side. Refer to [Instrument Panel Lower Trim Pad Cover Replacement](#).
3. Install instrument outer trim cover -- right side. Refer to [Instrument Panel Outer Trim Cover Replacement - Right Side](#).