


Front Floor Panel Carpet Replacement

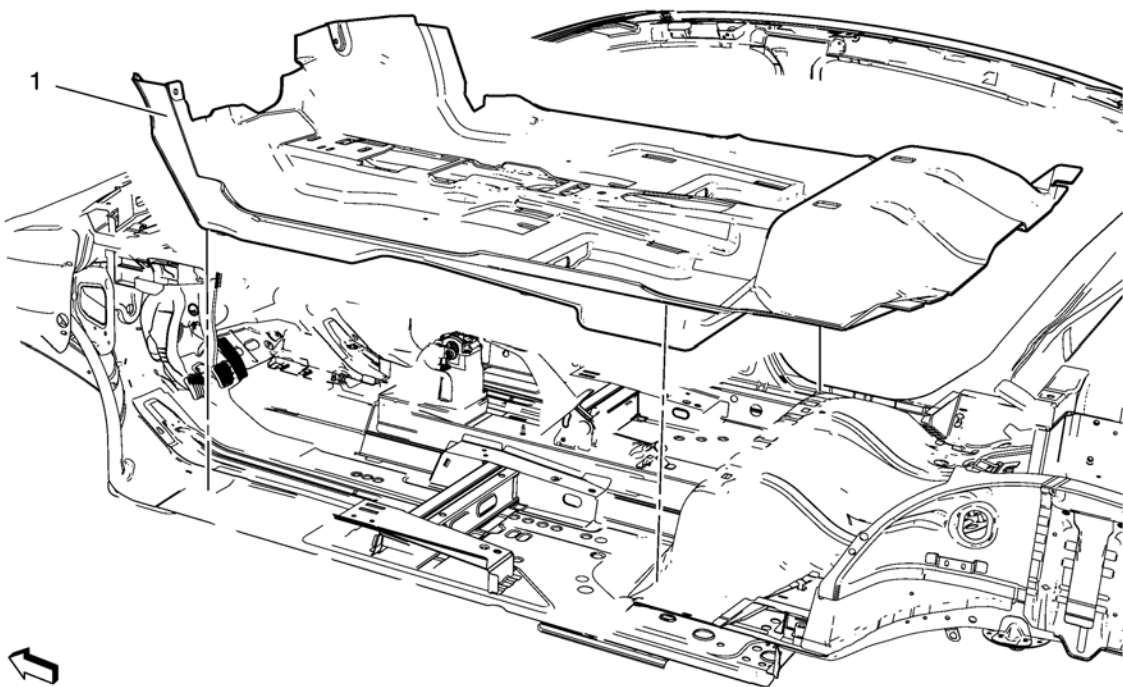

Callout	Component Name
<p><b>Preliminary Procedures</b></p> <p>1. Remove front seats. Refer to <a href="#">Driver or Passenger Seat Replacement</a>.</p> <p>2. Remove rear seat. Refer to <a href="#">Rear Seat Replacement</a>.</p> <p>3. Remove the front floor console. Refer to <a href="#">Front Floor Console Replacement</a>.</p> <p>4. Remove front sill panels. Refer to <a href="#">Front Side Door Sill Trim Plate Replacement</a>.</p> <p>5. Remove rear sill panels. Refer to <a href="#">Rear Side Door Sill Trim Plate Replacement</a>.</p> <p>6. Remove center pillar lower garnish moldings. Refer to <a href="#">Center Pillar Lower Garnish Molding Replacement</a>.</p>	
1	<p>Front Floor Panel Carpet Assembly</p> <p><b>Procedure</b></p> <p>Loosen Transmission Control.</p>