


Driver or Passenger Seat Side Inflatable Restraint Module Replacement

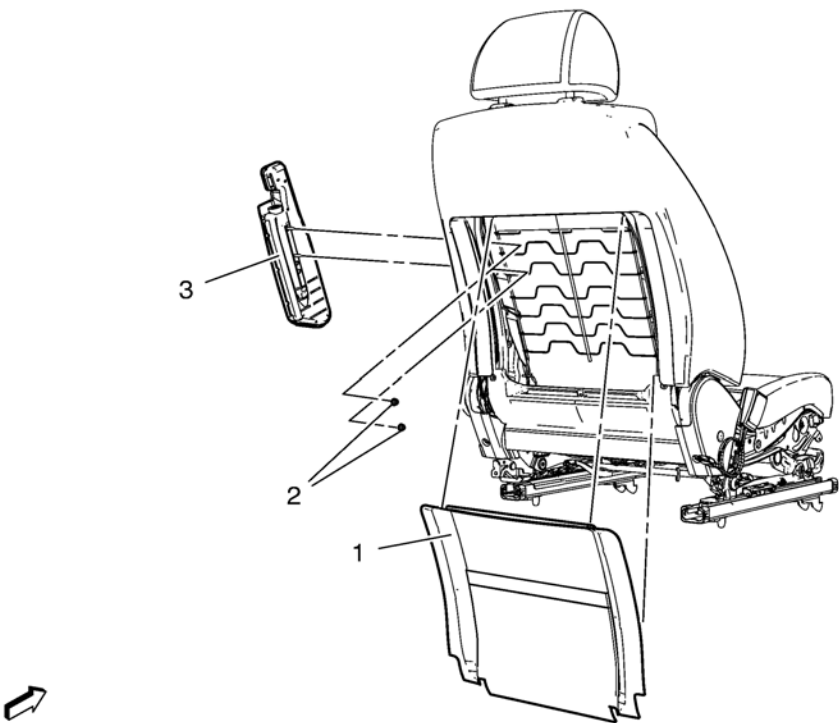

Callout	Component Name
<p>Warning: Refer to SIR Inflator Module Handling and Storage Warning in the Preface section.</p> <p>Warning: Following the deployment of a side impact air bag, inspect the following parts for damage. Replace these parts if necessary:</p> <ul style="list-style-type: none">• The seat cushion frame• The seat recliner, if equipped• The seat adjuster• The seat back frame <p>Failure to do so may cause future personal injury.</p> <p>Preliminary Procedure</p> <p>Disable the SIR system. Refer to SIR Disabling and Enabling.</p>	
1	Front Seat Back Trim
2	Front Seat Side Inflatable Restraint Module Nut (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 4 N·m (36 lb in)
3	Front Seat Side Inflatable Restraint Module Assembly Tip Disconnect the electrical connector.