


Front Floor Console Replacement

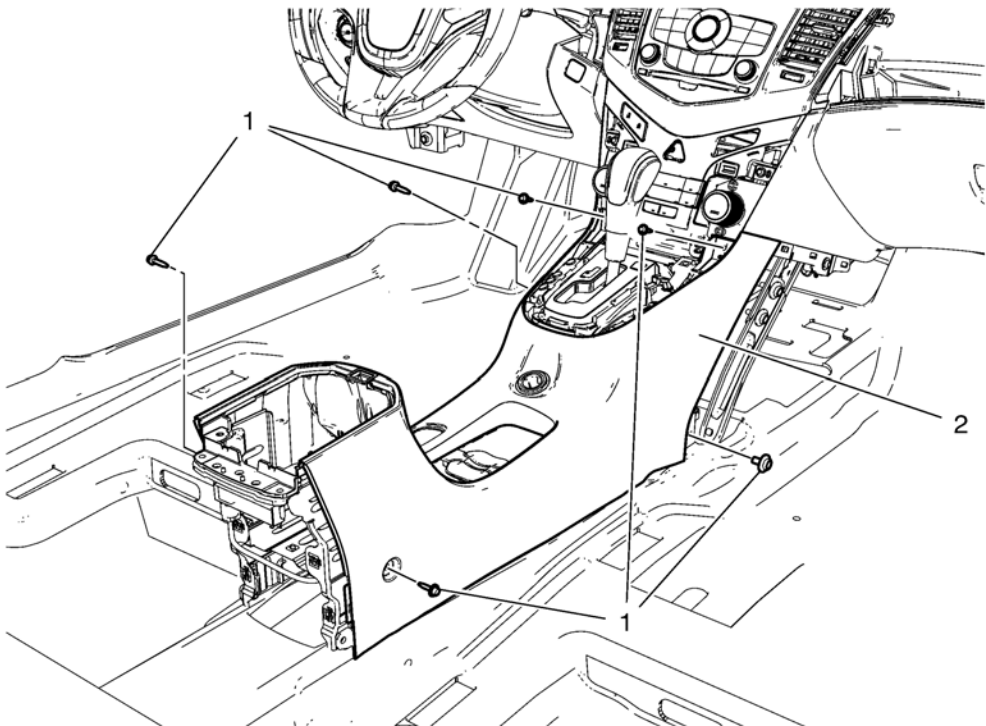

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Remove the instrument panel lower trim panel - left side. Refer to Instrument Panel Lower Trim Panel Replacement - Left Side</p> <p>2. Remove the instrument panel lower trim panel - right side. Refer to Instrument Panel Lower Trim Panel Replacement - Right Side</p> <p>3. Remove transmission control lever trim cover. Refer to Automatic or Manual Transmission Control Lever Trim Cover Replacement</p>	
1	<p>Front Floor Console Screw (Qty: 10)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 2.5 N·m(23 lb in)</p>
2	<p>Front Floor Console Assembly</p> <p>Procedure</p> <p>Disconnect the electrical connections.</p>