


Instrument Panel Inflatable Restraint Module Replacement

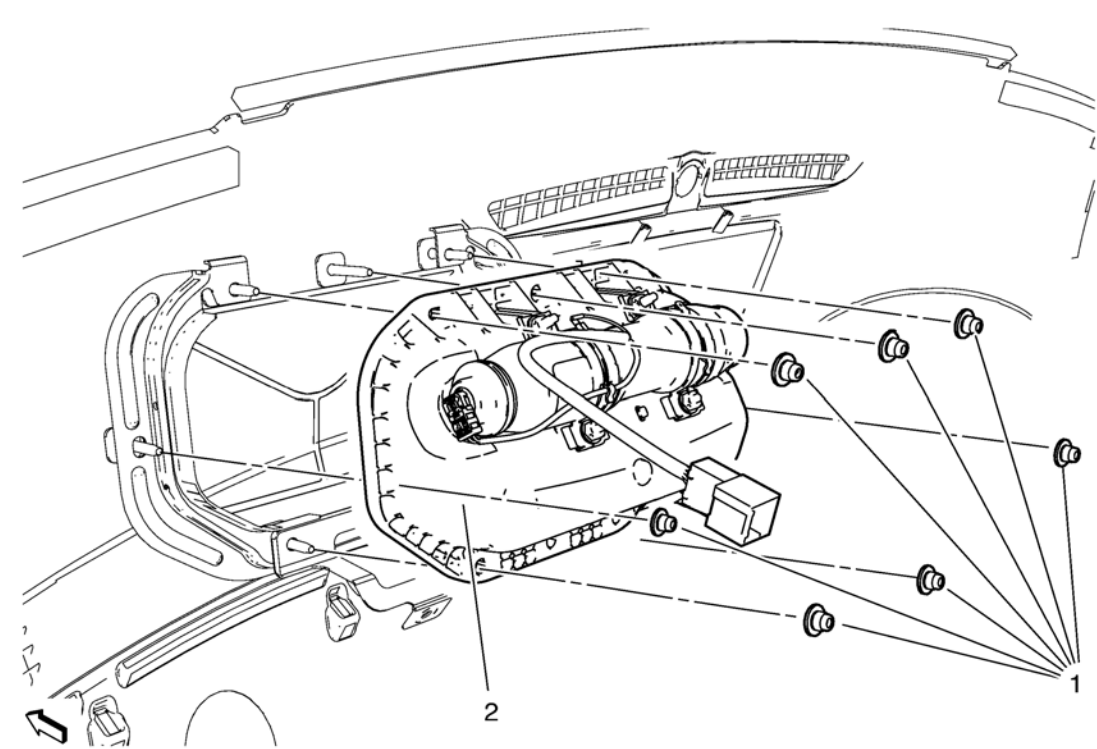

Callout	Component Name
<p><b>Warning:</b> Refer to <a href="#">SIR Warning</a> in the Preface section.</p> <p><b>Preliminary Procedure</b></p> <p>1. Disable the SIR system. Refer to <a href="#">SIR Disabling and Enabling</a>.</p> <p>2. Remove the instrument panel assembly. Refer to <a href="#">Instrument Panel Assembly Replacement</a>.</p>	
1	Instrument Panel Inflatable Restraint Module Nut (Qty: 7) <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 8 N·m (71 lb in)
2	Instrument Panel Inflatable Restraint Module Assembly <b>Tip</b> Disconnect the electrical connectors.