

**Kawasaki**

**KLX110**



# **Motorcycle Service Manual**

# Quick Reference Guide

<b>General Information</b>	<b>1</b>
<b>Periodic Maintenance</b>	<b>2</b>
<b>Fuel System</b>	<b>3</b>
<b>Engine Top End</b>	<b>4</b>
<b>Clutch</b>	<b>5</b>
<b>Engine Lubrication System</b>	<b>6</b>
<b>Engine Removal/Installation</b>	<b>7</b>
<b>Crankshaft/Transmission</b>	<b>8</b>
<b>Wheels/Tires</b>	<b>9</b>
<b>Final Drive</b>	<b>10</b>
<b>Brakes</b>	<b>11</b>
<b>Suspension</b>	<b>12</b>
<b>Steering</b>	<b>13</b>
<b>Electrical System</b>	<b>14</b>
<b>Troubleshooting</b>	<b>15</b>

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.



**KLX110**

# Motorcycle Service Manual

---

All rights reserved. No parts of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Quality Assurance Department/Consumer Products & Machinery Company/Kawasaki Heavy Industries, Ltd., Japan.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

The right is reserved to make changes at any time without prior notice and without incurring an obligation to make such changes to products manufactured previously. See your Motorcycle dealer for the latest information on product improvements incorporated after this publication.

All information contained in this publication is based on the latest product information available at the time of publication. Illustrations and photographs in this publication are intended for reference use only and may not depict actual model component parts.

---

### LIST OF ABBREVIATIONS

A	ampere(s)	lb	pound(s)
ABDC	after bottom dead center	m	meter(s)
AC	alternating current	min	minute(s)
ATDC	after top dead center	N	newton(s)
BBDC	before bottom dead center	Pa	pascal(s)
BDC	bottom dead center	PS	horsepower
BTDC	before top dead center	psi	pound(s) per square inch
°C	degree(s) Celsius	r	revolution
DC	direct current	rpm	revolution(s) per minute
F	farad(s)	TDC	top dead center
°F	degree(s) Fahrenheit	TIR	total indicator reading
ft	foot, feet	V	volt(s)
g	gram(s)	W	watt(s)
h	hour(s)	Ω	ohm(s)
L	liter(s)		

**Read OWNER'S MANUAL before operating.**



## **EMISSION CONTROL INFORMATION**

To protect the environment in which we all live, Kawasaki has incorporated crankcase emission (1) and exhaust emission (2) control systems in compliance with applicable regulations of the California Air Resources Board.

### **1. Crankcase Emission Control System**

This system eliminates the release of crankcase vapors into the atmosphere. Instead, the vapors are routed through an oil separator to the inlet side of the engine. While the engine is operating, the vapors are drawn into combustion chamber, where they are burned along with the fuel and air supplied by the carburetor.

### **2. Exhaust Emission Control System**

This system reduces the amount of pollutants discharged into the atmosphere by the exhaust of this motorcycle. The fuel and ignition systems of this motorcycle have been carefully designed and constructed to ensure an efficient engine with low exhaust pollutant levels.

## **TAMPERING WITH EMISSION CONTROL SYSTEM PROHIBITED**

California State law prohibits the following acts or the causing thereof: (1) the removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new motorcycle for the purposes of emission control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the motorcycle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:  
Do not tamper with the original emission related parts:

- Carburetor and internal parts
- Spark plug
- Magneto ignition system
- Air cleaner element

## **TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED**

Federal law prohibits the following acts or the causing thereof: (1) The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- Replacement of the original exhaust system or muffler with a component not in compliance with Federal regulations.
- Removal of the muffler(s) or any internal portion of the muffler(s).
- Removal of the air box or air box cover.
- Modifications to the muffler(s) or air inlet system by cutting, drilling, or other means if such modifications result in increased noise levels.

# Foreword

This manual is designed primarily for use by trained mechanics in a properly equipped shop. However, it contains enough detail and basic information to make it useful to the owner who desires to perform his own basic maintenance and repair work. A basic knowledge of mechanics, the proper use of tools, and workshop procedures must be understood in order to carry out maintenance and repair satisfactorily. Whenever the owner has insufficient experience or doubts his ability to do the work, all adjustments, maintenance, and repair should be carried out only by qualified mechanics.

In order to perform the work efficiently and to avoid costly mistakes, read the text, thoroughly familiarize yourself with the procedures before starting work, and then do the work carefully in a clean area. Whenever special tools or equipment are specified, do not use makeshift tools or equipment. Precision measurements can only be made if the proper instruments are used, and the use of substitute tools may adversely affect safe operation.

**For the duration of the warranty period,** we recommend that all repairs and scheduled maintenance be performed in accordance with this service manual. Any owner maintenance or repair procedure not performed in accordance with this manual may void the warranty.

To get the longest life out of your vehicle:

- Follow the Periodic Maintenance Chart in the Service Manual.
- Be alert for problems and non-scheduled maintenance.
- Use proper tools and genuine Kawasaki Motorcycle parts. Special tools, gauges, and testers that are necessary when servicing Kawasaki motorcycles are introduced by the Special Tool Catalog or Manual. Genuine parts provided as spare parts are listed in the Parts Catalog.
- Follow the procedures in this manual carefully. Don't take shortcuts.
- Remember to keep complete records of maintenance and repair with dates and any new parts installed.

## How to Use This Manual

In this manual, the product is divided into its major systems and these systems make up the manual's chapters. The Quick Reference Guide shows you all of the product's

system and assists in locating their chapters. Each chapter in turn has its own comprehensive Table of Contents.

For example, if you want ignition coil information, use the Quick Reference Guide to locate the Electrical System chapter. Then, use the Table of Contents on the first page of the chapter to find the Ignition Coil section.

Whenever you see these WARNING and CAUTION symbols, heed their instructions! Always follow safe operating and maintenance practices.

### WARNING

**This warning symbol identifies special instructions or procedures which, if not correctly followed, could result in personal injury or loss of life.**

### CAUTION

**This caution symbol identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of equipment.**

This manual contains four more symbols (in addition to WARNING and CAUTION) which will help you distinguish different types of information.

### NOTE

○ *This note symbol indicates points of particular interest for more efficient and convenient operation.*

- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.
- ★ Indicates a conditional step or what action to take based on the results of the test or inspection in the procedural step or sub-step it follows.

In most chapters an exploded view illustration of the system components follows the Table of Contents. In these illustrations you will find the instructions indicating which parts require specified tightening torque, oil, grease or a locking agent during assembly.

Pittbike.ch

# General Information

## Table of Contents

Before Servicing.....	1-2
Model Identification.....	1-4
General Specifications.....	1-5
Torque and Locking Agent.....	1-7
Special Tools.....	1-9
Cable, Wire and Hose Routing.....	1-14
Unit Conversion Table.....	1-18

# 1-2 GENERAL INFORMATION

## Before Servicing

---

Before starting to service a motorcycle, careful reading of the applicable section is recommended to eliminate unnecessary work. Photographs, diagrams, notes, cautions, warnings, and detailed descriptions have been included wherever necessary. Nevertheless, even a detailed account has limitations, a certain amount of basic knowledge is also required for successful work.

### Especially note the following:

(1) Dirt

Before removal and disassembly, clean the motorcycle. Any dirt entering the engine or other parts will work as an abrasive and shorten the life of the motorcycle. For the same reason, before installing a new part, clean off any dust or metal filings.

(2) Installation, Assembly

Generally, installation or assembly is the reverse of removal or disassembly. But if this Service Manual has installation or assembly procedures, follow them. Note parts locations and cable, wire, and hose routing during removal or disassembly so they can be installed or assembled in the same way. It is preferable to mark and record the locations and routing as much as possible.

(3) Tightening Sequence

Generally, when installing a part with several bolts, nuts, or screws, start them all in their holes and tighten them to a snug fit. Then tighten them evenly in a cross pattern. This is to avoid distortion of the part and/or causing gas or oil leakage. Conversely when loosening the bolts, nuts, or screws, first loosen all of them by about a quarter turn and then remove them. Where there is a tightening sequence indication in this Service Manual, the bolts, nuts, or screws must be tightened in the order and method indicated.

(4) Torque

When torque values are given in this Service Manual, use them. Either too little or too much torque may lead to serious damage. Use a good quality, reliable torque wrench.

(5) Force

Common sense should dictate how much force is necessary in assembly and disassembly. If a part seems especially difficult to remove or install, stop and examine what may be causing the problem. Whenever tapping is necessary, tap lightly using a wooden or plastic-faced mallet. Use an impact driver for screws (particularly for the removal of screws held by a locking agent) in order to avoid damaging the screw heads.

(6) Edges

Watch for sharp edges, especially during major engine disassembly and assembly. Protect your hands with gloves or a piece of thick cloth when lifting the engine or turning it over.

(7) High-Flash-Point Solvent

A high-flash-point solvent is recommended to reduce fire danger. A commercial solvent commonly available in North America is Stoddard solvent (generic name). Always follow manufacturer and container directions regarding the use of any solvent.

(8) Gasket, O-Ring

Do not reuse a gasket or O-ring once it has been in service. The mating surfaces around the gasket should be free of foreign matter and perfectly smooth to avoid oil or compression leaks.

(9) Liquid Gasket, Non-Permanent Locking Agent

Follow manufacturer's directions for cleaning and preparing surfaces where these compounds will be used. Apply sparingly. Excessive amounts may block engine oil passages and cause serious damage. An example of a non-permanent locking agent commonly available in North America is Loctite Lock'n Seal (Blue).

(10) Press

A part installed using a press or driver, such as a wheel bearing, should first be coated with oil on its outer or inner circumference so that it will go into place smoothly.

(11) Ball Bearing and Needle Bearing

Do not remove a ball or a needle bearings unless it is absolutely necessary. Replace any ball or needle bearing that were removed with new ones, as removal generally damages bearings. Install bearings with the marked side facing out applying pressure evenly with a suitable driver. Only press on the race that forms the press fit with the base component to avoid damaging the bearings. This prevents severe stress on the balls or needles and races, and prevent races and balls or needles from being dented. Press a ball bearing until it stops at the stops in the hole or on the shaft.

(12) Oil Seal and Grease Seal

Replace any oil or grease seals that were removed with new ones, as removal generally damages seals.

When pressing in a seal which has manufacturer's marks, press it in with the marks facing out. Seals should be pressed into place using a suitable driver, which contacts evenly with the side of seal, until the face of the seal is even with the end of the hole. Before a shaft passes through a seal, apply a little high temperature grease on the lips to reduce rubber to metal friction.

(13) Circlip, Retaining Ring, and Cotter Pin

Replace any circlips and retaining rings, and cotter pins that were removed with new ones, as removal weakens and deforms them. When installing circlips and retaining rings, take care to compress or expand them only enough to install them and no more.

## Before Servicing

### (14) Lubrication

Engine wear is generally at its maximum while the engine is warming up and before all the rubbing surfaces have an adequate lubricative film. During assembly, oil or grease (whichever is more suitable) should be applied to any rubbing surface which has lost its lubricative film. Old grease and dirty oil should be cleaned off. Deteriorated grease has lost its lubricative quality and may contain abrasive foreign particles.

Don't use just any oil or grease. Some oils and greases in particular should be used only in certain applications and may be harmful if used in an application for which they are not intended. This manual makes reference to molybdenum disulfide grease ( $\text{MoS}_2$ ) in the assembly of certain engine and chassis parts. Always check manufacturer recommendations before using such special lubricants.

### (15) Electrical Wires

All the electrical wires are either single-color or two-color and, with only a few exceptions, must be connected to wires of the same color. On any of the two-color wires there is a greater amount of one color and a lesser amount of a second color, so a two-color wire is identified by first the primary color and then the secondary color. For example, a yellow wire with thin red stripes is referred to as a "yellow/red" wire; it would be a "red/yellow" wire if the colors were reversed to make red the main color.

Wire (cross-section)	Name of Wire Color
	Yellow/Red

### (16) Replacement Parts

When there is a replacement instruction, replace these parts with new ones every time they are removed. These replacement parts will be damaged or lose their original function once removed.

### (17) Inspection

When parts have been disassembled, visually inspect these parts for the following conditions or other damage. If there is any doubt as to the condition of them, replace them with new ones.

Abrasion	Crack	Hardening	Warp
Bent	Dent	Scratch	Wear
Color change	Deterioration	Seizure	

### (18) Specifications

Specification terms are defined as follows:

"Standards" show dimensions or performances which brand-new parts or systems have.

"Service Limits" indicate the usable limits. If the measurement shows excessive wear or deteriorated performance, replace the damaged parts.

## 1-4 GENERAL INFORMATION

### Model Identification

---

KLX110-A1 Left Side View



KLX110-A1 Right Side View





## General Specifications

Items		KLX110-A1
<b>Dimensions:</b>		
Overall length		1 555 mm
Overall width		660 mm
Overall height		955 mm
Wheelbase		1 065 mm
Road clearance		190 mm
Seat height		650 mm
Dry mass		64 kg
Curb mass:	Front	31 kg
	Rear	37 kg
Fuel tank capacity		3.8 L
<b>Performance:</b>		
Minimum turning radius		1.6 m
<b>Engine:</b>		
Type		4-stroke, SOHC, single cylinder
Cooling system		Air-cooled
Bore and stroke		53.0 × 50.6 mm
Displacement		111 mL
Compression ratio		9.5 : 1
Maximum horsepower		4.6 kW (6.3 PS) @7 000 r/min (rpm)
Maximum torque		6.9 N·m (0.70 kgf·m, 61 in·lb) @4 500 r/min (rpm)
Carburetion system		Carburetor, KEIHIN PB18
Starting system		Kick
Ignition system		Magneto CDI
Ignition timing		10° BTDC @1 300 r/min (rpm) /31° BTDC @4 000 r/min (rpm)
Spark plug		NGK CR6HSA
Valve timing:		
Inlet:	Open	0° BTDC
	Close	80° ABDC
	Duration	260°
Exhaust:	Open	35° BBDC
	Close	45° ATDC
	Duration	260°
Lubrication system		Forced lubrication (wet sump)
Engine oil:		
Type		API SE, SF or SG API SH or SJ with JASO MA
Viscosity		SAE10W-40
Capacity		1.1 L (when engine is completely dry)

## 1-6 GENERAL INFORMATION

### General Specifications

Items		KLX110-A1
<b>Drive Train:</b>		
Primary reduction system:		
Type		Gear, centrifugal
Reduction ratio		3.048 (64/21)
Clutch type		Centrifugal & wet, multi disc
Transmission:		
Type		3-speed, constant mesh, return shift
Gear ratios:	1st	3.273 (36/11)
	2nd	1.938 (31/16)
	3rd	1.350 (27/20)
Final drive system:		
Type		Chain drive
Reduction ratio		2.642 (37/14)
Overall drive ratio		10.873 @Top gear
<b>Frame:</b>		
Type		Backbone
Caster (rake angle)		25.5°
Trail		54 mm
Front tire:	Type	C803
	Size	2.50 - 14 4PR
Rear tire:	Type	C803
	Size	3.00 - 12 4PR
Front suspension:	Type	Telescopic fork
	Wheel travel	110 mm
Rear suspension:	Type	Swingarm
	Wheel travel	107 mm
Brake type:	Front	Drum
	Rear	Drum

Specifications are subject to change without notice, and may not apply to every country.

## Torque and Locking Agent

The following tables lists the tightening torque for the major fasteners requiring use of a non-permanent locking agent or liquid gasket.

Letters used in the "Remarks" column mean:

**L** : Apply a non-permanent locking agent to the threads.

**S** : Tighten the fasteners following the specified sequence.

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

### Basic Torque for General Fasteners

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10.0 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19.0 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23 ~ 33	165 ~ 240

Fastener	Torque			Remarks
	N·m	kgf·m	ft·lb	
<b>Engine Top End:</b>				
Rocker arm shaft stopper mounting screws	5.2	0.53	46 in·lb	L S L,S
Valve adjusting screw locknuts	8.8	0.9	78 in·lb	
Camshaft sprocket bolt	12	1.2	8.9	
Cylinder head nuts	22	2.2	16	
Cylinder head bolts	12	1.2	8.9	
Spark plug	13	1.3	9.6	
Chain tensioner mounting bolts	5.2	0.53	46 in·lb	
Tensioner cap bolt	5.2	0.53	46 in·lb	
Camshaft sprocket cover bolts	5.2	0.53	46 in·lb	
Camshaft chain guide bolt	5.2	0.53	46 in·lb	
Camshaft chain holder bolts	5.2	0.53	46 in·lb	
Valve adjusting cap bolts	5.2	0.53	46 in·lb	
<b>Clutch:</b>				
Clutch cover screws	5.2	0.53	46 in·lb	S
Clutch cover damper screws	2.9	0.3	26 in·lb	
Crankshaft hold bearing screw	2.9	0.3	26 in·lb	
Clutch hub nut (primary)	72	7.3	53	
Clutch hub nut (secondary)	72	7.3	53	
Clutch spring bolts	3.4	0.35	30 in·lb	
Clutch adjusting screw locknut	19	1.9	14	
Shift drum position plate screw	5.2	0.53	46 in·lb	L
Shift drum positioning lever pivot bolt	5.2	0.53	46 in·lb	
Kick guide screw	5.2	0.53	46 in·lb	
Return spring pin	22	2.2	16	
<b>Engine Lubrication System:</b>				
Oil pipe banjo bolts	15	1.5	11	
Oil pipe clamp screw	5.2	0.53	46 in·lb	
Oil pump mounting screw	5.2	0.53	46 in·lb	
Oil filter cap bolts	5.2	0.53	46 in·lb	
Engine oil drain plug	29	3.0	21	


## 1-8 GENERAL INFORMATION

### Torque and Locking Agent


Fastener		Torque			Remarks
		N·m	kgf·m	ft·lb	
Engine Removal/Installation:					
Engine mounting nuts		54	5.5	40	
Side stand mounting nut		23	2.3	17	
Crankshaft/Transmission:					
Crankcase screws		5.2	0.53	46 in·lb	S
Bearing retainer screw 5 mm		2.9	0.3	26 in·lb	
Bearing retainer screw 6 mm		5.2	0.53	46 in·lb	L
Shift return spring pin		22	2.2	16	
Shift drum Allen bolt		5.2	0.53	46 in·lb	L
Cam chain guide stopper screw		5.2	0.53	46 in·lb	
Wheels/Tires:					
Spoke nipples		1.2	0.12	10 in·lb	
Front axle nut		44	4.5	32	
Rear axle nut		64	6.5	47	
Torque link nut		25	2.5	18	
Final Drive:					
Rear sprocket nuts		34	3.5	25	
Brakes:					
Brake pedal bolt		8.8	0.9	79 in·lb	
Suspension:					
Front fork clamp bolts:					
	Upper	20	2.0	15	
	Lower	29	3.0	22	
Front fork bottom Allen bolts		20	2.0	15	
Torque link nuts:					
	Front	25	2.5	18	
	Rear	25	2.5	18	
Swingarm pivot shaft nut		78	8.0	58	
Rear shock absorber mounting nuts:					
	Upper	39	4.0	29	
	Lower	39	4.0	29	
Steering:					
Steering stem head nut		44	4.5	32	
Handlebar clamp bolt		25	2.5	18	
Steering stem nut		4.9	0.5	43 in·lb	
Electrical System:					
Gear position switch screw		2.9	0.3	26 in·lb	S
Spark plug		13	1.3	9.6	
Magneto flywheel nut		41.5	4.25	30.6	
Exciter coil mounting screws		5.2	0.53	46 in·lb	
Pickup coil mounting screw		2.9	0.30	26 in·lb	
Magneto cover mounting screw		5.2	0.53	46 in·lb	
Exciter coil plate screw		2.9	0.3	26 in·lb	
Pickup coil plate screw		2.9	0.3	26 in·lb	
Magneto cover damper		2.9	0.3	26 in·lb	

## Special Tools


Steering Stem Bearing Driver: 57001-137

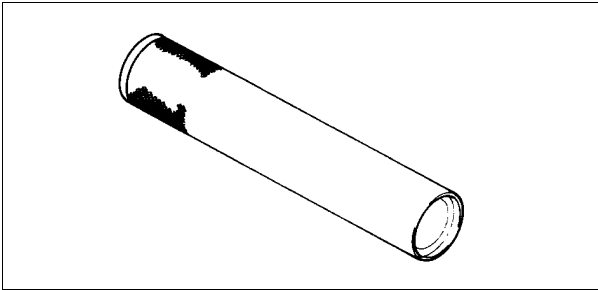


Compression Gauge : 57001-221

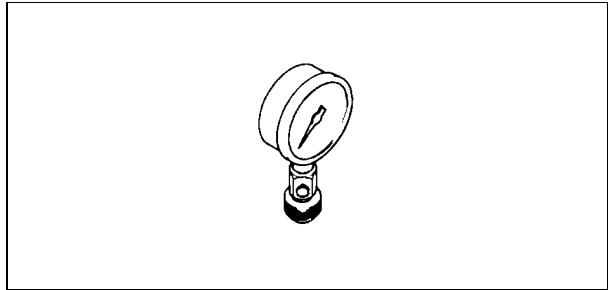


Inside Circlip Pliers: 57001-143

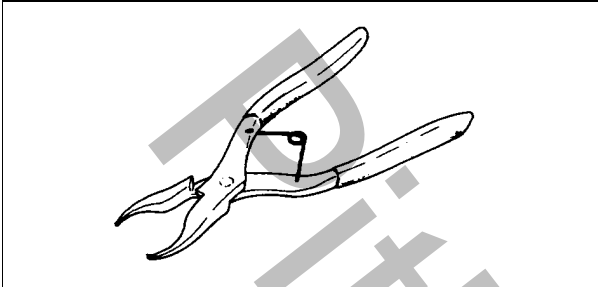


Valve Spring Compressor Assembly : 57001-241

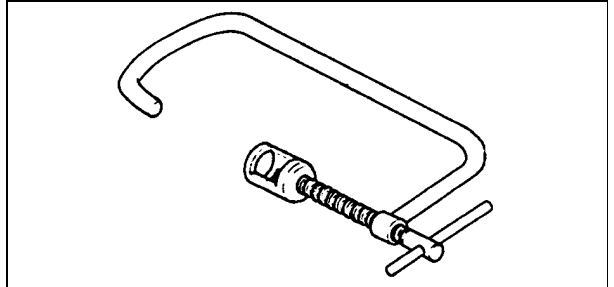


Outside Circlip Pliers: 57001-144

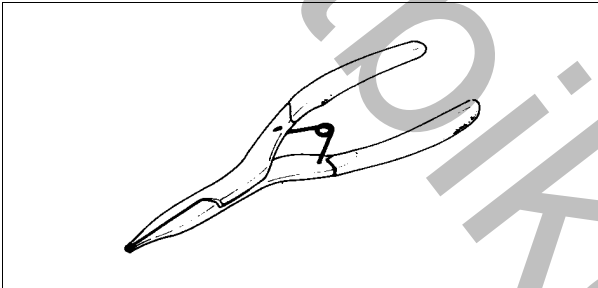


Bearing Puller Adapter: 57001-317

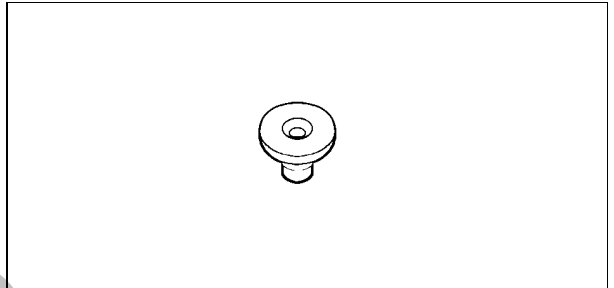


Bearing Puller : 57001-158

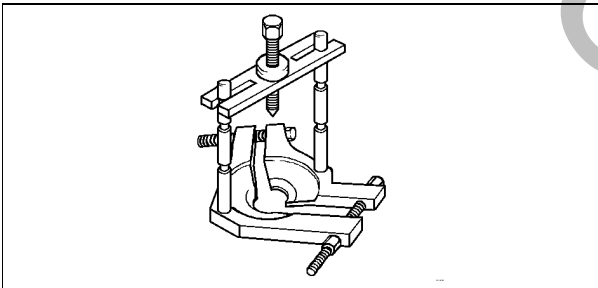


Piston Pin Puller Assembly: 57001-910

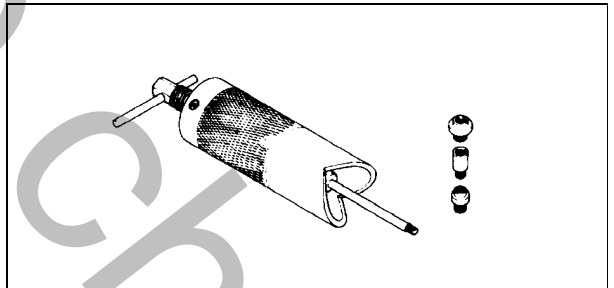

Fork Cylinder Holder Handle : 57001-183

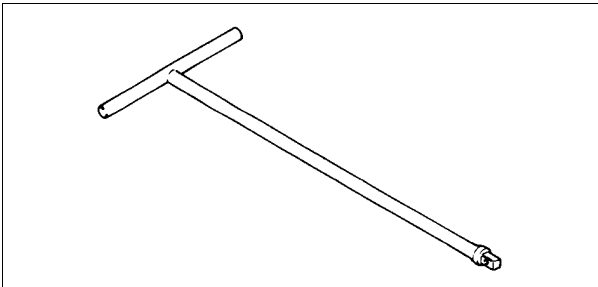


Fork Cylinder Holder Adapter: 57001-1011

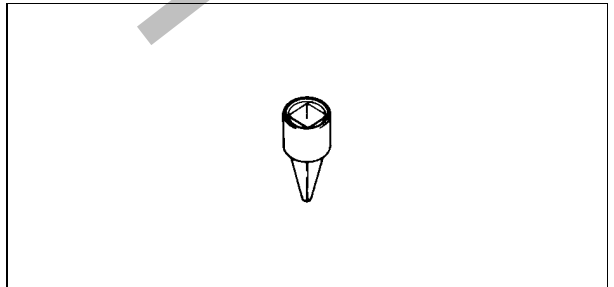


# 1-10 GENERAL INFORMATION

## Special Tools


Fuel Level Gauge: 57001-1017

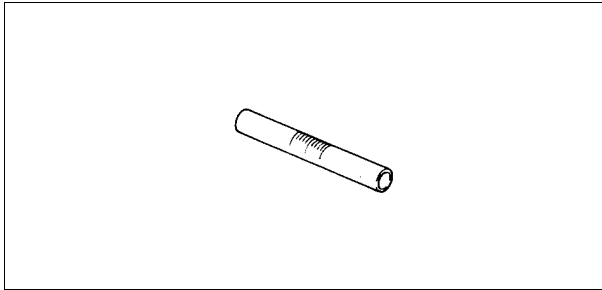


Bead breaker Assembly: 57001-1072

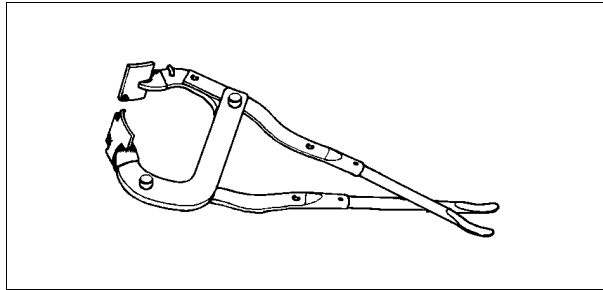


Valve Guide Reamer,  $\phi 4.5$ : 57001-1020

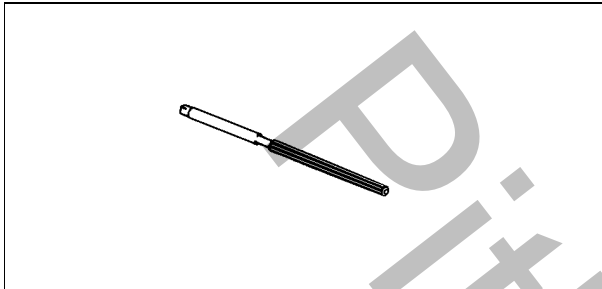


Crankcase Splitting Tool Assembly: 57001-1098

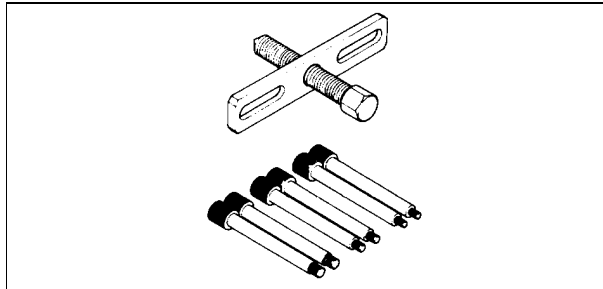


Valve Guide Arbor,  $\phi 4.5$ : 57001-1021

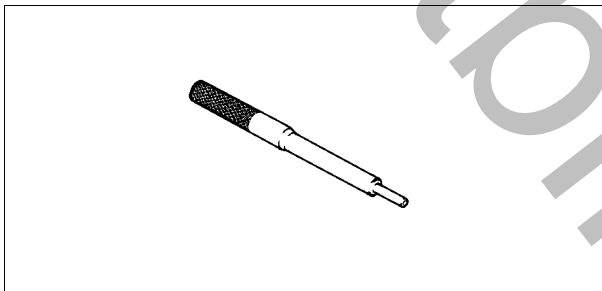


Steering Stem Nut Wrench: 57001-1100

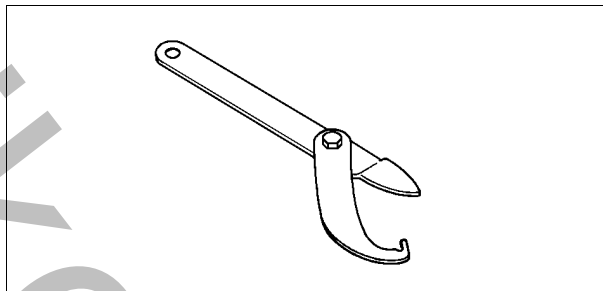


Oil Seal & Bearing Remover: 57001-1058

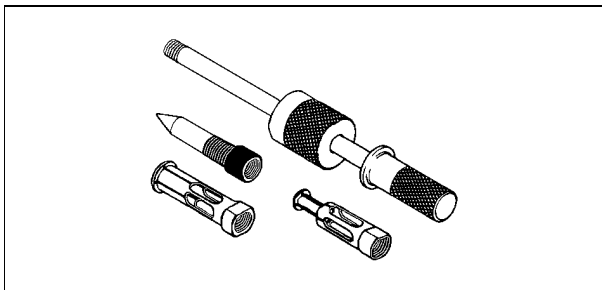


Valve Seat Cutter,  $45^\circ$  -  $\phi 27.5$ : 57001-1114

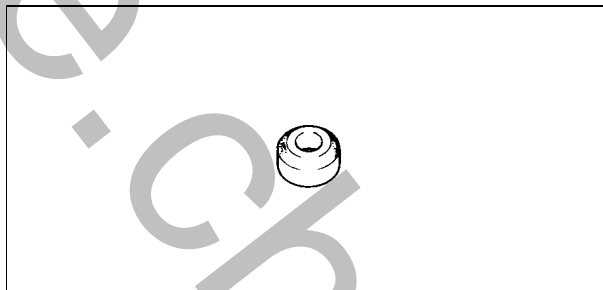

Rim Protector: 57001-1063

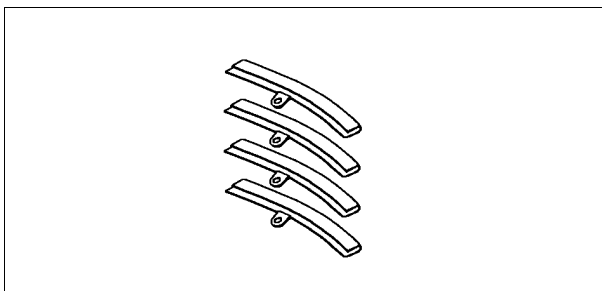


Valve Seat Cutter,  $32^\circ$  -  $\phi 25$ : 57001-1118

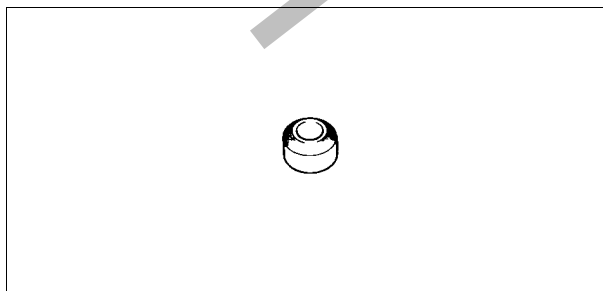


## Special Tools


Valve Seat Cutter, 60° -  $\phi 30$  : 57001-1123

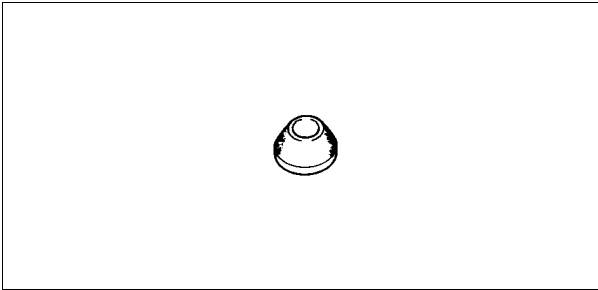


Crankshaft Jig: 57001-1174

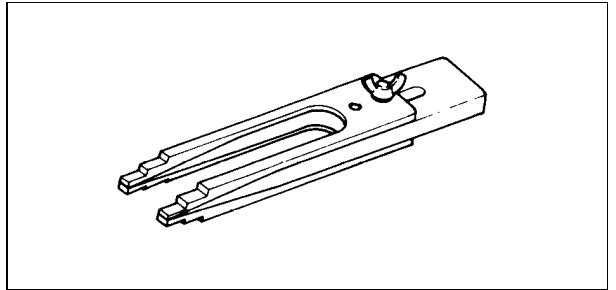


Valve Seat Cutter Holder,  $\phi 5.5$  : 57001-1125

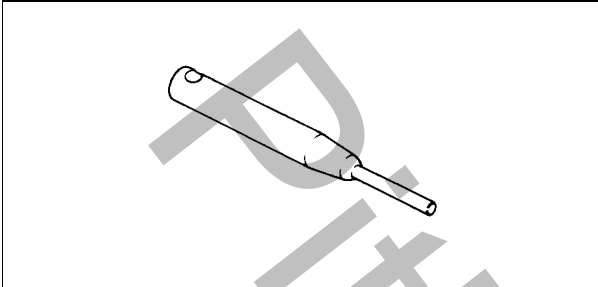


Bearing Puller Stud: 57001-1190

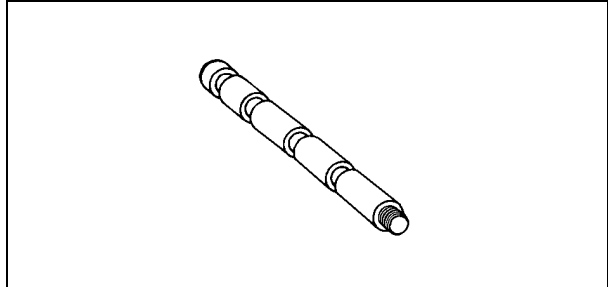


Valve Seat Cutter Holder Bar : 57001-1128

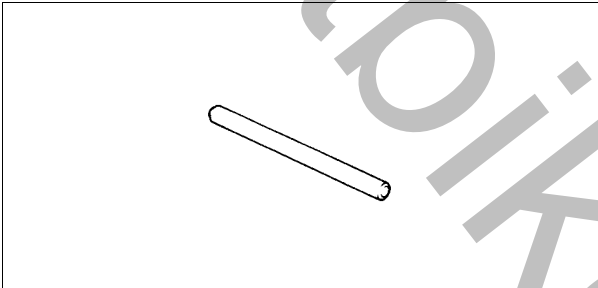


Valve Seat Cutter, 45° -  $\phi 22$ : 57001-1205

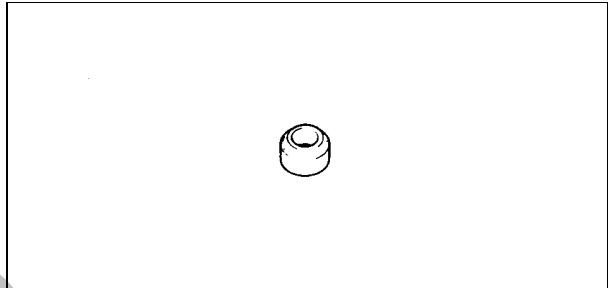


Bearing Driver Set : 57001-1129

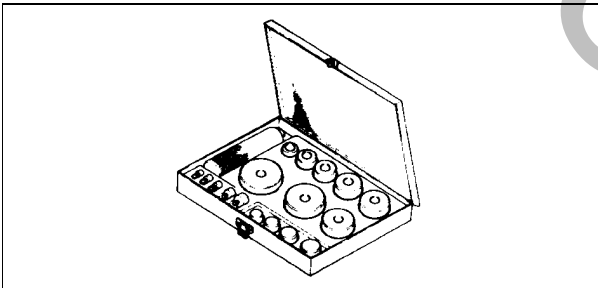


Valve Seat Cutter, 32° -  $\phi 22$ : 57001-1206

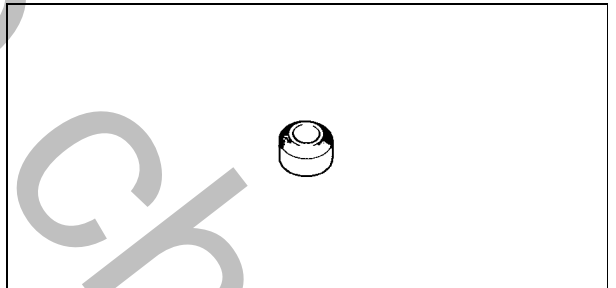

Valve Spring Compressor Adapter,  $\phi 20$  : 57001-1154

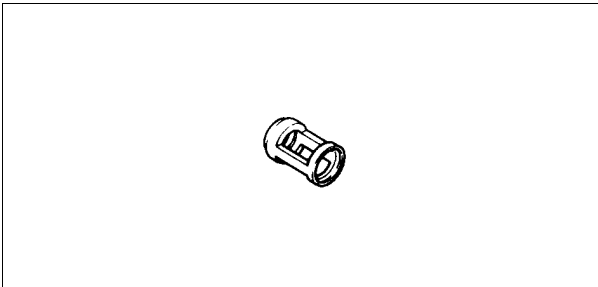


Valve Seat Cutter, 67.5° -  $\phi 22$ : 57001-1207

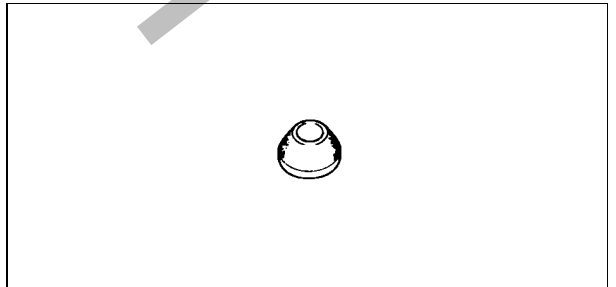


# 1-12 GENERAL INFORMATION

## Special Tools


Rotor Puller, M16/M18/M20/N22 x 1.5 : 57001-1216

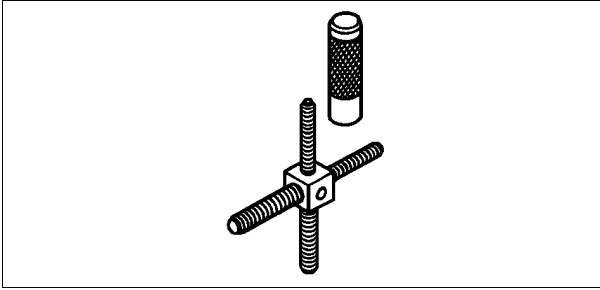


Valve Adjusting Screw Holder: 57001-1217

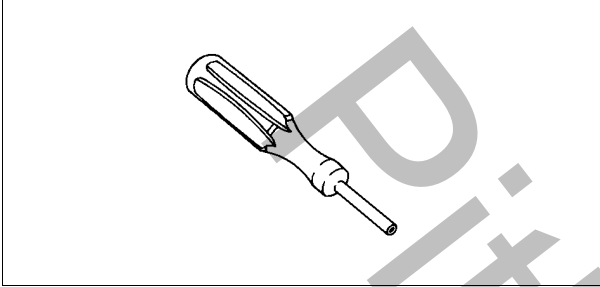


Bearing Remover Shaft  $\phi 9$ : 57001-1265

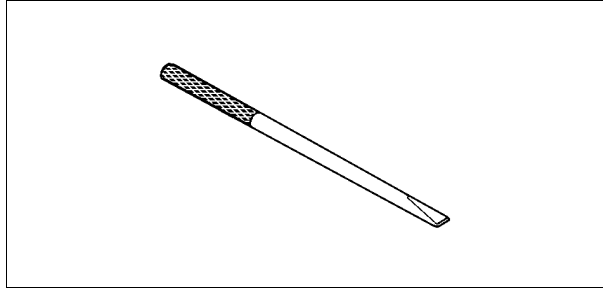


Bearing Removal Head  $\phi 10 \times \phi 12$ : 57001-1266

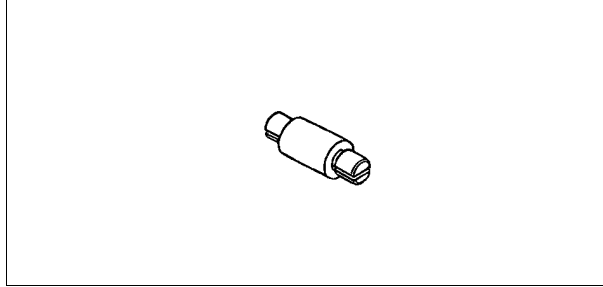


Fork Oil Seal Driver: 57001-1219

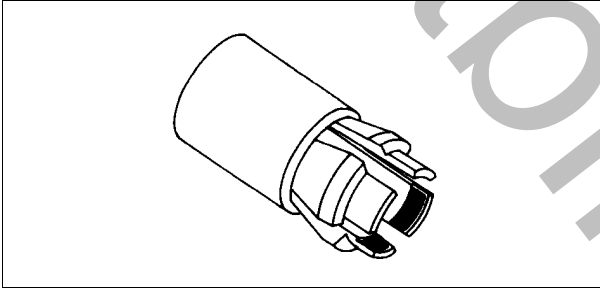


Fork Oil Level Gauge: 57001-1290

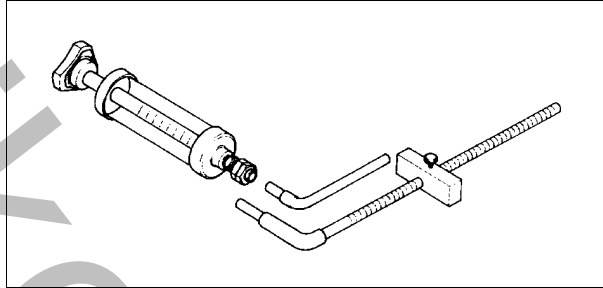


Jack: 57001-1238

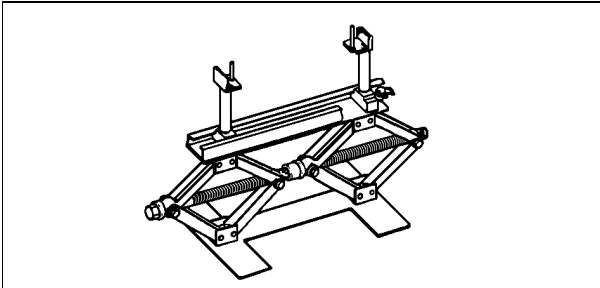


Flywheel Holder: 57001-1313

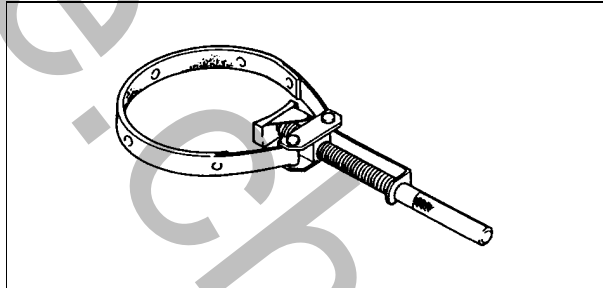

Spark Plug Wrench, Hex 16: 57001-1262

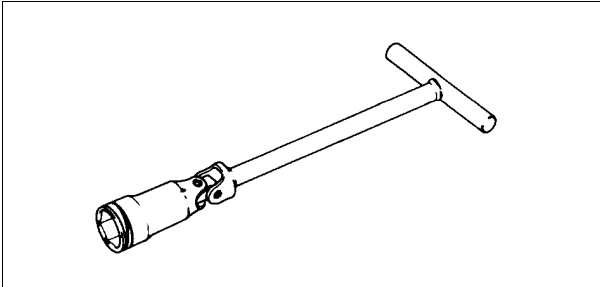


Compression Gauge Adapter, M10 x 1.0 : 57001-1317

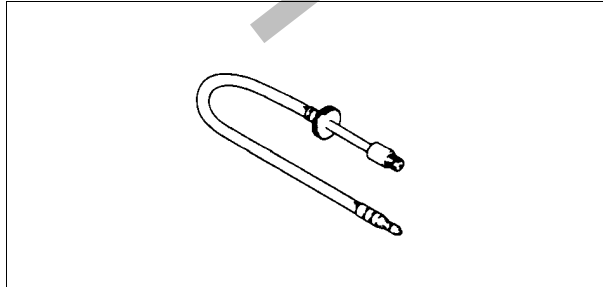




## Special Tools


**Hand Tester: 57001-1394**

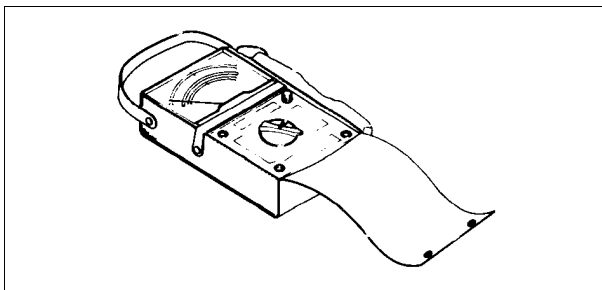


**Clutch Holder: 57001-1508**

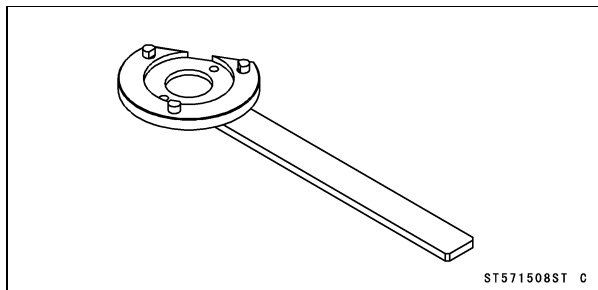


**Flywheel Puller, M28 × 1.0: 57001-1471**

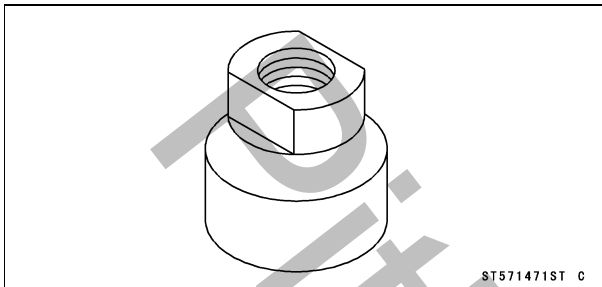


**Kawasaki Bond (Liquid Gasket- Black): 92104-1003**

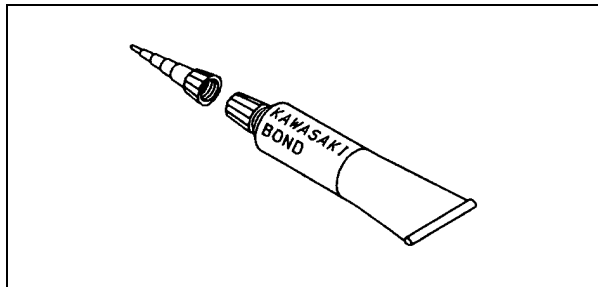

**Primary Clutch Holder: 57001-1507**

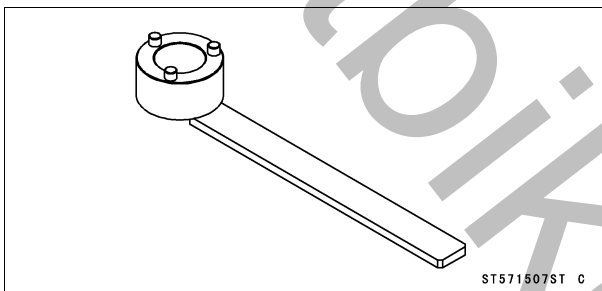

**Kawasaki Bond (Silicone sealant): 56019-120**

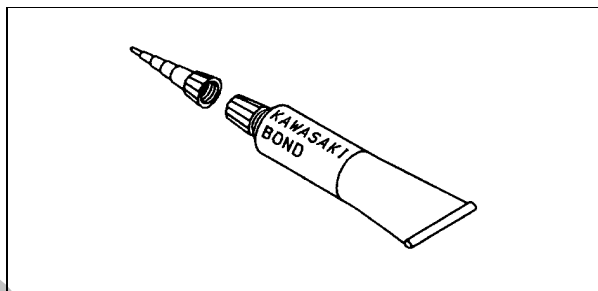

## Cable, Wire and Hose Routing

A technical drawing of a cable assembly, likely for a medical device. The drawing shows a central rectangular component with various cables and connectors. Numbered callouts include: 1 (top left cable), 18 (top center cable), 4 (top right cable), 2 (top right cable), 3 (top right cable), 7 (bottom right connector), and 7 (bottom center connector). The drawing is a line drawing with dashed lines indicating internal or hidden components.

Diagram 17 shows a detail of the front of the device. It includes the front cover (16) and the front panel (17). The front panel (17) is a circular component that is attached to the front cover (16). The front cover (16) is a rectangular component that is attached to the main body of the device.

Viewed From Rear

17  
14  
7  
5  
3  
10  
11  
13  
12  
9  
7  
6  
16  
15  
8  
4  
3  
2

Kawasaki

GB09053BW5 C

### Cable, Wire and Hose Routing


---

1. Throttle Cable
2. Engine Stop Switch Lead
3. Band
4. Handlebar
5. Frame
6. Carburetor
7. Clamp
8. Air Vent Hose
9. Regulator/Rectifier
10. Igniter
11. Crankcase Breather Hose
12. Magneto Leads
13. Gear Position Switch Leads
14. Main Harness
15. Choke Knob
16. Ignition Coil
17. Ground Lead
18. Brake Cable

## 1-16 GENERAL INFORMATION

### Cable, Wire and Hose Routing

#### MAIN HARNESS, HOSE AND CABLE ROUTING

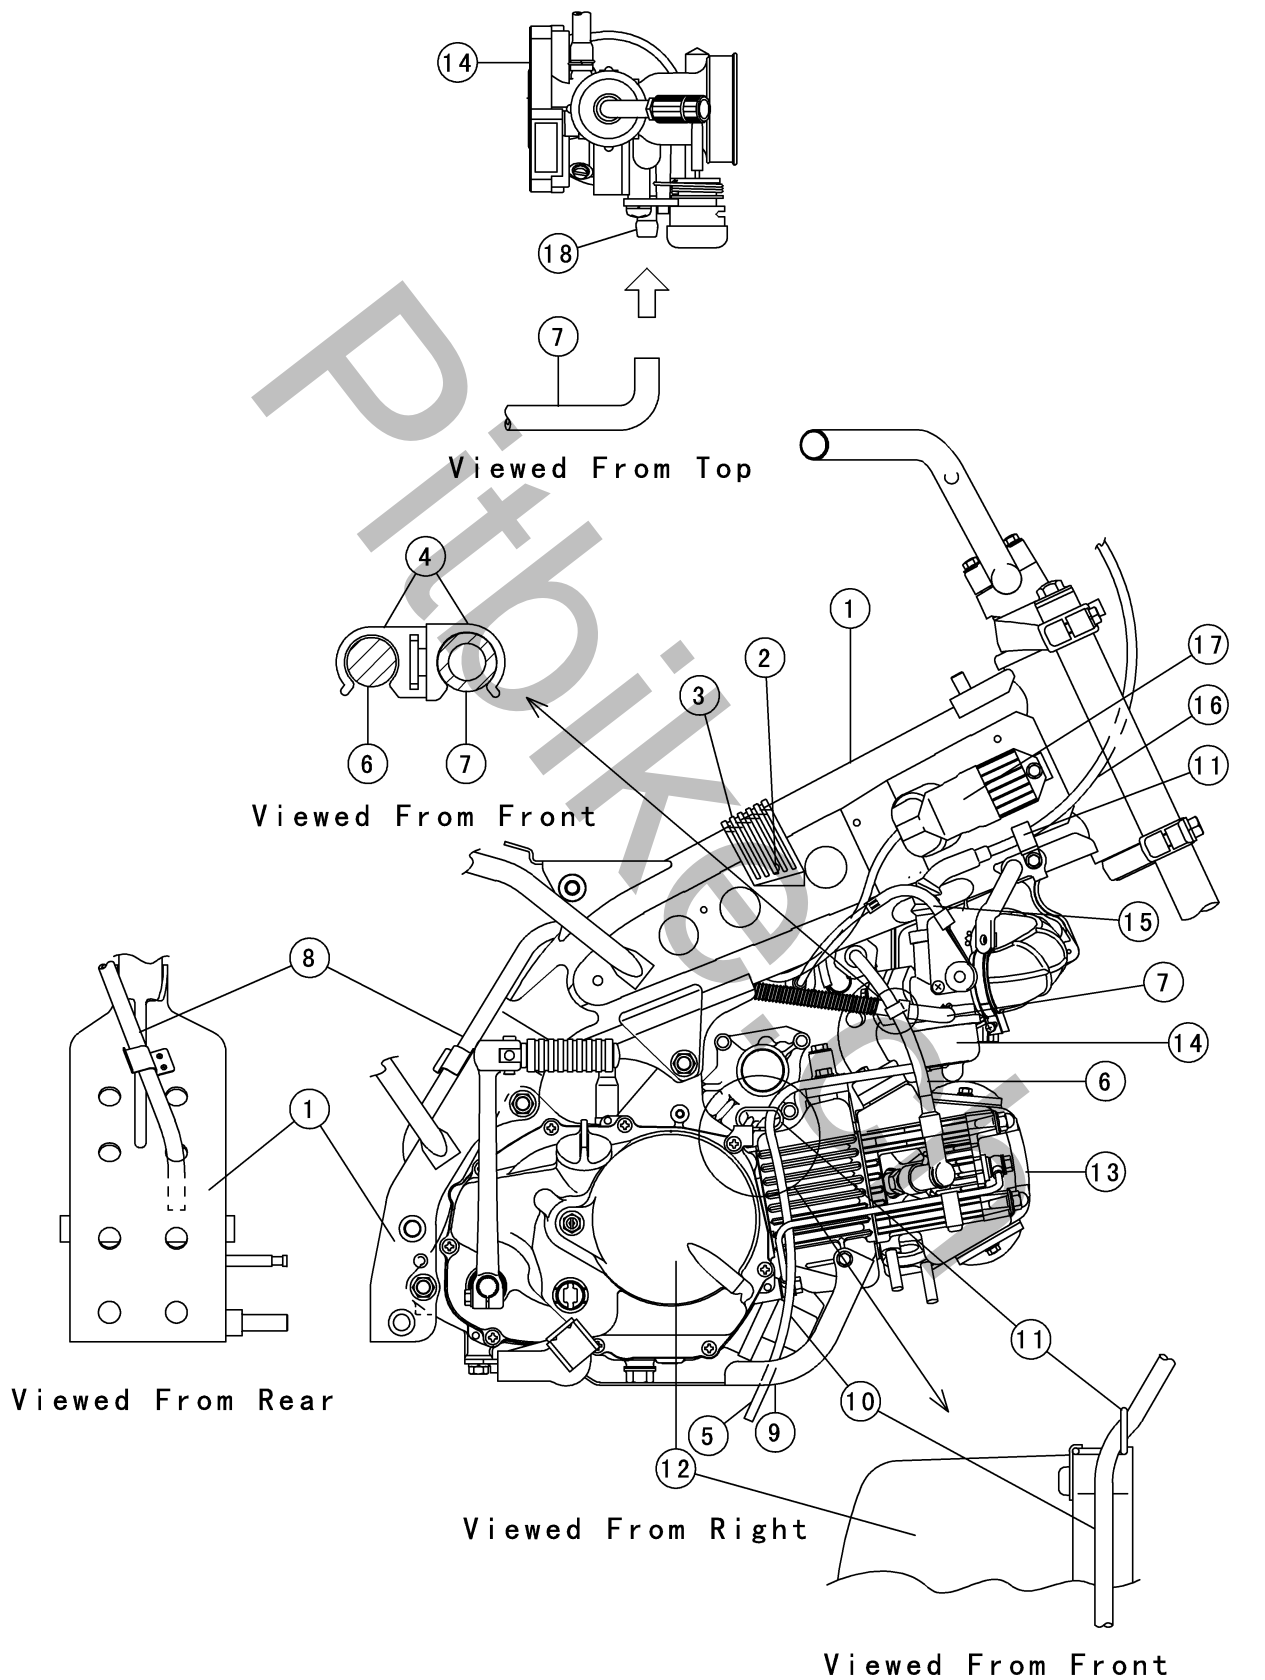

---

**Cable, Wire and Hose Routing**

---

1. Frame
2. Align the damper center with the frame hole.
3. Apply adhesive to diagonal line portion.
4. Clamp
5. Run the carburetor drain hose into a hole of the engine guard.
6. Ignition Coil Lead
7. Inlet Fuel Hose
8. Crankcase Breather Hose
9. Engine Guard
10. Carburetor Drain Hose
11. Clamp
12. Clutch Cover
13. Cylinder Head
14. Carburetor
15. Choke Cable
16. Throttle Cable
17. Regulator/Rectifier
18. Inlet Fitting

# 1-18 GENERAL INFORMATION

## Unit Conversion Table

### Prefixes for Units:

Prefix	Symbol	Power
mega	M	$\times 1\,000\,000$
kilo	k	$\times 1\,000$
centi	c	$\times 0.01$
milli	m	$\times 0.001$
micro	$\mu$	$\times 0.000001$

### Units of Torque:

N·m	$\times$	0.1020	=	kg·m
N·m	$\times$	0.7376	=	ft·lb
N·m	$\times$	8.851	=	in·lb
kg·m	$\times$	9.807	=	N·m
kg·m	$\times$	7.233	=	ft·lb
kg·m	$\times$	86.80	=	in·lb

### Units of Mass:

kg	$\times$	2.205	=	lb
g	$\times$	0.03527	=	oz

### Units of Pressure:

kPa	$\times$	0.01020	=	kg/cm <sup>2</sup>
kPa	$\times$	0.1450	=	psi
kPa	$\times$	0.7501	=	cm Hg
kg/cm <sup>2</sup>	$\times$	98.07	=	kPa
kg/cm <sup>2</sup>	$\times$	14.22	=	psi
cm Hg	$\times$	1.333	=	kPa

### Units of Volume:

L	$\times$	0.2642	=	gal (US)
L	$\times$	0.2200	=	gal (imp)
L	$\times$	1.057	=	qt (US)
L	$\times$	0.8799	=	qt (imp)
L	$\times$	2.113	=	pint (US)
L	$\times$	1.816	=	pint (imp)
mL	$\times$	0.03381	=	oz (US)
mL	$\times$	0.02816	=	oz (imp)
mL	$\times$	0.06102	=	cu in

### Units of Speed:

km/h	$\times$	0.6214	=	mph
------	----------	--------	---	-----

### Units of Power:

kW	$\times$	1.360	=	PS
kW	$\times$	1.341	=	HP
PS	$\times$	0.7355	=	kW
PS	$\times$	0.9863	=	HP


### Units of Force:

N	$\times$	0.1020	=	kg
N	$\times$	0.2248	=	lb
kg	$\times$	9.807	=	N
kg	$\times$	2.205	=	lb

### Units of Length:

km	$\times$	0.6214	=	mile
m	$\times$	3.281	=	ft
mm	$\times$	0.03937	=	in

### Units of Temperature:

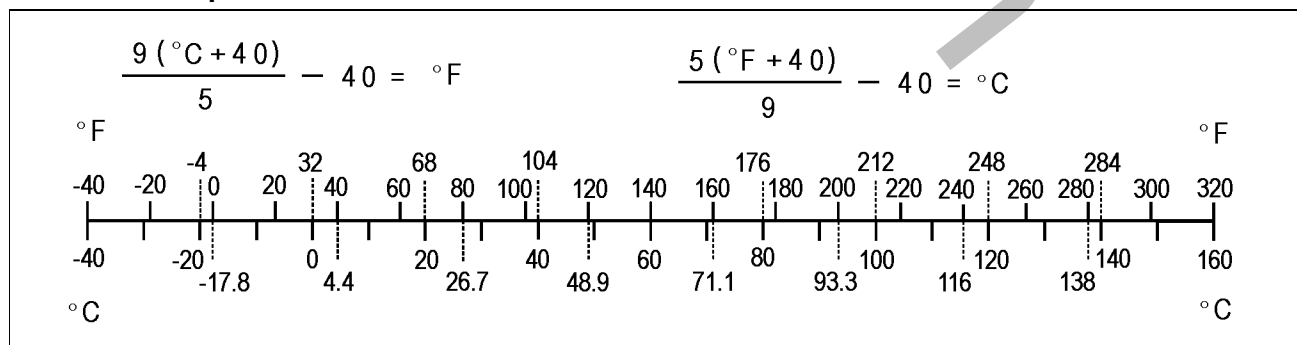

# Periodic Maintenance

## Table of Contents

Periodic Maintenance Chart.....	2-2	Chain Lubrication.....	2-13
Specifications .....	2-3	Sprocket Wear Inspection .....	2-13
Periodic Maintenance Procedures .....	2-4	Chain Slipper Wear Inspection.....	2-13
Fuel System.....	2-4	Brakes.....	2-13
Fuel Hose and Connection Inspection.....	2-4	Brake Lever, Brake Pedal Free Play Inspection.....	2-13
Fuel Tap Inspection.....	2-4	Front Brake Free Play Adjustment.....	2-14
Fuel Tap Cleaning.....	2-4	Brake Pedal Free Play Adjustment.....	2-14
Throttle Grip Free Play Inspection.....	2-4	Brake Lining Wear Inspection .....	2-14
Throttle Grip Free Play Adjustment.....	2-5	Cam Lever Angle Adjustment.....	2-15
Idle Speed Inspection.....	2-5	Brake Panel Lubrication .....	2-16
Idle Speed Adjustment.....	2-5	Suspension .....	2-16
Air Cleaner Element Cleaning and Inspection.....	2-6	Fork Oil Level Adjustment (Simplify).....	2-16
Engine Top End.....	2-6	Front Fork Inner Tube Inspection.....	2-17
Valve Clearance Inspection.....	2-6	Rear Shock Absorber Inspection.....	2-17
Valve Clearance Adjustment.....	2-7	Swingarm Pivot Inspection.....	2-18
Spark Arrester Cleaning.....	2-7	Swingarm Rubber Bushing Inspection.....	2-18
Clutch.....	2-8	Steering.....	2-18
Clutch Adjustment.....	2-8	Steering Inspection.....	2-18
Engine Lubrication System.....	2-8	Steering Adjustment.....	2-19
Oil Level Inspection.....	2-8	Steering Stem Bearing Lubrication.....	2-20
Oil Changing.....	2-8	Side Stand .....	2-20
Oil Filter Element Change.....	2-9	Side Stand Inspection.....	2-20
Wheels/Tires .....	2-10	Electrical System .....	2-20
Spoke Tightness Inspection.....	2-10	Spark Plug Gap.....	2-20
Rim Runout Inspection.....	2-10	Spark Plug Cleaning and Inspection.....	2-20
Final Drive.....	2-11	General Lubrication.....	2-21
Chain Slack Inspection.....	2-11	Lubrication.....	2-21
Chain Slack Adjustment.....	2-11	Nut, Bolt and Fastener Tightness.....	2-23
Chain Wear Inspection.....	2-12	Tightness Inspection.....	2-23

## 2-2 PERIODIC MAINTENANCE

### Periodic Maintenance Chart

The maintenance must be done in accordance with this chart to keep the motorcycle in good running condition.

OPERATION		FREQUENCY	Initial	Every		See Page
		5 hours (1 month)	50 hours (6 months)	100 hours (12 months)		
E	Engine oil-change	●	●	●		P8
	(e) Spark plug-clean, gap †		●	●		P20
	Clutch-inspection †	●	●	●		P8
	(e) Valve clearance-inspection †			●		P7
	Oil filter element-replace	●		●		P9
	(e) Air cleaner element-clean †	●	●	●		P6
	(e) Idle speed-inspection †	Every ride				P5
	(e) Throttle grip play-inspection †	●	●	●		P4
	Fuel tap-clean		●	●		P4
	Spark arrester-clean			●		P7
	Engine sprocket-inspection †		●	●		P13
	Fuel hose, connections-inspection†		●	●		P4
C	Brake adjustment-inspection †	Every ride				P13
	Brake lining wear-inspection †	Every ride				P14
	Brake camshaft-grease		●	●		P16
	Brake cable-inspection †	Every year				P22
	Spoke tightness and rim runout-inspection †	●	●	●		P10
	Drive chain slack-inspection†	Every ride				P11
	Drive chain-lubricate	Every ride				P13
	Drive chain wear-inspection †	●	●	●		P12
	Front fork-inspect/clean †		●	●		P17
	Chain slipper-inspection †		●	●		P13
	Front fork oil-inspection †	Every year				P16
	Nuts, bolts, fasteners-inspection†	●	●	●		P23
	Steering play-inspection †	●	●	●		P18
	Steering stem bearing-grease			●		P20
	Rear sprocket-inspection †		●	●		P13
	General lubrication-perform	●	●	●		P21
	Side stand-inspection †	●		●		P20
	Wheel bearing-inspection †		●	●		P10
	Swingarm pivots-inspection †	●	●	●		P18
	Rear shock absorber-inspection †		●	●		P17

†: Replace, add, adjust or torque if necessary.

(e): Emission Related

E: ENGINE

C: CHASSIS



## Specifications

Item	Standard	Service Limit
<b>Fuel System:</b>		
Throttle grip free play	2 ~ 3 mm	---
Idle speed	1250 ~ 1350 r/min (rpm)	---
Air cleaner element oil	High quality foam air filter oil	---
<b>Engine Top End:</b>		
Valve clearance:		
Exhaust	0.04 ~ 0.08 mm	---
Inlet	0.04 ~ 0.08 mm	---
<b>Clutch:</b>		
Clutch adjusting screw	1/4 turn out	---
<b>Engine Lubrication System:</b>		
Engine oil:		
Type	API SE, SF or SG API SH or SJ with JASO MA	
Viscosity	SAE 10W-40	
Capacity	1.1 L (when engine is completely dry) 1.0 L (when filter is removed) 0.9 L (when filter is not removed)	---
Level	Between upper and lower level lines	---
<b>Tires:</b>		
Rim runout:		
Axial	0.5 mm or less	2 mm
Radial	0.8 mm or less	2 mm
<b>Final Drive:</b>		
Drive chain slack	0 ~ 5 mm	---
Drive chain 20-link length	254.0 ~ 254.6 mm	259 mm
<b>Brakes:</b>		
Brake lever free play	4 ~ 5 mm	---
Brake pedal free play	20 ~ 30 mm	---
Brake cam lever angle:		
Front	80° ~ 90°	---
Rear	80° ~ 90°	---
<b>Suspension:</b>		
Fork oil viscosity	SHOWA SS-8 (SAE 10W-20)	---
Fork oil level (fully compressed, without spring)	89 ± 2 mm	---
<b>Electrical System:</b>		
Standard plug	NGK CR6HSA	---
Spark plug gap	0.6 ~ 0.7 mm	---

**Special Tools - Valve Adjusting Screw Holder: 57001-1217**

**Jack: 57001-1238**

**Fork Oil Level Gauge: 57001-1290**

**Steering Stem Nut Wrench: 57001-1100**


## 2-4 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### Fuel System


##### Fuel Hose and Connection Inspection

- Check the fuel hose [A] for the following.
  - Fuel leakage
  - Loose or improperly positioned line clamp [B]
  - Deteriorated or damaged line
- ★ Replace the fuel hose if any fraying, cracks or bulges are noticed.
- When installing, route the hoses according to Cable, Wire, and Hose Routing section in the General Information chapter.
- When installing the fuel hoses, avoid sharp bending, kinking, flattening or twisting, and route the fuel hoses with a minimum of bending so that the fuel flow will not be obstructed.
- ★ Replace the hose if it has been sharply bent or kinked.

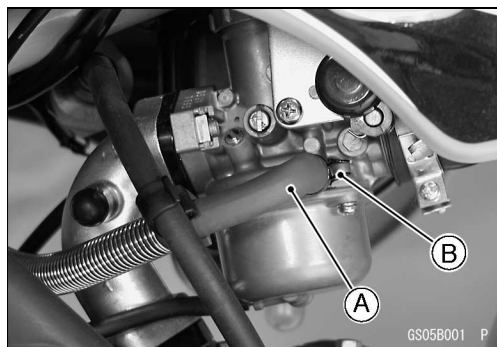

##### Fuel Tap Inspection

- Remove the fuel tap (see Fuel System chapter).
- Check the fuel tap filter screen [A] for any breaks or deterioration.
- ★ If the fuel tap screen have any breaks or is deteriorated, it may allow dirt to reach the carburetor, causing poor running. Replace the fuel tap.
- ★ If the fuel tap leaks, or allows fuel to flow when it is at OFF position, replace the damaged O-ring [B].

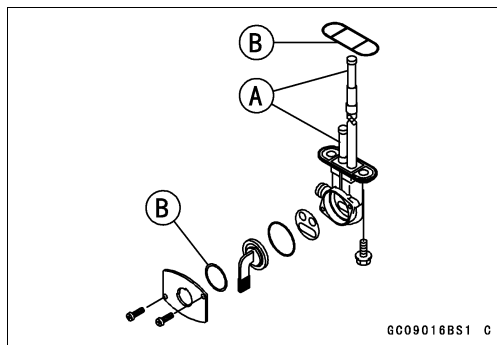

##### Fuel Tap Cleaning

#### ⚠ WARNING

Clean the tap in a well-ventilated area, and take care that there is no sparks or flame anywhere near the working area. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvent to clean the tap.


- Clean the fuel tap filter screen in a high flash-point solvent.
- Pour high flash-point solvent through the tap in all lever positions.
- Dry the tank and tap with compressed air.
- Install the tap in the tank.
- Install the fuel tank.

##### Throttle Grip Free Play Inspection

If the throttle grip has excessive free play due to cable stretch or misadjustment, there will be a delay in throttle response. Also, the throttle valve may not open fully at full throttle. On the other hand, if the throttle grip has no play, the throttle will be hard to control, and the idle speed will be erratic. Check the throttle grip play periodically in accordance with the Periodic Maintenance Chart, and adjust the play if necessary.

The throttle cable routing is shown in Cable, Harness, Hose Routing section in the General Information chapter.

- Check throttle grip free play [B] by lightly turning the throttle grip [A] back and forth.
- ★ If the free play is improper, adjust the throttle cable.

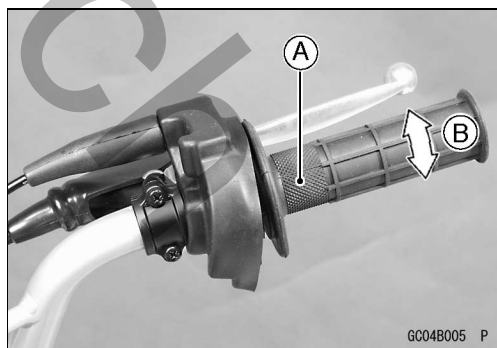

##### Throttle Grip Free Play


Standard:

2 ~ 3 mm


## Periodic Maintenance Procedures

### Throttle Grip Free Play Adjustment

- Loosen the locknut [A] at the upper end of the throttle cable.
- Turn the adjuster [B] until the proper amount of throttle grip free play is obtained.
- Tighten the locknut.

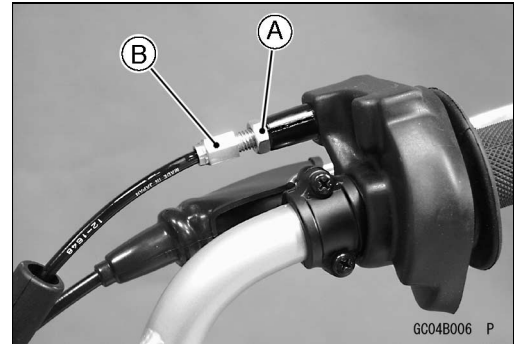

- ★ If the throttle grip free play cannot be adjusted with the adjuster at the upper end of the throttle cable, use the cable adjuster [A] at the carburetor.
- Pull the boot off of the carburetor top. Make the necessary free play adjustment at the lower cable adjuster, tighten the locknut [B], and install the boot.
- Check if the throttle grip moves smoothly from full open to close, and the throttle closes quickly and completely in all steering positions by the return spring. If not, check the throttle cable routing, grip free play, and cable damage. Then lubricate the throttle cable.
- With the engine idling, turn the handlebar both ways and check if handlebar movement changes the idling speed. If so, the throttle cable may be improperly adjusted or incorrectly routed, or damaged. Be sure to correct any of these conditions before riding.

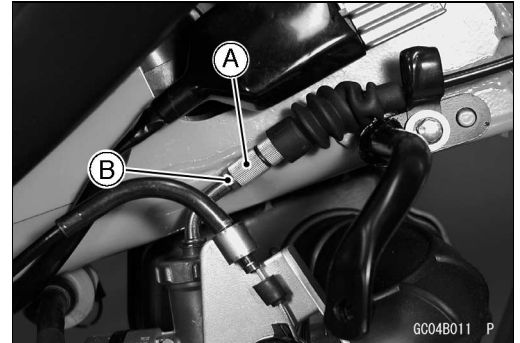

### ⚠ WARNING

Operation with an improperly adjusted, incorrectly routed, or damaged cable could result in an unsafe riding condition.

### Idle Speed Inspection

- Start the engine and warm it up thoroughly.
- Turn the handlebar from side to side while idling the engine.
- ★ If handlebar movement changes the idle speed, the throttle cable may be improperly adjusted or incorrectly routed, or it may be damaged. Be sure to correct any of these conditions before riding.

### ⚠ WARNING

Operation with an improperly adjusted, incorrectly routed, or damaged cable could result in an unsafe riding condition.


- Check idle speed using a tachometer.
- ★ If the idle speed is out of the specified range, adjust it.

### Idle Speed

Standard: 1250 ~ 1350 r/min (rpm)

### Idle Speed Adjustment

- First turn in the air screw [A] until it seats lightly, and back it out 1 1/4 turns.
- Start the engine and warm it up thoroughly.
- Turn the idle adjusting screw [B] until idle speed is correct.
- Open and close the throttle a few times to make sure that the idle speed is within the specified range. Readjust if necessary.

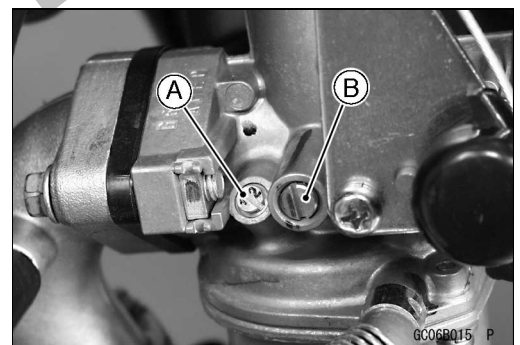

## 2-6 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### Air Cleaner Element Cleaning and Inspection


##### NOTE

- In dusty areas, the element should be cleaned more frequently than recommended interval.
- After riding through rain or on muddy roads, the element should be cleaned immediately.
- Since repeated cleaning opens the pores of the element, replace it with a new one. Also, if there is a break in the element material or any other damage to the element, replace the element with a new one.

##### ⚠ WARNING

Clean the element in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Because of the danger of highly flammable liquids, do not use gasoline or a low flash-point solvent to clean the element.

- Remove the air cleaner element [A] (see Fuel System chapter).
- Clean the element in a bath of a high flash-point solvent using a soft bristle brush. Squeeze it dry in a clean towel. Do not wring the element or blow it dry; the element can be damaged.
- Check all the parts of the element for visible damage.
- ★ If any of the parts of the element are damaged, replace them.
- After cleaning, saturate the element with a high-quality foam-air-filter oil, squeeze out the excess, then wrap it in a clean rag and squeeze it as dry as possible. Be careful not to tear the sponge filter.
- Remove the towel from the carburetor.
- Install the element.

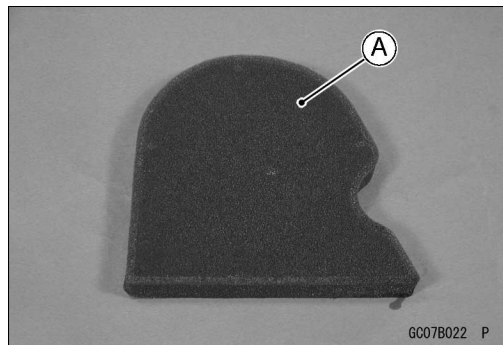

#### Engine Top End

##### Valve Clearance Inspection

##### CAUTION

If valve clearance is left unadjusted, wear will eventually cause the valves to remain partly open, which lowers performance, burns the valves and the valve seats, and may cause serious engine damage.


##### NOTE

- Valve clearance must be checked when the engine is cold (at room temperature).

##### Valve Clearance (when engine cold)


Inlet and Exhaust: 0.04 ~ 0.08 mm

- Remove:
  - Left Shroud
  - Spark Plug (see Electrical System chapter)
  - Camshaft Sprocket Cover [A] ( see Camshaft Sprocket Removal in the Engine Top End chapter.)
  - Valve Adjusting Covers [B] (see Rocker Arm Removal in the Engine Top End chapter.)

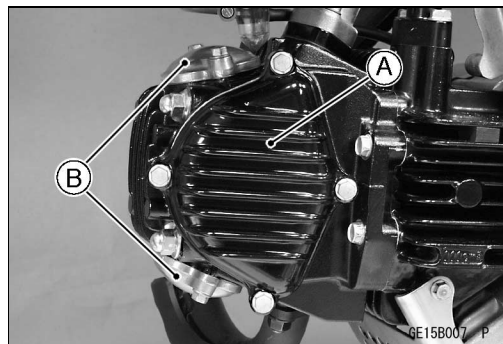


## Periodic Maintenance Procedures

- Turn the camshaft sprocket plate [A] counterclockwise and align the line [B] on the camshaft sprocket with the projection [C] on the mating surface of the cylinder head.

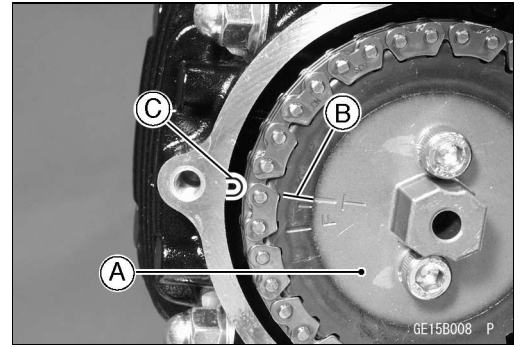

- Measure the clearance of each valve by inserting a thickness gauge [A] between the adjusting screw and the valve stem.
- ★ If a valve clearance is incorrect, adjust it.
- Install the other removed parts.

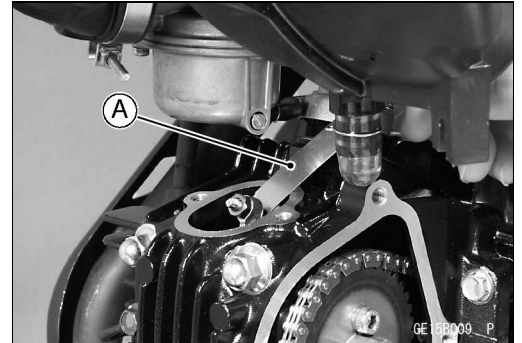


### Valve Clearance Adjustment

- Use a valve adjusting screw holder [A] to holding the valve adjusting screw [B], loosen the adjusting screw locknut [C] and insert the 0.05 mm thickness gauge between valve and adjusting screw and turn the adjusting screw until the adjusting screw stops.

**Special Tools - Valve Adjusting Screw Holder: 57001-1217**

- Tighten the locknut.
- Torque - Adjusting Screw Locknut: 8.8 N·m (0.9 kgf·m, 78 in·lb)**
- Remove the thickness gauge.

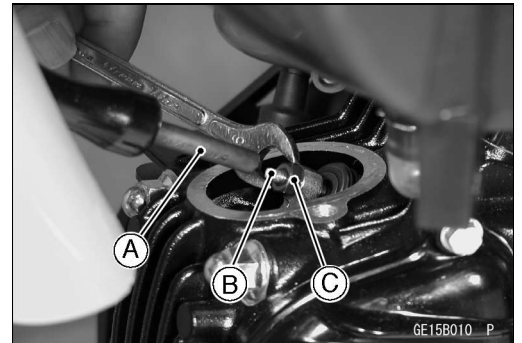


### Spark Arrester Cleaning


#### ⚠ WARNING

To avoid burns, be sure the exhaust system is cold before cleaning the spark arrester. The exhaust system becomes very hot soon after the engine is started.

- Remove the muffler cover.
- Unscrew the mounting bolts [A] and pull out the spark arrester [B].

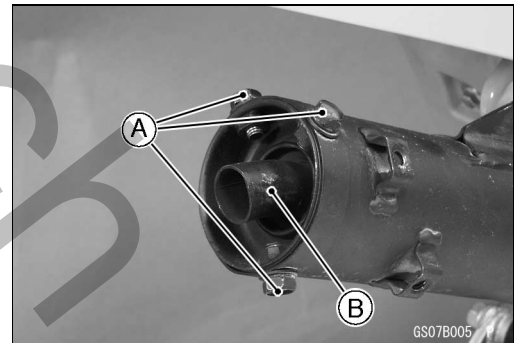

- Scrape carbon deposits off the spark arrester [A].

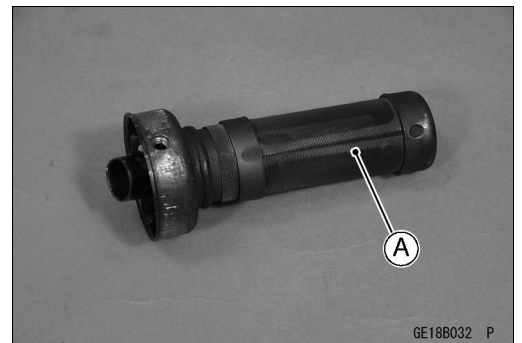

## 2-8 PERIODIC MAINTENANCE


### Periodic Maintenance Procedures

- Install the spark arrester and torque the spark arrester mounting bolts.  
**Torque - Spark Arrester Mounting Bolts: 8.8 N·m (0.9 kgf·m, 78 in·lb)**
- Install the muffler cover.

### Clutch

#### Clutch Adjustment

- Loosen the adjusting screw locknut [A].
- Turn the adjusting screw [B] counterclockwise until it becomes hard to turn, and then back it out a quarter turn.

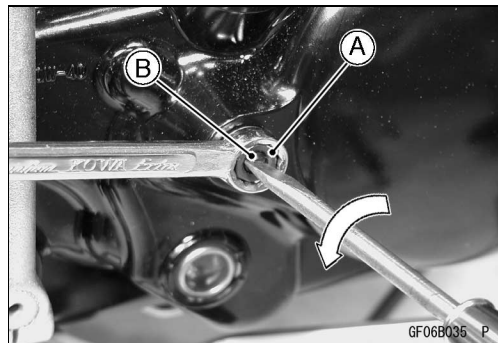

- Tighten the locknut without changing the adjusting screw position.
- Start the engine and inspect the conditions of clutch while shifting the pedal a few times.

**Torque - Adjusting Screw Locknut: 19 N·m (1.9 kgf·m, 14 ft·lb)**

### Engine Lubrication System


In order for the transmission and clutch to function properly, always maintain the engine oil at the proper level and change the oil periodically.

#### ⚠ WARNING

**Motorcycle operation with insufficient, deteriorated, or contaminated engine oil will cause accelerated, wear and may result in transmission seizure, accident, and injury.**

#### Oil Level Inspection

- To check the oil level, start the engine and run it for several minutes at idle speed. This fills the oil filter with oil. Then stop the engine and wait several minutes until the oil settles.
- If the motorcycle has just been used, wait several minutes for all the oil to drain down.
- Situate the motorcycle so that it is perpendicular to the ground.
- Check that the engine oil level is between the upper [A] and lower [B] levels in the gauge.
- ★ The oil level should be between the lines next to the gauge.
- ★ If the oil level is too high, remove the excess oil, using a syringe or some other suitable device.
- ★ If the oil level is too low, add oil through the oil filler opening. Use the same type and make of oil that is already in the engine.

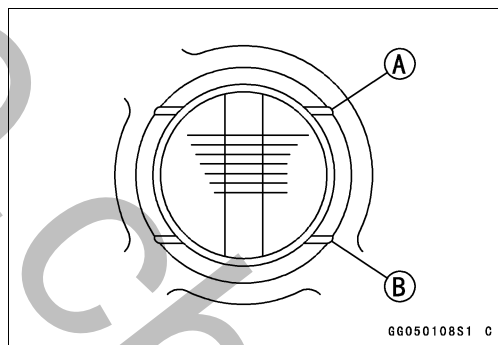


#### NOTE

- If the oil must be refilled but the type and brand of the oil already in the engine are unidentified, change the oil in the engine completely.

#### Oil Changing

- Support the motorcycle perpendicular to the ground.
- Warm up the engine thoroughly so that the oil will pick up any sediment and drain easily. Then stop the engine.
- Place an oil pan beneath the engine.
- Remove the engine oil drain plug [A] and the oil filler opening to drain the oil.
- The oil in the oil filter can be drained by removing the filter.

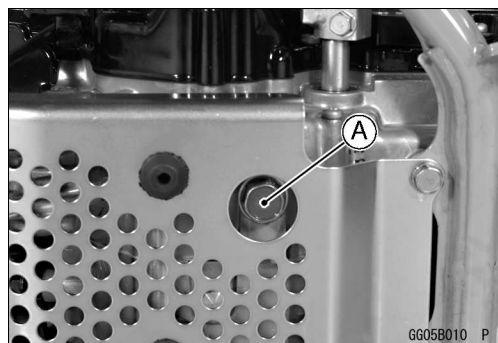

## Periodic Maintenance Procedures

- After the oil has completely drained, install the drain plug with its gasket.
- ★ Replace the drain plug gasket with a new one if it is damaged.
- Tighten the drain plug.

**Torque - Engine Oil Drain Plug:** 29 N·m (3.0 kgf·m, 21 ft·lb)


- Pour in the specified type and amount of oil.

### Recommended Engine Oil

Type:	API SE, SF or SG API SH or SJ with JASO MA
Viscosity:	SAE10W-40
Capacity:	1.1 L (When engine is completely dry) 1.0 L (When filter is removed) 0.9 L (When filter is not removed)


### NOTE

- Depending on the atmospheric temperature of your riding area, the engine oil viscosity should be changed according to the right chart:

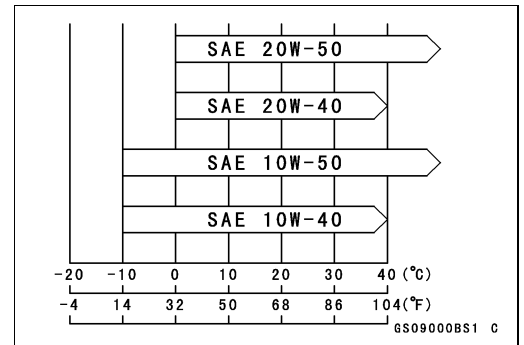

### Oil Filter Element Change

- Drain the engine oil.
- Remove the engine guard (see Engine Removal section in the Engine Removal/Installation chapter).
- Remove the oil filter cap bolts [A] and oil filter cap [B].

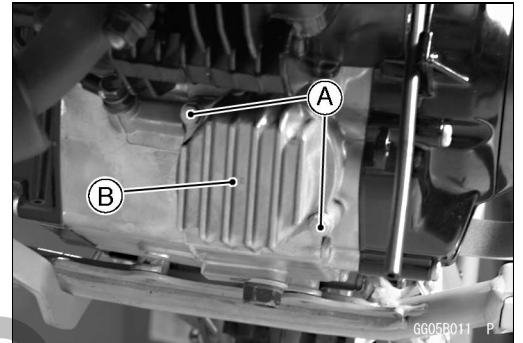


- Replace the filter element with a new one.
- Set the spring into the oil filter cap.

### NOTE

- Install the filter element so that the bypass valve [A] side outward.
- Fit a new O-ring onto the oil filter cap.
- Apply grease to the O-ring.
- Install the oil filter cap.

**Torque - Oil Filter Cap Bolts:** 5.2 N·m (0.53 kgf·m, 46 in·lb)

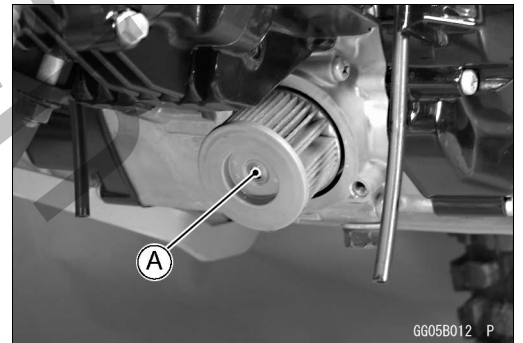

## 2-10 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### Wheels/Tires

##### Spoke Tightness Inspection

- Check that all the spokes [A] are tightened evenly.
- ★ Standard spoke tightening torque is shown below. Over- or under-tightening may cause breakage.


##### Tightening Torque

Spokes: 1.2 N·m  
(0.12 kgf·m, 10 in·lb)

- Check the rim runout.

#### ⚠ WARNING

If any spoke breaks, it should be replaced immediately. A missing spoke places an additional load on the other spokes, which will eventually cause other spokes to break.

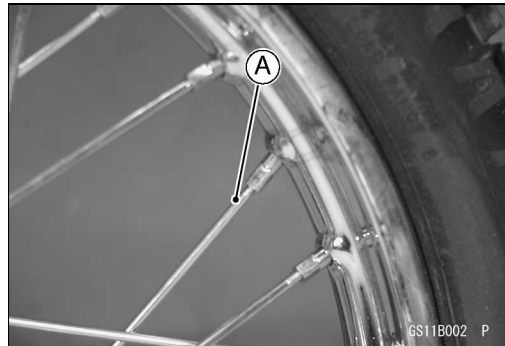


##### Rim Runout Inspection

- Place the jack under the frame so that the front/rear wheel off the ground.

Special Tool - Jack: 57001-1238

- Inspect the rim for small cracks, dents, bending, or warping.
- ★ If there is any damage to the rim, it must be replaced.
- Set a dial gauge against the side of the rim, and rotate the rim to measure axial runout [A]. The difference between the highest and lowest dial readings is the amount of runout.
- Set a dial gauge to the outer circumference of the rim, and rotate the rim to measure radial runout [B]. The difference between the highest and lowest dial readings is the amount of runout.
- If rim runout exceeds the service limit, check the hub bearing first. Replace them if they are damaged. If the problem is not to the bearings, correct the rim warp (runout). A certain amount of rim warp can be corrected by recentering the rim. Loosen some spokes and tighten others within the standard torque to change the position of different parts of the rim. If the rim is badly bent, however, it should be replaced.

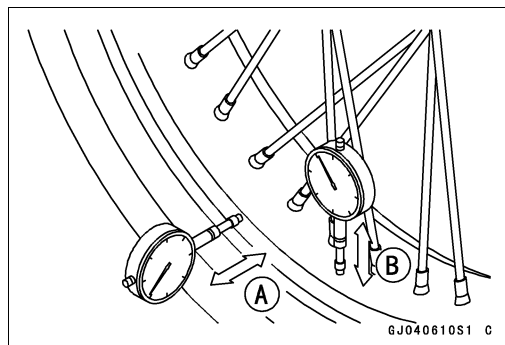

##### Rim Runout (with tire installed)

	Standard	Service Limit
Axial:	0.5 mm or less	2 mm
Radial:	0.8 mm or less	2 mm



## Periodic Maintenance Procedures

### Final Drive

#### Chain Slack Inspection


- Support the motorcycle perpendicular to the ground.

#### NOTE

- Clean the drive chain if it is dirty, and lubricate it if it appears dry.
- Rotate the rear wheel to find the position where the chain is tightest.
- Push up [A] the chain midway between the engine sprocket and rear sprocket.
- The drive chain slack is that the drive chain [B] is pushed out within 0 ~ 5 mm [C] from the hollow [D] of the chain guard [E].
- ★ If the drive chain slack exceeds the standard, adjust it.

#### Chain Slack

Standard: 0 ~ 5 mm

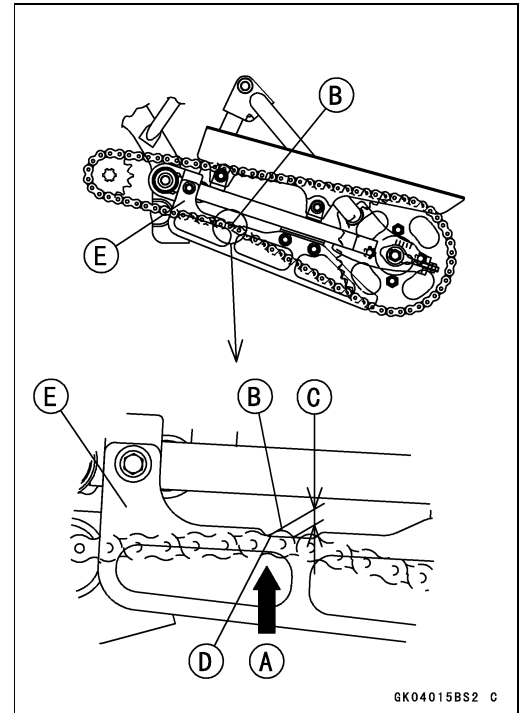



#### Chain Slack Adjustment

- Remove:  
Cotter Pin [A]
- Loosen:  
Rear Torque Link Nut [B]  
Axle Nut [C]  
Brake Adjusting Nut [D]  
Right and Left Chain Adjuster Locknuts [E]

#### CAUTION

**If you don't loosen the torque link nut, it may lead to the brake parts damage when the adjusters are set.**

- If the chain is too tight, back out the left and right chain adjusting nuts [A] evenly, and kick the wheel forward until the chain is too loose.
- Turn both chain adjusting nuts evenly until the drive chain has the correct amount of slack. To keep the chain and wheel properly aligned, the notch [B] on the right chain adjuster [C] should align with the same swingarm mark [D] that the left chain adjuster notch aligns with.

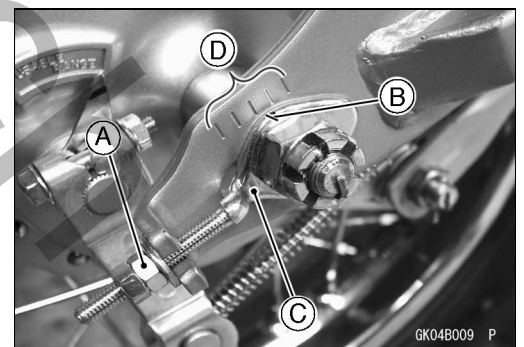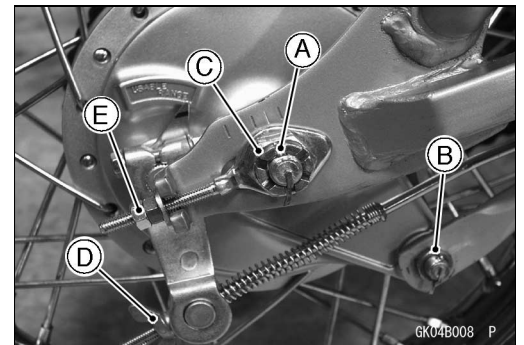

## 2-12 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

- Tighten both chain adjuster locknuts.
- Tighten the axle nut.

**Tightening Torque - Rear Axle Nut: 64 N·m (6.5 kgf·m, 47 ft·lb)**

- Rotate the wheel, measure the chain slack again at the tightest position, and readjust if necessary.
- Insert a new cotter pin for the axle nut and spread its ends.
- Tighten the rear torque link nut securely.

**Tightening Torque - Rear Torque Link Nut: 25 N·m (2.5 kgf·m, 18 ft·lb)**

- Insert a new cotter pin for the rear torque link nut and spread its ends.

#### **⚠ WARNING**

**If the axle and torque link nuts are not securely tightened and the cotter pins are not installed, an unsafe riding condition may result.**

- Check the rear brake play referring to brakes section in this chapter.

#### *Chain Wear Inspection*

- Rotate the rear wheel to inspect the drive chain for damaged rollers, and loose pins and links.
- Also inspect the sprockets for unevenly or excessively worn teeth, and damaged teeth.

#### **NOTE**

- *Sprocket wear is exaggerated for illustration (see Sprocket Wear Inspection in this chapter).*
- ★ If there is any irregularity, replace the drive chain and sprockets.
- If the chain appears dry, lubricate it.
- Remove the chain cover.
- Stretch the chain taut by hanging a 98 N (10 kg, 20 lb) weight [A] on the chain.
- Measure the length of 20 links [B] on the straight part [C] of the chain from pin center of the 1st pin to pin center of the 21st pin. Since the chain may wear unevenly, take measurements at several places.
- ★ If any measurements exceeds the service limit, replace the chain. Also, replace the engine and rear sprockets when the drive chain is replaced.


#### **⚠ WARNING**

**If the drive chain wear exceeds the service limit, replace the chain or an unsafe riding condition may result. A chain that breaks or jumps off the sprockets could snag on the engine sprocket or lock the rear wheel, severely damaging the motorcycle and causing it to go out of control. For safety, use only the standard chain.**

#### **Drive Chain 20-Link Length**

**Standard: 254.0 ~ 254.6 mm**

**Service Limit: 259 mm**

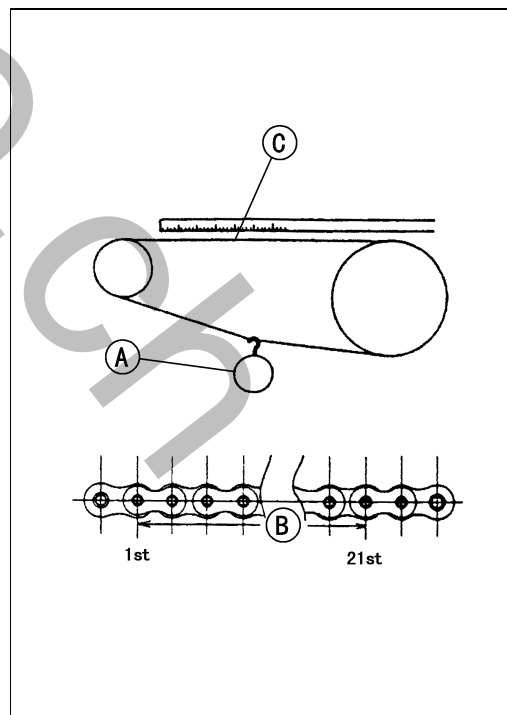

## Periodic Maintenance Procedures

### Chain Lubrication

The chain should be lubricated with a lubricant which will both prevent its exterior from rusting and also absorb shock and reduce friction in the interior of the chain. An effective, good quality lubricant specially formulated for chains is best for regular chain lubrication. If a special lubricant is not available, a heavy oil such as SAE 90 is preferred to a lighter oil because it will stay on the chain longer and provide better lubrication.

- If the chain appears especially dirty, it should be cleaned before lubrication.
- Apply oil to the sides of the rollers and between the side plates of the links so that oil will penetrate to the bushings and pins where most wear takes place.
- Wipe off any excess oil.

### Sprocket Wear Inspection

- Visually inspect the engine and rear sprocket teeth for wear and damage.
- ★ If they are worn as illustrated or damaged, replace the sprocket with new ones and inspect the drive chain wear.

Worn Tooth (Engine Sprocket) [A]

Worn Tooth (Rear Sprocket) [B]



Direction of Rotation [C]

### NOTE


- If a sprocket requires replacement, the chain is probably worn also. When replacing a sprocket, inspect the chain.

### Chain Slipper Wear Inspection

- Visually inspect the chain slipper [A] on the swingarm and replace it if worn or damaged.

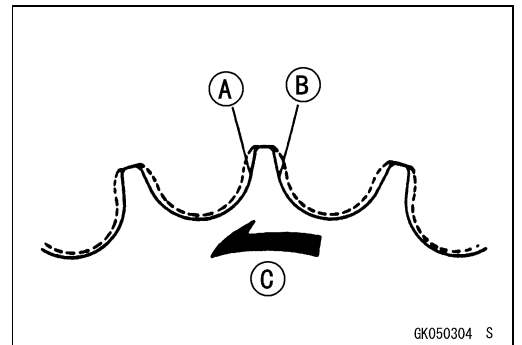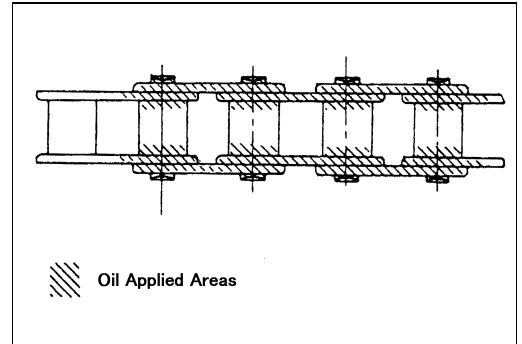

GK050304 S

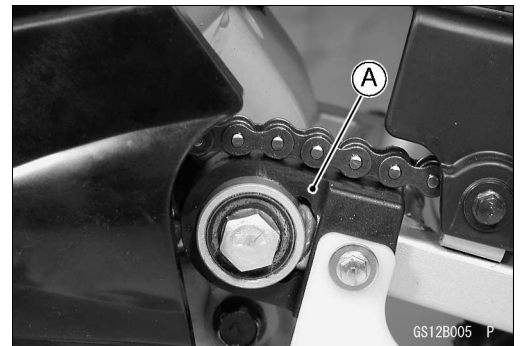

GS12B005 P

## Brakes


### Brake Lever, Brake Pedal Free Play Inspection

- Check the front brake lever free play [A] when the brake is lightly applied.

#### Lever Free Play

Standard: 4 ~ 5 mm

- ★ If the lever has improper play, adjust it.
- Operate the lever a few times to see that it returns to its rest position immediately upon release.

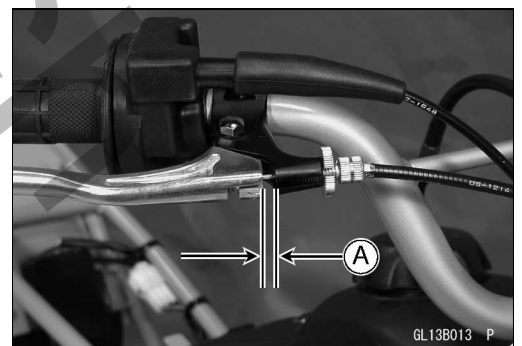

GL13B013 P

## 2-14 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

- Check the brake pedal free play [A] when the pedal is pushed down lightly by hand.

#### Brake Pedal Free Play


Standard: 20 ~ 30 mm



- ★ If the pedal has improper play, adjust it.
- Operate the pedal a few times to see that it returns to its rest position immediately upon release.
- Rotate the rear wheel to check for brake drag.
- Check braking effectiveness.
- ★ If there is any doubt as to the conditions of the brake, check the brake parts for wear or damage.

#### Front Brake Free Play Adjustment

- Loosen the locknut at the front brake lever, screw the adjuster fully in, and tighten the locknut.
- Loosen the nuts [A] at the lower end of the brake cable.
- Turn the nuts at the lower end of the front brake cable so that the brake lever has the correct amount of play, and tighten the nuts.
- If sufficient adjustment can not be made with the adjuster [B], complete the adjustment with the adjuster at the brake lever, and then tighten the locknut.
- Check for brake drag.
- Check braking effectiveness.
- Slide the dust cover back into place.

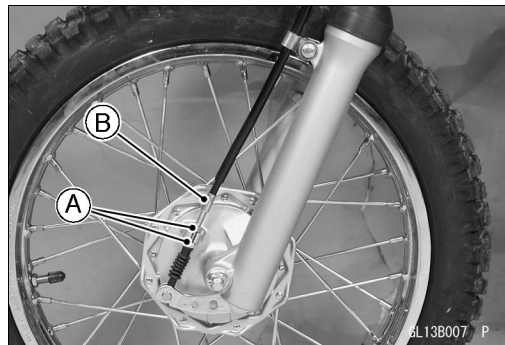


#### NOTE

- For minor corrections, use the adjuster at the front brake lever.
- If the brake lever adjustment cannot be made with the adjuster at the brake lever or the brake panel, move the front brake cam lever to a new position on the brake camshaft.


#### Brake Pedal Free Play Adjustment

- Turn the adjusting nut [A] at the brake cam lever so that the pedal has proper play.

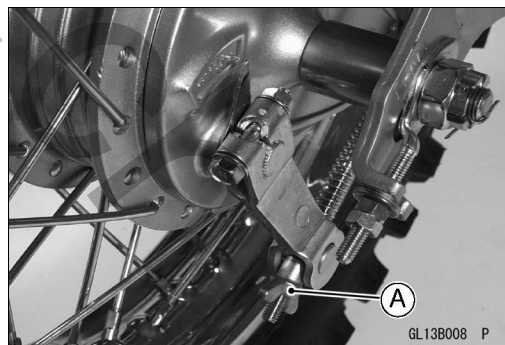

#### Brake Lining Wear Inspection

- Check the brake lining wear indicator [A] (only rear brake) points within the USABLE RANGE [B] when the brake is fully applied.
- ★ If does not, the brake shoes must be immediately replaced and the other brake parts examined.

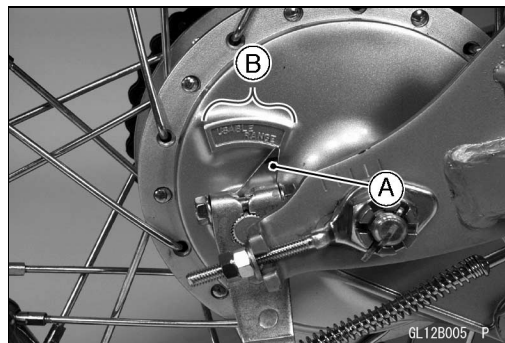

## Periodic Maintenance Procedures



- Check that the brake cam lever [A] comes to an  $80^{\circ} \sim 90^{\circ}$  angle [B] with the brake rod or cable [C] when the brake is fully applied.
- ★ If it does not, adjust the brake cam lever angle.

### Cam Lever Angle

Standard:  $80^{\circ} \sim 90^{\circ}$

### **⚠ WARNING**


Since a cam lever angle greater than  $90^{\circ}$  reduces braking effectiveness, cam lever angle adjustment should not be neglected.

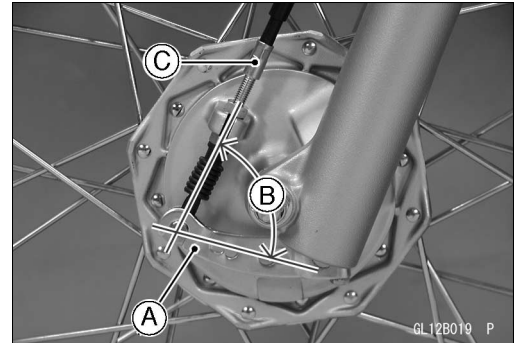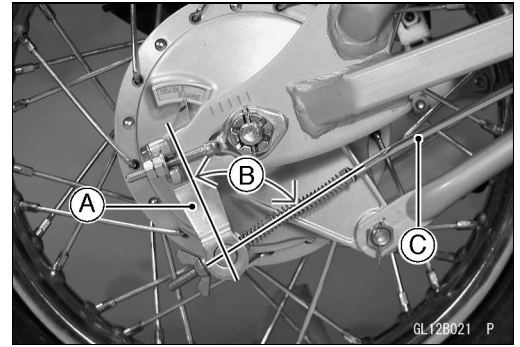

### Cam Lever Angle Adjustment

### **CAUTION**

Do not depress the brake pedal deeply in order to separate the brake rod from the brake cam lever joint, this may extend the brake spring beyond its allowable spring extension. Rotate the rear brake panel clockwise as far as it will go with the brake rod inserted into the brake cam lever joint, then depress the brake pedal lightly, the brake rod will be separated from the brake cam lever joint.

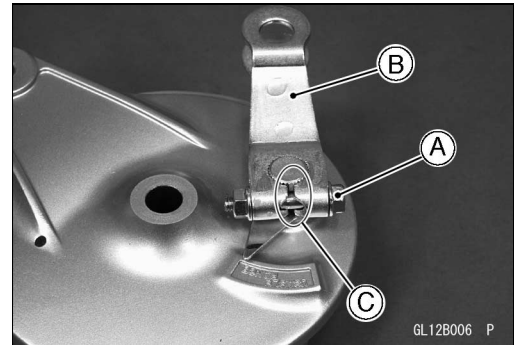

- Remove the wheel (see Wheels/Tires chapter).
- Remove the bolt [A], and take off the cam lever [B].
- Before removing the brake cam lever, mark [C] on the cam lever and camshaft at the same position.
- Mount the cam lever at a new position so that the cam lever has a proper angle when the brake is fully applied.

### Cam Lever Angle

Standard:  $80^{\circ} \sim 90^{\circ}$

Torque - Rear Cam Lever Mounting Bolt: 7 N·m ( 0.7 kgf·m, 60 in·lb)

### **⚠ WARNING**

When remounting the cam lever, be sure that the position of the wear indicator on the serrated shaft is not altered. A change in cam lever angle is caused by wear of internal brake parts. Whenever the cam lever angle is adjusted, also check for drag and proper operation, taking particular note of the brake lining wear indicator position. In case of doubt as to braking effectiveness, disassemble and inspect all internal brake parts. Worn parts shall result in the brake to lock or fail.


- Install the wheel (see Wheels/Tires chapter).
- Adjust the brake free play.

## 2-16 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

#### Brake Panel Lubrication


- Disassemble the rear brake panel (see Brakes chapter).
- Clean all old grease out of the brake parts with a cloth.
- Apply high-temperature grease to the following.
  - Brake Shoe Anchor Pin [A]
  - Spring Ends [B]
  - Cam Surfaces [C]
  - Cam Shaft Groove [D]

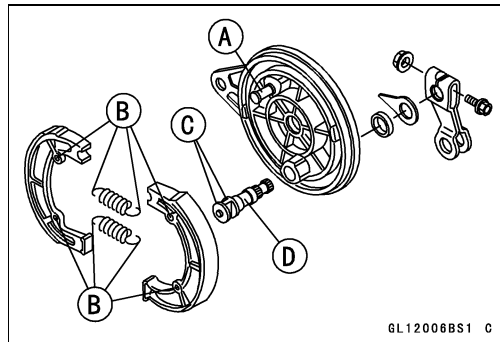


#### Suspension

##### Fork Oil Level Adjustment (Simplify)

- Using the jack under the frame, and stabilize the motorcycle.
- Special Tool - Jack: 57001-1238**
- Remove the number plate.
- Remove the cap from the top of the fork tubes, and push down the top plug [A] and remove the circlip [B] from each fork tube.
- Pull out the top plug and spring.

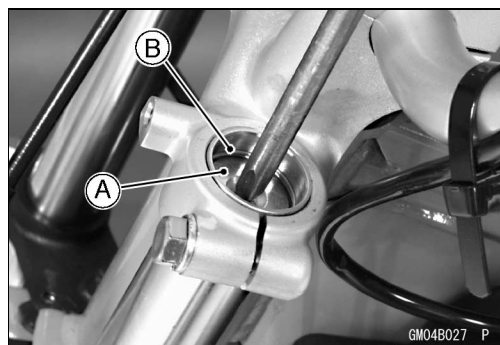

- Place a stand the engine to raise the front wheel the ground.
- Slowly compress the front fork fully by pushing up the outer tubes [A] using a jack or other suitable means under the front wheel.
- Place a stand or other suitable support [B] under the front wheel.

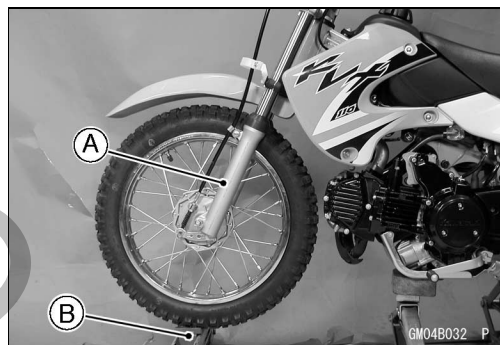

- Use the oil level gauge to measure the fork oil level.
- With the fork fully compressed, put the oil level gauge [A] and the stopper [B], and adjust the distance from the top of the inner tube to oil.


**Special Tool - Fork Oil Level Gauge : 57001-1290**

**Front Fork Oil Level (fully compressed, without spring)**

**Standard: 89 ± 2 mm**


- ★ If no oil is drawn out, there is insufficient oil in the fork tube. Pour in enough oil, then pump out the excess oil.

**Recommended Fork Oil: SS-8 or SAE10W20**

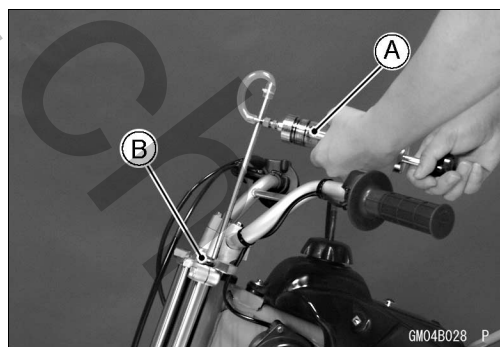


## Periodic Maintenance Procedures

- Measure the both diameters of the fork spring ends and insert the fork spring with the small diameter end [A] facing down.

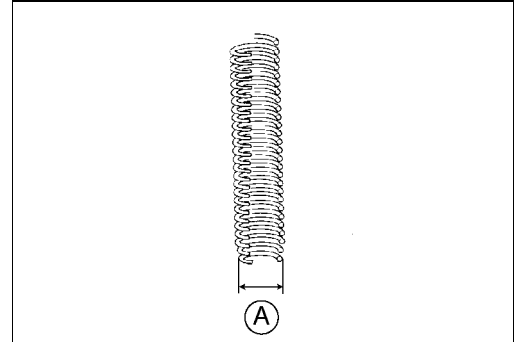

- Check both top plug O-ring [A] for damage and replace them if necessary.

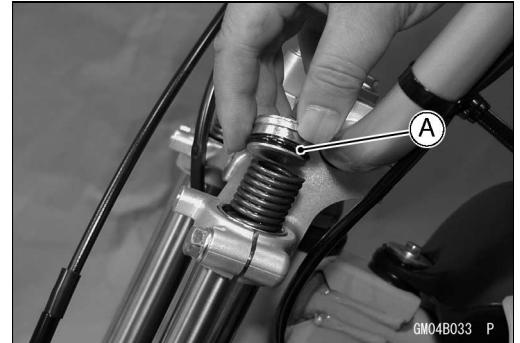

- Push down the top plug and install the circlip.
- Assemble the other fork tube in the same way as described above.
- Install the parts removed.

### Front Fork Inner Tube Inspection

- Visually inspect the front fork for oil leakage, damage on the outer surface of the inner tube [A].
- ★ If necessary, repair any damage.
- Nick or rust damage can sometimes be repaired by using a wet-stone to remove sharp edges or raised areas which cause seal damage.
- ★ If the damage is not repairable, replace the inner tube. Since damage to the inner tube damages the oil seal, replace the oil seal whenever the inner tube is repaired or replaced.
- Temporarily assemble the inner and outer tubes, and pump them back and forth manually to check for smooth operation.



### CAUTION

**If the inner tube is badly bent or creased, replace it. Excessive bending, followed by subsequent straightening, can weaken the inner tube.**

### Rear Shock Absorber Inspection


Since the rear shock absorber is sealed units which cannot be disassembled, only external checks of operation are necessary.

- With the shock absorber removed, compress it and see that the compression stroke is smooth and that there is damping in addition to spring resistance to compression. When the unit is released, the spring should not suddenly snap it to full length. It should extend smoothly with notable damping. When the shock absorber is operated, there should be no oil leakage.

## 2-18 PERIODIC MAINTENANCE


### Periodic Maintenance Procedures

- Check the rubber bushings [A].
- ★ If they are worn, cracked, hardened, or otherwise damaged, replace them.

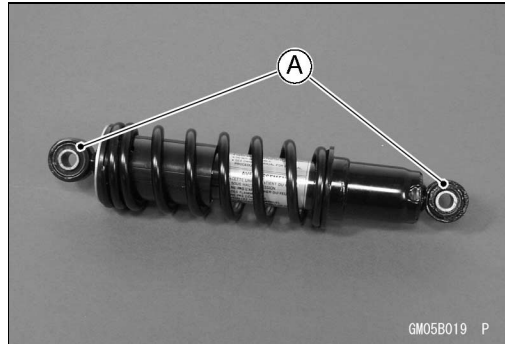

#### Swingarm Pivot Inspection

- Check for wear or damage to the shock absorber and the swing arm mount pivot point while compressing [A] the rear suspension a few times.

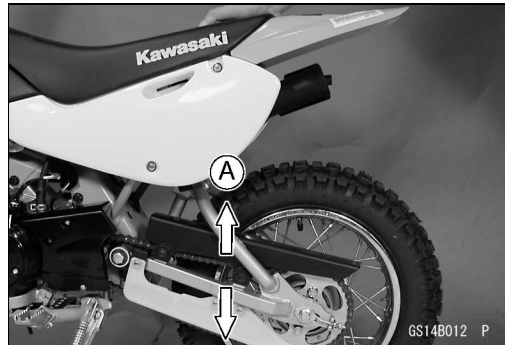

- Using the jack under the frame so that the rear wheel is raised off the ground.


**Special Tool - Jack: 57001-1238**

- Move the swingarm [A] side to side to check for worn, damaged or loose suspension pivot components.
- ★ If any play is detected, check for looseness of swingarm pivot bolt or for damage to the swingarm rubber bushings.



#### Swingarm Rubber Bushing Inspection

- Visually inspect the rubber bushings [A].
- ★ If they are deteriorated or damaged, replace them.

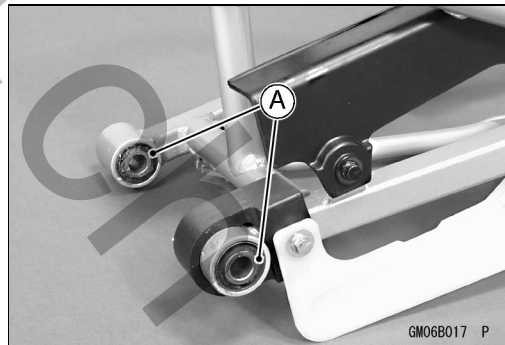

## Steering

#### Steering Inspection

- Using the jack, raise the front wheel off the ground.
- Special Tool - Jack: 57001-1238**
- With the front wheel pointing straight ahead, alternately nudge each end of the handlebar. The front wheel should swing fully left and right from the force of gravity until the fork this the stop.
  - ★ If the steering binds or catches before the stop, check the routing of the cables, hoses, and harnesses.
  - ★ If the steering feels tight, adjust or lubricate the steering.
  - Feel for steering looseness by pushing and pulling [A] the forks.
  - ★ If you feel looseness, adjust the steering.







## Periodic Maintenance Procedures

### Steering Adjustment

- Remove the number plate.
- Using the jack, raise the front wheel off the ground.

**Special Tool - jack: 57001-1238**

- Remove the handlebar.
- Loosen the front fork lower clamp bolts [A] and steering stem head nut [B].

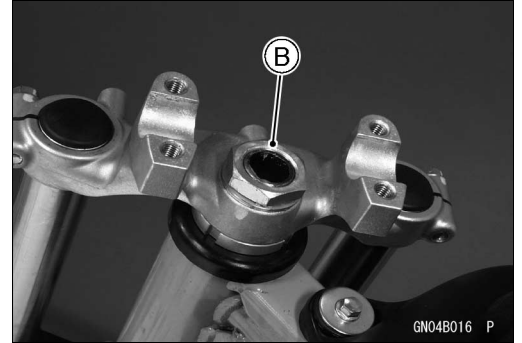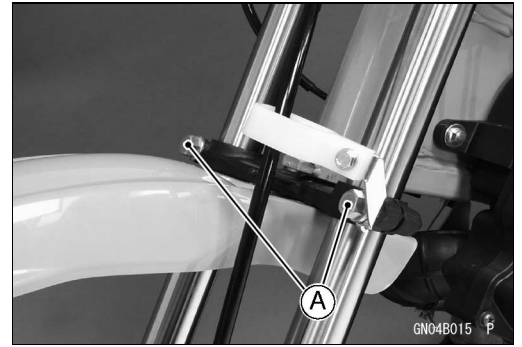


- Turn the steering stem locknut [A] with the steering stem nut wrench [B] to obtain the proper adjustment.
- ★ If the steering is too tight, loosen the stem locknut a fraction of a turn; if the steering is too loose, tighten the locknut a fraction of a turn.

**Special Tool - Steering Stem Nut Wrench: 57001-1100**

### NOTE


- Turn the locknut 1/8 turn at a time maximum.

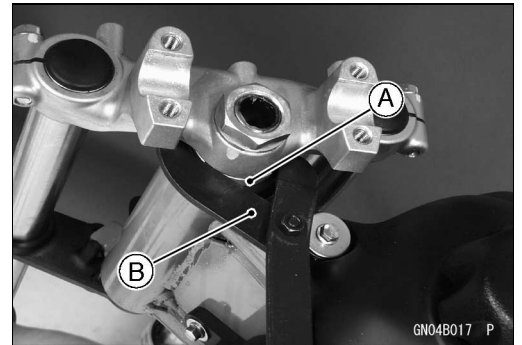

- Tighten the following:

**Torque - Steering Stem Head Nut: 44 N·m (4.5 kgf·m, 32 ft·lb)**  
**Front Fork Lower Clamp Bolts: 29 N·m (3.0 kgf·m, 22 ft·lb)**

- Mount the handlebar clamps [B] so that the arrows [C] on the clamp point at the front [A].
- Align a gap [E] at the rear with the punch mark [D] on the handlebar.

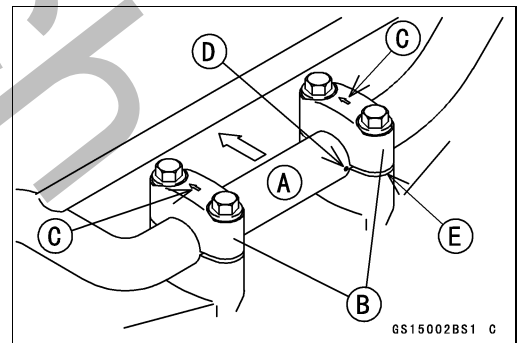


## 2-20 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

- Torque the handlebar clamp bolts.


**Torque - Handlebar Clamp Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**

- Tighten the clamp bolts, front first and then the rear. If the handlebar clamp is correctly installed, there will be no gap [A] at the front and a gap [B] at the rear after tightening.

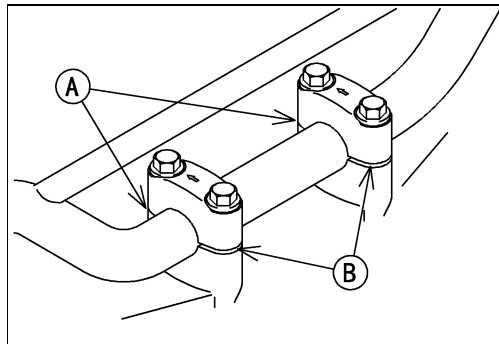

#### Steering Stem Bearing Lubrication


- Remove the steering stem (see Steering chapter).
- Wipe the old grease off the races and balls, washing them in a high-flash point solvent if necessary.
- ★ Replace the bearing part if they show wear or damage.
- ★ Apply grease liberally to the upper and lower races, and stick the bearing balls in place with grease. There are 23 steel balls [A] installed in the upper or lower outer races.
- ★ Install the steering stem.
- ★ Adjust the steering.

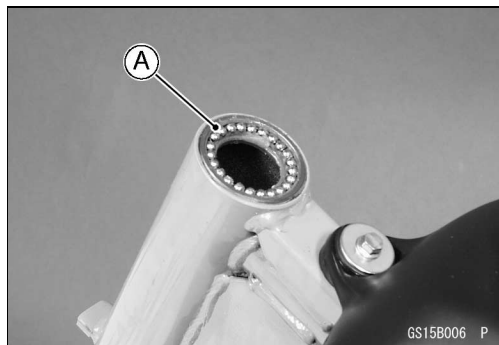

#### Side Stand

##### Side Stand Inspection

- See if the side stand [A] moves smoothly and retracts fully [B].
- ★ If not, clean and grease the pivot [C].
- Check the side stand spring [D] for damage.
- ★ If necessary, replace the spring.

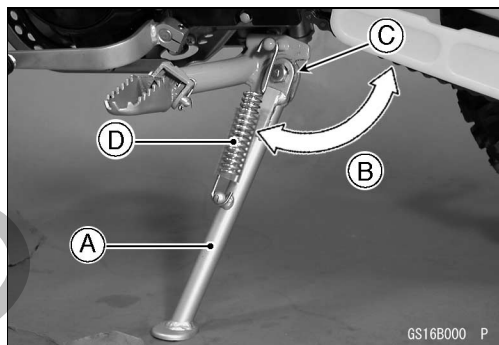

#### Electrical System


##### Spark Plug Gap

- Remove the spark plug (see Electrical System chapter).
- Measure the gap with a wire-type thickness gauge.
- ★ If the gap is incorrect, carefully bend the side electrode with a suitable tool to obtain the correct gap.

Insulator [A]  
Center Electrode [B]  
Plug Gap [C]  
Side Electrode [D]

##### Spark Plug Gap

0.6 ~ 0.7 mm

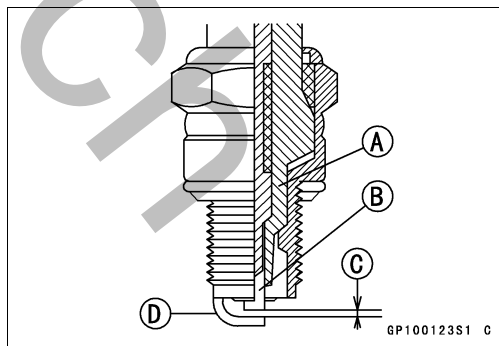

##### Spark Plug Cleaning and Inspection

- Clean the spark plug, preferably in a sandblasting device, and then clean off any abrasive particles. The plug may also be cleaned using a high flash-point solvent and a wire brush or other suitable tool.
- ★ If the spark plug electrodes are corroded or damaged, or if the insulator is cracked, replace the plug. Use the standard spark plug.

## Periodic Maintenance Procedures

### General Lubrication

#### Lubrication

- Before lubricating each part, clean off any rusty spots with rust remover and wipe off any grease, oil, dirt, or grime.
- Lubricate the points listed below with indicated lubricant.

#### NOTE


- *Whenever the vehicle has been operated under wet or rainy conditions, or especially after using a high-pressure water spray, perform the general lubrication.*

#### Pivots: Lubricate with Motor Oil.

Brake Lever  
Kick Pedal  
Brake Pedal  
Brake Rod Joint  
Drive Chain


#### Points: Lubricate with Grease [A].

Throttle Cable Upper End  
Choke Cable Lower End  
Side Stand Pivot  
Steering Stem Bearing

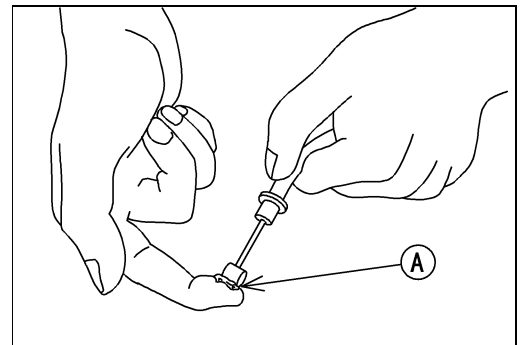

#### Cables: Lubricate with Rust Inhibitor.


Throttle Cable [A]  
Choke Cable  
Front Brake Cable

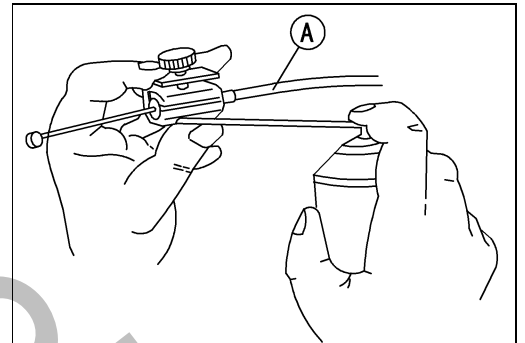

## 2-22 PERIODIC MAINTENANCE

### Periodic Maintenance Procedures

- With the cable disconnected at the both ends, the cable should move freely [A] within the cable housing.
- ★ If cable movement is not free after lubricating, if the cable is frayed [B], or if the cable housing is kinked [C], replace the cable.

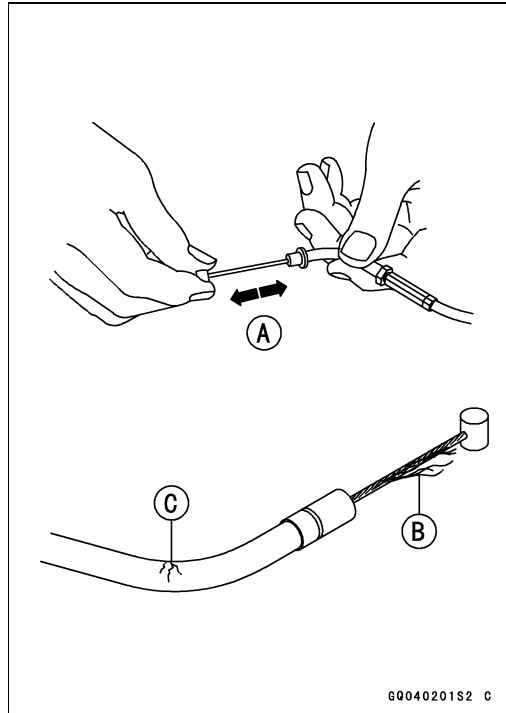

## Periodic Maintenance Procedures

### Nut, Bolt and Fastener Tightness

#### *Tightness Inspection*

- Check the tightness of bolts and nuts listed here. Also, check to see that each cotter pin is in place and in good condition.

#### NOTE

- *For the engine fasteners, check the tightness of them when the engine is cold (at room temperature).*
- ★ If there are loose fasteners, retorque them to the specified torque following the specified tightening sequence. Refer to the appropriate chapter for torque specifications. If torque specifications are not in the appropriate chapter, see the Standard Torque Table. For each fastener, first loosen it by 1/2 turn, then tighten it.
- ★ If cotter pins are damaged, replace them with new ones.

#### **Nut, Bolt and Fastener to be checked**

##### Wheels:

- Spoke Nipples
- Front Axle Nut Cotter Pin
- Front Axle Nut
- Rear Axle Nut Cotter Pin
- Rear Axle Nut

##### Final Drive:

- Chain Adjuster Locknuts
- Rear Sprocket Nuts

##### Brakes:

- Front Brake Adjusting Nut
- Rear Brake Adjusting Nut
- Brake Lever Pivot Nut
- Brake Pedal Bolt
- Brake Rod Joint Cotter Pin
- Torque Link Nut
- Torque Link Nut Cotter Pin

##### Suspension:

- Front Fork Clamp Bolts
- Swingarm Pivot Shaft Nut
- Rear Shock Absorber Mounting Bolts and Nuts

##### Steering:

- Stem Head Nut
- Handlebar Clamp Bolts

##### Engine:

- Engine Mounting Bolts, Nuts
- Cylinder Head Bolts and Nuts
- Shift Pedal Bolts
- Exhaust Pipe Holder Nuts
- Muffler Bolt and Nut

##### Others:

- Side Stand Bolt
- Footpeg Mounting Bolts

Pittbike.ch


# Fuel System

## Table of Contents

Exploded View.....	3-2
Specifications.....	3-6
Throttle Grip and Cable.....	3-7
Free Play Inspection.....	3-7
Free Play Adjustment.....	3-7
Throttle Cable and Choke Cable Installation.....	3-7
Cable Lubrication and Inspection.....	3-7
Carburetor.....	3-8
Idle Speed Inspection.....	3-8
Idle Speed Adjustment.....	3-8
Fuel Level Inspection.....	3-8
Fuel Level Adjustment.....	3-9
Float Removal.....	3-9
Fuel System Cleanliness Inspection.....	3-9
Carburetor Removal.....	3-10
Carburetor Installation.....	3-10
Carburetor Cleaning.....	3-11
Carburetor Disassembly.....	3-11
Carburetor Assembly.....	3-12
Carburetor Inspection.....	3-13
Air Cleaner.....	3-15
Air Cleaner Housing Removal.....	3-15
Air Cleaner Housing Installation.....	3-15
Element Removal.....	3-15
Element Installation.....	3-16
Element Cleaning and Inspection.....	3-16
Oil Draining.....	3-16
Fuel Tank.....	3-17
Fuel Tank Removal.....	3-17
Fuel Tank Installation.....	3-17
Fuel Tap Removal.....	3-17
Fuel Tap Installation.....	3-18
Fuel Tap Inspection.....	3-18
Fuel Tank and Tap Cleaning.....	3-18

3-2 FUEL SYSTEM

Exploded View

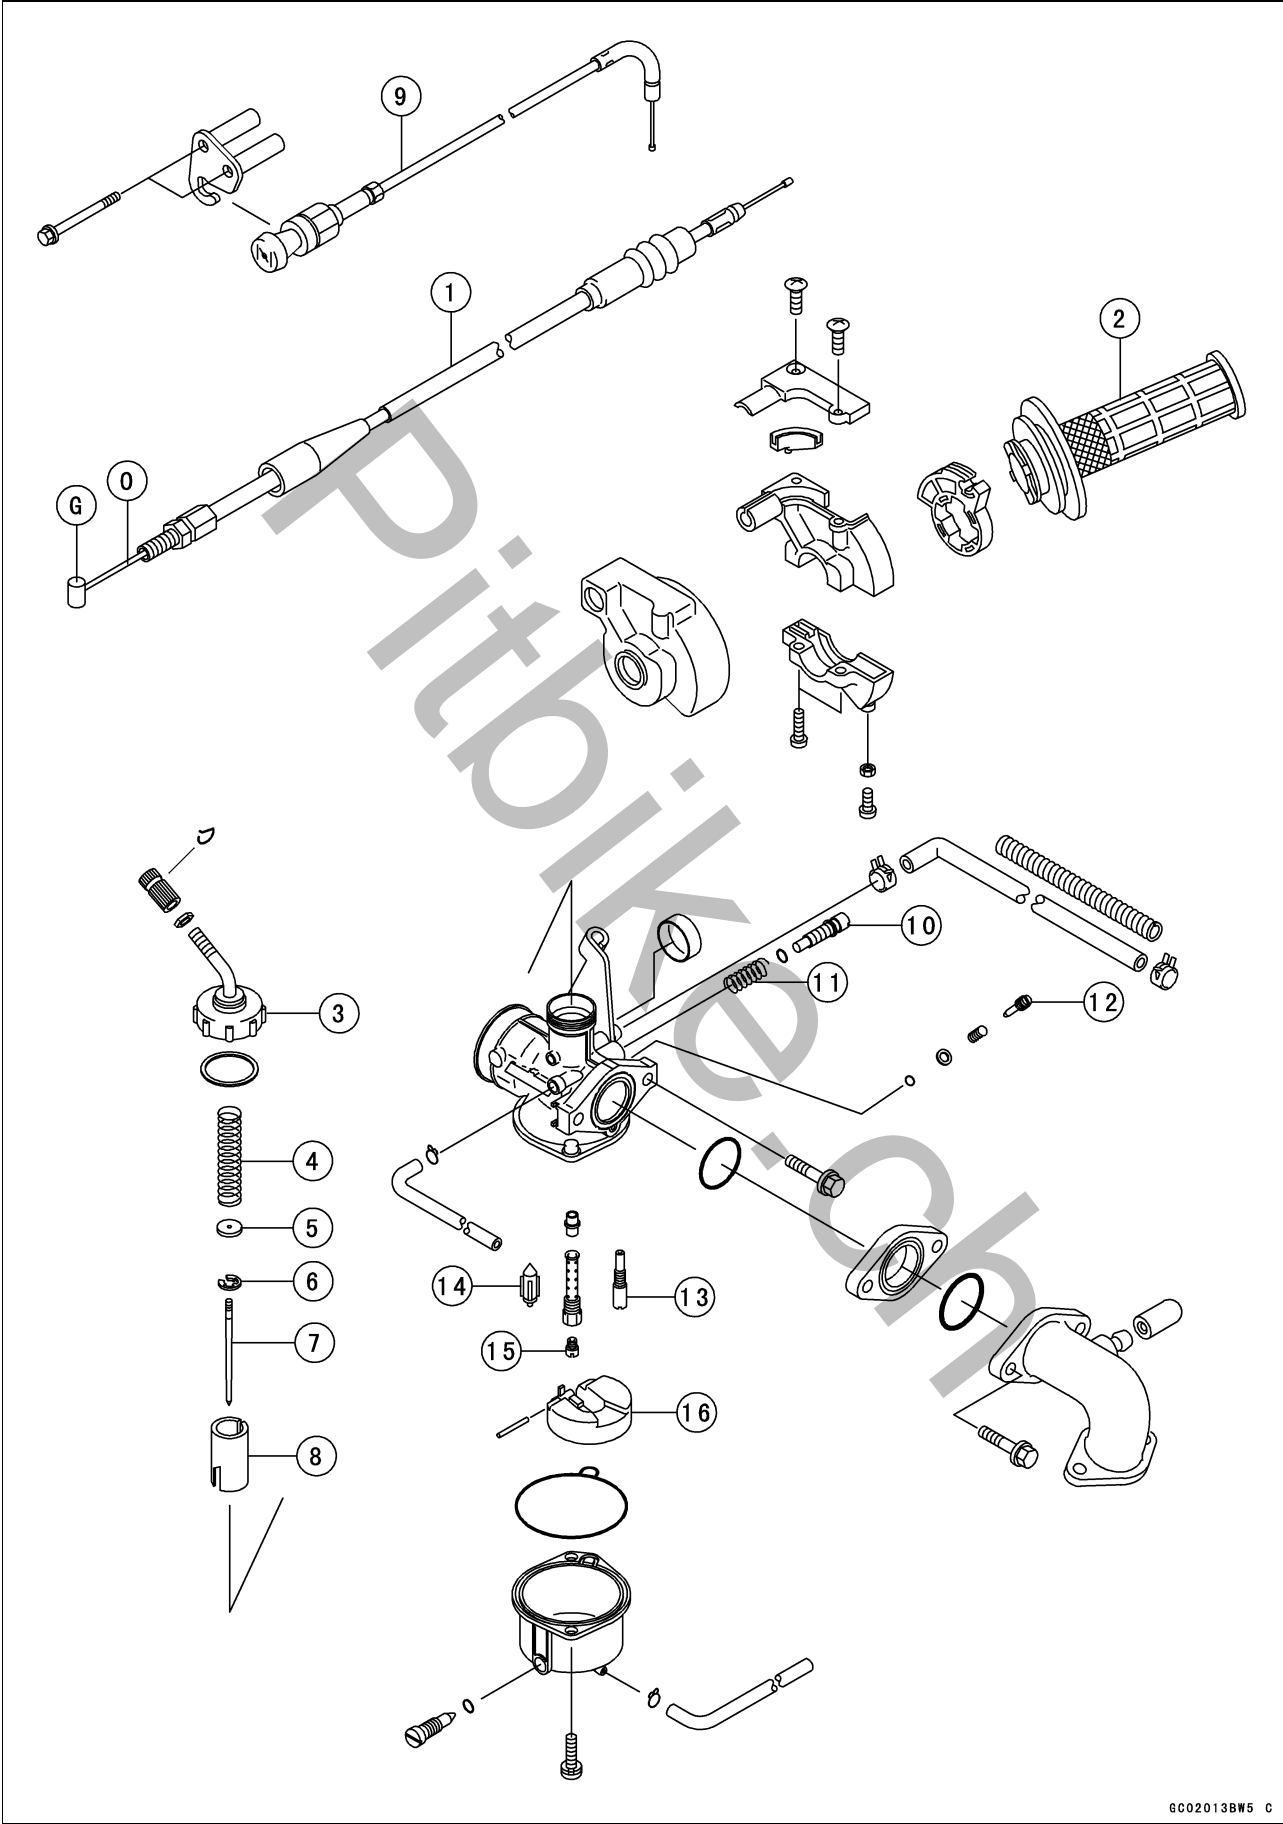




**Exploded View**

---

1. Throttle Cable
  2. Throttle Grip
  3. Carburetor Cap
  4. Spring
  5. Retainer
  6. Circlip
  7. Jet Needle
  8. Throttle Valve
  9. Choke Cable
  10. Idle Adjusting Screw
  11. Spring
  12. Air Screw
  13. Pilot Jet
  14. Float Valve Needle
  15. Main Jet
  16. Float
- O: Apply oil.  
G: Apply grease.

### Exploded View



### Exploded View

---

1. Fuel Tank Cap
  2. Fuel Tank
  3. Fuel Tap
  4. Air Cleaner Housing
  5. Element
- G: Apply grease.  
O: High-quality foam-air filter oil  
AD: Apply adhesive.

Pitbike.com

## 3-6 FUEL SYSTEM

### Specifications

Item	Standard	Service Limit
<b>Throttle Grip and Cable:</b> Throttle grip free play	2 ~ 3 mm	- - -
<b>Carburetor:</b> Make/Type Main jet: Jet needle Throttle valve cutaway Pilot jet Air screw Idle speed Service fuel level  Float height	KEIHIN PB18 #80 NCFA 3.0 #38/38 1 1/4 turns out 1250 ~ 1350 r/min (rpm) 3.0 ± 1 mm (below the bottom edge of carburetor body) 10.7 ± 2 mm	- -
<b>Air Cleaner:</b> Air cleaner element oil	High-quality foam-air filter oil	- - -

Special Tools - Fuel Level Gauge: 57001-1017

---

## Throttle Grip and Cable

---

### *Free Play Inspection*

- Refer to Free Play Inspection in the Periodic Maintenance Chapter.

### *Free Play Adjustment*

- Refer to Free Play Adjustment in the Periodic Maintenance Chapter.

### *Throttle Cable and Choke Cable Installation*

- Install the throttle cable and choke cable in accordance with the Cable, Harness, Hose Routing section in the General Information chapter.
- After the installation, adjust each cable properly.

### **⚠ WARNING**

**Operation with an incorrectly routed or improperly adjusted cable result in an unsafe riding condition.**

### *Cable Lubrication and Inspection*

- Whenever the choke cable or the throttle cable are removed or in accordance with the Periodic Maintenance Chart, lubricate the these cables. Refer to General Lubrication in the Periodic Maintenance Chapter.
- Apply a thin coating of grease to the cable upper or lower ends.
- Use a commercially available pressure cable lubricator to lubricate these cables.
- With the cable disconnected at both ends, the cable should move freely in the cable housing.

## 3-8 FUEL SYSTEM

### Carburetor

#### Idle Speed Inspection

- Refer to Idle Speed Inspection in the Periodic Maintenance Chapter.

#### Idle Speed Adjustment

- Refer to Idle Speed Adjustment in the Periodic Maintenance Chapter.

#### Fuel Level Inspection

#### **⚠ WARNING**

**Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well-ventilated and from any source of flame or sparks; this includes any appliance with a pilot light.**


- Remove the carburetor, and hold them in true vertical position on a stand.
- Put the fuel tank on a bench, and connect the fuel tap to the carburetor using a suitable hose.
- Prepare a rubber hose [A].
- Connect the fuel gauge [B] to the carburetor float bowl with the rubber hose.

#### **Special Tool - Fuel Level Gauge: 57001-1017**

- Hold the gauge vertically against the side of the carburetor body so that the "middle" line [C] is several millimeters higher than the bottom edge of the carburetor body.
- Turn the fuel tap to the ON position to feed fuel to the carburetor, then turn out the carburetor drain plug a few turns.
- Wait until the fuel level [D] in the gauge settles.
- Keeping the gauge vertical, slowly lower the gauge until the "middle" line is even with the bottom edge [E] of the carburetor body.

#### **NOTE**

- Do not lower the "middle" line below the bottom edge of the carburetor body. If the gauge is lowered and then raised again, the fuel level measure shows somewhat higher than the actual fuel level. If the gauge is lowered too far, dump the fuel out of it into suitable container and start the procedure over again.

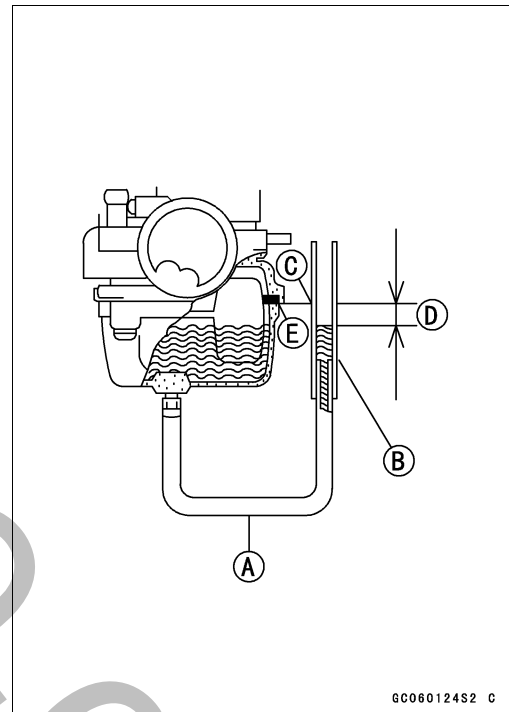

- Read the fuel level in the gauge and compare it to the specification.

#### **Fuel Level**

**$3.0 \pm 1$  mm below the bottom edge of carburetor body**

- Screw in the carburetor drain plug.
- Turn the fuel tap to the OFF position and remove the fuel level gauge.
- ★ If the fuel level is incorrect, the float level can not be adjusted on this model. Inspect the float, float valve needle, and the contacting surface between the carburetor body and its float valve needle. If they are damaged, replace them.
- Install the carburetor.

## Carburetor

### Fuel Level Adjustment

#### **⚠ WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well-ventilated and from any source of flame or sparks; this includes any appliance with a pilot light.

- Remove the carburetor, drain the fuel into a suitable container.
- Remove the float bowl [A] taking out the screws [B] with lockwashers.
- Check the float level.
  - [A] Float
  - [B] Float Valve Needle Rod (contacted but unloaded).
  - [C] Float bowl mating surface
  - [D] Float height

#### Float Height

10.7 ± 2 mm




- ★ If the float height is incorrect, the float height can not be adjusted on this model. Inspect the float, float valve needle,

#### **NOTE**

- Float height is the distance from the float bowl mating surface of the carburetor body (with the gasket removed) to the top of the float.
- Do not push the needle rod in during the float height measurement. Measure the height with the carburetor upside down.

#### Float Removal

- Remove the carburetor and disassembly the float bowl.
- Drive out the pivot pin [A] and remove the float [B] and float valve as a set.

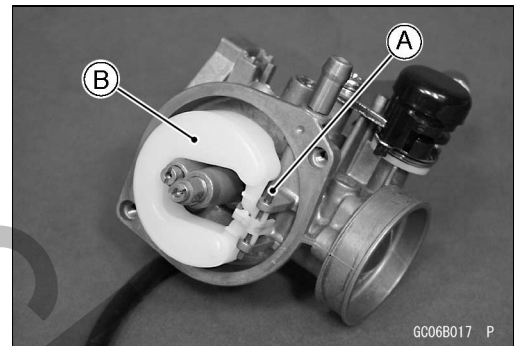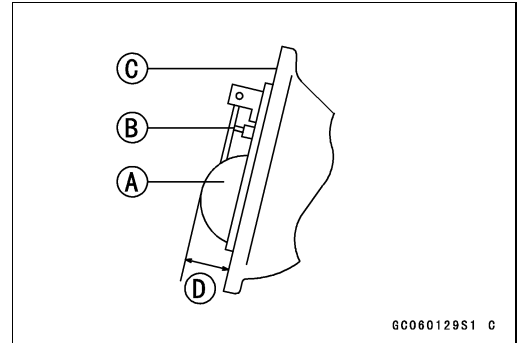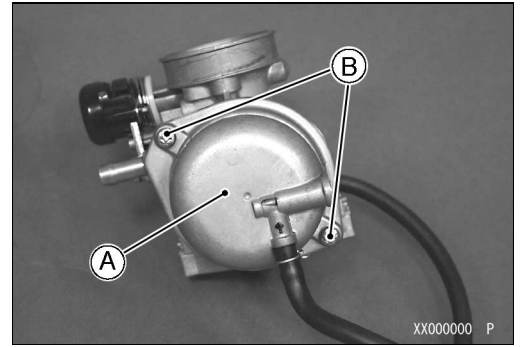

### Fuel System Cleanliness Inspection

#### **⚠ WARNING**


Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

Make sure the engine is cold before working. Wipe any fuel off the engine before starting it.

## 3-10 FUEL SYSTEM

### Carburetor

- Using a screwdriver, turn out the drain plug [A] a few turns and drain the carburetor to a suitable container and check to see if water or dirt come out.
- ★ If any water or dirt appears during the above inspection, clean the fuel system.
- Tighten the drain plug securely.

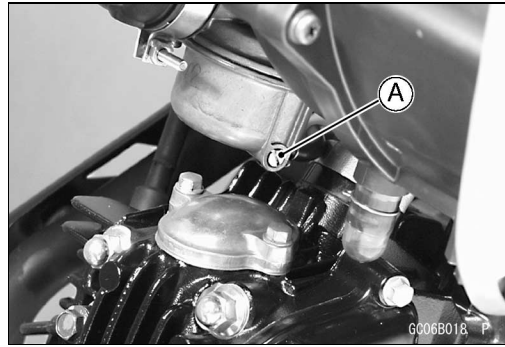


#### Carburetor Removal

##### **⚠ WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Turn the fuel tap to the OFF position.
  - Remove:
    - Right Shroud [A]
    - Tubes (carburetor side) [B]
    - Choke Cable Lower End [C]
    - Intake Pipe Bolts [D]
  - Loosen the clamp screw [E].
  - Remove the carburetor.
  - Stuff pieces of lint-free, clean cloths into the carburetor holder and the air cleaner intake duct to keep the dirt out of the engine and air cleaner.
- 
- Unscrew the cap [A] and pull out the throttle cable lower end with the throttle valve, spring and jet needle as a set.

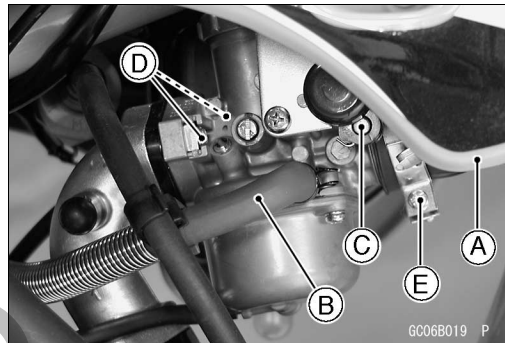


##### **⚠ WARNING**

If dirt or dust allowed to pass through into the carburetor, the throttle may become stuck, possibly causing an accident.

##### **CAUTION**

If dirt gets through into the engine, excessive engine wear and possibly engine damage will occur.  
If the throttle valve is not removed from the cable, wrap clean cloths around the throttle valve to avoid damaging to it.

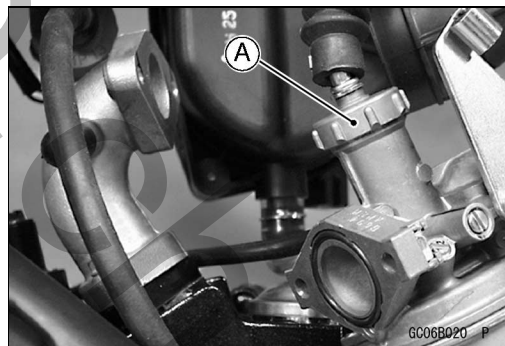

#### Carburetor Installation

- Installation is the reverse of removal.
- After installing the carburetor, perform the following.
- Check fuel leakage from the carburetor.

##### **⚠ WARNING**

Fuel spilled from the carburetor is hazardous.

- Adjust the following.
  - Idle Speed
  - Throttle Grip Free Play



## Carburetor

### Carburetor Cleaning

#### ⚠ WARNING

Clean the carburetor in a well-ventilated area, and take care that there is no spark or flame anywhere near the working area; this includes any appliance with a pilot light. Because of the danger of high flammable liquids, do not use gasoline or low flash-point solvents to clean the carburetor.


#### CAUTION

Do not use compressed air on an assembled carburetor, or the float may be deformed by the pressure.  
Remove as many rubber or plastic parts from the carburetor as possible before cleaning the carburetor with a cleaning solution.  
This will prevent damage to or deterioration of the parts.  
Do not use a strong carburetor cleaning solution which could attack the plastic parts; instead, use a mild high flash-point cleaning solution safe for plastic parts.  
Do not use wire or any other hard instrument to clean carburetor parts, especially jets, as they may be damaged.


- Disassemble the carburetor.
- Immerse all the metal parts in a carburetor cleaning solution.
- Rinse the parts in water.
- When the parts are clean, dry them with compressed air.
- Blow through the air and fuel passages with compressed air.
- Assemble the carburetor.

### Carburetor Disassembly

- Remove the carburetor.
- Pull the whole of spring [A] to the cap [B] side and hold it.
- Take out the cable lower end [C] from the throttle valve assembly [D].

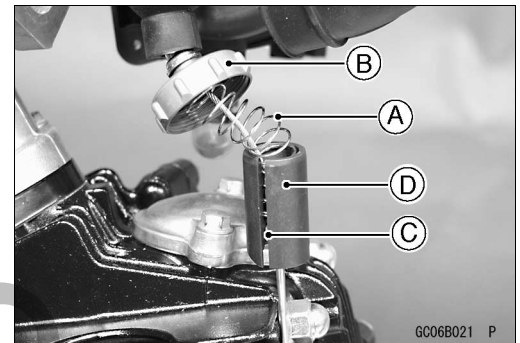


- Pull out the retainer [A], and jet needle with circlip [B].

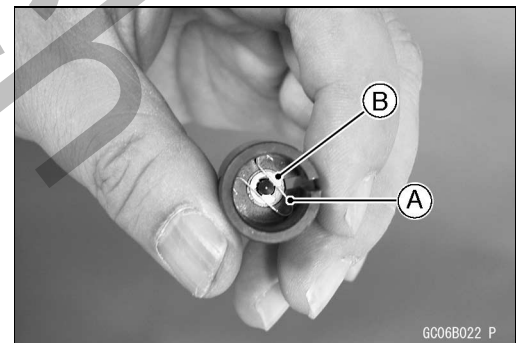


## 3-12 FUEL SYSTEM

### Carburetor

- Remove the following parts from the carburetor body.
  - Idle Adjusting Screw [A]
  - O-ring [B]
  - Spring [C]
  - Air Screw [D]
  - Washer [E]
  - Spring [F]
  - O-ring [G]
  - O-ring [H]

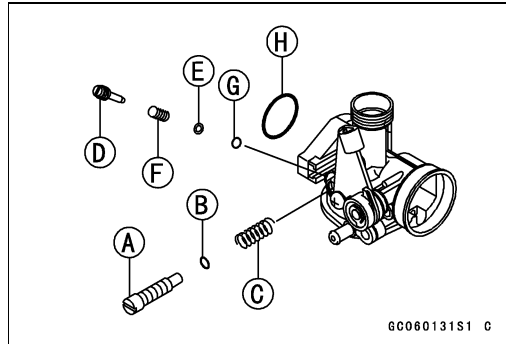


- Pilot Jet [A]
- Needle Jet [B]
- Needle Jet Holder [C]
- Main Jet [D]
- Float Valve Needle [E]
- Float [F]
- Pin [G]
- O-ring [H]
- Float Bowl [I]

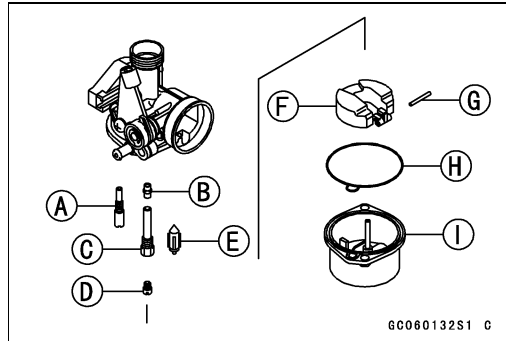

#### Carburetor Assembly


- Clean the disassembly parts before assembling.
- Clean the fuel and air passages with a high-flash-point solvent and compressed air.
- Install the needle jet [A] into the carburetor so that the smaller diameter end [B] of the jet goes in first.

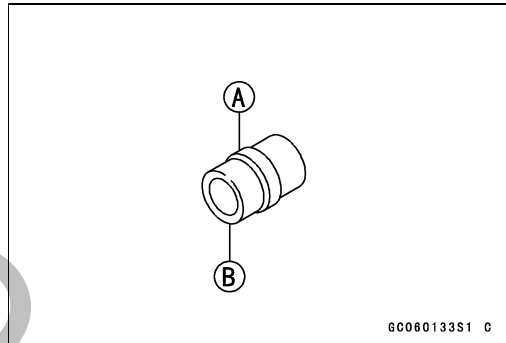


- Carefully screw in the needle jet holder. It will seat against the needle jet, pushing the end of the jet into the carburetor bore.

#### CAUTION

Do not force the needle jet holder [A] and main jet [B] or overtighten them. The needle jet or the carburetor body could be damaged requiring replacement.

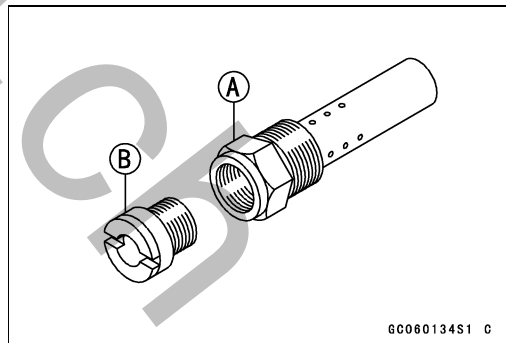

- Turn in the air screw [A] fully but not tightly, and then back it out 1 1/4 turns.
- After installing the carburetor, do the following.
  - Check the fuel leakage.
  - Adjust the following items if necessary.
    - Throttle grip free play.
    - Idle speed.

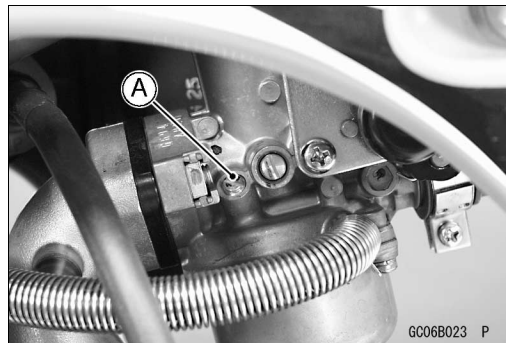


## Carburetor

### Carburetor Inspection


#### ⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Remove the carburetor.
- Before disassembling the carburetor, check the fuel level.
- ★ If the fuel level is incorrect, inspect the rest of the carburetor before correcting it.
- Check that the throttle valve [A] moves smoothly and return back with the spring tension. The surface of the valve must not be excessively worn.
- ★ If the throttle valve does not move smoothly, or if it is very loose in carburetor body. Replace the carburetor.
- ★ If the spring tension is weak, replace it.

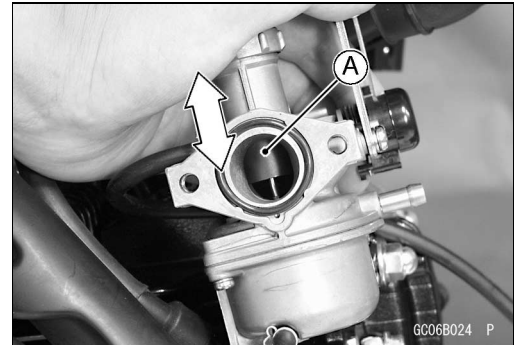


- Turn the starter cable bracket to check that the starter butterfly valve [A] move smoothly and return with spring tension.
- ★ If the starter butterfly valve do not move smoothly, replace the carburetor.

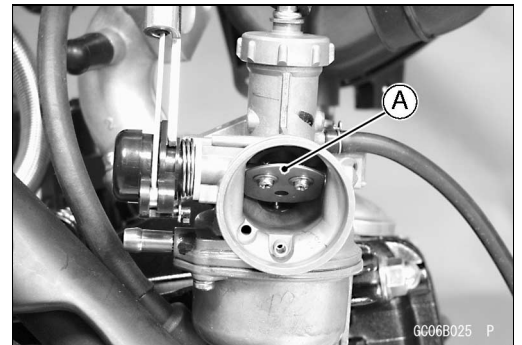


#### NOTE

○ Do not remove the air screw from the carburetor or change the air screw setting, or you will lose the best setting.

- Disassemble the carburetor.
- Clean the carburetor.
- Check that the O-rings on the float bowl, drain plug and the intake pipe are in good condition.
- ★ If any of the O-rings are not in good condition, replace them.
- Remove the float valve needle.
- Check the float valve needle [A].
- ★ If the needle is worn [B] as shown in the figure, replace the valve needle.
- Push the rod [C] in the valve needle, and then release it.
- ★ If the rod does not spring out, replace the valve needle.

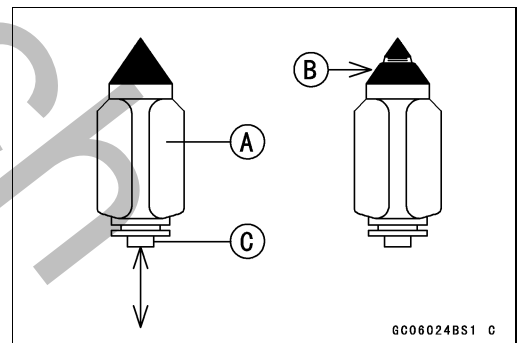


- Check the main jet [A], needle jet holder [B] and pilot jet [C] for any damage.
- ★ If they are damaged, replace them with new ones.

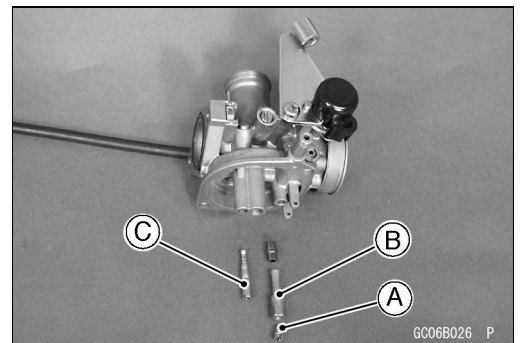


## 3-14 FUEL SYSTEM

### Carburetor


- Remove the throttle valve [A] and jet needle.
  - Inspect the outside of the throttle valve for scratches and abnormal wear.
  - ★ If the valve is badly scratched or worn, replace it.
  - Inspect the inside of the carburetor body for these same faults.
  - ★ If it is badly scratched or worn, replace the entire carburetor.
- [B] Sliding Surface

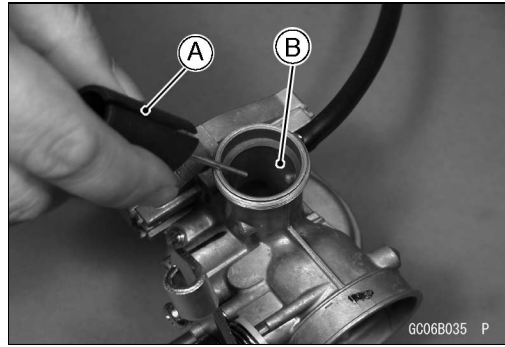

- Check the jet needle [A] and needle jet holder [B] for wear.
- ★ A worn needle jet holder or jet needle should be replaced.

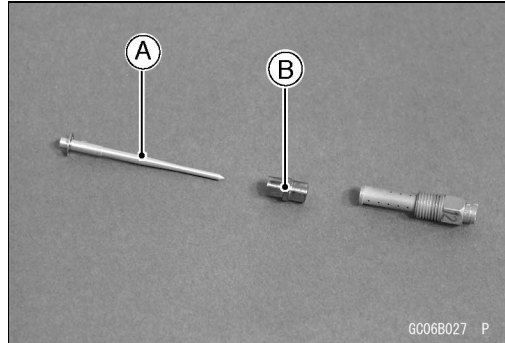

- Check the tapered portion [A] of the pilot screw [B] for wear or damage.
- ★ If the pilot screw is worn or damaged on the tapered portion it will prevent the engine from idling smoothly. Replace it.

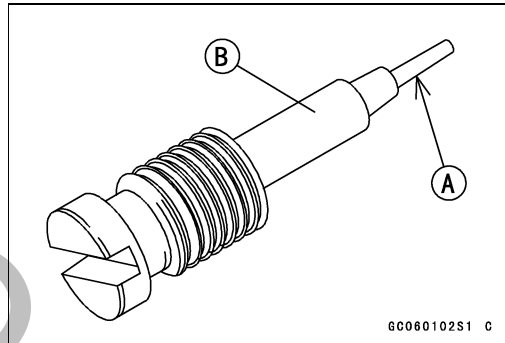

- Disassemble the carburetor, and clean the fuel, air passages with a high-flash-point solvent and compressed air.
- Stuff the lint-free, clean cloths into the air cleaner housing to keep dirt or other foreign material from entering.


#### **⚠ WARNING**

If dirt or dust is allowed to pass through into the carburetor, the throttle valve may become stuck, possibly causing an accident.


## Air Cleaner

### Air Cleaner Housing Removal

- Remove the left shroud.
- Loosen the air cleaner duct clamp [A].

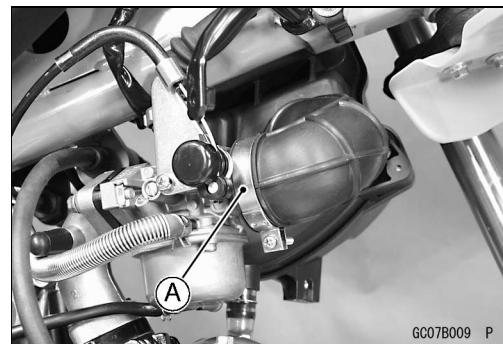


- Unscrew the air cleaner mounting bolts [A] and remove the air cleaner housing [B].

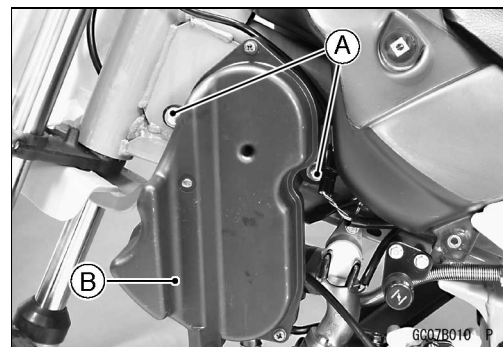


### Air Cleaner Housing Installation

- Installation is the reverse of the removal.
- Install the intake portion [A] of air cleaner housing into the frame hole [B].

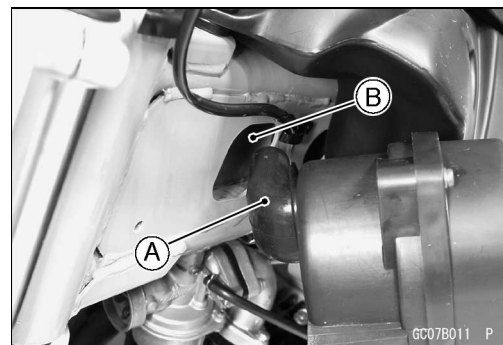


### Element Removal

- Remove the left shroud.
- Unscrew the mounting screws [A] and remove the air cleaner housing cover [B].

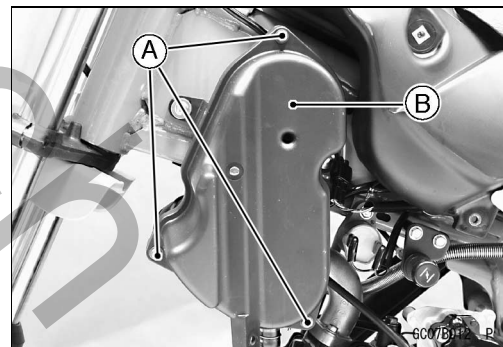

- Pull out the element [A].

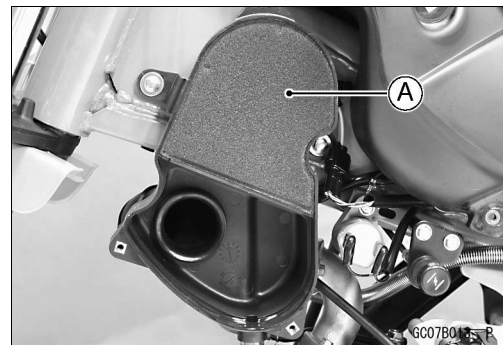

## 3-16 FUEL SYSTEM

### Air Cleaner

- Stuff a clean, lint-free towel into the carburetor so no dirt is allowed to enter the carburetor.
- Wipe out the inside of the air cleaner housing [A] and the wire screen [B] with a clean damp towel.

#### CAUTION

**Check inside of the inlet tract and carburetor for dirt. If dirt is present, clean the intake tract and carburetor thoroughly. You may also need to replace the element and seal the housing and inlet tract.**

#### Element Installation




- When installing the element, coat the lip of the element with a thick layer of all purpose grease [A] to assure a complete seal against the air cleaner element base. Also, coat the base and wire screen where the lip of the element fits.

#### Element Cleaning and Inspection

- Refer to Element Cleaning and Inspection in the Periodic Maintenance Chapter.

#### Oil Draining

- Inspect the transparent plug [A] under the air cleaner housing [B] to see if any oil has run down from the air cleaner housing.
- ★ If there is any oil in the plug, remove the plug and drain the oil.

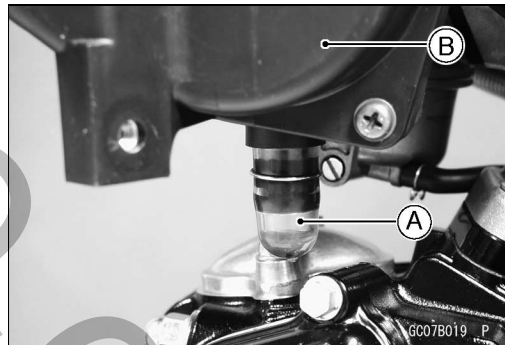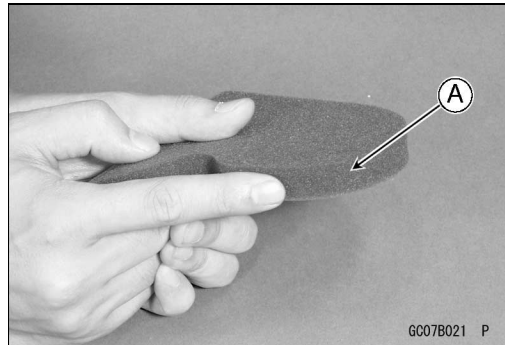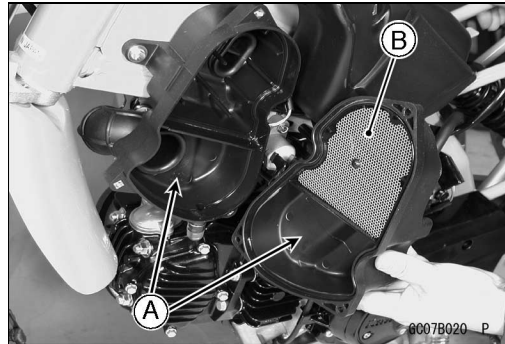


## Fuel Tank

### Fuel Tank Removal

#### **⚠ WARNING**


Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Remove:
  - Shrouds
  - Seat
- Turn the fuel tap to the OFF position.
- Pull the fuel hose off the fuel tap.
- Remove the fuel tank mounting bolt [A] and band [B].
- Remove the fuel tank [C].
- Drain the fuel tank.

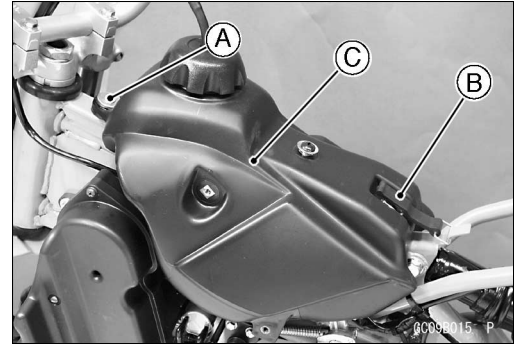


### Fuel Tank Installation

- Check the rubber damper [A] on the frame.
- ★ If the damper is damaged or deteriorated, replace it.
- Install the rubber damper [A] noting its installing direction as shown.
- Align the damper center with the frame hole [B].
- Apply adhesive to diagonal line portion [C].
- Be sure the fuel hose is clamped to the fuel tap to prevent leaks.
- Insert the fuel tank breather hose outlet end into the number plate hole.

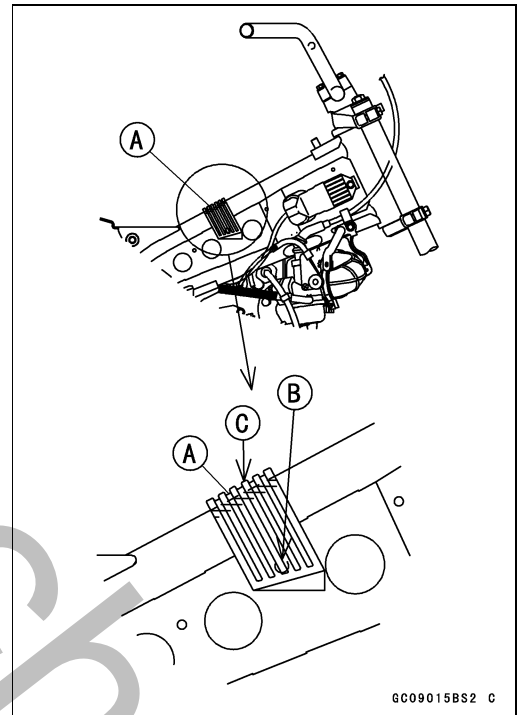

### Fuel Tap Removal

- Remove the fuel tank and drain it.
- Remove the mounting bolts [A] and take out the fuel tap [B].

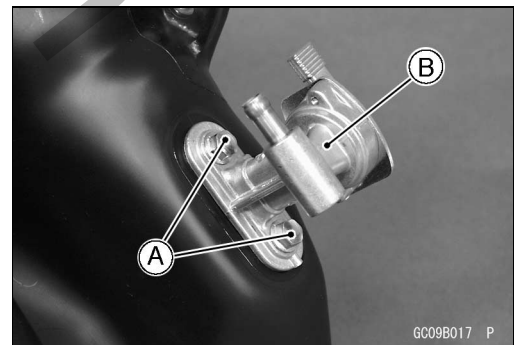

## 3-18 FUEL SYSTEM

---

### Fuel Tank

---

#### *Fuel Tap Installation*

- Be sure the O-ring is in good condition to prevent leaks.
- Be sure to clamp the fuel hose to the tap to prevent leaks.

#### *Fuel Tap Inspection*

- Refer to Fuel Tap Inspection in the Periodic Maintenance Chapter.

#### *Fuel Tank and Tap Cleaning*

#### **⚠ WARNING**

**Clean the tank in a well-ventilated area, and take care that there is no sparks or flame anywhere near the working area. Because of the danger of highly flammable liquids, do not use gasoline or low-flash-point solvent to clean the tank.**

- Remove the fuel tank and drain it.
- Pour some high-flash-point solvent into the fuel tank and shake the tank to remove dirt and fuel deposits.
- Pour the solvent out of the tank.
- Remove the fuel tap from the tank by taking out the bolts.
- Clean the fuel tap filter screen in a high-flash-point solvent.
- Pour high flash-point solvent through the tap in all lever positions.
- Dry the tank and tap with compressed air.
- Install the tap in the tank.
- Install the fuel tank.



# Engine Top End


## Table of Contents

4

Exploded View.....	4-2	Valve Guide Removal.....	4-20
Specifications.....	4-6	Valve Guide Installation.....	4-20
Camshaft Chain Tensioner.....	4-8	Valve Clearance Inspection.....	4-21
Camshaft Chain Tensioner Removal.....	4-8	Valve Clearance Adjustment.....	4-21
Camshaft Chain Tensioner Installation.....	4-9	Valve Seat Inspection.....	4-21
Replacement Chain Tensioner Installation.....	4-10	Valve Seat Repair.....	4-22
Camshaft Sprocket.....	4-11	Valve Head Thickness Inspection.....	4-24
Camshaft Sprocket Removal.....	4-11	Valve Stem Bend Inspection.....	4-24
Camshaft Sprocket Installation.....	4-12	Valve Stem Diameter Inspection.....	4-24
Camshaft Chain Removal.....	4-13	Valve Guide Inside Diameter Inspection.....	4-24
Camshaft Chain Installation.....	4-13	Valve to Guide Clearance Measurement.....	4-25
Camshaft Chain Wear.....	4-13	Cylinder, Piston.....	4-27
Camshaft Chain Guide Wear.....	4-13	Cylinder Removal.....	4-27
Rocker Arm, Rocker Arm Shaft.....	4-14	Cylinder Installation.....	4-27
Rocker Arm Removal.....	4-14	Piston Removal.....	4-27
Rocker Arm Installation.....	4-14	Piston Installation.....	4-28
Rocker Arm & Arm Shaft Wear.....	4-15	Cylinder Inside Diameter Measurement.....	4-29
Camshaft.....	4-16	Piston Outside Diameter Measurement.....	4-29
Camshaft Removal.....	4-16	Piston/Cylinder Clearance.....	4-29
Camshaft Installation.....	4-16	Boring, Honing.....	4-30
Camshaft Inspection.....	4-16	Piston Ring End Gap.....	4-30
Camshaft Bearing Inspection.....	4-16	Piston Ring, Piston Ring Groove Inspection.....	4-30
Cylinder Head.....	4-17	Piston, Piston Pin, Connecting Rod Wear Inspection.....	4-31
Compression Measurement.....	4-17	Piston, Piston Pin, Connecting Rod Inspection.....	4-31
Cylinder Head Removal.....	4-18	Muffler.....	4-32
Cylinder Head Installation.....	4-19	Muffler Removal.....	4-32
Cylinder Head Cleaning.....	4-19	Muffler Installation.....	4-32
Valve/Valve Guide.....	4-20	Spark Arrester Cleaning.....	4-32
Valve Removal.....	4-20		
Valve Installation.....	4-20		

## 4-2 ENGINE TOP END

### Exploded View

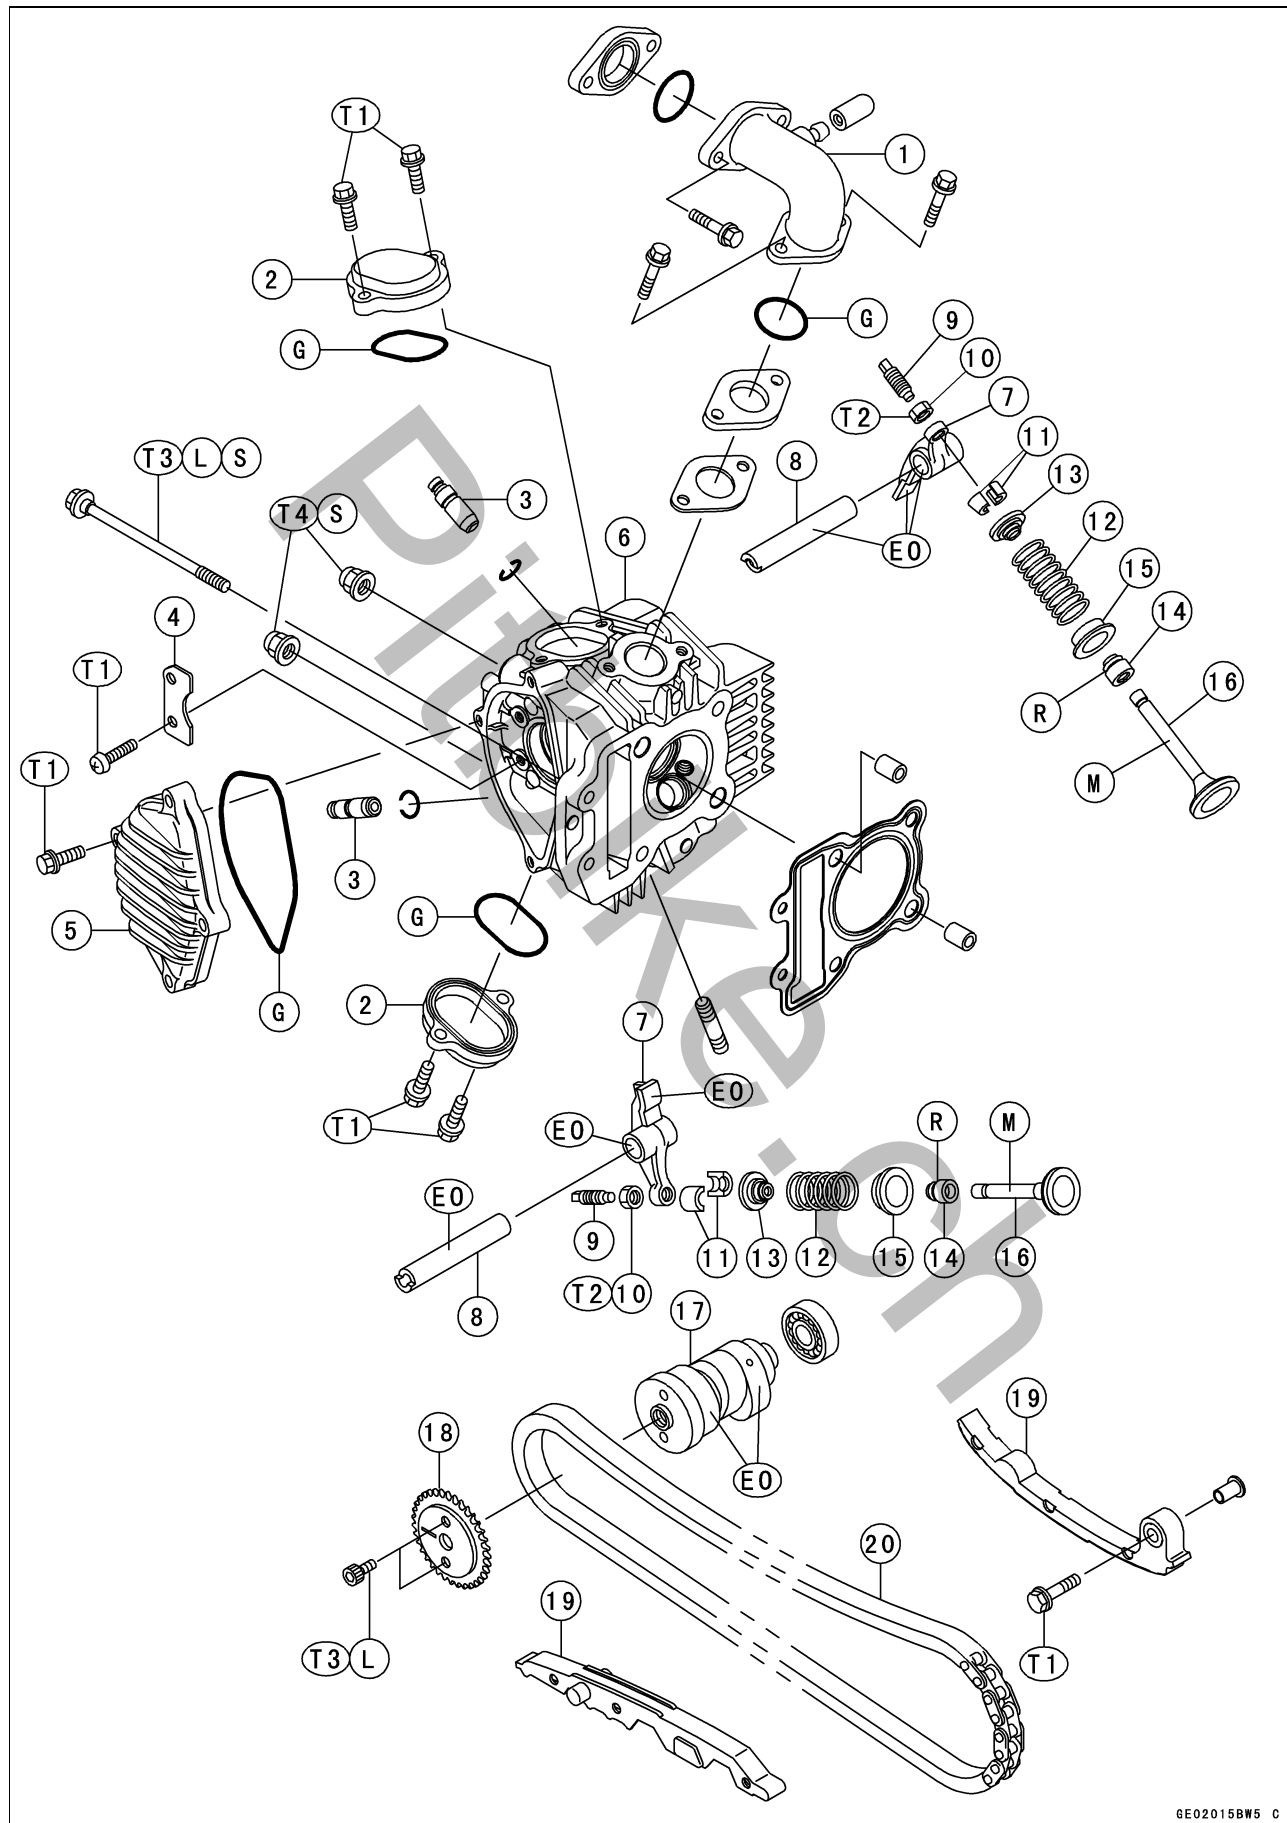

---


**Exploded View**

---

1. Intake Pipe
  2. Valve Adjusting Cover
  3. Valve Guide
  4. Rocker Arm Shaft Stopper
  5. Camshaft Sprocket Cover
  6. Cylinder Head
  7. Rocker Arm
  8. Rocker Arm Shaft
  9. Valve Adjusting Screw
  10. Valve Adjusting Screw Locknut
  11. Split Keepers
  12. Valve Spring
  13. Valve Spring Retainer
  14. Stem Oil Seal
  15. Valve Seat
  16. Valve Stem
  17. Camshaft
  18. Camshaft Sprocket
  19. Chain Guide
  20. Camshaft Chain
- S: Follow the specific tightening sequence.
- EO: Apply engine oil.
- M: Apply molybdenum disulfide grease.
- R: Replacement parts
- G: Apply grease.
- L: Apply a non-permanent locking agent.
- T1: 5.2 N·m (0.53 kgf·m, 46 in·lb)
- T2: 8.8 N·m (0.9 kgf·m, 78 in·lb)
- T3: 12 N·m (1.2 kgf·m, 8.9 ft·lb)
- T4: 22 N·m (2.2 kgf·m, 16 ft·lb)

## 4-4 ENGINE TOP END

### Exploded View

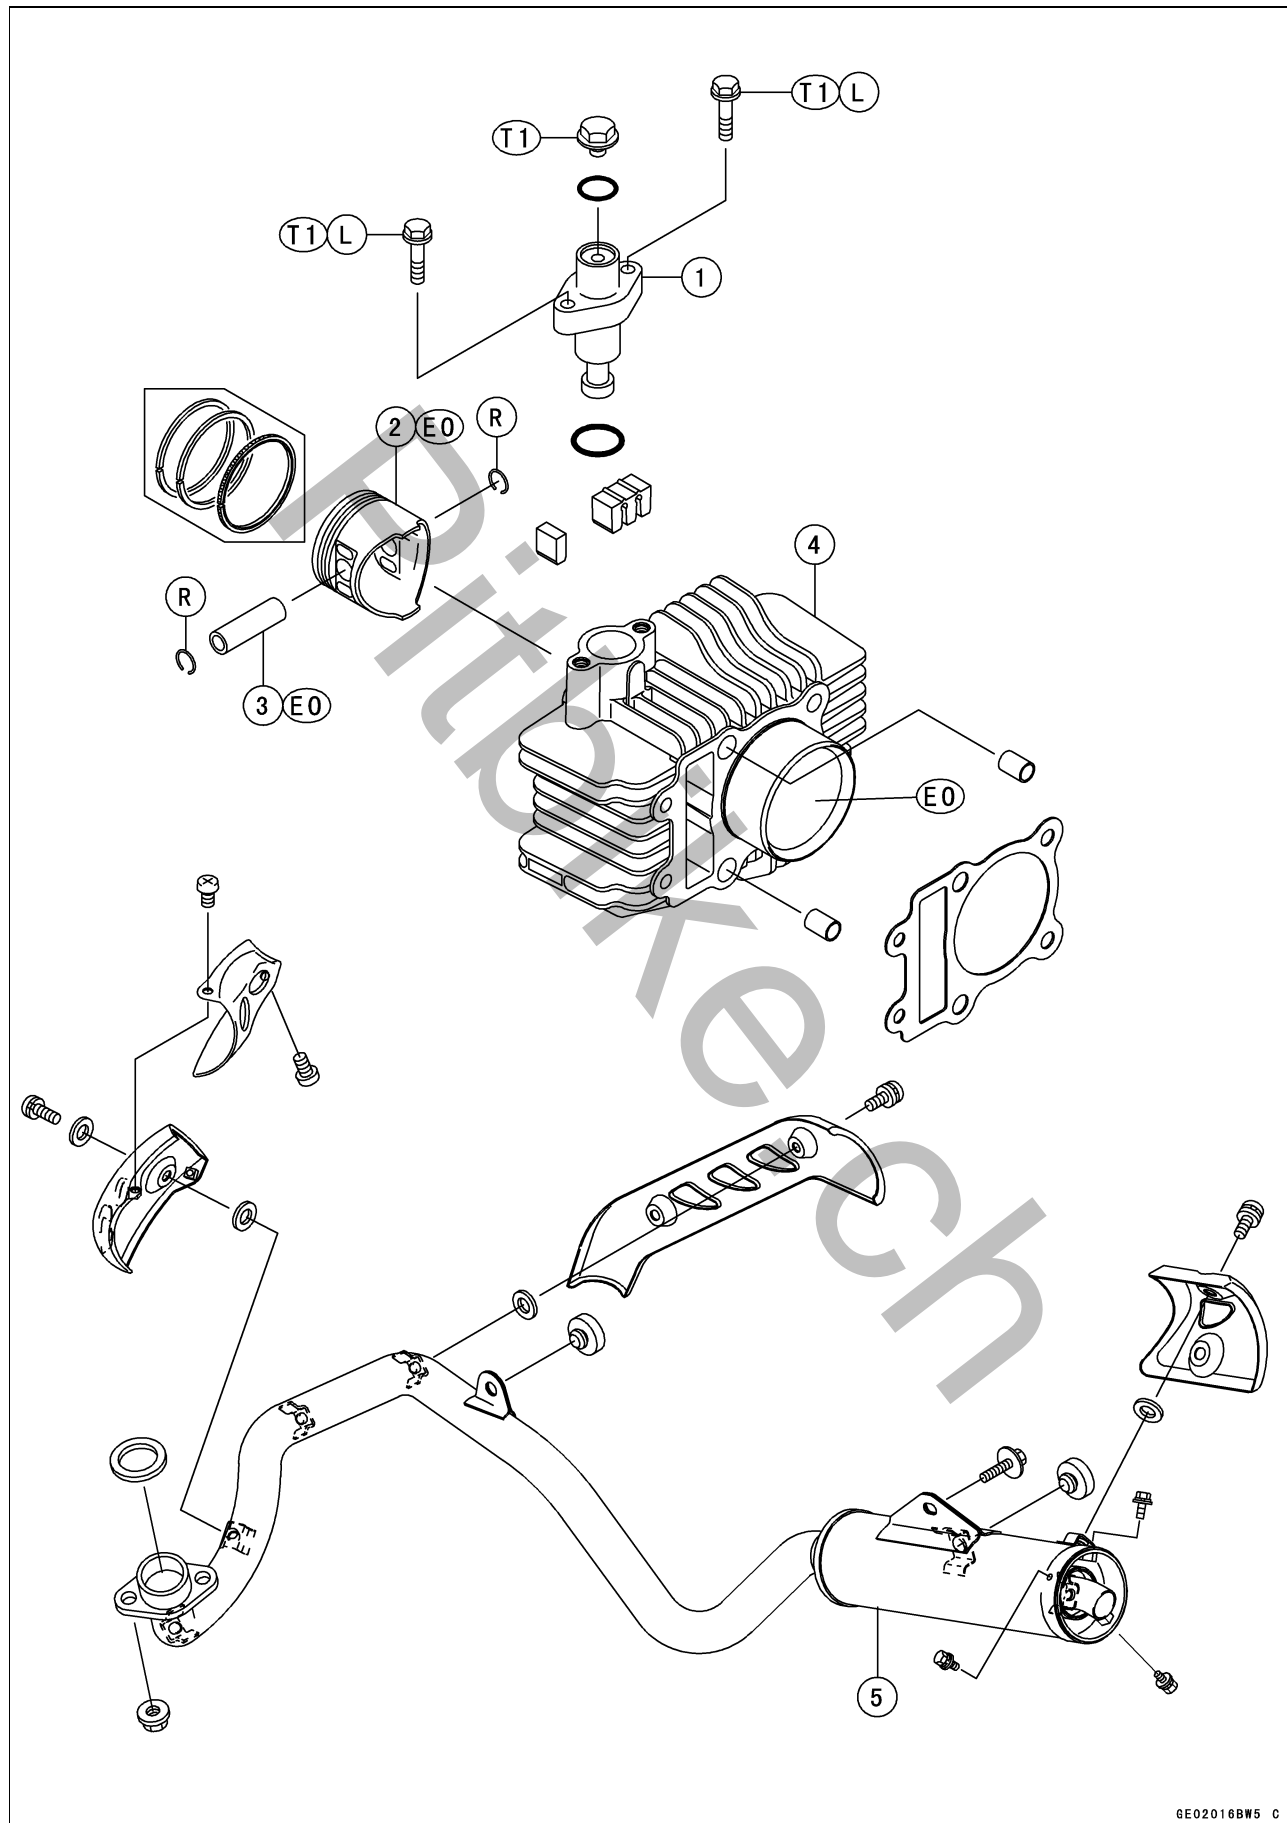

### Exploded View

---

1. Camshaft Chain Tensioner
  2. Piston
  3. Piston Pin
  4. Cylinder
  5. Muffler
- L: Apply non-permanent locking agent.  
EO: Apply engine oil.  
R: Replacement parts  
T1: 5.2 N·m (0.53 kgf·m, 46 in·lb)

Pitbike.ch

## 4-6 ENGINE TOP END

### Specifications

Item		Standard	Service Limit
<b>Camshaft:</b>			
Camshaft:			
Cam height	Exhaust	29.021 mm ~ 29.201 mm	28.92 mm
	Inlet	28.984 mm ~ 29.164 mm	28.88 mm
Camshaft chain 20-link length		127.00 ~ 127.48 mm	128.9 mm
Rocker Arms, Shaft			
Rocker arm inside diameter		10.000 ~ 10.015 mm	10.05 mm
Rocker arm shaft diameter		9.980 ~ 9.995 mm	9.95 mm
Cylinder Head:			
Cylinder Compression		Usable range 865 ~ 1320 kPa (8.8 ~ 13.5 kgf/cm <sup>2</sup> , 125 ~ 192 psi) @5 kicks	- - -
Cylinder head warp			0.05 mm
<b>Valve:</b>			
Valve Clearance:	Exhaust	0.04 ~ 0.08 mm	- - -
	Inlet	0.04 ~ 0.08 mm	- - -
Valve head thickness:			
	Exhaust	1.15 ~ 1.45 mm	0.5 mm
	Inlet	0.85 ~ 1.15 mm	0.5 mm
Valve stem bend		TIR 0.01 mm or less	TIR 0.05 mm
Valve stem diameter:			
	Exhaust	4.462 ~ 4.472 mm	4.44 mm
	Inlet	4.475 ~ 4.490 mm	4.46 mm
Valve guide inside diameter:			
	Exhaust	4.500 ~ 4.512 mm	4.55 mm
	Inlet	4.500 ~ 4.512 mm	4.55 mm
Valve/valve guide clearance: (wobble method):			
	Exhaust	0.06 ~ 0.11 mm	0.19 mm
	Inlet	0.02 ~ 0.07 mm	0.12 mm
Valve seat cutting angle		45°, 32°, 60°, 67.5°	
<b>Valve seat surface:</b>			
Width:	Exhaust	0.80 ~ 1.15 mm	- - -
	Inlet	0.80 ~ 1.15 mm	- - -
Outside diameter:	Exhaust	19.9 ~ 20.1 mm	- - -
	Inlet	22.9 ~ 23.1 mm	- - -
Valve spring free length:		36.75 mm	35.5 mm

## Specifications

Item	Standard	Service Limit
<b>Cylinder, Piston:</b>		
Cylinder inside diameter	52.997 ~ 53.009 mm	53.10 mm
Piston outside diameter	52.981 ~ 52.993 mm	52.83 mm
Piston/cylinder clearance	0.010 ~ 0.022 mm	- - -
Oversize piston and rings	+ 0.25 mm, +0.50 mm, 0.75 mm, and +1.0 mm	- - -
Piston ring/groove clearance:		
Top	0.02 ~ 0.06 mm	0.16 mm
Second	0.01 ~ 0.05 mm	0.15 mm
Piston ring groove width:		
Top	0.81 ~ 0.83 mm	0.90 mm
Second	0.80 ~ 0.82 mm	0.90 mm
Piston ring thickness:		
Top	0.77 ~ 0.79 mm	0.7 mm
Second	0.77 ~ 0.79 mm	0.7 mm
Piston ring end gap:		
Top	0.15 ~ 0.30 mm	0.6 mm
Second	0.30 ~ 0.45 mm	0.8 mm
Oil	0.10 ~ 0.60 mm	0.9 mm
Piston pin diameter	12.995 ~ 13.000 mm	12.96 mm
Piston pin hole inside diameter	13.001 ~ 13.007 mm	13.07 mm
Connecting rod small end inside diameter	13.003 ~ 13.014 mm	13.05 mm

**Special Tools - Compression Gauge: 57001-221****Piston Pin Puller Assembly : 57001-910****Compression Gauge Adapter, M10 X 1.0 : 57001-1317****Valve Guide Arbor,  $\phi 5.5$  : 57001-1021****Valve Guide Reamer,  $\phi 5.5$  : 57001-1020****Valve Seat Cutter Holder,  $\phi 5.5$  : 57001-1125****Valve Seat Cutter Holder Bar : 57001-1128****Valve Seat Cutter,  $45^\circ - \phi 27.5$  : 57001-1114****Valve Seat Cutter,  $32^\circ - \phi 25$  : 57001-1118****Valve Seat Cutter,  $60^\circ - \phi 30$  : 57001-1123****Valve Seat Cutter,  $32^\circ - \phi 22$  : 57001-1206****Valve Seat Cutter,  $45^\circ - \phi 22$  : 57001-1205****Valve Seat Cutter,  $67.5^\circ - \phi 22$  : 57001-1207****Valve Spring Compressor Assembly: 57001-241****Valve Spring Compressor Adapter,  $\phi 20$ : 57001-1154****Valve Adjusting Screw Holder: 57001-1217**

## 4-8 ENGINE TOP END

### Camshaft Chain Tensioner

#### Camshaft Chain Tensioner Removal

##### CAUTION




This is a non-return type cam chain tensioner. The push rod does not return to its original position once it moves out to take up cam chain slack. Observe all the rules listed below: When removing the tensioner, do not take out the mounting bolts only halfway. Retightening the mounting bolts from this position could damage the tensioner and the camshaft chain. Once the bolts are loosened, the tensioner must be removed and reset as described in "Chain Tensioner Installation". Do not turn over the crankshaft while the tensioner is removed. This could upset the cam chain timing, and damage the valves.

- Remove the left side cover.
- Loosen the cap bolt [A] before tensioner removal for later disassembly convenience.
- Unscrew the mounting bolts [B] and remove the camshaft chain tensioner [C].

##### CAUTION

Do not turn over the crankshaft while the tensioner is removed. This could upset the cam chain timing, and damaging the valves.

- Remove the fuel tank mounting bolt and band, and move the fuel tank [A] backward.
- Remove the camshaft chain tensioner [B] while the push rod [E] clockwise [D] and compressing [F] it with a suitable screwdriver [C].

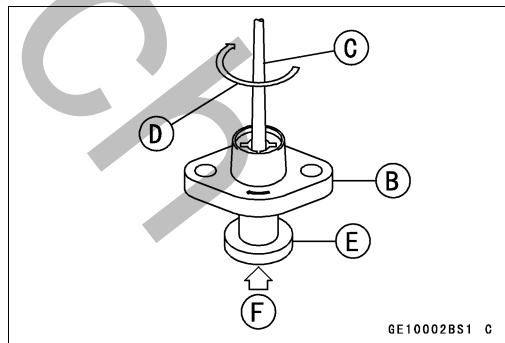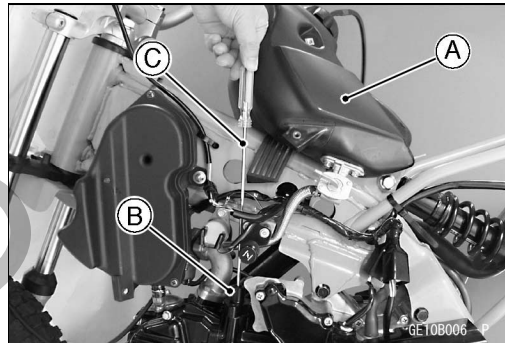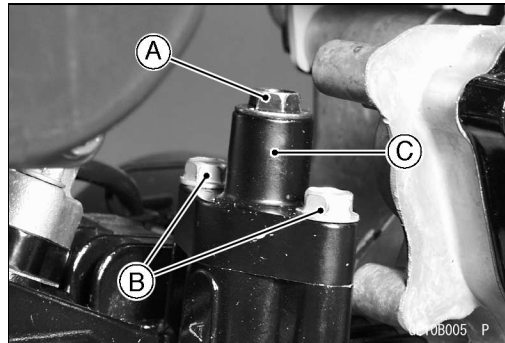





## Camshaft Chain Tensioner

### Camshaft Chain Tensioner Installation


- Remove the tensioner cap bolt and O-ring.
- While compressing the push rod [A], turn it clockwise [B] with a suitable screwdriver until the rod protrusion comes to about 10 mm from the tensioner body.

#### CAUTION

**Do not turn the rod counterclockwise at installation. This could detach the rod and the tensioner cannot be reinstalled.**

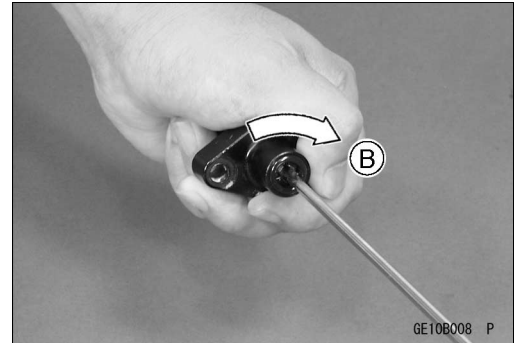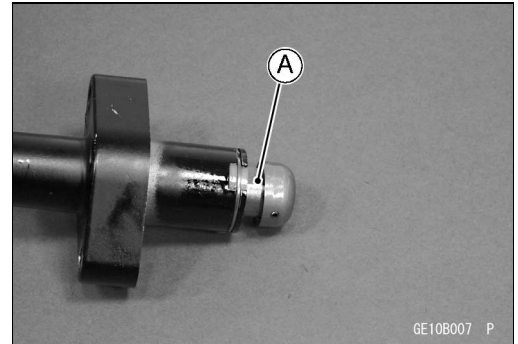

- While holding the rod in position with a suitable push rod holder plate [A] install the tensioner on the cylinder block.

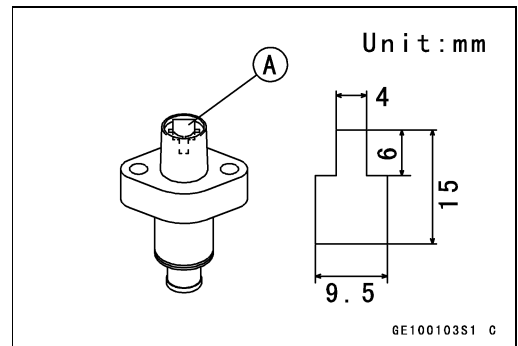


- Tighten the mounting bolts [A].

**Torque - Chain Tensioner Mounting Bolts: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

- Take out the holder plate.
- Install the O-ring and tighten the cap bolt.

**Torque - Tensioner Cap Bolt: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

- Install the left side cover.

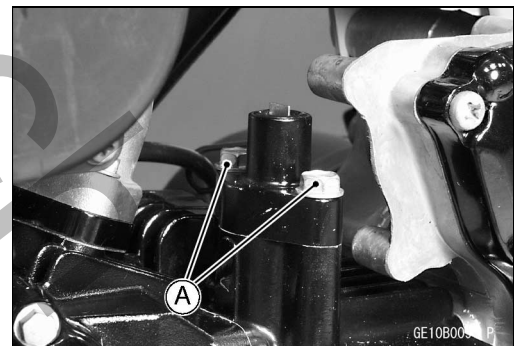

## 4-10 ENGINE TOP END

### Camshaft Chain Tensioner

---

#### *Replacement Chain Tensioner Installation*

- A replacement chain tensioner (spare parts) has a push rod holder plate.
- Install the tensioner on the cylinder block, and tighten the mounting bolts.

**Torque - Chain Tensioner Mounting Bolts: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

- Remove the plate to release the push rod.
- Install the O-ring and tighten the cap bolt.

**Torque - Tensioner Cap Bolt: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

CAUTION
Do not pull the rod holder plate while the tensioner is removed. This could detach the rod and the tensioner cannot be installed easily.





## Camshaft Sprocket

### Camshaft Sprocket Removal

- Remove:
  - Left Shroud
  - Engine Sprocket Cover (see Final Drive chapter)
  - Magneto Cover (see Electrical System chapter)
- Remove the camshaft sprocket cover bolts [A] and take off the cover [B].
- Turn the crankshaft counterclockwise until the line adjoining the line mark on the camshaft sprocket [A] aligns of the sprocket cover mating surface projection [B].
- Remove the camshaft chain tensioner.
- With a wrench on the magneto flywheel bolt to keep the crankshaft from turning, remove the camshaft sprocket bolts [A].
- Remove camshaft sprocket [B].
- Using a screwdriver [A] or wire to keep the chain [B] from falling down into the cylinder clock.

### CAUTION

Always pull the camshaft chain taut while turning the crankshaft when the camshaft chain is loose. This avoids kinking the chain on the lower (crankshaft) sprocket. A kicked chain could damage both the chain and the sprocket.

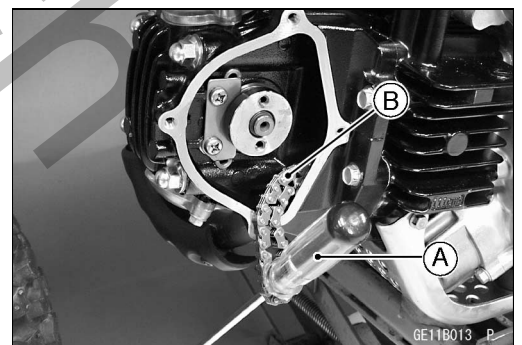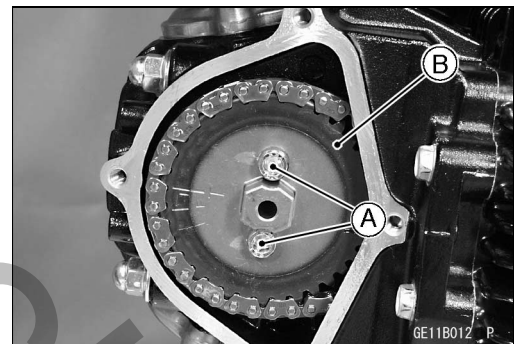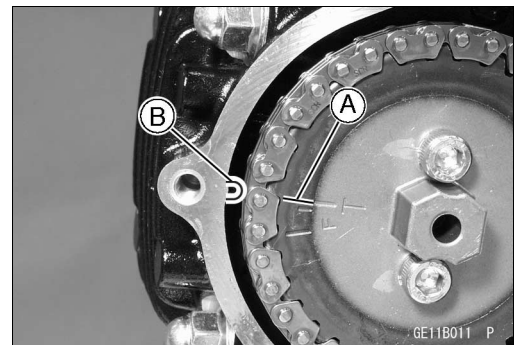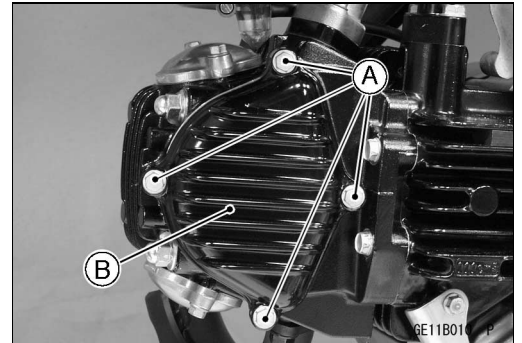


## 4-12 ENGINE TOP END


### Camshaft Sprocket

#### Camshaft Sprocket Installation

- Check crankshaft position to see that the "T" mark [A] on the magneto flywheel aligns with the index mark [B] on the crankcase.
- Remember to pull the camshaft chain taut before rotating the crankshaft.

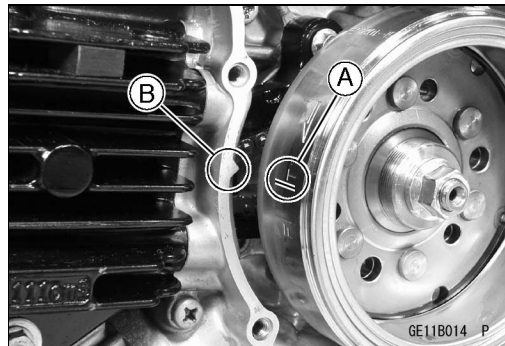


- Pull the lower side of the chain taut and fit it onto the sprocket so that the line [A] on the sprocket aligns with the make on the sprocket cover mating surface projection [B].

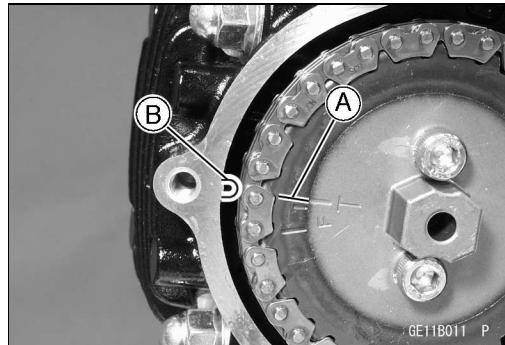

- Fit the sprocket up into place.
- Turn the camshaft so that the cam lobes point downward, while holding the sprocket steady to align the bolt holes [A].
- Install the sprocket [B].
- Apply a non-permanent locking agent to the camshaft sprocket bolts.
- Keep the crankshaft from turning by holding a wrench on the magneto flywheel bolt.
- Tighten the sprocket bolts.

**Torque - Camshaft Sprocket Bolts: 12 N·m (1.2 kgf·m, 8.9 ft·lb)**

- Install the camshaft chain tensioner.
- Check the camshaft chain timing.
- Turn the crankshaft two turns in the counterclockwise, the crankshaft is at TDC, and re-check the camshaft chain timing.
- ★ If the timing mark is aligned, the camshaft chain timing is correct.

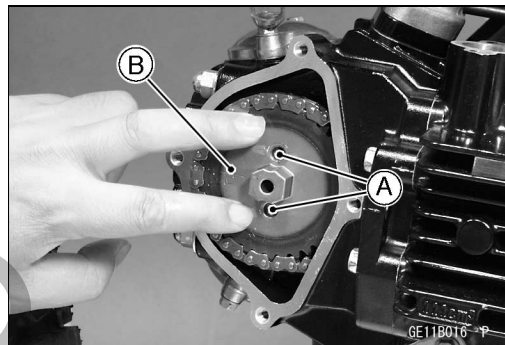

#### CAUTION


Rotation of the crankshaft with improper camshaft timing could cause the valve to contact each other or the piston, and bend.

If any resistance is felt when turning the crankshaft, stop immediately, and check the camshaft chain timing.

## Camshaft Sprocket

### Camshaft Chain Removal

- Drain the engine oil.
- Remove:
  - Left Shroud
  - Camshaft Chain Tensioner
  - Camshaft Sprocket
  - Cylinder Head
  - Magneto Cover (see Electrical System chapter)
  - Magneto Flywheel (see Electrical System chapter)
  - Woodruff Key (see Electrical System chapter)
- Remove the camshaft chain holder [A] and chain guides [B].
- Take off the camshaft chain.

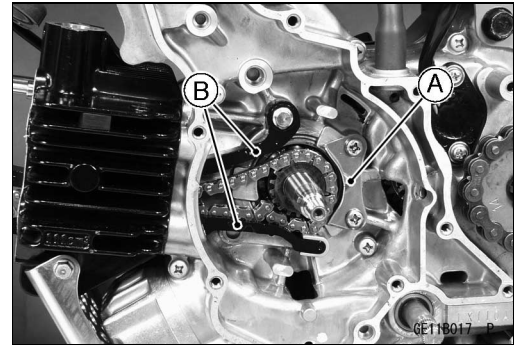


### Camshaft Chain Installation

- Check to see that the crankshaft position is at TDC and re-adjust if necessary.
- Install the camshaft chain to the crankshaft and it is pulled up to the camshaft sprocket pass through camshaft chain hole in the cylinder.
- Keep the chain.
- Install the upper chain guide and camshaft chain holder.

**Torque - Camshaft Chain Guide Bolt: 5.2 N·m (0.53 kgf·m, 46 in·lb)**  
**Camshaft Chain Holder Bolts: 5.2N·m (0.53 kgf·m, 46 in·lb)**

- Insert the lower chain guide [A] securely as shown.
- Install the other removed parts.

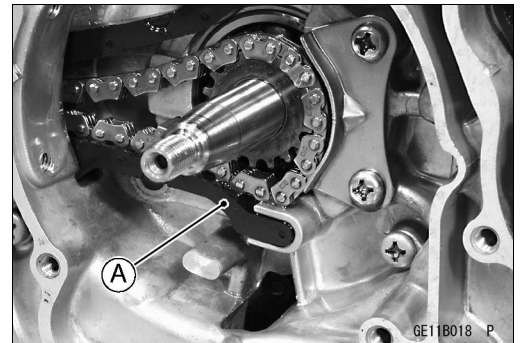


### Camshaft Chain Wear

- Hold the chain taut with a force of about 49 N (5 kg, 11 lb) in some manner and measure a 20-link length. Since the chain may wear unevenly, take measurement at several places.

#### Camshaft Chain 20 Link Length

**Standard: 127.00 ~ 127.48 mm**  
**Service Limit: 128.9 mm**

- ★ If the measurement of the camshaft chain exceeds the service limit, replace the chain.

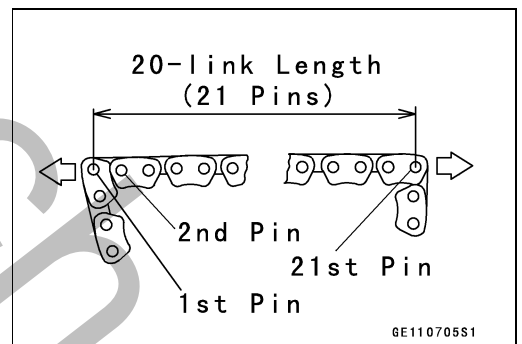

### Camshaft Chain Guide Wear

- Visually inspect the rubber on the guides.
- ★ If the rubber is damaged or is missing places, replace the guide.

## 4-14 ENGINE TOP END




### Rocker Arm, Rocker Arm Shaft

#### Rocker Arm Removal

- Remove
  - Left Shroud
  - Camshaft Sprocket Cover
  - Camshaft Chain Tensioner
  - Camshaft Sprocket Bolts [A]
  - Camshaft Sprocket [B]

Valve Adjusting Cover Bolts [A]  
Valve Adjusting Covers [B]  
Rocker Arm Shaft Stopper Screws [C]  
Rocker Arm Shaft Stopper [D]

- While holding the rocker arm [A] with hand, pull out the rocker arm shaft [B] and take off the rocker arms.
- Mark and record the rocker arm locations so that the rocker arm can be reinstalled in their original positions.

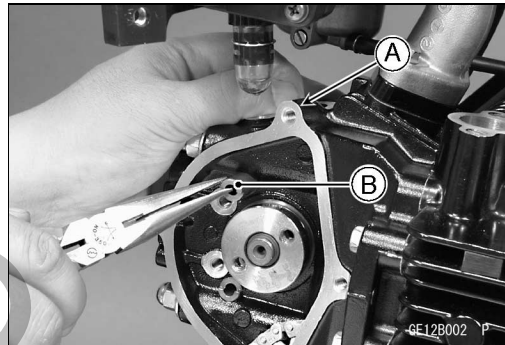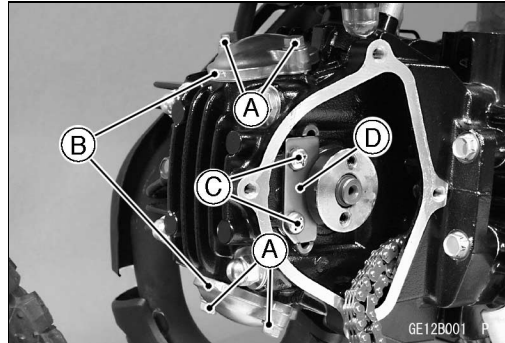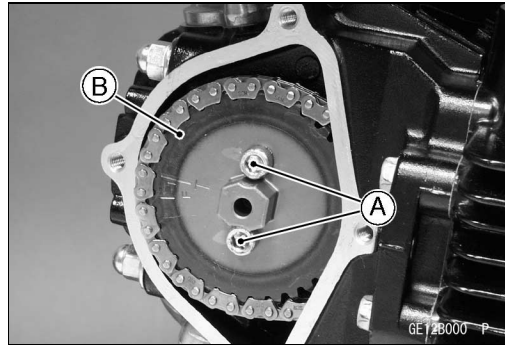


#### Rocker Arm Installation

- Clean the rocker arms and rocker arm shafts with a high-flash-point solvent.
- Apply a clean engine oil to the rocker arm shaft outside and rocker arm cam parts.
- Turn the camshaft so that the cam lobes point downward.
- Install the each rocker arm shaft, running it through each rocker arm.
- Install the rocker arm shaft stopper [A] so that the each rocker arm shaft protrusion [B] face to face.
- Tighten the rocker arm shaft stopper screws.

**Torque - Rocker Arm Shaft Stopper Screws: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

- Install the camshaft sprocket.
- Check and adjust the valve clearance.

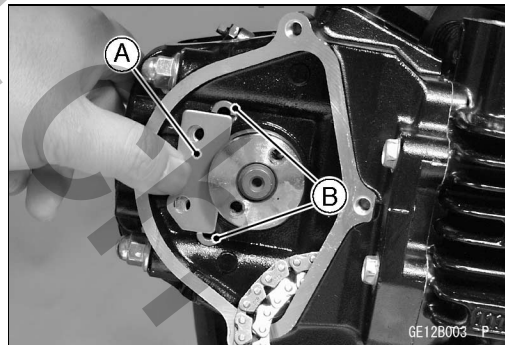

#### CAUTION

When install the valve adjusting covers, be careful not to drop or protrude the O-rings from the cover grooves. If the O-ring is installed improperly, oil will leak.

## Rocker Arm, Rocker Arm Shaft

### Rocker Arm & Arm Shaft Wear

- Visually inspect where the cam and valve stem wear on each arm.
- ★ If there is any damage or uneven wear, replace the arm.
- Measure the inside diameter [A] of each rocker arm with a cylinder gauge.

#### Rocker Arm Inside Diameter

**Standard:** 10.000 ~ 10.015 mm

**Service Limit:** 10.05 mm


- ★ If it exceeds the service limit, replace the arm.
- Measure the diameter [B] of each rocker arm shaft where the rocker arm fits.

#### Rocker Arm Shaft Diameter

**Standard:** 9.980 ~ 9.995 mm

**Service Limit:** 9.95 mm

- ★ If the diameter is less than the service limit, replace the rocker arm shaft.

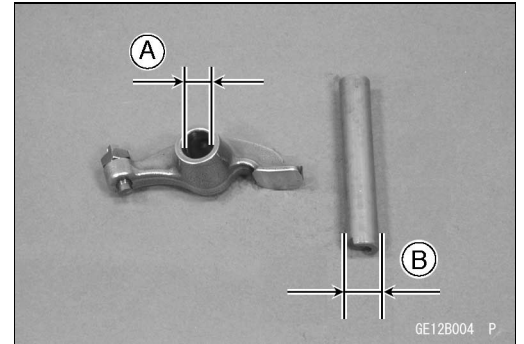


## 4-16 ENGINE TOP END

### Camshaft

#### Camshaft Removal

- Remove:
  - Left Shroud
  - Camshaft Chain Tensioner
  - Camshaft Sprocket
  - Rocker Arms
- Pull out the camshaft [A].

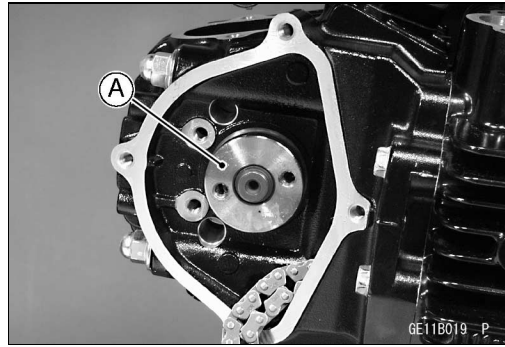

#### Camshaft Installation

- Clean the camshaft with a high-flash-point solvent.
- Apply clean engine oil to all cam parts.
- Install the camshaft in the cylinder head.
- Install the rocker arm.
- Install the other removed parts.
- Check and adjust the valve clearance.


#### Camshaft Inspection

- Visually inspect the cam for wear or damage.
- ★ If there is any damage or wear, replace the camshaft.
- Measure the height [A] of each cam.

##### Cam Height


	Exhaust	Inlet
<b>Standard:</b>	<b>29.021 ~ 29.201 mm</b>	<b>28.984 ~ 29.164 mm</b>
<b>Service Limit:</b>	<b>28.92 mm</b>	<b>28.88 mm</b>

- ★ If any cam is worn down past service limit, replace the camshaft.

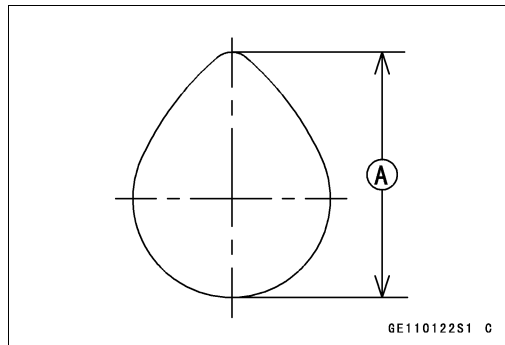

#### Camshaft Bearing Inspection

- Visually inspect each camshaft bearing [A].
- ★ If there is any damage replace the camshaft.
- Turn the bearing back and forth while checking for roughness or binding.
- ★ If roughness or binding is found, replace the camshaft.
- ★ If it is noisy, does not spin smoothly, or has any rough spots, replace the camshaft.

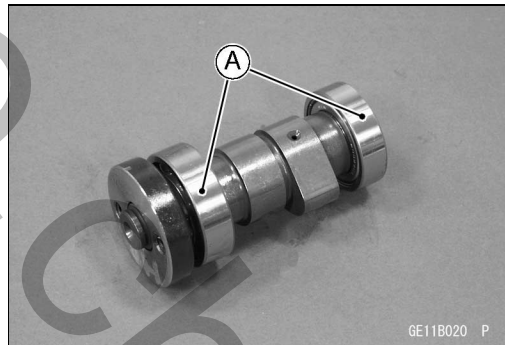



## Cylinder Head

### Compression Measurement

- Warm up the engine thoroughly
- Stop the engine.
- Remove the spark plug and attach compression gauge and adapter firmly into the spark plug hole.

**Special Tools - Compression Gauge: 57001-221 [A]**

**Compression Gauge Adapter, M10X1.0: 57001-1317 [B]**

- With the throttle fully open, turn the engine over sharply with the kick starter several times until the compression gauge stops rising; the compression is the highest reading obtainable.

### Cylinder Compression

**Usable Range: 865 ~ 1320 kPa**

**(8.8 ~ 13.5 kgf/cm<sup>2</sup>, 125 ~ 192 psi) @5 kicks**

The following table should be consulted if the obtainable compression reading is not within the usable range.

Problem	Diagnosis	Remedy (Action)
Cylinder compression is higher than usable range	Carbon accumulation on piston and in combustion chamber possibly due to damaged valve stem oil seal and/or damaged position oil rings (This may be indicated by white exhaust smoke).	Remove the carbon deposits and replace damaged parts if necessary.
	Incorrect cylinder head gasket, cylinder base gasket thickness.	Replace to gasket with a standard part.
Cylinder compression is lower than usable range	Gas leakage around cylinder head.	Replace damaged gasket and check cylinder head warp.
	Bad condition of valve seating.	Repair if necessary.
	Incorrect valve clearance.	Adjust the valve clearance.
	Incorrect piston/cylinder clearance.	Replace the piston and/or cylinder
	Piston seizure.	Inspect the cylinder (and liner) and replace/repair the cylinder and/or piston as necessary.
	Bad condition of piston ring and/or piston ring grooves.	Replace the piston and/or the piston rings.

- Remove the compression gauge, adapter and install the spark plug.

**Torque - Spark Plug: 13 N·m (1.3 kgf·m, 9.6 ft·lb)**





## 4-18 ENGINE TOP END


### Cylinder Head

#### *Cylinder Head Removal*


- Remove the right and left shrouds.
- Remove the exhaust pipe holder nuts [A], and muffler mounting bolt [B] and then the muffler with the exhaust pipe holder.

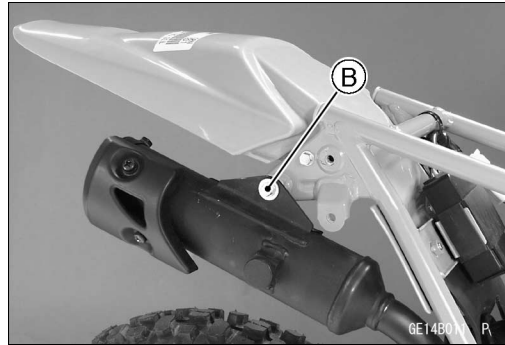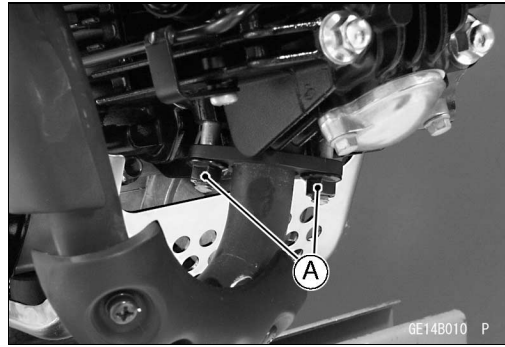


- Remove the oil pipe banjo bolts [A], screws [B], and take off the oil pipe [C].
- Remove the spark plug cap [D].

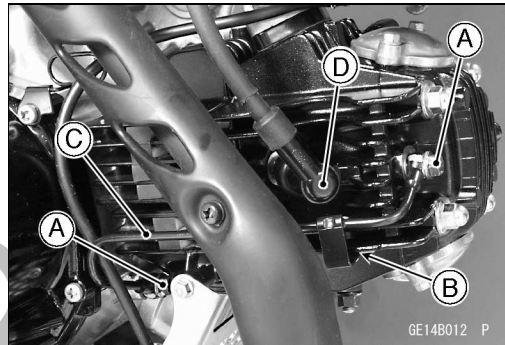

- Unscrew the intake pipe bolts [A].
- Remove:
  - Camshaft Sprocket Cover
  - Camshaft Chain Tensioner
  - Camshaft Sprocket

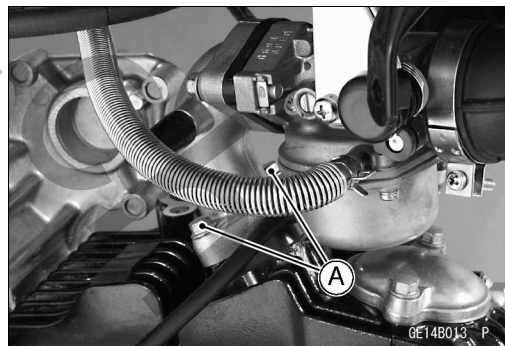


- Remove the cylinder head bolts [A], nuts [B], and take off the cylinder head.

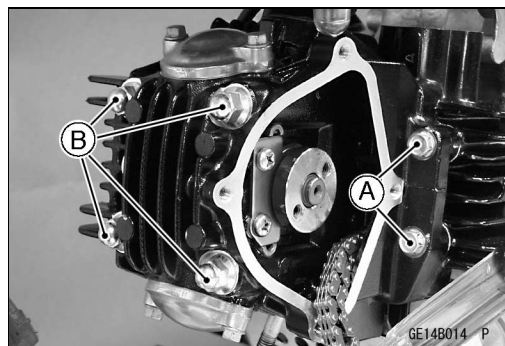

## Cylinder Head

### Cylinder Head Installation

- Check to see that the two dowel pins [A] are in place on the cylinder.
- Install a new cylinder head gasket [B].

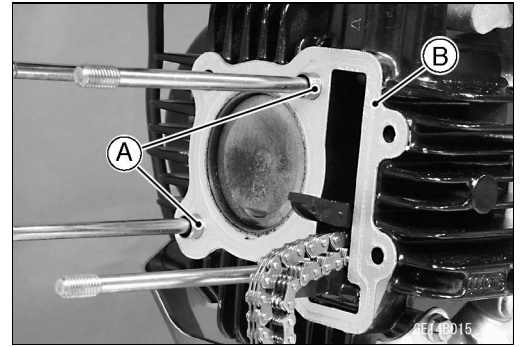

- Fit the cylinder head onto the cylinder block using a screwdriver or wire to keep the chain from falling down into the cylinder block.
- Apply a non-permanent locking agent to the cylinder head bolts.
- Tighten the cylinder head nuts and bolts following the tightening sequence as shown.


**First**      **Cylinder Head Bolts:** 5.9 N·m (0.6 kgf·m, 52 in·lb)

**Torque -**   **Cylinder Head Nuts:** 13 N·m (1.3 kgf·m, 9.6 ft·lb)

**Final**      **Cylinder Head Bolts:** 12 N·m (1.2 kgf·m, 8.9 in·lb)

**Torque -**   **Cylinder Head Nuts:** 22 N·m (2.2 kgf·m, 16 ft·lb)


- Install the camshaft sprocket.
- Install the other removed parts.

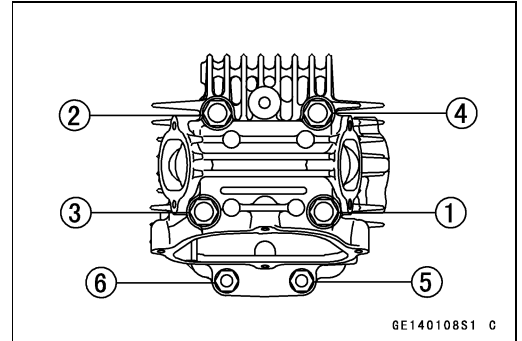

GE140108S1 C

### Cylinder Head Cleaning

- Scrape out any carbon, and wash the head with a high-flash-point solvent.

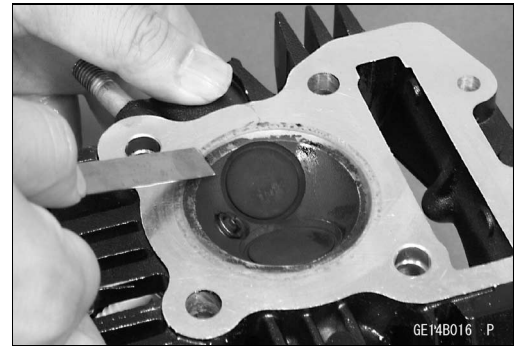

GE14B016 P


## 4-20 ENGINE TOP END

### Valve/Valve Guide

#### Valve Removal

- Remove:
  - Cylinder Head
  - Rocker Arm & Rocker Arm Shaft
  - Camshaft
- Using the valve spring compressor assembly to press down the valve spring retainer, remove the split keeper.


**Special Tools - Valve Spring Compressor Assembly: 57001-241 [A]  
Valve Spring Compressor Adapter,  $\phi 20$ : 57001-1154 [B]**

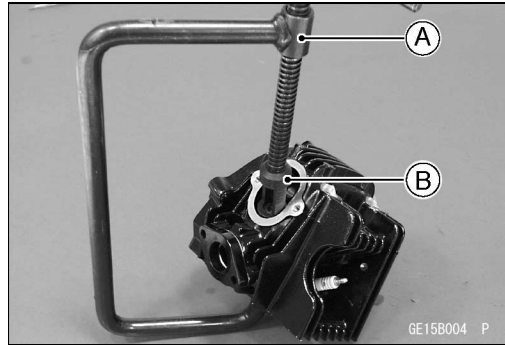

- Remove the tool and then remove the spring retainer, spring, and spring seat.
- Push out the valve.
- Pull off the valve stem oil seal.

#### Valve Installation


- Replace the valve stem oil seal [A].
- Push a new valve stem oil seal into place.
- ★ If a new valve is to be used, check the valve to guide clearance.
- ★ If there is too much clearance, install a new valve guide.
- Check the valve seat [B].
- Apply a thin coat of molybdenum disulfide grease to the valve stem [C].
- Install spring [D] so that the closed coil end [E] faces downwards, white paint faces upward.
- Install the spring retainer [F] press it down with the valve spring compressor assembly, and put on the split keepers [G].
- After making sure that the split keepers and valve stem are all properly fitted, remove the tool.
- Install:
  - Camshaft
  - Rocker Arm & Arm Shaft
  - Cylinder Head
- Check the valve clearance, and adjust if necessary.

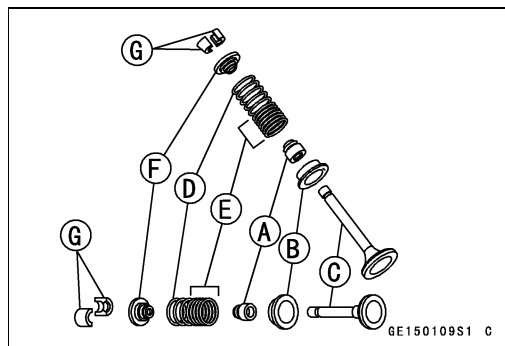

#### Valve Guide Removal

- Remove:
  - Cylinder Head
  - Valve
  - Valve Stem Oil Seal
- Heat the area around the guide to about  $120^{\circ} \sim 150^{\circ}\text{C}$  ( $250^{\circ} \sim 302^{\circ}\text{F}$ ) and hammer lightly on the valve guide arbor [A] to remove the guide from the top of the head.


**Special Tool - Valve Guide Arbor,  $\phi 5.5$ : 57001-1021**

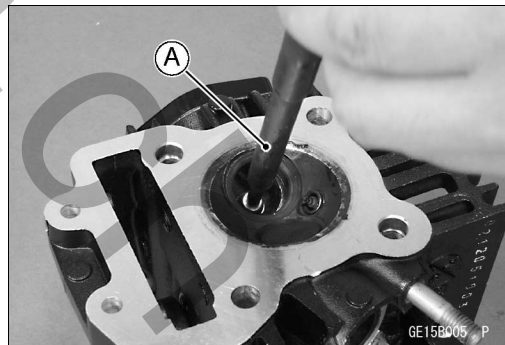

#### Valve Guide Installation

- Valve guide are identical.
- Lightly oil the valve guide outer surface.
- Heat the cylinder head around the valve guide hole to about  $120^{\circ} \sim 150^{\circ}\text{C}$  ( $250^{\circ} \sim 302^{\circ}\text{F}$ ).
- Drive the valve guide in from the top of the cylinder head until the circlip stops the guide from going in too far.
- Allow the cylinder head to cool.
- Ream the valve guide with the valve guide reamer [A] even if the old guide is reused.

**Special Tool - Valve Guide Reamer  $\phi 5.5$ : 57001-1020**

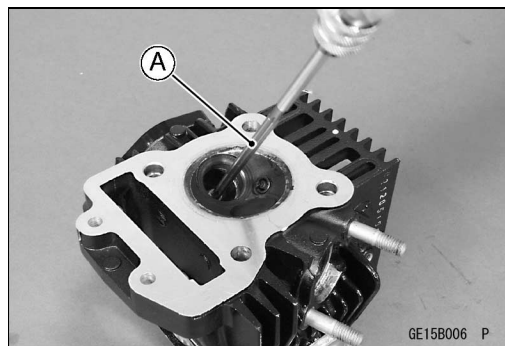

## Valve/Valve Guide

### Valve Clearance Inspection

- Refer to Valve Clearance Inspection in the Periodic Maintenance Chapter.

### Valve Clearance Adjustment

- Refer to Valve Clearance Adjustment in the Periodic Maintenance Chapter.

### Valve Seat Inspection

- Remove the valve.
- Check the valve seat surface [A] between the valve [B] and valve seat [C].
- Coat valve seat with machinists dye.
- Push the valve into the guide.
- Rotate the valve against the seat with a lapping tool.
- Pull the valve out, and check the seating pattern on the valve head. It must be the correct width and even all the way around.
- Measure the outside diameter [D] of the seating pattern on the valve seat.
- ★ If the outside diameter is too large or too small, repair the seat (see Seat Repair).

#### Valve Seating Surface Outside Diameter


Standard:	Inlet	22.9 ~ 23.1 mm
	Exhaust	19.9 ~ 20.1 mm

#### NOTE

- The valve stem and guide must be in good condition or this check will not be valid.
- ★ If the valve seating pattern is not correct, repair the seat.
- Measure the seat width [E] of the portion where there is no build-up carbon (white portion) of the valve seat with a vernier caliper.
- Good [F]
- ★ If the width is too wide [G], too narrow [H] or uneven [J], repair the seat (see Seat Repair).

#### Valve Seat Width

Standard:	Inlet	0.80 ~ 1.15 mm
	Exhaust	0.80 ~ 1.15 mm

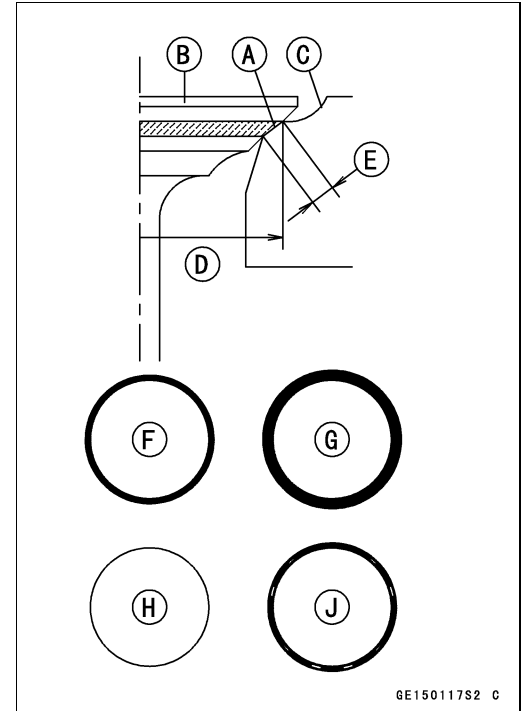

## 4-22 ENGINE TOP END

### Valve/Valve Guide

#### Valve Seat Repair

- Repair the valve seat with the valve seat cutters.

**Special Tools - Valve Seat Cutter Holder,  $\phi 5.5$ : 57001-1125**  
**Valve Seat Cutter Holder Bar: 57001-1128**

#### Inlet

**Special Tools - Valve Seat Cutter,  $45^\circ$  -  $\phi 27.5$ : 57001-1114**  
**Valve Seat Cutter,  $32^\circ$  -  $\phi 25$ : 57001-1118**  
**Valve Seat Cutter,  $60^\circ$  -  $\phi 30$ : 57001-1123**

#### Exhaust

**Special Tools - Valve Seat Cutter,  $32^\circ$  -  $\phi 22$ : 57001-1206**  
**Valve Seat Cutter,  $45^\circ$  -  $\phi 22$ : 57001-1205**  
**Valve Seat Cutter,  $67.5^\circ$  -  $\phi 22$ : 57001-1207**

- ★ If the manufacturer's instructions are not available, use the following procedure.

#### Seat Cutter Operating Care:

1. This valve seat cutter is developed to grind the valve for repair. Therefore the cutter must not be used for other purpose than seat repair.
2. Do not drop or shock the valve seat cutter, or the diamond particles may fall off.
3. Do not fail to apply engine oil to the valve seat cutter before grinding the seat surface. Also wash off ground particles sticking to the cutter with washing oil.

#### NOTE

- Do not use a wire brush to remove the metal particles from the cutter. It will take off the diamond particles.
- 4. Setting the valve seat cutter holder in position, operate the cutter in one hand. Do not apply too much force to the diamond position.


#### NOTE

- Prior to grinding, apply engine oil to the cutter and during the operation, wash off any ground particles sticking to the cutter with washing oil.
- 5. After use, wash the cutter with washing oil and apply a thin layer of engine oil before storing.

#### Marks Stamped on the cutter:


The marks stamped on the back of the cutter [A] represent the following.

$60^\circ$  ..... Cutter angle [B]  
 $30\phi$  ..... Outer diameter of cutter [C]

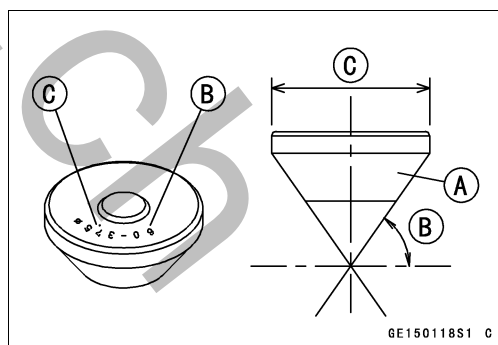

#### Operating Procedures:

- Clean the seat area carefully.
- Coat the seat with machinist's dye.
- Fit a  $45^\circ$  cutter [A] to the holder [B] and slide it into the valve guide.
- Press down lightly on the handle [C] and turn it right or left. Grind the seating surface only until it is smooth.

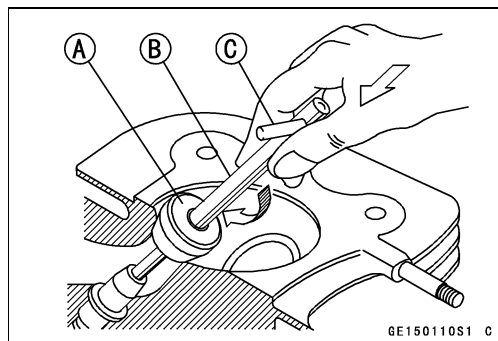

#### CAUTION

**Do not grind the seat too much. Overgrinding will reduce valve clearance by sinking the valve into the head. If the valve sinks too far into the head, it will be impossible to adjust the clearance, and the cylinder head must be replaced.**



## Valve/Valve Guide

- Measure the outside diameter of the seating surface with a vernier calipers.
- ★ If the outside diameter of the seating surface is too small, repeat the 45° grind until the diameter is within the specified range.
- ★ If the outside diameter of the seating surface is too large, make the 32° grind described below.
- ★ If the outside diameter of the seating surface is within the specified range, measure the seat width as described below.
- Grind the seat at a 32° angle until the seat O.D. is within the specified range.
- To make the 32° grind, fit a 32° cutter to the holder, and slide it into the valve guide.
- Turn the holder one turn at a time while pressing down very lightly. Check the seat after each turn.

### CAUTION

**The 32° cutter removes material very quickly. Check the seat outside diameter frequently to prevent overgrinding.**

- After making the 32° grind, return to the seat O.D. measurement step above.
- To measure the seat width, use a vernier calipers to measure the width of the 45° angle portion of the seat at several places around the seat.
- ★ If the seat width is too narrow, repeat the 45° grind until the seat is slightly too wide, and then return to the seat O.D. measurement step above.
- ★ If the seat width is too wide, make the 60° grind described below.
- ★ If the seat width is within the specified range, lap the valve to the seat as described below.
- Grind the seat at a 60° angle until the seat width is within the specified range.
- To make the 60° grind, fit 60° cutter to the holder, and slide it into the valve guide.
- Turn the holder, while pressing down lightly.
- After making the 60° grind, return to the seat width measurement step above.
- Lap the valve to the seat using a lapper, once the seat width and O.D. are within the ranges specified above.
- Put a little coarse grinding compound on the face of the valve in a number of places around the valve head.
- Spin the valve against the seat until the grinding compound produces a smooth, matched surface on both the seat and the valve.
- Repeat the process with fine grinding compound.
- [A] Lapper
- [B] Valve Seat
- [C] Valve
- The seating area should be marked about in the middle of the valve face.
- ★ If the seat area is incorrect place on the valve, be sure to check the valve is the correct part. If it is, it may have been refaced too much replace the valve.
- Be sure to remove all grinding compound before assembly.
- When the engine is assembled, be sure to adjust the valve clearance (see Valve Clearance Adjustment).

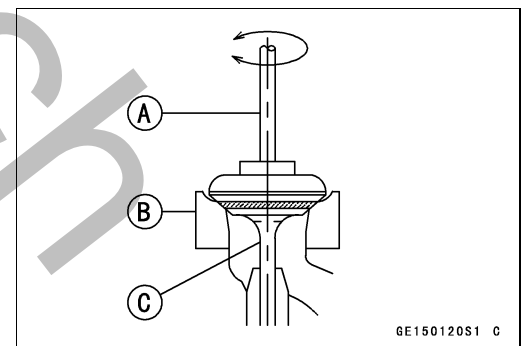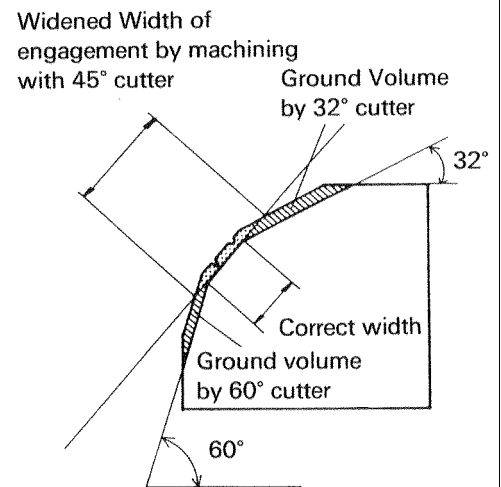

## 4-24 ENGINE TOP END

### Valve/Valve Guide

#### Valve Head Thickness Inspection

- Measure the thickness of valve head.

##### Valve Head Thickness [A]

###### Inlet valve:

**Standard:** 0.85 ~ 1.15 mm


**Service Limit:** 0.5 mm

###### Exhaust valve:

**Standard:** 1.15 ~ 1.45 mm

**Service Limit:** 0.5 mm

- ★ If it is under the service limit, replace the valve.

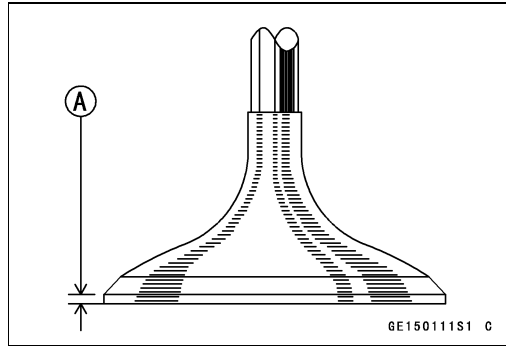

#### Valve Stem Bend Inspection


- Support the valve at both ends of the straight stem portion, and set a dial gauge against the center of the stem.
- Turn the valve and read the variation in the dial gauge [A].

##### Valve Stem Bend

**Standard:** TIR 0.01 mm or less

**Service Limit:** TIR 0.05 mm

- ★ If it is bent over the service limit, replace the valve.

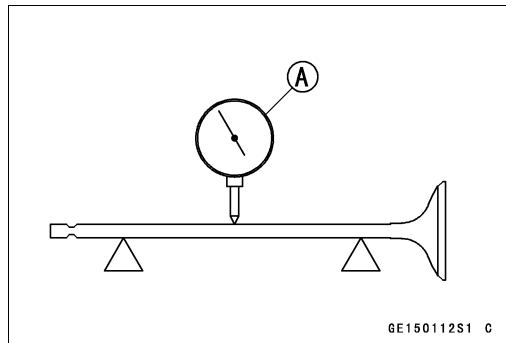

#### Valve Stem Diameter Inspection

- Measure the diameter of the valve stem.

##### Valve Stem Diameter [A]

###### Inlet valve:

**Standard:** 4.475 ~ 4.490 mm


**Service Limit:** 4.46 mm

###### Exhaust valve:

**Standard:** 4.462 ~ 4.472 mm

**Service Limit:** 4.44 mm

- ★ Replace the valve if the stem is worn to less than the service limit.

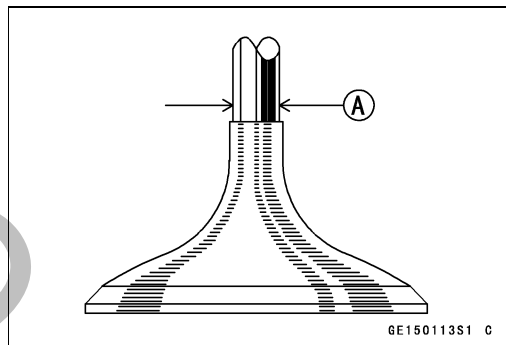

#### Valve Guide Inside Diameter Inspection

If a small bore gauge and micrometer are available, measure the valve guide as follows.


- Measure the inside diameter [A] of the valve guide. Since the guide wears unevenly, measure the diameter at four place up and down the guide.

##### Valve Guide Inside Diameter (Inlet and Exhaust)

**Standard:** 4.500 ~ 4.512 mm

**Service Limit:** 4.55 mm

- ★ If any measurement exceeds the service limit, replace the valve guide.

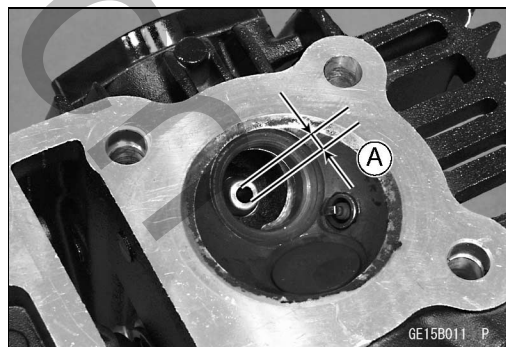



## Valve/Valve Guide

### Valve to Guide Clearance Measurement

If a small bore gauge is not available, inspect the valve guide wear by measuring the valve to valve guide clearance with the wobble method as indicated below.

- Insert a new valve [A] into the valve guide [B] and set a dial gauge against the stem perpendicular to it as close as possible to the cylinder head mating surface.
- Move the stem back and forth [C] to measure valve/valve guide clearance.


### Valve/Valve Guide Clearance (Wobble Method)

	Standard	Service Limit
Exhaust	0.06 ~ 0.11 mm	0.19 mm
Inlet	0.02 ~ 0.07 mm	0.12 mm

- Repeat the measurement in a direction at a right angle to the first.
- ★ If the reading exceeds the service limit, replace the guide.

### NOTE


- The reading is not actual valve/valve guide clearance because the measuring point is above the guide.

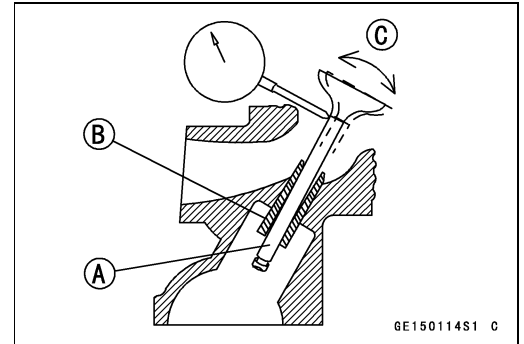

## 4-26 ENGINE TOP END

### Valve/Valve Guide


#### Valve Seat Repair

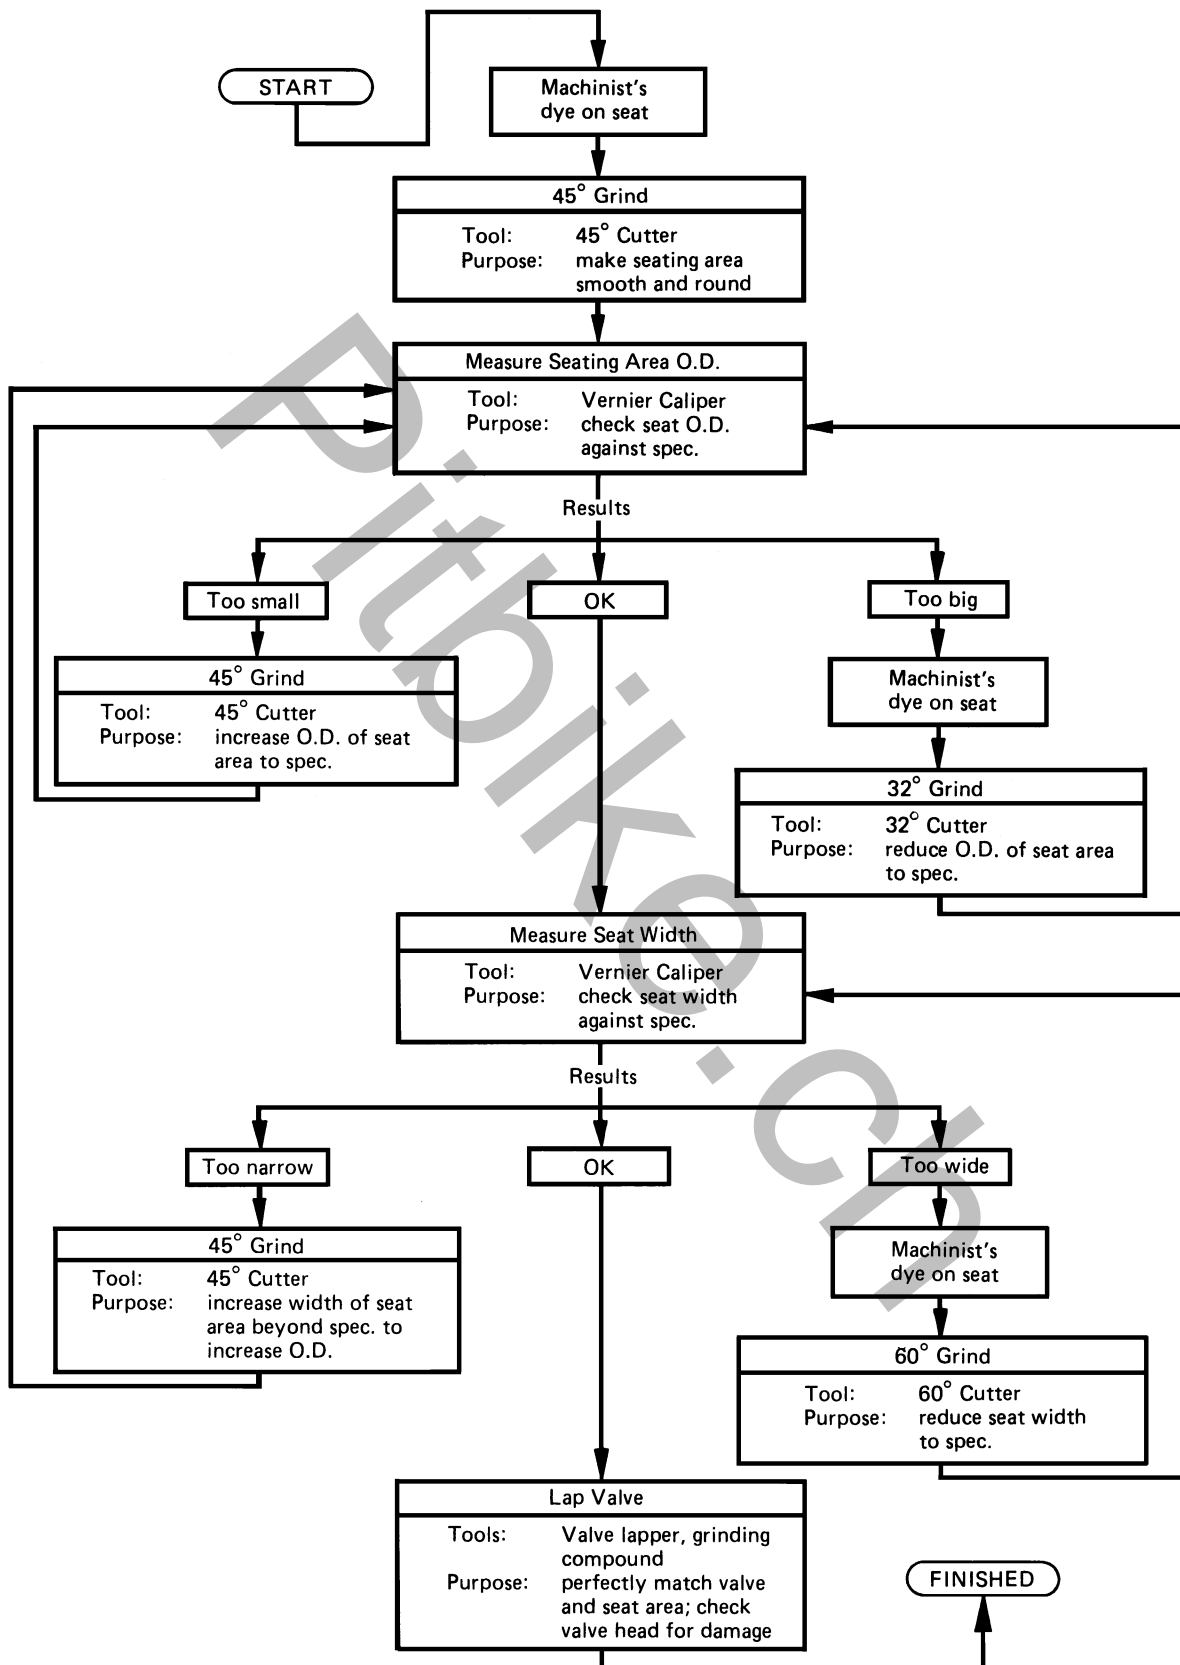

## Cylinder, Piston

### Cylinder Removal


- Removed the cylinder head.
- Take out the cylinder block with lower camshaft chain guide, and remove the gasket. There are knock pins on the cylinder base.
- Wrap a clean cloth [A] around the base of the piston so that no parts or dirt will fall into the crankcase.

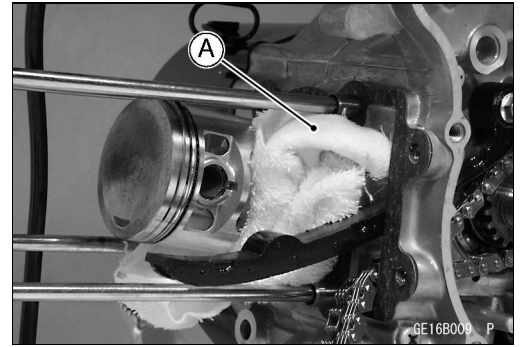


### Cylinder Installation

#### NOTE


- If the cylinder block is replaced with a new one, piston to cylinder clearance must be checked against the specified value.
- Install a new cylinder base gasket [A] and be sure that two knock pins [B] are properly fitted in the crankcase.

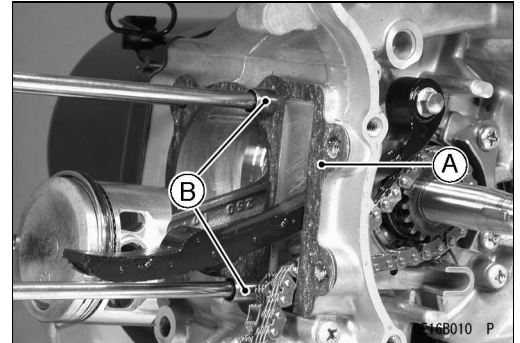

- Pull the camshaft chain taut to avoid kicking it and use a wrench on the crankshaft to set the piston at BDC.
- Position the piston ring opening as follows.
  - Top Ring – Front [A]
  - Second Ring – Rear [B]
  - Upper Steel Rail – About  $30^{\circ} \sim 90^{\circ}$  of angle to the right [C]
  - Expander – Rear [D]
  - Lower Steel Rail – About  $30^{\circ} \sim 90^{\circ}$  of angle to the left [C]
  - Piston [E]

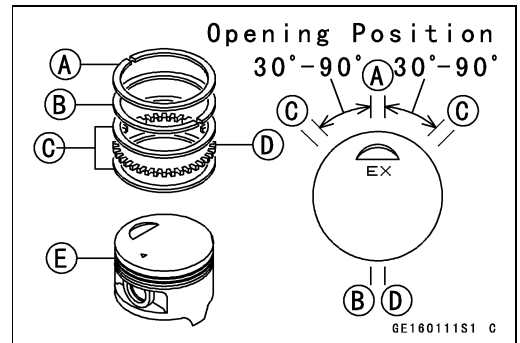


- Apply engine oil to the piston rings and the cylinder inside surface.
- Pull the camshaft chain up through the cylinder and insert a screwdriver to keep the chain from falling back into the engine.
- Place the upper camshaft chain guide inside the cylinder blocks.
- Fit the bottom of the cylinder over the piston rings, pressing in on opposite sides of the rings as necessary. Take care that the rings do not slip out of their proper positions.
- Insert the lower camshaft chain guide [A] all the way down.
- Install the cylinder head.

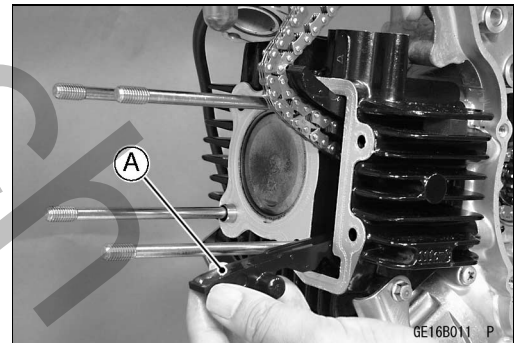

### Piston Removal

- Remove the cylinder.
- Remove:
  - Pliers [A]
  - Snap Ring [B]

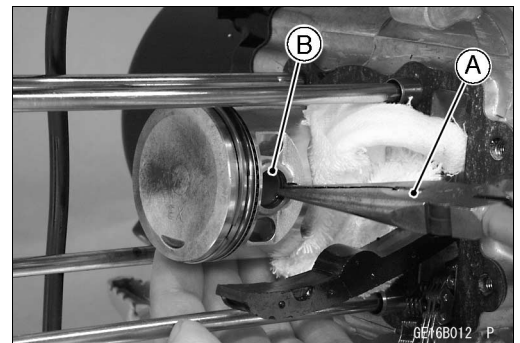


## 4-28 ENGINE TOP END


### Cylinder, Piston

- Remove the piston by pushing its pin pull out the side that the snap ring was removed. Use the piston pin puller assembly [A] if the pin is tight.

**Special Tools - Piston Pin Puller Assembly: 57001-910**

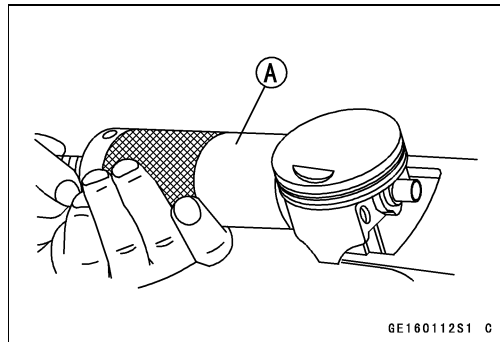



- Remove the piston rings [A]. Carefully spread the ring opening with your thumbs and then push up on the opposite side of the ring to remove it.

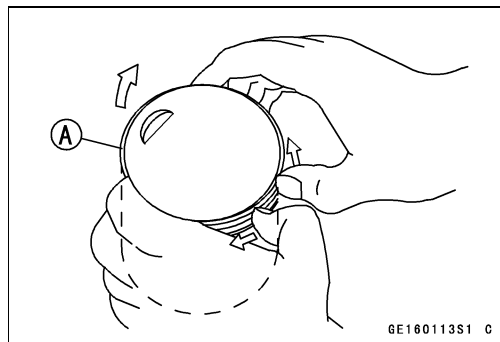

#### Piston Installation


##### NOTE

- The oil ring rails have no "top" or "bottom".
  - Install the oil ring expander [A] in the bottom piston ring groove so that the ends [B] but together, never overlap.
  - Install the oil ring steel rails, one above the expander and one below it.
  - Spread the rail with your thumbs, but only enough to fit the rail over the piston.
  - Release the rail into the bottom piston ring groove.
- 
- With the marked side facing up, install the second ring [A] and top ring [B] in that order.

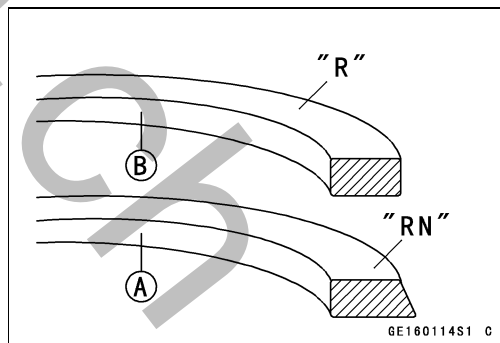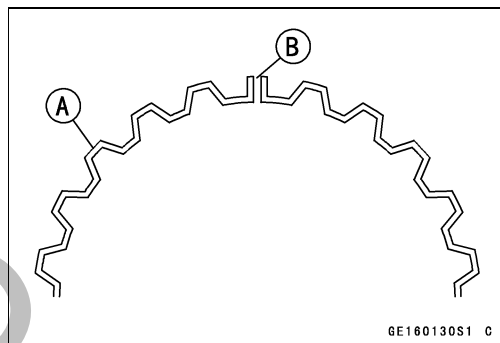

##### NOTE

- If a new piston is used, check piston to cylinder clearance (see *Piston/Cylinder Clearance*), and use new piston rings.
- Install the piston so that the EX mark [A] on the piston toward exhaust side.

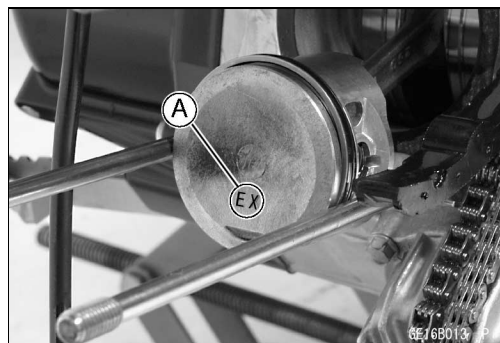


## Cylinder, Piston

- Fit a new piston snap ring into the side of the piston so that the ring opening [A] does not coincide with the slit [B] of the piston pin hole.
- When installing a piston pin snap ring, compress it only enough to install it no more.

### CAUTION

**Do not reuse snap rings, as removal weakens and deforms them. They could fall out and score the cylinder wall.**

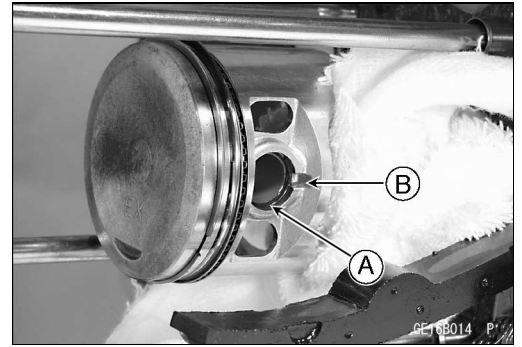

### Cylinder Inside Diameter Measurement

- Since there is a difference in cylinder wear in different directions, take a side to side and a front to back measurement at each of the 3 locations (total of 6 measurements) shown in the figure.
- ★ If any of the cylinder inside diameter measurements exceeds the service limit, the cylinder will have to be bored to oversize and then honed.

#### Cylinder Inside Diameter


**Standard:** 52.997 ~ 53.009 mm and less than 0.01 mm difference between any two measurements

**Service Limit:** 53.10 mm or 0.05 mm difference between any two measurements

10 mm [A]

60 mm [B]

20 mm [C]

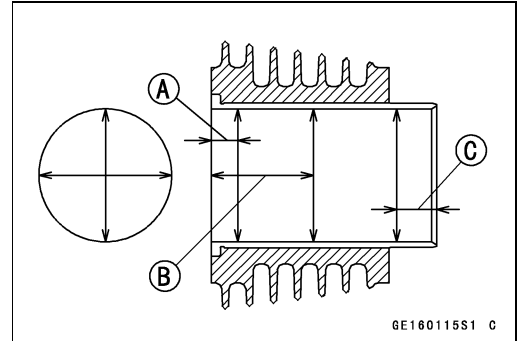

### Piston Outside Diameter Measurement

- Measure the outside diameter [A] of the piston 7.8 mm [B] up from the bottom of the piston at a right angle to the direction of the piston pin.


#### Piston Outside Diameter

**Standard:** 52.981 ~ 52.993 mm

**Service Limit:** 52.83 mm

### NOTE

- Abnormal wear such as a marked diagonal pattern across the piston skirt may mean a bent connecting rod or crankshaft.

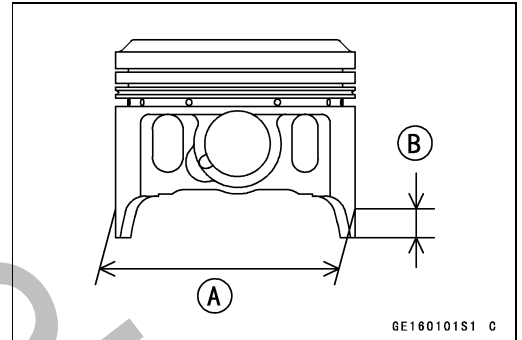

### Piston/Cylinder Clearance

The most accurate way to find the piston clearance is by making separate piston and cylinder diameter measurements and then computing the difference between the two values. Measure the piston diameter as just described, and measure the cylinder diameter at the very bottom of the cylinder.

#### Piston/Cylinder Clearance

**Standard:** 0.010 ~ 0.022 mm

### NOTE

- Whenever the piston or cylinder has been replaced with a new one, the motorcycle must be broken in the same as with a new machine.

## 4-30 ENGINE TOP END

### Cylinder, Piston

#### Boring, Honing

When boring and honing a cylinder, note the following:

- There are two sizes of oversize pistons available. Oversize pistons require oversize rings.

#### Oversize Pistons and Rings

0.25 mm	Oversize
0.5 mm	Oversize
0.75 mm	Oversize
1.0 mm	Oversize


- Before boring a cylinder, first measure the exact diameter of the service data section, oversize piston, and then, according to the standard clearance in the determine the rebore diameter. However, if the amount of boring necessary would make the inside diameter greater than 1.0 mm oversize, the cylinder block must be replaced.
- Cylinder inside diameter must not vary more than 0.01 mm at any point.
- Be wary of measurements taken immediately after boring since the heat affects cylinder diameter.
- In the case of a rebored cylinder and oversize piston, the service limit for the cylinder is the diameter that the cylinder was bored to plus 0.1 mm and the service limit for the piston is the oversize piston original diameter minus 0.20 mm. If the exact figure for the rebored diameter is unknown, it can be roughly determined by measuring the diameter at the base of the cylinder.

#### Piston Ring End Gap

- Place the piston ring [A] inside the cylinder, using the piston to locate the ring squarely in place. Set it close to the bottom of the cylinder, where cylinder wear is low.
- Measure the gap [B] between the ends of the ring with a thickness gauge.


#### Piston Ring End Gap

	Standard:	Service Limit:
Top	0.15 ~ 0.30 mm	0.6 mm
Second	0.30 ~ 0.45 mm	0.8 mm
Oil	0.10 ~ 0.60 mm	0.9 mm

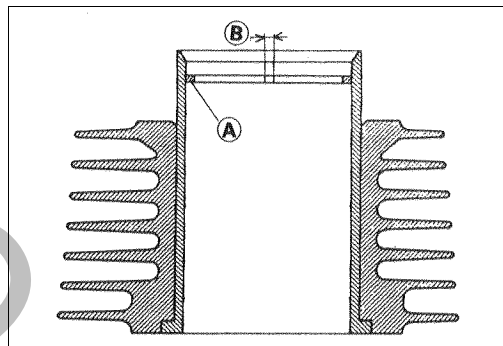

#### Piston Ring, Piston Ring Groove Inspection

- Visually inspects the piston rings and the piston ring grooves.
- ★ If the rings are worn unevenly or damaged, they must be replaced.
- ★ If the piston ring grooves are worn unevenly or damaged, the piston must be replaced and fitted with new rings.
- Check for uneven groove wear by inspecting the ring seating.
- ★ The rings should fit perfectly parallel to the groove surfaces. If not, the piston must be replaced.
- With the piston rings in their grooves, make several measurements with a thickness gauge [A] to determine piston ring groove clearance.

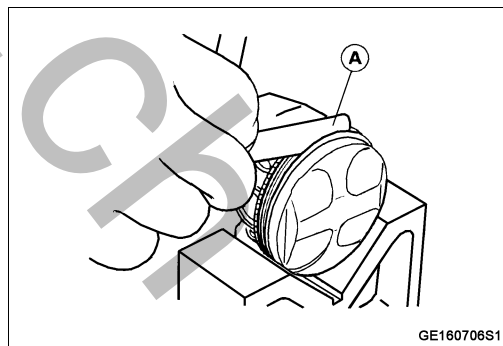

GE160706S1

#### Piston Ring/Groove Clearance

	Standard:	Service Limit:
Top	0.02 ~ 0.06 mm	0.16 mm
Second	0.01 ~ 0.05 mm	0.15 mm

#### Piston Ring Thickness

	Standard:	Service Limit:
Top	0.77 ~ 0.79 mm	0.7 mm
Second	0.77 ~ 0.79 mm	0.7 mm

#### Piston Ring Groove Width

	Standard:	Service Limit:
Top	0.81 ~ 0.83 mm	0.90 mm
Second	0.80 ~ 0.82 mm	0.90 mm

## Cylinder, Piston

- ★ If the clearance exceeds the service limit, remove the piston rings, and measure the thickness of the piston rings and the width of the ring grooves. If the ring has worn down to less than the service limit, replace the ring, if the groove width exceeds the service limit replace the piston.

## NOTE

- These tables apply to oversize pistons and rings as well as standard and pistons and rings.

*Piston, Piston Pin, Connecting Rod Wear Inspection*

- Visually inspect the snap rings [A] are fitted in place.
- ★ If the ring shows weakness or deformation, replace the ring. Also if the pin hole groove shows excessive wear, replace the piston.
- Visually inspect the piston pin hole and connecting rod small end hole.
- ★ If the piston pin hole shows uneven wear, replace the piston.
- ★ If the rod small end hole shows uneven wear, replace the rod, or crankshaft assembly.
- Visually inspect the outer surface of the piston pin [B].
- ★ If the pin shows color change or stepped wear, replace the pin and needle bearing.

*Piston, Piston Pin, Connecting Rod Inspection*

- Measure the inside diameter of both piston pin holes in the piston.

**Piston Pin Hole Inside Diameter [A]**

**Standard:** 13.001 ~ 13.007 mm

**Service Limit:** 13.07 mm

- ★ If either piston pin hole inside diameter exceeds the service limit, replace the piston.
- Measure the diameter of the piston pin.

**Piston Pin Diameter [B]**

**Standard:** 12.995 ~ 13.000 mm

**Service Limit:** 12.96 mm

- ★ If the piston pin diameter is less than the service limit at any point, replace the piston pin.




- ★ Measure the inside diameter[A] of the connecting rod small end.

**Connecting Rod Small End Inside Diameter**

**Standard:** 13.003 ~ 13.014 mm

**Service limit** 13.05 mm

- ★ If the inside diameter exceeds the service limit, replace the connecting rod.

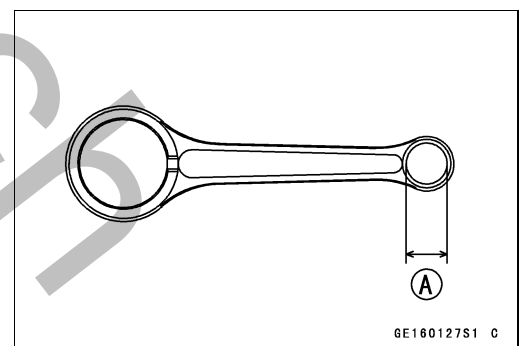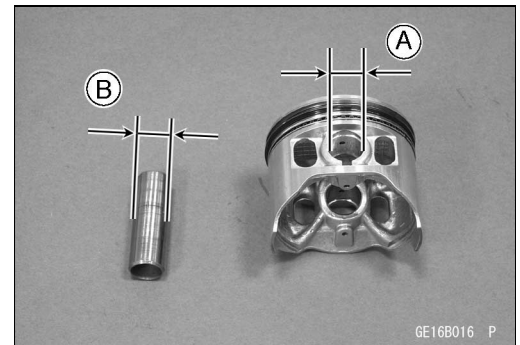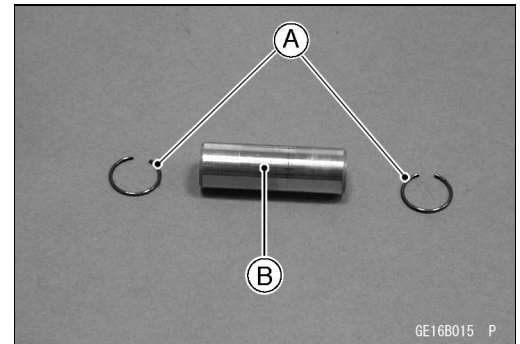


## 4-32 ENGINE TOP END


### Muffler

#### *Muffler Removal*

- Unscrew the muffler mounting bolt [A].

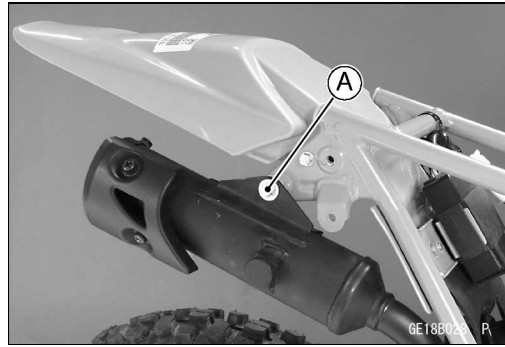

- Remove the exhaust pipe holder nuts [A].

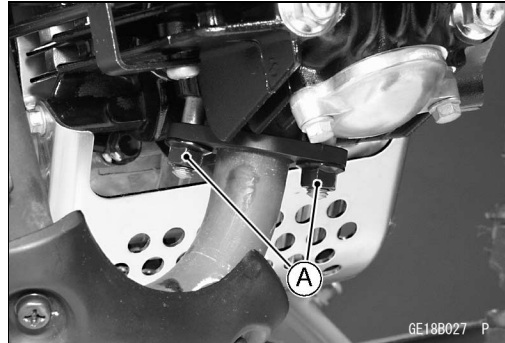

- ★ Pull out the muffler mounting bolt and remove the muffler assembly.

#### *Muffler Installation*

- Check the gasket and replace it if damaged.
- After tightening the mounting bolt and nuts securely, thoroughly warm up the engine, wait until the engine cools down and tighten all mounting bolt and nuts.

#### *Spark Arrester Cleaning*

- Refer to Spark Arrester Cleaning in the Periodic Maintenance Chapter.




# Clutch

## Table of Contents

Exploded View.....	5-2
Specifications.....	5-4
Clutch Cover.....	5-5
Clutch Cover and Oil Screen Removal.....	5-5
Clutch Cover and Oil Screen Installation.....	5-6
Clutches.....	5-7
Clutch Removal.....	5-7
Clutch Installation.....	5-7
Secondary Clutch Disassembly.....	5-9
Secondary Clutch Assembly.....	5-9
Primary Clutch Housing Wear.....	5-10
Primary Clutch Shoe Lining Wear.....	5-10
One-Way Clutch Inspection.....	5-10
Clutch Plate Wear and Damage.....	5-11
Clutch Plate Warp.....	5-11
Secondary Clutch Housing Finger Damage.....	5-11
Secondary Clutch Hub Spline Damage.....	5-11
Secondary Clutch Spring Free Length Measurement.....	5-12
Clutch Adjustment.....	5-12
Kickstarter.....	5-13
Kickstarter Removal.....	5-13
Kickstarter Installation.....	5-13
Kickstarter Assembly.....	5-13
Kickstarter Inspection.....	5-14
External Shift Mechanism.....	5-15
External Shift Mechanism Removal.....	5-15
External Shift Mechanism Installation.....	5-15

## 5-2 CLUTCH

### Exploded View

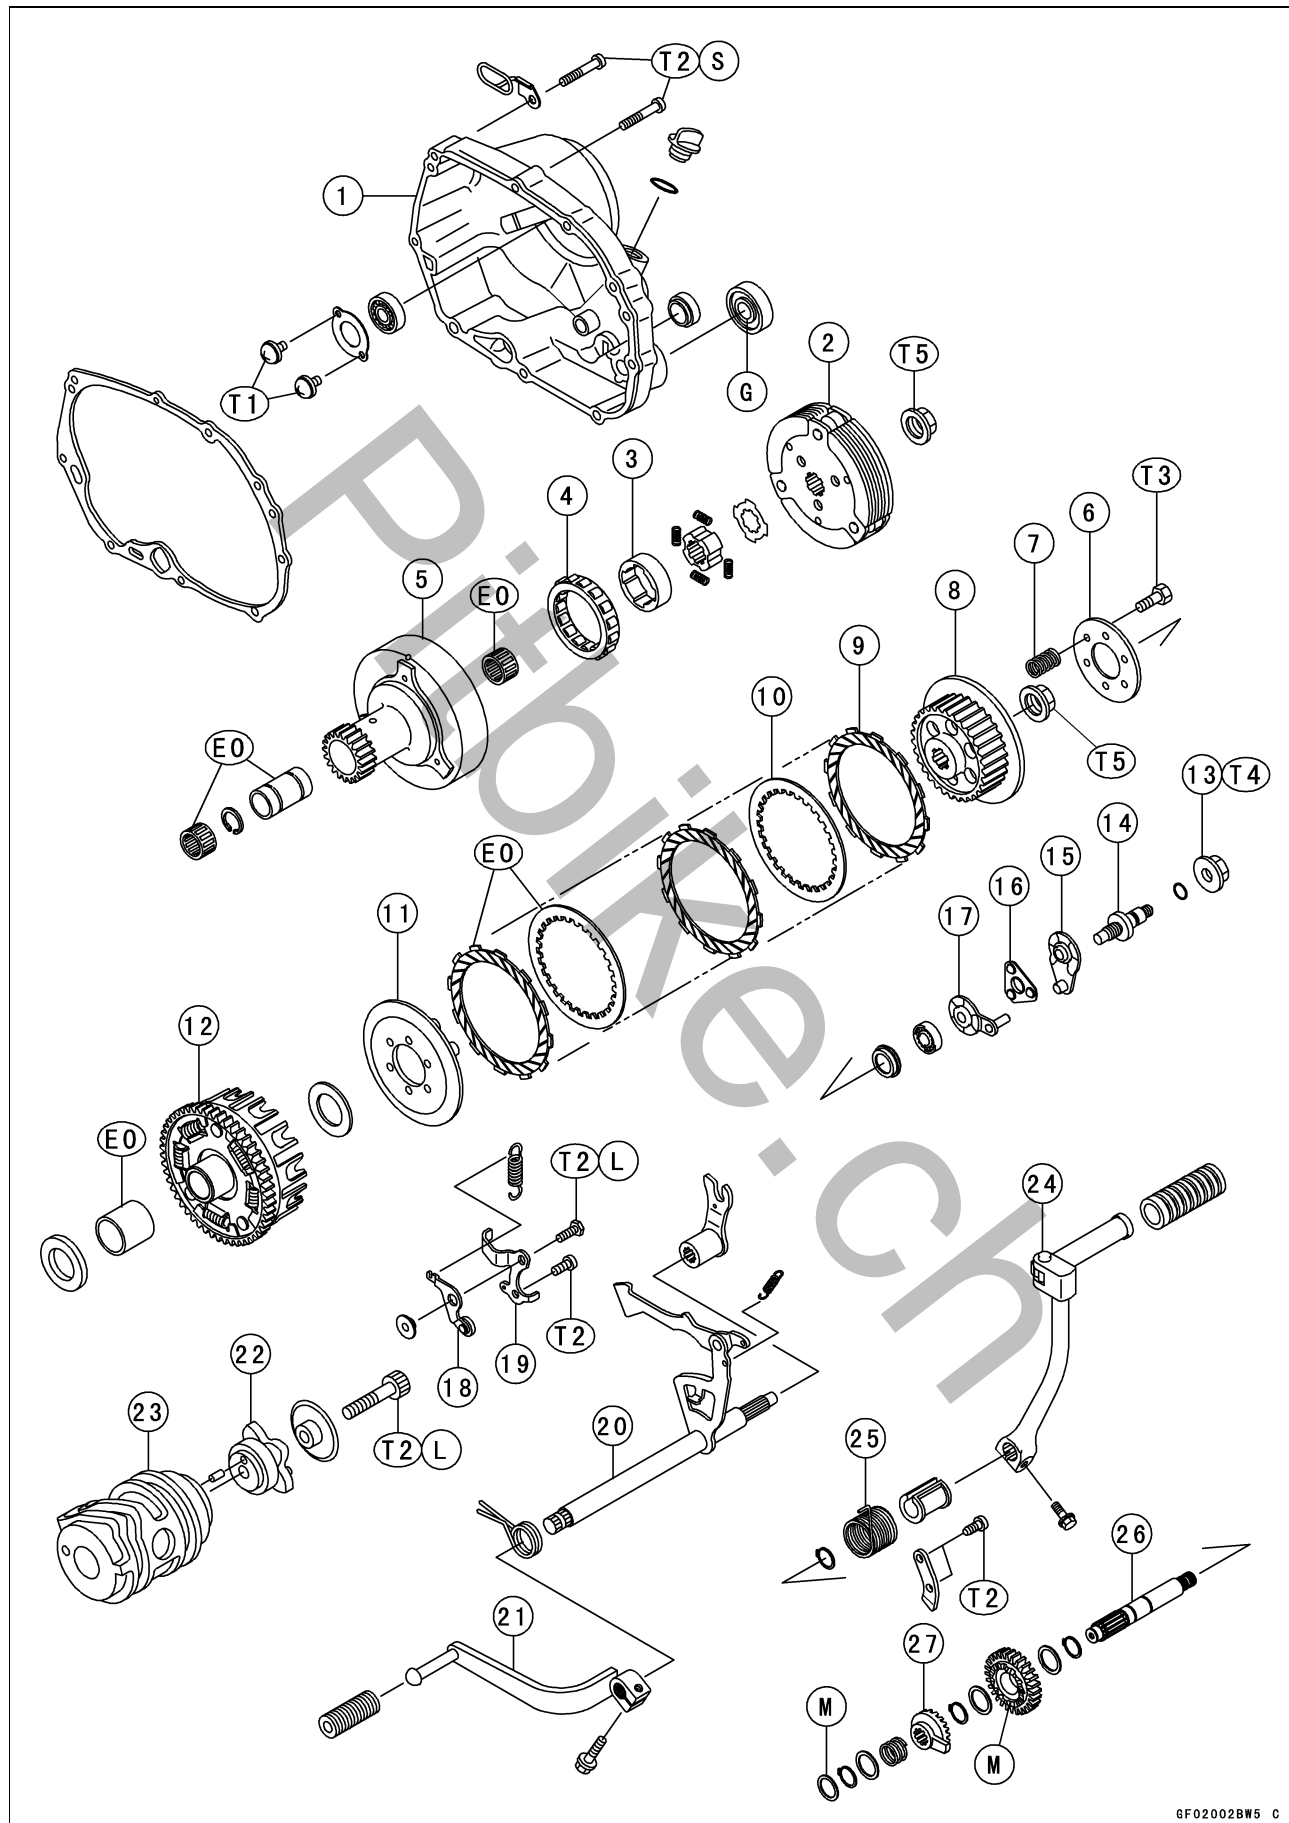

---

**Exploded View**

---

- G: Apply grease.  
L: Apply a non-permanent locking agent  
M: Apply molybdenum disulfide grease.  
EO: Apply engine oil.  
S: Follow the specific tightening sequence.  
T1: 2.9 N·m (0.3 kgf·m, 26 in·lb)  
T2: 5.2 N·m (0.53 kgf·m, 46 in·lb)  
T3: 3.4 N·m (0.35 kgf·m, 30 in·lb)  
T4: 19 N·m (1.9 kgf·m, 14 ft·lb)  
T5: 72 N·m (7.3 kgf·m, 53 ft·lb)
1. Clutch Cover
  2. Primary Clutch Shoe Linings
  3. Outer Race
  4. One-way Clutch
  5. Primary Clutch Housing
  6. Clutch Spring Plate
  7. Clutch Spring
  8. Secondary Clutch Hub
  9. Friction Plate
  10. Steel Plate
  11. Clutch Wheel
  12. Clutch Housing
  13. Clutch Adjusting Screw Locknut
  14. Release Shaft (Adjusting Screw)
  15. Release Plate
  16. Release Ball Assembly
  17. Release Cam
  18. Gear Positioning Lever
  19. Gear Positioning Plate
  20. Shift Shaft
  21. Shift Pedal
  22. Shift Drum Can
  23. Shift Drum
  24. Kick Pedal
  25. Return Spring
  26. Kick Shaft
  27. Ratchet

## 5-4 CLUTCH

### Specifications


Item	Standard	Service Limit
<b>Primary Clutch:</b>		
Primary clutch housing inside diameter	104.0 ~ 104.2 mm	104.5 mm
Primary clutch shoe groove depth	1.0 mm	0.5 mm
<b>Secondary Clutch:</b>		
Friction plate thickness	3.1 ~ 3.3 mm	2.9 mm
Friction plate warp	0.2 mm or less	0.3 mm
Steel plate warp	0.15 mm or less	0.3 mm
Clutch spring free length	24.0 mm	23.0 mm
<b>Kick Shaft:</b>		
Kick shaft diameter	15.957 ~ 15.984 mm	15.93 mm
Kick gear inside diameter	16.000 ~ 16.018 mm	16.04 mm

Special Tools - Primary Clutch Holder: 57001-1507  
Clutch Holder: 57001-1508


## Clutch Cover

### Clutch Cover and Oil Screen Removal



- Drain the engine oil (see Engine Lubrication System).
- Remove:
  - Kick Pedal [A]
  - Footpeg [B]
  - Engine Guard [C]
  - Brake Pedal (hanging) [D]

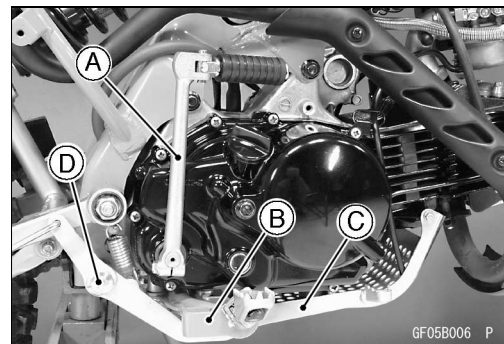


- Clutch Cover Screws [A]
- Pull out the clutch cover [B].

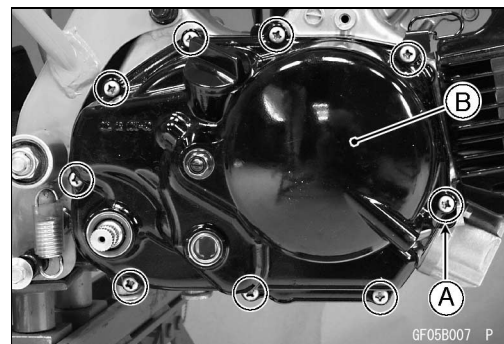

- Unscrew the clutch adjusting screw locknut [A].
- The release plate [B] and the release shaft (adjusting screw) [C] come out with the cover.

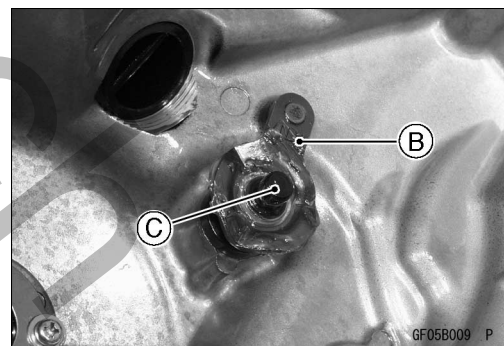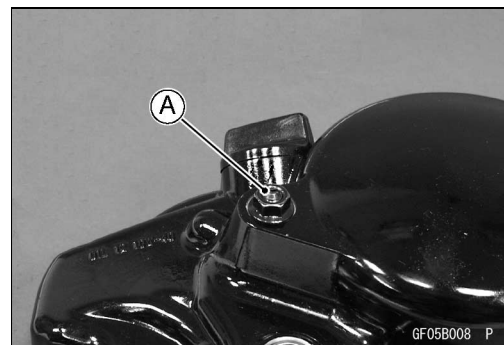

- Pull out the oil screen [A].

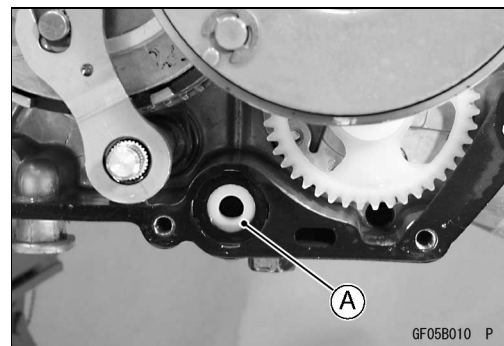


## 5-6 CLUTCH


### Clutch Cover

#### Clutch Cover and Oil Screen Installation


- Clean any metal particles and other dirt out of the oil screen.
- Using compressed air, blow out any particles which may obstruct the oil passage [A] in the clutch cover.

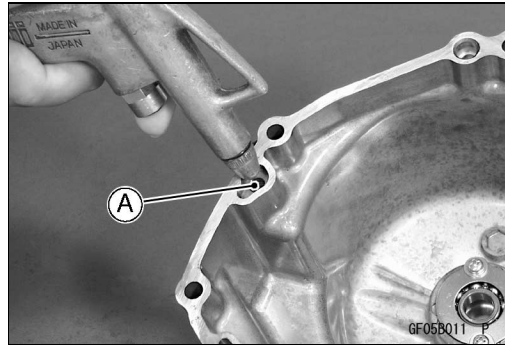

- Check that the ball bearing is in place. The shield side of the bearing must be faced to the clutch cover.
- Apply grease to the O-ring and install it.
- Turn in the release plate [A] into the release shaft [B] fully but no tightly and then back it out the three turns, and insert it into the hole [C] of clutch cover securely.
- Tighten the locknut into the release shaft from the opposite side.

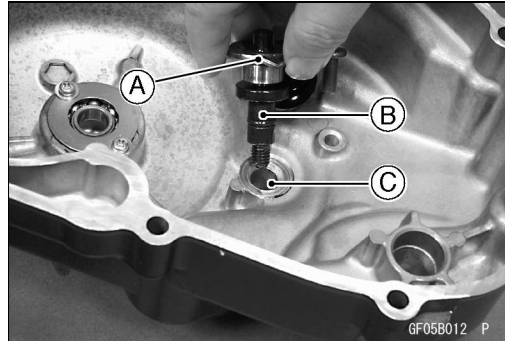


- Apply grease to the kick shaft oil seal lips.
- Check that the two dowel pins are in place on the crankcase.
- Install the clutch cover. Be sure that the release cam [A], and release ball assembly [B] are not falling down.

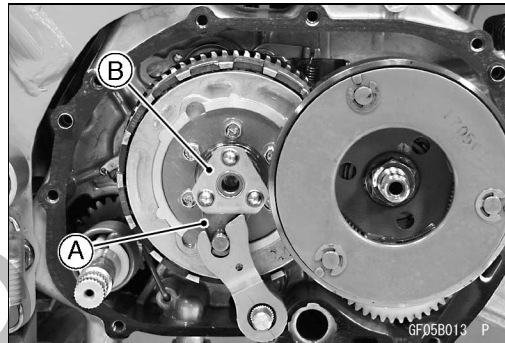


- Tighten the clutch cover screws following the tightening sequence.

**Torque - Clutch Cover Screw: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

- Adjust the clutch.

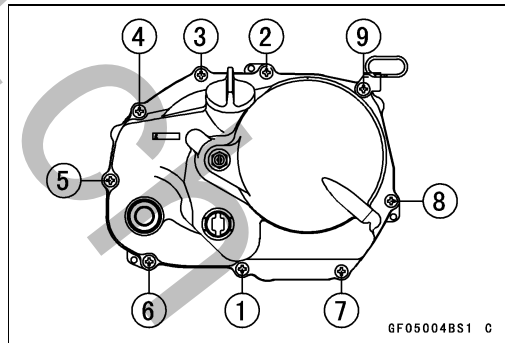


- Install the kick pedal [A] to the kick shaft [B], as shown.

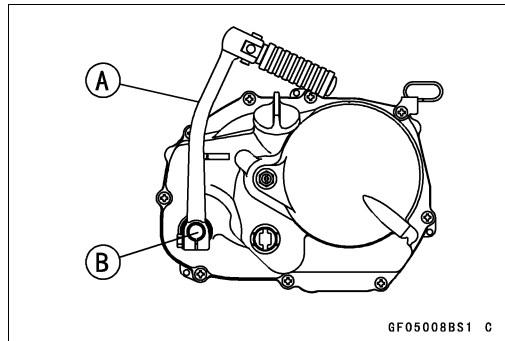

## Clutches

### Clutch Removal


- Remove the clutch cover (see this chapter).
- Remove:
  - Release Ball Assembly [A]
  - Release Cam [B]
  - Ball Bearing [C]
  - Ball Bearing Holder [D]

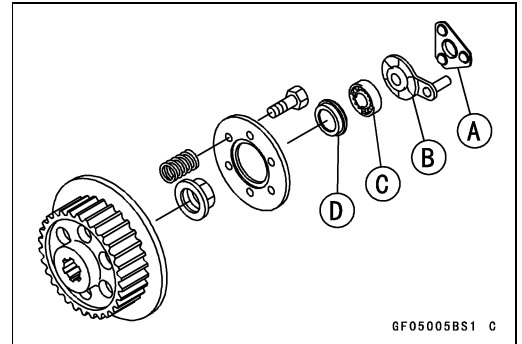

- Remove the primary clutch hub nut [A], while holding the primary clutch steady with the primary clutch holder [B].


**Special Tools - Primary Clutch Holder: 57001-1507**

- Pull out the primary clutch hub [C].

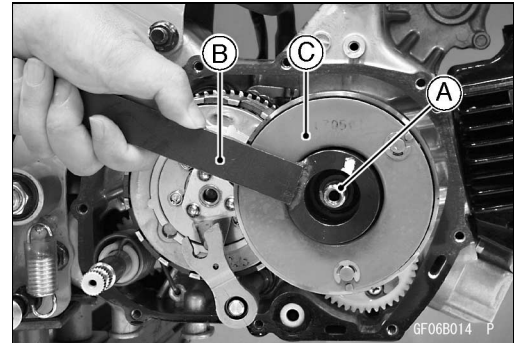


- Remove the secondary clutch hub nut [A], while holding the secondary clutch steady with the clutch holder [B].
- Search the positions of three notches of clutch holder, which can be aligned.
- Remove two clutch spring bolts [C] inserted into the two holes of clutch holder when searching.
- Set a clutch holder.

**Special Tools - Clutch Holder: 57001-1508**

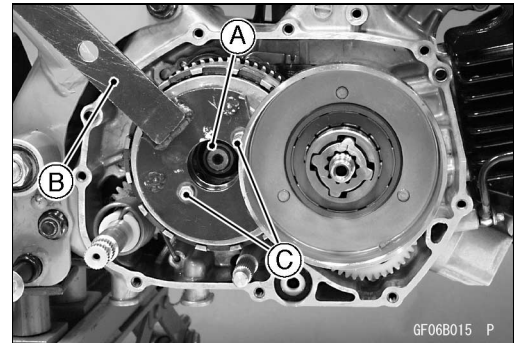

- Remove the primary clutch [A] and secondary clutch [B] together.
- Do not remove the one-way clutch from the primary clutch.
- Remove the spacer from the drive shaft.

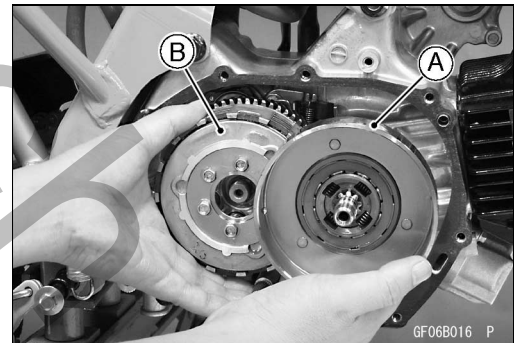


### Clutch Installation

- Apply engine oil to the clutch sleeves, drive shaft, and crankshaft.
- Install the spacer [A] to the drive shaft.
- Insert the secondary clutch.
- Be sure to install the spacer [B] between secondary clutch housing and clutch wheel.
- Hard to install the secondary clutch, turn the drive shaft while pushing the clutch.
- Tighten the secondary clutch nut, while holding the secondary clutch holder.

**Torque - Secondary Clutch Hub Nut: 72 N·m (7.3 kgf·m, 53 ft·lb)**

**Special Tools - Clutch Holder: 57001-1508**

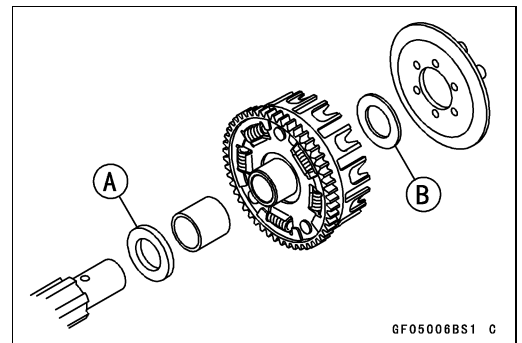


## 5-8 CLUTCH

### Clutches


- Install:

- Needle Bearing [A]
- Primary Clutch Housing [B]
- Needle Bearing [C]
- Primary Clutch Sleeve [D]

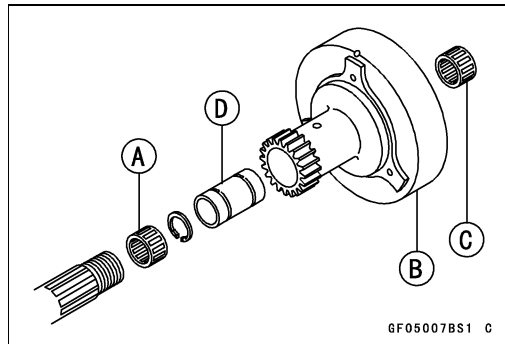


★ If the one-way clutch and race dropped from the primary clutch housing, install it as follows.

- Put the one-way clutch [A] in the clutch housing halfway with the rotation mark [B] facing out.
- Fit the race [C] into the one-way clutch and push them together in the clutch housing.

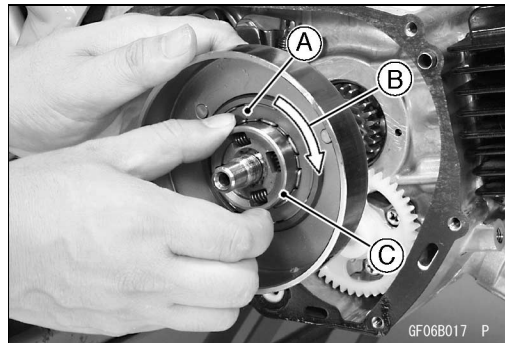

- Install the plate with the line mark [A] facing out, noting the proper position.

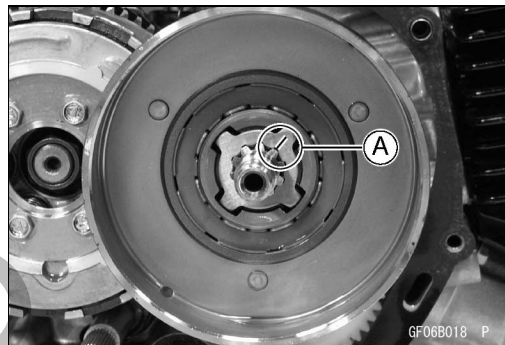


- Install the clutch hub.
- Tighten the primary clutch nut while holding the primary clutch steady with the primary clutch holder.


**Special Tools - Primary Clutch Holder: 57001-1507**

**Torque - Primary Clutch Hub Nut: 72 N·m (7.3 kgf·m, 53 ft·lb)**

- Install the ball bearing holder [A] and ball bearing [B].
- Install the release lever [C] to the shift shaft, with shift shaft line [D] aligning to release lever line [E].

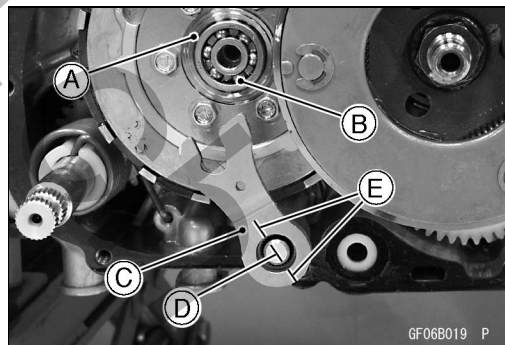

- Apply grease to the release cam and release ball assembly.
- Install the release cam [A] and release ball assembly [B].
- Install the clutch cover.
- Adjust the clutch.

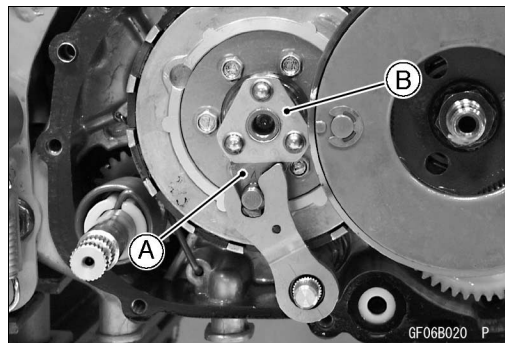





## Clutches

### Secondary Clutch Disassembly

- Remove the secondary clutch.
- Unscrew the clutch spring bolts [A] and take off the spring plate [B] and springs [C].

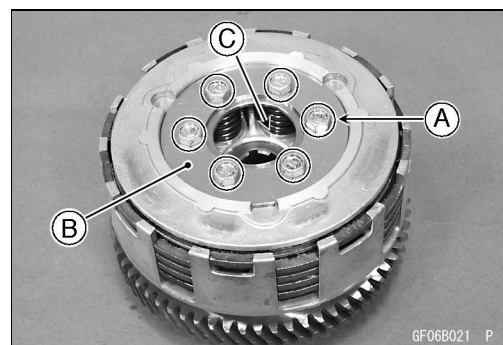


- Remove the clutch hub [A] and clutch wheel [B].
- Remove the secondary clutch plate [C].

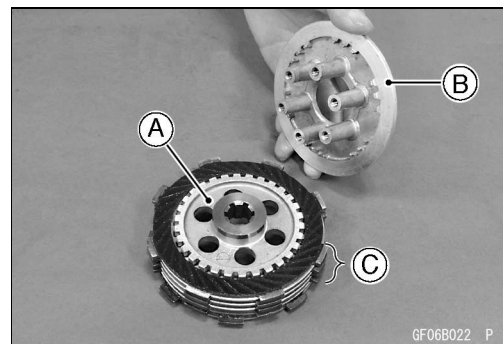

### Secondary Clutch Assembly


- Install the friction plates [A] and steel plates [B] on the secondary clutch hub [C], starting with a friction plate and alternating them.
- The grooves [D] on the friction plate surfaces are cut tangentially and radially. Install the friction plates so that the grooves run toward the center in the direction of the clutch housing rotation (counterclockwise viewed from the engine right side).

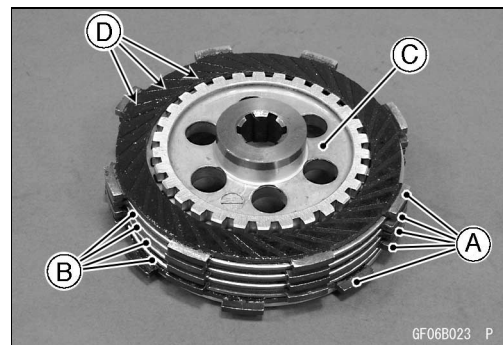

### CAUTION


If new dry steel plates and friction plates are installed, apply engine oil to the surfaces of each plate to avoid clutch plate seizure.

- Install the clutch wheel on the clutch hub.
- Install the clutch spring plate [A] with the springs and spring bolts temporarily and fit the clutch hub and plate assembly into the clutch housing [B].

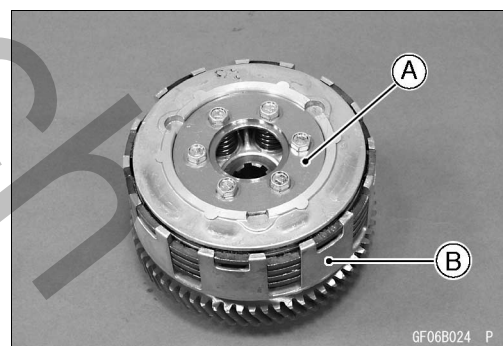

- Install the last friction plate [A] fitting the tangs in the grooves on the housing as shown.
- Tighten the clutch spring bolts.

**Torque - Secondary Clutch Spring Bolts: 3.4 N·m (0.35 kgf·m, 30 in·lb)**

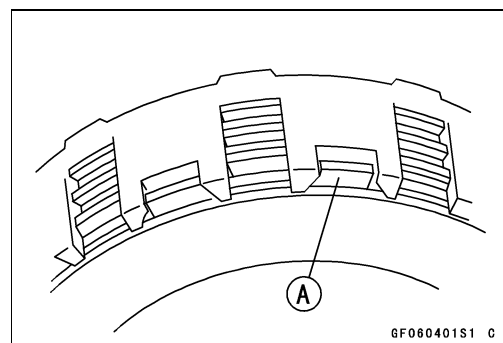

## 5-10 CLUTCH


### Clutches

#### Primary Clutch Housing Wear

- Measure the inside diameter [A] of the clutch housing sliding surface.
- Use a vernier calipers and measure at several points as shown.
- ★ If any measurement is greater than the service limit, replace the primary clutch housing.


##### Primary Clutch Housing Inside Diameter

Standard:	104.0 ~ 104.2 mm
Service Limit:	104.5 mm

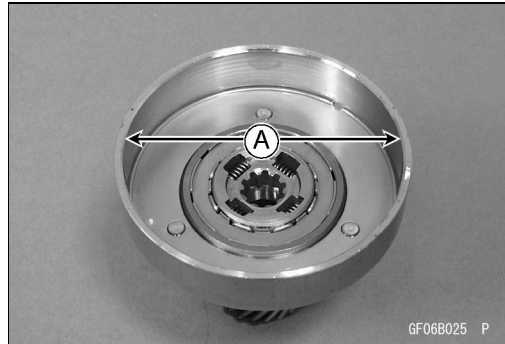

#### Primary Clutch Shoe Lining Wear


- Remove the primary clutch hub (see Clutch Removal).
- Visually inspect the primary clutch shoe linings [A] for uneven wear, discoloration, missing friction material, cracks or other damage.
- ★ If any of the linings are damaged, replace the primary clutch hub.

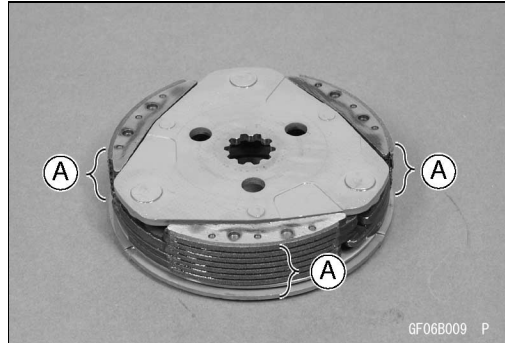

- Measure the groove depth [A].
- Use a depth gauge, and measure at several points as shown.
- ★ If any measurement is less than the service limit, replace the primary clutch hub.


##### Primary Clutch Shoe Groove Depth

Standard:	1.0 mm
Service Limit:	0.5 mm

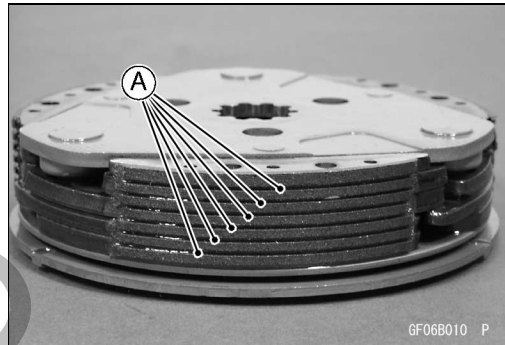


#### One-Way Clutch Inspection

- Remove the clutch cover.
- Turn the primary clutch housing by hand. When view from the right side of the engine, the primary clutch housing should turn counter-clockwise freely [A] but should not turn clockwise.

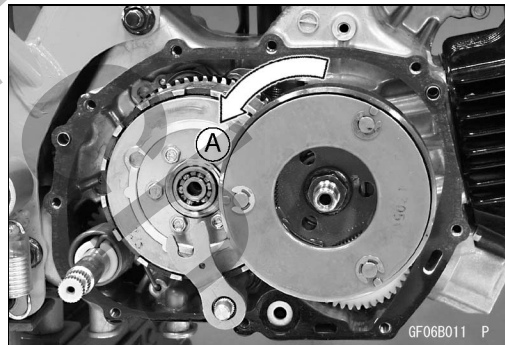


- ★ If the one-way clutch does not operate as it should or if it makes noise, go to the next steps.
- Remove the primary clutch.
- Check that the one-way clutch is installed so that the rotation mark faces out.
- Visually inspect the one-way clutch [A] and the outer race [B] in the primary clutch housing.
- ★ If there is any worn or damaged part, replace it.

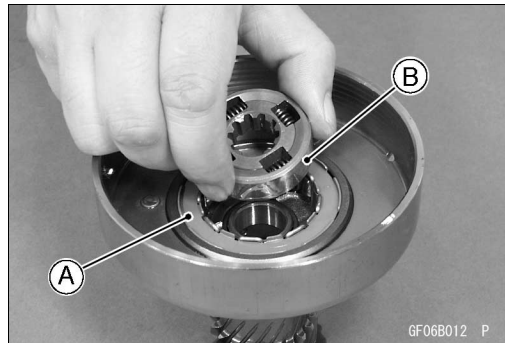

## Clutches

- Check that the rollers [A] in the one-way clutch is installed as shown when viewed from the right side of the engine.

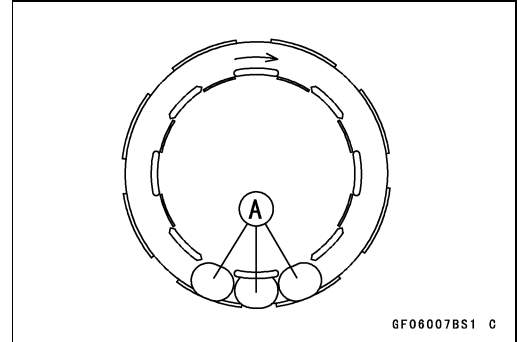

### Clutch Plate Wear and Damage


- Visually inspect the friction and steel plates for uneven wear, discoloration, missing friction material, cracks, or other damage.
- ★ If any plates show signs of damaged, replace the friction and steel plates as a set.
- Measure the thickness of the friction plates [A] at several points.

#### Friction Plate Thickness

**Standard:** 3.1 ~ 3.3 mm

**Service Limit:** 2.9 mm

- ★ If any of the measurement is less than the service limit, replace the plates as a set.

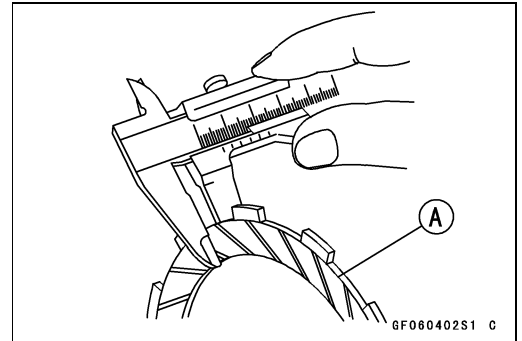

### Clutch Plate Warp


- Place each friction plate or steel plate [B] on a surface plate [A] and measure the gap between the surface plate and each plate with a thickness gauge [C]. The gap is the amount of friction and steel plate warp.
- ★ If any of the clutch plate is warped beyond the service limit, replace the plate with a new one.

#### Friction Plate and steel Plate Warp

**Standard:** 0.15 mm or less (Steel Plate)


0.2 mm or less (Friction Plate)

**Service Limit:** 0.3 mm

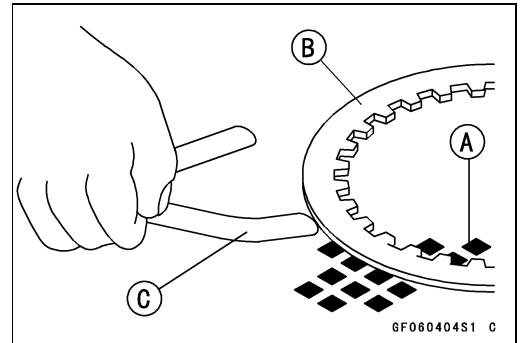


### Secondary Clutch Housing Finger Damage

- Visually inspect the clutch housing finger [A] where the friction plate tangs [B] hit them.
- ★ If they are badly worn or if there are groove cuts where the tangs hit, replace the housing. Also, replace the friction plates if their tangs are damaged.

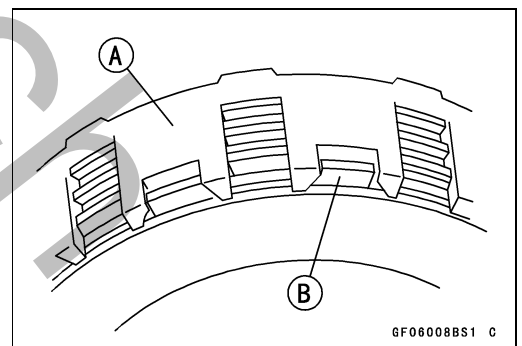

### Secondary Clutch Hub Spline Damage

- Visually inspect where the teeth on the steel plates wear against the clutch hub splines.
- ★ If there are notches worn into the clutch hub splines [A], replace the clutch hub. Also, replace the steel plates if their teeth are damaged.

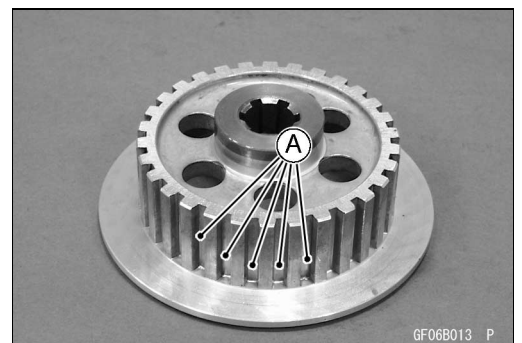

## 5-12 CLUTCH


### Clutches

#### *Secondary Clutch Spring Free Length Measurement*

- Measure the spring free length [A].
- ★ If measurement is less than the service limit, replace it.

#### **Clutch Spring Free Length**

<b>Standard:</b>	<b>24.0 mm</b>
<b>Service Limit:</b>	<b>23.0 mm</b>

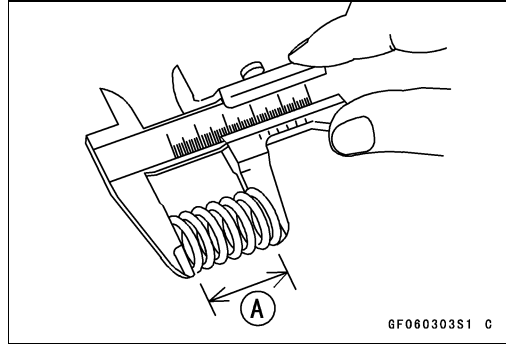


#### *Clutch Adjustment*

- Refer to Clutch Adjustment in the Periodic Maintenance Chapter.

## Kickstarter


### Kickstarter Removal

- Remove the clutch cover.
- Remove the return spring [A] with pliers.
- Remove:  
    Spring Guide [B]
- Remove the kick shaft assembly [C], twisting it counterclockwise.
- There is a thrust washer between the kick shaft end and the crankcase.

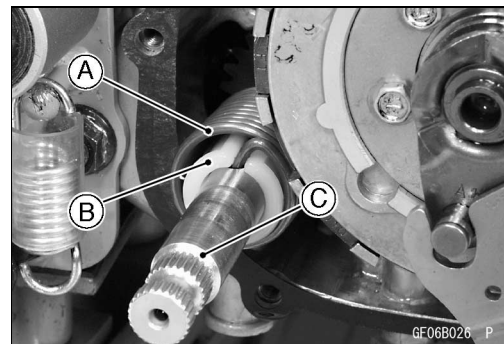


### Kickstarter Installation

- Apply molybdenum disulfide grease to the thrust washer.
- Put the thrust washer [A] on the kick shaft end, and fit the kick shaft assembly in the crankcase.
- Fit the return spring end into the kick shaft, turn the spring clockwise and insert the other end of the spring into the crankcase.
- Install the plastic spring guide.
- Install the clutch cover.

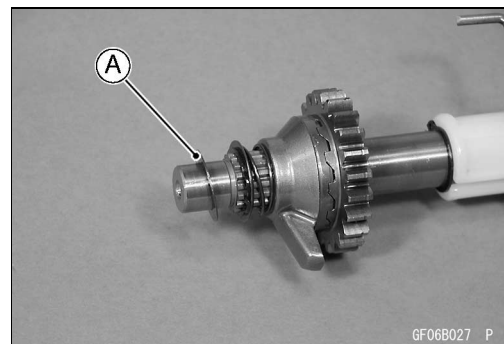

### Kickstarter Assembly

- Apply a thin coat of molybdenum disulfide grease [A] to the ratchet teeth and the kick gear inside.  
    Ratchet [B]  
    Kick Gear [C]  
    Kick Shaft [D]  
    Spring Guide [E]  
    Return Spring [F]

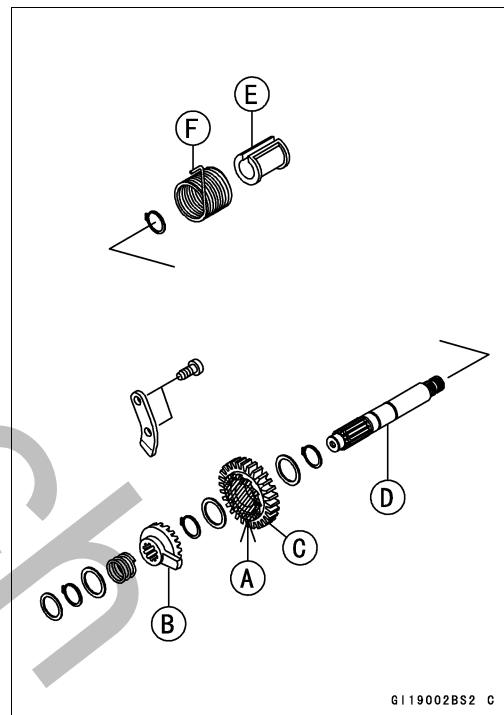


Replace the circlips that were removed with new ones.

- Align the ratchet punch mark [A] with the punch mark [B] on the kick shaft.

### CAUTION

Misalignment of the ratchet changes the kick spring preload. Light preload could cause mechanism noise and heavy preload could weaken or break the spring.

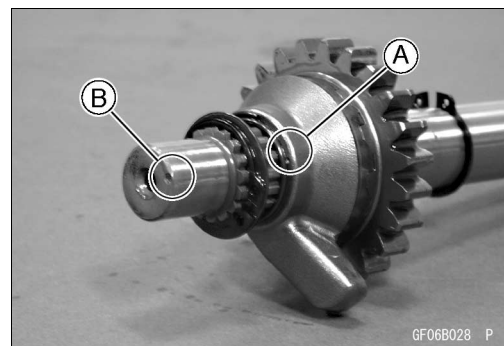


## 5-14 CLUTCH

### Kickstarter

#### *Kickstarter Inspection*


- Visually inspect the parts and portion listed below.
  - Kick shaft return spring [A]
  - Ratchet gear spring [B]
  - Ratchet portion [C] of the kick gear [D] and ratchet gear [E]
- ★ If there is any kind of damage, replace the damaged part.

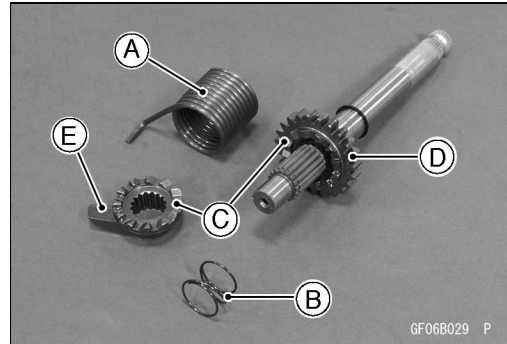

- Measure the kick shaft diameter [A] where the kick gear fits.
- ★ If it is under the service limit, replace the shaft.
- Measure the inside diameter [B] of the kick gear.
- ★ If it exceeds the service limit, replace the gear.

#### **Kick Shaft, Kick Gear Diameter**




Kick Shaft	Standard:	15.957 ~ 15.984 mm
	Service Limit:	15.93 mm
Kick Gear	Standard:	16.000 ~ 16.018 mm
	Service Limit:	16.04 mm

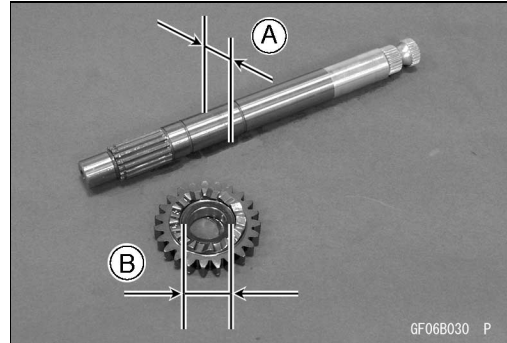

## External Shift Mechanism

### External Shift Mechanism Removal

- Remove:
  - Clutch Cover
  - Primary Clutch
  - Secondary Clutch
  - Shift Pedal Clamp Bolt [A]
  - Shift Pedal [B]
- Move the shift mechanism arm out of its position on the end of the shift drum and pull out the shift shaft [A].
- Remove the screw [A] and pivot bolt [B].
- Remove the gear positioning plate [C], gear positioning lever [D] and its spring [E] as a set.

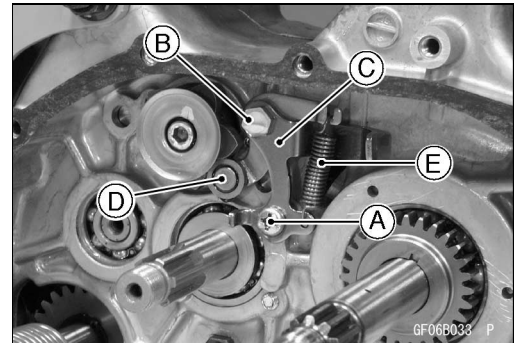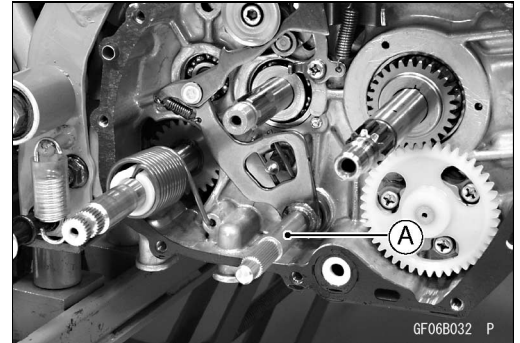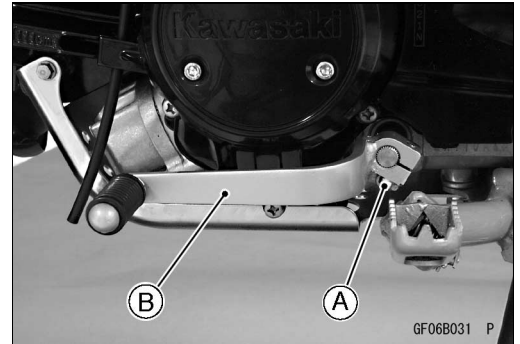

### External Shift Mechanism Installation

- Apply non-locking agent to the lever pivot bolt.
- Install the gear positioning lever, plate and spring.
- Check that the return spring pin [A] is not loose.
- Check that the return spring [B] and shift arm spring [C] are properly fitted on the mechanism.



**Torque - Shift Drum Positioning Lever Pivot Bolt: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

**Shift Drum Position Plate Screw: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

- Apply high-temperature grease to the oil seal lips.
- Install the shift shaft.
- Install the removed parts.

**Torque - Return Spring Pin: 22 N·m (2.2 kgf·m, 16 ft·lb)**

- Install the shift pedal [A] to the shift shaft so that the pedal upper surface [B] is level with the step upper surface [C].

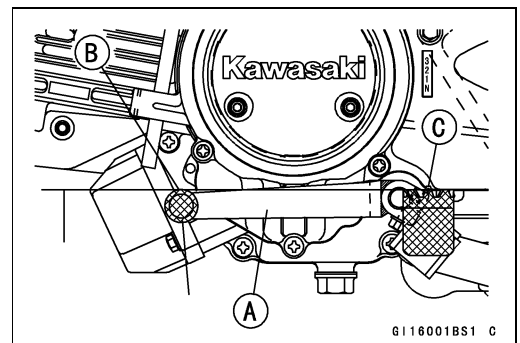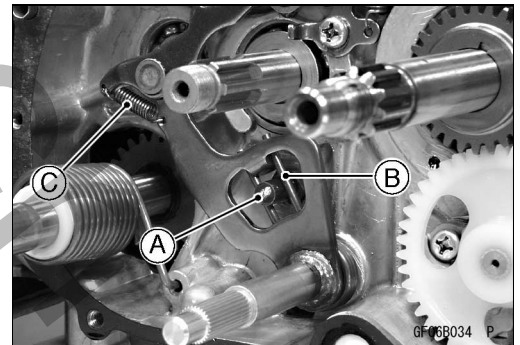

Pittbike.ch




# Engine Lubrication System

## Table of Contents

Exploded View.....	6-2
Specifications.....	6-4
Engine Oil Flow Chart.....	6-5
Engine Oil.....	6-6
Oil Level Inspection.....	6-6
Oil Changing.....	6-6
Oil Filter Element/Oil Screen.....	6-7
Oil Filter Element Change.....	6-7
Oil Screen Cleaning.....	6-7
Engine Oil Pump.....	6-8
Engine Oil Pump Removal.....	6-8
Engine Oil Pump Installation.....	6-8
Engine Oil Pump Inspection.....	6-8
Oil Pipe.....	6-9
Oil Pipe Removal.....	6-9
Oil Pipe Installation.....	6-9

### Exploded View



### Exploded View

---

T1: 5.2 N·m (0.53 kgf·m, 46 in·lb)

T2: 15 N·m (1.5 kgf·m, 11 ft·lb)

T3: 29 N·m (3.0 kgf·m, 21 ft·lb)

G: Apply grease.

R: Replacement parts

1. Oil Pump
2. Oil Screen
3. Oil Pipe
4. Copper Washer
5. Crankcase Breather Tube
6. Oil Filter
7. Drain Plug


Pitbike.com

# 6-4 ENGINE LUBRICATION SYSTEM

## Specifications

Item	Standard	Service Limit
Engine Oil:		
Type:	API SE, SF or SG API SH or SJ with JASO MA	---
Viscosity:	SAE 10W-40	---
Capacity:		
(When engine is completely dry)	1.1 L	---
(When filter is removed)	1.0 L	---
(When filter is not removed)	0.9 L	---
Level	Between upper and lower level lines	---

## Engine Oil Flow Chart

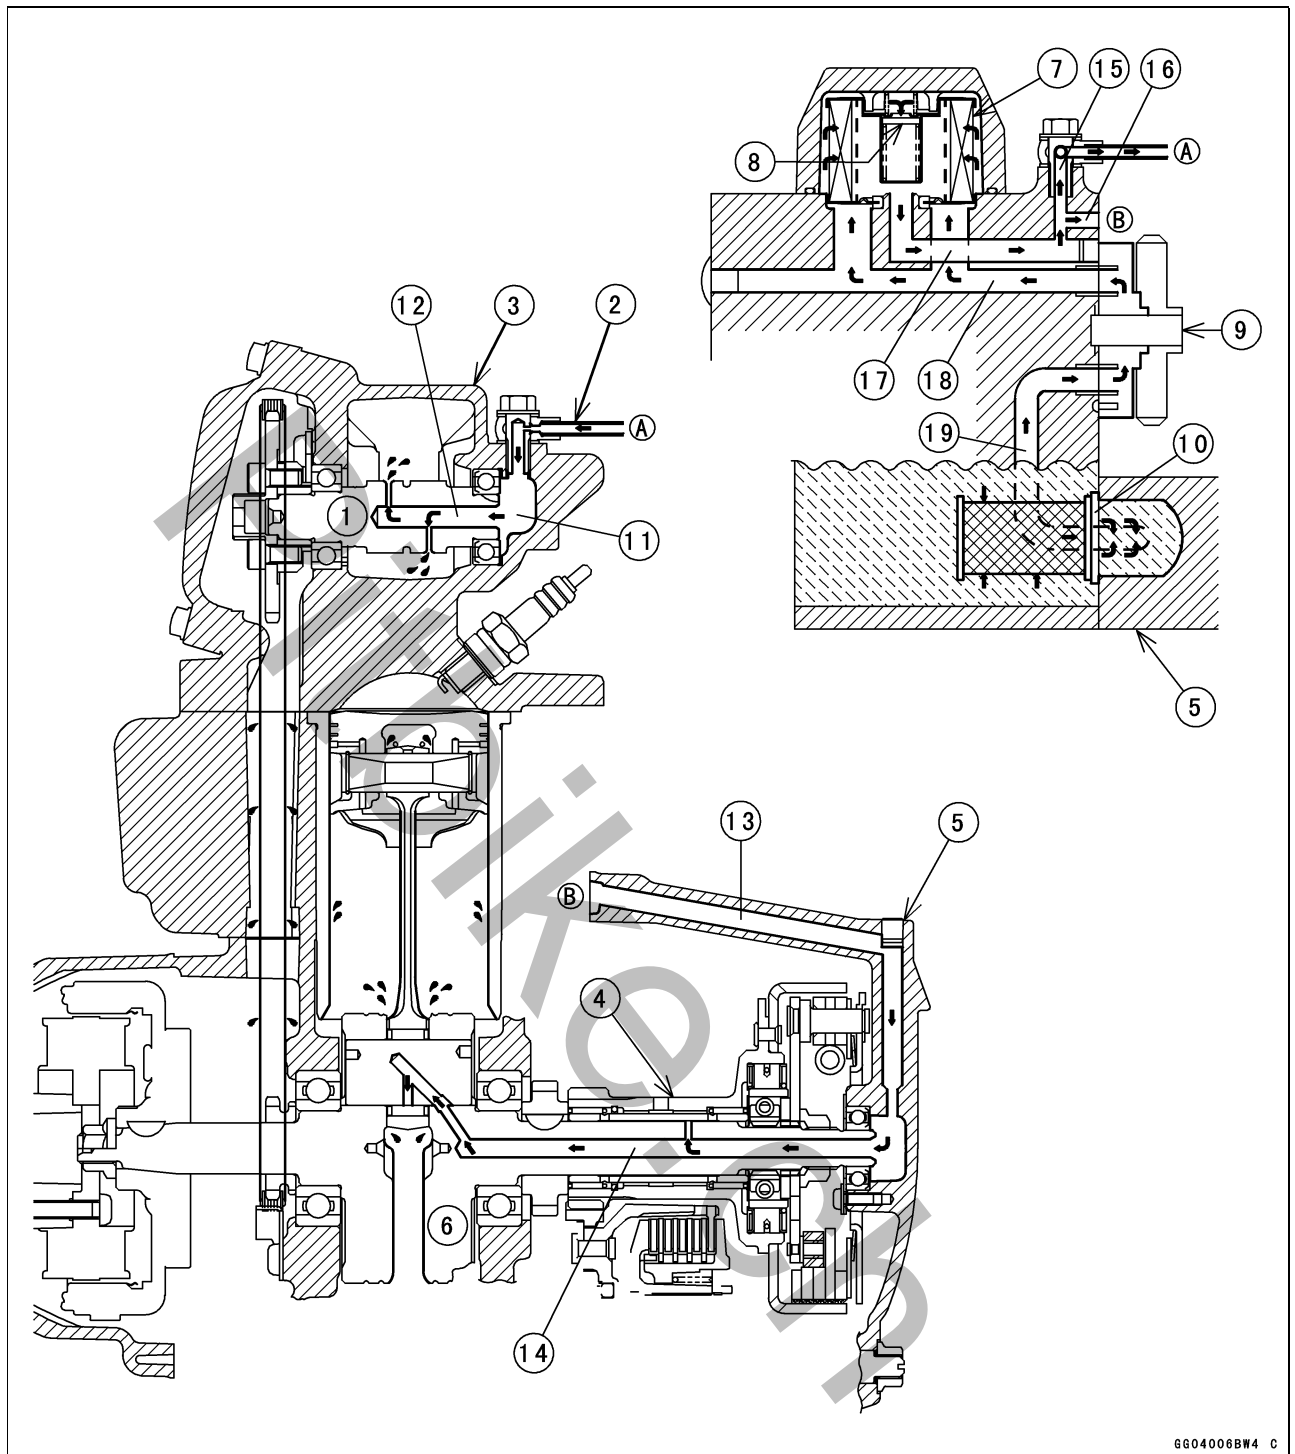

GG04006BW4 C

1. Camshaft
2. Oil Pipe
3. Cylinder Head
4. Primary Clutch Housing
5. Clutch Cover
6. Crankshaft
7. Oil Filter
8. Bypass Valve
9. Oil Pump
10. Oil Screen

11. Oil Passage (Cylinder Head)
12. Oil Passage (Camshaft)
13. Oil Passage (Right Engine Cover)
14. Oil Passage (Crankshaft)
15. Oil Passage to Cylinder Head
16. Oil Passage to Crankshaft
17. Oil Passage from Oil Filter
18. Oil Passage to Oil Filter
19. Oil Passage to Oil Pump

## 6-6 ENGINE LUBRICATION SYSTEM

---

### Engine Oil

---

#### *Oil Level Inspection*

- Refer to Oil Level Inspection in the Periodic Maintenance Chapter.

#### *Oil Changing*

- Refer to Oil Changing in the Periodic Maintenance Chapter.

Pitbike.com

### Oil Filter Element/Oil Screen

#### Oil Filter Element Change

- Refer to Oil Filter Element Change in the Periodic Maintenance Chapter.

#### Oil Screen Cleaning

- Drain the engine oil.
- Remove the clutch cover (see Clutch chapter).
- Pull out the oil screen [A].
- Clean the screen with high-flash-point solvent, and then dry it.
- Clean the screen thoroughly whenever the engine oil is changed.


#### NOTE

- While cleaning the screen, check for any metal particles that engine indicate internal damage.

#### WARNING

Clean the oil screen in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area, this includes any appliance with a pilot light. Do not use gasoline or a low-flash-point solvent to clean the oil screen. A fire or explosion could result.

- ★ Replace the screen with a new one if it is damaged.
- Install:
  - Oil Screen
  - Clutch Cover

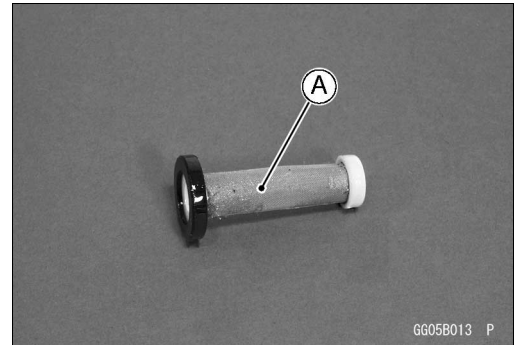


## 6-8 ENGINE LUBRICATION SYSTEM

### Engine Oil Pump


#### Engine Oil Pump Removal

- Remove the clutch cover (see Clutch chapter).
- Remove the primary and secondary clutch assemblies (see Clutch chapter).
- Turn the crankshaft so that the engine oil pump screws [A] can be removed through the pump gear holes, and remove the screws and oil pump [B].

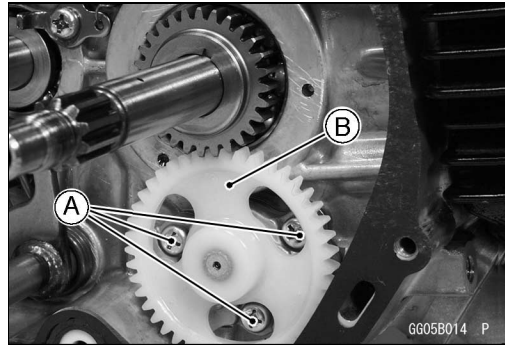


#### Engine Oil Pump Installation

- Replace the O-rings with new ones if they are damaged.
- Check to see that the knock pin [A] and O-rings [B] are in place.

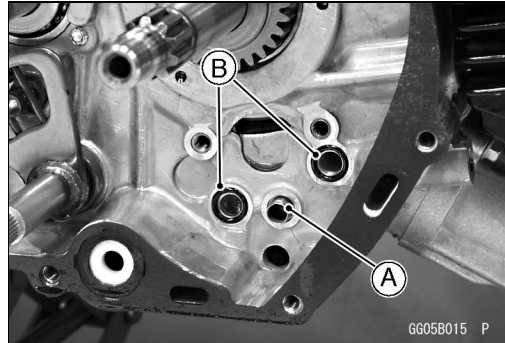


- Install the oil pump and screws.
- When installing the oil pump, be sure the oil pump gear [A] and pump drive gear [B] on the crankshaft mesh properly.

**Torque - Oil Pump Mounting Screw: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

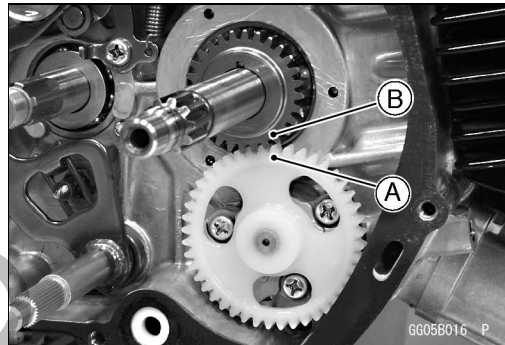

#### Engine Oil Pump Inspection

- Visually inspect the oil pump body [A], outer rotor [B], inner rotor [C] and cover [D].
- ★ If there is any damage or uneven wear, replace the rotors or oil pump assembly.

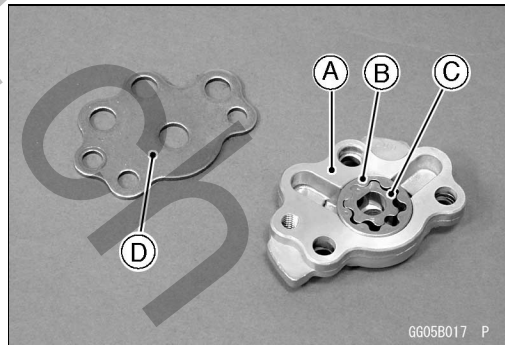




### Oil Pipe

#### *Oil Pipe Removal*

- Remove the banjo bolts [A] and oil pipe clamp screw [B].

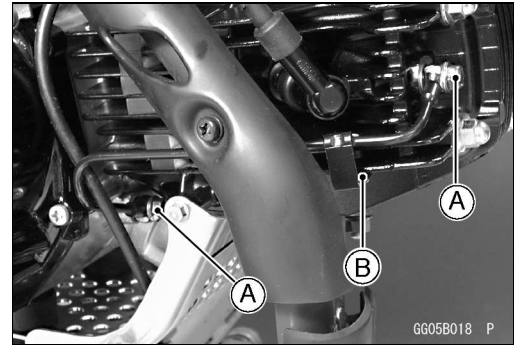

#### *Oil Pipe Installation*

- Before installation, flush out the pipe with a high-flash-point solvent.
- Discard the used copper washers and install new washers on each side of the pipe fittings.
- Lightly tighten the banjo bolts and oil pipe clamp screw to a snug fit, and tighten them to the specified torque.

**Torque - Oil Pipe Banjo Bolts: 15 N·m (1.5 kgf·m, 11 ft·lb)**  
**Oil Pipe Clamp Screw: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

Pittbike.ch

# Engine Removal/Installation

## Table of Contents

Exploded View.....7-2


Engine Removal/Installation.....7-4

    Engine Removal.....7-4

    Engine Installation.....7-6

7-2 ENGINE REMOVAL/INSTALLATION

Exploded View

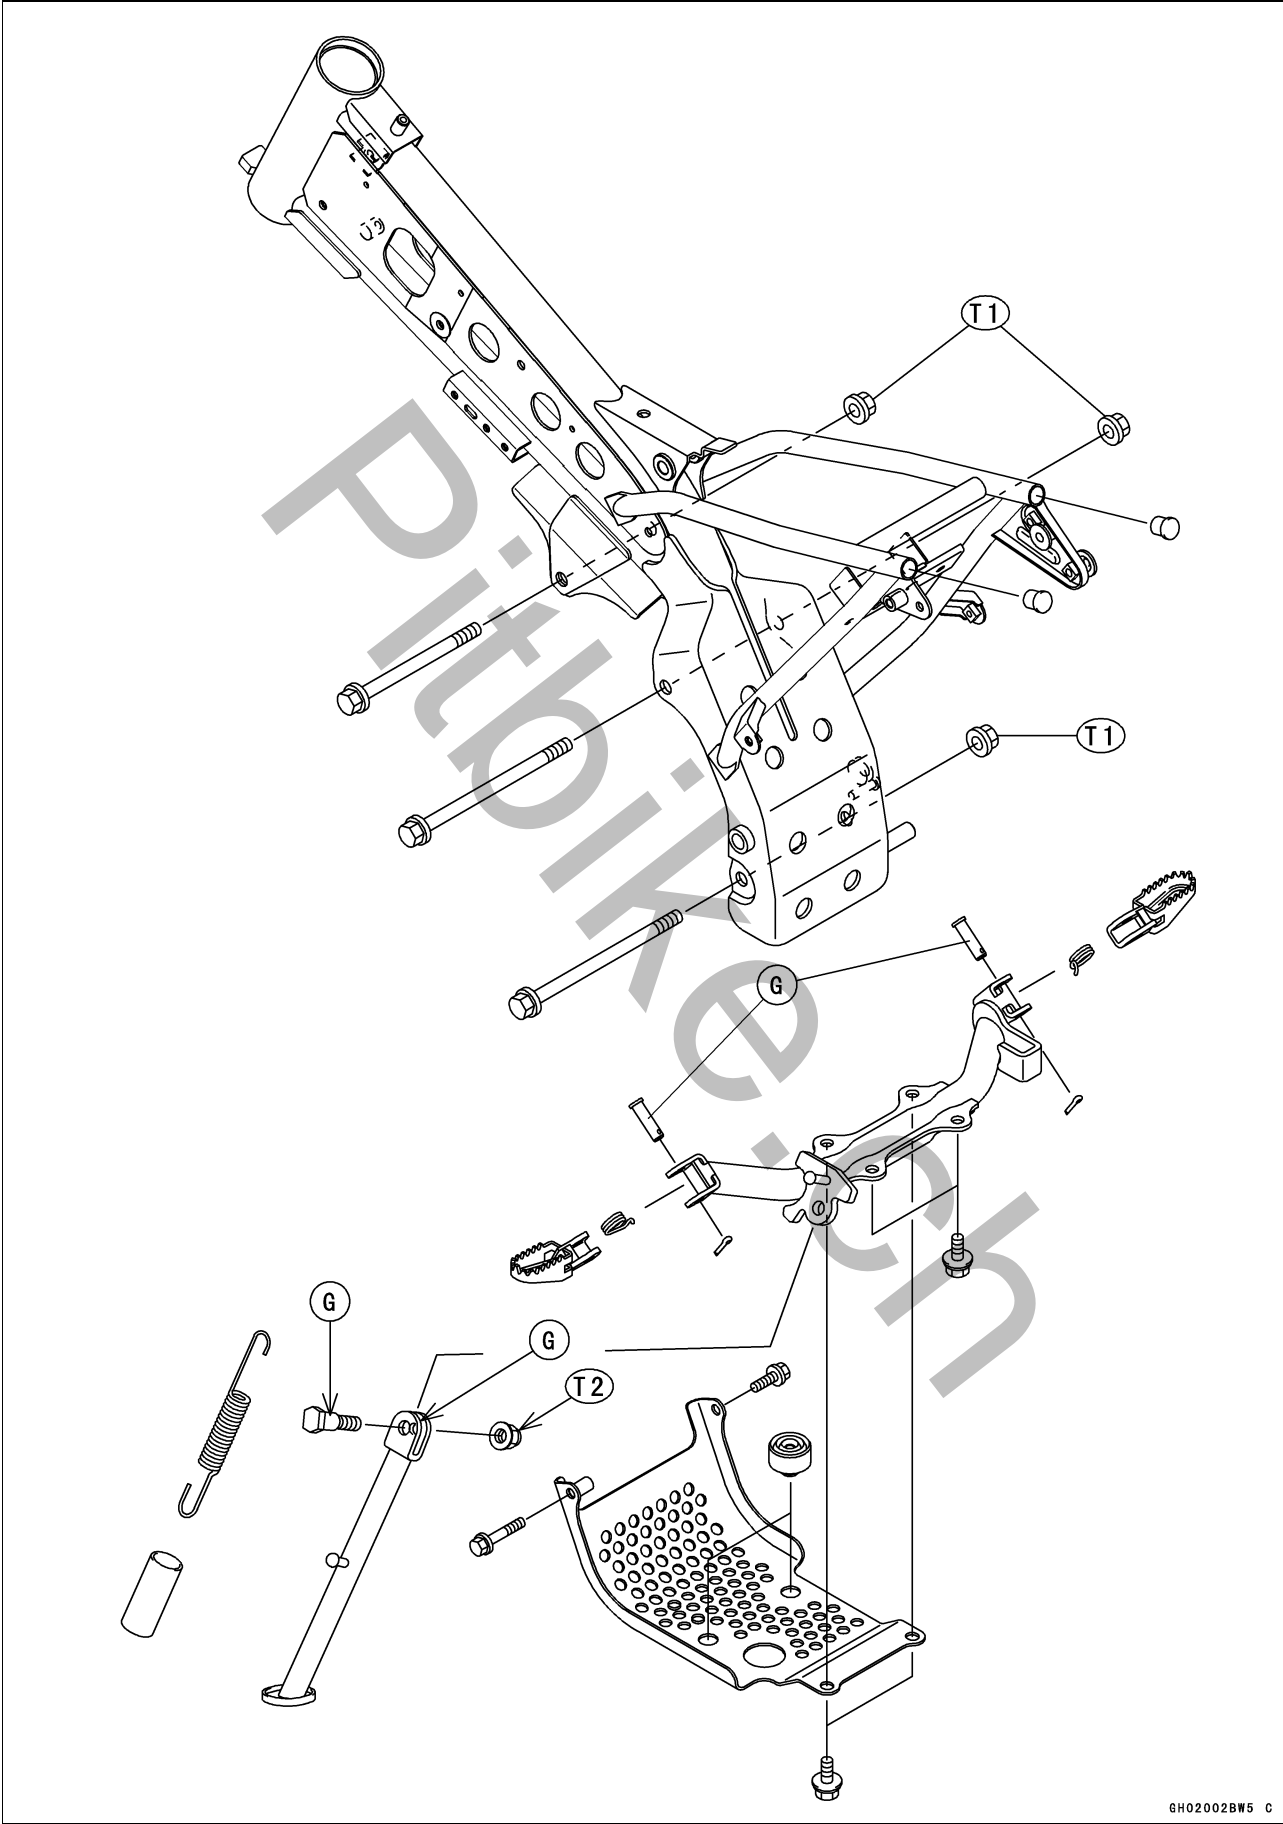

### Exploded View

---

T1: 54 N·m (5.5 kgf·m, 40 ft·lb)

T2: 23 N·m (2.3 kgf·m, 17 ft·lb)

G. Apply grease.

Pitbike.com

## 7-4 ENGINE REMOVAL/INSTALLATION


### Engine Removal/Installation

#### Engine Removal


- Drain the engine oil (see Engine Lubrication chapter).
- Squeeze the brake lever slowly and hold it with a band [A].

#### **⚠ WARNING**


Be sure to hold the front brake when removing the engine, or the motorcycle may fall over. It could cause an accident and injury.

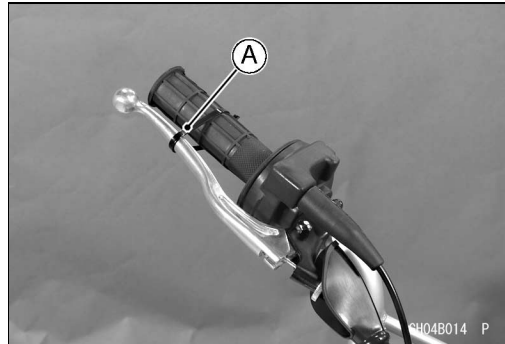


- Remove  
Shift Pedal [A]  
Engine Sprocket Cover [B]

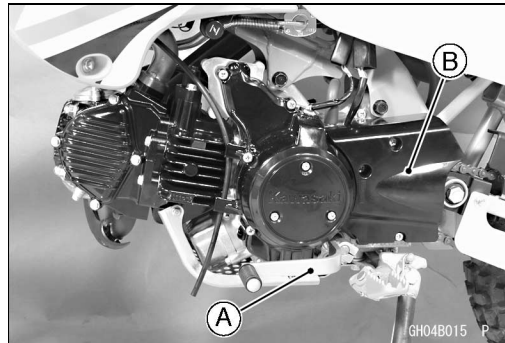


- Engine Sprocket [A]
- Drive Chain [B]
- Breather Tube Lower End [C]
- Magneto Lead Connectors [D]
- Gear Position Switch Lead Connector [E]

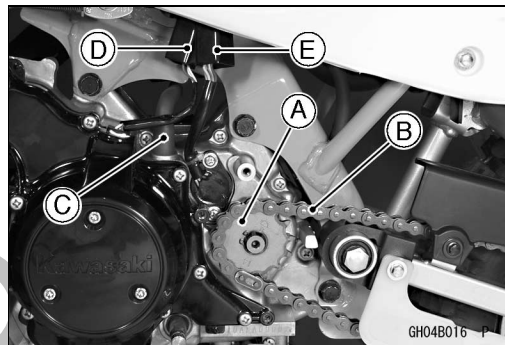

- Right and Left Side Cover
- Muffler [A]

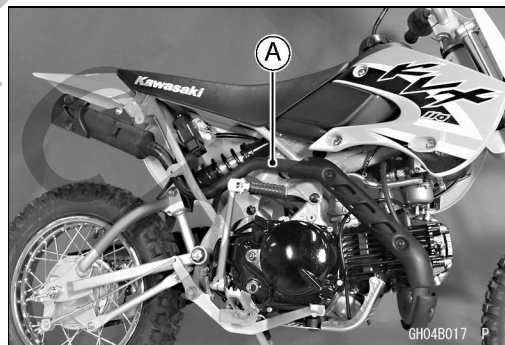


- Intake Pipe Bolts [A]
- Spark Plug Cap [B]

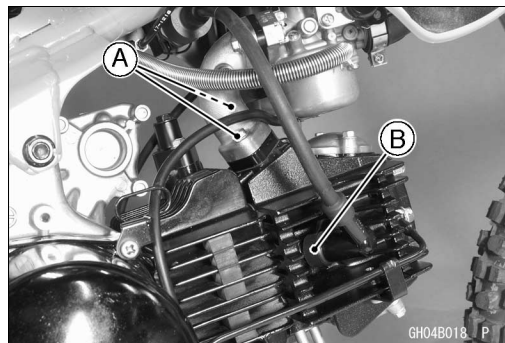


## Engine Removal/Installation

- Remove the bolts [A] and the engine guard [B].

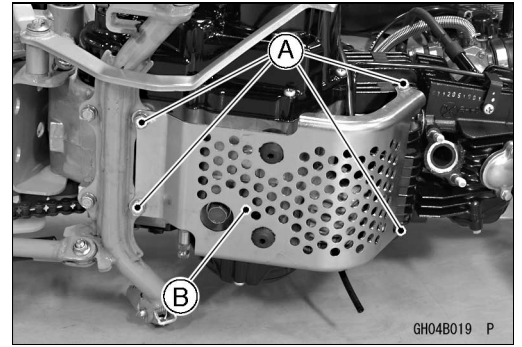


- Remove the brake pedal return spring [A].

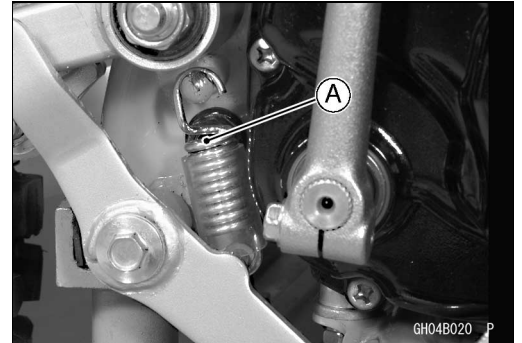


- Support the rear part of the frame on the jack [A].



- Support the engine with a suitable stand [A].

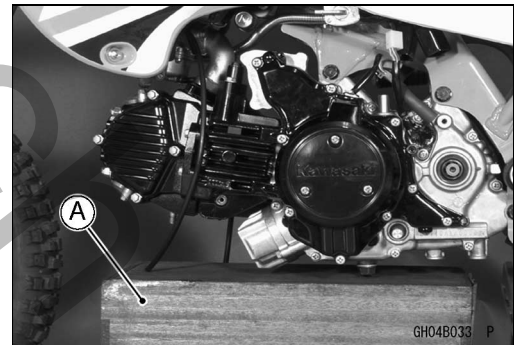


- Remove the bolts [A] and take off the front footpeg bracket [B] with side stand.

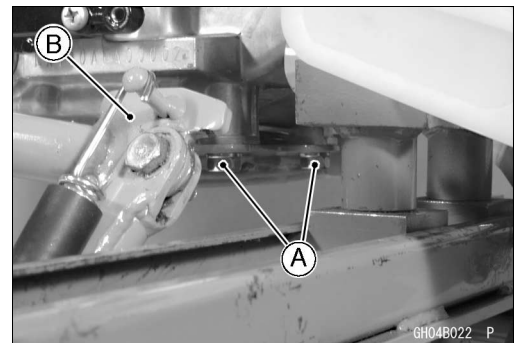

## 7-6 ENGINE REMOVAL/INSTALLATION

### Engine Removal/Installation

- Remove the three engine mounting bolts [A] and dismount the engine.

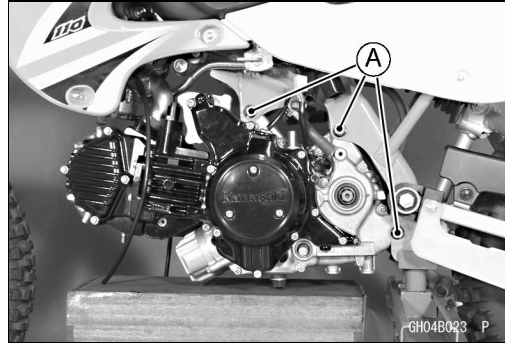


#### *Engine Installation*

- Support the engine with a suitable stand and set it at the correct position.
- Install the lower [A], middle [B] and upper [C] engine mounting bolts from left side of the engine.
- Tighten the engine mounting nuts.

**Torque - Engine Mounting Nuts: 54 N·m (5.5 kgf·m, 40 ft·lb).**

- Install the removed parts.
- Adjust the drive chain (see Final Drive chapter).

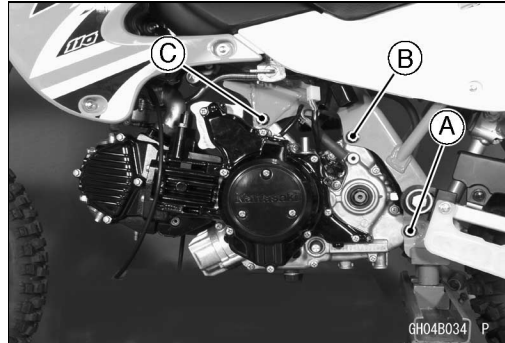




# Crankshaft / Transmission

## Table of Contents

Exploded View.....	8-2
Specifications.....	8-4
Crankcase Splitting.....	8-5
Crankcase Splitting.....	8-5
Crankcase Assembly.....	8-5
Crankshaft, Connecting Rod.....	8-8
Crankshaft Disassembly and Assembly.....	8-8
Disassembly.....	8-8
Assembly.....	8-8
Connecting Rod Big End Seizure.....	8-8
Connecting Rod Big End Radial Clearance.....	8-9
Connecting Rod Big End Side Clearance.....	8-9
Crankshaft Runout.....	8-9
Crankshaft Alignment.....	8-9
Crankshaft Main Bearing Wear.....	8-10
Transmission.....	8-11
Transmission and Shift Mechanism Removal.....	8-11
Transmission Disassembly.....	8-11
Transmission Assembly.....	8-11
Transmission and Shift Mechanism Installation.....	8-12
Shift Fork Bending.....	8-13
Shift Fork Ear/Gear Shift Fork Groove Wear.....	8-13
Shift Fork Guide Pin/Shift Drum Groove Wear.....	8-13
Gear Dog/Gear Dog Hole Damage.....	8-14
Ball and Needle Bearing Wear.....	8-14
Oil Seal Inspection.....	8-14

## 8-2 CRANKSHAFT / TRANSMISSION

### Exploded View

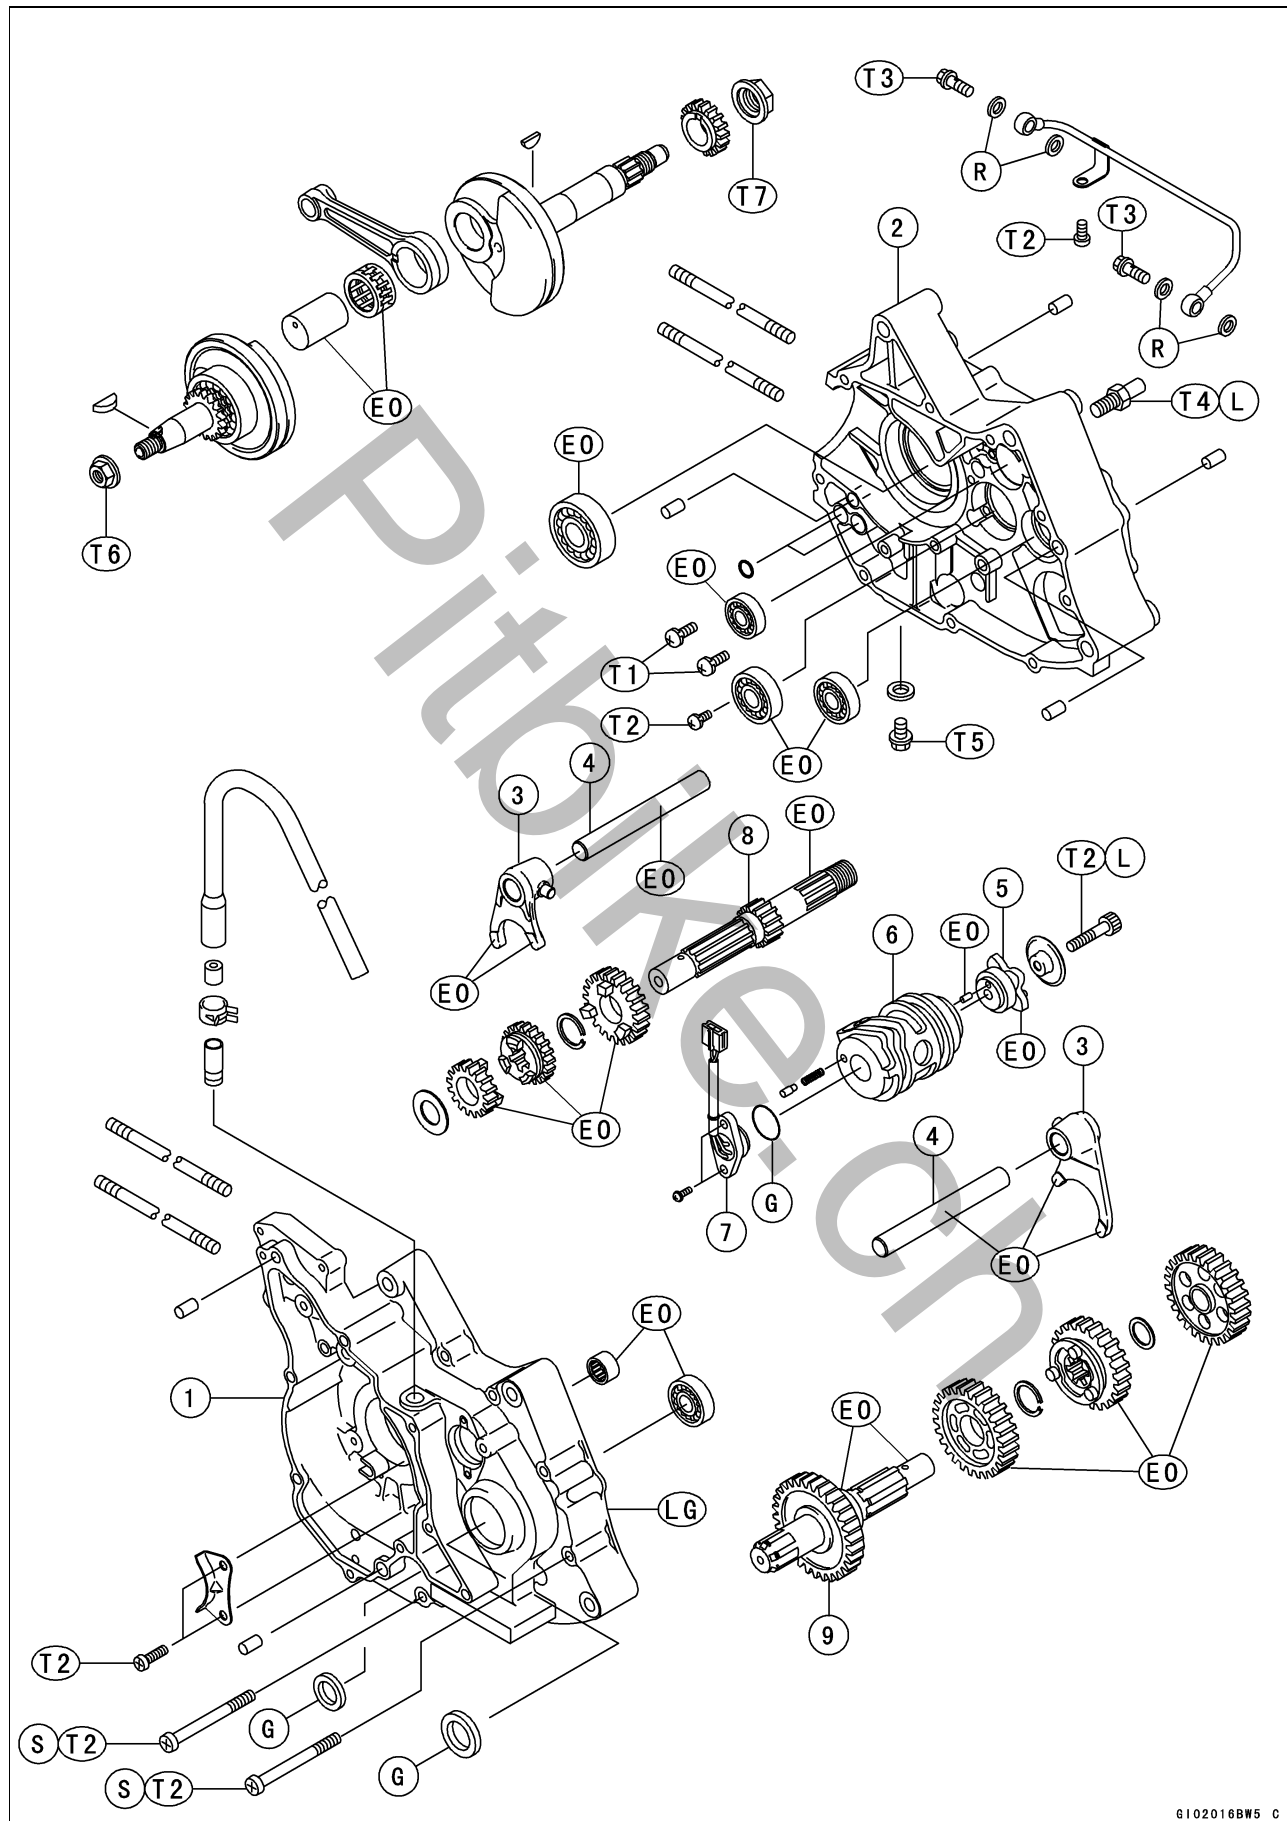

### Exploded View

---

1. Left Crankcase Half
  2. Right Crankcase Half
  3. Shift Fork
  4. Shift Rod
  5. Shift Drum Cam
  6. Shift Drum
  7. Gear Position Switch
  8. Drive Shaft
  9. Output Shaft
- EO: Apply engine oil.  
G: Apply high-temperature grease.  
L: Apply a non-permanent locking agent.  
LG: Apply liquid gasket.  
R: Replacement Parts.  
S: Follow the specific tightening sequence.
- T1: 2.9 N·m (0.3 kgf·m, 26 in·lb)  
T2: 5.2 N·m (0.53 kgf·m, 46 in·lb)  
T3: 15 N·m (1.5 kgf·m, 11 ft·lb)  
T4: 22 N·m (2.2 kgf·m, 16 ft·lb)  
T5: 29 N·m (3.0 kgf·m, 22 ft·lb)  
T6: 41.5 N·m (4.25 kgf·m, 30.6 ft·lb)  
T7: 72 N·m (7.3 kgf·m, 53 in·lb)

## 8-4 CRANKSHAFT / TRANSMISSION

### Specifications

Item	Standard	Service Limit
<b>Crankshaft, Connecting Rods:</b>		
Connecting rod:		
Big end radial clearance	0.009 ~ 0.023 mm	0.07 mm
Big end side clearance	0.1 ~ 0.2 mm	0.4 mm
Crankshaft runout	Less than 0.03 mm TIR	0.08 mm
<b>Transmission:</b>		
Shift fork ear thickness	3.9 ~ 4.0 mm	3.8 mm
Gear shift fork groove width	4.05 ~ 4.15 mm	4.3 mm
Shift fork guide pin diameter	4.9 ~ 5.0 mm	4.8 mm
Shift drum groove width	5.05 ~ 5.20 mm	5.3 mm

**Special Tools - Outside Circlip Pullers : 57001-144**

**Bearing Puller : 57001-158**

**Crankcase Splitting Tool Assembly : 57001-1098**

**Bearing Driver Set : 57001-1129**

**Crankshaft Jig : 57001-1174**

**Sealant - Kawasaki Bond (Silicone Sealant): 56019-120**

**Kawasaki Bond (Liquid Gasket-Black): 92104-1003**

## Crankcase Splitting

### Crankcase Splitting

- Remove the engine (see Engine Removal/Installation chapter).
- Set the engine on a clean surface and hold the engine steady while parts are being removed.
- Remove:
  - Cylinder Head (see Engine Top End chapter)
  - Cylinder (see Engine Top End chapter)
  - Piston (see Engine Top End chapter)
  - Clutch Cover (see Clutch chapter)
  - Primary Clutch, Secondary Clutch (see Clutch chapter)
  - Kick Shaft (see Clutch chapter)
  - Oil Filter & Oil Pump (see Engine Lubrication System chapter)
  - External Shift Mechanism (see Clutch chapter)
  - Magneto Cover (see Electrical System chapter)
  - Magneto Flywheel (see Electrical System chapter)
  - Gear Position Switch
  - Crankcase Screws [A]
- Using the crankcase splitting tool assembly [A], split the crankcase.
 

**Special Tool - Crankcase Splitting Tool Assembly: 57001-1098**
- Once the crankcase is split, remove the crankcase splitting tool and separate the crankcase halves.
- Remove the crankshaft from the crankcase half using a press.

### CAUTION

**Do not remove the ball, needle bearings and the oil seals unless it is necessary. Removal may damage them.**

- Press the remaining bearing out of the crankcase half if the bearing remains on the crankcase half.

### Crankcase Assembly




### CAUTION

**Right and left crankcase halves are machined at the factory in the assembled state, so the crankcase halves must be replaced as a set.**

- Chip off the old gasket from the mating surfaces of the crankcase halves.
- Using compressed air, blow out the oil passages [A] in the crankcase halves and the crankshaft.
- With a high-flash-point solvent, clean off the mating surfaces of the crankcase halves and wipe dry.

### ⚠ WARNING

**Clean the engine parts in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Do not use gasoline or a low-flash-point solvent to clean parts. A fire or explosion could result.**

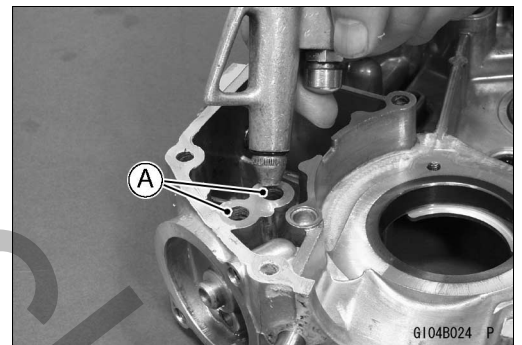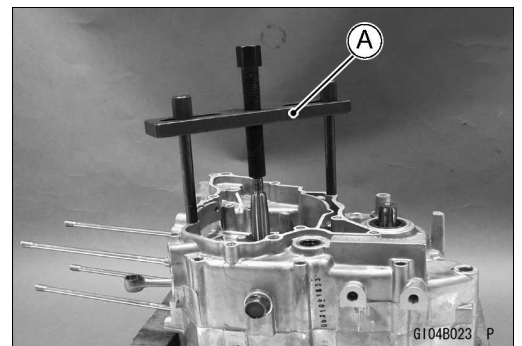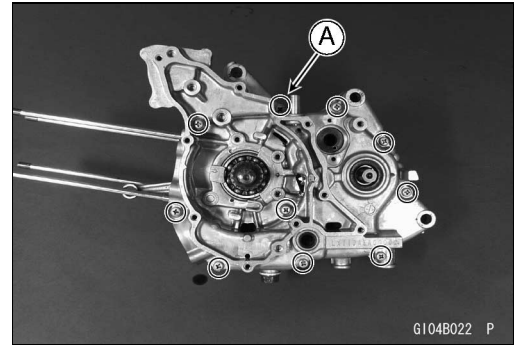


## 8-6 CRANKSHAFT / TRANSMISSION

### Crankcase Splitting

- Using a press and the bearing driver set, install new bearings until they bottoms out.
- Press the output shaft bearing [B] in the left crankcase half [A].

**Special Tool - Bearing Driver Set: 57001-1129**


- Apply high-temperature grease to the lips of the oil seals.
- Press in the oil seals [C] of the left crankcase half so that the seal surface is flush with the end of the hole.

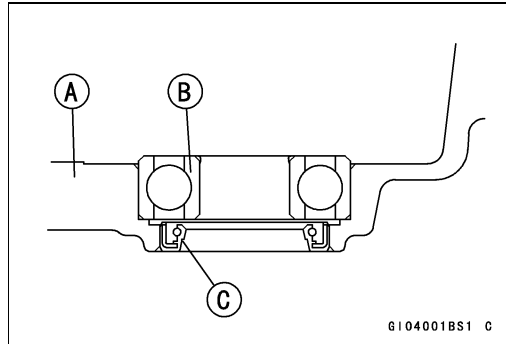

- Tighten the shift drum and drive shaft bearing retainer screws to the right crankcase.


**Torque - Shift Drum Bearing Retainer Screws [B]: 2.9 N·m (0.3 kgf·m, 26 in·lb)**

**Drive Shaft Bearing Retainer Screw [A]: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

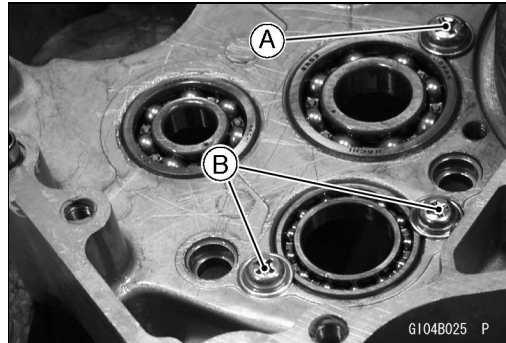


- Insert the crankshaft jig [A] between the crankshaft flywheels opposite the connecting rod big end to protect flywheel alignment. This tool is easily adjustable to fit in any gap between the flywheel.


**Special Tool - Crankshaft Jig: 57001-1174**

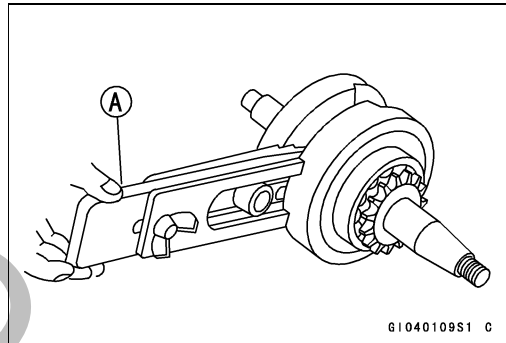

- Fit the crankshaft into the right crankcase half using a press [A].

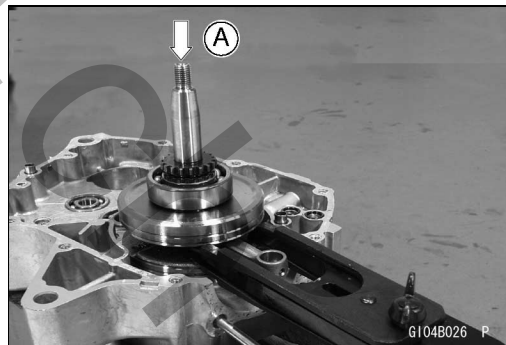


- Install:
  - Shift Drum [A]
  - Transmission Shaft Assemblies [B]
  - Shift Forks [C]
- Check that the shift drum is in neutral position.

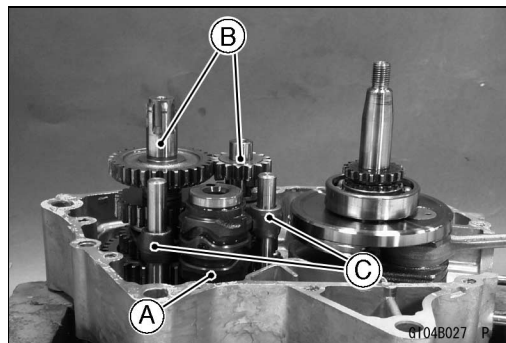


## Crankcase Splitting

- Make sure that the mating surfaces of the crankcase halves are completely free of oil or contamination.
- Apply liquid gasket to the mating surface of the left crankcase half as shown.

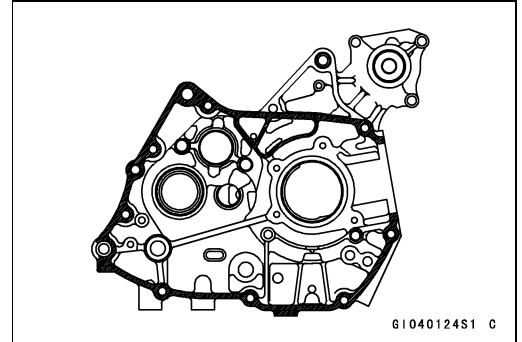

- Check that two dowel pins [A], O-rings [B] and drive shaft spacer [C] in place.
- Fit the crankcase halves together hitting with a plastic hammer on the left crankcase side.

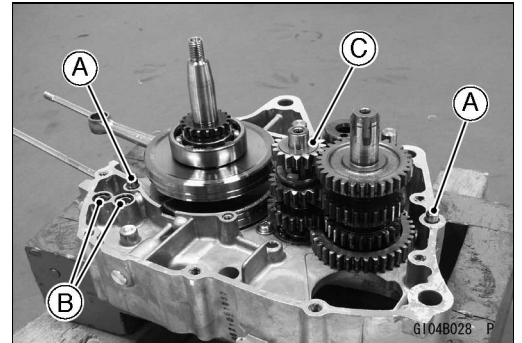


- Tighten the crankcase screws in that order shown.

### NOTE


- Apply a non-permanent locking agent to the No.10 (tightening order) screw.

**Tightening Torque - Crankcase Screws: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

- Remove the crankcase installing jig.

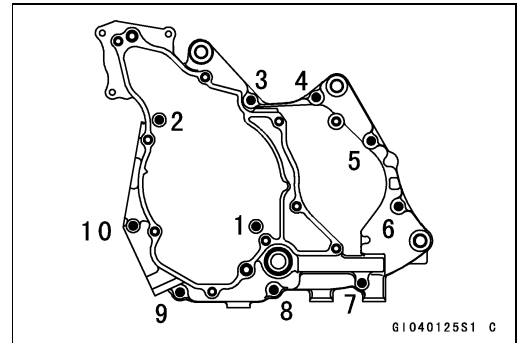

- Check to see that the crankshaft, and output shaft all turn freely.
- ★ If the crankshaft will not turn, it is probably not centered. Tap the mount portion of the crankcase with a plastic hammer [A] to reposition it. If it does not free up, split the crankcase again and find the cause.
- ★ Spinning the output shaft, shift the transmission through all the gears to make certain there is not binding and that all the gears shift properly.
- Clean the cylinder and oil filter cap of the mating surface and wipe off the liquid gasket forced out.
- Install the removed parts.

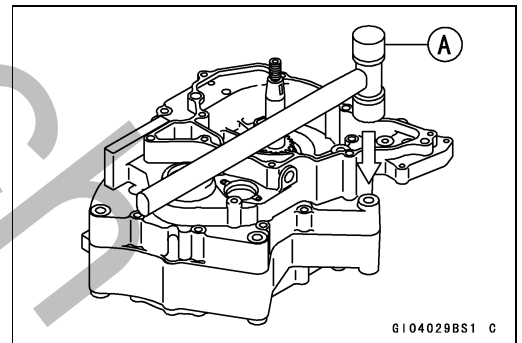

## 8-8 CRANKSHAFT / TRANSMISSION

### Crankshaft, Connecting Rod

#### Crankshaft Disassembly and Assembly

##### CAUTION

Since assembly of the crankshaft demands exacting tolerance, the disassembly and reassembly of the crankshaft should only be performed by experienced mechanics with the necessary tools and equipment. The crankpin, connecting rod, and light crankshaft are available separately as spare parts, however it is recommended that the crankshaft assembly be replaced rather than attempting to replace the components.


#### Disassembly

- If it should be necessary to disassemble the crankshaft.
- Remove the camshaft chain drive sprockets and bearing, using the bearing puller if the drive sprocket and bearing remains on the crankshaft.
- Use a press to remove the crankpin.
- Removal of the crankpin separates the flywheels, connecting rod, big end needle bearing, and crankpin.


**Special Tool - Bearing Puller: 57001-158**

#### Assembly

- Press the bearing until it bottoms out.
- Press the camshaft chain drive sprocket on to the left flywheel as shown.

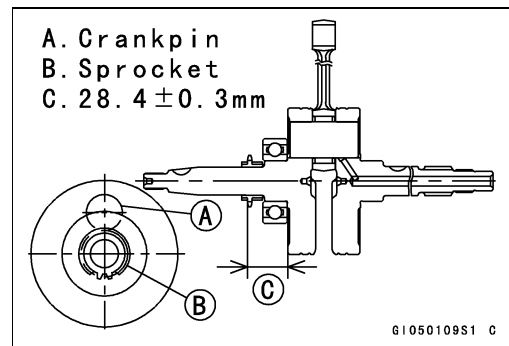

- Apply engine oil to the big end bearing.
- Press the crank halves onto the crankpin, noting the crankpin direction until connecting rod side clearance is within specification as shown.
  - Side Clearance  $0.1 \sim 0.2 \text{ mm}$  [A]
  - Crankpin Depth  $0.8 \sim 1.2 \text{ mm}$  [B]
- Check the following items after the crankshaft assembly.
  - Connecting Rod Radial Clearance
  - Connecting Rod Side Clearance
  - Crankshaft Runout

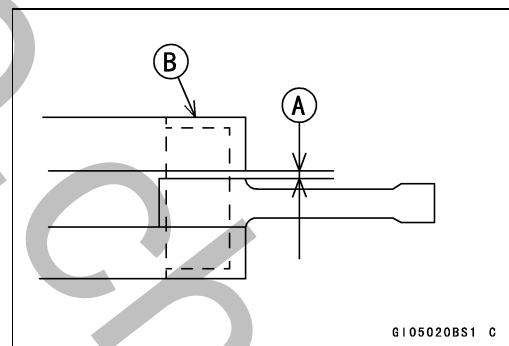

#### Connecting Rod Big End Seizure

- ★ In the case of serious seizure with damaged flywheels, the crankshaft must be replaced.
- ★ In the case of less serious damage, disassemble the crankshaft and replace the crankpin, needle bearing, side washers, and connecting rod.



## Crankshaft, Connecting Rod


### Connecting Rod Big End Radial Clearance

- Set the crankshaft in flywheel alignment jig or on V blocks, and place a dial gauge [A] against the big end of the connecting rod.
- Push [B] the connecting rod first towards the gauge and then in the opposite direction. The difference between the two gauge readings is the radial clearance.
- ★ If the radial clearance exceeds the service limit, the crankshaft should be either replaced or disassembled and the crankpin, needle bearing, and connecting rod big end examined for wear.

#### Connecting Rod Big End Radial Clearance

**Standard:** 0.009 ~ 0.023 mm

**Service Limit:** 0.07 mm

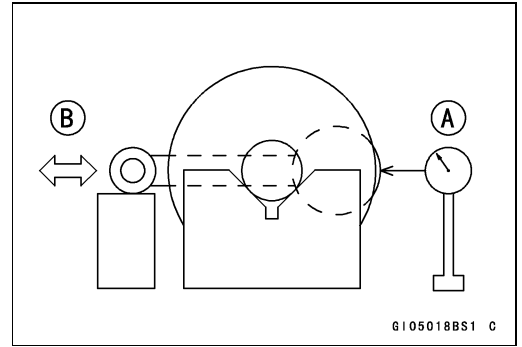


### Connecting Rod Big End Side Clearance

- Measure the side clearance [A] of the connecting rod with a thickness gauge.
- ★ If the clearance exceeds the service limit, replace the crankshaft.

#### Connecting Rod Big End Side Clearance

**Standard:** 0.1 ~ 0.2 mm

**Service Limit:** 0.4 mm

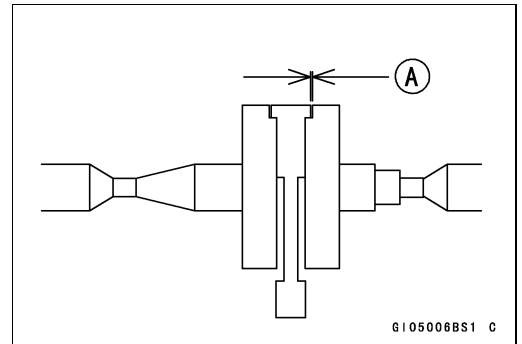


### Crankshaft Runout

- Set the crankshaft in a flywheel alignment jig or on V blocks, and place a dial gauge against the points indicated.
- Turn the crankshaft slowly. The maximum difference in gauge readings is the crankshaft runout.

#### Crankshaft Runout


**Standard:** Less than 0.03 mm TIR

**Service Limit:** 0.08 mm

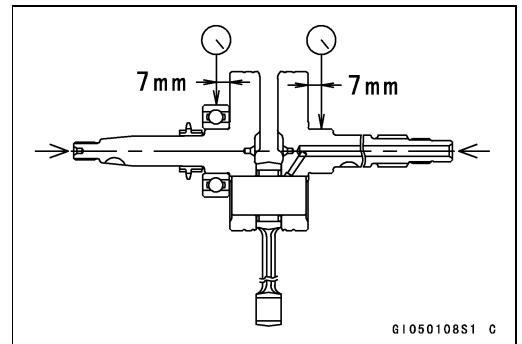

### Crankshaft Alignment

- ★ If the runout at either point exceeds the service limit, align the flywheels so that the runout falls within the service limit.
- In the case of horizontal misalignment, which is the most common, strike the projecting rim of the flywheel with a plastic, soft lead, or brass hammer as indicated in the figure.
- Recheck the runout with a dial gauge, repeating the process until the runout falls within the service limit.
- Vertical misalignment is corrected either by driving a wedge in between the flywheels, or by squeezing the flywheel rims in a vise, depending on the nature of the misalignment.

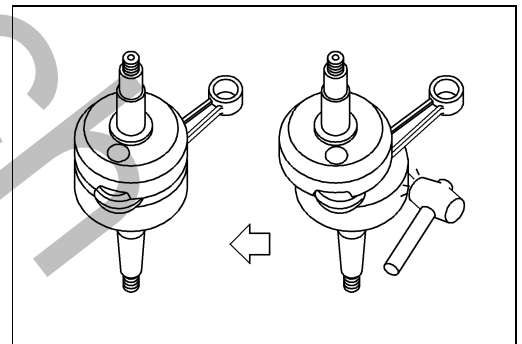

## 8-10 CRANKSHAFT / TRANSMISSION

### Crankshaft, Connecting Rod

- In the case of both horizontal and vertical misalignment, correct the horizontal misalignment first.
- Recheck big end side clearance after aligning crankshaft (see Connecting Rod Big End Side Clearance).

#### NOTE



- If crankshaft alignment cannot be corrected by the above method, replace the crankpin or crank halves as required. Recheck the runout and repeat the process until the runout is within service limit.

#### CAUTION

Don't hammer the flywheel at the point [A].

#### Crankshaft Main Bearing Wear


- Wash the bearings in high-flash-point solvent, blow them dry (DO NOT SPIN THEM), and lubricate them with engine oil.
- Turn each bearing [A] over by hand and see that it makes no noise, turns smoothly and has no rough spots.
- ★ If any of the bearings are defective, replace them.

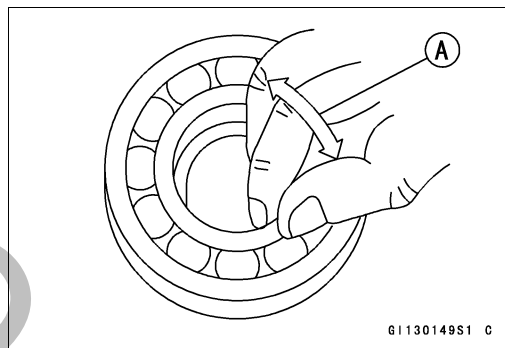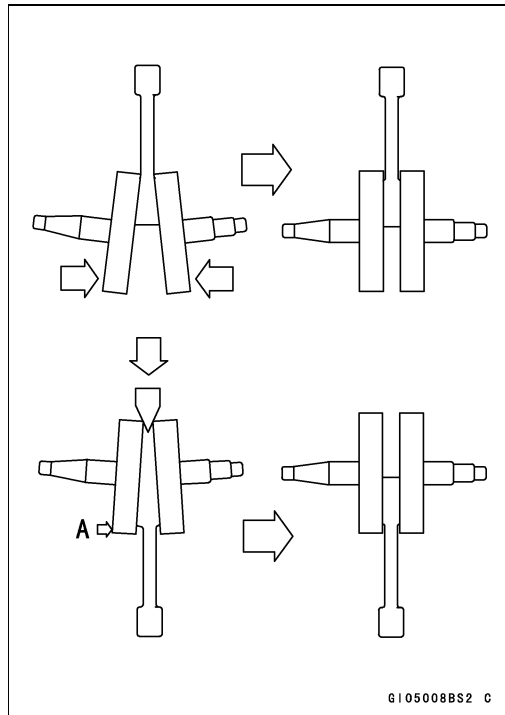

## Transmission

### Transmission and Shift Mechanism Removal

- Split the crankcase.
- Pull out the shift rods and take out the shift forks.
- Remove the drive and output shaft assemblies as a set.
- Holding the shift drum with suitable bar, unscrew the shift drum Allen bolt [A].
- Remove the cam holder [B], shift drum cam [C] and dowel pin [D].
- Remove the shift drum [E].

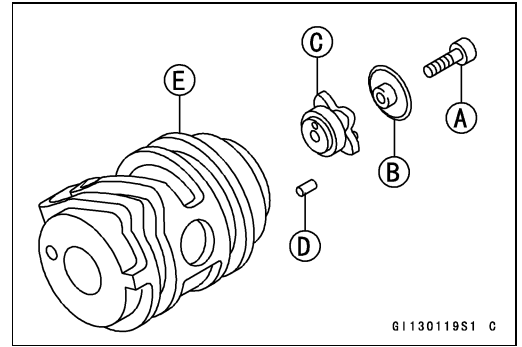



### Transmission Disassembly

- Remove the transmission shafts.
- Using the circlip pliers to remove the circlip, disassemble the transmission shaft.


**Special Tool - Outside Circlip Pliers: 57001-144**

### Transmission Assembly

- Assemble the transmission gears as shown.
  - Replace the old circlip with a new one if it is removed.
  - The drive shaft gears can be identified by size; the smallest diameter gear is 1st gear, and the largest it 4th (not working). Be sure that all parts are put back in the correct sequence, facing the proper direction, and that the circlip and the washer are properly in place.
- 2nd Gear [A]  
 3rd Gear [B]  
 4th Gear (not working) [C]  
 1st Gear [D]  
 Circlip [E]  
 Shim [F]  
 Apply Engine Oil [G]

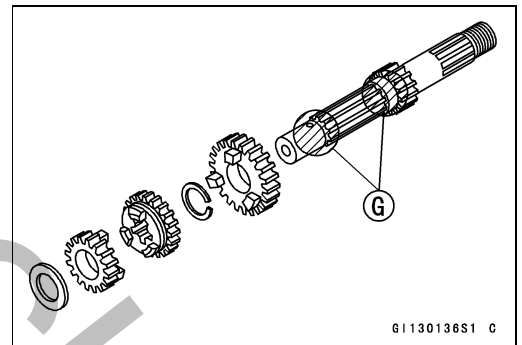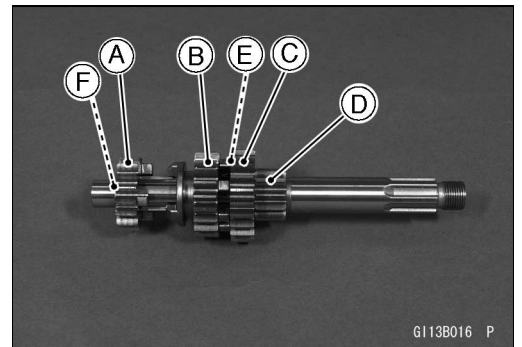


- The output shaft gears can be identified by size; the largest diameter gear is 1st gear, and the smallest is 4th (not working). Be sure that all parts are put back in the correct sequence and facing the proper direction, and that the circlip is properly in place.
- 2nd Gear [A]  
 3rd Gear [B]  
 4th Gear (not working) [C]  
 1st Gear [D]  
 Circlip [E]  
 Spacer [F]

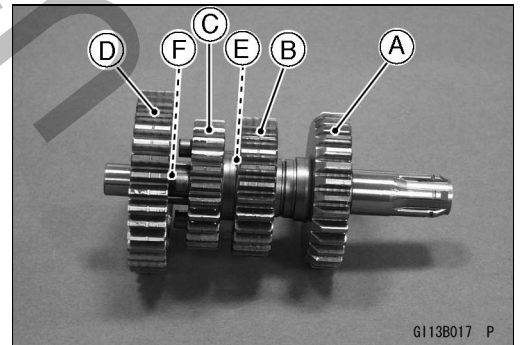

## 8-12 CRANKSHAFT / TRANSMISSION

### Transmission


Apply Engine Oil [G]

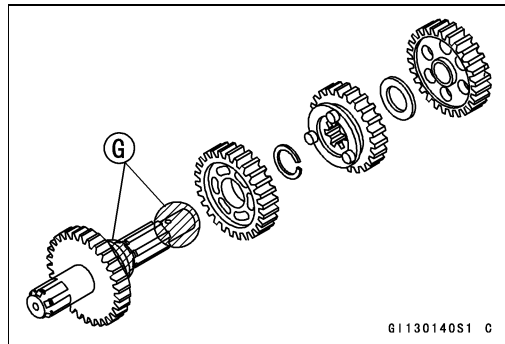

- Always install circlips so that the opening is aligned with a spline groove. To install a circlip without damage, first fit the circlip onto the shaft expanding it just enough to install it, and then use a suitable gear to push the circlip into place.


[A] Opening of Circlip

[B] Groove of Shaft Spline

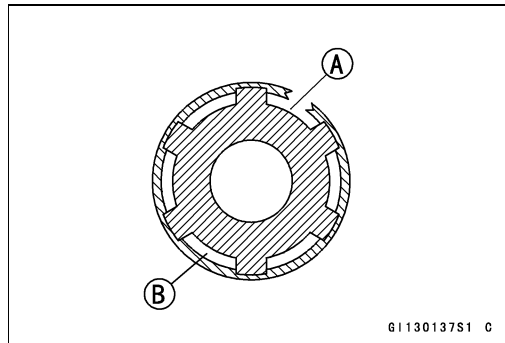


#### Transmission and Shift Mechanism Installation

- Fit the shift drum to the right crankcase half.
  - Install the shift drum cam [A] aligning its hole [B] with the dowel pin [C].
  - Install the holder and tighten the Allen bolt.
- Torque - Shift Drum Allen Bolt: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

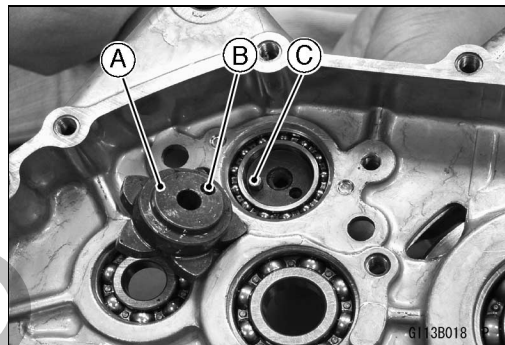


- Apply a clean engine oil to the transmission gears, bearings, and shaft journal, and fit the output [A] and drive shaft [B] assemblies as a set into the right crankcase half.
- Set the shift drum in neutral position.

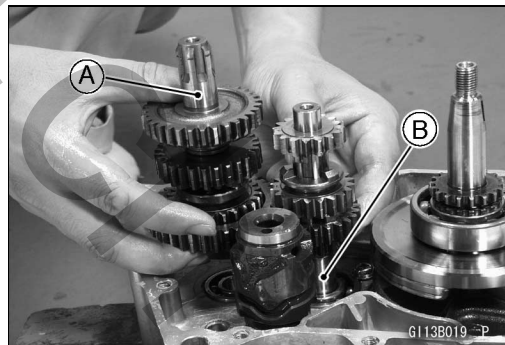

- Apply a clean engine oil to the shift fork fingers, and fit each shift fork into its gear-groove so that the shift fork guide pin is in the proper shift drum-groove.

#### NOTE

- *Fingers of the 1st/3rd shift fork are longer than the fingers of the 2nd/4th shift fork.*
- Apply a clean engine oil to the shift rods [A], and insert each rod running it through each shift fork [B].
- Set the shift drum in neutral position, that is, drive and output shaft turn freely.
- Assemble the crankcase.

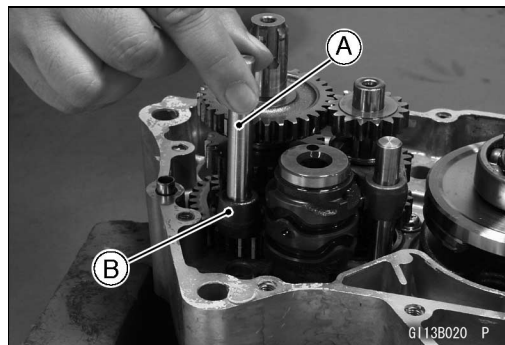


## Transmission

### Shift Fork Bending

- Visually inspect the shift forks, and replace any fork that is bent. A bent fork could cause difficulty in shifting, or allow the transmission to jump out of gear when under power.

[A] 90°

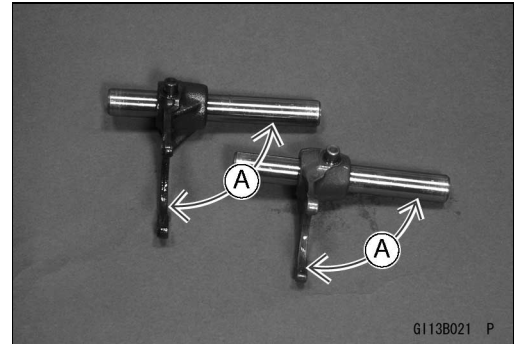


### Shift Fork Ear/Gear Shift Fork Groove Wear

- Measure the thickness [A] of the shift fork ears.
- ★ If the thickness of a shift fork ear is less than the service limit, the shift fork must be replaced.

#### Shift Fork Ear Thickness

Standard: 3.9 ~ 4.0 mm

Service Limit: 3.8 mm

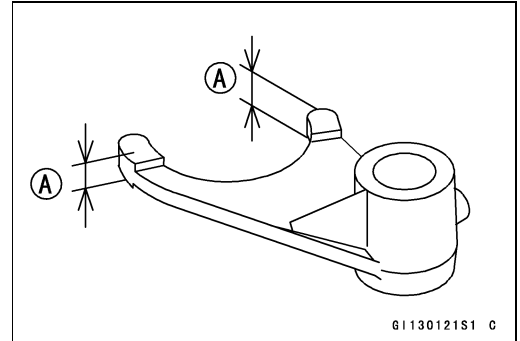


- Measure the width [A] of the gear shift fork grooves in the transmission gears.

- ★ If a gear shift fork groove is worn over the service limit, the gear must be replaced.

#### Gear Shift Fork Groove Width

Standard: 4.05 ~ 4.15 mm

Service Limit: 4.3 mm

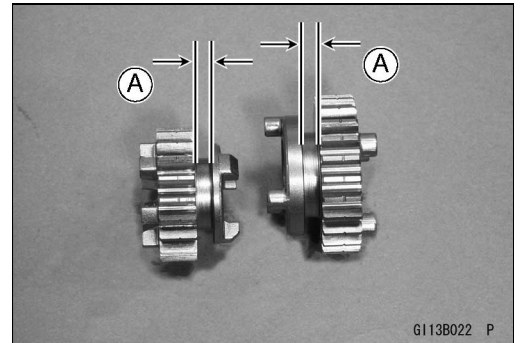

### Shift Fork Guide Pin/Shift Drum Groove Wear


- Measure the diameter [A] of each shift fork guide pin, and measure the width [B] of each shift drum groove.

- ★ If the guide pin on any shift fork is less than the service limit, the fork must be replaced.

#### Shift Fork Guide Pin Diameter

Standard: 4.9 ~ 5.0 mm

Service Limit: 4.8 mm

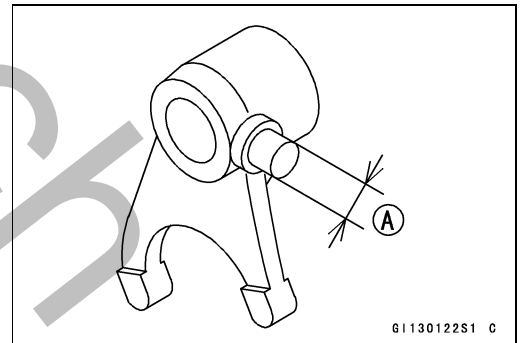


- ★ If any shift drum groove is worn over the service limit, the drum must be replaced.

#### Shift Drum Groove Width

Standard: 5.05 ~ 5.20 mm

Service Limit: 5.3 mm

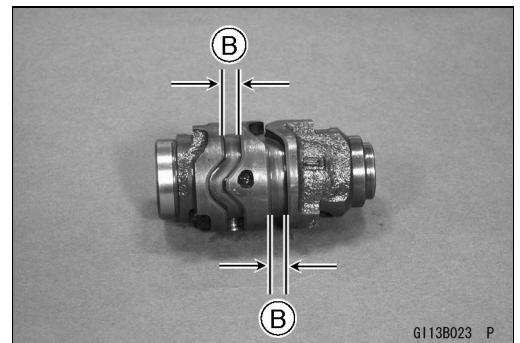


## 8-14 CRANKSHAFT / TRANSMISSION

### Transmission

#### *Gear Dog/Gear Dog Hole Damage*

- Visually inspect the gear dogs [A] and gear dog holes [B].
- ★ Replace any damaged gears or gears with excessively worn dogs or dog holes.

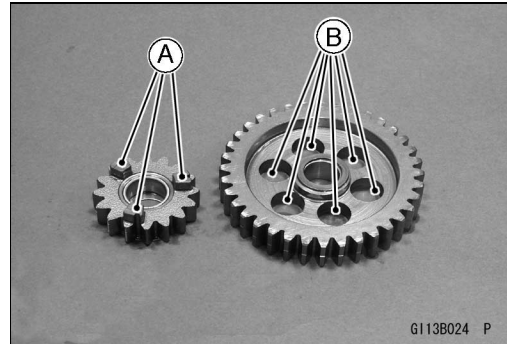


#### *Ball and Needle Bearing Wear*

##### **CAUTION**

**Do not remove the bearings for inspection. Remove may damage them.**

- Check the ball bearings.
- Since the ball bearings are made to extremely close tolerances, the wear must be judged by feel rather than measurement. Clean each bearing in a high-flash-point solvent, dry it (do not spin the bearing while it is dry), and oil it with engine oil.
- Spin [A] a bearings by hand to check its condition.
- ★ If the bearings are noisy, do not spin smoothly, or have any rough spots, replace them.
- Check the needle bearing.
- The rollers in a needle bearing normally wear very little, and wear is difficult to measure. Instead of measuring, inspect the bearing for abrasion, color change, or other damage.
- ★ If it is any doubt as to the condition of a needle bearing, replace it.

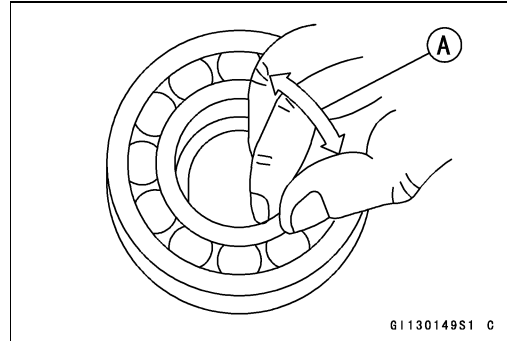

#### *Oil Seal Inspection*

- Inspect the oil seals.
- ★ Replace it if the lips are misshapen, discolored (indicating that the rubber has deteriorated), hardened or otherwise damaged.


# Wheels / Tires

## Table of Contents

Exploded View.....	9-2
Specifications.....	9-4
Wheels (Rims).....	9-5
Front Wheel Removal.....	9-5
Front Wheel Installation.....	9-5
Rear Wheel Removal.....	9-5
Rear Wheel Installation.....	9-6
Wheels Inspection.....	9-7
Spoke Tightness Inspection.....	9-7
Rim Runout Inspection.....	9-7
Axle Inspection.....	9-7
Tires.....	9-8
Air Pressure Inspection/Adjustment.....	9-8
Tires Inspection.....	9-8
Tire Removal.....	9-9
Tire Installation.....	9-10
Hub Bearing.....	9-11
Hub Bearing Removal.....	9-11
Hub Bearing Installation.....	9-11
Bearing Inspection.....	9-11
Bearing Lubrication.....	9-12

9-2 WHEELS / TIRES

Exploded View

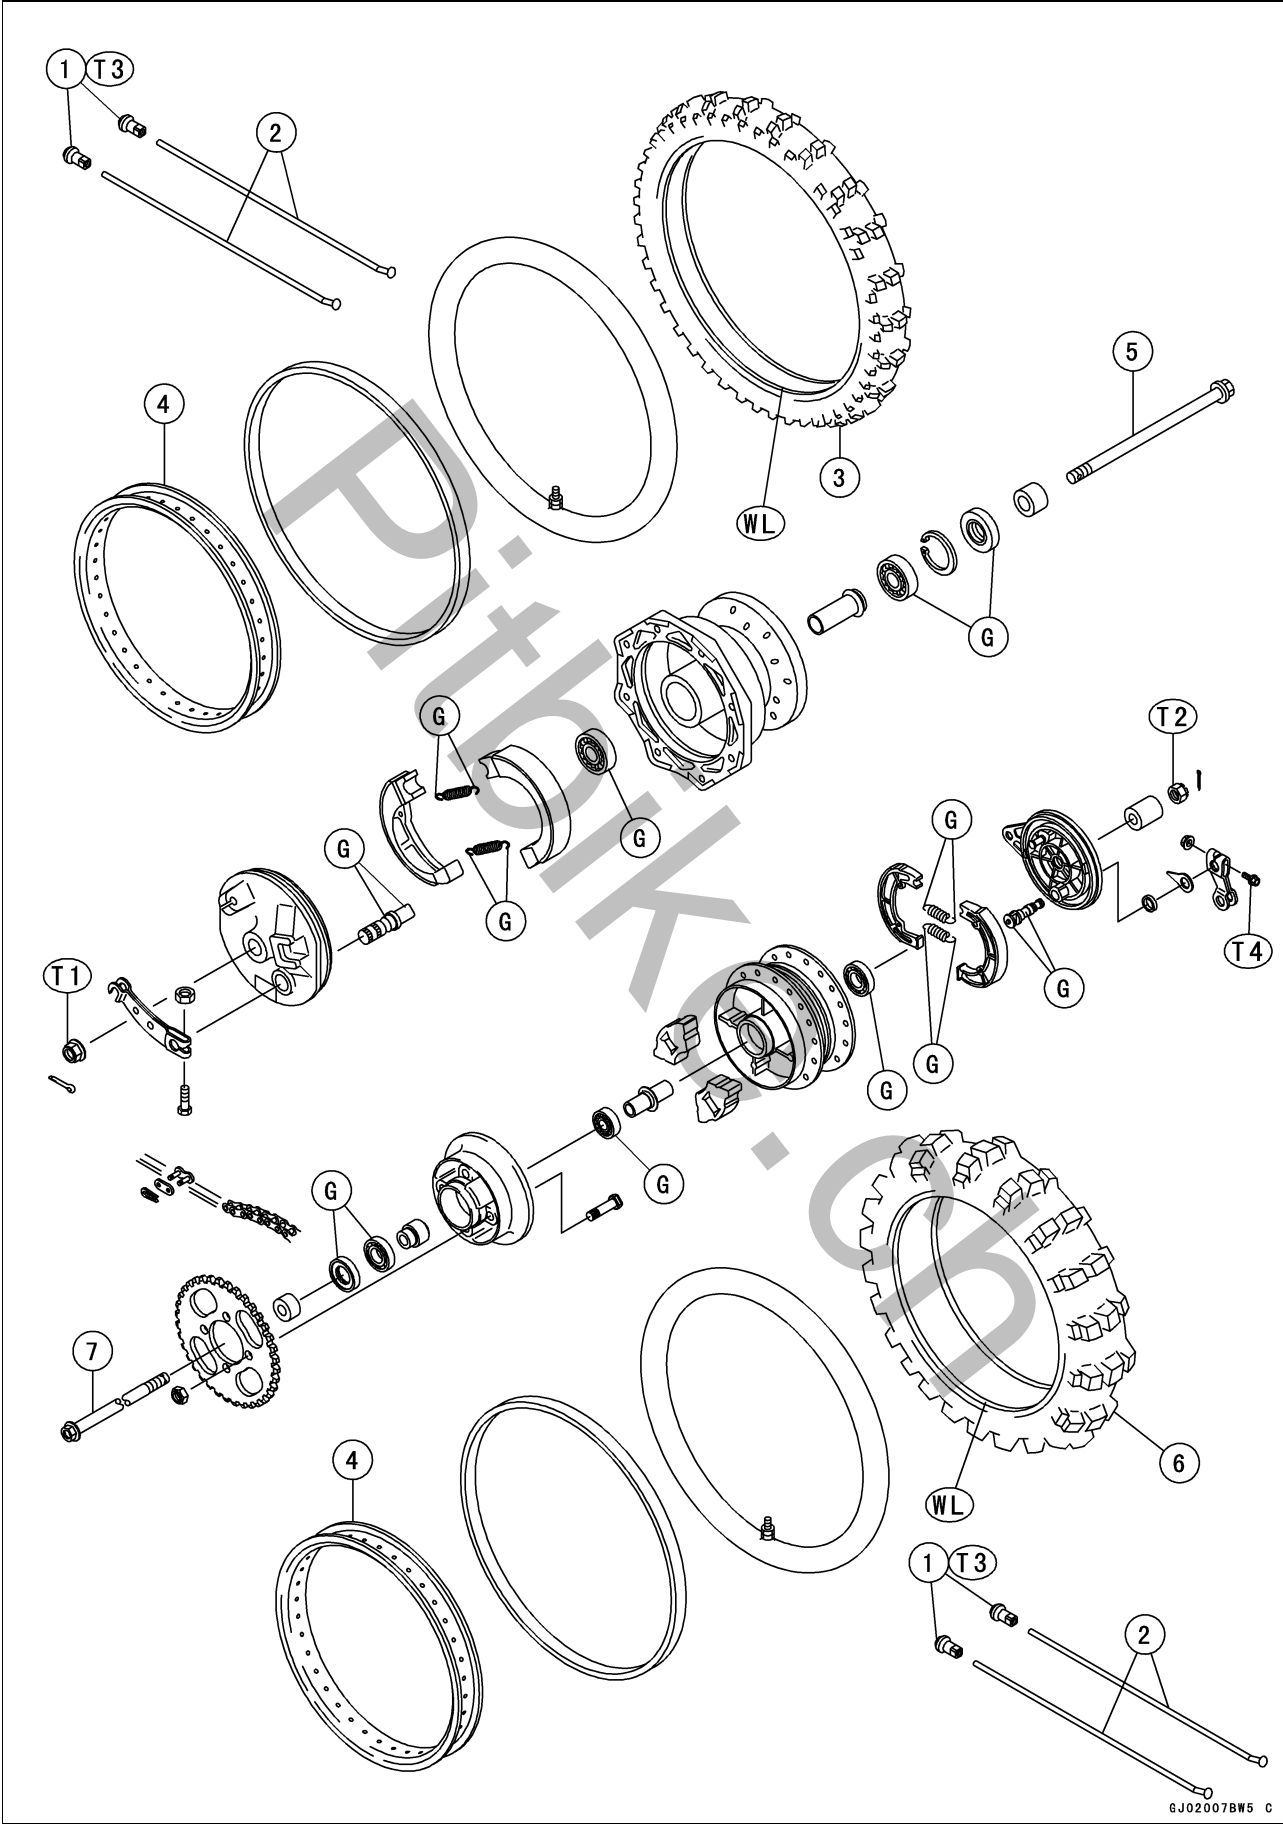



**Exploded View**

---

1. Nipple
2. Spoke
3. Front Tire
4. Rim
5. Front Axle
6. Rear Tire
7. Rear Axle

G: Apply high-temperature grease.

WL: Apply soap and water solution or rubber lubricant.

T1: 44 N·m (4.5 kgf·m, 32 ft·lb)

T2: 64 N·m (6.5 kgf·m, 47 ft·lb)

T3: 1.2 N·m (0.12 kgf·m, 10 in·lb)

T4: 7 N·m (0.7 kgf·m, 60 in·lb)

Pitbike.com

## 9-4 WHEELS / TIRES

### Specifications

Item		Standard	Service Limit
<b>Wheels:</b>			
Rim runout:	Axial	0.5 mm or less	2 mm
	Radial	0.8 mm or less	2 mm
Axle runout/100 mm (Rear: 110 mm)		0.1 mm	0.2 mm
<b>Tires:</b>			
Standard tire:			---
Front:	Size	2.50-14 4PR	---
	Make	CHENG SHIN	---
	Type	C803	---
Rear:	Size	3.00-12 4PR	---
	Make	CHENG SHIN	---
	Type	C803	---
Tire air pressure:	Front	100 kPa (1.0 kgf/cm <sup>2</sup> , 14 psi)	---
	Rear	100 kPa (1.0 kgf/cm <sup>2</sup> , 14 psi)	---

**Special Tools - Bearing Driver Set: 57001-1129**

**Jack: 57001-1238**

**Bead Breaker Assembly: 57001-1072**

**Rim Protector: 57001-1063**

**Tire Iron Protection of the Bead Bracker Assembly: 57001-1072**


**Bearing Remover Shaft  $\phi 9$ : 57001-1265**

**Bearing Remover Head  $\phi 10 \times \phi 12$ : 57001-1266**

## Wheels (Rims)


### Front Wheel Removal

- Remove:
  - Cotter Pin [A]
  - Front Axle Nut [B]
- Using a jack, raise the front wheel off the ground.
- Remove:
  - Front Brake Cable End [C]
  - Front Axle [D]
  - Front Wheel
  - Front Brake Panel
  - Collar

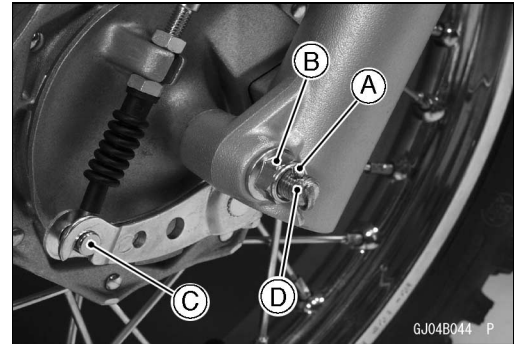


### Front Wheel Installation


- Apply high-temperature grease to the grease seal.
- Install the collar [A] on the right side of the hub.

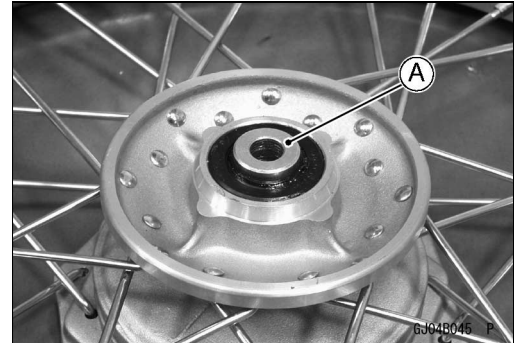

- Fit the tongue [B] on the fork leg into the groove [A] on the front brake panel.

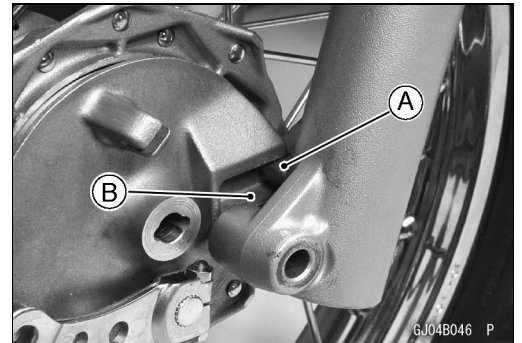


- Tighten the front axle nut [A].
- Torque - Front Axle Nut : 44 N·m (4.5 kgf·m, 32 ft·lb)**
- Install the cotter pin [B] through the front axle nut to front axle and spread its ends.
- Install the front brake cable and adjust it.

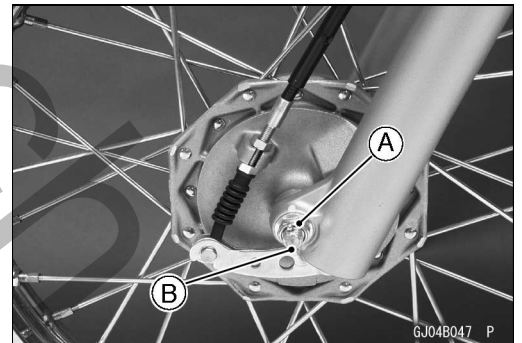

### Rear Wheel Removal

- Using the jack under the frame so that the rear wheel is raised off the ground.
- Special Tool - Jack: 57001-1238**
- Remove the clip [A] from the master link using pliers, and free the drive chain [B] from the rear sprocket.

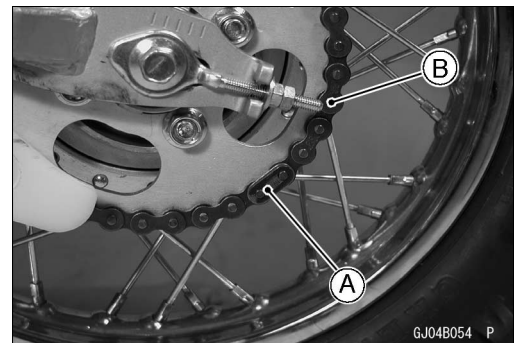

## 9-6 WHEELS / TIRES



### Wheels (Rims)

- Remove:
  - Adjusting Nut [A]
  - Cotter Pin [B]
  - Rear Torque Link Nut [C]
  - Rear Torque Link Bolt [D]
  - Cotter Pin [E]
  - Rear Axle Nut [F]

#### CAUTION


**Do not depress the brake pedal deeply with the brake rod inserted into the brake cam lever joint, this may elongate the spring beyond its allowable spring extension.**

- To remove the brake rod end from the brake cam lever, first turn the brake panel clockwise [A] as far as it will go, then depress the brake pedal lightly, the brake rod [B] will be separated from the brake cam lever joint [C].
- Pull out the rear axle and remove the rear wheel from the rear wheel coupling and from the motorcycle.

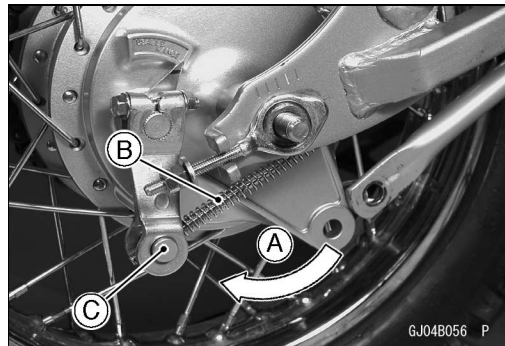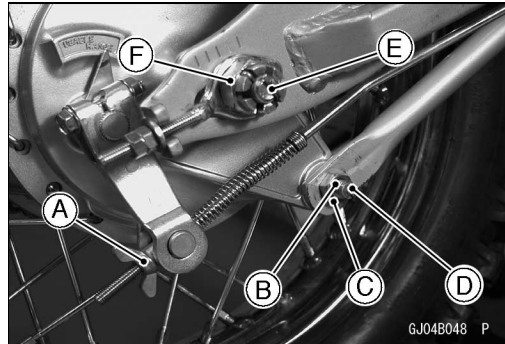

#### Rear Wheel Installation


- Apply high-temperature grease to the grease seal.
- Install the collar [A] on the left and right of the rear hub.
- Install the rear wheel.
- Install the drive chain.
- Adjust the drive chain slack (see Final Drive chapter).
- Turn the brake panel clockwise until the brake cam lever joint goes beyond the brake rod end then insert the brake rod end into the joint hole.

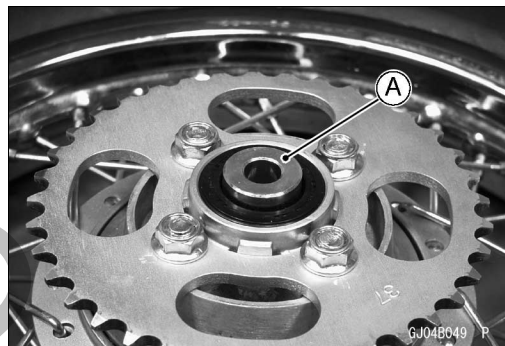

#### CAUTION


**Do not insert the brake rod into the cam lever joint by depressing the brake pedal deeply, this will extend the brake spring beyond its allowable spring extension.**

- Tighten the rear axle nut.
  - Torque - Rear Axle Nut: 64 N·m (6.5 kgf·m, 47 ft·lb)
- Install the torque link [A] so that its "R" mark [B] faces rearward.
- Tighten the torque link nuts.
  - Torque - Torque Link Nut: 25 N·m (2.5 kgf·m, 18 ft·lb)

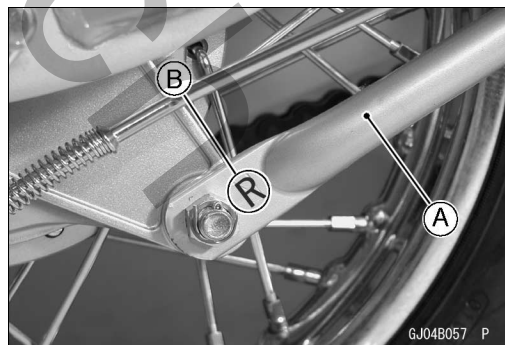

## Wheels (Rims)

- Insert the cotter pins [A] through the torque link bolts [B] and spread its ends.
- Insert the cotter pin through the axle nut to rear axle and spread its ends.
- Adjust:
  - Drive Chain Slack (see Final Drive chapter)
  - Brake Pedal Free Play (see Brakes chapter)

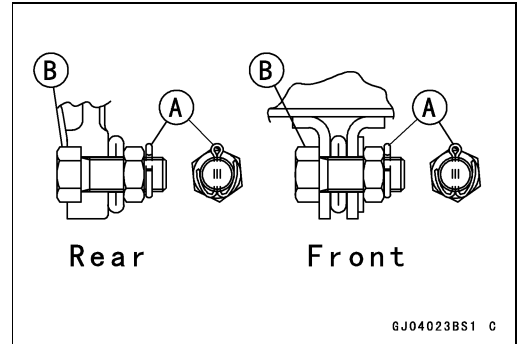

### Wheels Inspection

- Place the jack under the frame so that the front/rear wheel is raised off the ground.

**Special Tool - Jack: 57001-1238**

- Spin the wheel lightly, and check for roughness or binding.
- If roughness or binding is found, replace the hub bearings.
- Visually inspect the front and rear axles for damage.
- If axle damaged or bent, replace it.

### Spoke Tightness Inspection

- Refer to Spoke Tightness Inspection in the Periodic Maintenance Chapter.

### Rim Runout Inspection

- Refer to Rim Runout Inspection in the Periodic Maintenance Chapter.


### Axle Inspection

- Visually inspect the front and rear axle for damages.
- ★ If the axle is damaged or bent, replace it.
- Place the axle in V blocks that are 100 mm (Rear Axle: 110 mm) [A] apart, and set a dial gauge on the axle at a point halfway between the blocks.
- Turn the axle to measure the runout. The difference between the highest and lowest dial readings is the amount of runout.
- ★ If runout exceeds the service limit, replace the axle.

**Axle Runout/100 mm (Rear Axle: 110 mm)**

**Standard: 0.1 mm**

**Service Limit: 0.2 mm**

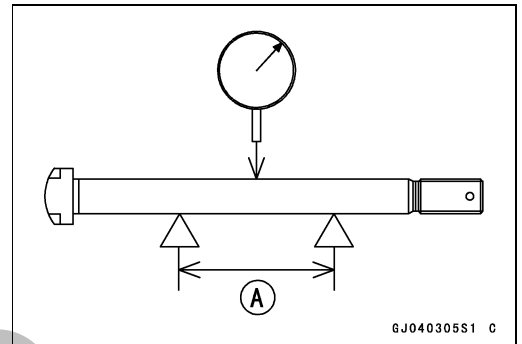

# 9-8 WHEELS / TIRES


## Tires

### Air Pressure Inspection/Adjustment

- Remove the valve cap.
- Using tire air pressure gauge [A], measure the tire pressure when the tires are cold.
- ★ Adjust the tire air pressure to suit track conditions and rider preference, but do not stray too far from the recommended pressure.

Track Condition	Tire Pressure
When the track is wet, muddy, sandy or slippery, reduce the tire pressure to increase the tire tread surface on the ground.	80 kPa (0.8 kg/cm <sup>2</sup> , 11 psi) ↑
When the track is pebbly or hard, increase the tire pressure to prevent damage or punctures, through the tires will skid more easily.	↓ 100 kPa (1.0 kg/cm <sup>2</sup> , 14 psi)

- Tighten the valve cap securely.

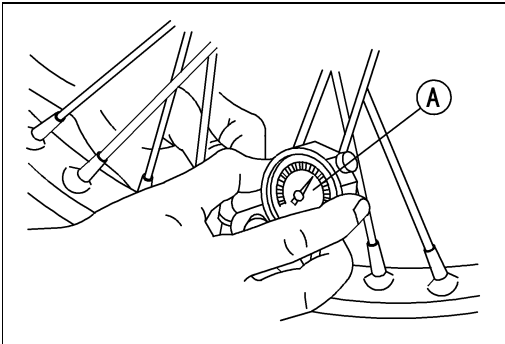

### Tires Inspection

As the tire tread wears down, the tire becomes more susceptible the puncture and failure.

- Remove any imbedded stones or other foreign particles from the tread.
- Visually inspect the tire for cracks and cuts, replacing the tire in case of bad damage. Swelling or high spots indicate internal damage, requiring tire replacement.



### ⚠ WARNING

To ensure safe handling and stability, use only the recommended standard tires for replacement, inflated to the standard pressure.

### NOTE

- Check and balance the wheel when a tire is replaced with a new one.

### Standard Tire

#### Front:

Size: 2.50-14 4PR  
Make: CHENG SHIN  
Type: C803

#### Rear:

Size: 3.00-12 4PR  
Make: CHENG SHIN  
Type: C803

## Tires

### Tire Removal

#### CAUTION

**Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so the disc does not touch the ground.**

- Remove the wheel from the motorcycle (see Wheels Removal).
- To maintain wheel balance, mark [A] the valve stem position on the tire with chalk so that the tire can be reinstalled in the same position.
- Take out the valve core [B] to let out the air.
- Remove the valve stem nut [C].
- When handling the rim, be careful not to damage the rim flanges.
- Remove the bead protector nut.
- Lubricate the tire beads and rim flanges on both sides with a soap and water solution or rubber lubricant. This helps the tire beads slip off the rim flanges.

#### CAUTION

**Never lubricate with mineral oil (engine oil) or gasoline because they will cause deterioration of the tire.**

- Break the beads away from both sides of the rim with the bead breaker [A].

**Special Tools - Bead Breaker Assembly: 57001-1072**

- Step on the side of the tire opposite valve stem, pry the tire off the rim with the tire iron [A] of the bead breaker protecting the rim with rim protectors [B].




**Special Tools - Rim Protector: 57001-1063**

**Tire Iron Protection of the Bead Breaker Assembly: 57001-1072**

#### CAUTION

**Take care not to inset the tire irons so deeply that the tube gets damaged.**

- Remove the tube when one side of the tire is pried off.
- Pry the tire off the rim.

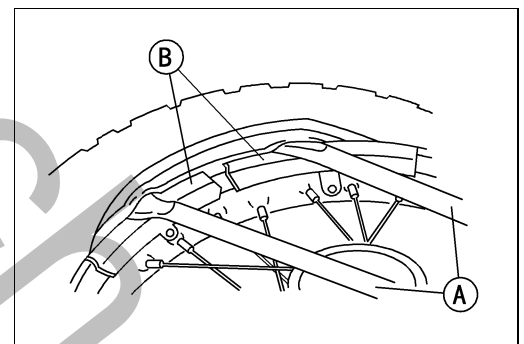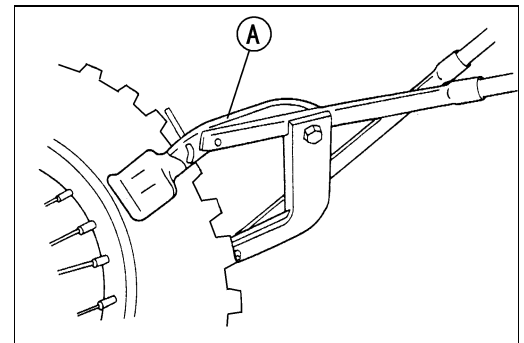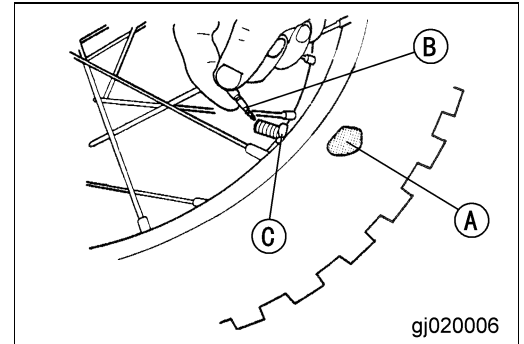

## 9-10 WHEELS / TIRES


### Tires

#### *Tire Installation*

- Inspect the rim and tire, and replace them if necessary.
- Install the tube.
- Apply a soap and water solution, or rubber lubricant to the rim flange and tire beads.
- Position the tire on the rim so that the valve [A] is at the tire balance mark [B] (the chalk mark made during removal, or the yellow paint mark on a new tire. see Tire Removal).
- Insert the valve stem into the rim, and screw the nut on loosely.
- Fit the rim protectors and use tire irons to install the tire bead.

#### **NOTE**

- *To prevent rim damage, be sure to place the rim protectors at any place the tire irons are applied.*
- Pry one side of the tire back onto the rim. Fit the bead protector into the tire.
- Pry the other side of the tire onto the rim, starting at the side opposite the valve.
- Take care not to insert the tire irons so deeply that the tube is damaged.
- Install the other side of the tire bead onto the rim in the same manner.
- Check that the tube is not pinched between the tire and rim.
- Tighten the bead protector nut and valve stem nut, and put on the valve cap.
- Check and adjust the air pressure after installing.

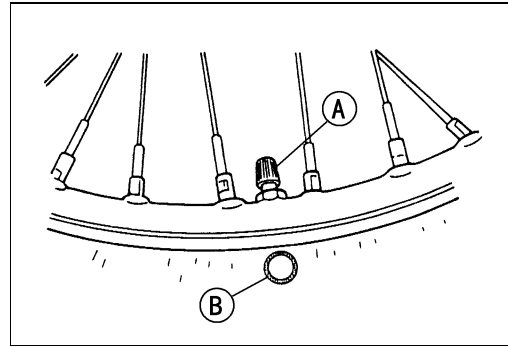




## Hub Bearing

### Hub Bearing Removal

- Remove the wheel.
- To remove the grease seals, pry out the grease seal using a screwdriver.
- Using the bearing remover shaft and bearing remover head, remove the hub bearings [A].

**Special Tools - Bearing Remover Shaft,  $\phi 9$ : 57001-1265 [B]**

**Bearing Remover Head,  $\phi 10 \times \phi 12$ : 57001-1266 [C]**

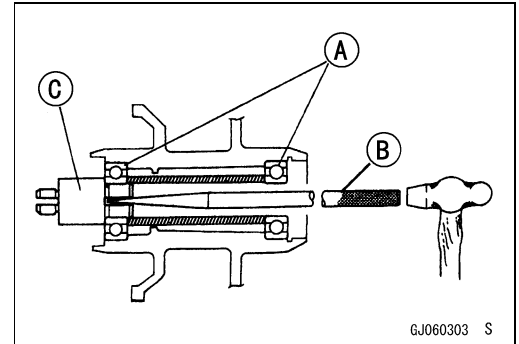

### Hub Bearing Installation

- Before installing the hub bearings, blow any dirt or foreign particles out the hub with compressed air to prevent contamination of the bearings.
- Replace the bearings with new ones.
- Install the bearings [A] using the bearing driver set [B] so that the marked or shield sides face out.
- Press in the bearings until they bottom out.



**Special Tool - Bearing Driver Set: 57001-1129**

#### NOTE

- For correct tire alignment, the right bearing must be installed first rather than left bearing in both front and rear hubs.

- Replace the grease seal [A] with new ones.
- Apply high-temperature grease to the grease seal lips.
- Press in the grease seal so that the seal surface is flush [B] with the end of the hole using the bearing driver set [C].

**Special Tool - Bearing Driver Set: 57001-1129**

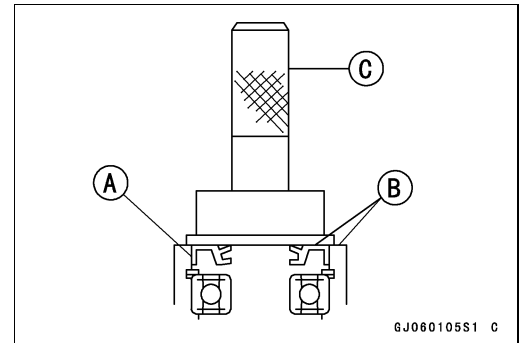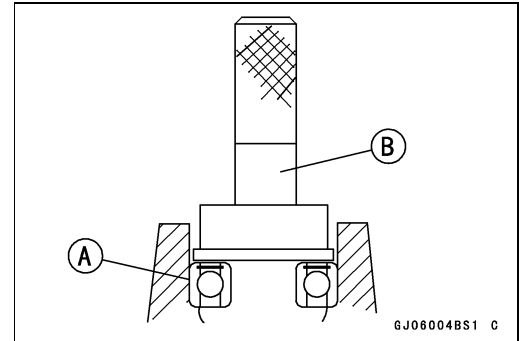


### Bearing Inspection

Since the hub bearings are made to extremely close tolerances, the clearance cannot normally be measured.

#### CAUTION

**Do not remove any bearings for inspection. If any bearings are removed, they will need to be replaced with new ones.**

- Turn each bearing in the hub back and forth [A] while checking for plays, roughness, or binding. If bearing play, roughness, or binding is found, replace the bearing.
- Examine the bearing seal [B] for damage or leakage.
- ★ If the seal is damaged or is leaking, replace the bearing.

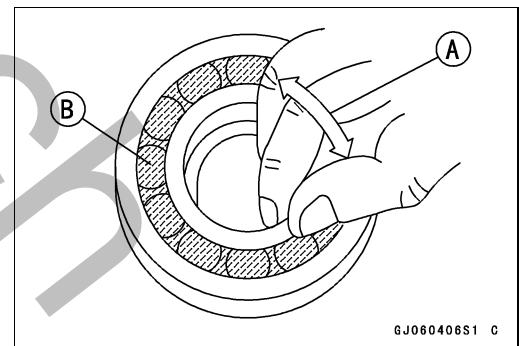


## 9-12 WHEELS / TIRES

### Hub Bearing

#### *Bearing Lubrication*

- Remove the hub bearings on the front and rear wheel hubs.
- Wash the bearings with a high-flash-point solvent, dry them (do not spin them while they are dry), and oil them.
- Spin each bearings by hand to check its condition.
- ★ If it is noisy, does not spin smoothly, or has any rough spots, it must be replaced.
- If the same bearing is to be used again, re-wash it with a high-flash-point solvent, and dry it.
- Pack each bearings with good quality bearing grease [A] before installation. Turn each bearing around by hand a few times to make sure the grease is distributed uniformly inside the bearing, and wipe the old grease out of the bearing housings on the wheel hub before bearing installation.
- Install the bearings.

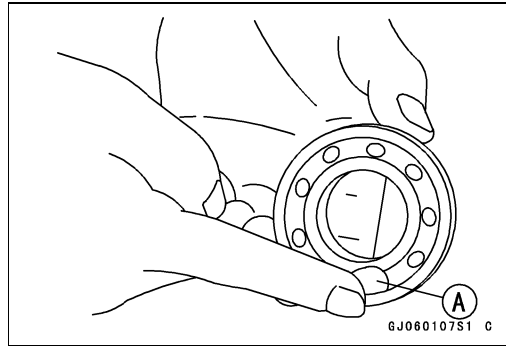


# Final Drive

## Table of Contents

Exploded View.....	10-2
Specifications.....	10-4
Drive Chain.....	10-5
Chain Slack Inspection.....	10-5
Chain Slack Adjustment.....	10-5
Drive Chain Removal.....	10-5
Drive Chain Installation.....	10-5
Chain Wear Inspection.....	10-5
Chain Lubrication.....	10-5
Sprockets, Coupling.....	10-6
Engine Sprocket Removal.....	10-6
Engine Sprocket Installation.....	10-6
Rear Sprocket Removal.....	10-7
Rear Sprocket Installation.....	10-7
Sprocket Wear Inspection.....	10-7
Sprocket Diameter Inspection.....	10-7
Rear Sprocket Warp Inspection.....	10-7
Coupling Bearing Removal.....	10-8
Coupling Bearing Installation.....	10-8
Coupling Bearing Inspection and Lubrication.....	10-8
Coupling Damper Inspection.....	10-8

## 10-2 FINAL DRIVE

### Exploded View

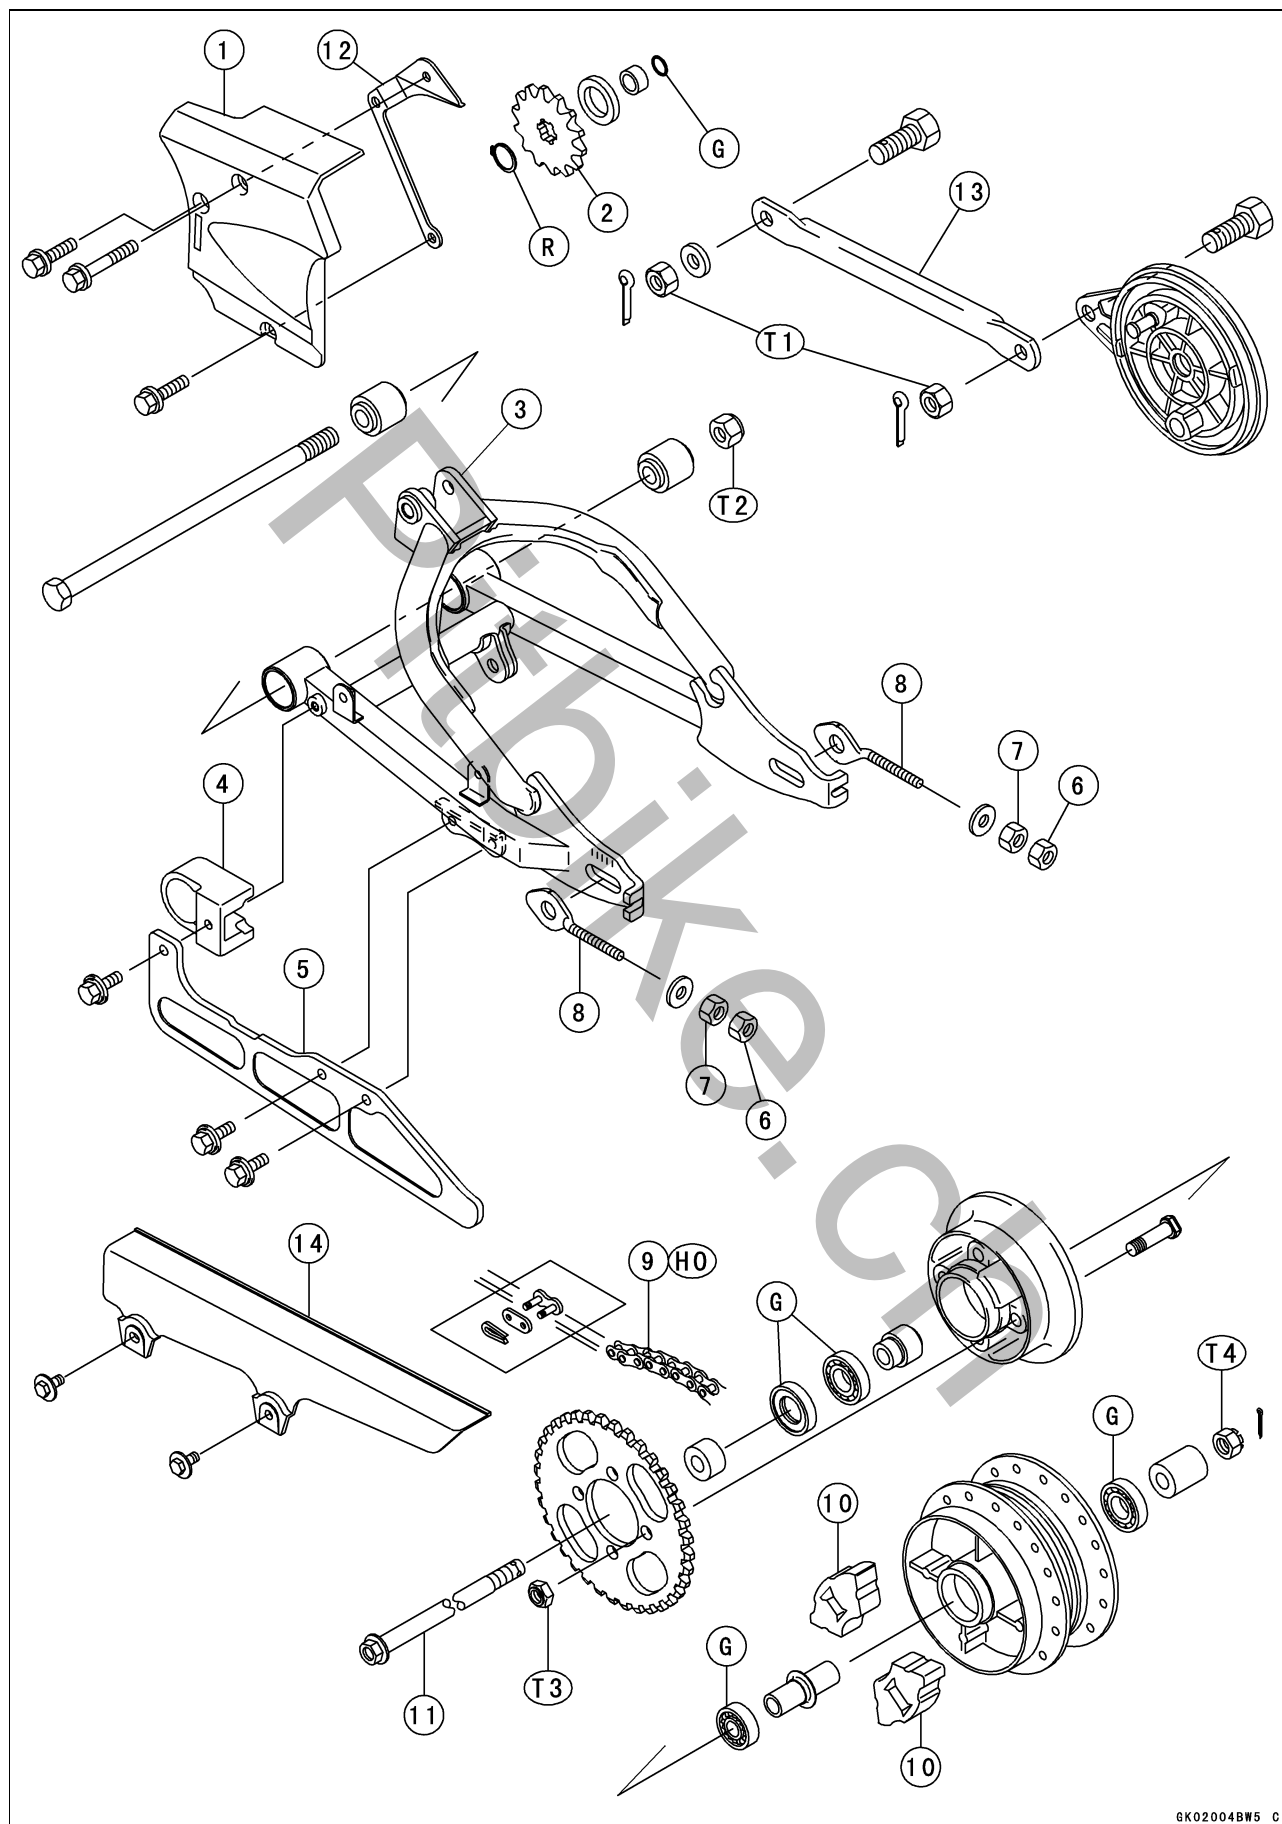

---

**Exploded View**

---

1. Engine Sprocket Cover
  2. Engine Sprocket
  3. Swingarm
  4. Chain Slipper
  5. Chain Guide
  6. Locknut
  7. Adjusting Nut
  8. Chain Adjuster
  9. Drive Chain
  10. Coupling Damper
  11. Rear Axle
  12. Chain Tension Guide
  13. Torque Link
  14. Chain Cover
- T1: 25 N·m (2.5 kgf·m, 18 ft·lb)  
T2: 78 N·m (8.0 kgf·m, 58 ft·lb)  
T3: 34 N·m (3.5 kgf·m, 25 ft·lb)  
T4: 64 N·m (6.5 kgf·m, 47 ft·lb)  
G: Apply high-temperature grease.  
HO: Apply heavy oil.  
R: Replacement part

## 10-4 FINAL DRIVE

### Specifications

Item	Standard	Service Limit:
<b>Drive Chain:</b>		
Make/type	DID 420MBK1 88 links	- - -
Drive chain slack	0 ~ 5 mm	- - -
20 link length	254.0 ~ 254.6 mm	259 mm
<b>Sprocket:</b>		
Engine sprocket diameter	49.1 ~ 49.3 mm	48.4 mm
Rear sprocket diameter	141.76 ~ 142.26 mm	141.5 mm
Rear sprocket warp	Less than 0.4 mm	0.5 mm

**Special Tools - Outside Circlip Pliers: 57001-144**

**Bearing Driver Set: 57001-1129**

## Drive Chain

### Chain Slack Inspection

- Refer to Chain Slack Inspection in the Periodic Maintenance Chapter.

### Chain Slack Adjustment

- Refer to Chain Slack Adjustment in the Periodic Maintenance Chapter.

### Drive Chain Removal

- Remove:
  - Drive Chain Cover
  - Engine Sprocket Cover
- Remove the clip from the drive chain master link using pliers and remove the master link.
- Free the drive chain from the sprockets, being careful that the chain does not get dirty from contact with the ground.



### Drive Chain Installation

- The direction of the master link clip [A] must be as shown.
- [B] Direction of Drive Chain Rotation

#### **⚠ WARNING**

**Incorrect installation of the master link clip can allow it to catch on an adjacent part. If the clip dislodges, the chain could come a part, and this could result in rear wheel lockup and loss of control.**

- Adjust the chain slack.
- Put the chain tension guide [A] on the engine sprocket cover [B], and install the sprocket cover.

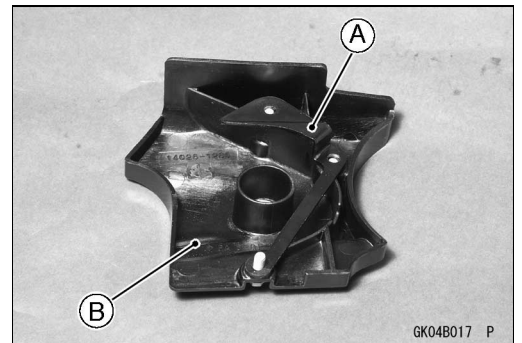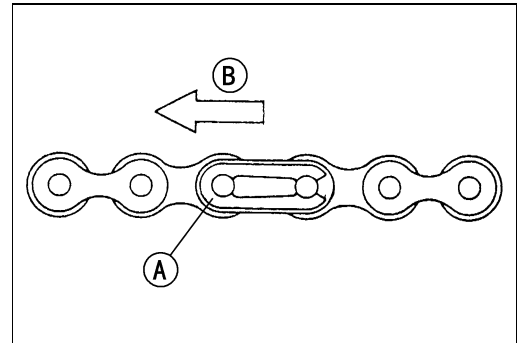

### Chain Wear Inspection

- Refer to Chain Wear Inspection in the Periodic Maintenance Chapter.

### Chain Lubrication


- Refer to Chain Lubrication in the Periodic Maintenance Chapter.

## 10-6 FINAL DRIVE

### Sprockets, Coupling


#### Engine Sprocket Removal

- Remove:
  - Bolts [A]
  - Engine Sprocket Cover [B]

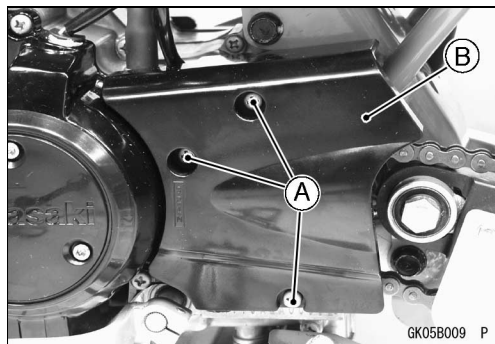


- Remove the circlip [A] and take off the sprocket [B] with drive chain [C].
- Pull the collar and O-ring off the output shaft.

**Special Tool - Outside Circlip Pliers: 57001-144**

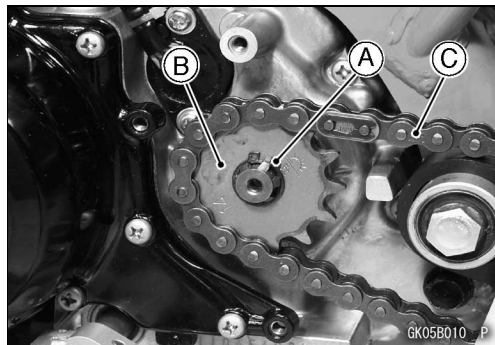


#### Engine Sprocket Installation


- Apply high-temperature grease to the O-ring.
- Install the O-ring [A] and collar [B] to the output shaft.
- The chamfered side [C] of the collar must be faced in.

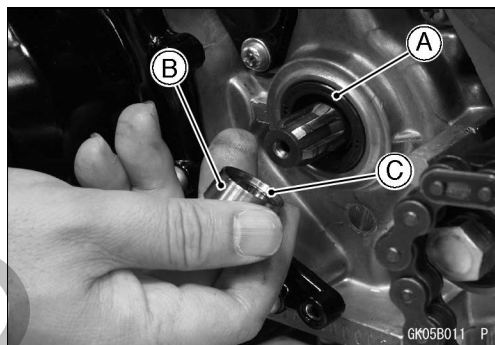

- Install the engine sprocket [A] and drive chain together.
- Fit the circlip [B] with the round side facing [C] in as shown.
- Adjust the drive chain slack if necessary.

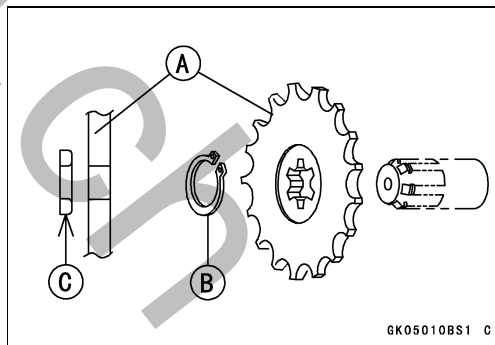

- Put the chain tension guide [A] on the engine sprocket cover [B], and install the sprocket cover.

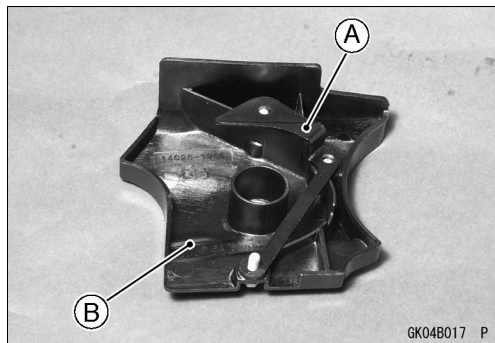




## Sprockets, Coupling

### Rear Sprocket Removal

- Remove the rear wheel (see Wheels/Tires chapter).
- Unscrew the rear sprocket bolts [A], and remove the rear sprocket [B].

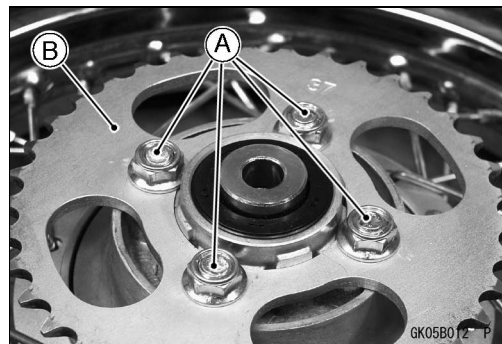


### Rear Sprocket Installation

- Install the rear sprocket facing the tooth number making [A] outward.
- Tighten the rear sprocket nuts.

**Tightening Torque - Rear Sprocket Nut: 34 N·m (3.5 kgf·m, 25 ft·lb)**

- Install the rear wheel.

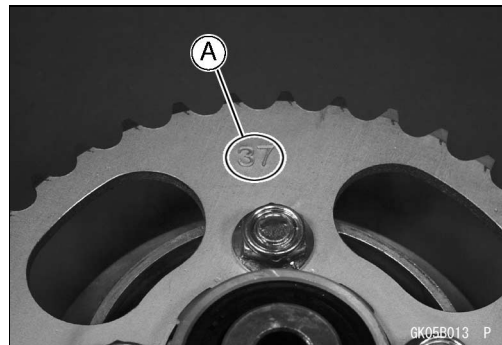

### Sprocket Wear Inspection


- Refer to Sprocket Wear Inspection in the Periodic Maintenance Chapter.

### Sprocket Diameter Inspection

- Measure the diameter [A] of the sprocket at the base of the tooth.
- ★ If the sprocket is worn down to less than the service limit, replace the sprocket.

#### Sprocket Diameter

	Engine Sprocket	Rear Sprocket
Standard:	49.1 ~ 49.3 mm	141.76 ~ 142.26 mm
Service Limit:	48.4 mm	141.5 mm

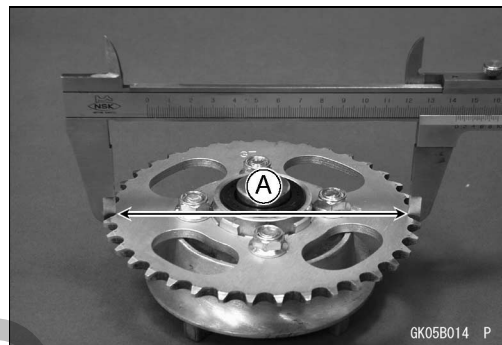


### Rear Sprocket Warp Inspection

- Raise the rear wheel so that it will turn freely, and set a dial gauge [A] against the rear sprocket [B] near the teeth as shown in the figure.
- Rotate [C] the rear wheel, and read the dial gauge. The difference between the highest and lowest dial gauge readings is the amount of runout (warp).
- ★ If the runout exceeds the service limit, replace the rear sprocket.

#### Rear Sprocket Warp

Standard:	Less than 0.4 mm
Service Limit:	0.5 mm

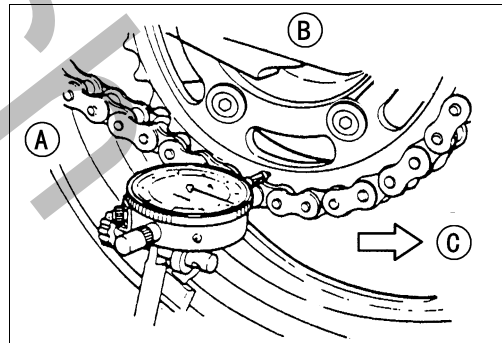


## 10-8 FINAL DRIVE

### Sprockets, Coupling

#### *Coupling Bearing Removal*

- Pull out the coupling collar from the left.
- Remove the oil seal.
- Using the bearing driver set [A] or some other suitable tool, remove the bearing [B] by tapping from the drum side.

**Special Tools - Bearing Driver Set: 57001-1129**

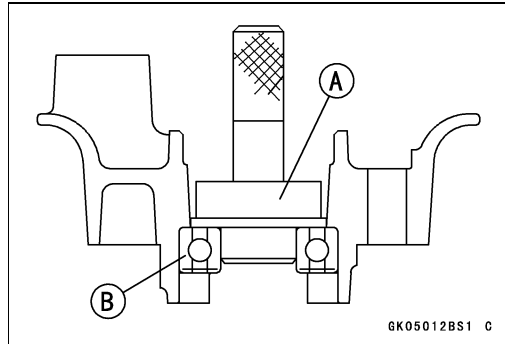

#### *Coupling Bearing Installation*


- Inspect the bearing, and replace it if necessary.
- Press in the bearing so that the marked side faces out until it is bottomed.
- Replace the oil seal with a new one.
- Press in the oil seal so that the seal surface is flush with the end of the hole.
- Apply high-temperature grease to the oil seal lips.

**Special Tool - Bearing Driver Set: 57001-1129**

#### *Coupling Bearing Inspection and Lubrication*


Since the coupling bearing is made to extremely close tolerances, the clearance cannot normally be measured.

- Wash the bearing with a high-flash-point solvent, dry it (do not spin it while it is dry), and oil it. Spin it by hand to check its condition.
- ★ If it is noisy, doesn't spin smoothly, or has any rough spots, it must be replaced.
- If the bearing is to be used again, rewash it with a high-flash-point solvent, dry it, and pack it with good quality bearing grease. Turn the bearing around by hand a few times to make sure the grease [A] is distributed uniformly inside the bearing, and wipe the old grease out of the coupling before bearing installation.

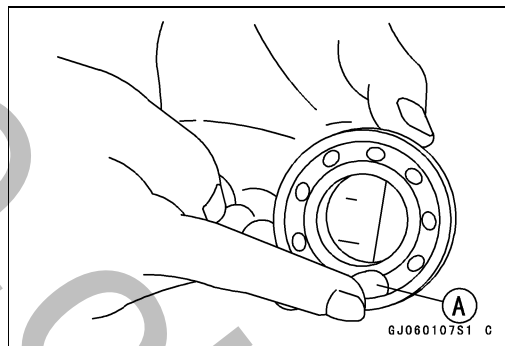

#### *Coupling Damper Inspection*

- Remove the rear wheel coupling, and inspect the rubber dampers [A].
- ★ Replace the dampers if they appear damaged or deteriorated.

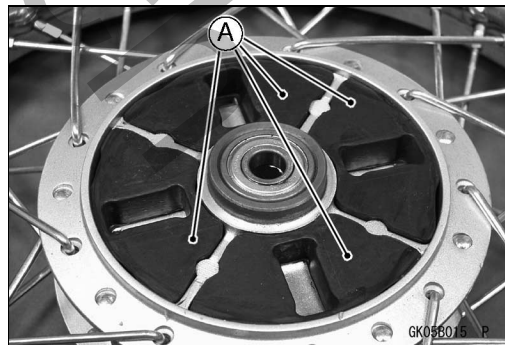


# Brakes

## Table of Contents

Exploded View.....	11-2
Specifications.....	11-6
Brake Lever, Brake Pedal.....	11-7
Brake Lever, Brake Pedal Free Play Inspection.....	11-7
Front Brake Free Play Adjustment.....	11-7
Brake Pedal Free Play Adjustment.....	11-7
Brake Cable Removal.....	11-7
Brake Cable Installation.....	11-7
Brake Cable Lubrication.....	11-7
Brake Pedal and Rod Removal.....	11-7
Brake Pedal and Rod Installation.....	11-8
Brake Panel and Drum.....	11-9
Brake Lining Wear Inspection.....	11-9
Cam Lever Angle Adjustment.....	11-9
Brake Panel Removal.....	11-9
Brake Panel Installation.....	11-9
Brake Panel Disassembly.....	11-9
Brake Panel Assembly.....	11-10
Brake Drum Wear Inspection.....	11-10
Brake Shoe Lining Wear Inspection.....	11-10
Camshaft Wear Inspection.....	11-11
Brake Shoe Springs Inspection.....	11-11
Brake Panel Lubrication.....	11-11

## 11-2 BRAKES

### Exploded View

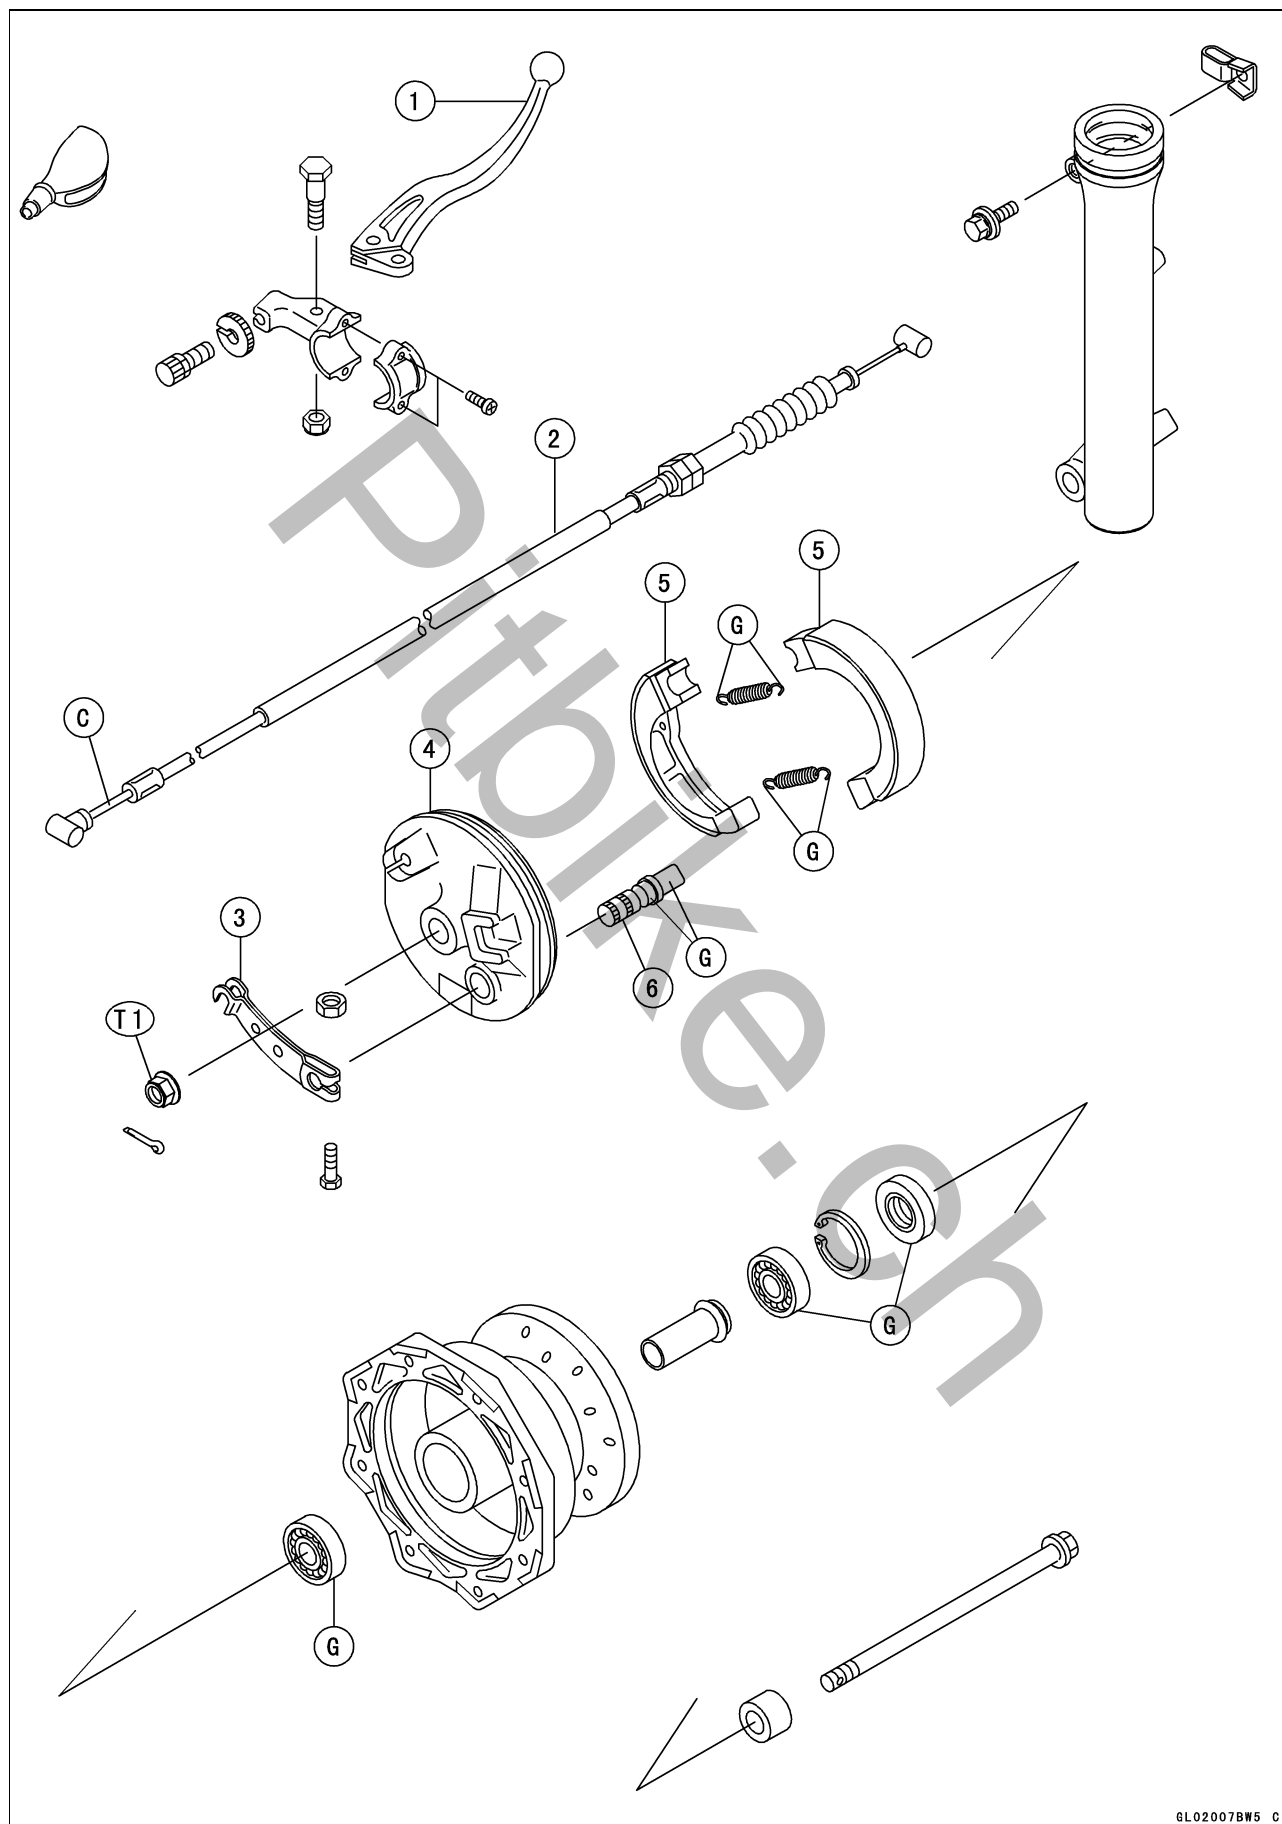

**Exploded View**

---

C: Apply cable lubricant.

G: Apply grease.


T1: 44 N·m (4.5 kgf·m, 32 ft·lb)

1. Brake Lever
2. Brake Cable
3. Cam Lever
4. Brake Panel
5. Brake Shoe
6. Camshaft

Pitbike.com

## 11-4 BRAKES

### Exploded View

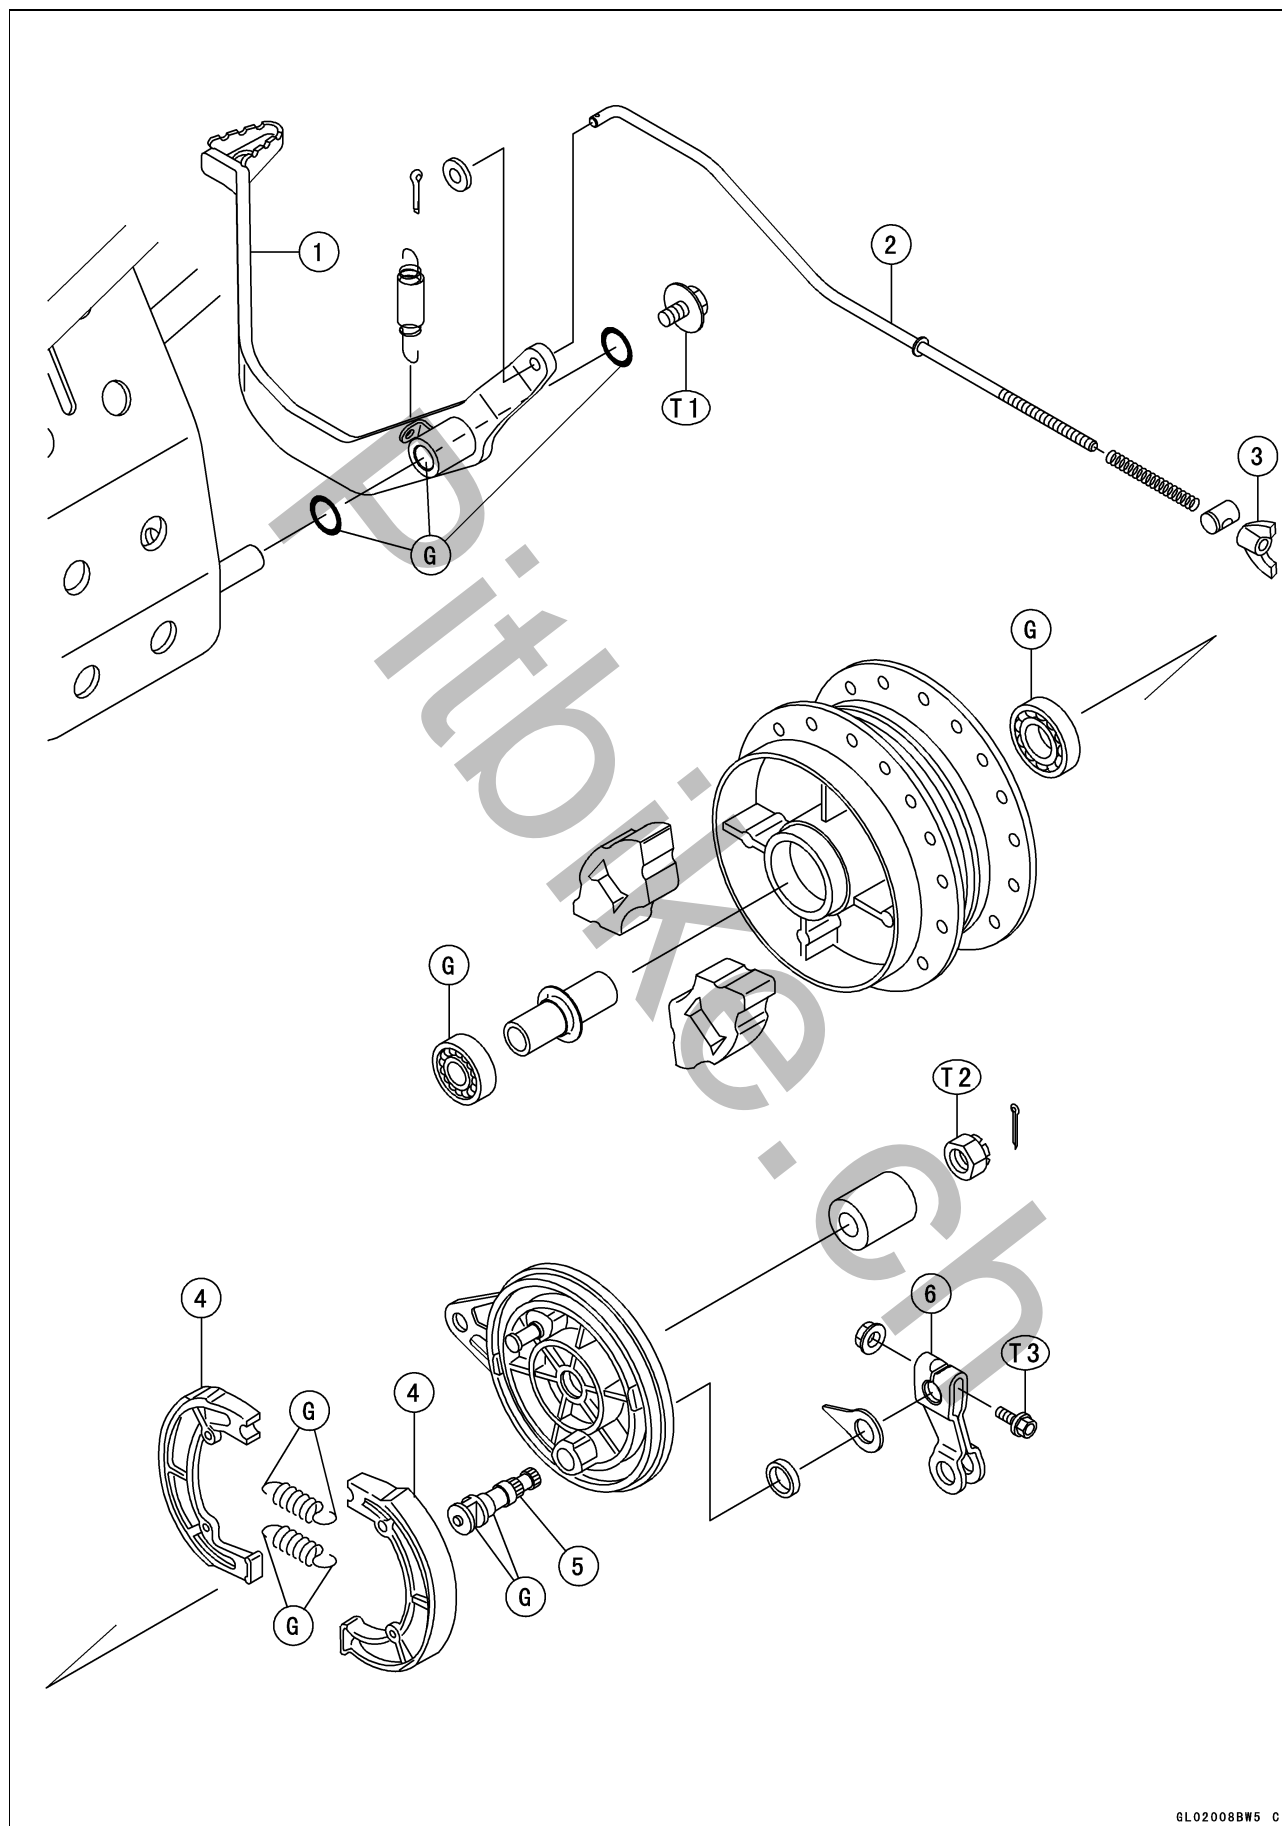

---

**Exploded View**

---

1. Brake Pedal
2. Brake Lod
3. Adjusting Nut
4. Brake Shoe
5. Camshaft
6. Cam Lever

G: Apply grease.

T1: 8.8 N·m (0.9 kgf·m 79 in·lb)

T2: 64 N·m (6.5 kgf·m, 47 ft·lb)

T3: 7 N·m (0.7 kgf·m, 60 in·lb)

Pitbike.ch

## 11-6 BRAKES

### Specifications

Item		Standard	Service Limit
<b>Brake Lever and Pedal:</b>			
Brake lever free play		4 ~ 5 mm	- - -
Brake pedal free play		20 ~ 30 mm	- - -
<b>Brake Drum, Brake Shoes:</b>			
Shoe lining thickness	Front	2.10 ~ 3.00 mm	1.2 mm
	Rear	3.85 ~ 4.15 mm	2.0 mm
Shoe spring free length	Front	30.8 ~ 31.2 mm	32.6 mm
	Rear	32.5 mm	34.1 mm
Drum inside diameter	Front	90.000 ~ 90.087 mm	90.75 mm
	Rear	110.000 ~ 110.087 mm	110.75 mm
Camshaft diameter	Front	11.957 ~ 11.984 mm	11.88 mm
	Rear	14.957 ~ 14.984 mm	14.88 mm
Camshaft hole inside diameter	Front	12.000 ~ 12.027 mm	12.15 mm
	Rear	15.000 ~ 15.027 mm	15.15 mm
Cam lever angle		80° ~ 90°	- - -

**Special Tool - Inside Circlip Pliers: 57001-143**



## Brake Lever, Brake Pedal

### Brake Lever, Brake Pedal Free Play Inspection

- Refer to Brake Lever, Brake Pedal Free Play Inspection in the Periodic Maintenance Chapter.

### Front Brake Free Play Adjustment


- Refer to Front Brake Free Play Adjustment in the Periodic Maintenance Chapter.

### Brake Pedal Free Play Adjustment

- Refer to Brake Pedal Free Play Adjustment in the Periodic Maintenance Chapter.

### Brake Cable Removal

- Free the brake cable from the brake lever.
- Remove:
  - Front Brake Adjusting Nuts [A]
  - Brake Cable Lower End [B]
  - Front Brake Cable Guide Clamp [C]
- Pull the brake cable out of the frame.

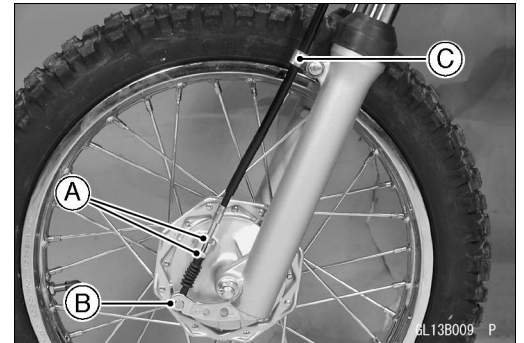

### Brake Cable Installation


- Run the brake cable according to the Cable, Wire, and Hose Routing Section of the General Information chapter.
- Adjust the brake lever free play.

### Brake Cable Lubrication

- Whenever the cable is removed, or in accordance with the Periodic Maintenance Chart, lubricate the brake cable. Refer to General Lubrication in the Periodic Maintenance Chapter.
- Apply a thin coating of grease to the cable upper end.
- Use a commercially available pressure cable lubricator to lubricate the cable.
- With the cable disconnected at both ends, the cable should move freely in the cable housing.

### Brake Pedal and Rod Removal


- Remove:
  - Rear Brake Adjusting Nut [A]
  - Brake Rod [B]
  - Brake Cam Lever Joint [C]
  - Spring [D]

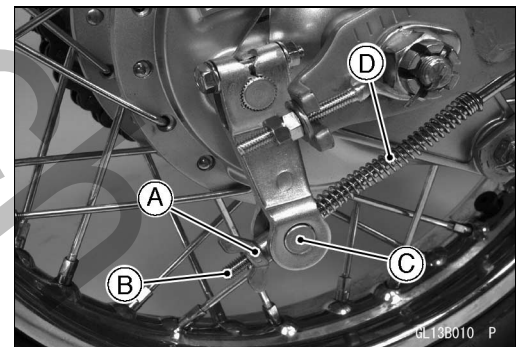


## 11-8 BRAKES

### Brake Lever, Brake Pedal

Brake Pedal Return Spring [A]  
Brake Pedal Mounting Bolt [B]  
Brake Pedal [C] with Rod [D]

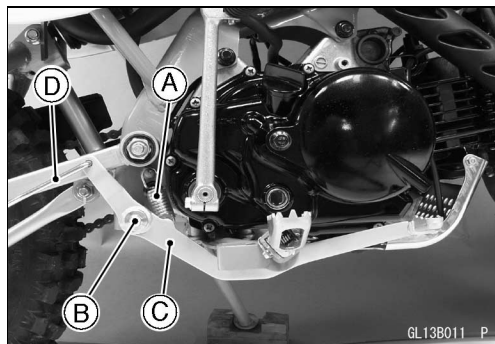

Cotter Pin [A]  
Washer [B]  
O-rings [C]

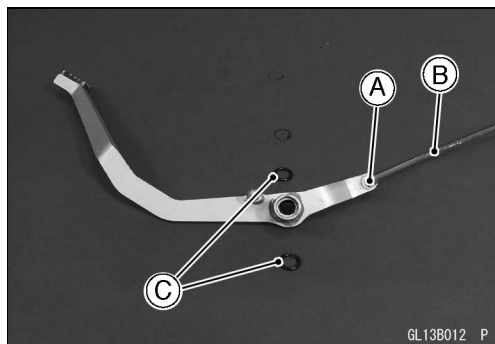


#### *Brake Pedal and Rod Installation*

- Brake pedal and rod installation is the reverse of removal.
- Bend the cotter pin [A] securely on both side as shown.



- Apply a multi purpose grease to the pedal pivot and O-rings.
  - Before installing the brake pedal, set in the return spring each end to the brake pedal.
  - Install the return spring [A] so that its long hook portion [B] faces downward.
  - Tighten the brake pedal mounting bolt.
- Torque - Brake Pedal Mounting Bolt: 8.8 N·m (0.9 kgf·m, 79 in·lb)**
- Adjust the brake pedal free play.

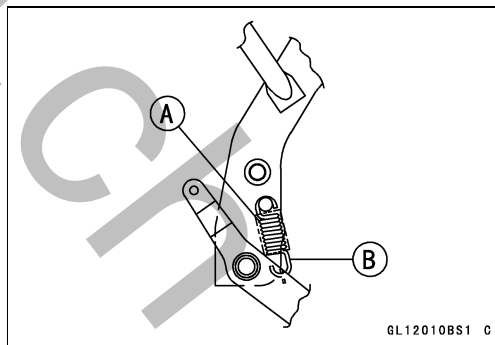

## Brake Panel and Drum

### *Brake Lining Wear Inspection*

- Refer to Brake Lining Wear Inspection in the Periodic Maintenance Chapter.

### *Cam Lever Angle Adjustment*

- Refer to Cam Lever Angle Adjustment in the Periodic Maintenance Chapter.

### *Brake Panel Removal*

- Remove the front or rear wheel (see Wheels/Tires chapter).
- Separate the brake panel [A] from the wheel.



### *Brake Panel Installation*


- Installation is the reverse of removal.
- Adjust the brake lever and pedal free play.

### *Brake Panel Disassembly*


#### **CAUTION**

**Do not depress the brake pedal deeply in order to separate the brake rod from the brake cam lever joint, this may extend the brake spring beyond its allowable spring extension. Rotate the rear brake panel clockwise as far as it will go with the brake rod inserted into the brake cam lever joint, then depress the brake pedal lightly, the brake rod will be separated from the brake cam lever joint.**

- Remove the wheel and separate the brake panel from the wheel.
- Using a clean cloth around the linings to prevent grease or oil from getting on them, remove and install the brake shoes [A] by pulling up on the center of the linings.

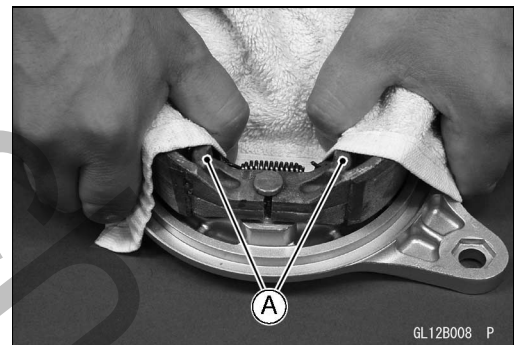

- Mark the position [A] of the cam lever before removal so that it can be installed later in the same position.
- Remove the brake cam lever.
- Pull the brake camshaft out from the brake panel inside.

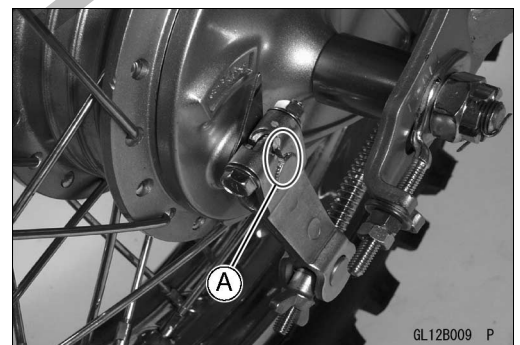


## 11-10 BRAKES

### Brake Panel and Drum


#### Brake Panel Assembly

- Lubricate the brake camshaft.
- Fit the indicator [A] on the serration so that it points to the extreme right of the USABLE RANGE [B] (Rear panel only).

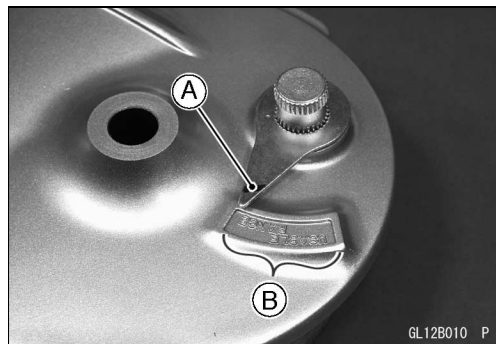

#### Brake Drum Wear Inspection

- ★ If the drum is worn unevenly or if it is scored, turn the drum down on a brake drum lathe or replace the hub with a new one. (Do not turn it down to the service limit, and do not turn it down if any diameter measurement exceeds the service limit.)
- Measure the inside diameter [A] of the brake drum. Since uneven drum wear will decrease braking effectiveness, take measurement at a minimum of two places.
- ★ If any diameter measurement exceeds the service limit, replace the hub with a new one.

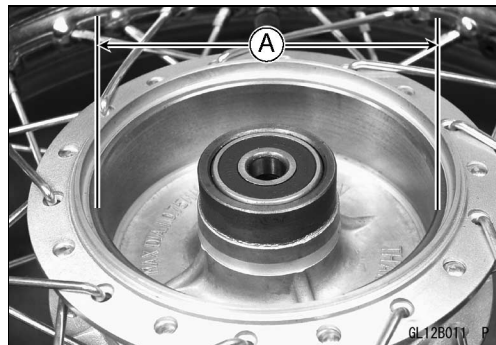

#### Brake Drum Inside Diameter

##### Front:


Standard:	90.000 ~ 90.087 mm
Service Limit:	90.75 mm

##### Rear:

Standard:	110.000 ~ 110.087 mm
Service Limit:	110.75 mm

#### Brake Shoe Lining Wear Inspection

- Visually inspect the linings for uneven wear, and file or sand down any high spots. With a wire brush, remove any foreign particles imbedded in the lining surface. Wash off any oil or grease with a high-flash-point solvent. Do not use one which will leave an oily residue.
- ★ If the linings are damaged or the surface cannot be restored by sanding and cleaning, replace the shoes as a set.
- Measure the thickness of the brake linings.
- ★ If the thickness [A] at any point is less than the service limit, replace both shoes as a set.

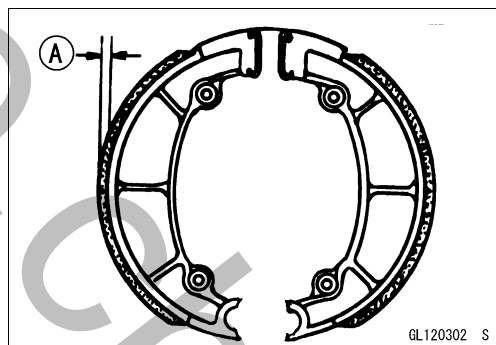

#### Brake Shoe Lining Thickness

##### Front:

Standard:	2.10 ~ 3.00 mm
Service Limit:	1.2 mm

##### Rear:

Standard:	3.85 ~ 4.15 mm
Service Limit:	2.0 mm

## Brake Panel and Drum

### Camshaft Wear Inspection


- Measure the shaft diameter [A].
- ★ If it is worn down to less than the service limit, replace the shaft.
- Measure the inside diameter [B] of the camshaft hole.
- ★ If it is worn past the service limit, replace the brake panel.

#### Camshaft Diameter

Front:	Standard:	11.957 ~ 11.984 mm
	Service Limit:	11.88 mm
Rear:	Standard:	14.957 ~ 14.984 mm
	Service Limit:	14.88 mm

#### Camshaft Hole Inside Diameter

Front:	Standard:	12.000 ~ 12.027 mm
	Service Limit:	12.15 mm
Rear:	Standard:	15.000 ~ 15.027 mm
	Service Limit:	15.15 mm

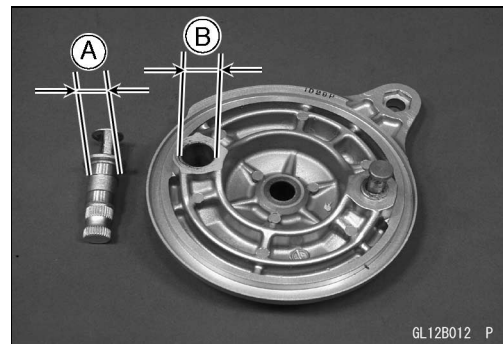


GL12B012 P

### Brake Shoe Springs Inspection

- Visually inspect the brake shoe springs for breaks or distortion.
- ★ If the springs are damaged in any way, replace them.
- Measure [A] the free length of the brake shoe springs.
- ★ If either is stretched beyond the service limit, replace both springs.

#### Brake Shoe Springs Inspection

Front:		
	Standard:	30.8 ~ 31.2 mm
	Service Limit:	32.6mm
Rear:		
	Standard:	32.5 mm
	Service Limit:	34.1 mm

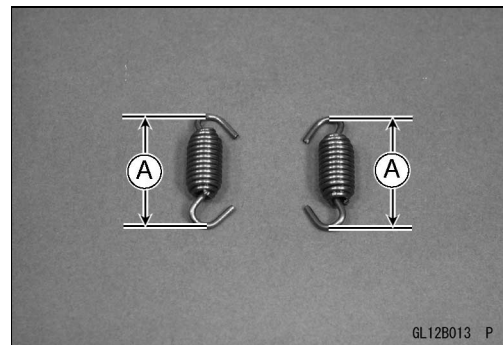

GL12B013 P

### Brake Panel Lubrication

- Refer to Brake Panel Lubrication in the Periodic Maintenance Chapter.

Pittbike.ch


# Suspension

## Table of Contents

Exploded View.....	12-2
Specifications.....	12-6
Front Fork.....	12-7
Fork Oil Level Check (Simplify).....	12-7
Oil Change/Oil Level Adjustment (each fork leg).....	12-7
Front Fork Removal.....	12-7
Front Fork Installation.....	12-8
Front Fork Disassembly (each fork ).....	12-8
Front Fork Assembly (each fork).....	12-9
Front Fork Inner Tube Inspection.....	12-10
Dust Seal/Oil Seal Inspection.....	12-10
Spring Tension.....	12-10
Rear Shock Absorber.....	12-11
Removal .....	12-11
Installation .....	12-11
Rear Shock Absorber Inspection .....	12-11
Swingarm.....	12-12
Swingarm Removal.....	12-12
Swingarm Installation.....	12-12
Swingarm Rubber Bushing Inspection.....	12-12

## 12-2 SUSPENSION

### Exploded View

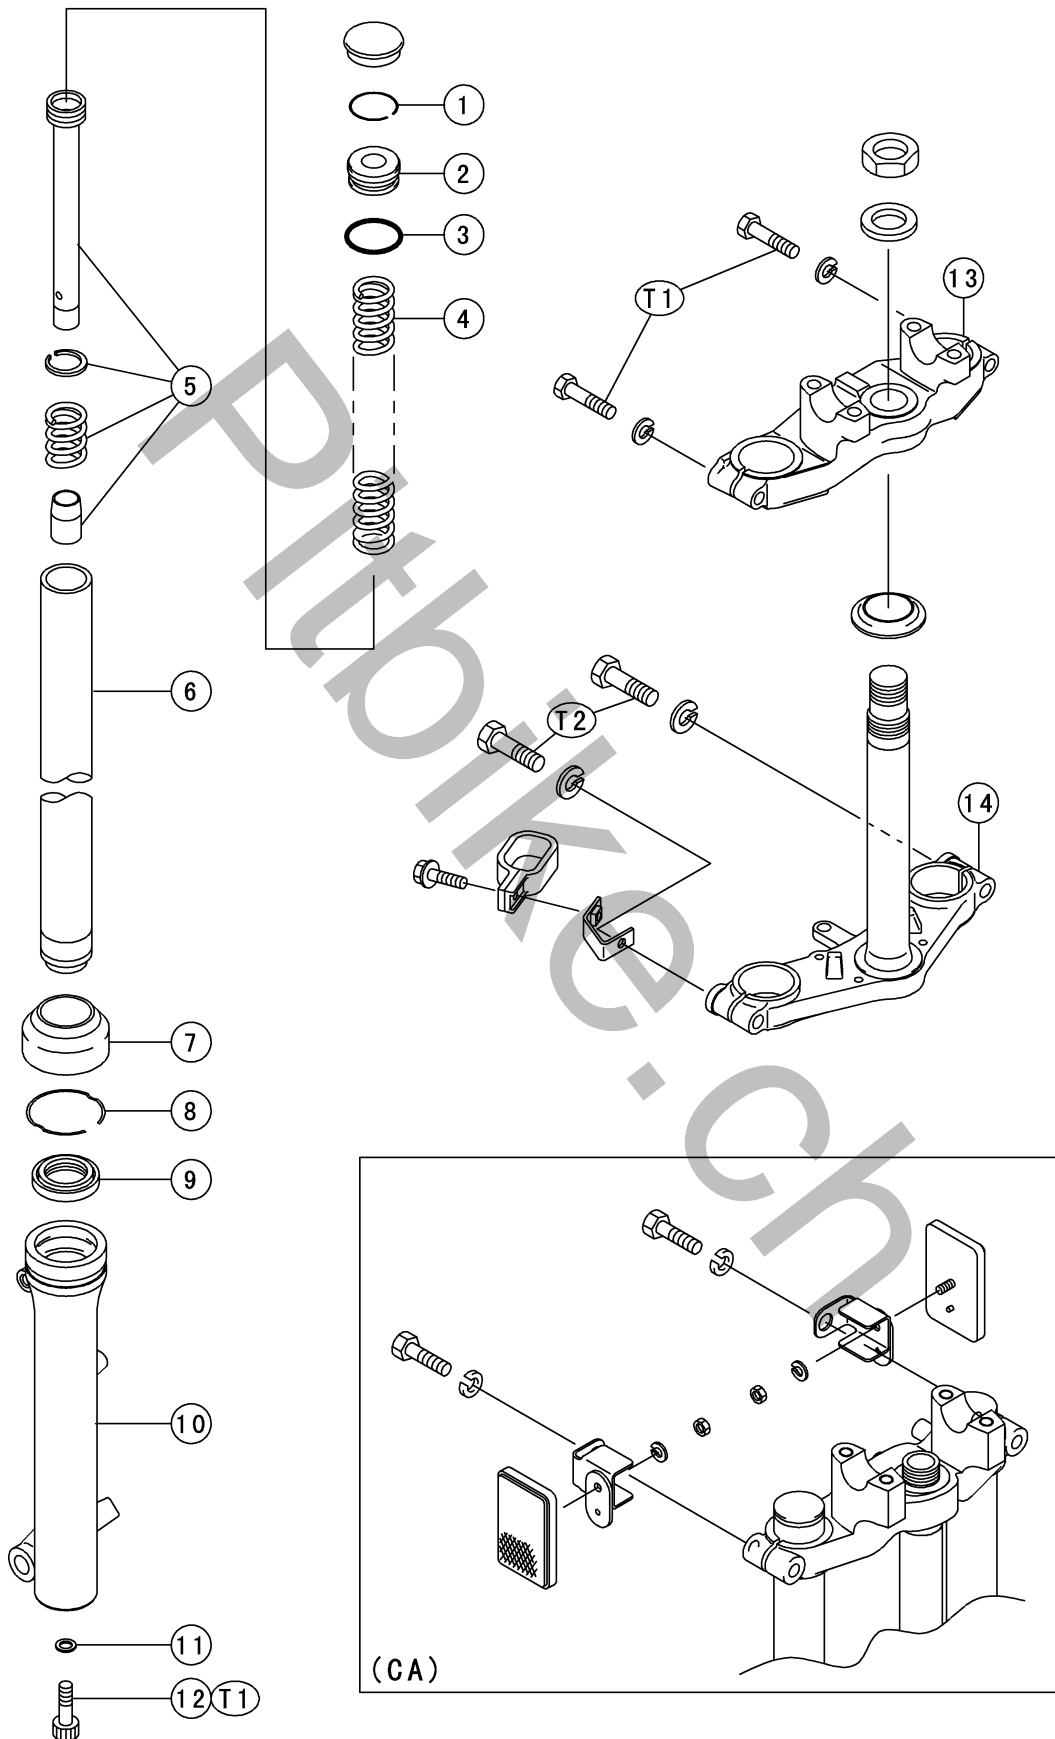




### Exploded View

---

1. Circlip
  2. Top plug
  3. O-ring
  4. Fork Spring
  5. Cylinder Unit
  6. Inner Tube
  7. Dust Seal
  8. Retaining Ring
  9. Oil Seal
  10. Outer Tube
  11. Gasket
  12. Allen Bolt
  13. Steering Stem Head
  14. Steering Stem
- L: Apply a non-permanent locking agent to the threads.
- T1: 20 N·m (2.0 kgf·m, 15 ft·lb)
- T2: 29 N·m (3.0 kgf·m, 22 ft·lb)
- CA: Canadian Model

## 12-4 SUSPENSION

### Exploded View

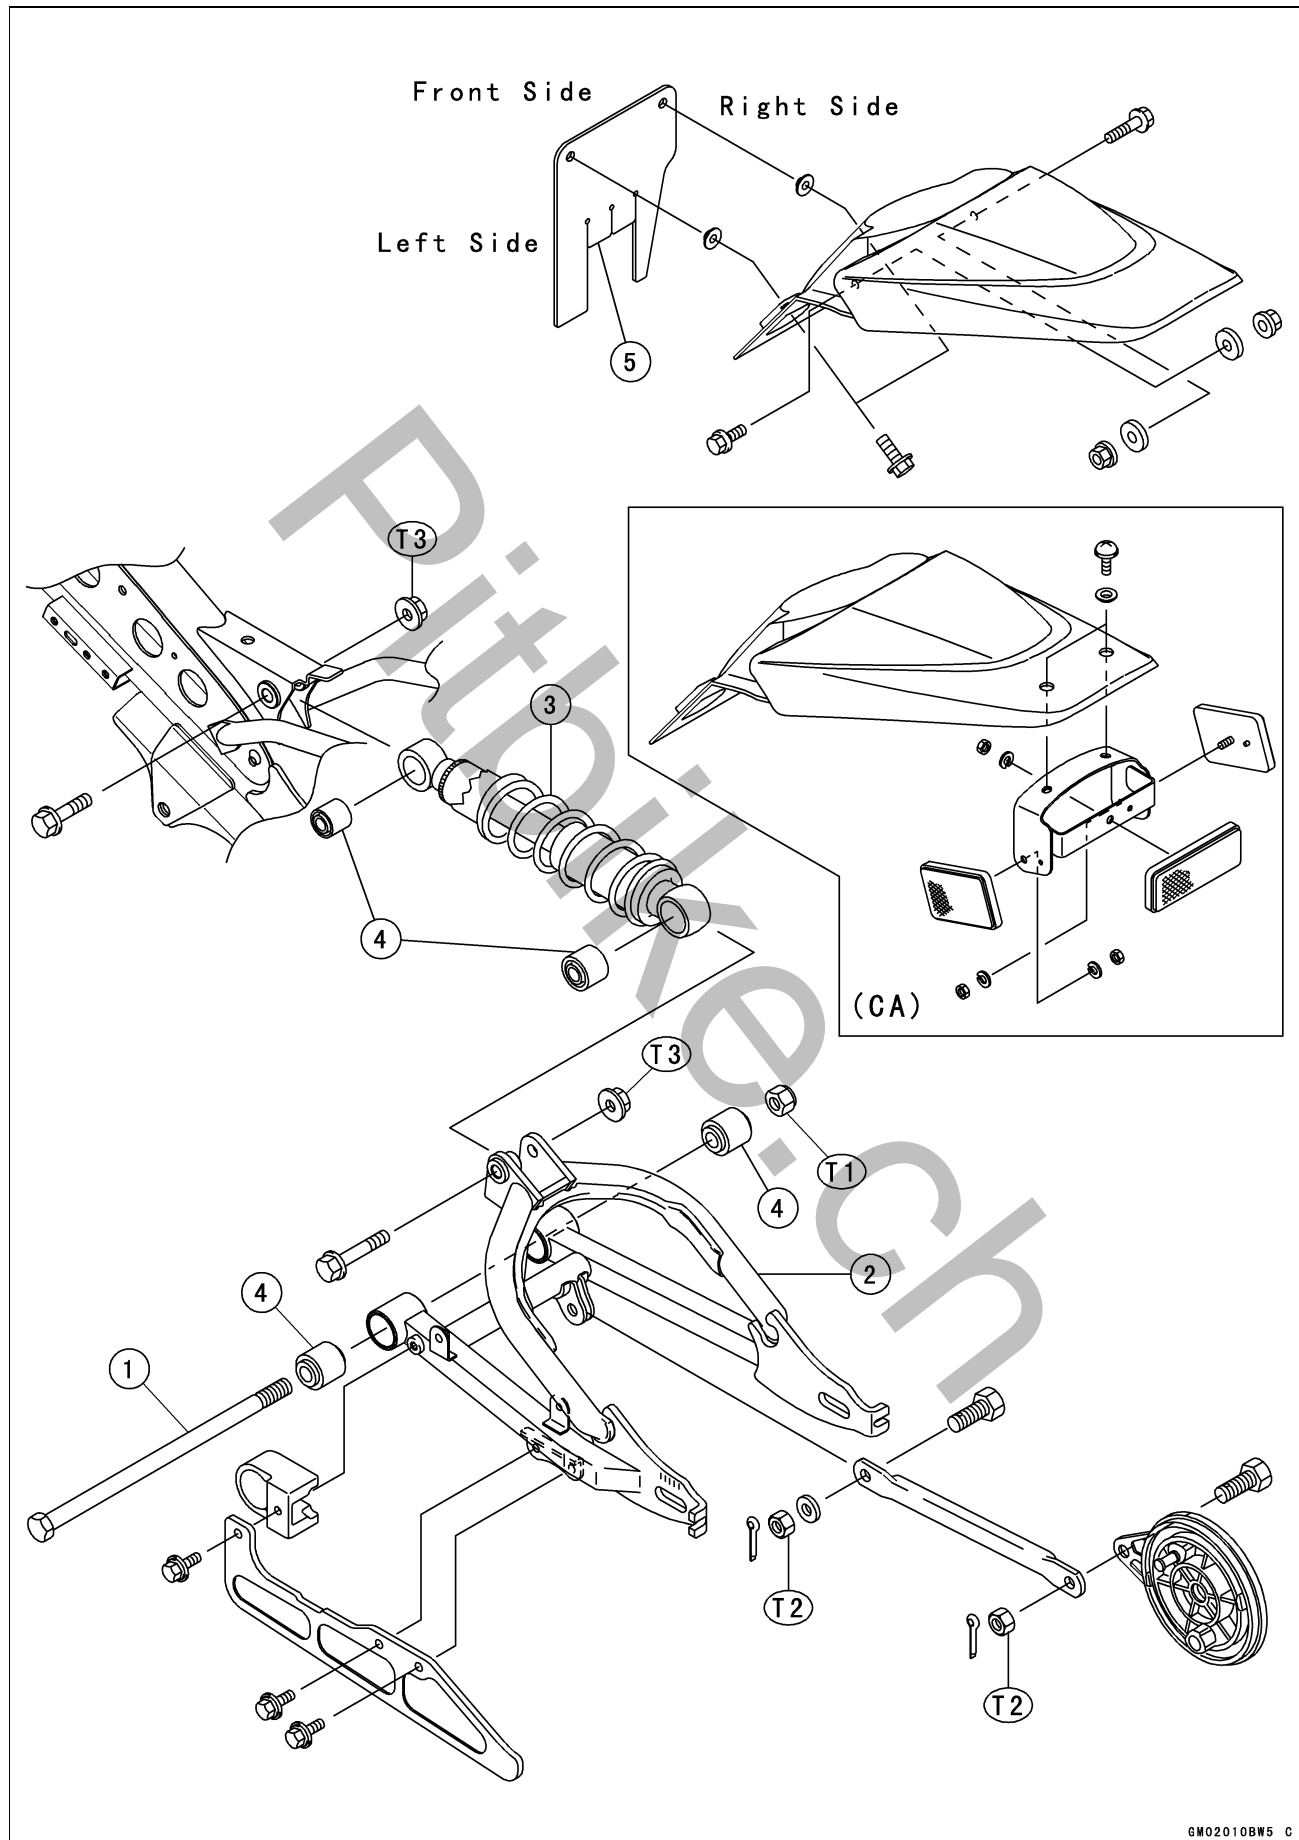

### Exploded View

---

1. Pivot Shaft
2. Swingarm
3. Rear Shock Absorber
4. Rubber Bushing
5. Flap: Note the installing direction.

G: Apply grease.

T1: 78 N·m (8.0 kgf·m, 58 ft·lb)

T2: 25 N·m (2.5 kgf·m, 18 ft·lb)

T3: 39 N·m (4.0 kgf·m, 29 ft·lb)

CA: Canadian Model

Pitbike.ch

## 12-6 SUSPENSION

### Specifications

Item	Standard	Service Limit
<b>Front Fork:</b>		
Oil viscosity	SS-8 or SAE 10W20	---
Oil capacity (completely dry)	163 ± 2.5 mL	---
Oil level (fully compressed, spring removed)		---
	89 ± 2 mm (from top of inner tube)	---
Fork spring free length	439.7 mm	430.9 mm

**Special Tools - Jack: 57001-1238**

**Fork Cylinder Holder Handle: 57001-183**

**Fork Cylinder Holder Adapter: 57001-1011**

**Fork Oil Seal Driver: 57001-1219**

**Fork Oil Level Gauge: 57001-1290**

**Oil Seal & Bearing Remover: 57001-1058**

## Front Fork

### Fork Oil Level Check (Simplify)

- Refer to Fork Oil Level Check (Simplify) in the Periodic Maintenance Chapter.

### Oil Change/Oil Level Adjustment (each fork leg)

- Remove the front fork (see this chapter).
- Remove the following.
  - Top Plug
  - Fork Spring

### **⚠ WARNING**

**The top plugs are under extreme spring force. Use care when removing the top plugs. Wear eye and face protection.**

- Hold the fork tube upside down over a clean container and pump it to drain the oil.
- Fill the front fork to the top with specified oil.

#### Recommended Oil

**SS-8 or SAE10W20**

#### Front Fork Oil Capacity (completely dry)

**163 ± 2.5 mL**


- Adjust the oil level.
  - With the fork fully compressed, put the oil level gauge [A] and the stopper [B], and inspect the distance from the top of the inner tube to the oil.

**Special Tools - Fork Oil Level Gauge: 57001-1290**

#### Oil Level (fully compressed, without spring)


**Standard: 89 ± 2 mm**

- ★ If no oil is drawn out, there is insufficient oil in the fork tube. Pour in enough oil, then draw out the excess oil.
- Install the parts removed (see Front Fork Assembly)

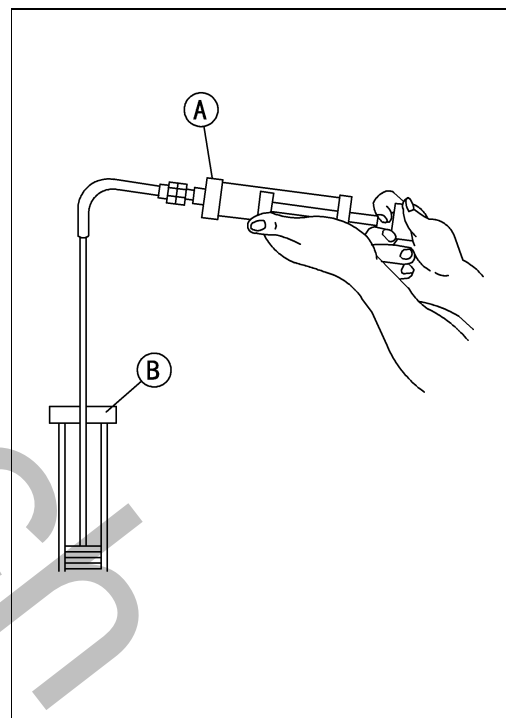

### Front Fork Removal


- Remove the front brake cable clamp [A].
- Remove the front brake cable [B].
- Remove the front wheel (see Wheels/Tires chapter).

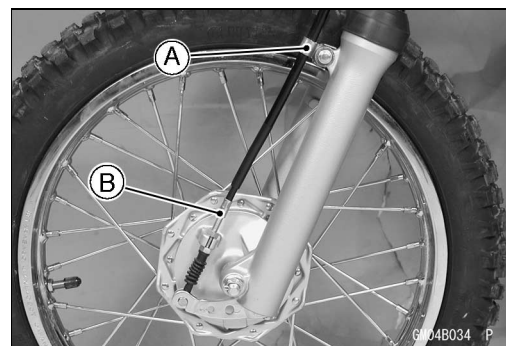

## 12-8 SUSPENSION

### Front Fork

- Remove the number plate.
- Loosen the upper and lower fork clamp bolts [A].
- With a twisting motion, work the fork leg down and out.

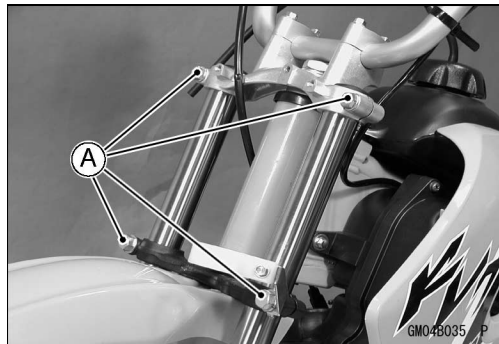


#### Front Fork Installation

- If the fork leg was disassembled, check the fork oil level.
- Install the fork, aligning the top end [A] of the inner tube with the upper surface [B] of the steering stem head.
- Route the cables and hose according to the Cable, Harness, Hose Routing section in the General Information chapter.
- Install the front wheel (see Wheels/Tires chapter).
- Tighten the following:

**Torque - Upper Fork Clamp Bolts: 20 N·m (2.0 kgf·m, 15 ft·lb)**

**Lower Fork Clamp Bolts: 29 N·m (3.0 kgf·m, 22 ft·lb)**

- Check the front brake operation after installation.

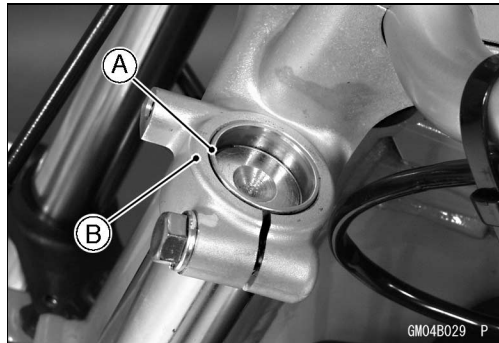


#### Front Fork Disassembly (each fork)

- Remove the front fork (see this chapter).
- Remove the top plug and the fork spring.
- Remove the dust seal.
- Drain the fork oil with the fork upside down (see Fork Oil Change)
- Hold the outer tube [A] in a vise.
- Stop the cylinder [B] from turning by using the front fork cylinder holder.


**Special Tool - Fork Cylinder Holder Handle: 57001-183 [C]**

**Fork Cylinder Holder Adapter: 57001-1011 [D]**


- Unscrew the Allen bolt [E], then take the bolt and gasket out of the bottom of the outer tube.

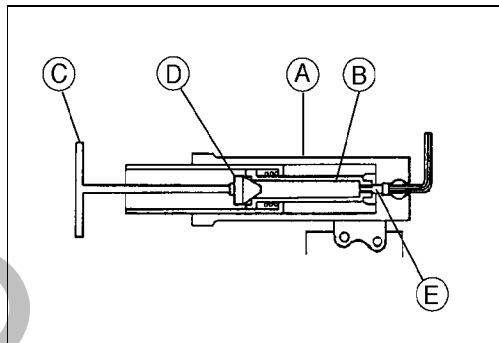

- Remove the cylinder unit [A] and spring [B] from the fork.

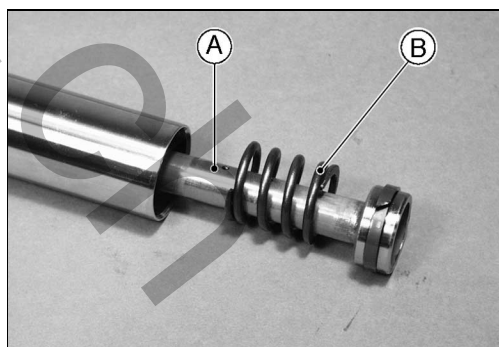


- Separate the inner tube [A] from the outer tube [B] by pulling them out.

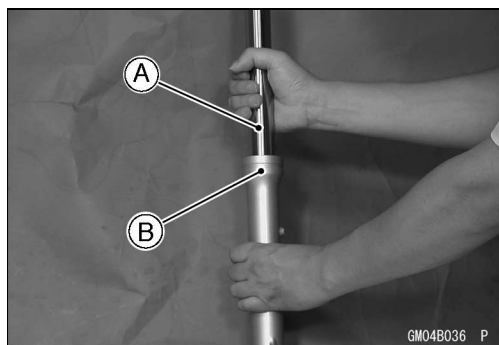


## Front Fork

- Take the cylinder base [A] out of the outer tube [B].

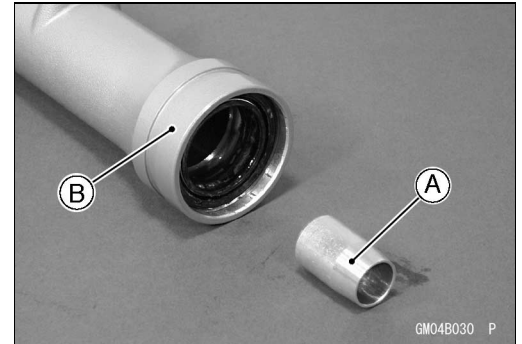


- Remove the retaining ring [A] from the outer tube.
- Remove the oil seal [B].

**Special Tool - Oil Seal & Bearing Remover: 57001-1058**

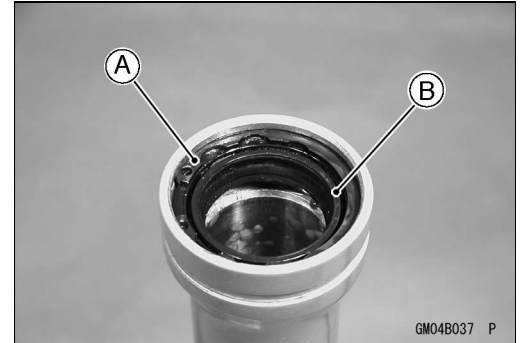

### Front Fork Assembly (each fork)

- Assembly is the reverse of disassembly.
- Replace the following parts removed with a new one.
  - Retaining Ring
  - Oil Seal
  - Bottom Allen Bolt Washer
- Inspect the following and replace them with new ones if damaged.
  - Inner Tube (see Inner Tube Inspection)
  - Top Plug O-ring
- Insert the cylinder unit and spring in the inner tube.
- Insert the cylinder base [A] in the cylinder unit [B].
- The cylinder base must be installed with the tapered side facing upward.
- Insert the inner tube and cylinder unit as a set into the outer tube.

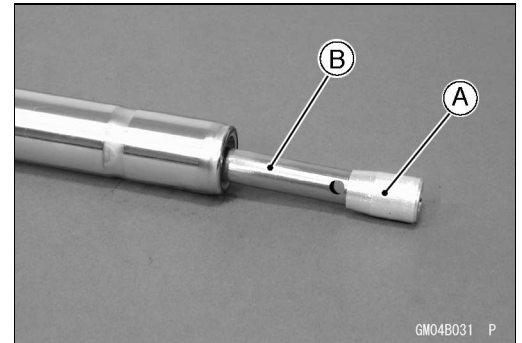

- Apply a non-permanent locking agent to the bottom Allen bolt and tighten it to the specified torque, using the front fork cylinder holder.


**Torque - Bottom Allen Bolts: 20 N·m (2.0kgf·m, 15ft·lb)**

**Special Tool - Fork Cylinder Holder Handle: 57001-183**

**Fork Cylinder Holder Adapter: 57001-1011**

- Install the oil seal [A] by tapping with the fork oil seal driver [B] until it stops.

**Special Tool - Fork Oil Seal Driver: 57001-1219**

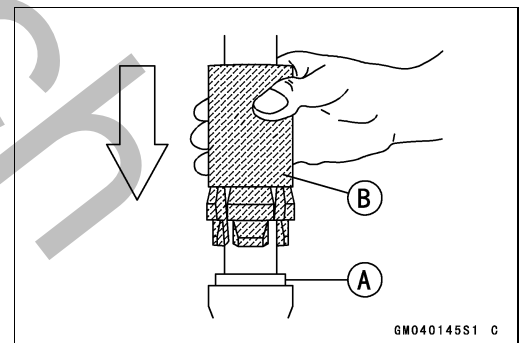


- Install the following.
  - Retainer
  - Dust Seal

## 12-10 SUSPENSION

### Front Fork

- Measure the both diameters of the fork spring ends and insert the fork spring with the small diameter and [A] facing down.
- Pour the fork oil (see Fork Oil change).
- Install the front fork (see this chapter).

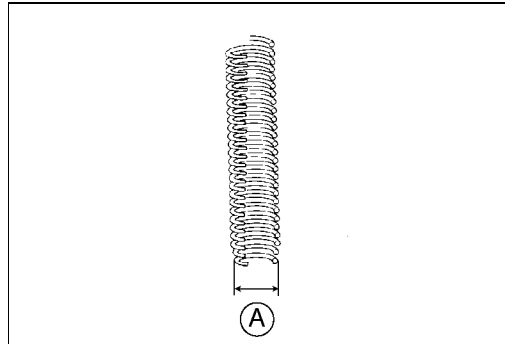


#### Front Fork Inner Tube Inspection

- Refer to Inner Tube Inspection in the Periodic Maintenance Chapter.


#### Dust Seal/Oil Seal Inspection

- Inspect the dust seal [B] for any signs of deterioration or damage.
- ★ Replace it if necessary.
- Replace the oil seal [A] with a new one whenever it has been removed.

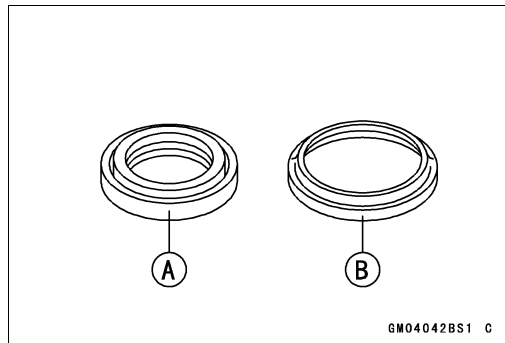

#### Spring Tension

- Since a spring becomes shorter as it weakens, check its free length [A] to determine its condition.
- ★ If the spring of either fork leg is shorter than the service limit, it must be replaced. If the length of a replacement spring and that of the remaining spring vary greatly, the remaining spring should also be replaced in order to keep the fork legs balanced for motorcycle stability.

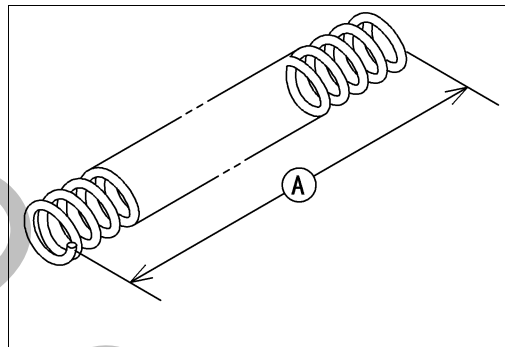

#### Fork Spring Free Length


Standard:	439.7 mm
Service Limit:	430.9 mm




## Rear Shock Absorber

### Removal

- Using the jack under the frame, raise the rear wheel off the ground.
- Special Tool - Jack: 57001-1238**
- Remove the shock absorber mounting bolt [A], nut and pull off the shock absorber [B].

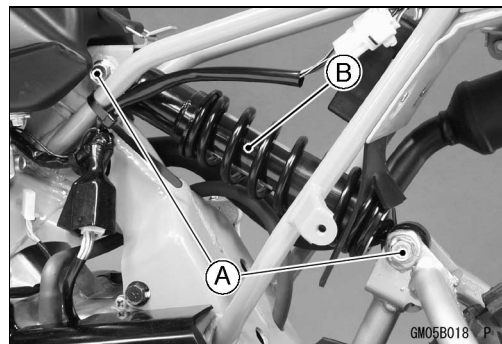


- To remove the rubber bushings [A], tap out the bushing with a suitable tool.

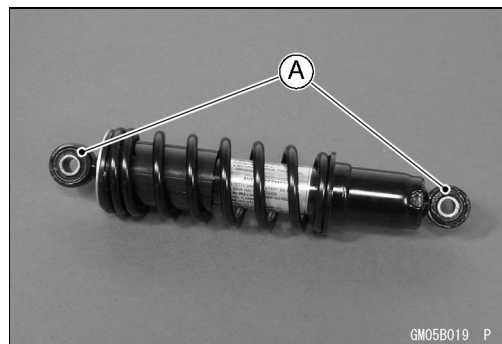

### Installation

- Press in the rubber bushings [A] as shown.
  - Install the shock absorber.
  - Tighten the shock absorber mounting bolt and nut.
- Torque - Upper Mounting Bolt: 39 N·m (4.0 kgf·m, 29 ft·lb)**  
**Lower Mounting Bolt: 39 N·m (4.0 kgf·m, 29 ft·lb)**

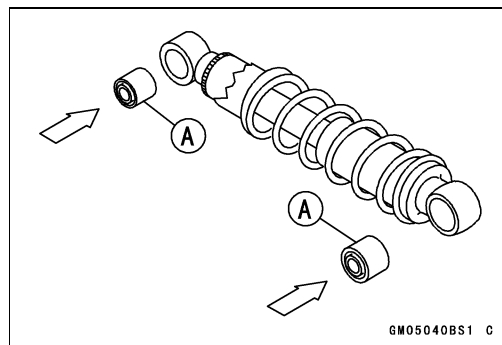

### Rear Shock Absorber Inspection

- Refer to Rear Shock Absorber Inspection in the Periodic Maintenance Chapter.

## 12-12 SUSPENSION


### Swingarm

#### Swingarm Removal


- Using the jack under the frame, raise the rear wheel off the ground.

**Special Tool - Jack: 57001-1238**

- Remove:
  - Rear Wheel (see Wheels/Tires chapter)
  - Left Side Cover (see Frame chapter)
  - Drive Chain
  - Rear Shock Absorber Lower End
- Remove the pivot shaft nut and pull out the pivot shaft [A].
- Pull back the swingarm [B] and take off the swingarm.

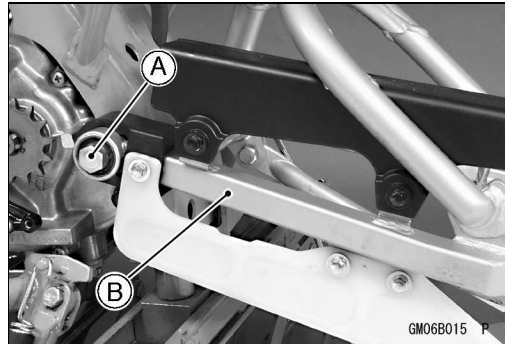

- Remove:
  - Torque Link [A]
  - Chain Guide[B]
  - Chain Slipper [C]
  - Chain Cover [D]
- To remove the rubber bushing [E] at the pivot, tap out the bushing with a suitable tool.

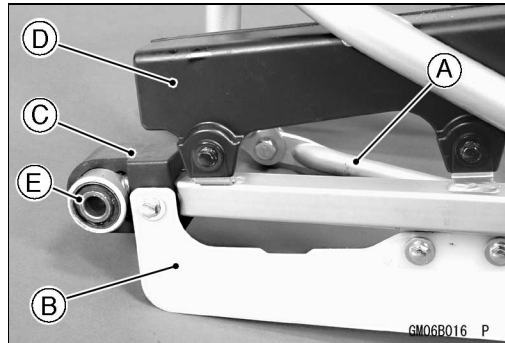


#### Swingarm Installation

- Installation is the reverse of removal.
- Press in the rubber bushings [A] as shown.
- Tighten the pivot shaft nut after installed the rear shock absorber.

**Torque - Swingarm Pivot Shaft Nut: 78 N·m (8.0 kgf·m, 58 ft·lb)**

- Tighten the torque link nut.

**Torque - Torque Link Nut: 25 N·m (2.5 kgf·m, 18 ft·lb)**

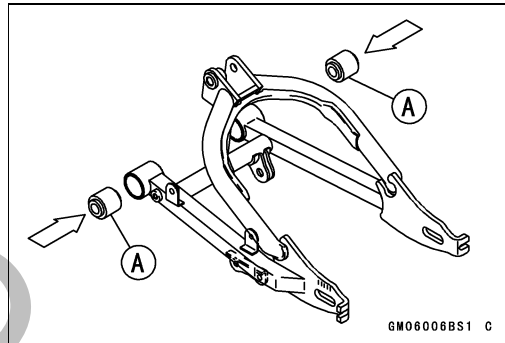

#### Swingarm Rubber Bushing Inspection


- Refer to Swingarm Rubber Bushing Inspection in the Periodic Maintenance Chapter.

# Steering

## Table of Contents

Exploded View.....	13-2
Specifications.....	13-4
Steering.....	13-5
Steering Inspection.....	13-5
Steering Adjustment.....	13-5
Steering Stem Removal.....	13-5
Steering Stem Installation.....	13-5
Steering Stem Race Removal.....	13-6
Steering Stem Race Installation Notes.....	13-7
Steering Stem Bearing Lubrication.....	13-7
Steering Stem Bearing Inspection.....	13-7
Steering Stem Warp.....	13-7
Handlebar.....	13-8
Handlebar Removal.....	13-8
Handlebar Installation.....	13-8

### Exploded View



---

**Exploded View**

---

1. Handlebar Clamp
2. Handlebar
3. Steering Stem Head Nut
4. Steering Stem Head
5. Stem Locknut
6. Upper Steel Balls
7. Head Pipe
8. Lower Steel Balls
9. Steering Stem
10. Lower Inner Race
11. Lower Outer Race
12. Upper Outer Race
13. Upper Inner Race
14. Stem Cap

AO: Apply 2-stroke oil.

AD: Apply adhesive cement.

G: Apply grease.

T1: 44 N·m (4.5 kgf·m, 32 ft·lb)

T2: 20 N·m (2.0 kgf·m, 15 ft·lb)

T3: 4.9 N·m (0.5 kgf·m, 43 in·lb)

T4: 25 N·m (2.5 kgf·m, 18 ft·lb)

T5: 30 N·m (3.0 kgf·m, 22 ft·lb)

## 13-4 STEERING

### Specifications

---

Special Tools - Steering Stem Bearing Driver: 57001-137  
Steering Stem Nut Wrench: 57001-1100  
Jack: 57001-1238  
Bearing Driver Set: 57001-1129  
Bearing Puller: 57001-158  
Bearing Puller Stud: 57001-1190  
Bearing Puller Adapter: 57001-317

Pitbike.com

## Steering

### Steering Inspection

- Refer to Steering Inspection in the Periodic Maintenance Chapter.


### Steering Adjustment

- Refer to Steering Adjustment in the Periodic Maintenance Chapter.


### Steering Stem Removal

- Remove:
  - Front Wheel (see Wheels/Tires chapter)
  - Front Brake Cable Clamp
  - Front Fender
  - Handlebar (see Handlebar Removal)
  - Front Fork (see Suspension chapter)
- Remove the steering stem head nut and washer.
- Remove the steering stem head.
- Pushing up on the stem base [A], and remove the steering stem locknut [B], with the steering stem nut wrench [C], then remove the steering stem [D] and stem base.

**Special Tool - Steering Stem Nut Wrench: 57001-1100**

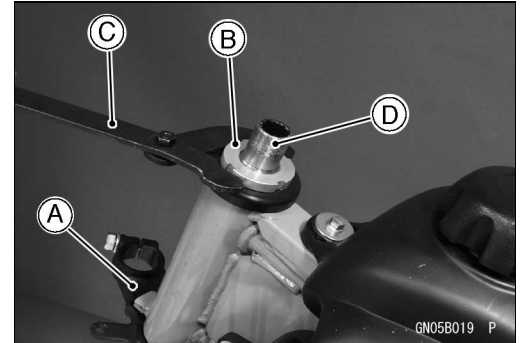

- As the stem is removed, some of the steel balls will drop out of the lower outer race.
- Remove the remaining ball bearings from the lower bearing outer race. There are 23 steel balls installed in the lower outer race.
- Remove:
  - Steering Stem Cap [A]
  - Upper Inner Race [B]
  - Upper Steel Balls [C]
- There are 23 steel balls installed in the upper outer race.

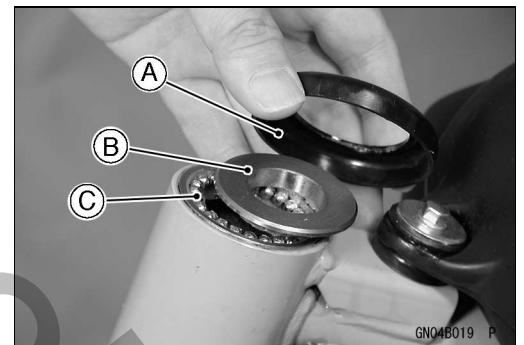

### Steering Stem Installation

- Apply grease liberally to the upper and lower outer races in the head pipe so that the steel balls will stick in place during stem insertion, and install upper and lower steel balls.
- Using the stem nut wrench, temporarily tighten (hand tighten) the stem locknut to press the steel balls against the outer race.

## 13-6 STEERING

### Steering

- Install the stem head and washer, and tighten the stem head nut lightly.
- Settle the bearing in place as follows;
  - Tighten the stem locknut to 39 N·m (4.0 kgf·m, 29 ft·lb) of torque. (To tighten the steering stem locknut to the specified torque, hook the wrench [A] on the stem locknut, and pull the wrench at the hole by 22.2 kg force [B] in the direction shown).

**Special Tool - Steering Stem Nut Wrench: 57001-1100**

- Check that there is no play and the steering stem turns smoothly without rattles. If not, the steering stem bearings may be damaged.
- Again back out the stem locknut a fraction of a turn until it turns lightly.
- Turn the stem locknut lightly clockwise until it just becomes hard to turn. Do not overtighten, or the steering will be too tight.

**Torque - Steering Stem Locknut: 4.9 N·m (0.5 kgf·m, 43 in·lb)**

- Install the front fork (see the Suspension chapter).

#### NOTE

- Tighten the fork upper clamp bolts first, next the stem head nut, last the fork lower clamp bolt.

**Torque - Steering Stem Head Nut: 44 N·m (4.5 kgf·m, 32 ft·lb)**

**Front Fork Clamp Bolt:**

Upper: 20 N·m (2.0 kgf·m, 15 ft·lb)

Lower: 29 N·m (3.0 kgf·m, 22 ft·lb)

- Install the parts removed (see the appropriate chapter).



#### ⚠ WARNING

**Do not impede the handlebar turning by routing the cables, wires and hoses improperly (see the General Information chapter).**

- Check and Adjust:
  - Steering
  - Front Brake
  - Throttle Cable

#### Steering Stem Race Removal

- To remove the outer races [A] pressed into the head pipe, insert a bar [C] into the head pipe [B], and hammer evenly around the circumference of the opposite race to drive it out.

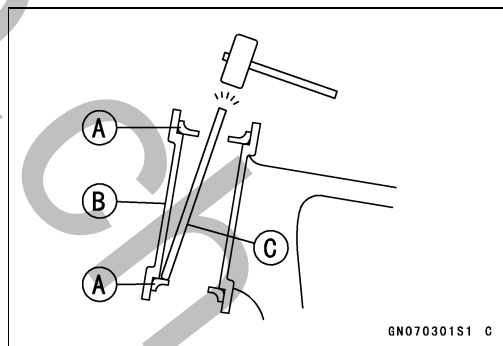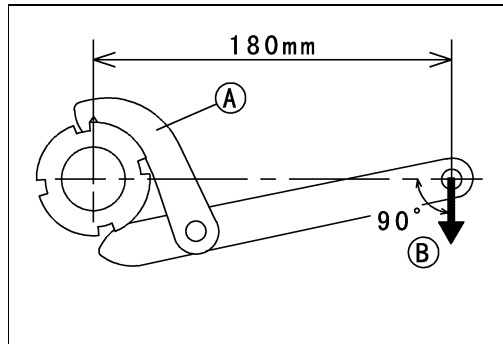


- Remove the lower inner race on the steering stem with a bearing puller [A].

**Special Tool - Bearing Puller: 57001-158**

**Bearing Puller Stud: 57001-1190 [B]**

**Bearing Puller Adapter: 57001-317 [C]**

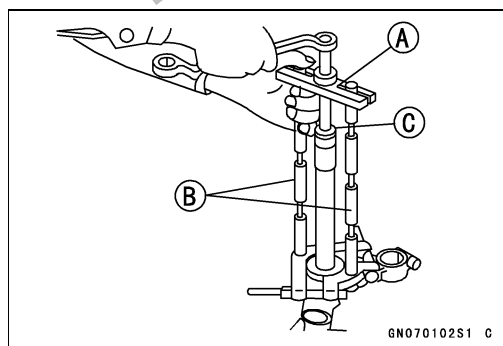




## Steering

### Steering Stem Race Installation Notes


- Apply engine oil to the outer races, and then drive them into the head pipe using the bearing driver set [A].

**Special Tool - Bearing Driver Set: 57001-1129**

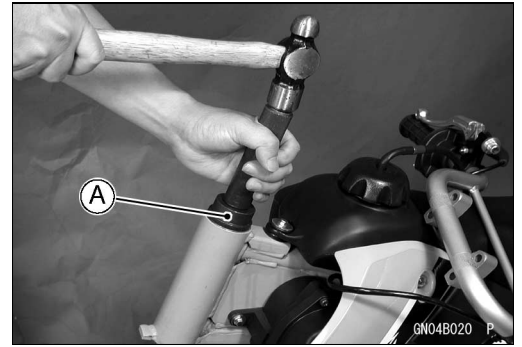

- Drive the lower inner race [A] onto the steering stem using the stem bearing driver [B].

**Special Tool - Steering Stem Bearing Driver: 57001-137**

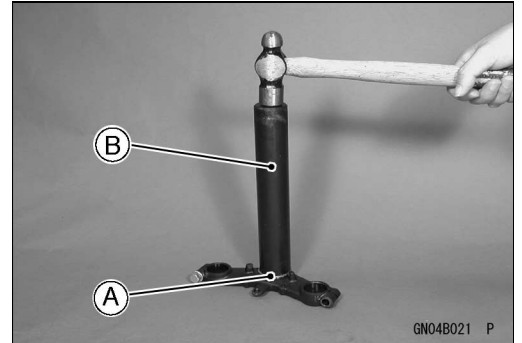

### Steering Stem Bearing Lubrication


- Refer to Steering Stem Bearing Lubrication in the Periodic Maintenance Chapter.

### Steering Stem Bearing Inspection

- Using a high-flash-point solvent, wipe the bearings clean of grease and dirt.
- Check the races and balls.
- ★ If the balls or races are worn, or if either race is dented, replace both races and all the balls for that bearing as a set.

### Steering Stem Warp

- Whenever the steering stem is removed, or if the steering cannot be adjusted for smooth action, check the steering stem for straightness.
- ★ If the steering stem shaft [A] is bent, replace the steering stem.

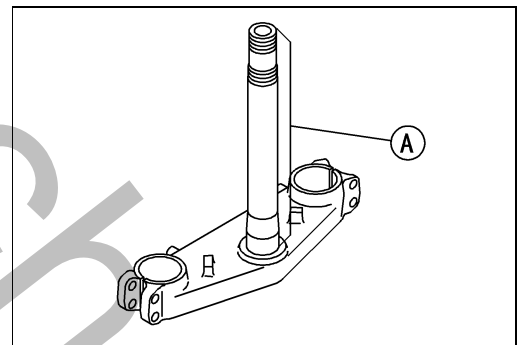


## 13-8 STEERING

### Handlebar




#### Handlebar Removal

- Remove:
  - Engine Stop Switch [A]
  - Throttle Grip Assembly [B]
  - Brake Lever Holder [C]
  - Handlebar Holders [D]
  - Handlebar [E]

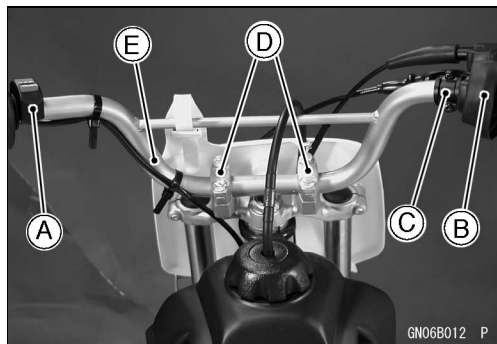


#### Handlebar Installation

- Apply adhesive cement to the inside of the left handlebar grip [A].
  - Mount the handlebar clamps [B] so that the arrows [C] on the clamp point at the front [A].
  - Align a gap [E] at the rear with the punch mark [D] on the handlebar.
  - Torque the handlebar clamp bolts.
- Torque - Handlebar Clamp Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**
- Tighten the clamp bolts, front first and then the rear. If the handlebar clamp is correctly installed, there will be no gap [A] at the front and a gap [B] at the rear after tightening.

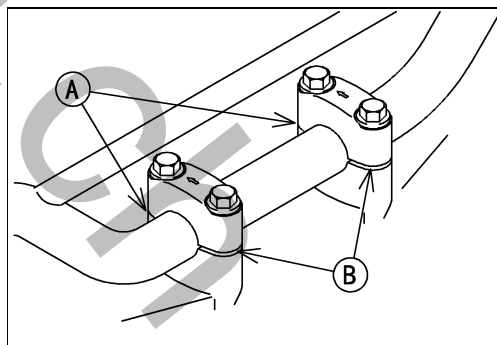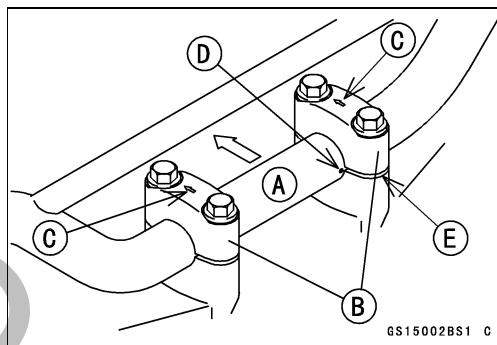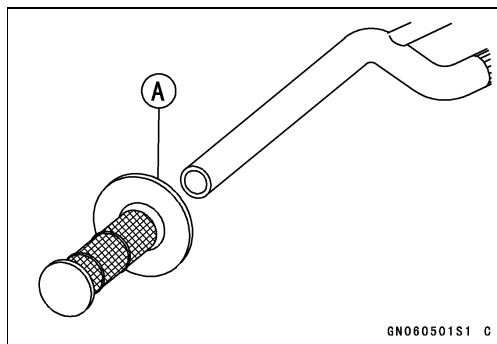


- Apply grease to the throttle cable upper end.
- Install the brake lever holder as shown.
- Position the brake lever holder so that its vertical parting line [A] is aligned with punch mark [B] on the handlebar.

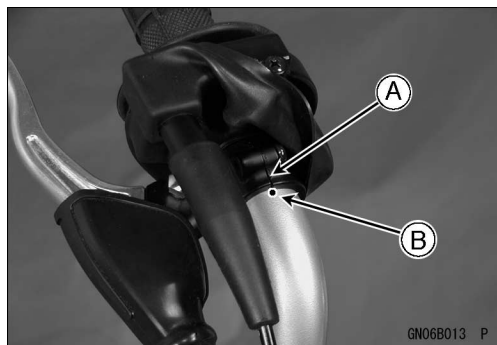


## Handlebar

- Position the throttle housing so that its vertical parting line [A] is aligned with punch mark [B] on the handlebar.

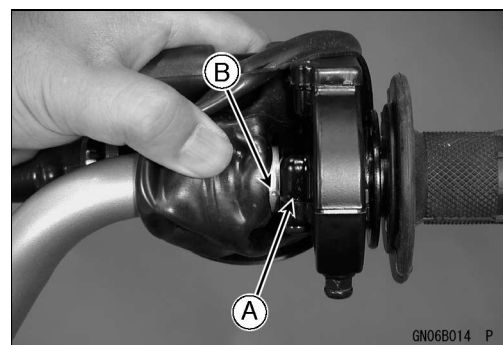

- Position the engine stop switch so that its edge [A] is aligned with the punch mark [B] on the handlebar.
- Install the handlebar holder (see Steering Stem Bearing Installation).

**Torque - Handlebar Clamp Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**

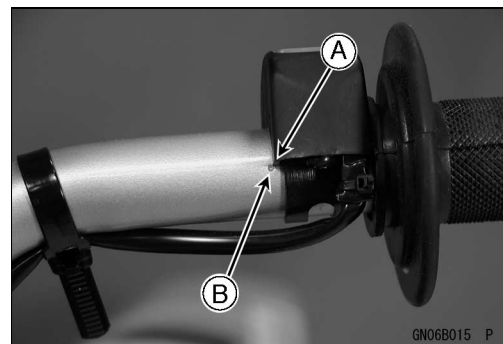

Pittbike.ch


# Electrical System

## Table of Contents

Exploded View.....	14-2
Specifications.....	14-4
Wiring Diagram.....	14-5
Precautions.....	14-6
Electrical Wiring.....	14-7
Wiring Inspection.....	14-7
Flywheel Magneto.....	14-8
Magneto Cover Removal.....	14-8
Magneto Cover Installation.....	14-8
Magneto Cover Disassembly.....	14-8
Magneto Cover Assembly.....	14-9
Magneto Flywheel Removal.....	14-9
Magneto Flywheel Installation.....	14-9
Flywheels Magneto Inspection.....	14-10
Regulator/Rectifier Inspection.....	14-10
Ignition System.....	14-11
Igniter Removal.....	14-11
Exciter Coil Resistance Measurement.....	14-11
Pickup Coil Resistance Measurement.....	14-11
Ignition Coil Removal.....	14-12
Ignition Coil Installation.....	14-12
Ignition Coil Inspection.....	14-12
Spark Plug Removal/Installation.....	14-13
Spark Plug Gap.....	14-13
Spark Plug Cleaning and Inspection.....	14-13
Igniter Inspection.....	14-13
Switches.....	14-17
Switch Inspection.....	14-17
Gear Position Switch Removal.....	14-17
Gear Position Switch Installation.....	14-17
Gear Position Switch Inspection:.....	14-18

## 14-2 ELECTRICAL SYSTEM

### Exploded View

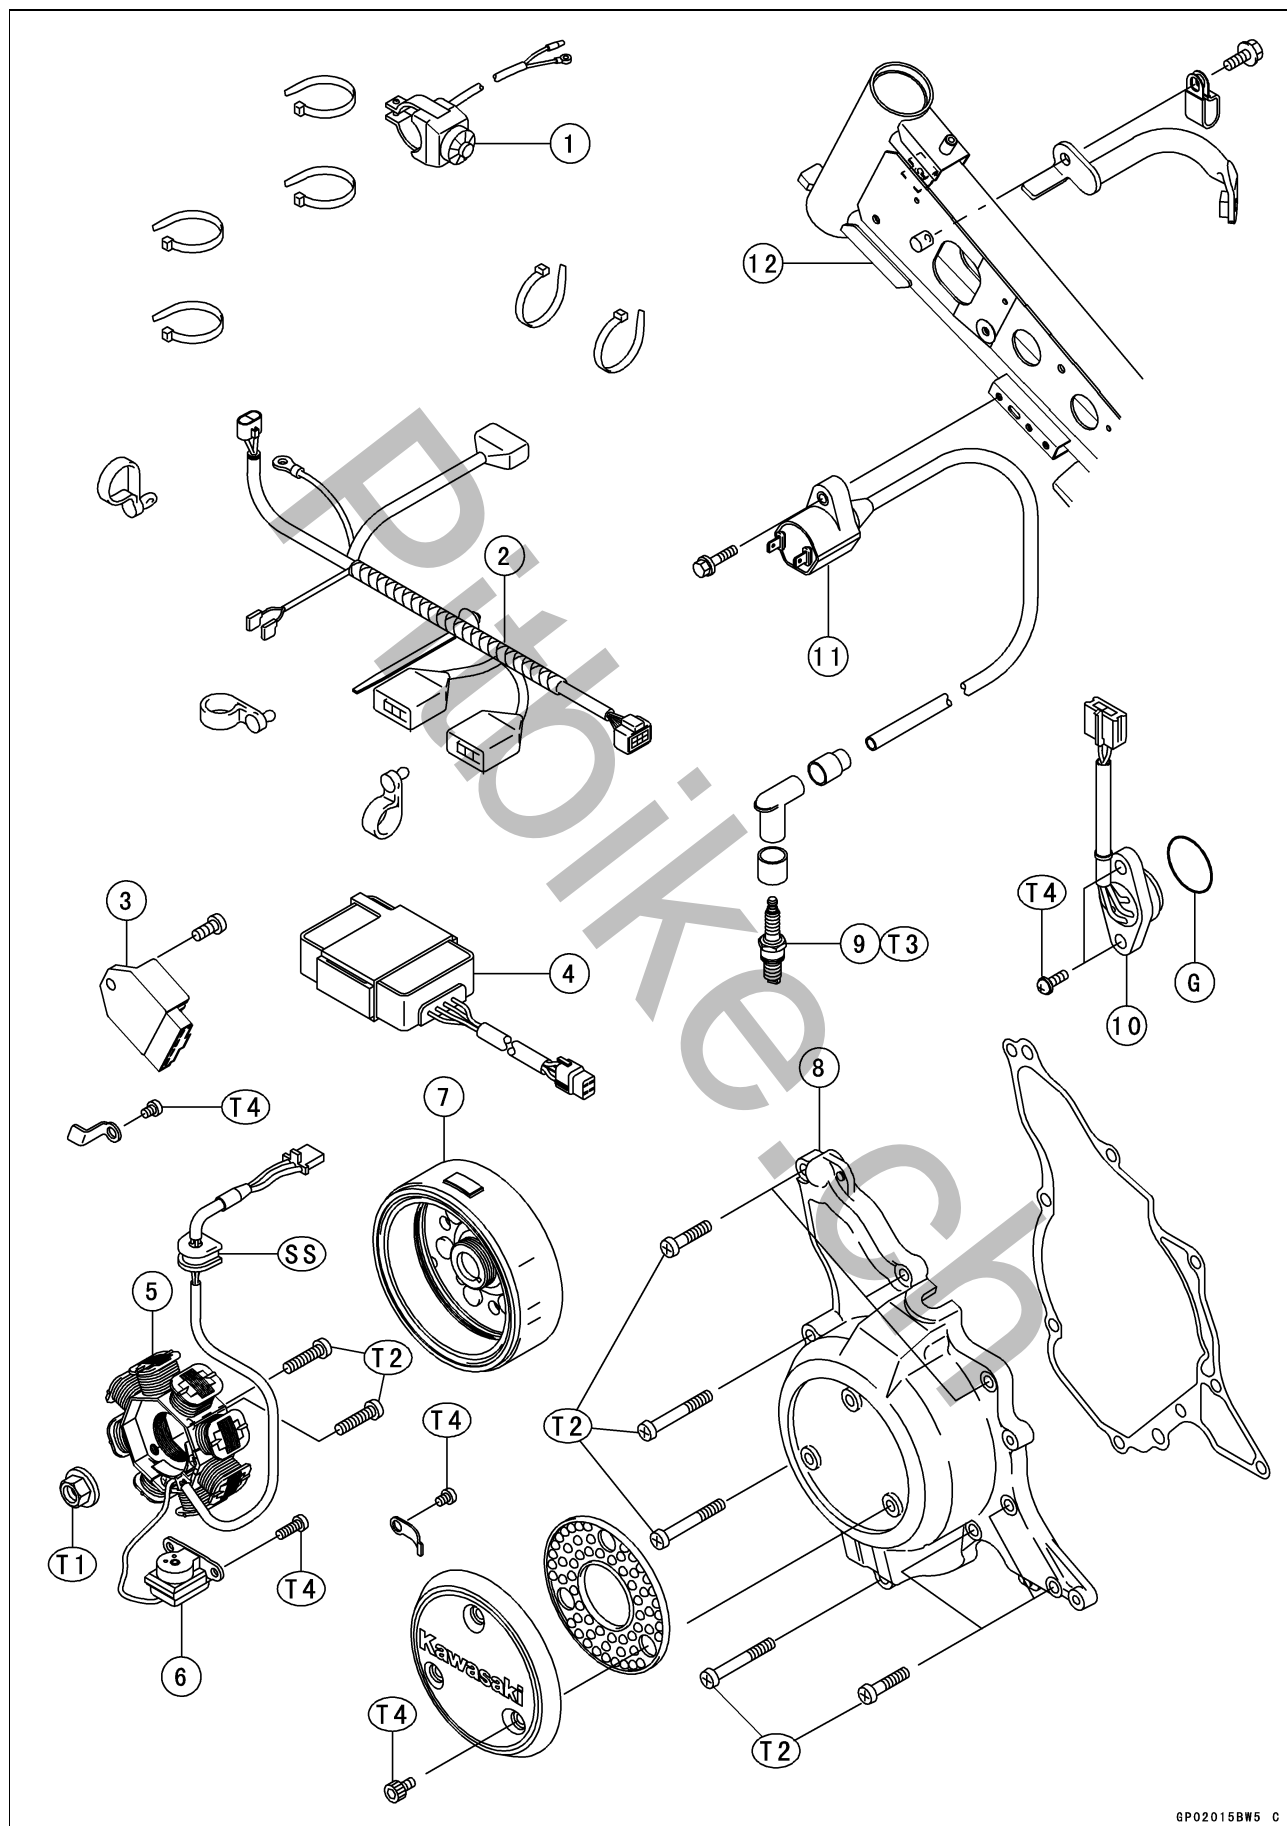

### Exploded View

---

- G: Apply grease.  
SS: Apply silicone sealant.
1. Engine Stop Switch
  2. Main Harness
  3. Regulator/Rectifier
  4. Igniter
  5. Exciter Coil
  6. Pickup Coil
  7. Flywheel
  8. Magneto Cover
  9. Spark Plug
  10. Gear Position Switch
  11. Ignition Coil
  12. Frame
- T1: 41.5 N·m (4.25 kgf·m, 30.6 ft·lb)  
T2: 5.2 N·m (0.53 kgf·m, 46 in·lb)  
T3: 13 N·m (1.3 kgf·m, 9.6 ft·lb)  
T4: 2.9 N·m (0.3 kgf·m, 26 in·lb)

## 14-4 ELECTRICAL SYSTEM


### Specifications

Item	Standard	Service Limit
<b>Magneto:</b>		
Regulator/rectifier resistance	in the text	- - -
<b>Ignition System:</b>		- - -
Pickup coil resistance	50 ~ 200 $\Omega$ (Blue/Yellow ← → Ground)	- - -
Air gap	0.7 mm	
Ignition coil:		
Primary winding resistance	0.19 ~ 0.23 $\Omega$	- - -
Secondary winding resistance primary	2.5 ~ 3.7 k $\Omega$	- - -
Exciter coil resistance	0.2 ~ 1.0 $\Omega$ (White ← → Ground)	- - -
	0.1 ~ 0.8 $\Omega$ (Yellow ← → Ground)	- - -
Spark plug:		
Standard plug	NGK CR6HSA	- - -
Gap	0.6 ~ 0.7 mm	- - -
Peak voltage:		
Ignition coil (primary)	100 V or above	- - -
Pickup coil	4.6 V or above	- - -
Exciter coil	15 V or above	- - -

**Special Tool -** Spark Plug Wrench, Hex 16: 57001-1262  
Hand Tester: 57001-1394  
Flywheel Puller, M28 × 1.0: 57001-1471  
Rotor Puller, M16/M18/M20/M22 x 1.5: 57001-1216  
Flywheel Holder: 57001-1313



Wiring Diagram

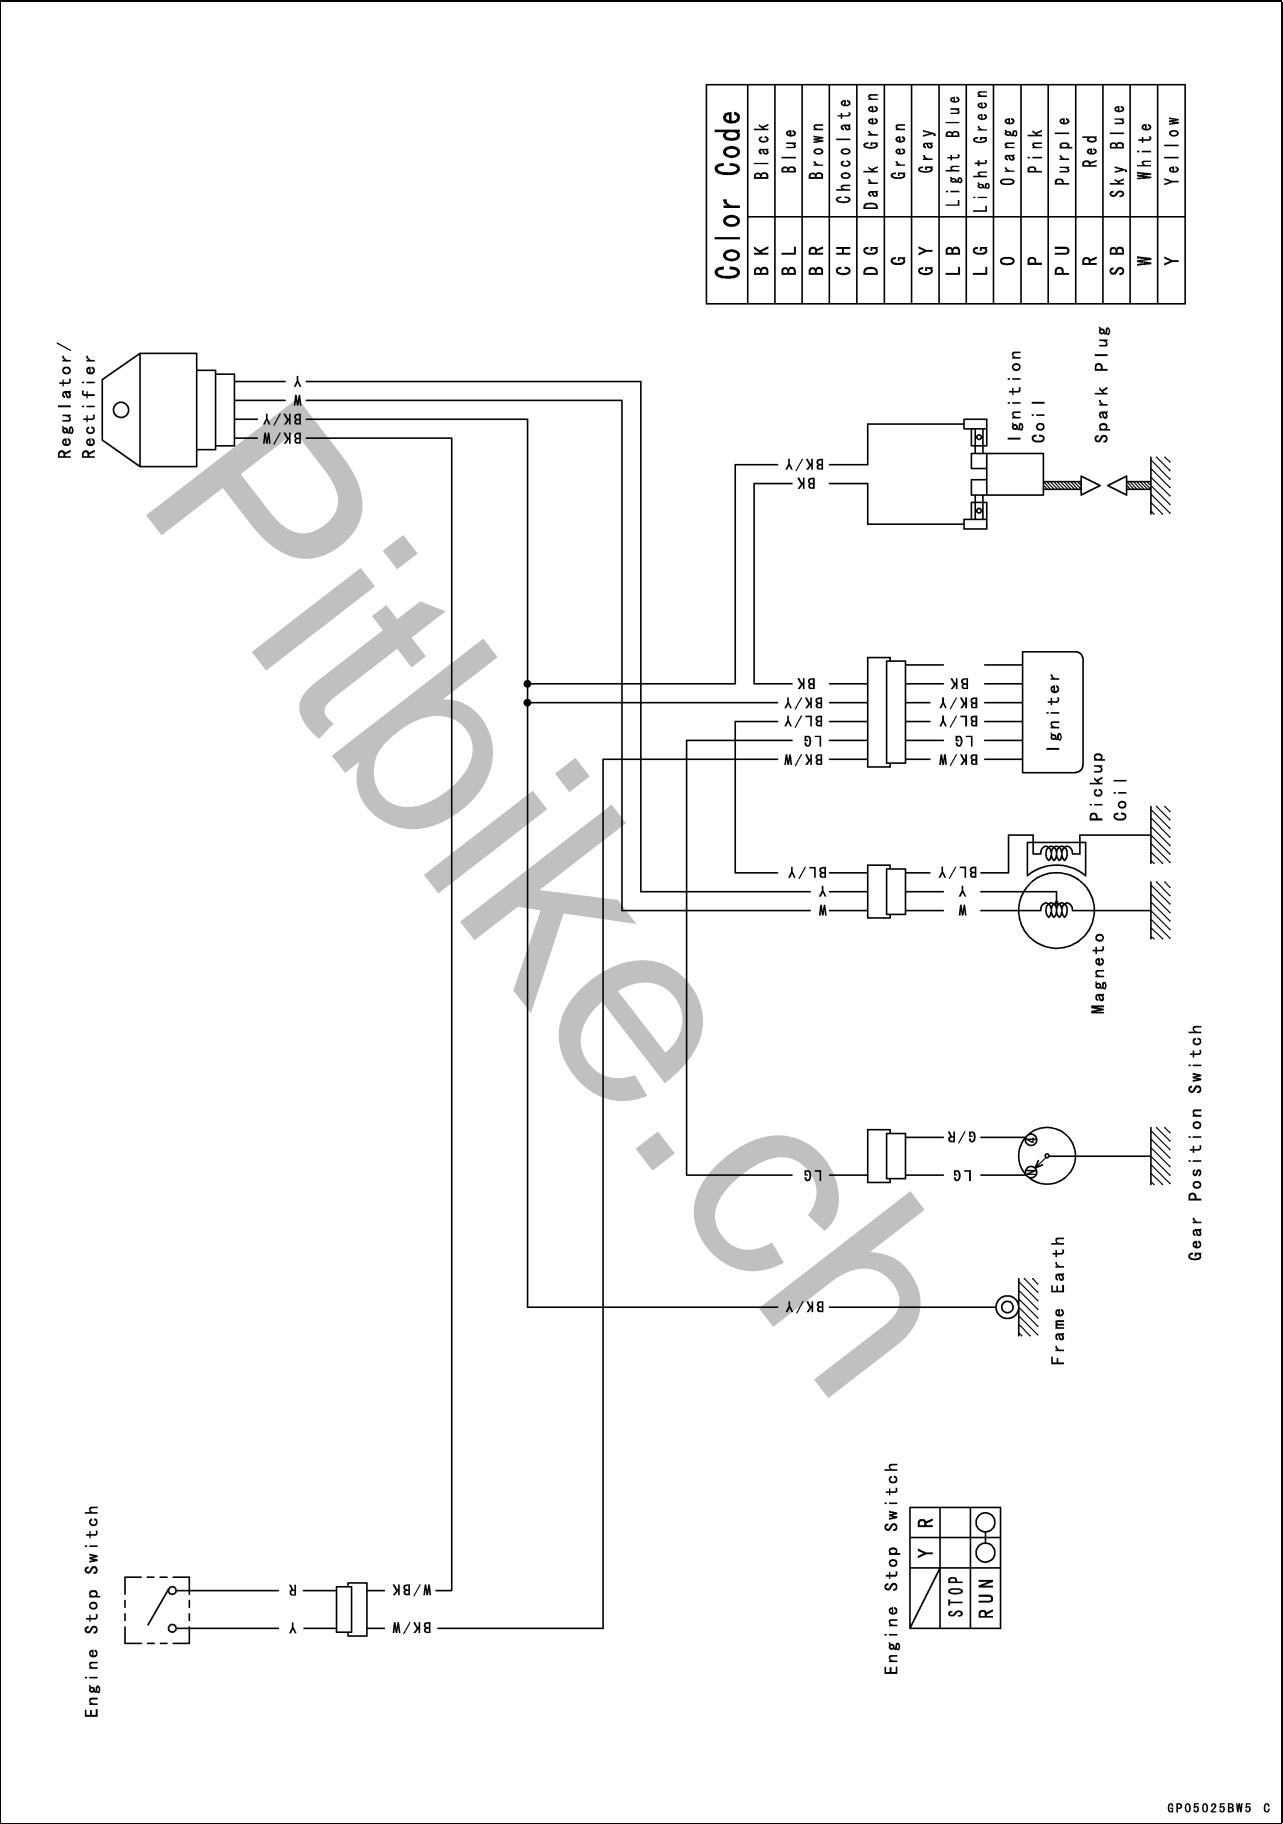

## 14-6 ELECTRICAL SYSTEM


### Precautions

There are a number of important precautions that need to follow during servicing electrical systems. Learn and observe all the rules below.


- The electrical parts should never be struck sharply, as with a hammer, or allowed to fall on a hard surface. Such a shock to the parts can damage them.
- Troubles may involve one or in some cases all items. Never replace a defective part without determining what CAUSED the failure. If the failure was caused by some other item or items, they too must be repaired or replaced, or the new replacement will soon fail again.
- Make sure all connectors in the circuit are clean and tight, and examine wires for signs of burning, fraying, etc. Poor wires and bad connections will affect electrical system operation.
- Measure coil and winding resistance when the part is cold (at room temperature).
- Color Codes:

BK: Black	GY: Gray	R: Red
BL: Blue	LB: Light blue	SB: Sky Blue
BR: Brown	LG: Light green	W: White
CH: Chocolate	O: Orange	Y: Yellow
DG: Dark green	P: Pink	
G: Green	PU: Purple	

- Electrical Connectors  
Female Connectors [A]

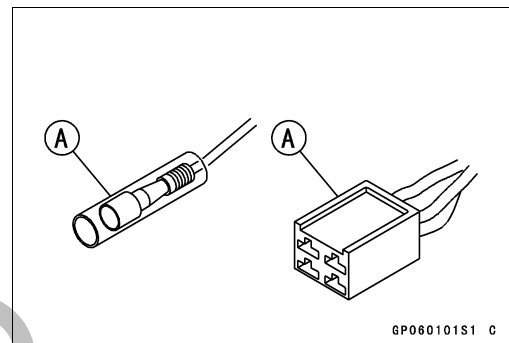

Male Connectors [B]

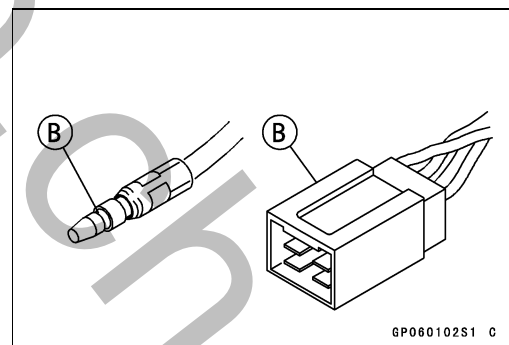


## Electrical Wiring

### Wiring Inspection

- Visually inspect the wiring for signs of burning, fraying, etc.
- ★ If any wiring is poor, replace the damaged wiring.
- Pull each connector [A] apart and inspect it for corrosion, dirt, and damage.
- ★ If the connector is corroded or dirty, clean it carefully. If it is damaged, replace it.
- Check the wiring for continuity.
- Use the wiring diagram to find the ends of the lead which is suspected of being a problem.
- Connect the hand tester between the ends of the leads.

**Special Tool - Hand Tester: 57001-1394**

- Set the tester to the x 1  $\Omega$  range, and read the tester.
- ★ If the tester does not read 0  $\Omega$ , the lead is defective. Replace the lead or the wiring harness [B] if necessary.

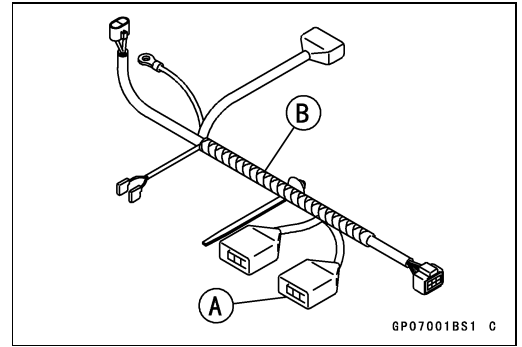


## 14-8 ELECTRICAL SYSTEM


### Flywheel Magneto

#### Magneto Cover Removal

- Drain the engine oil.
- Remove:
  - Shift Pedal
  - Engine Sprocket Cover (see Final Drive chapter)
- Pull off the magneto connector [A].

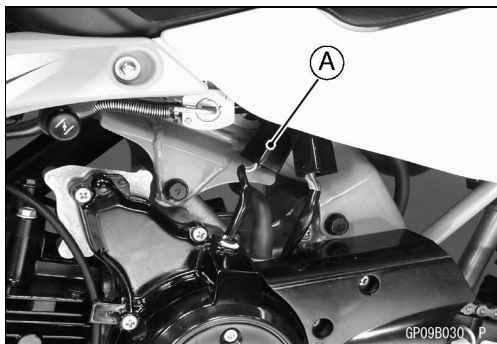


- Unscrew the magneto cover screws [A] and remove the magneto cover [B].

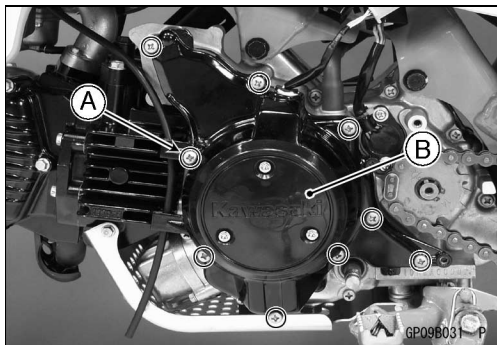

#### Magneto Cover Installation


- Check that two dowel pins are in place in the left crankcase half.
- Replace the gasket.
- Apply silicone sealant [A] around the circumference of the wiring grommet.
- Install the magneto cover.

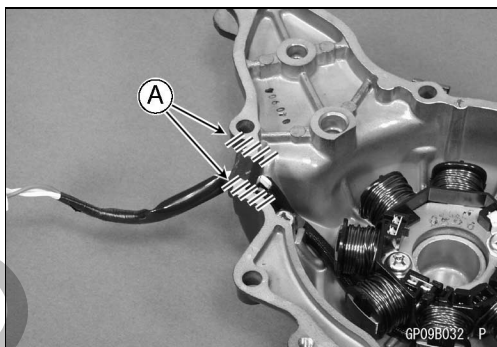

- Tighten the magneto cover screws following the tightening sequence as shown.


**Torque - Magneto Cover Screws: 5.2 N·m (0.53 kgf·m, 46 in·lb)**

- Fill the engine with engine oil (see Engine Lubrication System chapter).

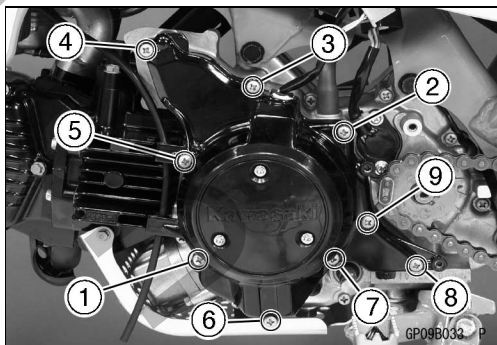

#### Magneto Cover Disassembly

- Remove the magneto cover.
- Remove:
  - Screws [A]
  - Clamps [B]
  - Pickup Coil Screws [C]
  - Exciter Coil Screws [D]
- Pull the wiring grommet.
- Remove the pickup coil and stator as a set.

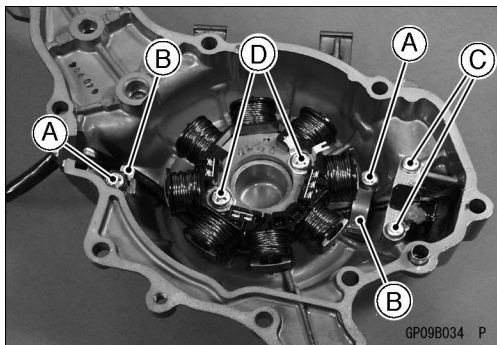

## Flywheel Magneto

### Magneto Cover Assembly


- Run the magneto lead [A] as shown.

- Torque:

Plate Screws [B]: 2.9 N·m (0.3 kgf·m, 26 in·lb)

Exciter Coil Mounting Screws [C]: 5.2 N·m (0.53 kgf·m, 46 in·lb)


Pickup Coil Mounting Screws [D]: 2.9 N·m (0.3 kgf·m, 26 in·lb)

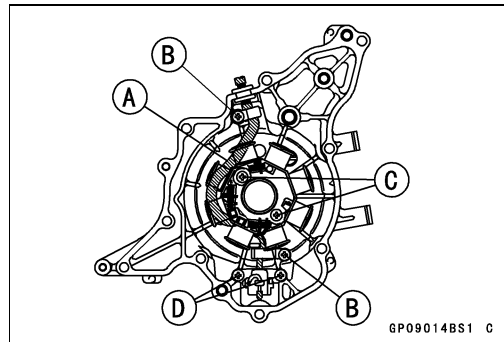

### Magneto Flywheel Removal

- Remove the magneto cover (see this chapter).
- Loosen the front footpeg assembly.
- Hold the flywheel steady with the flywheel holder [A] and remove the flywheel nut [B].


**Special Tool - Flywheel Holder: 57001-1313**

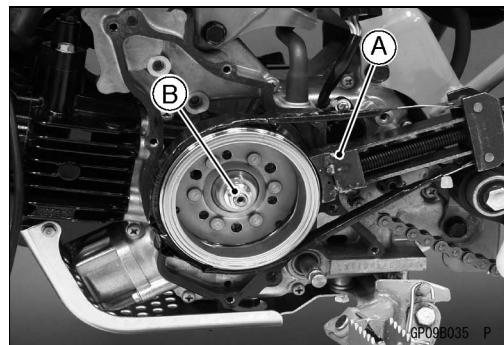

- Thread the flywheel puller [A] and rotor puller [B] onto the flywheel [C].
- Holding the flywheel puller, turn the rotor puller until the flywheel is forced off the end of the crankshaft.
- Using the flywheel and rotor pullers, remove the magneto flywheel.

**Special Tools - Rotor Puller, M16/M18/M20/M22 x 1.5: 57001-1216**

**Flywheel Puller, M28 x 1.0: 57001-1471**

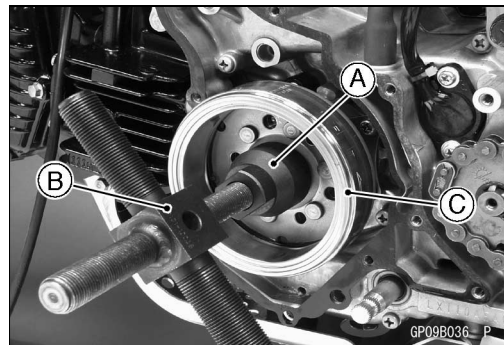

### CAUTION


If the rotor is difficult to remove, turn the puller shaft using a wrench while tapping the head of the puller shaft with a hammer. Do not attempt to strike the grab bar or the alternator rotor itself. Striking the bar or the rotor can cause the bar to bend or the magnets to lose their magnetism.

### Magneto Flywheel Installation

- Using a high-flash-point solvent, clean off the any oil or dirt that may be on the crankshaft tapered portion [A] and flywheel tapered portion [B].
- Fit the woodruff key [C] securely in the slot of the crankshaft before installing the flywheel on the crankshaft.
- Tighten the flywheel nut while holding the flywheel steadily with the flywheel holder.

**Torque - Magneto Flywheel Nut: 41.5 N·m (4.25 kgf·m, 30.6 ft·lb)**

**Special Tools - Flywheel Holder: 57001-1313**

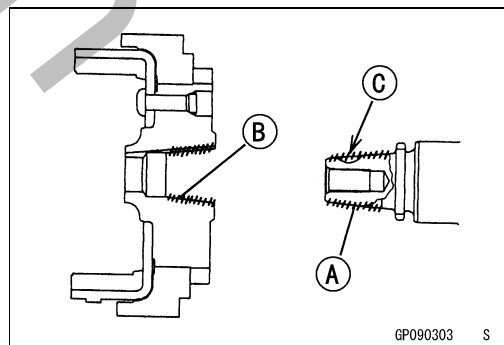

# 14-10 ELECTRICAL SYSTEM

## Flywheel Magneto

### Flywheels Magneto Inspection

- There are three types of magneto problems: short, open (wire burned out), or loss in flywheel magnetism. A short or open in one of the coil wires will result in either a low output, or no output at all. A loss in flywheel magnetism, which may be caused by dropping or hitting the flywheel by leaving it near an electromagnetic field, or just by aging, will result in low output. Inspect the coils and flywheel (see Ignition System).

### Regulator/Rectifier Inspection

- Remove:
  - Right Shroud
  - Regulator/Rectifier [A]
- Disconnect the connector [B] from the regulator/rectifier.
- Set the hand tester (special tool) to the  $\times 1 \text{ k}\Omega$  range and make the measurements shown in the table.

Special Tool - Hand Tester: 57001-1394

★ If the reading is not the specified value, replace the regulator/rectifier.

#### Regulator/Rectifier Internal Resistance



Unit:  $\text{k}\Omega$

	Terminal	Tester (+) Lead Connection			
		L	E	A	B
(-)*	L	—	10~100	$\infty$	$\infty$
	E	10~100	—	$\infty$	$\infty$
	A	$\infty$	$\infty$	—	5~30
	B	$\infty$	$\infty$	$\infty$	—

(-)\*: Tester (-) Lead Connection

#### CAUTION

Use only Hand Tester 57001-1394 for this test. An ohmmeter other than the Hand Tester may show different readings. If a megger or a meter with a large-capacity battery is used, the regulator will be damaged.

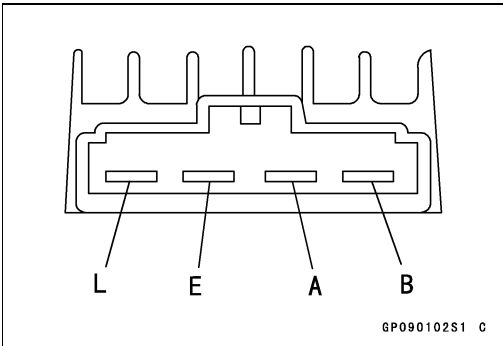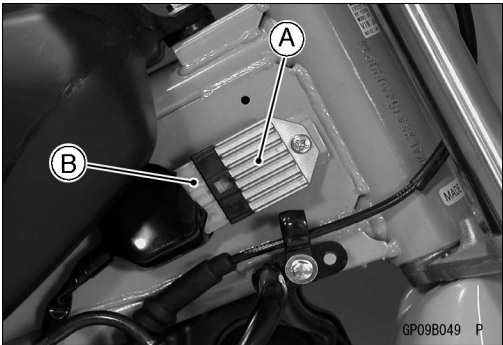

## Ignition System

**⚠ WARNING**


The ignition system produces extremely high voltage. Do not touch the spark plug, ignition coil, or spark plug lead while the engine is running, or you could receive a severe electrical shock.

**CAUTION**

Do not disconnect the electrical connections while the engine is running. This is to prevent igniter damage.  
The negative side is grounded. This is to prevent damage to the diodes and igniter.

*Igniter Removal*

- Remove:  
Seat  
Connector [A]  
Igniter [B]

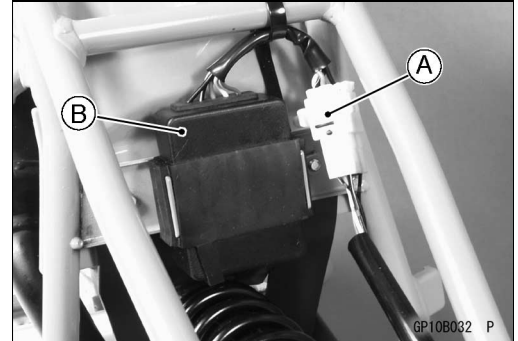*Exciter Coil Resistance Measurement*

- Remove the left side cover.
- Disconnect the magneto lead connector [A].
- Set the hand tester to the  $\times 10 \Omega$  range, and connect it to the leads from the exciter coil to check the resistance.


**Special Tool - Hand Tester: 57001-1394**

★ If the reading is not the specified value, replace the stator.

**Exciter Coil Resistance**

**Unit:  $\Omega$**

Tester Range	Connections		Reading
	Tester Lead	Another Lead	
$\times 10 \Omega$	Ground	White Lead	0.2 ~ 1.0
	Ground	Yellow Lead	0.1 ~ 0.8

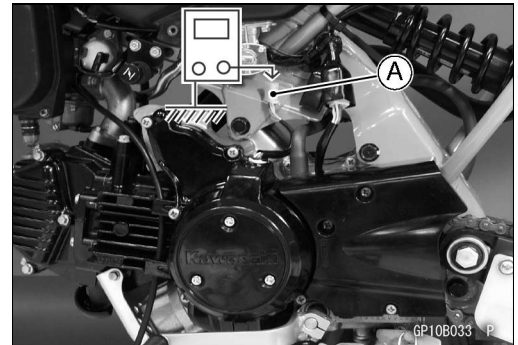*Pickup Coil Resistance Measurement*

- Remove the left side cover.
- Disconnect the magneto lead connector [A].
- Set the hand tester to the  $\times 100 \Omega$  range, and connect it to the lead from the pickup coil to check the resistance.


**Special Tool - Hand Tester: 57001-1394**

★ If the reading is not the specified value, replace the stator.

**Pickup Coil Resistance**

**Unit:  $\Omega$**

Tester Range	Connections		Reading
	Tester Lead	Another Lead	
$\times 100 \Omega$	Ground	Blue/Yellow Lead	50 ~ 200

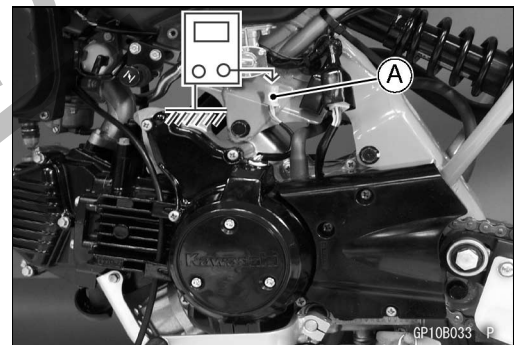


## 14-12 ELECTRICAL SYSTEM

### Ignition System


#### Ignition Coil Removal

- Remove:
  - Left Side Cover
  - Spark Plug Cap
- Disconnect the ignition coil leads [A].
- Unscrew the bolt [B] and remove the ignition coil [C].

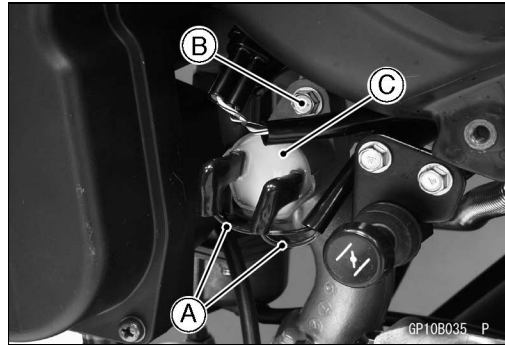


#### Ignition Coil Installation

- Installation is the reverse of removal.
- Apply silicone grease to the spark plug lead end [A].
- Turn in the spark plug cap [B] securely.

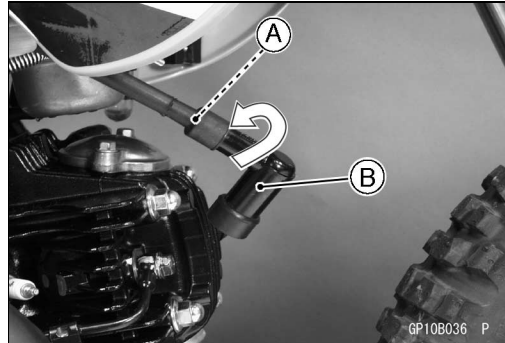


- Install the ignition coil mounting bolt [A] with the ground terminal [B] as shown (see Cable, Wire and Hose Routing section in the General Information chapter).

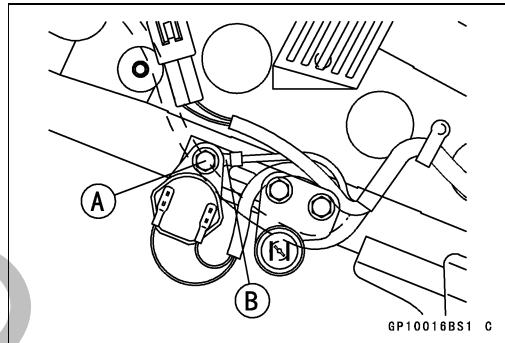

#### Ignition Coil Inspection

- Remove the ignition coil.
  - Measure the primary winding resistance.
  - Connect the hand tester between the coil terminals.
- Special Tool - Hand Tester: 57001-1394**
- Set the tester to the  $\times 1 \Omega$  range, and read the meter.
  - Measure the secondary winding resistance.
  - Pull the spark plug cap off the lead.
  - Connect the hand tester between the spark plug lead and the green terminal (earth).
  - Set the tester to the  $\times 1 \text{ k}\Omega$  range, and read the meter.
  - ★ If the meter does not read as specified, replace the coil.
    - Measure primary winding resistance [A]
    - Measure secondary winding resistance [B]

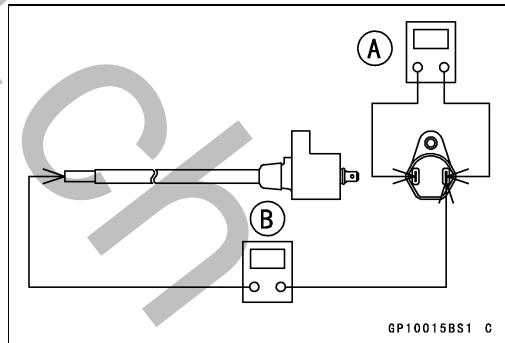

#### Ignition Coil Winding Resistance

Primary Windings:	0.19 ~ 0.23 $\Omega$
Secondary Windings:	2.5 ~ 3.7 $\text{k}\Omega$

- ★ If the hand tester reads as specified, the ignition coil windings are probably good. However, if the ignition system still does not perform as it should after all other components have been checked, replace the coil with one known to be good.
- Check the spark plug lead for visible damage.
- ★ If the spark plug lead is damaged, replace the coil.



## Ignition System


### Spark Plug Removal/Installation

- Remove the plug cap.
- Remove or install the spark plug using the spark plug wrench [A].

**Special Tool - Spark Plug Wrench, Hex 16: 57001-1262**

**Torque - Spark Plug: 13 N·m (1.3 kgf·m, 9.6 ft·lb)**

- installation is the reverse of removal. Noting the following.
  - Fit the plug cap securely.
  - Pull up the spark plug cap lightly to make sure of the installation of the spark plug cap.

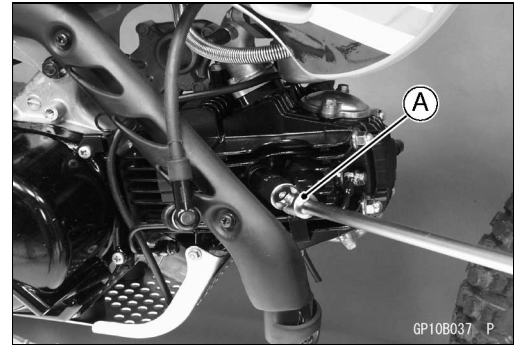

### Spark Plug Gap

- Refer to Spark Plug Gap in the Periodic Maintenance Chapter.

### Spark Plug Cleaning and Inspection

- Refer to Spark Plug Cleaning and Inspection in the Periodic Maintenance Chapter.

### Igniter Inspection

#### CAUTION


**When inspecting the igniter observe the following to avoid damage to the igniter.**  
**Do not disconnect the igniter while the engine is running.**  
**This may damage the igniter.**

### Ignition Coil Primary Peak Voltage Check:

- Remove:
  - Radiator Shrouds
  - Side Covers
  - Seat
- Disconnect the spark plug cap from mounting the spark plug [A].
- Connect the good spark plug [B] to the spark plug cap, then touch the engine with it.

#### NOTE

- Measure the voltage with each lead connected correctly. The correct value may not be obtained if disconnected.
- Maintain the correct value of compression pressure for the cylinder. (Be sure to measure the voltage with the spark plug install to the cylinder head.)
- The correct value may not be obtained if disconnected.

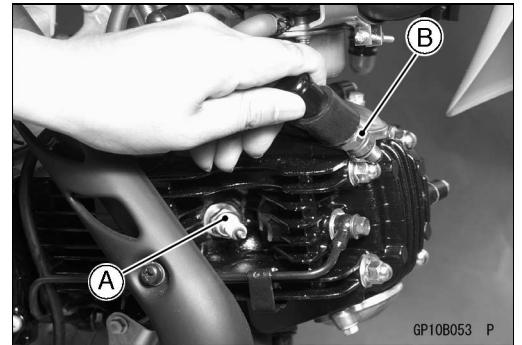

## 14-14 ELECTRICAL SYSTEM

### Ignition System

- Connect the peak voltage adapter [A] between the terminal of primary lead (orange) and ground connection of the unit with the lead of the ignition coil [B] connected.

**Recommended Tool:** Peak Voltage Adapter


**Type:** KEK-54-9-B

**Brand:** KOWA SEIKI

**Connection:** Tester Positive → Black Lead [C]  
Tester Negative → Black/Yellow Lead (Ground) [D]

- Shift the gear to the neutral position, then free the engine stop switch.
- Crank the engine by kicking the pedal several times to measure the peak voltage of the primary ignition coil.

**Peak Voltage** 100 V or above

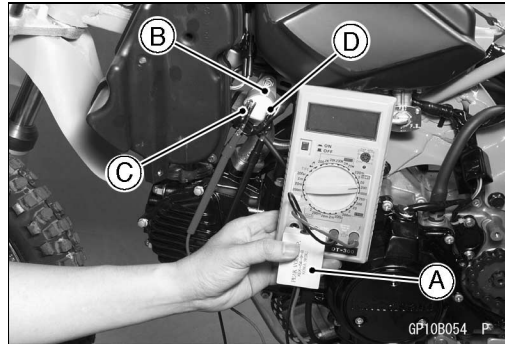


#### **⚠ WARNING**

**Do not touch the metal portion of the probe in case of measuring the voltage, or you may receive a serious electric shock.**

★ If the voltage is less than the specified value, see the next page.

## Ignition System

## Troubleshooting

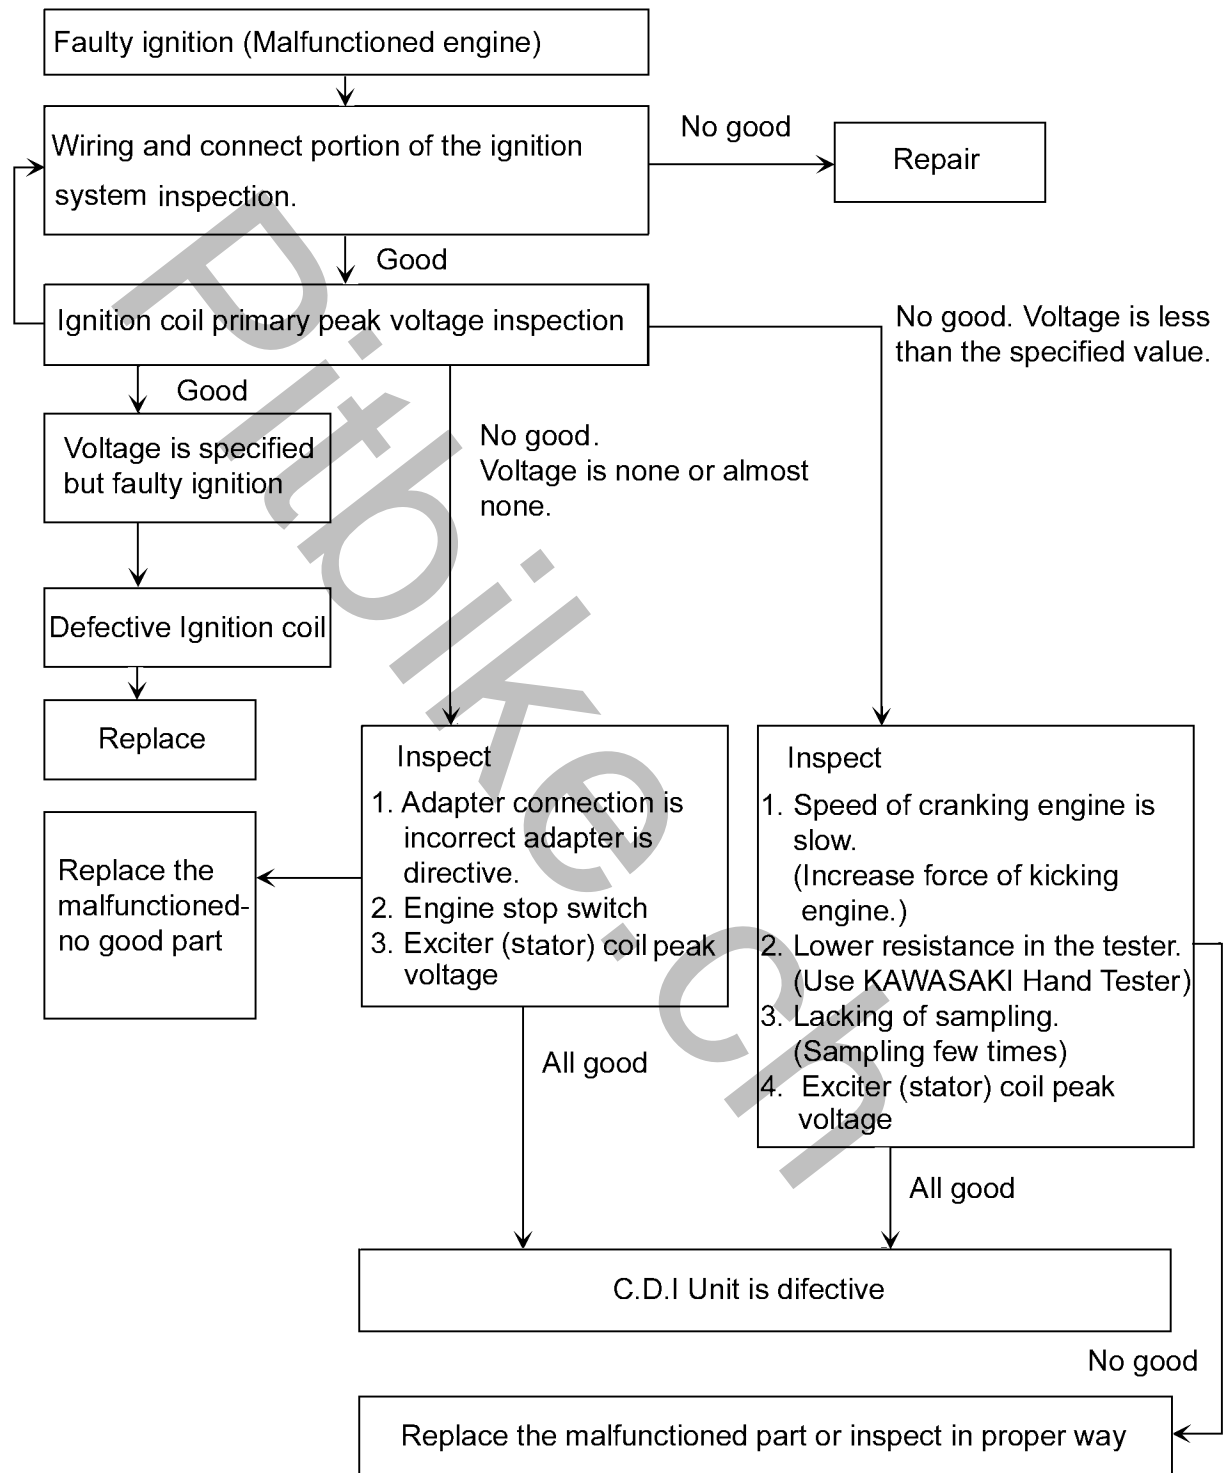

## 14-16 ELECTRICAL SYSTEM

### Ignition System

#### Pickup Coil Peak Voltage Check:

- To check the peak voltage, do the following procedures.
- Disconnect the magneto lead connector.

#### NOTE

- Measure the voltage with each lead connected correctly. The correct value may not be obtained if disconnected.
- Maintain the correct value of compression pressure for the cylinder (Be sure to measure the voltage with the spark plug installed to the cylinder head).
- The correct value may not be obtained if disconnected.
- Connect the peak voltage adapter [A] of the tester to the terminals of the magneto lead connector [B].

**Recommended Tool:** Peak Voltage Adapter

**Type:** KEK-54-9-B


**Brand:** KOWA SEIKI

**Connection:** Adapter Positive → Blue/Yellow Lead [C]

Adapter Negative → Engine Ground [D]

- Crank the engine by kicking the pedal several times to measure the peak voltage of the pickup coil.

**Peak Voltage** 4.6 V or above

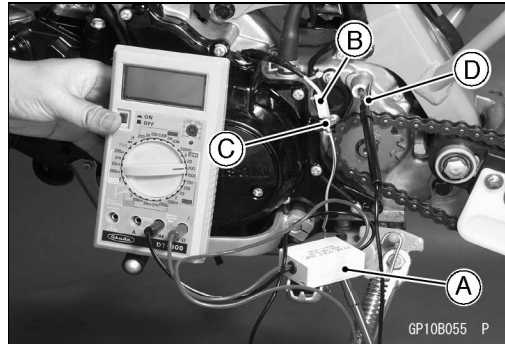

#### ⚠ WARNING

Do not touch the metal portion of the probe in case of measuring the voltage, or you may receive a serious electric shock.

- ★ If the voltage is less than the specified, check the pickup coil.

#### Exciter Coil Peak Voltage Check:

- Disconnect the connector of the main harness from the igniter.
- To check the peak voltage, do the following procedures.

#### NOTE

- Measure the voltage with each lead connected correctly. The correct value may not be obtained if disconnected.
- Maintain the correct value of compression pressure for the cylinder (Be sure to measure the voltage with the spark plug installed to the cylinder head).
- The correct value may not be obtained if disconnected.
- Connect the peak voltage adapter [A] of the tester to the terminals of the magneto lead connector [B].

**Recommended Tool:** Peak Voltage Adapter

**Type:** KEK-54-9-B

**Brand:** KOWA SEIKI


**Connection:** Adapter Positive → White Lead [C]

Adapter Negative → Engine Ground [D]

- Crank the engine by kicking the pedal several times to measure the peak voltage of the exciter coil.

**Peak Voltage:** DC 15 V or Above

- ★ If the voltage is less than the specified, check the exciter coil.

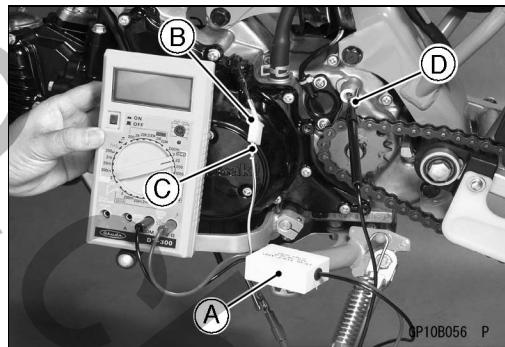

## Switches

### Switch Inspection

- Using the hand tester, check to see that only the connections shown in the table have continuity (about zero ohms).

**Special Tool - Hand Tester: 57001-1394**

- ★ If the switch has an open or short, repair it or replace it with a new one.

### Engine Stop Switch Connection


	Y	R
Stop		
Run	○	○

### Gear Position Switch Connection


	Ground	LG	G/R
Neutral	○	○	
1st	○		○

### Gear Position Switch Removal

- Remove:
  - Engine Sprocket Cover (see Final Drive chapter)
  - Screws [A]
  - Gear Position Switch [B]
- Disconnect the gear position switch lead connector [C].

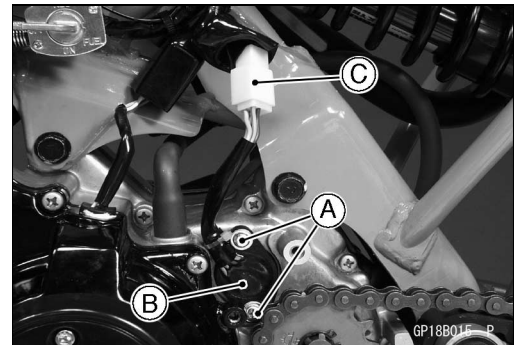

- Remove:
  - O-ring [A]
  - Gear Position Switch Finger [B]
  - Spring [C]

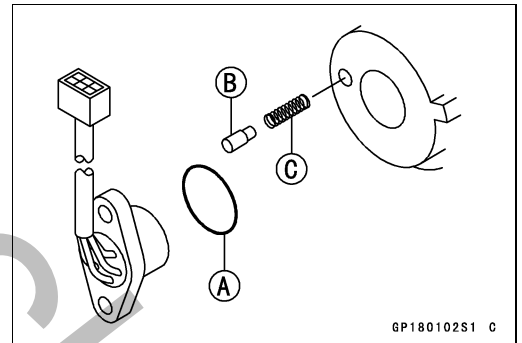


### Gear Position Switch Installation

- Insert the spring into the hole in the shift drum.
- Insert the switch finger [A] so that the small diameter [B] toward hole side.
- Apply grease to the O-ring.
- Clean the contact points on the position switch.
- Tighten the gear position switch screw.

**Torque - Gear Position Switch Screw: 2.9 N·m (0.3 kgf·m, 26 in·lb)**

- Install the other removed parts.

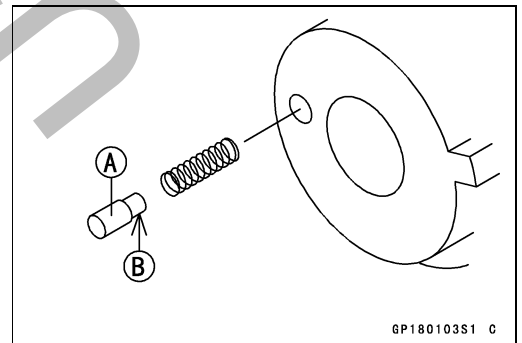


## 14-18 ELECTRICAL SYSTEM

### Switches

#### *Gear Position Switch Inspection:*


- Remove the gear position switch head and examine the contact points for presence of oxidation, oil or dirt, etc. Clean the contact points, and ensure that the switch finger is working correctly.
  - Establish that the switch finger [A] is grounded properly by connecting the hand tester [B] across the engine or frame ground [C] and the switch finger contact points. Check to see that the connection has continuity (about zero ohms).
- ★ If the reading is  $\infty$ , the switch finger earth is faulty or poor.

**Special Tool - Hand Tester: 57001-1394**

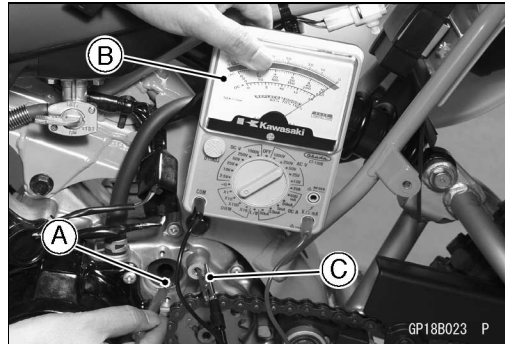


- Establish that the switch head contact point (LG Lead) [A] is grounded properly by connecting the hand tester [B] across the engine or frame ground [C] and the switch head contact point. Check to see that connection has continuity (about 200 ohms).

★ If not, check the ground terminal and the igniter ground.

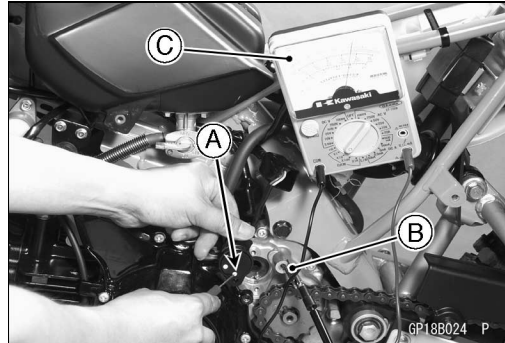

- Establish that the switch head contact point (G/R Lead) [A] is open by connecting the hand tester [B] across the engine or frame ground [C] and the switch head contact point. Check to see that connection has discontinuity ( $\infty$ ).

★ If the reading is about zero ohms, the circuit is short.

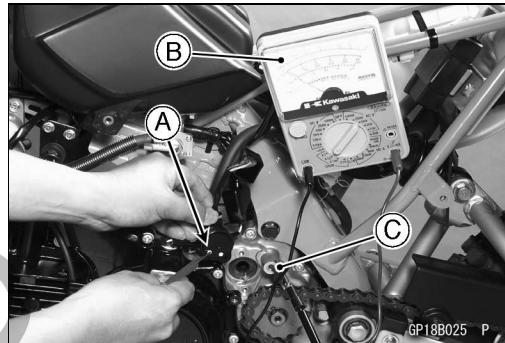

# Troubleshooting

## Table of Contents

Troubleshooting Guide..... 15-2

## 15-2 TROUBLESHOOTING

### Troubleshooting Guide

---

#### NOTE

- *This is not an exhaustive list, giving every possible cause for each problem listed. It is meant simply as a rough guide to assist the troubleshooting for some of the more common difficulties.*

#### Engine Doesn't Start, Starting Difficulty:

##### Engine won't turn over:

- Valve seizure
- Cylinder, piston seizure
- Crankshaft seizure
- Connecting rod small end seizure
- Connecting rod big end seizure
- Camshaft seizure
- Transmission gear or crankcase bearing seizure
- Kickstarter return spring broken
- Kick ratchet gear not engaging

##### No fuel flow:

- No fuel in tank
- Fuel tap turned off
- Tank cap air vent obstructed
- Tank cap clogged
- Fuel line clogged
- Float valve clogged

##### Engine flooded:

- Fuel level too high
- Float valve worn or stuck open
- Starting technique faulty (When flooded, kick with the throttle fully opened to allow more air to reach the engine.)

##### No spark, spark weak:

- Engine stop switch turned off
- Spark plug dirty, damaged or maladjusted
- Spark plug cap or high tension wiring damaged
- Spark plug cap shorted or not in good contact
- Ignition coil damaged
- Stator coil damaged
- Igniter broken
- Flywheel magneto damaged
- Engine stop switch shorted
- Wiring shorted or open

##### Fuel/air mixture incorrect:

- Idle adjusting screw maladjusted
- Pilot jet, or air passage clogged
- Air cleaner clogged, poorly sealed or missing
- Air cleaner duct loose

##### Compression Low:

- Cylinder, piston worn
- Piston ring bad (worn, weak, broken, or sticking)
- Piston ring/land clearance excessive
- Cylinder head gasket damaged
- Cylinder head not sufficiently tightened down
- Cylinder head warped
- Spark plug loose
- No valve clearance
- Valve spring broken or weak
- Valve not seating properly (valve bent, worn or carbon accumulation on the seating surface)

#### Poor Running at Low Speed:

##### Spark weak:

- Spark plug dirty, damaged, or maladjusted
- Spark plug cap or high tension wiring damaged
- Spark plug cap shorted or not in good contact
- Spark plug incorrect

- Pickup coil trouble
- Ignition coil damaged
- Igniter broken
- Flywheel magneto damaged

##### Fuel/air mixture incorrect:

- Idle adjusting screw maladjusted
- Pilot jet, or air passage clogged
- Air cleaner clogged, poorly sealed, or missing
- Air cleaner duct loose
- Choke valve closed
- Float level too high or too low
- Fuel tank air vent obstructed
- Carburetor holder loose

##### Compression low:

- Cylinder, piston worn
- Piston rings bad (worn, weak, broken or sticking)
- Piston ring/land clearance excessive
- Cylinder head gasket damaged
- Cylinder head not sufficiently tightened down
- Cylinder head warped
- No valve clearance
- Spark plug loose
- Valve spring broken or weak
- Valve not seating properly (Valve bent, worn, or carbon accumulation on the seating surface).
- Crankshaft oil seal deteriorated or damaged

##### Other:

- Throttle valve doesn't slide smoothly
- Engine oil viscosity too high
- Brake dragging

#### Poor Running or No Power at High Speed:

##### Firing incorrect:

- Spark plug dirty, damaged, or maladjusted
- Spark plug cap or high tension wiring damaged
- Spark plug cap shorted or not in good contract
- Spark plug incorrect
- Ignition coil trouble
- Pickup coil trouble
- Stator coil shorted or open
- Igniter trouble

##### Fuel/air mixture incorrect:

- Main jet clogged or wrong size
- Jet needle or needle jet worn
- Jet needle clip in wrong position
- Fuel level too high or too low
- Air jet or air passage clogged
- Air cleaner clogged, poorly sealed or missing
- Air cleaner duct poorly sealed
- Carburetor holder loose
- Fuel to carburetor insufficient
- Water or foreign matter in fuel
- Fuel tank air vent obstructed
- Fuel line clogged
- Fuel tap clogged
- Air cleaner duct loose



## Troubleshooting Guide

### Compression low:

- Cylinder, piston worn
- Piston rings bad (worn, weak, broken, or sticking)
- Piston ring/land clearance excessive
- Cylinder head gasket damaged
- Cylinder head not sufficiently tightened down
- Cylinder head warped
- No Valve clearance
- Spark plug loose
- Valve not seating properly (Valve bent, worn or carbon accumulation on the seating surface)

### Knocking:

- Carbon built up in combustion chamber
- Fuel poor quality or incorrect
- Spark plug incorrect

### Miscellaneous:

- Float level too high too or too low
- Main jet clogged
- Throttle valve does not fully open
- Air cleaner clogged
- Water or foreign matter in fuel
- Brake dragging
- Clutch slipping
- Overheating
- Engine oil level too high
- Engine oil viscosity too high
- Crankshaft bearing worn or damaged

### Overheating:

#### Firing incorrect:

- Spark plug dirty, broken, or maladjusted
- Spark plug incorrect
- Igniter trouble

#### Fuel/air mixture incorrect:

- Main jet clogged or wrong size
- Fuel level too low
- Carburetor holder loose
- Air cleaner clogged
- Air cleaner poorly sealed, or missing
- Air cleaner duct loose

### Compression high:

- Carbon built up in combustion chamber

### Engine load faulty:

- Clutch slipping
- Engine oil level too high
- Engine oil viscosity too high
- Brakes dragging

### Lubrication inadequate:

- Engine oil level too low
- Engine oil poor quality or incorrect

### Clutch Operation Faulty:

#### Clutch slipping:

- No clutch release play
- Friction plate worn or warped
- Steel plate worn or warped
- Clutch spring or weak
- Clutch release maladjusted
- Clutch release mechanism trouble
- Clutch hub or housing unevenly worn

#### Clutch not disengaging properly:

- Clutch release play excessive
- Clutch plate warped or too rough
- Clutch spring tension uneven
- Engine oil deteriorated

- Engine oil level too high
- Engine oil viscosity too high
- Clutch housing frozen on drive shaft
- Clutch release mechanism trouble

### Gear Shifting Faulty:

#### Doesn't go into gear shift pedal doesn't return:

- Clutch not disengaging
- Shift fork bent or seized
- Gear stuck on the shaft
- Shift return spring weak or broken
- Shift pawl spring broken
- Shift return spring pin loose
- Gear set level binding on pivot bolt
- External shift mechanical arm worn
- Shift drum damaged

#### Jumps out of gear:

- Shift fork worn
- Gear groove worn
- Gear dogs, holes, and/or recesses worn
- Shift drum groove worn
- Shift drum set lever spring weak or broken
- Shift fork guide pin worn
- Shift pawl spring weak or broken
- Drive shaft, output shaft, and/or gear splines worn

#### Overshifts:

- Shift drum set lever spring weak or broken
- Shift pawl spring weak or broken

### Abnormal Engine Noise:

#### Knocking:

- Carbon built up in combustion chamber
- Fuel poor quality or incorrect
- Overheating
- Spark plug incorrect

#### Piston slap:

- Cylinder/piston clearance excessive
- Cylinder, piston worn
- Connecting rod bent
- Piston pin, piston holes worn

#### Valve noise:

- Valve clearance incorrect
- Valve spring broken or weak
- Camshaft journals worn

#### Other noise:

- Connecting rod small end clearance excessive
- Connecting rod big end clearance excessive
- Piston ring worn, broken, or stuck
- Piston seizure or damaged
- Cylinder head gasket leaking
- Exhaust pipe leaking at cylinder head connection
- Crankshaft runout excessive
- Engine mounts loose
- Crankshaft bearing worn
- Camshaft chain tensioner trouble
- Camshaft chain, sprocket, guide worn
- Loose magneto flywheel

### Abnormal Drive Train Noise:

#### Clutch noise:

- Clutch housing or hub damaged
- Clutch housing/friction plate clearance excessive
- Clutch housing gear/primary gear backlash excessive

## 15-4 TROUBLESHOOTING

### Troubleshooting Guide

---

#### **Transmission noise:**

- Crankcase bearing worn
- Metal chip jammed in gear teeth
- Transmission gears worn or chipped
- Engine oil insufficient or too thin
- Kick ratchet gear not properly disengaging from kick gear
- Kick idle gear worn or chipped

#### **Drive chain noise:**

- Drive chain adjusted improperly
- Chain worn
- Rear and/or engine sprocket(s) worn
- Chain lubrication insufficient
- Rear Wheel misaligned

#### **Abnormal Frame Noise:**

##### **Front fork noise:**

- Oil insufficient or too thin
- Spring weak or broken

##### **Rear shock absorber noise:**

- Shock absorber damaged

##### **Brake noise:**

- Brake linings over worn or worn unevenly
- Drum worn unevenly or scored
- Brake spring(s) weak or broken
- Foreign matter in hub
- Brake not properly adjusted

##### **Other noise:**

- Bracket, nut, bolt, etc. not properly mounted or tightened

#### **Exhaust Smokes Excessively:**

##### **White smoke:**

- Piston oil ring worn
- Cylinder worn
- Valve oil seal damaged
- Valve guide worn
- Engine oil level too high

##### **Black smoke:**

- Air cleaner clogged
- Main jet too large or fallen off
- Choke valve closed
- Float level too high

##### **Brown smoke:**

- Main jet too small
- Fuel level too low
- Air cleaner duct loose
- Air cleaner poorly sealed or missing

#### **Handling and/or Stability Unsatisfactory:**

##### **Handlebar hard to turn:**

- Steering stem locknut too tight

- Steering stem bearing damaged
- Race(s) dented or worn
- Steering stem lubrication inadequate
- Steering stem bent
- Tire air pressure too low

##### **Handlebar shakes or excessively vibrates:**

- Tire worn
- Swingarm bushing damaged
- Rim warped
- Spokes loose
- Front, rear axle runout excessive
- Wheel bearing worn
- Handlebar clamp bolt loose
- Steering stem head nut and/or handlebar bracket bolt loose

##### **Handlebar pulls to one side:**

- Frame bent
- Wheel misalignment
- Swingarm bent or twisted
- Swingarm pivot shaft runout excessive
- Steering stem bent
- Front fork leg bent
- Right/left front fork oil level uneven
- Rear shock absorber and/or swingarm bent

##### **Shock absorption unsatisfactory:**

- (Too hard)
- Front fork oil excessive
- Front fork oil viscosity too high
- Front fork bent
- Tire air pressure too high
- (Too soft)
- Front fork oil viscosity too low
- Front fork, rear shock absorber spring weak
- Front fork oil leaking
- Rear shock absorber oil leaking
- Tire air pressure too low

##### **Brake Doesn't Hold:**

##### **Drum Brake:**

- Brake not properly adjusted
- Linings overworn or worn unevenly
- Drum worn unevenly or scored
- Cam, camshaft, shaft hole worn
- Oil, grease on lining and drum
- Dirt, water between lining and drum
- Overheated

#### MODEL APPLICATION

Year	Model	Beginning Frame No.
2002	KLX110-A1	JKALXSA1□2A000001 or JKALX110AAA000001

□ : This digit in the frame number changes from one machine to another.



KAWASAKI HEAVY INDUSTRIES, LTD.  
Consumer Products & Machinery Company

Part No. 99924-1283-01

Printed in Japan