

VIN PLATE DECODING INFORMATION


1	2	3	4	5	6	7	8	9	10	11	12 thru 17
Country	Make	Vehicle Type	Other	Line	Series	Body Style	Engine	Check Digit	Model Year	Assy. Plant	Sequence No.

The following table interprets the VIN Plate position shown above.


Position	Interpretation	Codes = Description
1	Country of Origin	1 = Built in U.S. by DaimlerChrysler Corporation
2	Assembler	J = Jeep
3	Vehicle Type	4 = Multipurpose Passenger Vehicle Less Side Air Bags
4	GVWR & Pass. Safety	E = 1361-1814 kg (3001-4000 lbs) F = 1814-2267 kg (4001-5000 lbs) G = 2268-2721 kg (5001-6000 lbs) H = 2722-3175 kg (6001-7000 lbs) J = 3176-3628 kg (7001-8000 lbs) K = 3629-4082 kg (8001-9000 lbs) L = 4083-4535 kg (9001-10000 lbs) M = 4536-6350 kg (10001-14000 lbs)
5	Vehicle Line	K = Liberty 4x2 Left Hand Drive L = Liberty/Cherokee 4x4 Left Hand Drive M = Liberty/Cherokee 4x4 Right Hand Drive
6	Series	4 = H Series - Liberty/Cherokee Sport 3 = M Series - Liberty Renegade 5 = P Series - Liberty/Cherokee Limited
7	Body Style	8 = KJ - 74
8	Engine	1 = 2.4L I4 Cyl. Gas DOHC (ED1) 7 = 2.5L I4 Cyl. 16V Turbo Diesel (ENJ) 5 = 2.8L I4 Cyl. 16V Turbo Diesel (ENR) K = 3.7L V6 Cyl. Gas (EKG)
9	Check Digit	0 = Check Digit 0 = Check Digit
10	Model Year	2 = 2002 3 = 2003 3 = 2003
11	Assembly Plant	L = Toledo North Assembly
12 thru 17	Vehicle Build Sequence	Model Year Assembly Sequence

# Group - 1

## Component Parts for Mopar Accessories

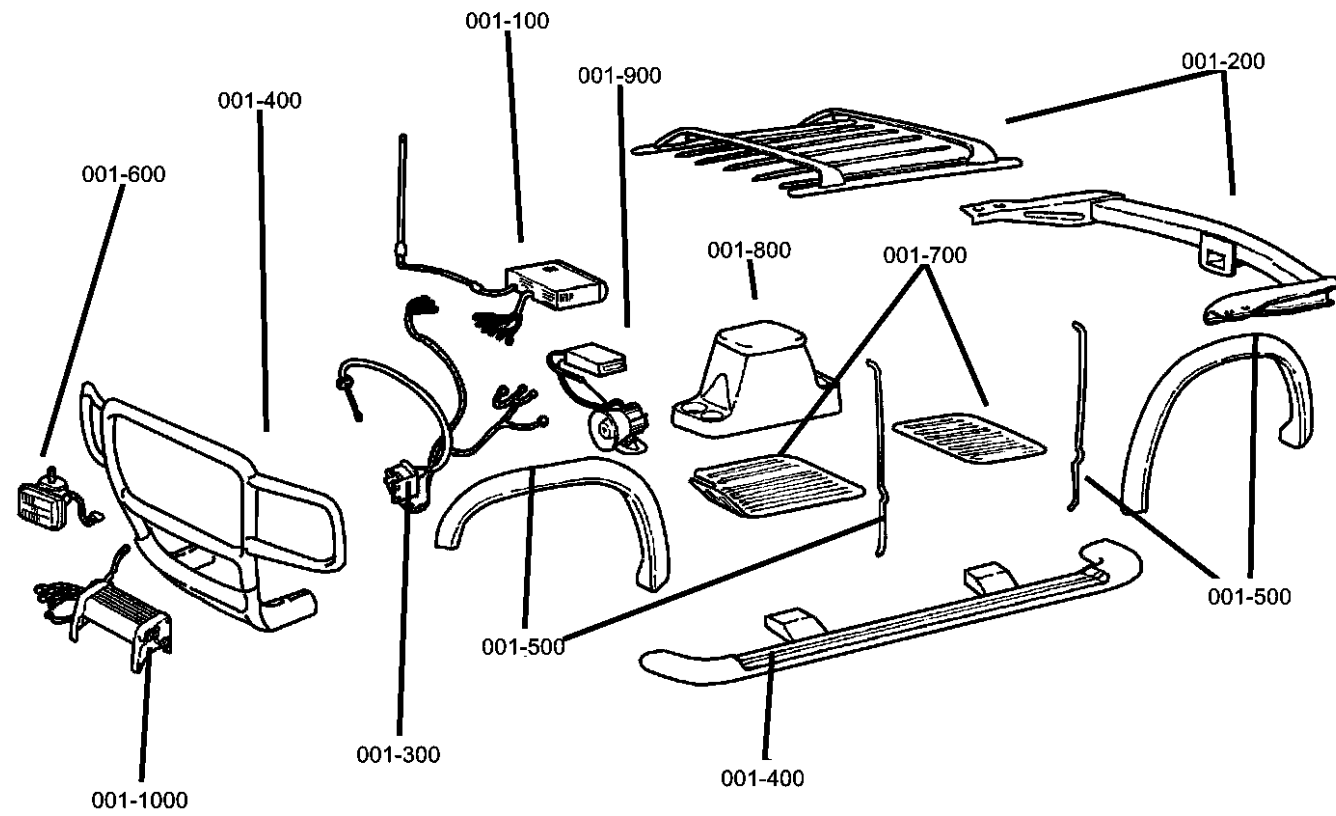

**001-100**  
Audio & Electronics

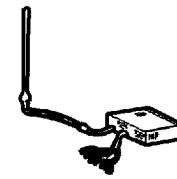


**001-200**  
Carriers & Cargo Hauling



**001-300**  
Driving Convenience



**001-400**  
Exterior Appearance

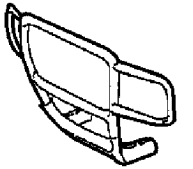

**001-500**  
Exterior Protection



**001-600**  
Fog Lights & Electrical



**001-800**  
Interior Storage



**001-900**  
Security



Group - 1 Component Parts for Mopar Accessories

Illustration TitleGroup-Fig. No.

Audio & Electronics

Player Kit - CD Changer .....	Fig. 1 - 110
Satellite Receiver Kit.....	Fig. 1 - 120
Install Kit - Sattelite Receiver Without CD Changer .....	Fig. 1 - 130
Install Kit - Satellite Receiver With CD.....	Fig. 1 - 135

Carriers & Cargo Hauling

Bike Carrier - Roof - Fork Mount .....	Fig. 1 - 210
Bike Carrier - Roof - Upright Mount.....	Fig. 1 - 215
Bike Carrier - Spare Tire Mount .....	Fig. 1 - 220
Carrier Kit - Canoe .....	Fig. 1 - 225
Carrier Kit - Water Sports.....	Fig. 1 - 230
Ski Carrier - Spare Tire Mount .....	Fig. 1 - 235
Ski Carrier - Roof Mount .....	Fig. 1 - 240
Luggage Carrier - Roof - Hard Style .....	Fig. 1 - 245
Luggage Carrier - Roof - Vinyl .....	Fig. 1 - 250
Rack Kit - Sport Utility.....	Fig. 1 - 255
Wiring Kit - Trailer Tow - 4 Way .....	Fig. 1 - 260
Wiring Kit - Trailer Tow - 7 Way .....	Fig. 1 - 265
Fan Kit - Engine .....	Fig. 1 - 270

Driving Convenience

Hands Free Kit/Cellular Phone Blue Tooth .....	Fig. 1 - 320
--	--------------

Exterior Appearance

Running Board Kit.....	Fig. 1 - 410
Wheel Kit.....	Fig. 1 - 415
Decor Kit Bodyside.....	Fig. 1 - 420

Exterior Protection

Skid Plate - Transfer Case .....	Fig. 1 - 510
Skid Plate - Fuel Tank.....	Fig. 1 - 515
Deflector Kit - Air Front .....	Fig. 1 - 520

Fog Lights & Electrical

Light Kit - Fog.....	Fig. 1 - 610
Light Bar Roof .....	Fig. 1 - 615
Heater Kit .....	Fig. 1 - 620
Hands Free Kit - Cellular Phone - Blue Tooth.....	Fig. 1 - 625

Interior Storage

Guard Kit - Dog.....	Fig. 1 - 810
----------------------	--------------

Security


Alarm - EVS II Base System .....	Fig. 1 - 910
Alarm - EVS II Plus System .....	Fig. 1 - 915

Player Kit - CD Changer  
 Figure 1-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; For Warranty Repair On Item 2, Order Through [GPOP] Function 11, Using Z Prefix

1	82208269	1			74				PLAYER KIT, CD Changer - 6 Disc
2	56038616AA	1			74				CHANGER, CD
3	04797433	1							MAGAZINE, CD Changer
4	05073243AB	1			74				CABLE, CD Changer

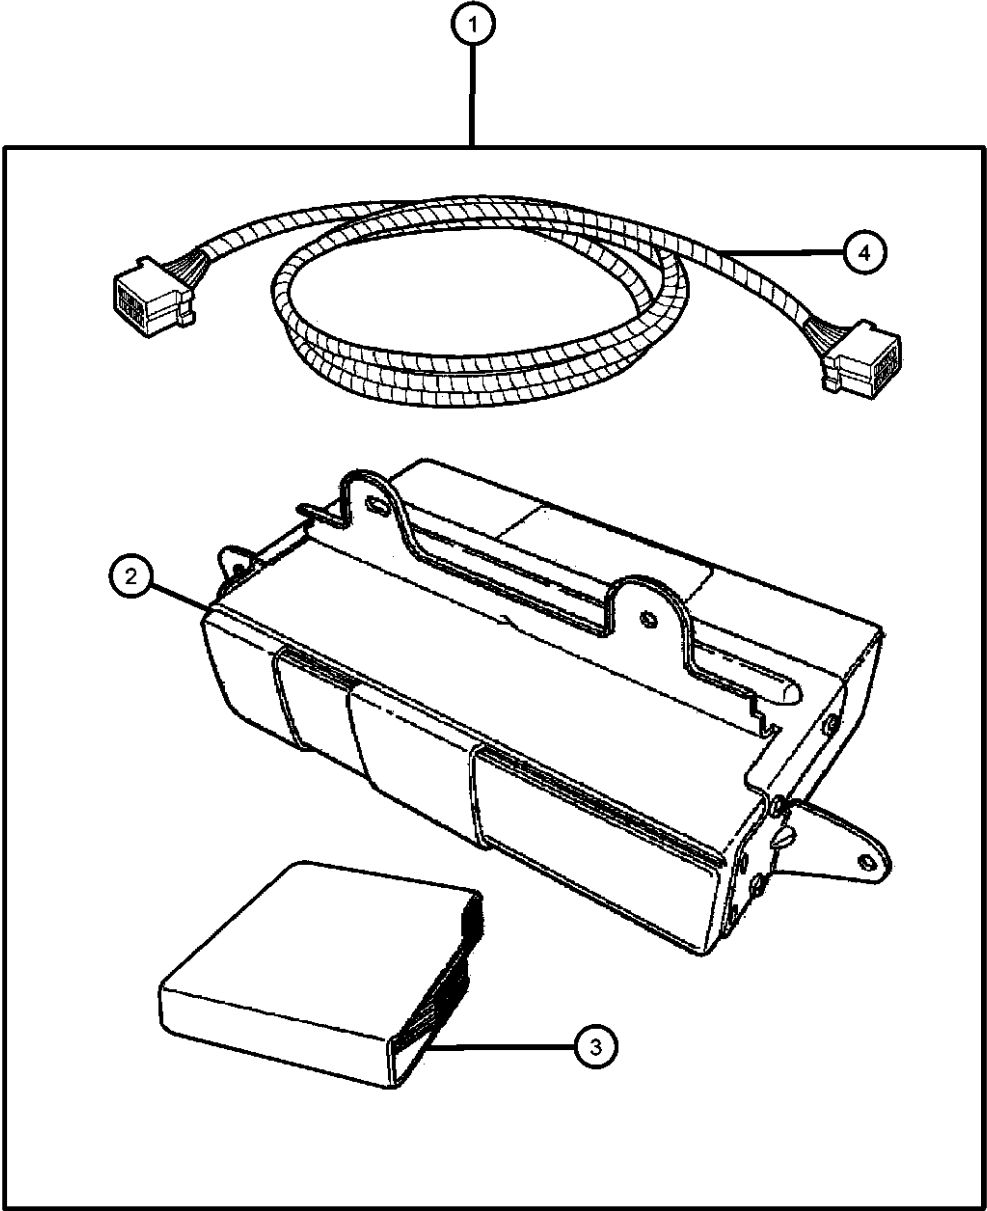

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required    - = Non illustrated part




Satellite Receiver Kit  
Figure 1-120

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note: For Warranty Repair on Item 3, Order Through [GPOP] Function 11, Using Z Prefix

1	82206488AA	1							RECEIVER, Satellite
2	05066205AC	1							ANTENNA, Satellite
3	05064020AG	1							RECEIVER, Satellite

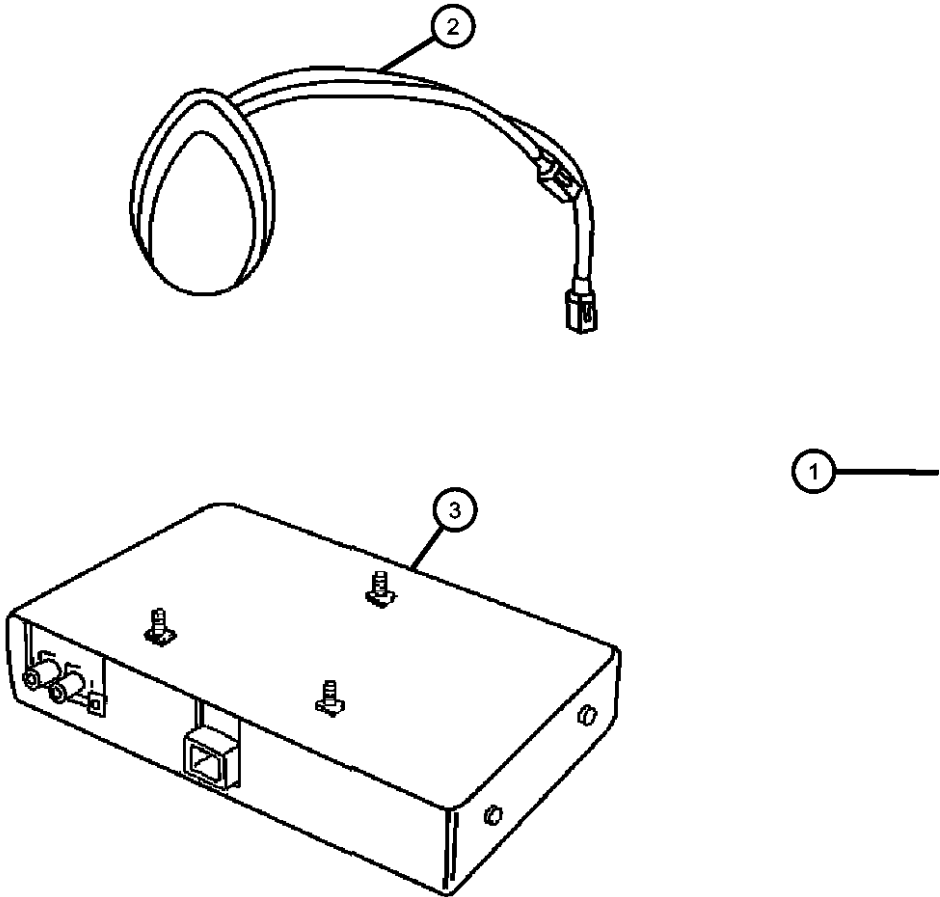

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions


Install Kit - Sattelite Receiver Without CD Changer  
Figure 1-130

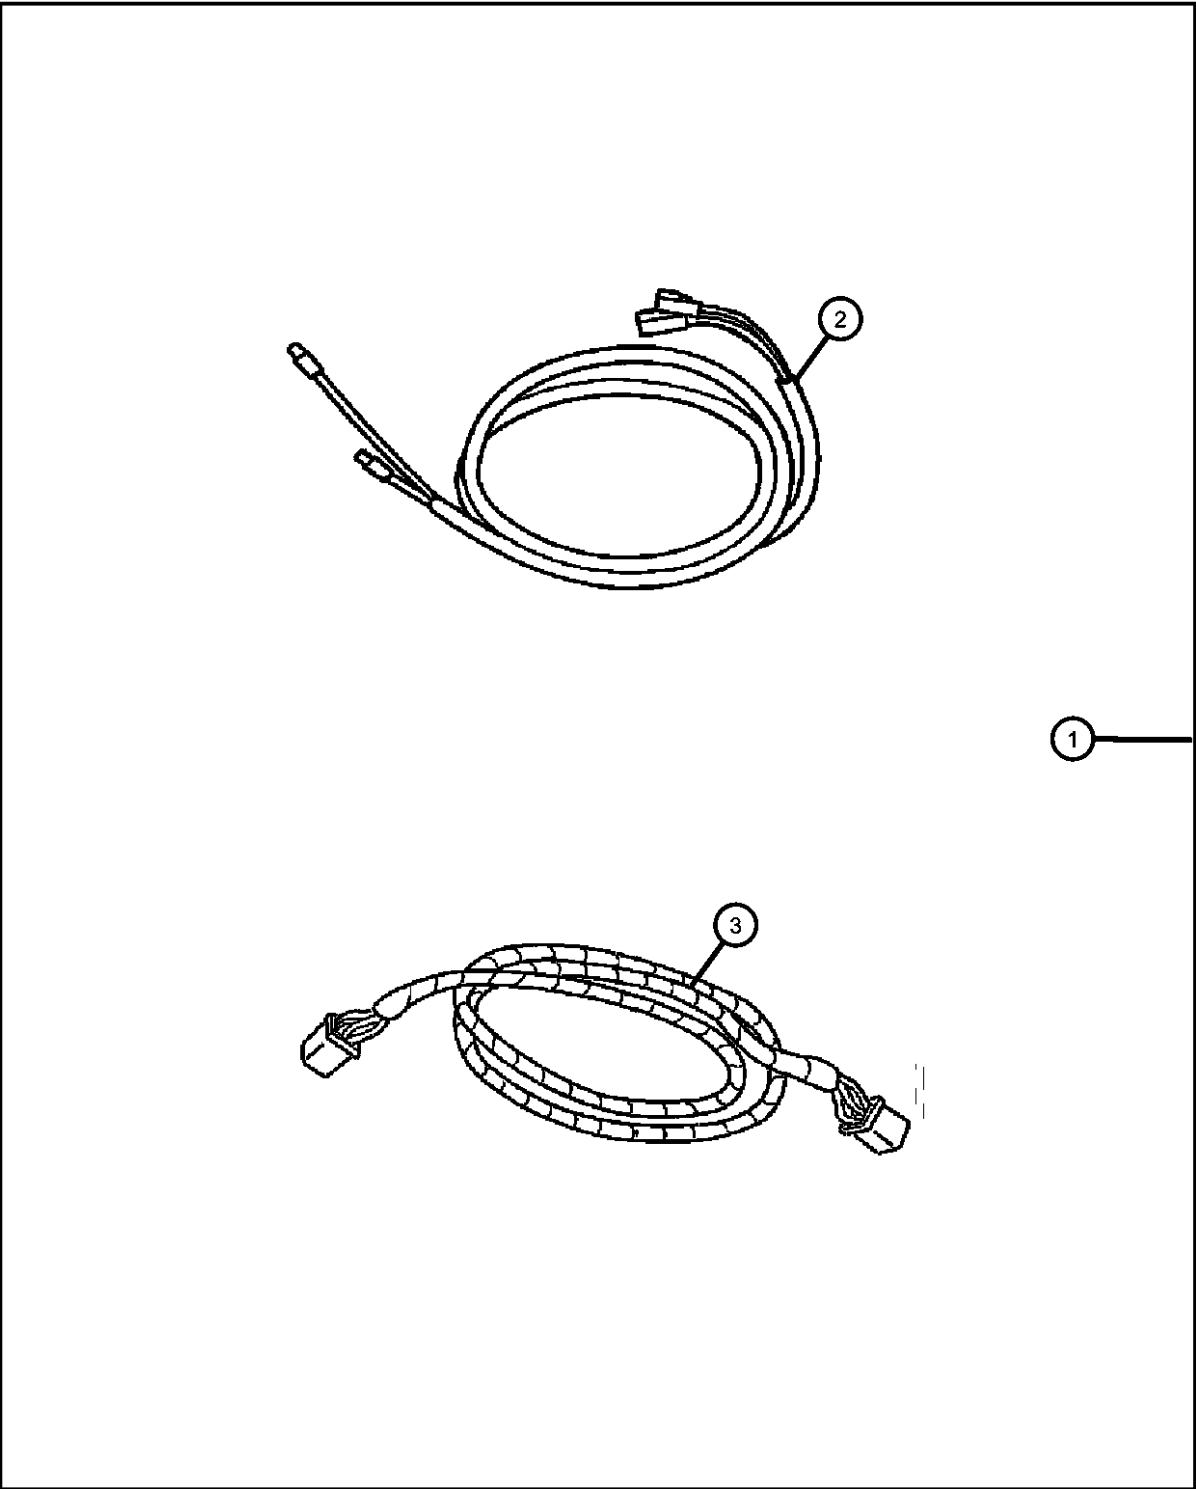

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82206489	1							INSTALL KIT, Satalite Receiver
2	05066207AB	1							CABLE, Antenna
3	05066203AA	1							WIRING, Rcvr to Radio

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

Install Kit - Satellite Receiver With CD  
Figure 1-135

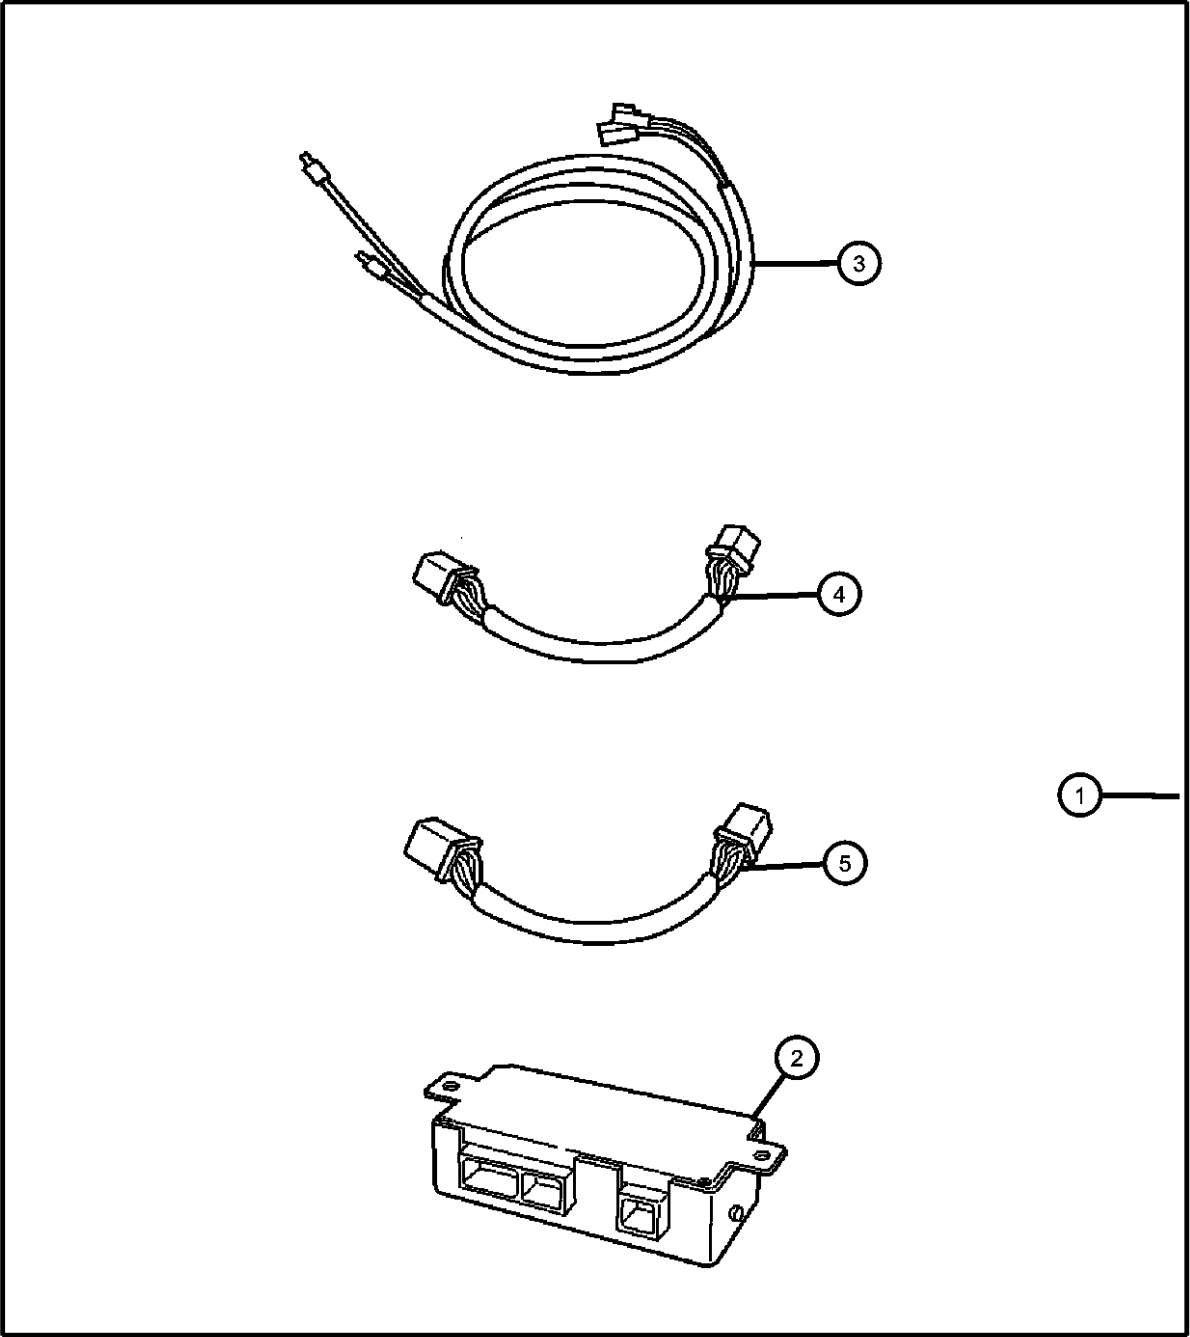

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82207565	1							INSTALL KIT, Satelite Receiver
2	05066202AC	1							MODULE, RR Multiplex
3	05066207AB	1							CABLE, Antenna
4	05066206AA	1							WIRING, RCVR TO MUX
5	05083163AA	1							WIRING, CD to MUX
-6	05066210AA	1							WIRING, Adaptor


LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

Bike Carrier - Roof - Fork Mount  
Figure 1-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note; Requires Sport Utility Rack

1	82207943	1			74				CARRIER KIT, Bike, Fork - Mount
2	05093779AA	1			74				HARDWARE KIT, Accessory
3	05114532AA	1			74				STRAP, Cargo Tie Down

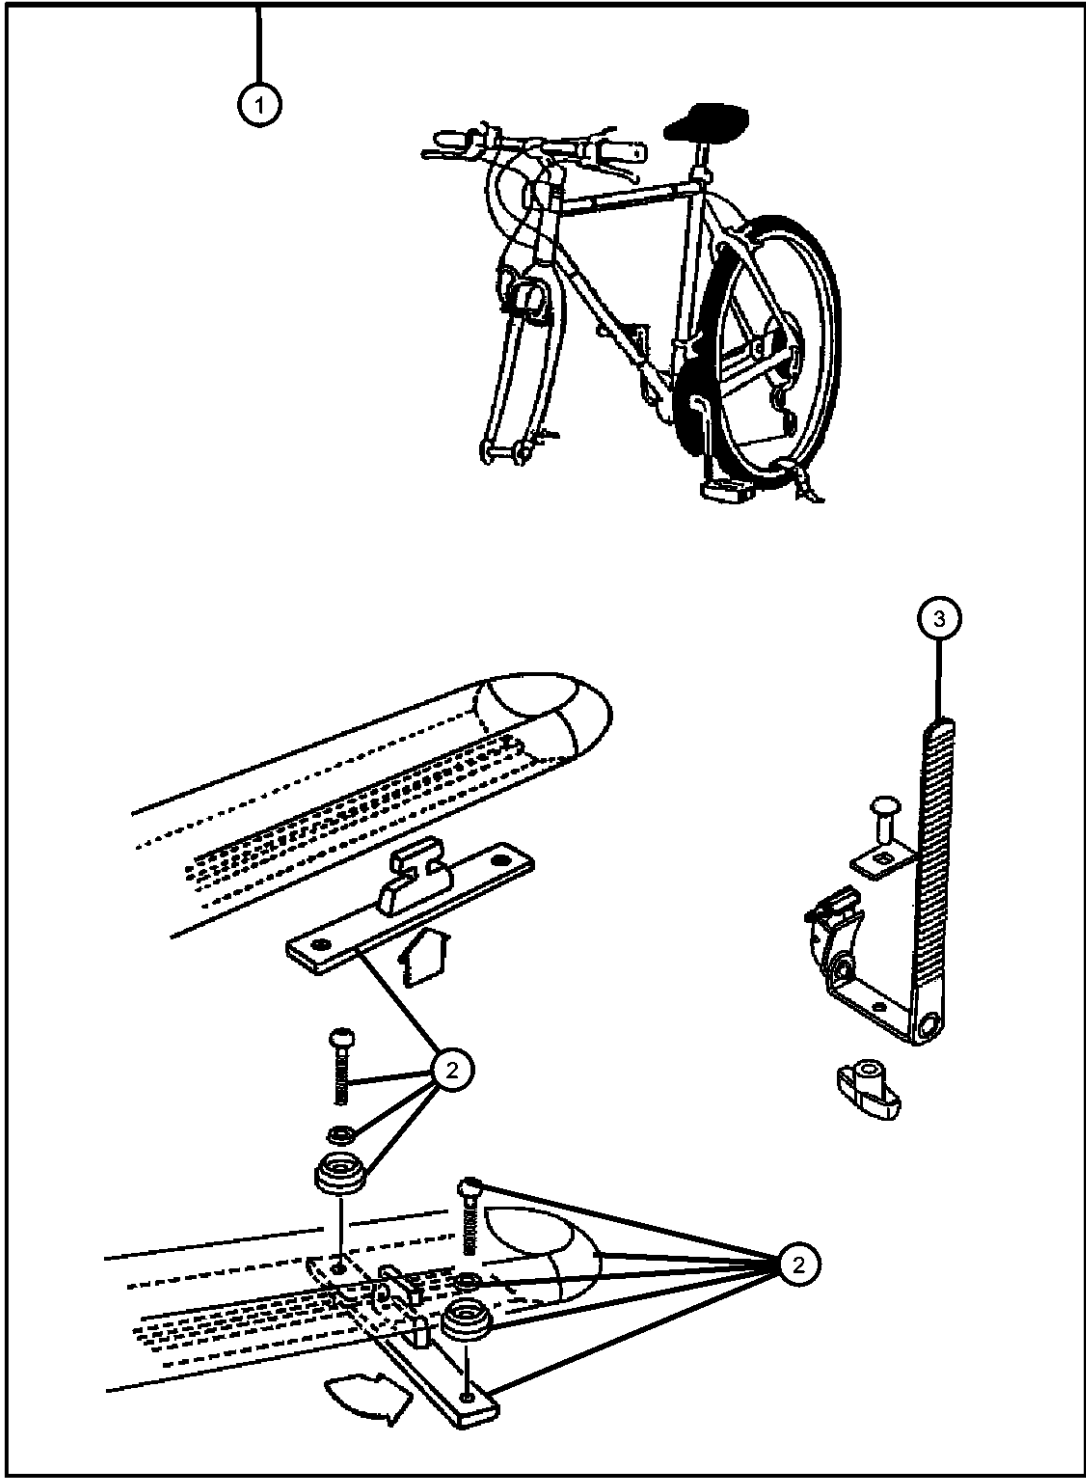

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

Bike Carrier - Roof - Upright Mount  
Figure 1-215

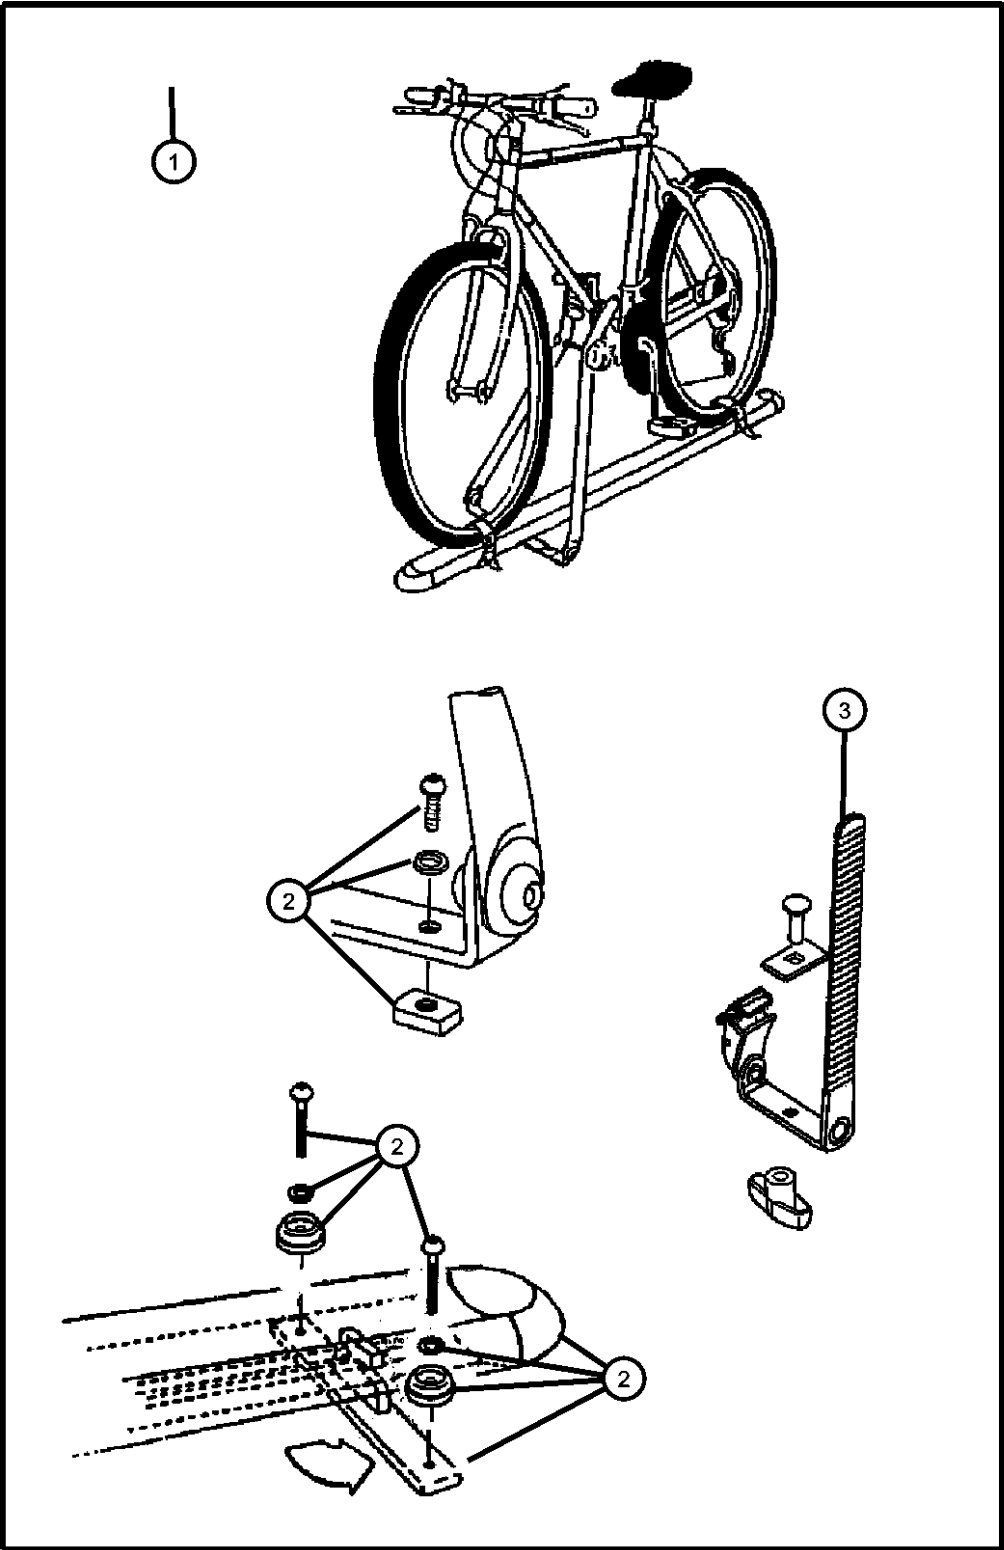

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note; Requires Sport Utility Rack

1	82207942	1			74				CARRIER KIT, Bike, Upright - Mount
2	05093779AA	1			74				HARDWARE KIT, Accessory
3	05114532AA	1			74				STRAP, Cargo Tie Down

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions


Bike Carrier - Spare Tire Mount  
Figure 1-220

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Mounts to Spare Tire - Holds two Bikes with Crossbars									
1	82207520	1							CARRIER KIT, Bike
2	05018825AA	1							HARDWARE KIT, Bike Carrier, Contains: T-Handle, Lock Strap, Top Clamp Assembly, Nylon Washers
3	04762880	1							STRAP KIT, Velcro

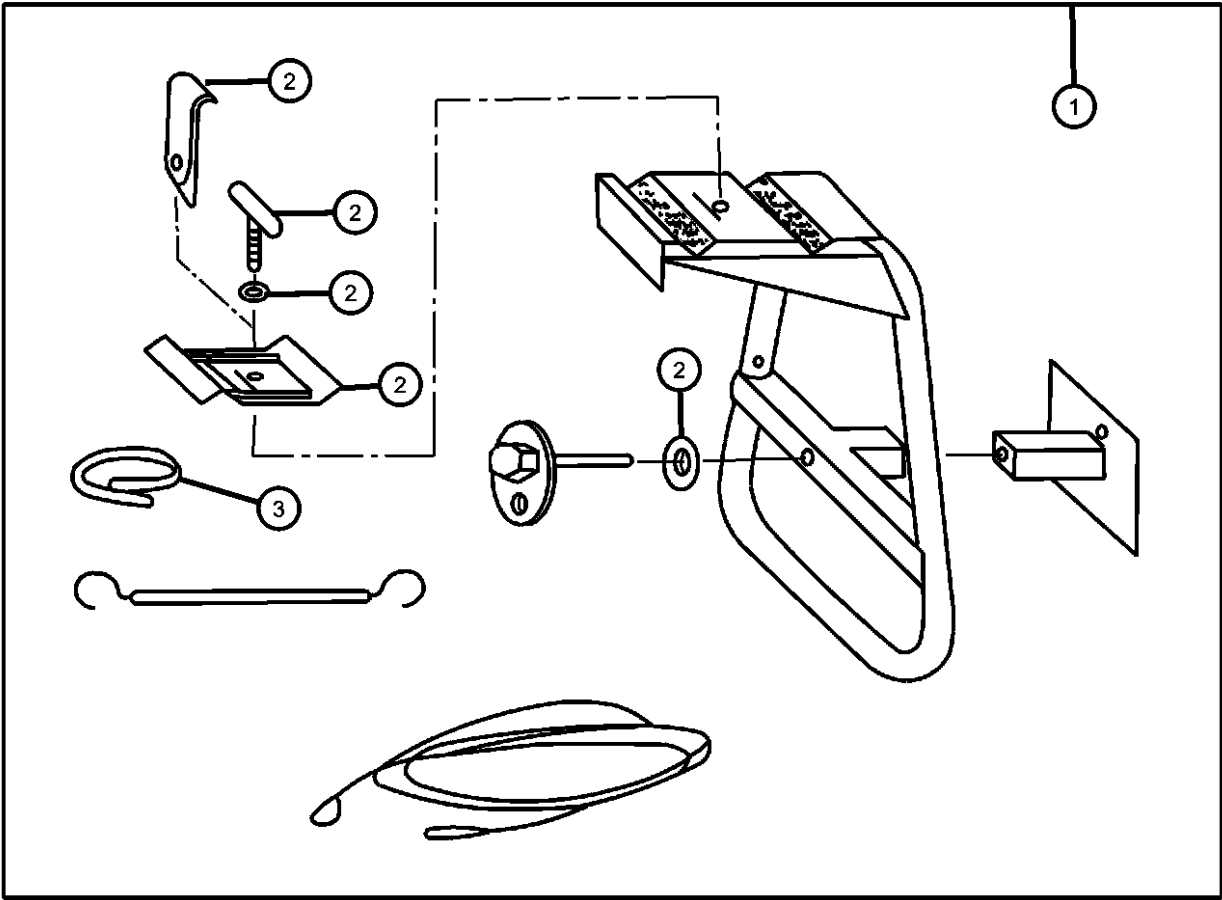

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Carrier Kit - Canoe  
Figure 1-225

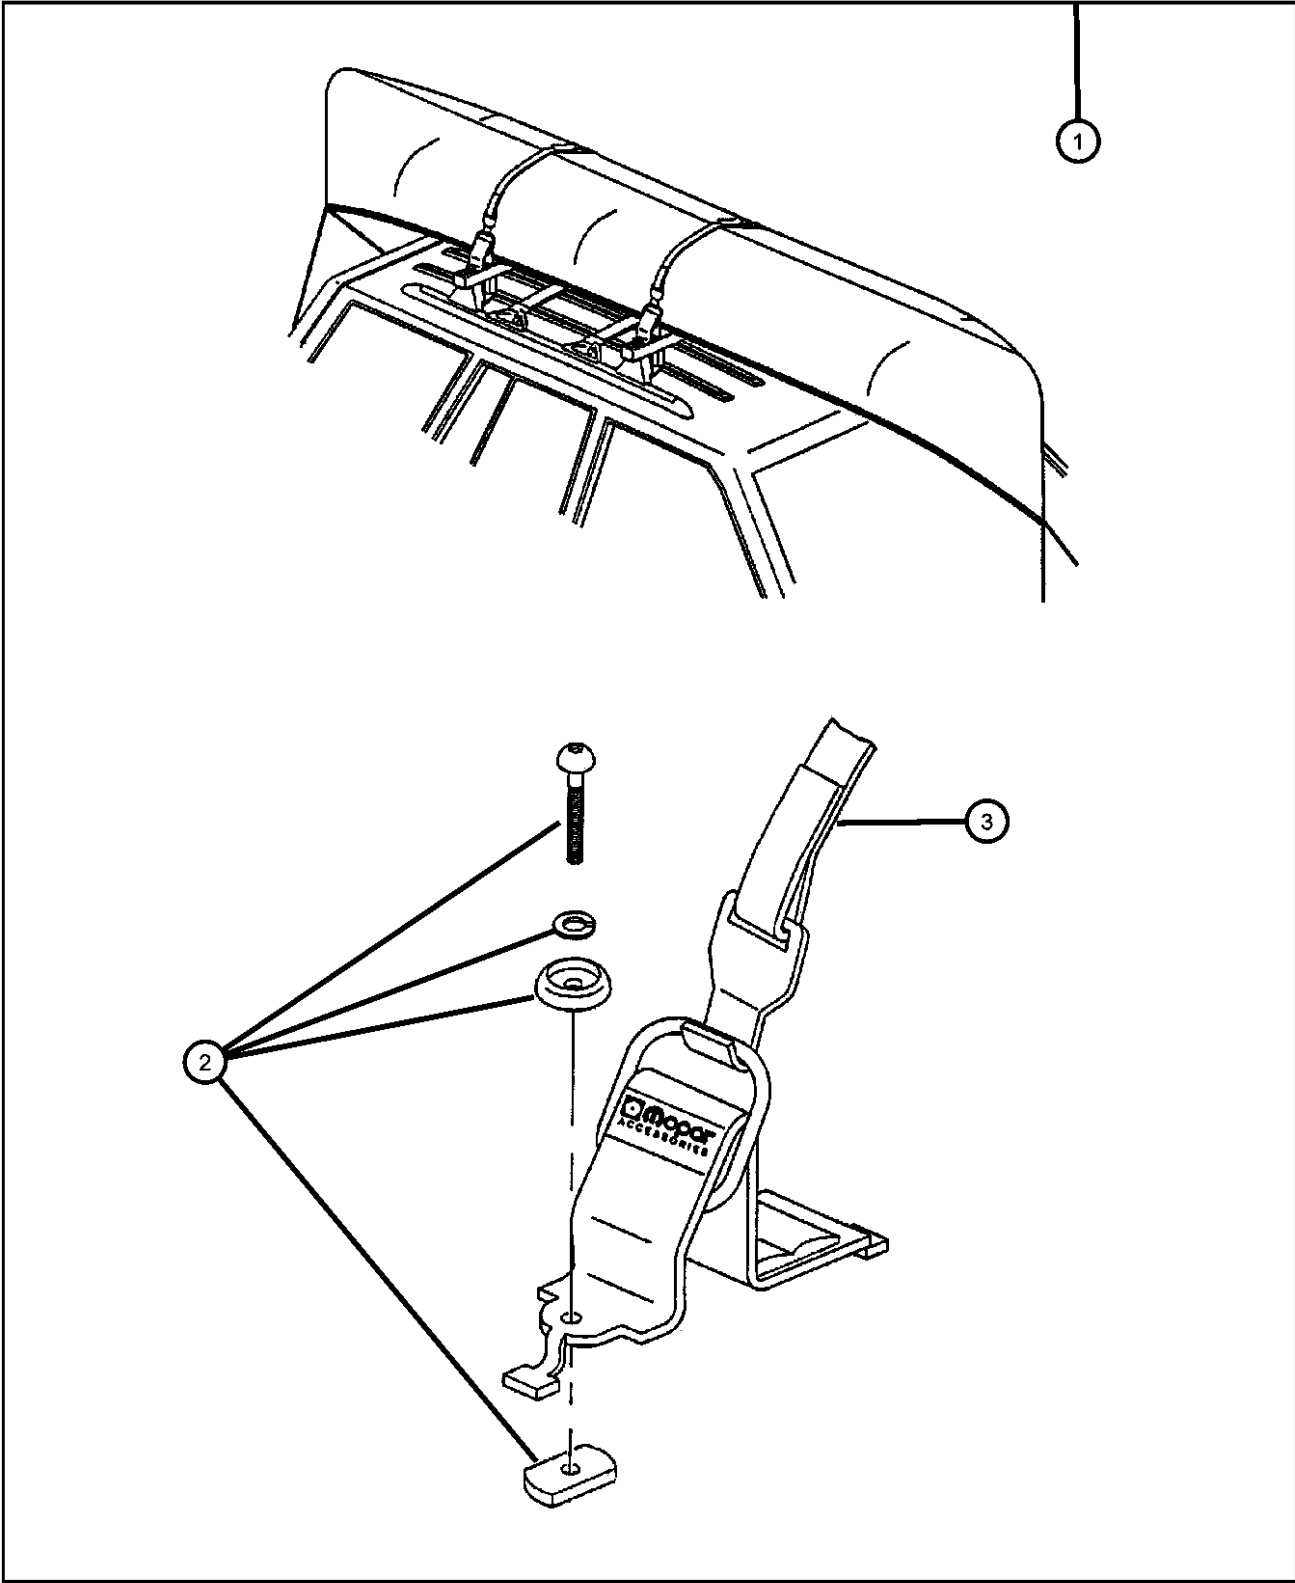

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; Requires Sport Utility Rack

1	82204700	1							CARRIER KIT, Canoe
2	05016389AA	1							HARDWARE KIT, Accessory, Contains 4 25MM Button Head Screws, 4 30MM Button Head Screws, 4 Dome Washers, 4 Lock Washers, 4 Rubber Washers, 4 T-Nuts
3	05016511AA	1							STRAP, Cargo Tie Down

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part

Carrier Kit - Water Sports  
Figure 1-230

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; Requires Sport Utility Rack

1	82205416	1			74				CARRIER KIT, Water Sports
2	05016389AA	1							HARDWARE KIT, Accessory, Contains 4 25MM Button Head Screws, 4 30MM Button Head Screws, 4 Dome Washers, 4 Lock Washers, 4 Rubber Washers, 4 T-Nuts
3	05016511AA	1							STRAP, Cargo Tie Down

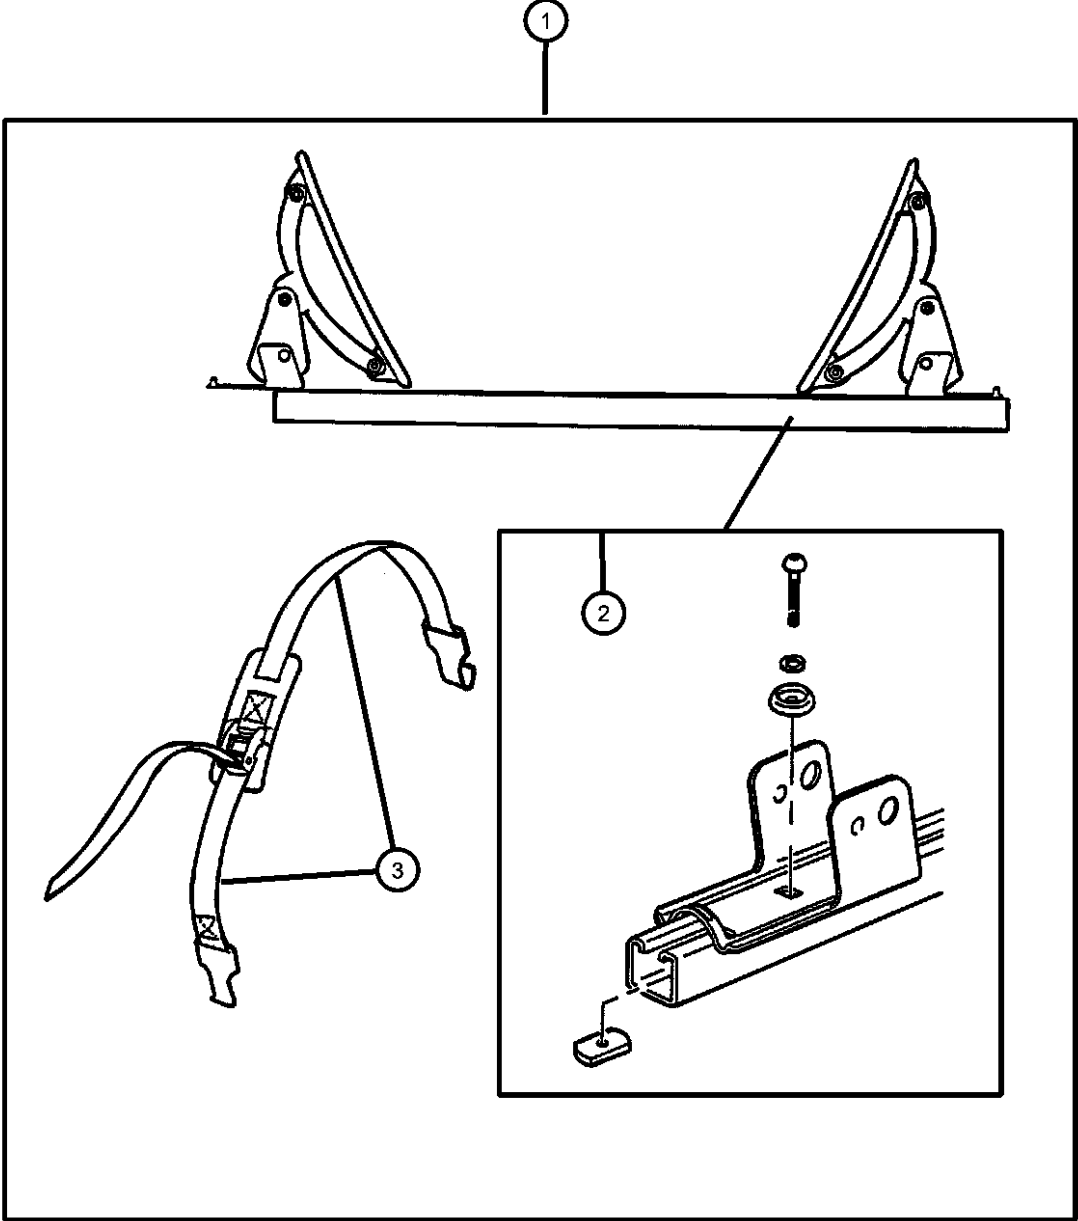

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions




Ski Carrier - Spare Tire Mount  
Figure 1-235

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE: Requires full size, outside mounted spare tire.


1	82207643	1			74				CARRIER KIT, Ski
2	05016775AA	1			74				STRAP KIT, Bike Carrier Latch

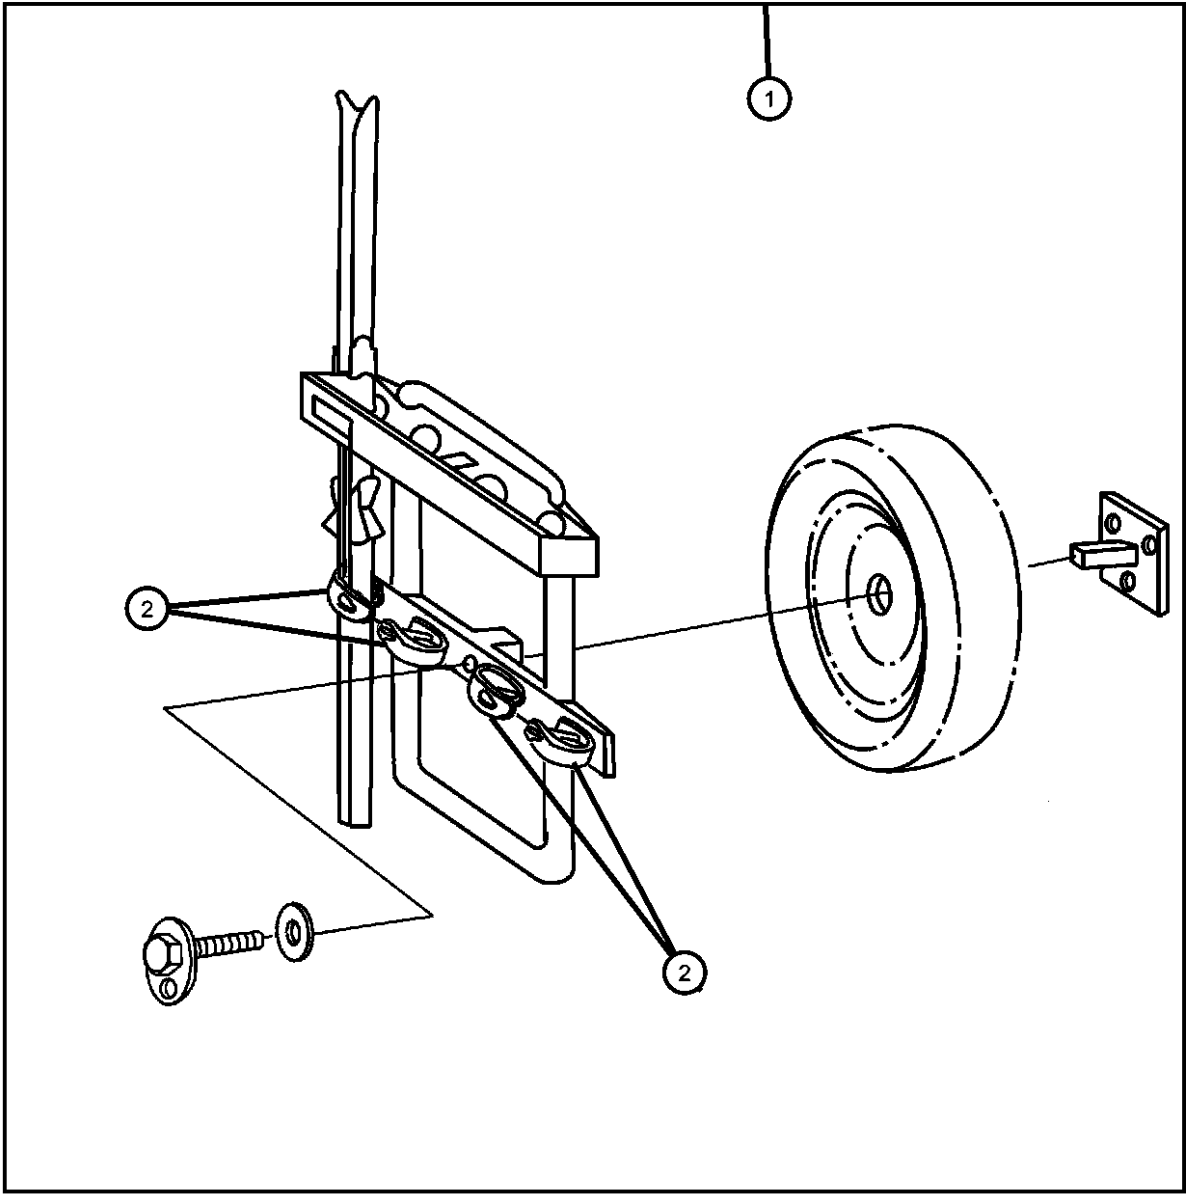

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Ski Carrier - Roof Mount  
Figure 1-240

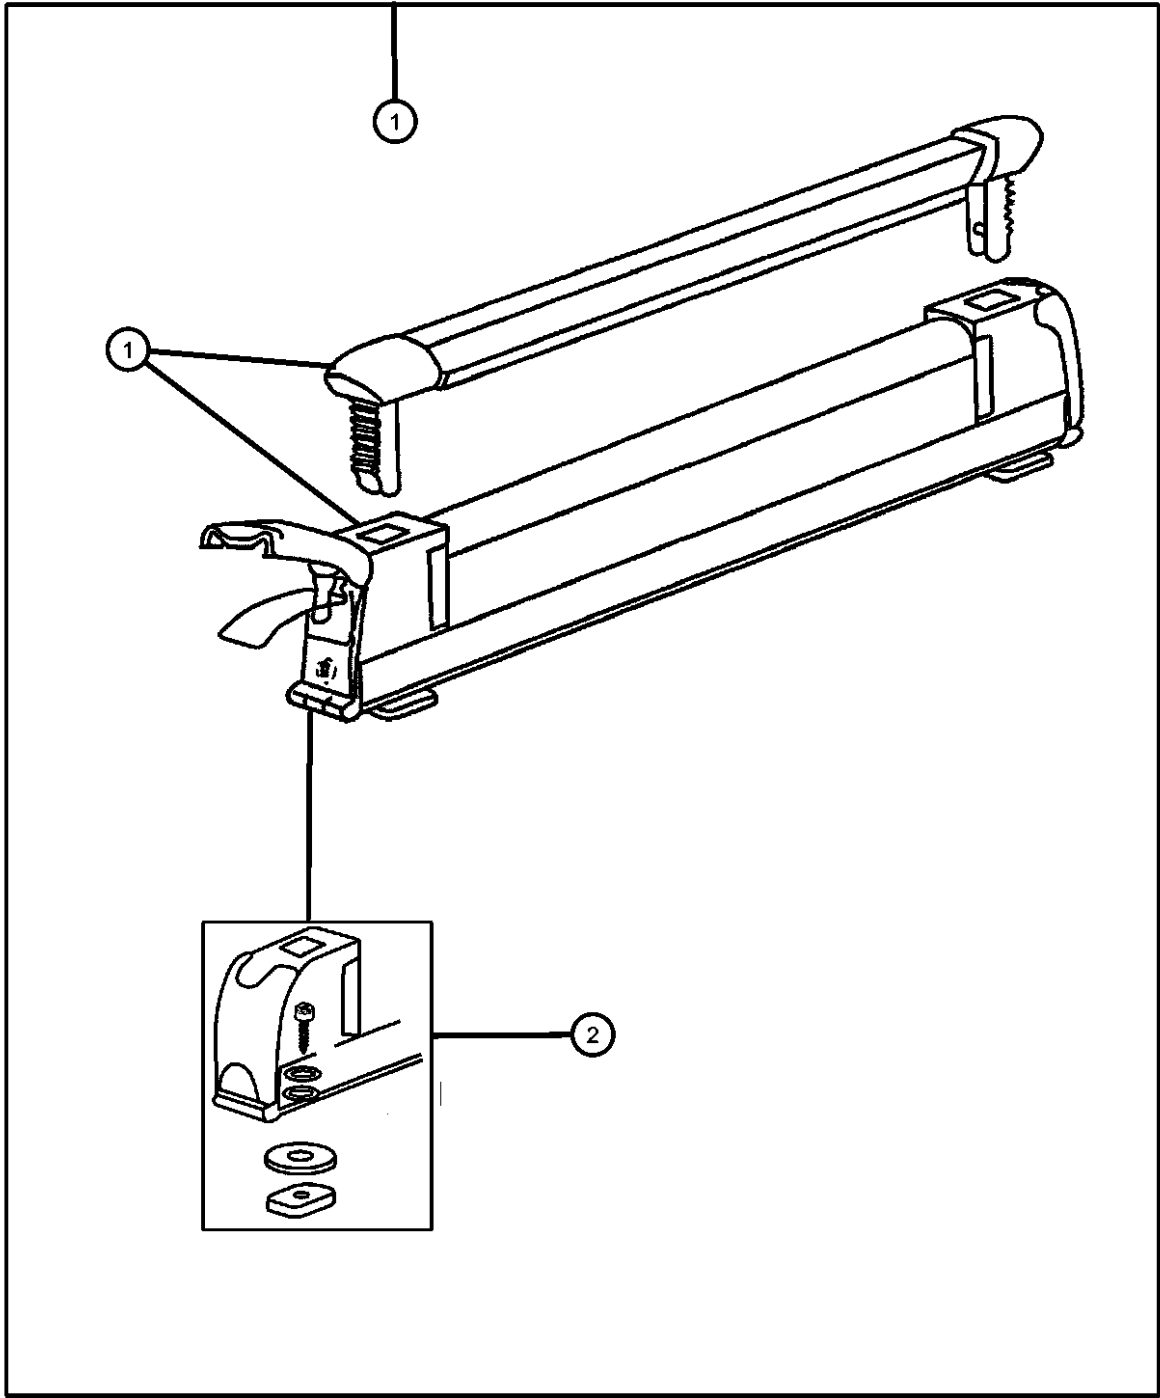

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note; Requires Sport Utility Rack

1									CARRIER KIT, Ski
	82207308	1							6 Pair or 4 Snowboards
	82207312	1							3 Pair or 2 Snowboards
2	05086158AA	1							HARDWARE KIT, Accessory, Contains: 4 - 25MM Screws, 4 - 20M Screws, 4 - 16MM Screws, 4 - Lock Washers, 4 - Flat Washers, 4 - T Plates, 4 - Rubber Washers
-3	05066632AA	1							TOOL, Screw Driver

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Luggage Carrier - Roof - Hard Style  
Figure 1-245

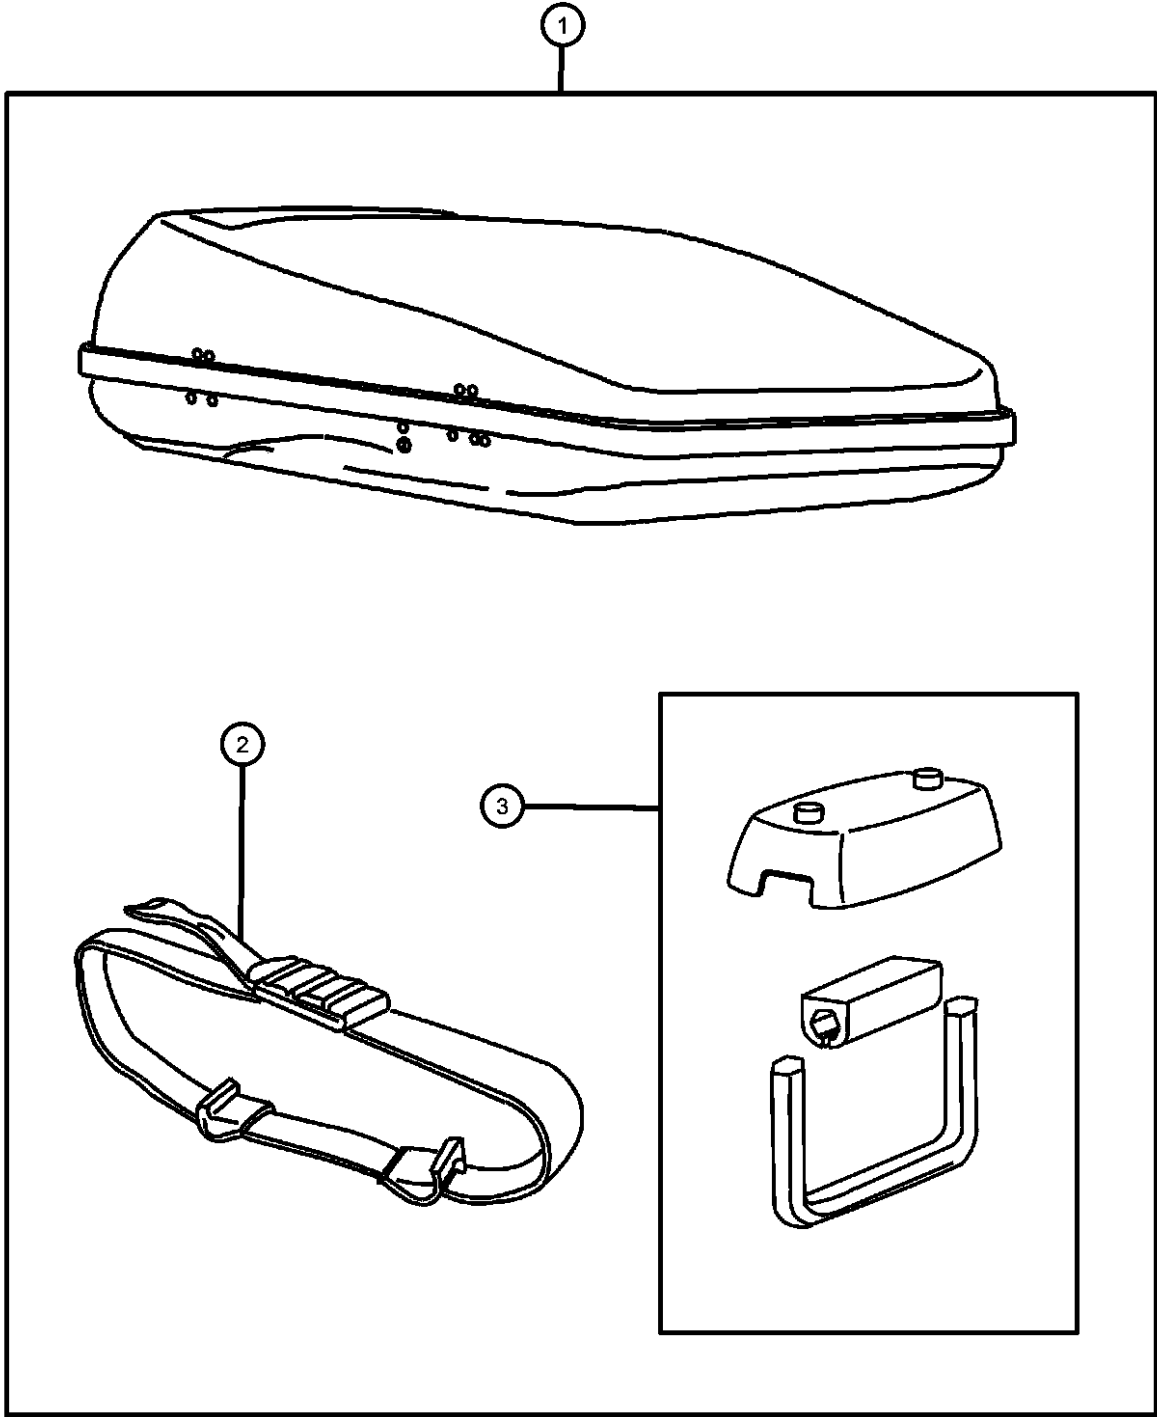

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Requires Sport Utility Rack

1									CARRIER KIT, Luggage
	82207341	1							28 inch x 90 inch
	82207353	1							31 inch x 71 inch
2	05086160AA	1							STRAP, Cargo Tie Down
3	05086159AA	1							HARDWARE KIT

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	


AR = use ase required - = Non illustrated part

Luggage Carrier - Roof - Vinyl  
Figure 1-250

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; Requires Sport Utility Rack


1	82207198	1							CARRIER KIT, Luggage, 39 inch x 37 inch x 12 inch
2	05066332AA	1							STRAP KIT, Luggage Carrier

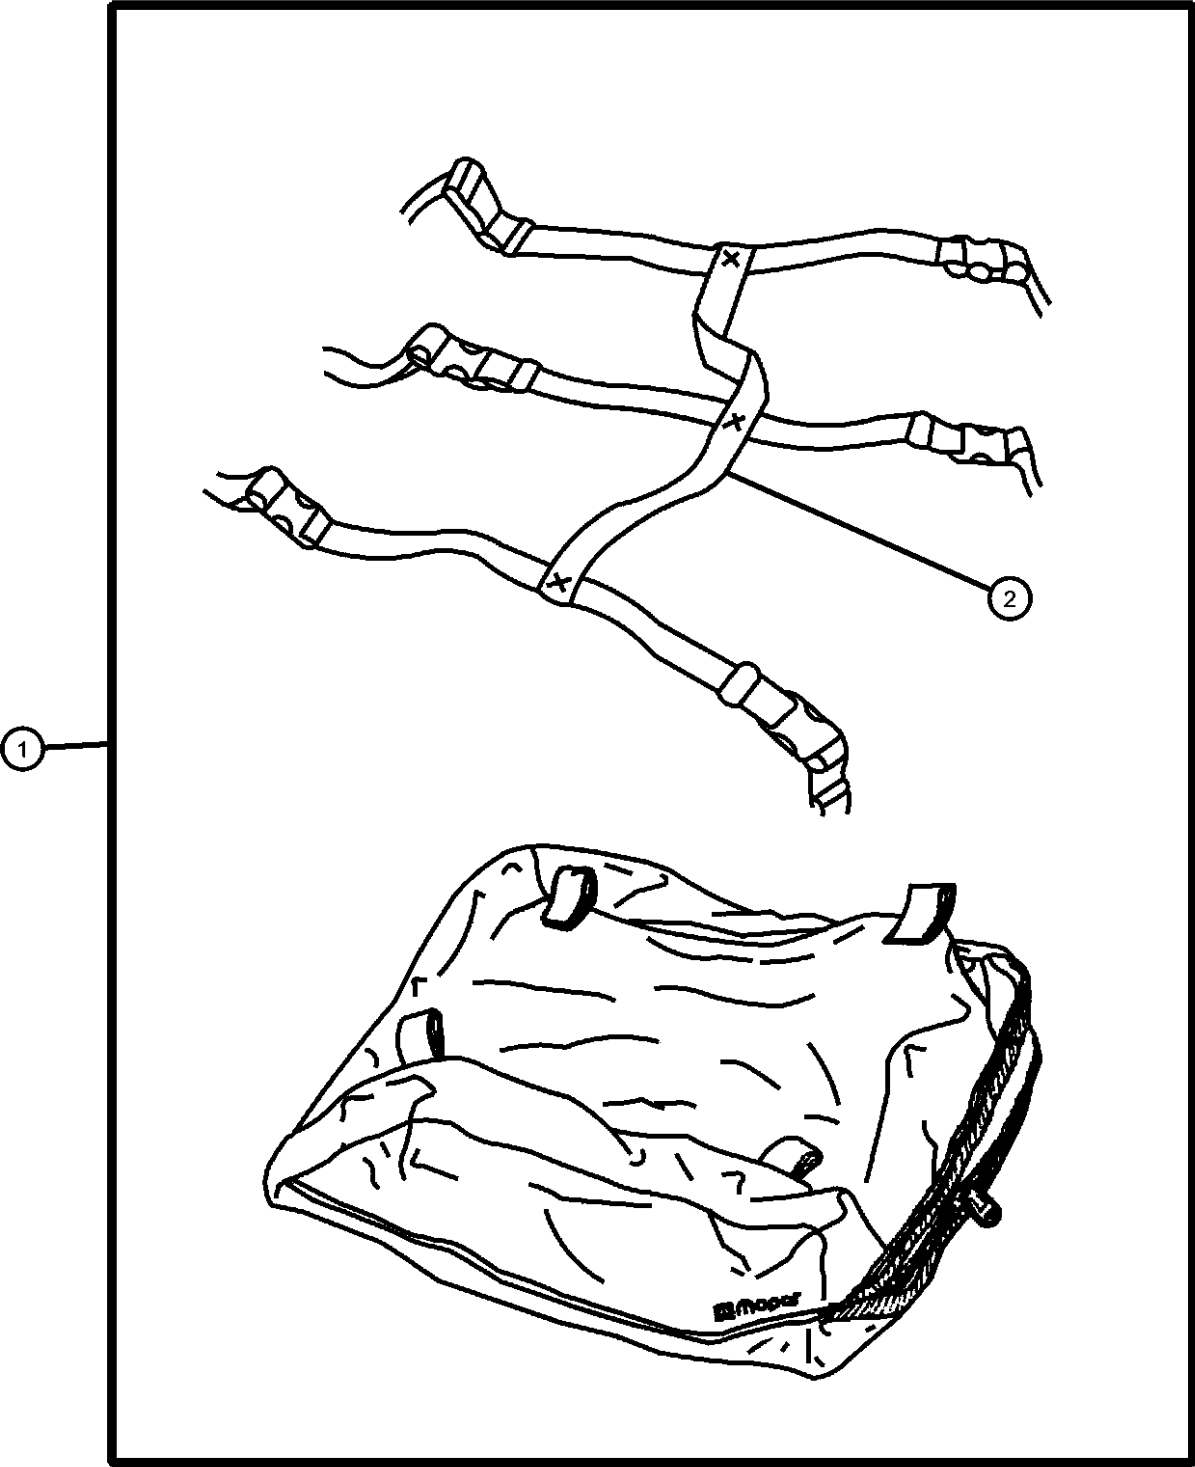

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	


Rack Kit - Sport Utility  
Figure 1-255

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82205174	1	J, T		74				RACK KIT, Sport - Rail Mount
2	05086161AA	1	J, T		74				RUB STRIP, Lugg Rack Cross
3	05086162AA	1	J, T		74				END CAP, Luggage Rack
4	05086293AA	1	J, T		74				HARDWARE KIT
-5	05066632AA	1	J, T		74				TOOL, Screw Driver

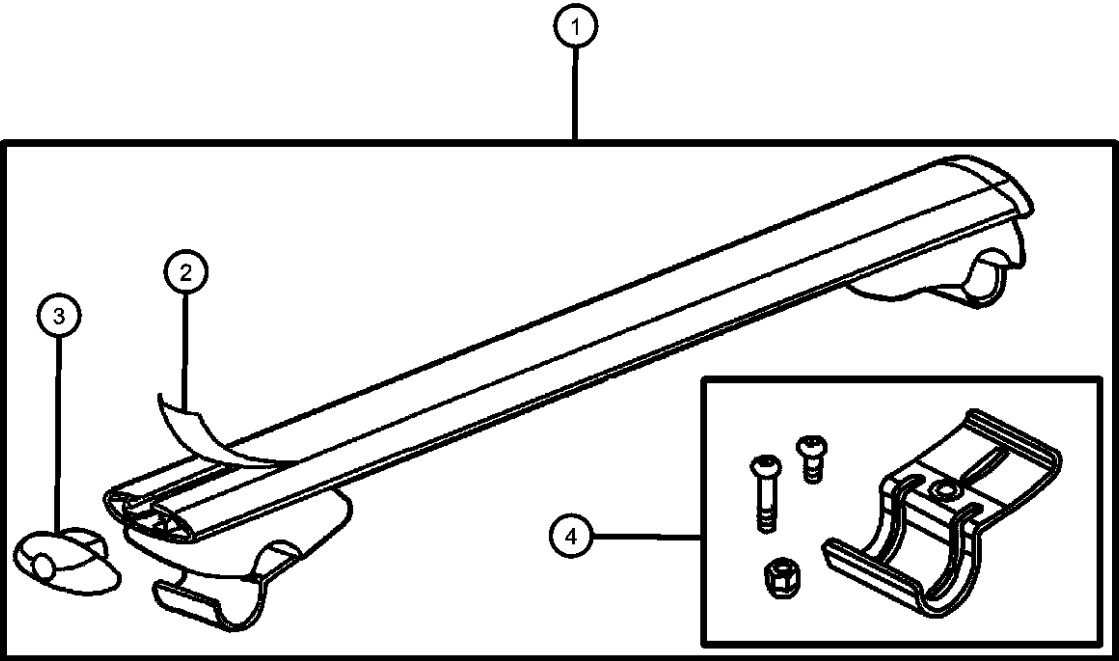

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Wiring Kit - Trailer Tow - 4 Way  
Figure 1-260

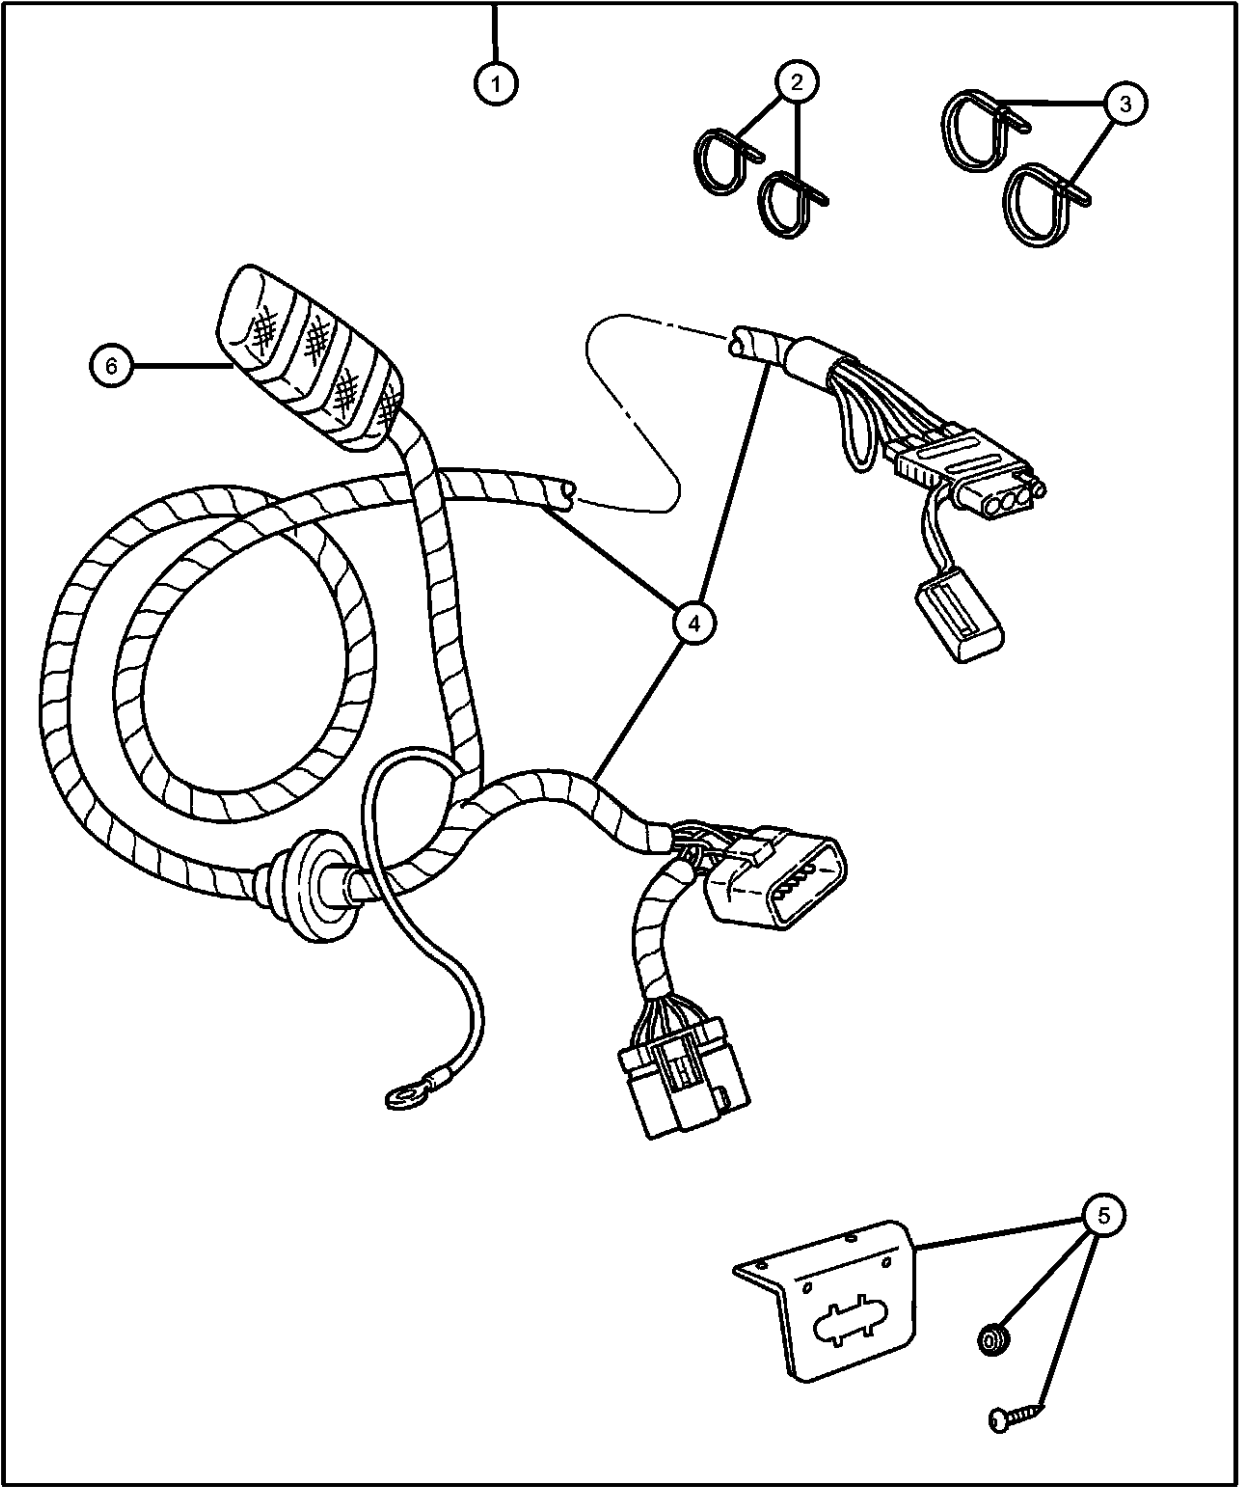


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82207290	1							WIRING PACKAGE, Trailer Tow
2	05073039AA	1							STRAP, Tie
3	06016155	1							STRAP, Tie
4	06016155	1							WIRING, Trailer Tow - 4 Way, Serviced in Package, (NOT SERVICED)
5	82204602	1							BRACKET KIT, Trailer Tow
6	04671168	1							RELAY, Mini

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Wiring Kit - Trailer Tow - 7 Way  
Figure 1-265

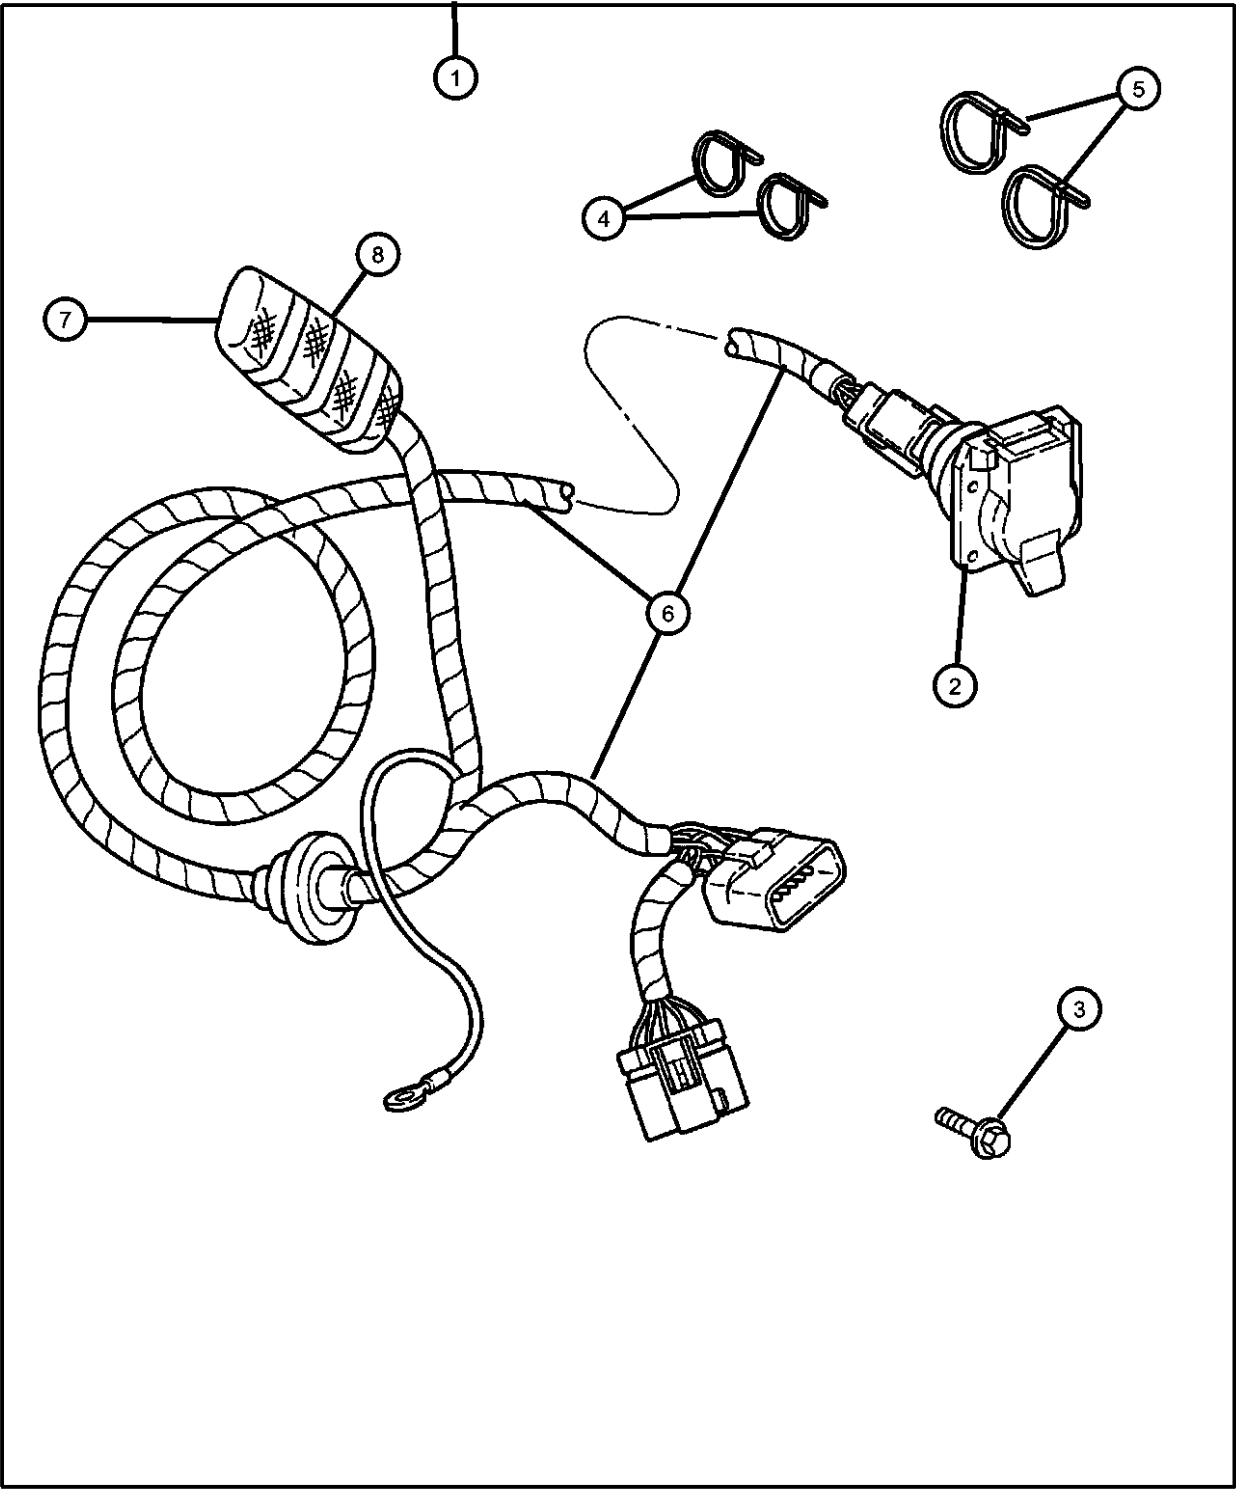

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82207248	1							WIRING PACKAGE, Trailer Tow
2	56038366AB	1							CONNECTOR, 7 Way
3	00154633	1							SCREW, .164-18x.625
4	05073039AA	1							STRAP, Tie, Package of 50
5	06016155	1							STRAP, Tie
6	06016155	1							WIRING, Trailer Tow, (NOT SERVICED)
7	56007290	1							BREAKER, Circuit
8	04671168	1							RELAY, Mini

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

**Fan Kit - Engine**  
**Figure 1-270**

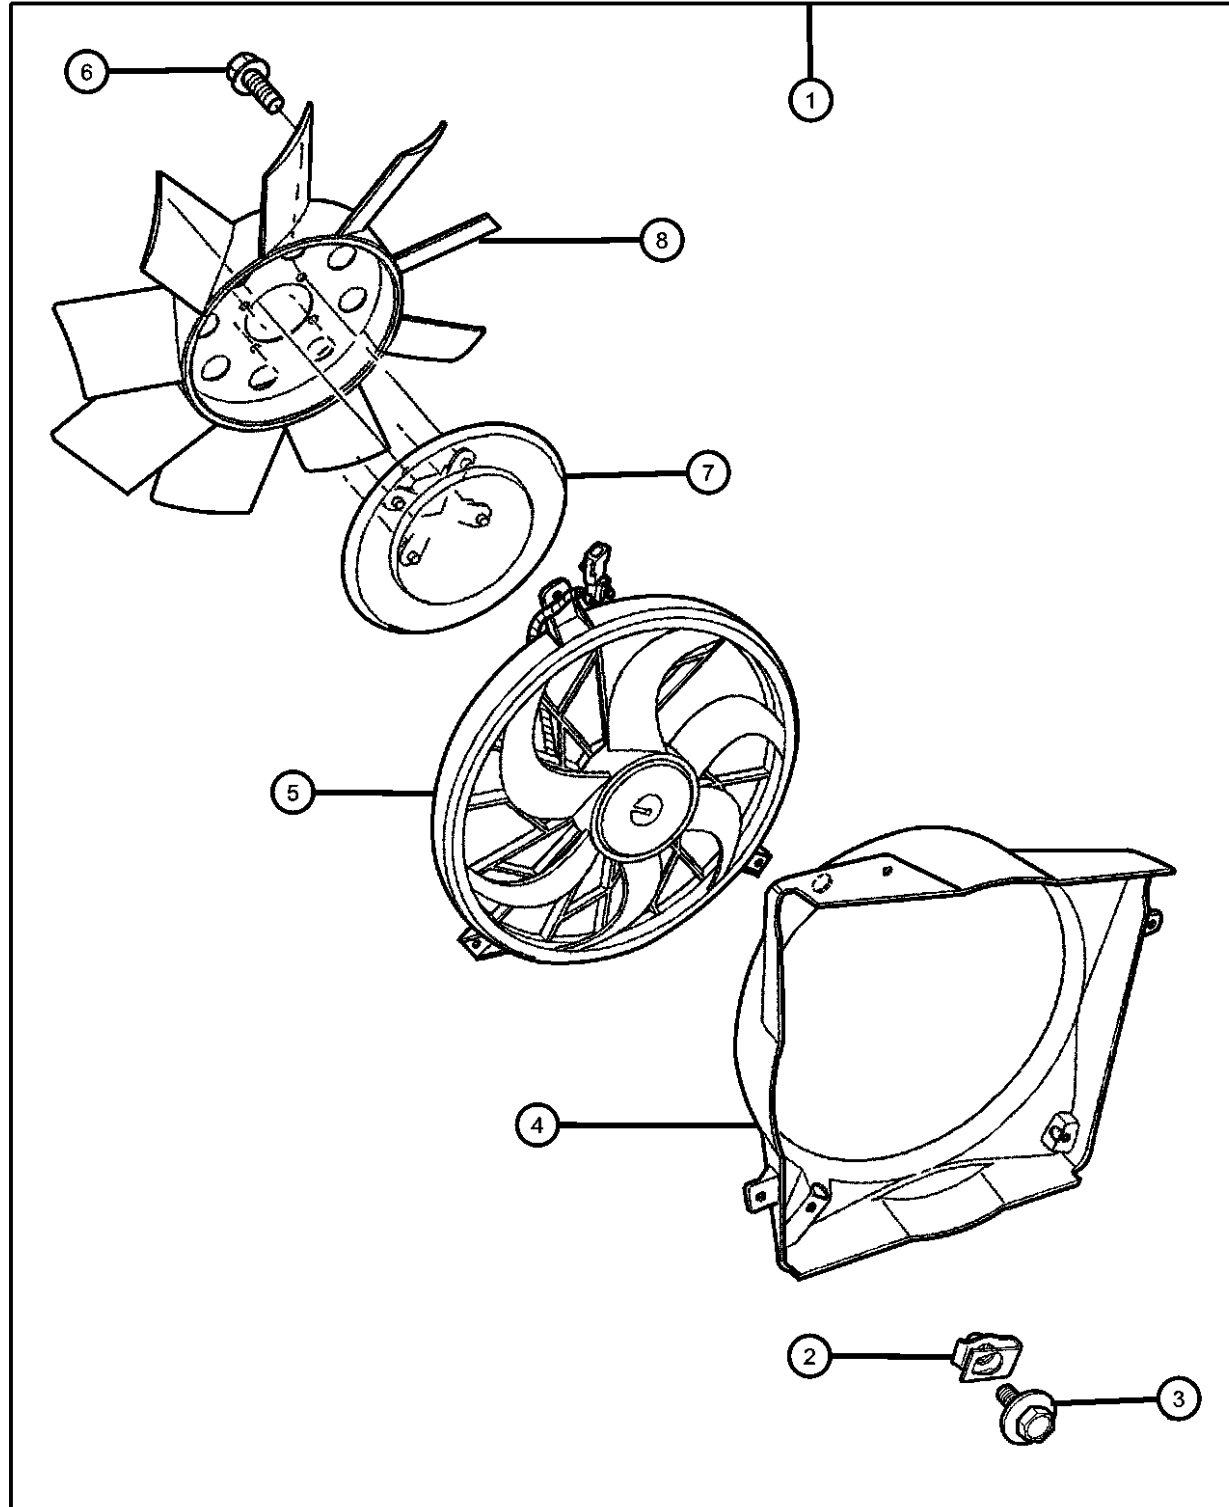

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82208909	1			74				FAN KIT, Cooling Heavy Duty
2	06505172AA	1			74				U-NUT, M6x1.00
3	06102117AA	1			74				SCREW AND WASHER, Hex Head, M6x1x20
4	52080127AA	1			74				SHROUD, Fan
5	52079654AD	1							FAN, Cooling
6	06034860	1			74				BOLT AND WASHER, Implement Attaching
7	52079718AD	1							DRIVE, Fan
8	55037691AA	1							FAN, Cooling

LIBERTY (KJ)

## SERIES

P = Limited

H = Sport

M = Renegade

LINE

J = LHD (4WD)

U = RHD (4WD)

T = LHD (2WD)

## BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl

DOHC 16v SMPI

EKG = Engine

ENJ = Engine

Turbo Diesel

ENR = Engine - 2.8L 4 Cyl

Turbo Diesel

EN0 = 4Cyl Turbo Diesel  
E160 = All 2.7L

EK0 = All 3.7L  
ED0 = All 3.4L

ED0 = All 2.4L

TRANSMISSION

DDD = Transmission - 5-Speed HD Manual

DDK = Transmission - 5-Speed HD  
/ Manual

DG4 = Transmission-Multi-Speed

Auto, 45RFE

DG6 = Transmission-4-Spd.  
Automatic 10515

Automatic, 42RLE  
DOO Transmission 5 Spd Automatic

DGQ = Tran  
5.45DFF

5-45RFE  
DBB - ALLM

DBB = All Manual Transmissions  
DGO = All Automatic Transmissions

DG0 = All Automatic Transmissions


AR = use ase required    - = Non illustrated part

2004 KJ

**<< RETURN TO GROUP INDEX**



Hands Free Kit/Cellular Phone Blue Tooth  
Figure 1-320

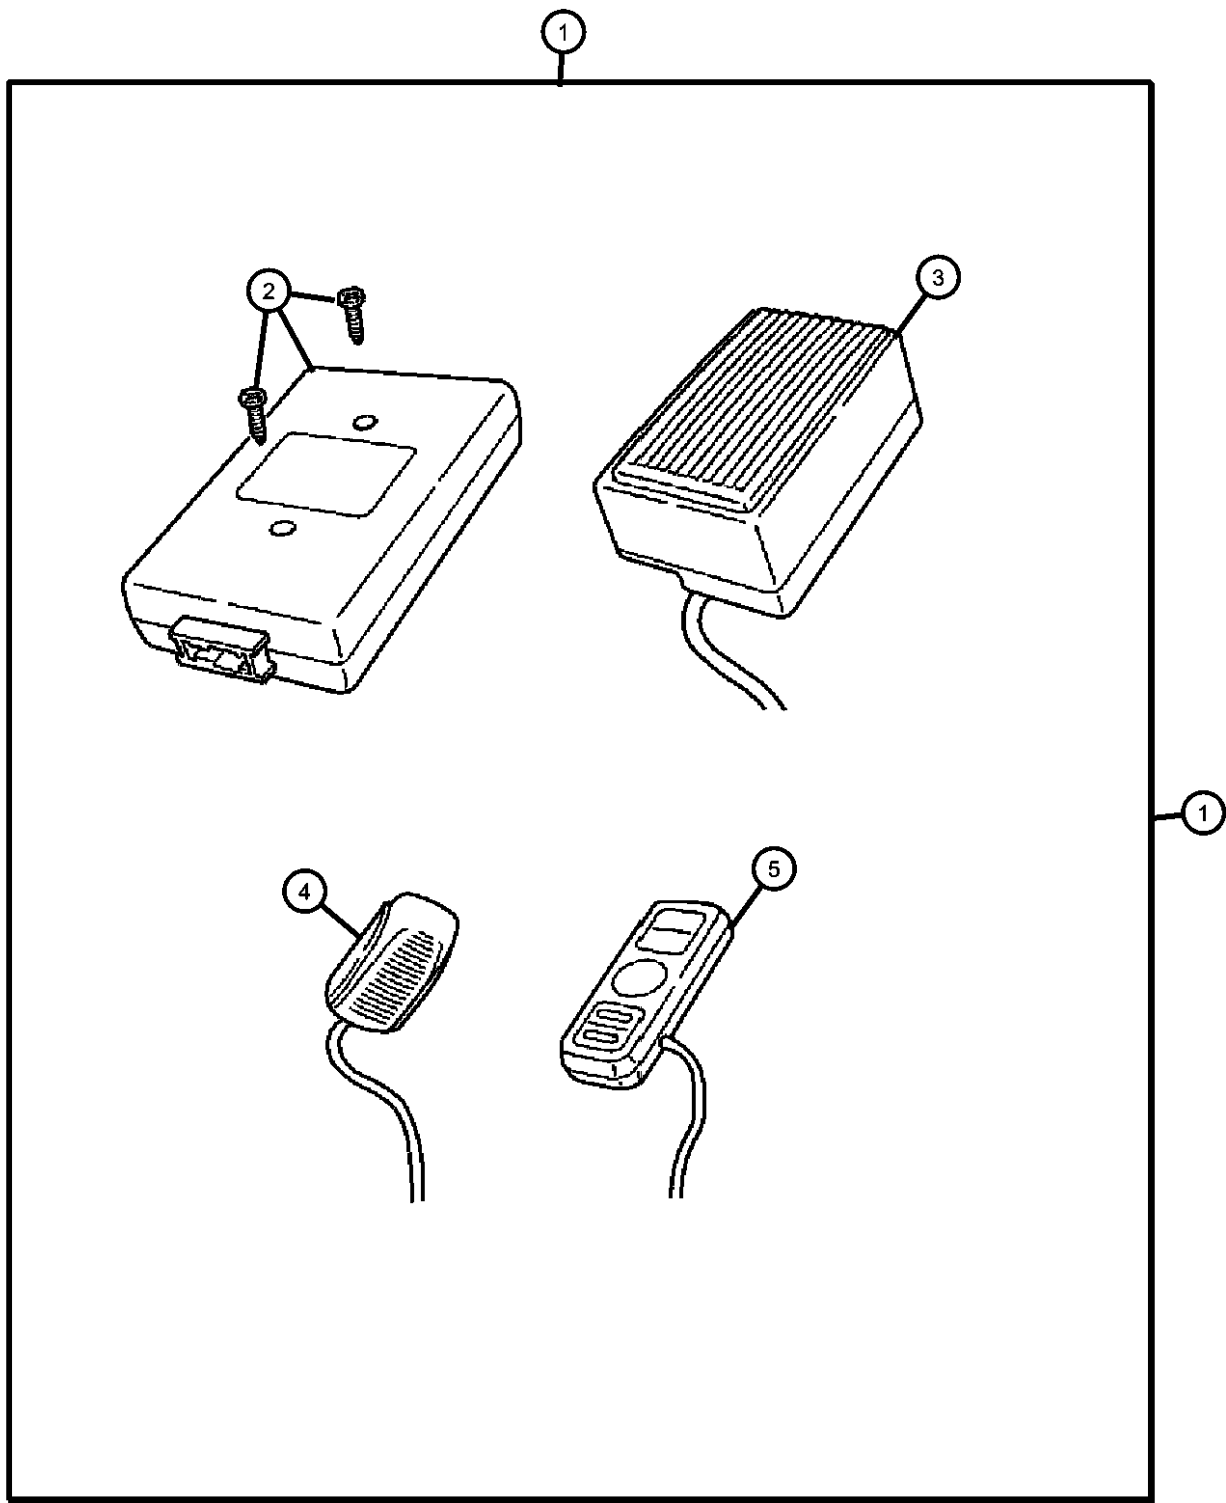


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82207853AD	1							HANDS FREE KIT, Cellular Phone
2	05114359AC	1							MODULE, U Connect
3	05102026AA	1							SPEAKER, Front
4	05102025AA	1							MICROPHONE, Audio
5	05102027AA	1							CONTROLLER, Audio

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Running Board Kit  
Figure 1-410

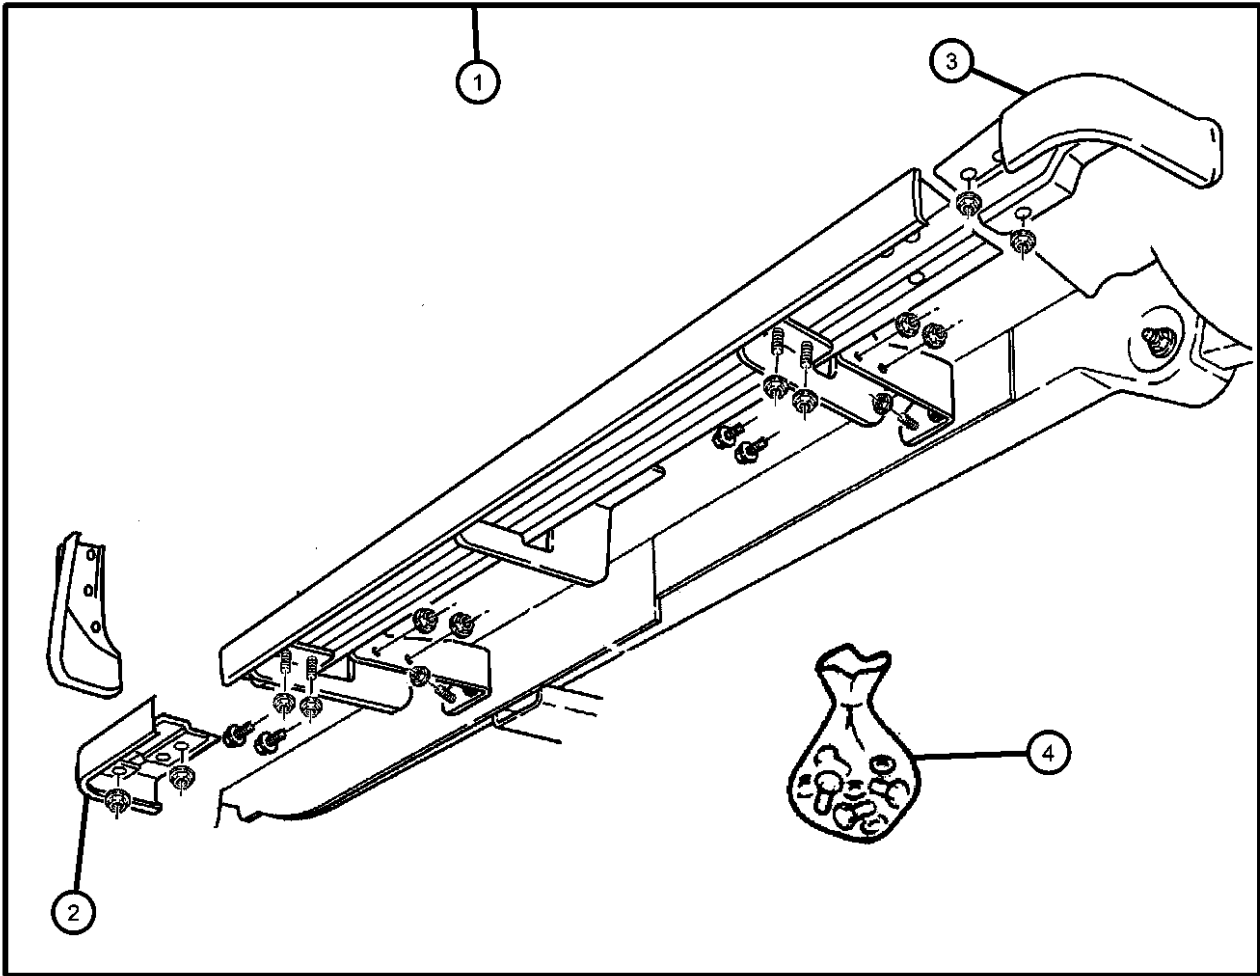


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									RUNNING BOARD KIT, Full
	82207679	1							Primed
	82207680	1							Black [DX8]
	82207681	1			74				Flame Red [PR4]
	82207682	1							Stone White [SW1]
	82207683	1							Patriot Blue [WB7]
	82207685	1							Bright Silver [WS2]
	82207687	1			74				Shale Green [XGR]
	82207688	1							Dark Garnet Red [XRV]
	82207690	1							Gray, Matches Cladding
2									END CAP, Running Board, Unpainted
	05086043AA	1							Front Left
	05086045AA	1							Front Right
3									END CAP, Running Board, Unpainted
	05086044AA	1							Left Rear
	05086046AA	1							Right Rear
4	05083937AA	1							SCREW PACKAGE, Screw

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions


Wheel Kit  
Figure 1-415

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Item#1, Contains 1 Wheel and 1 Center Cap									
1									WHEEL KIT, Cast Aluminum
	82205580	1							Polished
	82205899	1			74				Chromed
2	05083064AA	1			74				CAP, Wheel Center

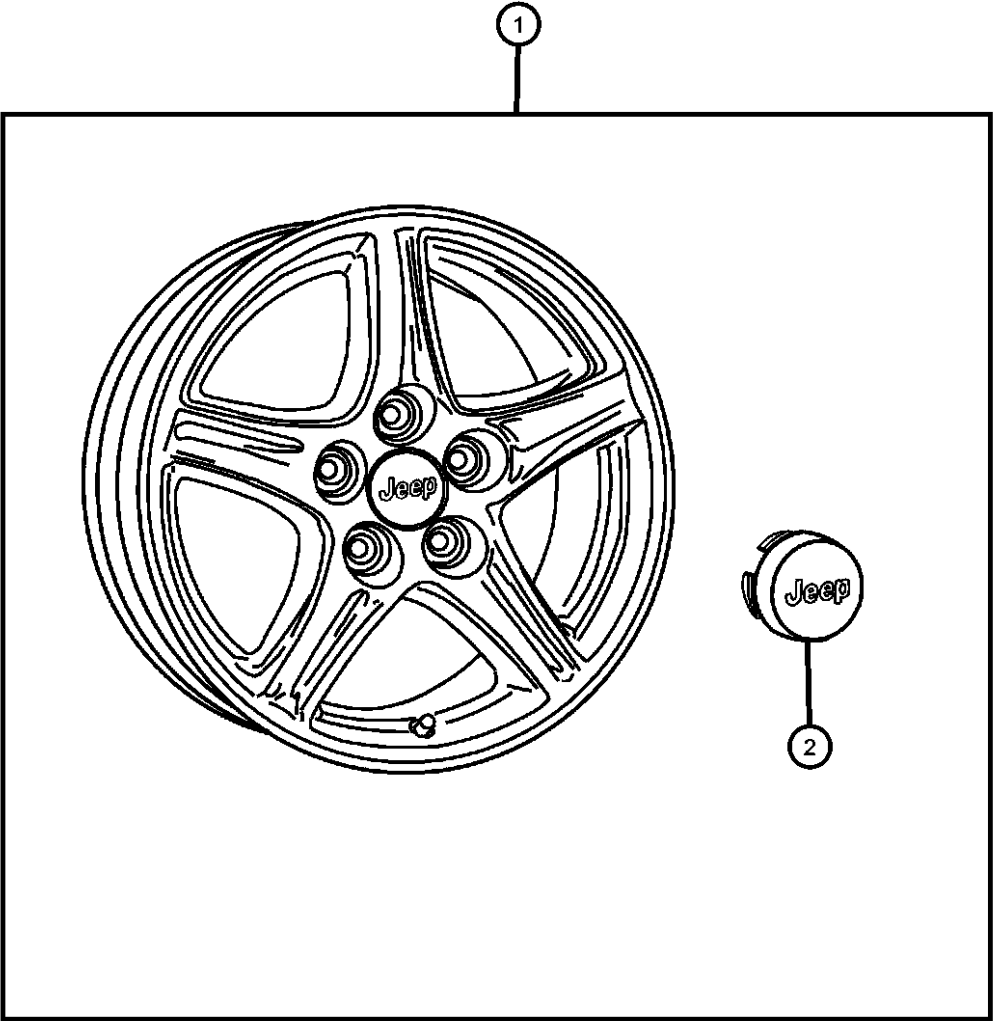

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Decor Kit Bodyside  
Figure 1-420

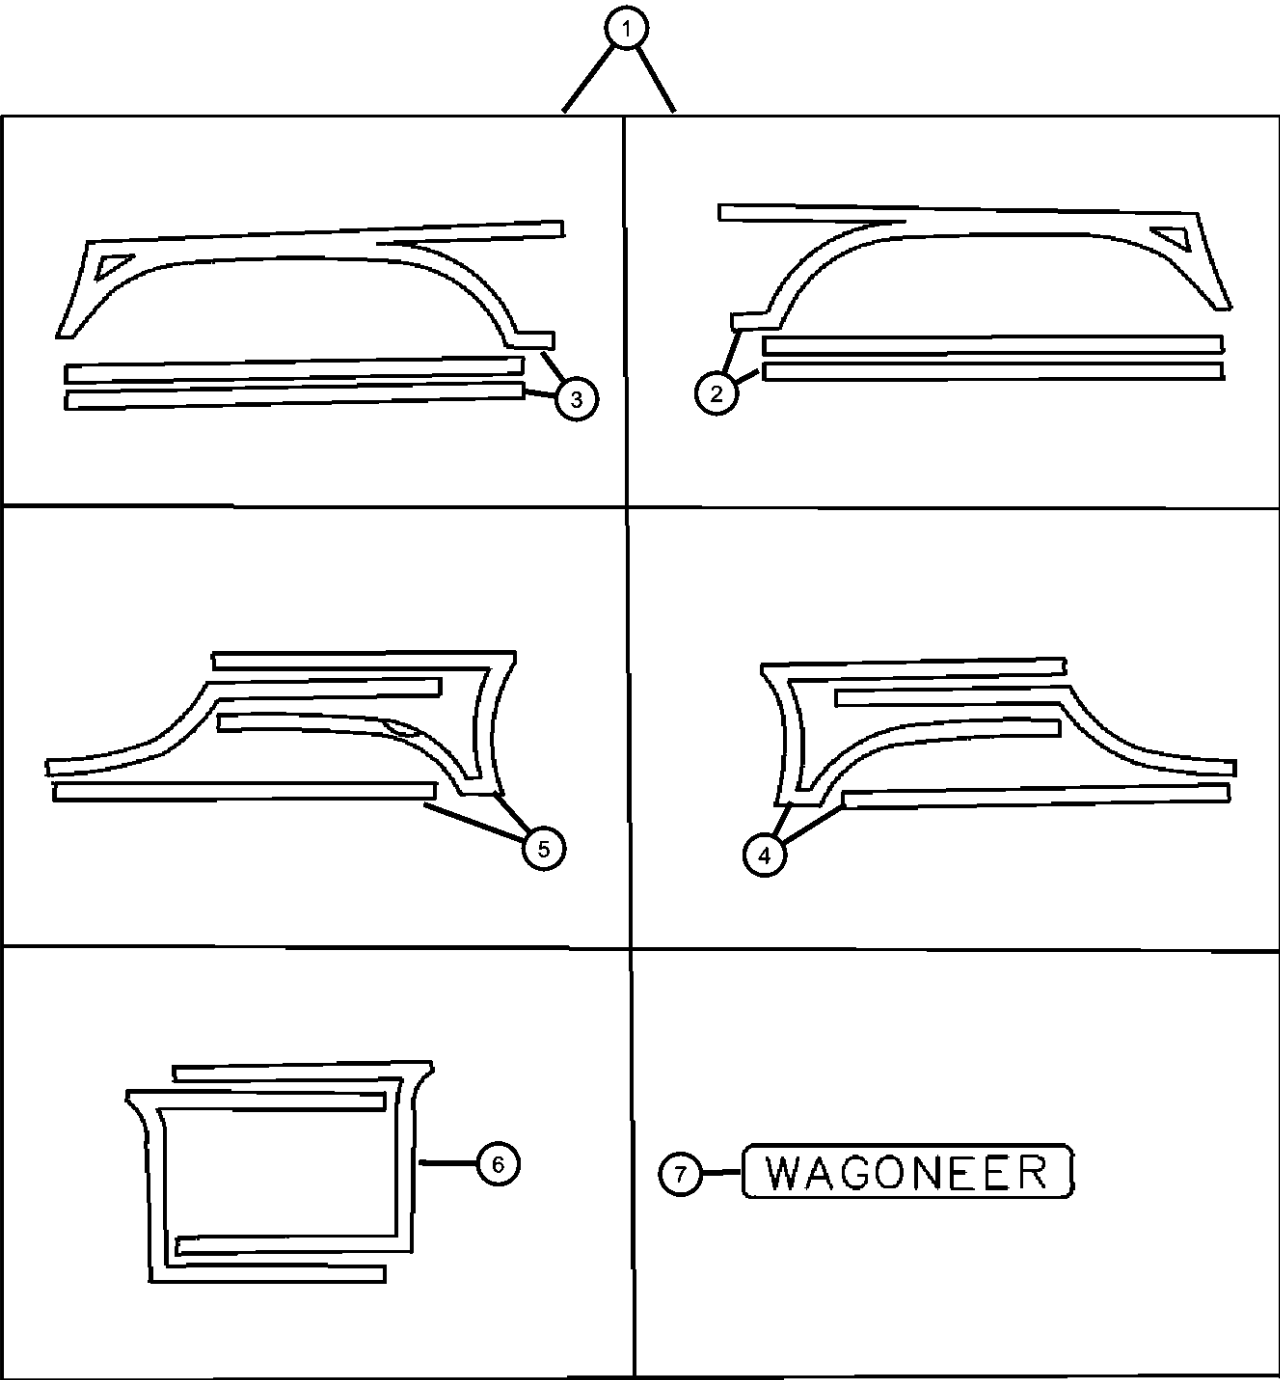


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82208020	1			74				DECOR KIT, Bodyside
2	05103126AA	1			74				MOLDING, Body Side, Door and Fender, Right Front
3	05103127AA	1			74				MOLDING, Body Side, Door and Fender, Left Front
4	05103128AA	1			74				MOLDING, Body Side, Door and Quarter Panel, Right Rear
5	05103129AA	1			74				MOLDING, Body Side, Door and Quarter Panel, Left Rear
6	05103125AA	1			74				MOLDING, Tailgate
7	05103130AA	1			74				NAMEPLATE, WAGONEER
-8	83503186	1			74				OVERLAY, Woodgrain, 17 inch x 50 inch Cut to Fit

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Skid Plate - Transfer Case  
Figure 1-510


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82208421	1			74				PLATE PACKAGE, Skid - Transfer Case
2	52128649AA	1			74				PLATE, Transfer Case Skid
3	06505294AA	1							RIVET
4	06503571	1							SCREW AND WASHER, M10x1.50x35
-5	05013886AA	1							TOOL, Rivnut

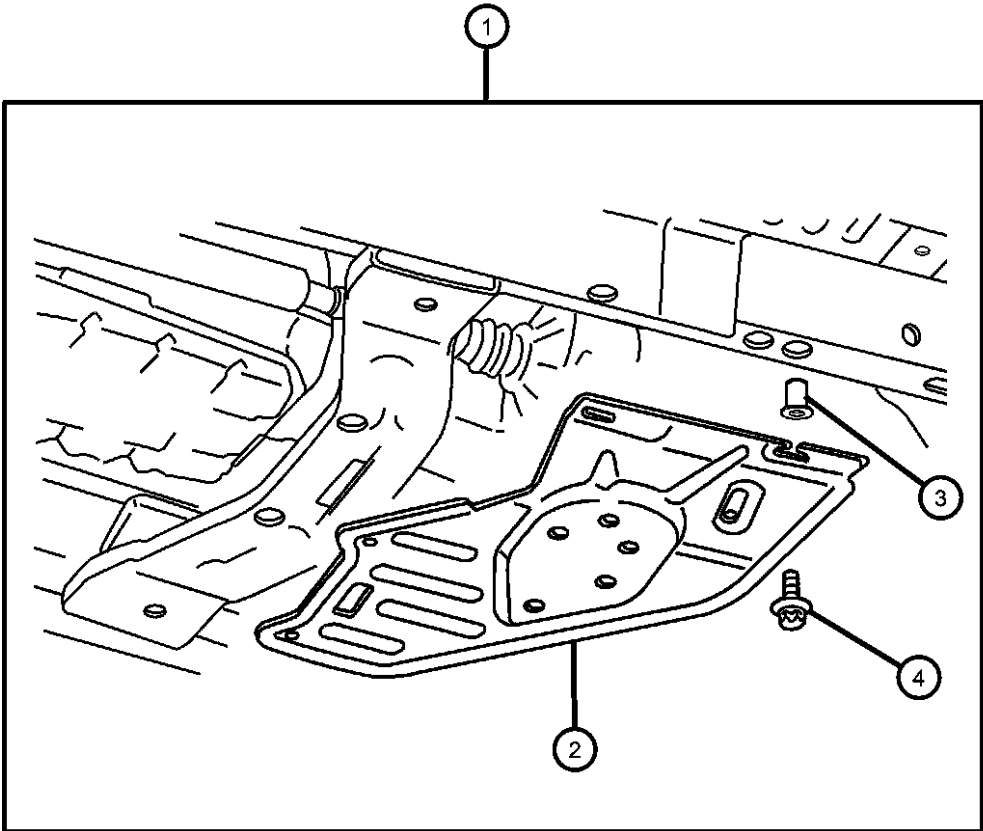

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Skid Plate - Fuel Tank  
Figure 1-515

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82206122	1			74				SKID PLATE PACKAGE, Fuel Tank
2	52100332AF	1							PLATE, Skid
3	06502557	6							BOLT, Hex Flange Head, M12x1.75x40

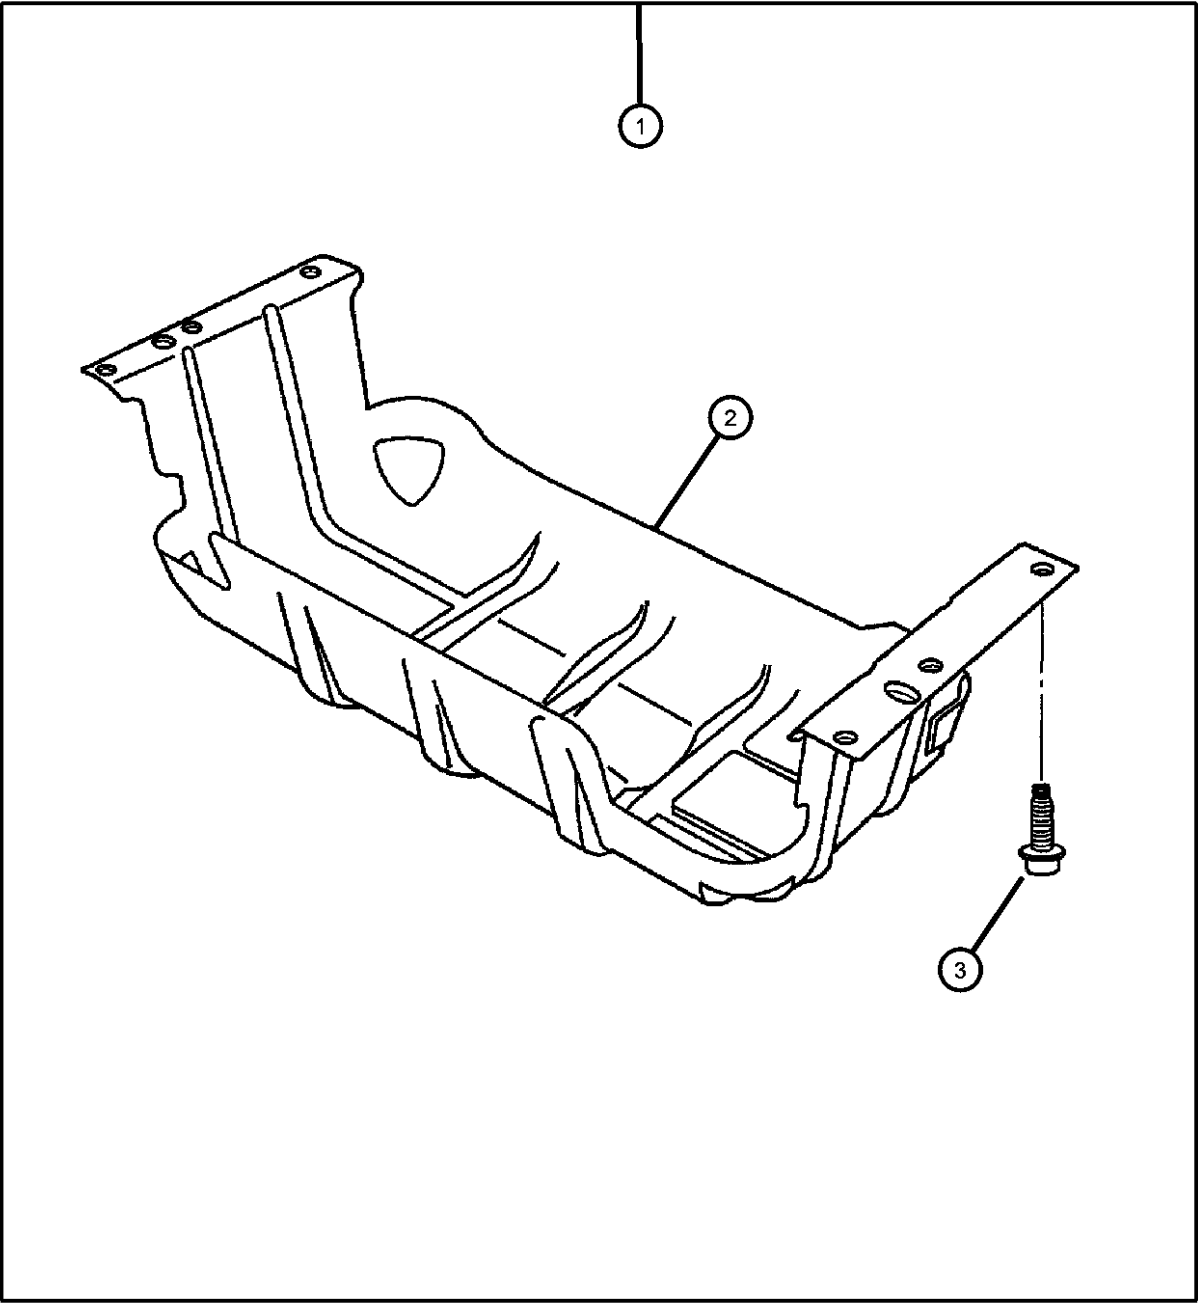


LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Deflector Kit - Air Front  
Figure 1-520

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Use for Vehicles Without Grille Guards


1	82207938	1			74				SHIELD KIT, Air - Front
2	05014754AA	1			74				SPACER, Air Deflector

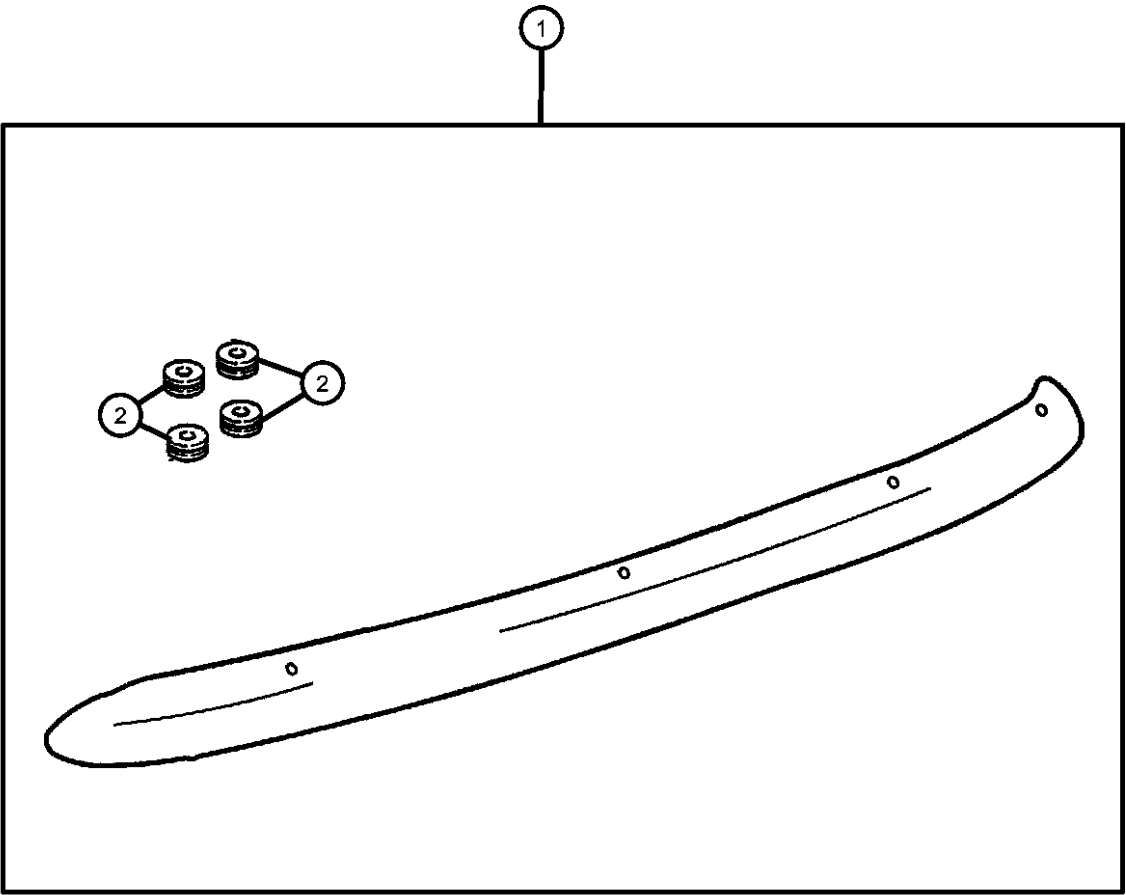

LIBERTY (KJ)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Light Kit - Fog  
Figure 1-610

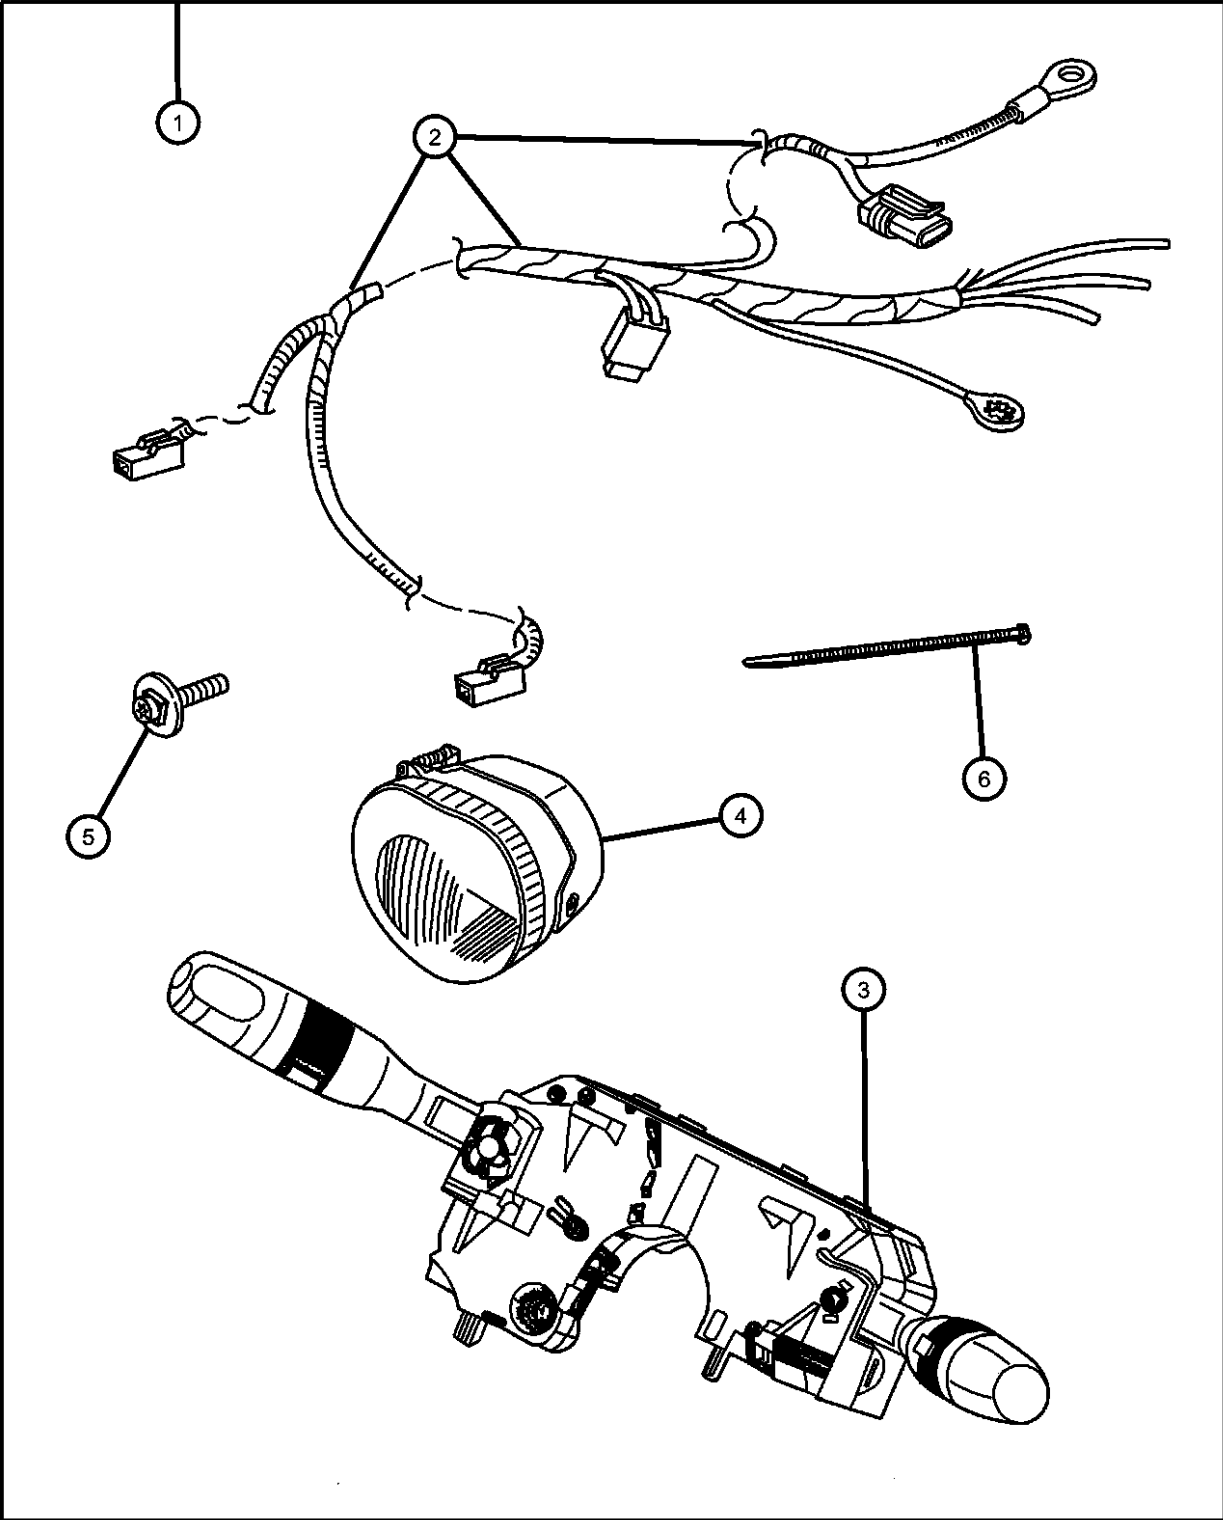


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82207998	1							LIGHT PACKAGE, Fog
2	82207998	1							WIRING, Fog Lamp, Serviced in Package, (NOT SERVICED)
3	56010126AF	1							SWITCH, Multifunction
4									LAMP, Fog
	05083895AC	1							Left
	05083896AC	1							Right
5	06506579AA	1							SCREW, Fog Lamp
6	05073039AA	1							STRAP, Tie, Package of 50

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Light Bar Roof  
Figure 1-615

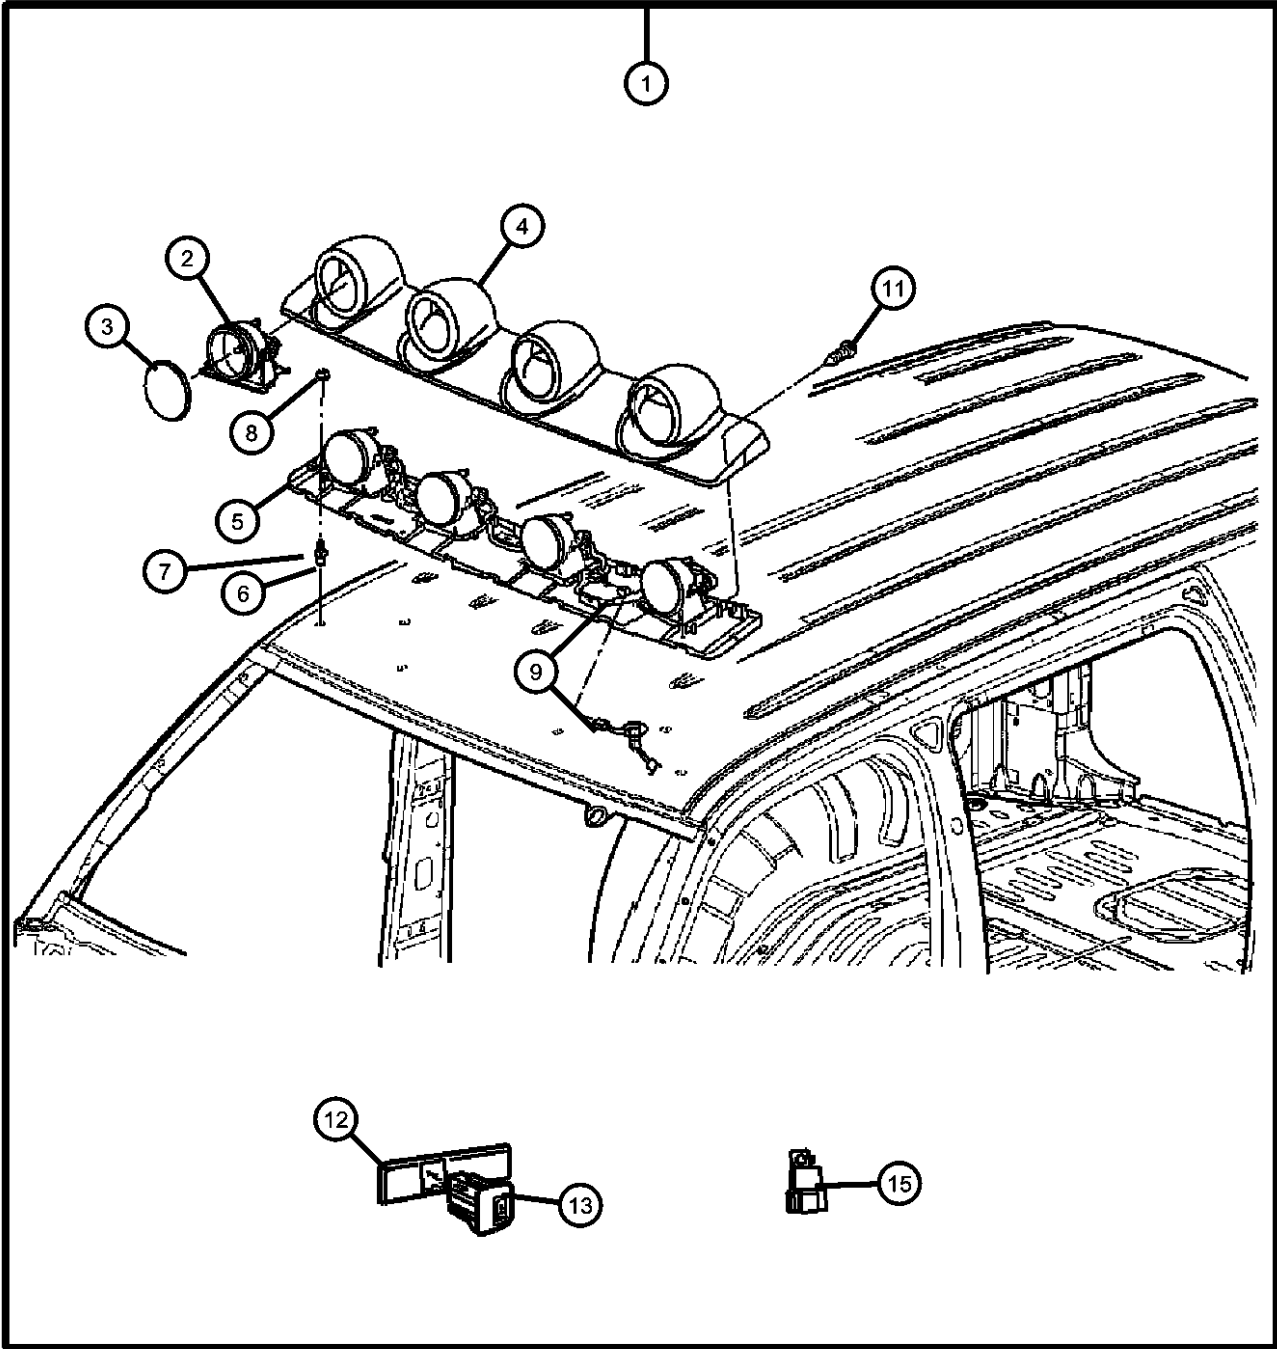


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82206126	1			74				BAR KIT, Light
2	52112063AC	4							LAMP, Off Road
3	5HZ07RXFAB	4							COVER, Lamp
4	5HZ08RXFAF	1							COVER, Light Bar Support
5	05083967AA	1							BAR, Light Support
6	06503952	1			74				SCREW, Pan Head, M6x1.0x17.00
7	06100876	1			74				WASHER, Flat, M6.82x17.00x1.75
8	06504710	1			74				NUT/RIVET, M6x1.00x13.50
9	56010419AB	1							WIRING, Roof Lamps
-10	05073039AA	1	J, U						STRAP, Tie, Bag of 50
11	06507783AA	4							SCREW, Shoulder
12									BEZEL, Instrument Panel
	0XW301DVAA	1	J, T						Quartz
	0XW301L8AA	1	J, T						Brown
13	56010417AC	1							SWITCH, Off Road Lamp
-14	05066562AA	1							TOOL, Rivnut
15	05066562AA	1							RELAY, (NOT SERVICED)

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Heater Kit  
Figure 1-620


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									HEATER KIT, Engine Block
	82207243	1							2.4L Engine
	82207244	1							3.7L Engine
2									CORD, Engine Block Heater
	56041974AA	1							3.7L Engine
	56044160AA	1							2.4L Engine
3	05073039AA	1							STRAP, Tie, Package of 50
4	04557686AB	1							HEATER, Engine Block, 2.4L Engine
5	04557686AB	1							HEATER, Engine Block, 3.7L Engine Serviced in Item 1 Only, (NOT SERVICED)

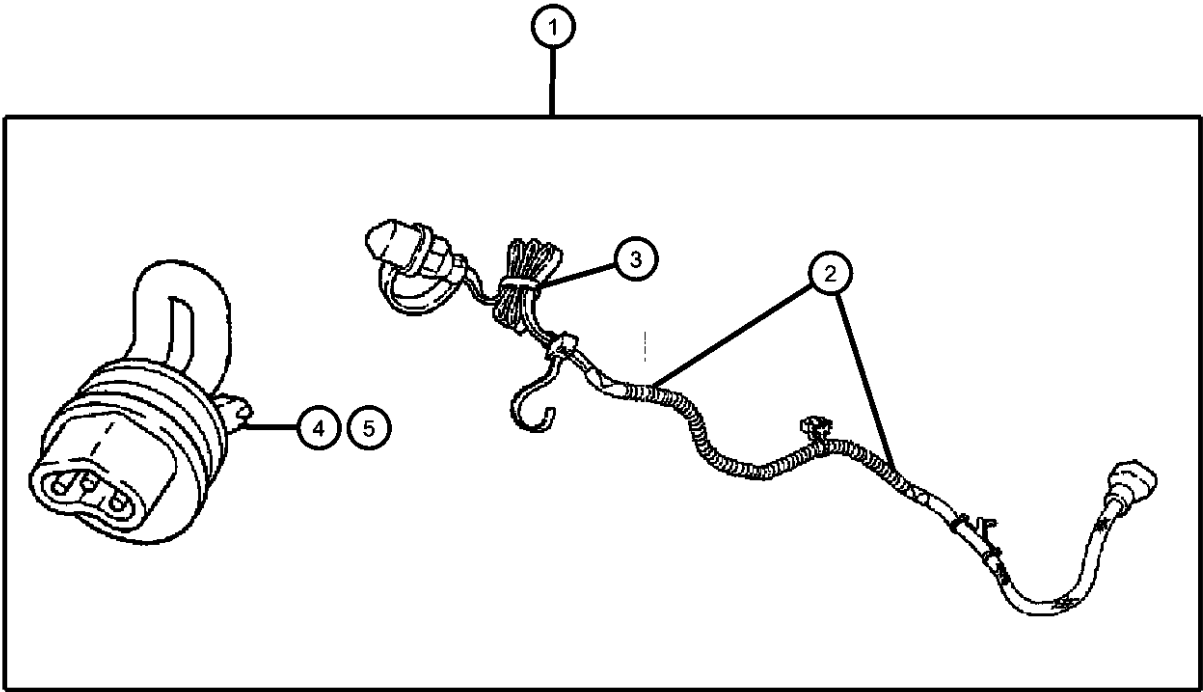

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Hands Free Kit - Cellular Phone - Blue Tooth  
Figure 1-625

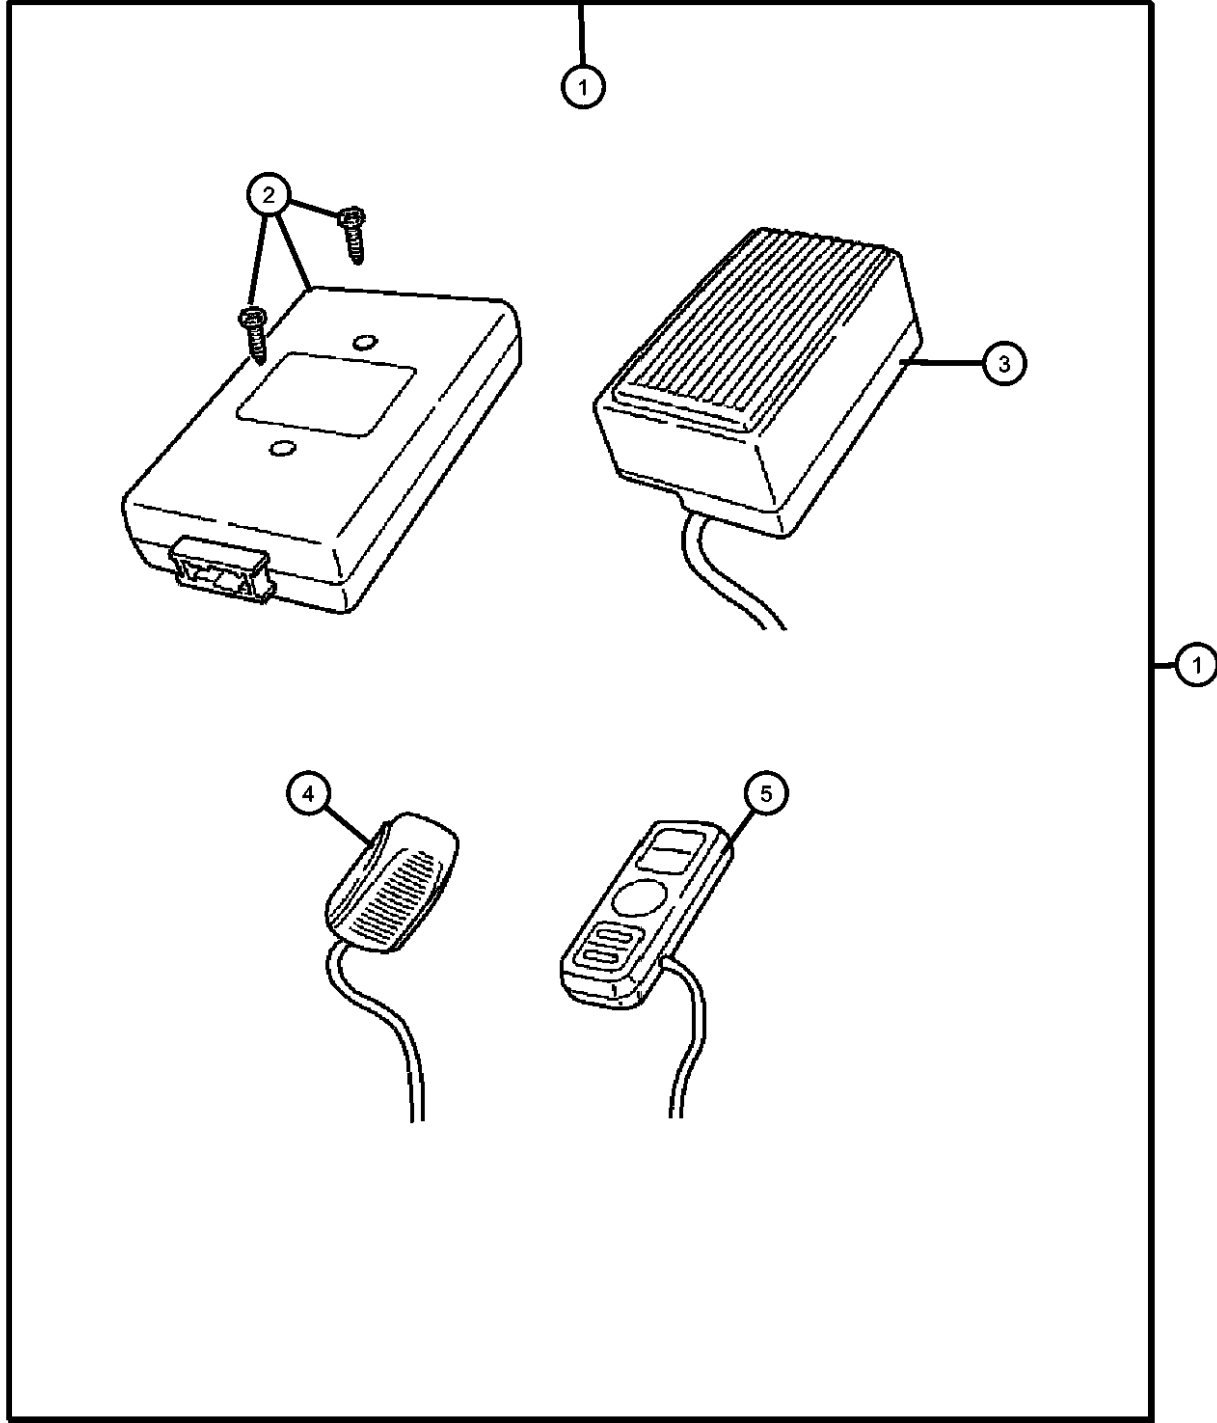

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: For Warranty Repair On Item 2, Order Through [GPOP] Function 11, Using Z Prefix


1	82207853AC	1							HANDS FREE KIT, Cellular Phone
2	05114359AC	1							MODULE, U Connect
3	05102026AA	1							SPEAKER, Front
4	05102025AA	1							MICROPHONE, Audio
5	05102027AA	1							CONTROLLER, Audio

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


Guard Kit - Dog  
Figure 1-810

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82206855	1			74				GUARD KIT, Dog Guard
2	05086022AA	1			74				HARDWARE KIT, Load Partition

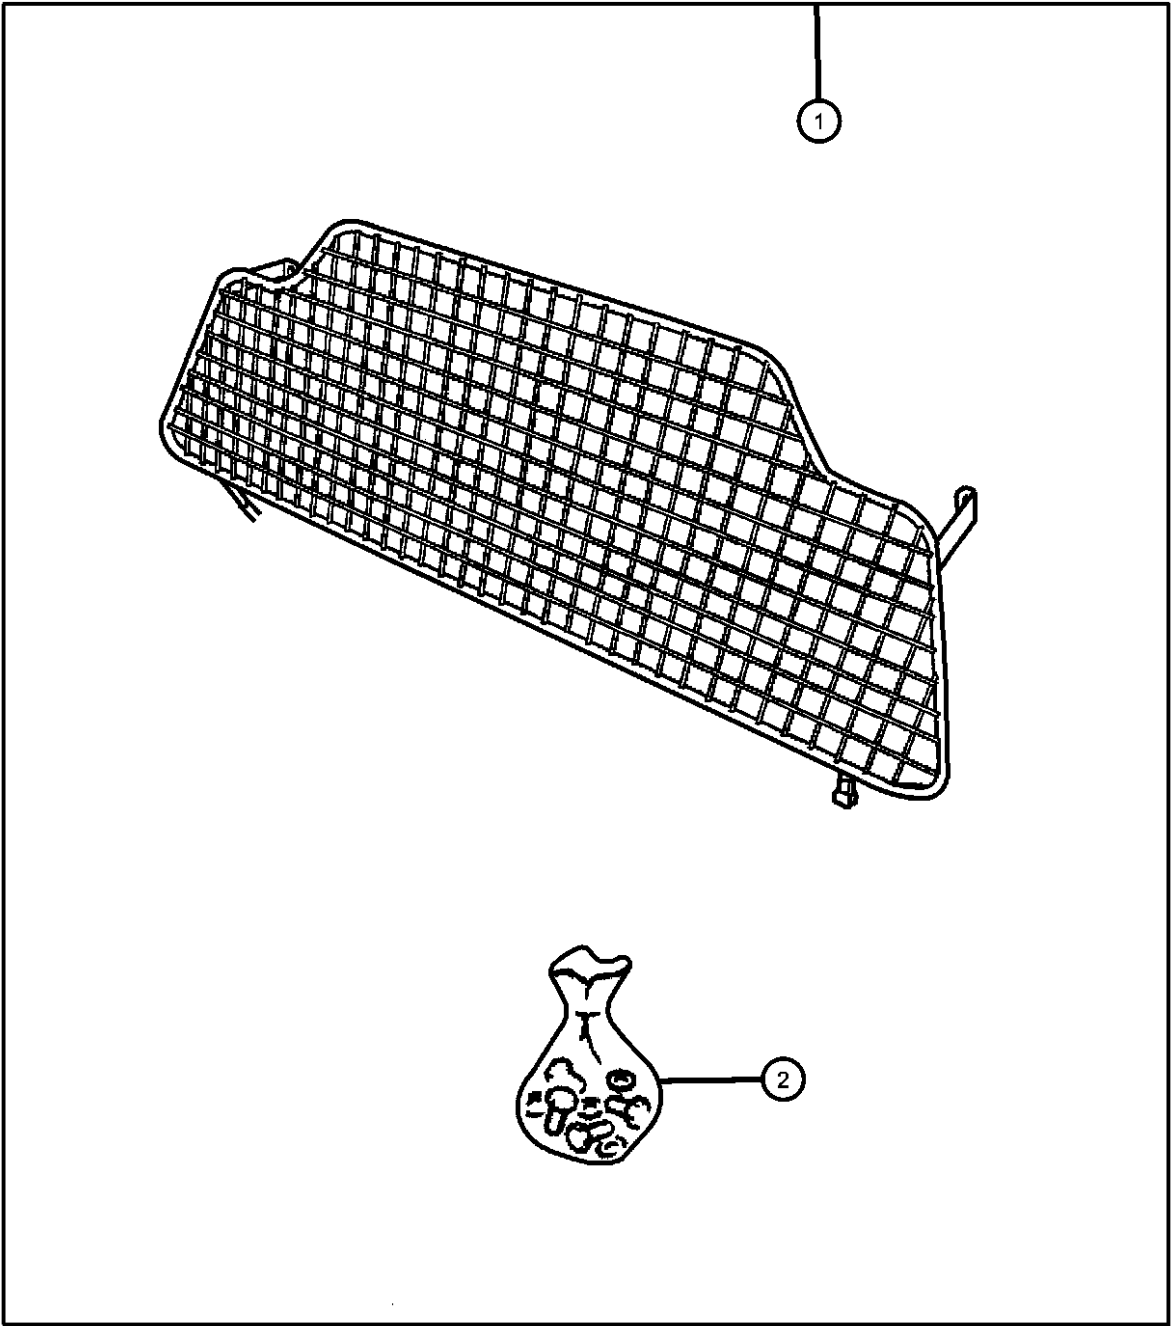

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Alarm - EVS II Base System  
Figure 1-910

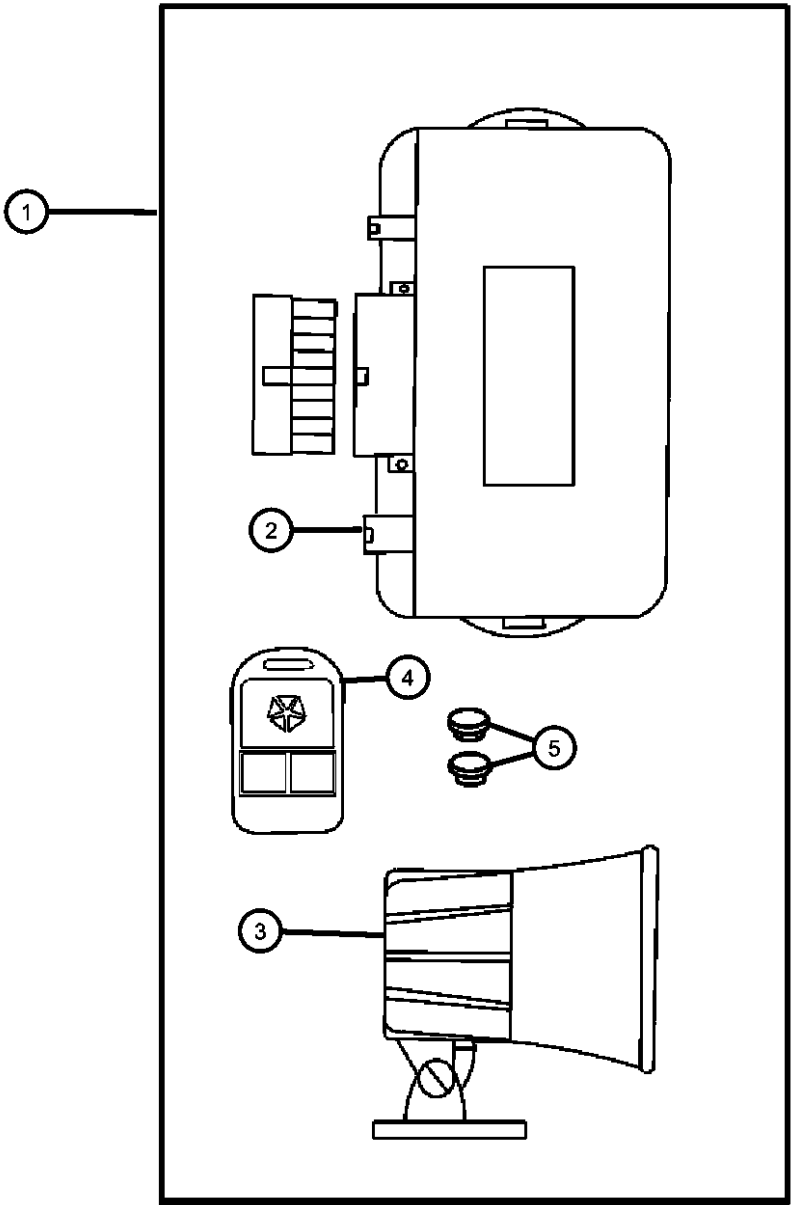


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	82203763	1			74				MODULE KIT, Alarm without Keyless
2	05012164AA	1			74				MODULE, Security Alarm
3	82203198	1			74				SIREN, Alarm
4	04886374AA	1			74				TRANSMITTER, Alarm or Keyless
5	04636141	1			74				BATTERY, Transmitter
-6	04886259AA	1			74				INDICATOR, Valet Status
-7	04886258AA	1			74				SWITCH, Programing Bypass

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Alarm - EVS II Plus System  
Figure 1-915

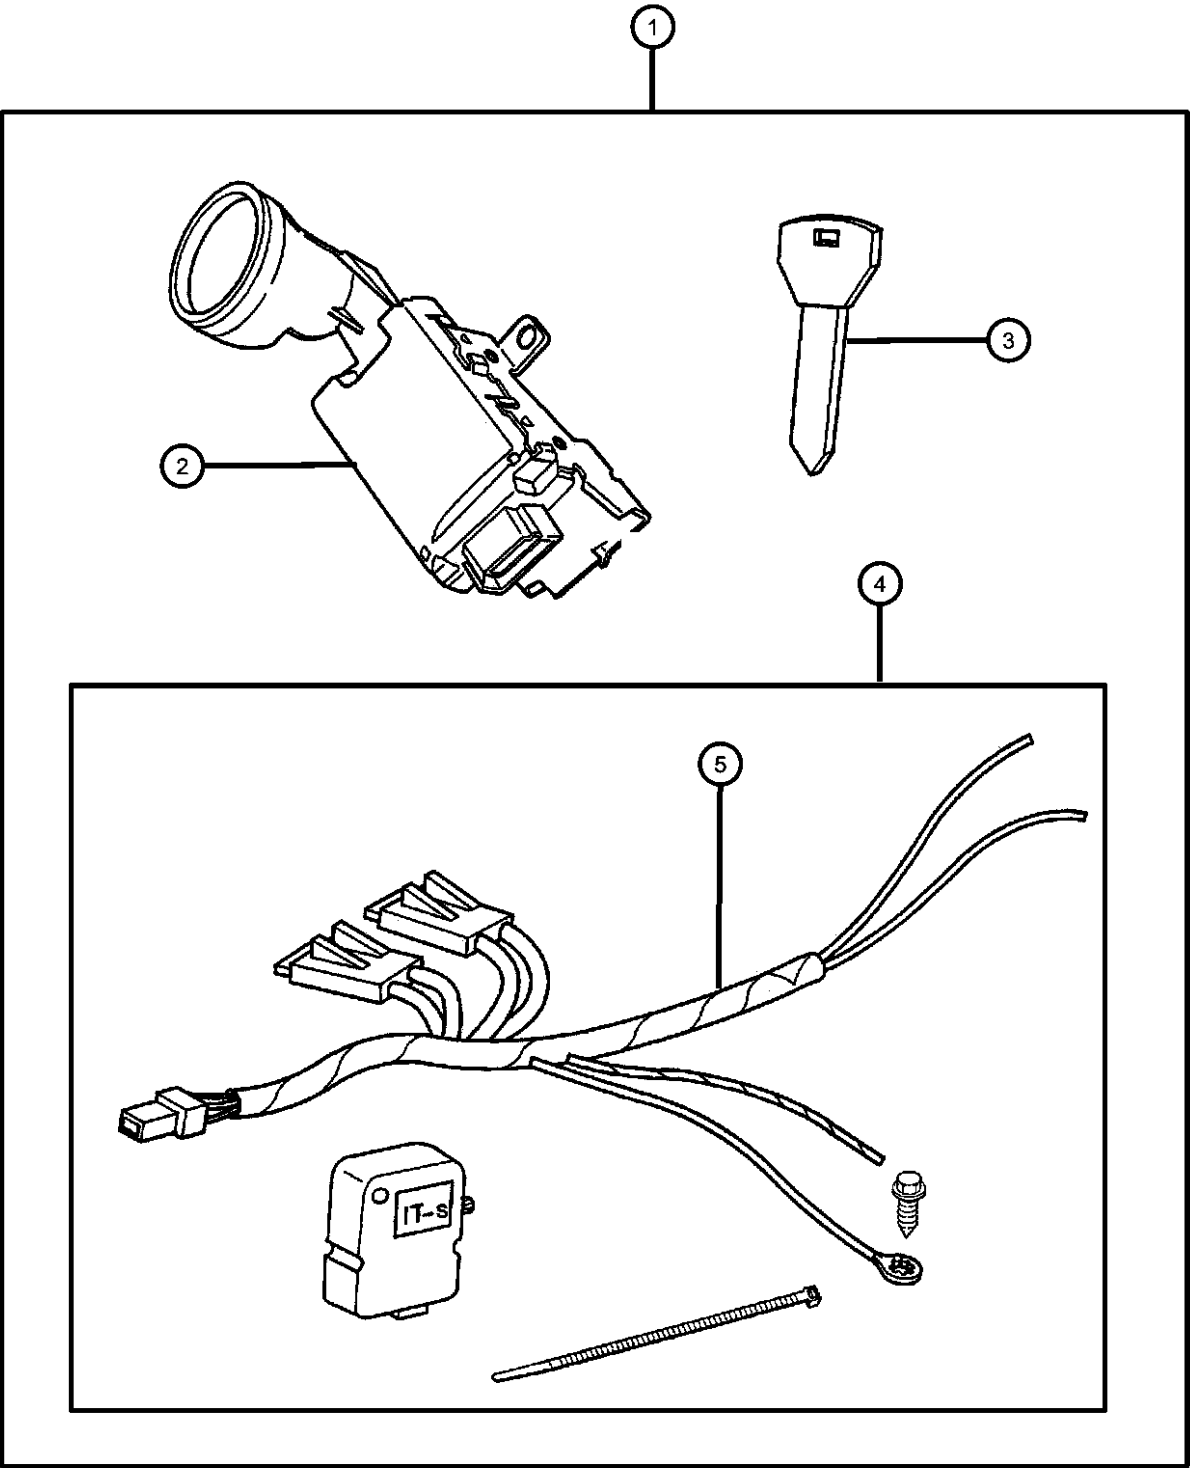

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE: Upgrade for Power Convenience Group

1	82207139	1							ALARM PACKAGE, Security With Sentry Key
2	56010209AC	1							MODULE, Immobilizer
3	05018699AA	1							KEY, Master
4	82207070	1							SENSOR KIT, Shock
5	82207070	1							WIRING KIT, Alarm Security Plus, Shock Sensor, (NOT SERVICED)

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

# Group - 2


## Front Suspension & Drive



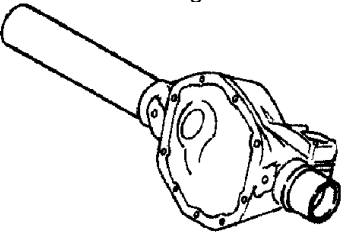
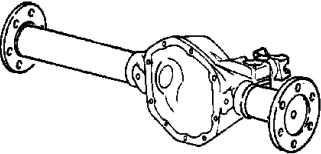
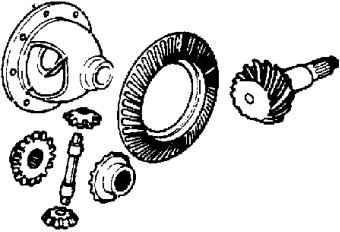
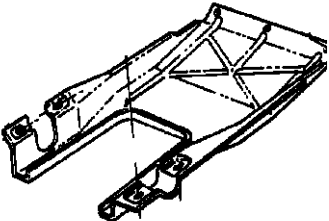
### Group - 2 Front Suspension & Drive

Illustration Title


Group-Fig. No.

<b>Front Suspension</b>	
Suspension,Front and Strut .....	Fig. 2 - 110
Bar,Front Sway .....	Fig. 2 - 120
<b>Front Axle Drive Shafts</b>	
Axle Shafts,Front.....	Fig. 2 - 210
<b>Front Axle Housing</b>	
Housing,Axle,Front.....	Fig. 2 - 310
<b>Front Axle Assembly</b>	
Axle Assembly,Front .....	Fig. 2 - 410
<b>Front Axle Differential</b>	
Differential,Front Axle .....	Fig. 2 - 610
<b>Front Axle Skid Plate</b>	
Skid Plate,Front Axle.....	Fig. 2 - 810

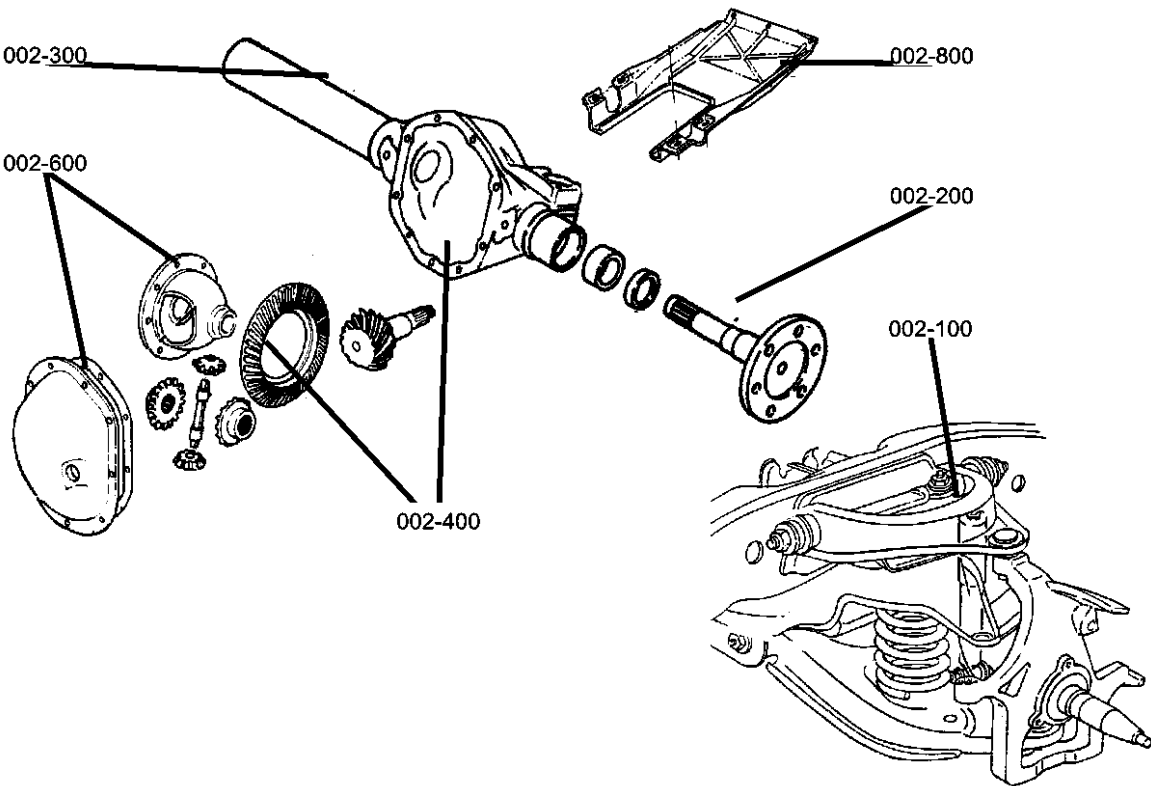
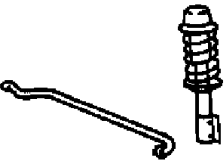
<div>002-100</div> <div>Front Suspension</div> <div></div>	<div>002-200</div> <div>Front Axle Drive Shafts</div> <div></div>	<div>002-300</div> <div>Front Axle Housing</div> <div></div>	<div>002-400</div> <div>Front Axle Assembly</div> <div></div>
<div>002-600</div> <div>Front Axle Differential</div> <div></div>	<div>002-800</div> <div>Front Axle Skid Plate</div> <div></div>		

Suspension,Front and Strut  
Figure 2-110

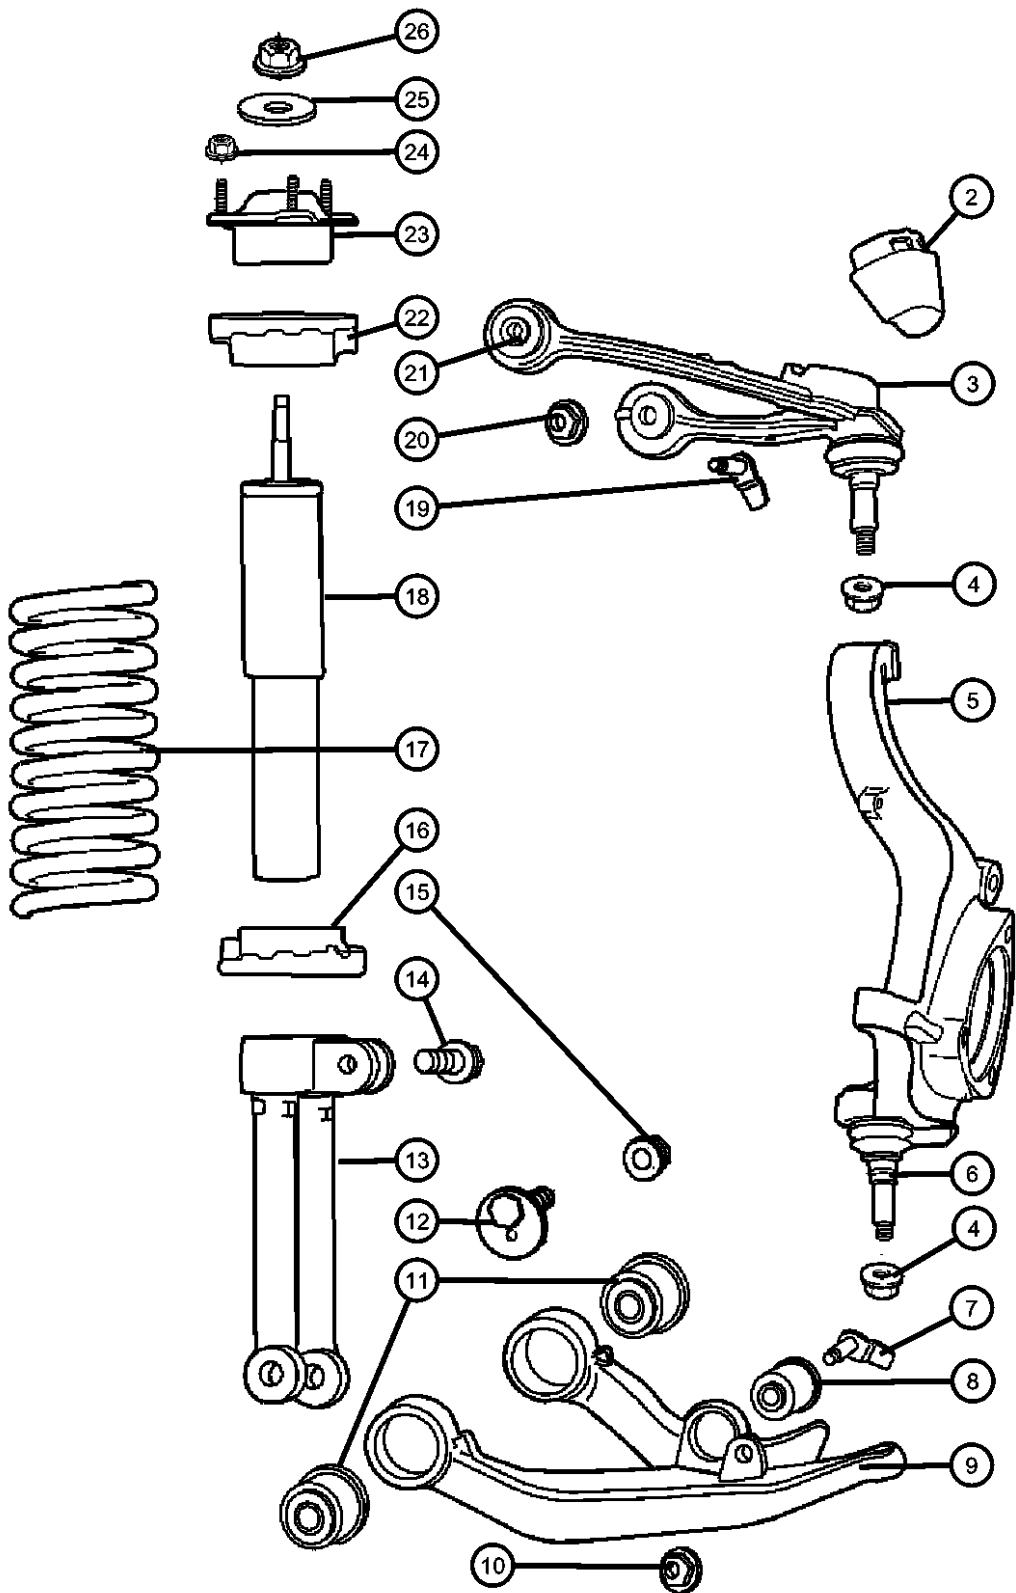

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note:Sales Codes; [ZCC] Through [ZRK] = Spring Sales Codes will Be Found On Vehicle Identification Number [VIN] Sales Code Lisiing									
-1	55360201AC	1							CUP, Jounce BumperRight or Left
2	52088684AC	2							BUMPER, JounceRight or Left
3	52088632AB	2							ARM, Control, With Bushings and Balljoint, Right or Left
4	06505623AA	2							NUT AND WASHER, UCA and LCA to Knuckle, Mounting
5									KNUCKLE, Front
	52088652AD	1							Without Lower Balljoint, Right
	52088653AD	1							Without Lower Balljoint, Left
6	05114037AA	1							BALL JOINT PACKAGE, Lower Control ArmRight or Left
7	06507275AA	2							BOLT AND RETAINER, Hex Head, Clevis to LCA, Mounting
8									BUSHING, Pivot
	52088746AA	1	J						Clevis
		1	T						Clevis
		1	U						Clevis
9									ARM, Lower Control, Front
	52088636AE	1	U						With 3 Bushings, Right
		1	T						With 3 Bushings, Right
		1	J						With 3 Bushings, Right
	52088637AE	1	T						With 3 Bushings, Left
		1	J						With 3 Bushings, Left
		1	U						With 3 Bushings, Left
10	06102251AA	2							NUT, M14X2, Clevis to LCA, Mounting
11									BUSHING, Pivot
	52088649AC	2	T						LCA
		2	J						LCA
		2	U						LCA
12									SCREW AND WASHER, Hex Head

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part




Suspension,Front and Strut  
Figure 2-110

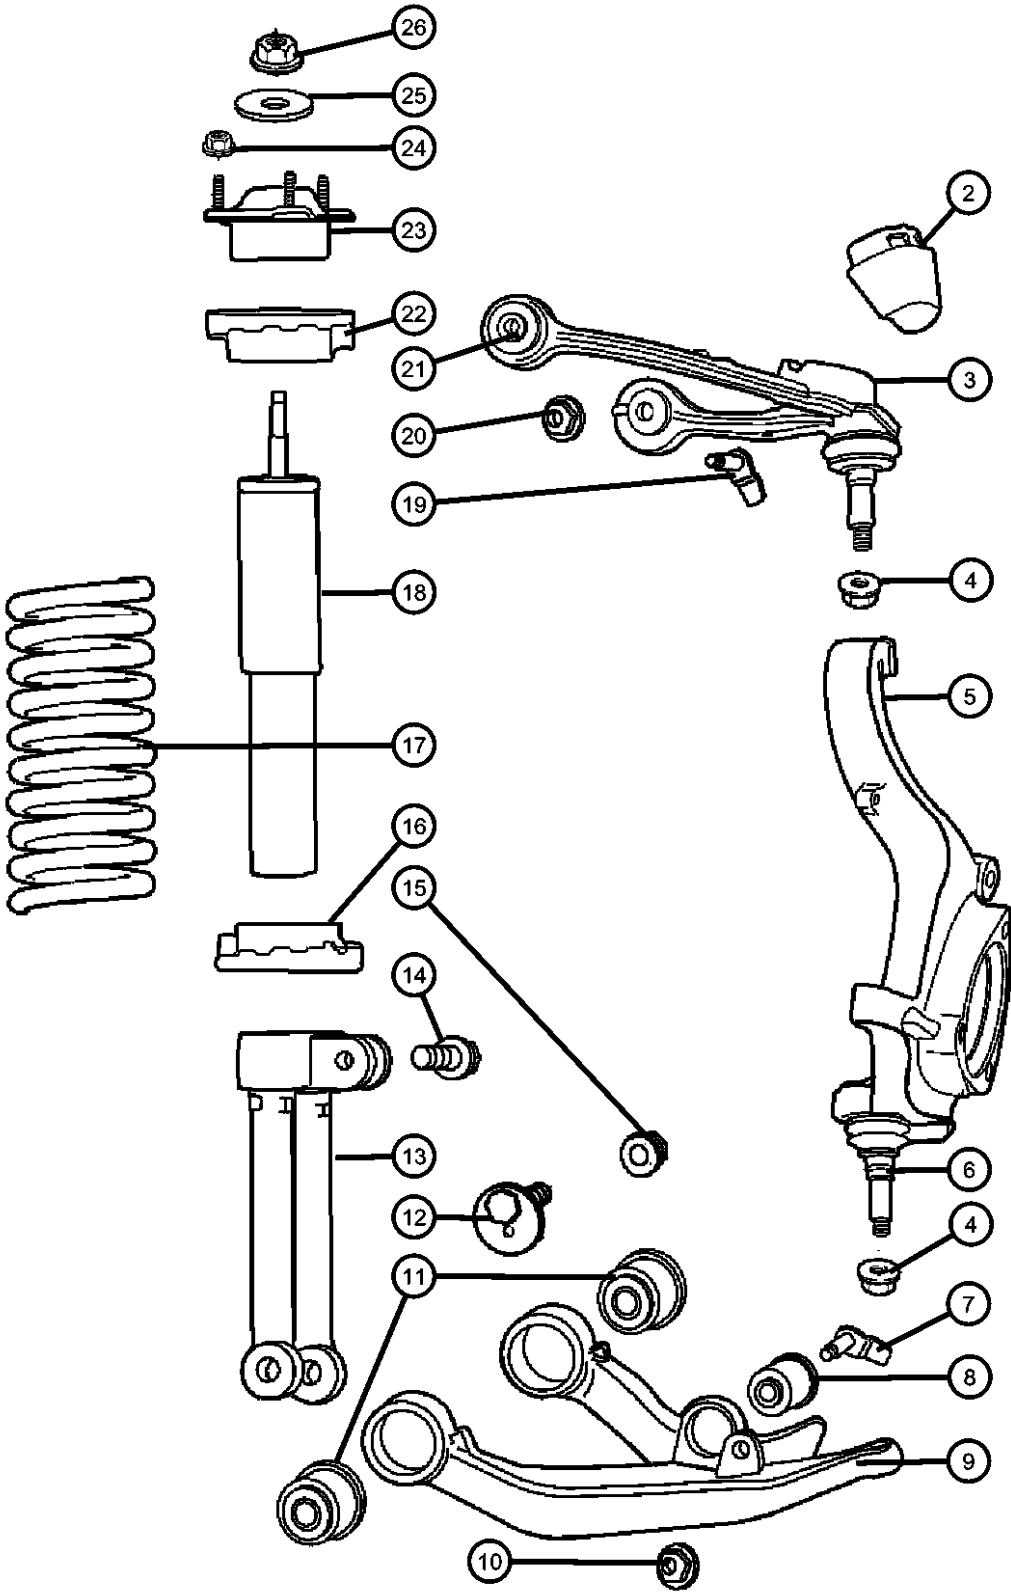

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-13	06507912AA	4	J						Cam Bolt, Mounting
		4	U						Cam Bolt, Mounting
		4	T						Cam Bolt, Mounting
									WASHER, Control Arm
	06507080AA	4	J						Cam Bolt, Mounting
		4	U						Cam Bolt, Mounting
		4	T						Cam Bolt, Mounting
	14 52088748AC	1							CLEVIS, Front
	15 06507325AA	1							SCREW, Hex Flange Head, Clevis Pinch
	16								NUT, Hex Flange Lock
	06102252AA	4	J						LCA to Cradle, Mounting
		4	U						LCA to Cradle, Mounting
17		4	T						LCA to Cradle, Mounting
	52088686AA	2							ISOLATOR, Spring
	18								SPRING, Front Coil
	52128873AA	1							[ZCC,ZRC]
	52128874AA	1							[ZCD,ZRD]
	52128875AA	1							[ZCE,ZRE]
	52128876AA	1							[ZCF,ZRF]
	52128877AA	1							[ZCG,ZRG]
	52128878AA	1							[ZCH,ZRH]
	52128879AA	1							[ZCJ,ZRJ]
	52128880AA	1							[ZCK,ZRK]
	52088650AE	1							SHOCK ABSORBER, Suspension, Front
19	0SGR5764								Rancho Shock
	0SG81577								Mopar V-Line Alternative Part
	20 06507965AA	4							BOLT AND RETAINER, Hex Head, UCA, Mounting
	21 06502697	4							NUT, Hex Flange Lock, M12x1.75, UCA, Mounting

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16v	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

Suspension,Front and Strut  
Figure 2-110

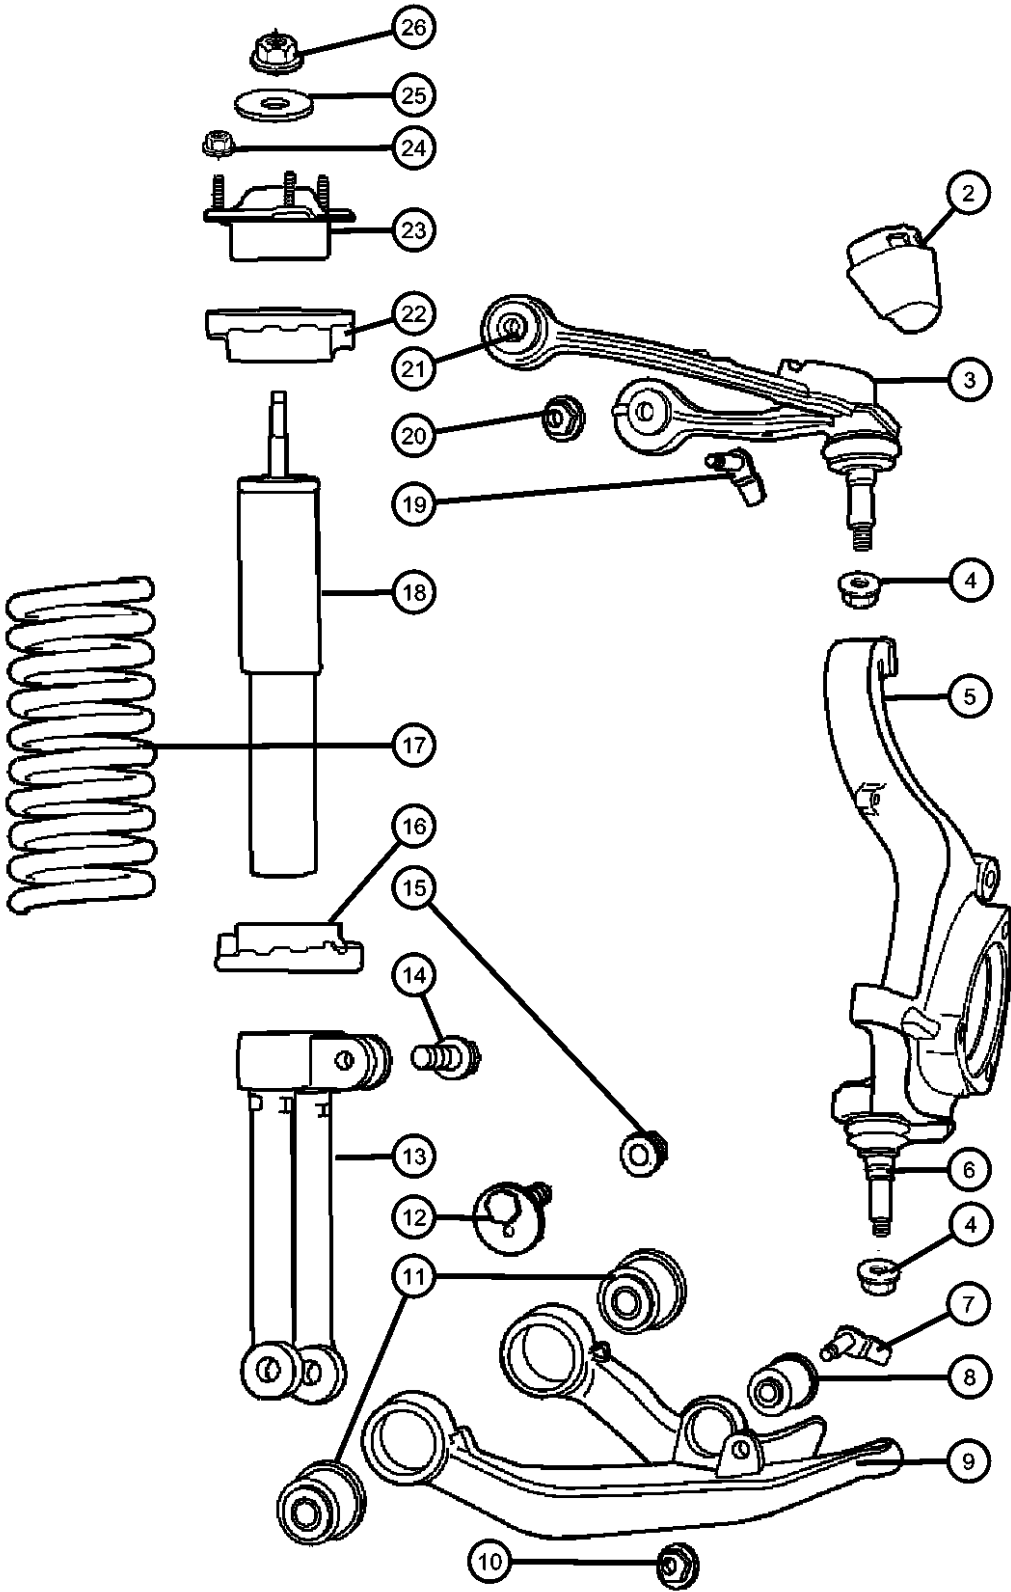

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
22	52088634AB	4							BUSHING, Control ArmUpper
23	52088686AA	2							ISOLATOR, SpringUpper
24									MOUNT, Shock Upper
	52128532AA	1							Right
	52128533AA	1							Left
25	06502697	8							NUT, Hex Flange Lock, M12x1.75, Shock Mount to Body, Mounting
26	52089069AA	1							RETAINER, Shock Absorber, Shock, Mounting
27	06506443AA	1							NUT, Nylock Hex, M10x1.5, Shock, Mounting
-28	52128983AA	2							SHIELD, Heat, Lower Ball Joint, Right or Left

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part

Bar,Front Sway  
Figure 2-120

	ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	1	06503712	2							SCREW, Sway Bar Link to Sway Bar, Mounting
	2	06502697	2							NUT, Hex Flange Lock, M12x1.75, Sway Bar Link to Sway Bar
	3	52088660AA	1							BAR, Front Sway
	4	06502697	4							NUT, Hex Flange Lock, M12x1.75, Sway Bar Clamp to Sill, Mounting
	5	52088631AA	2							RETAINER, Stabilizer Bar Grommet
	6	52088778AB	2							CUSHION, Sway Eliminator
	7	06502697	2							NUT, Hex Flange Lock, M12x1.75, Sway Bar Link to LCA, Mounting
	8	06506984AA	2							BOLT AND RETAINER, Hex Head, Sway Bar Link to LCA, Mounting
	9	52088662AB	2							LINK, Sway Eliminator
	-10	06504558	2							WASHER, Sway Bar Link to Lower Control Arm
	-11	06504558	2							WASHER, Sway Bar Link to Sway Bar

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions


Axle Shafts,Front  
Figure 2-210

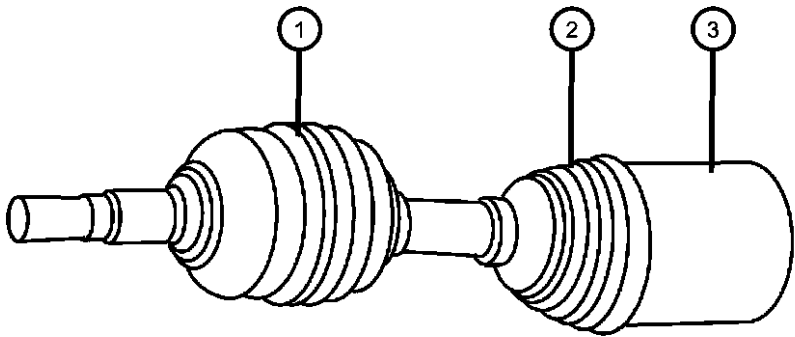

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:Sales Codes; [ED0]=Engines - All 2.2, 2.5, 2.4L 4 Cylinder Gas [EK0]=Engines - All 3.7L 6 Cylinder Gas [EN0]=Engines - All 4/5 Cylinder Turbo Diesel									
1	05066025AB	1	U						BOOT KIT, Half Shaft, Outer Right or Left
		1	J						Right or Left
2	05066024AA	1	U						BOOT KIT, Half Shaft, Inner Right or Left
		1	J						Right or Left
3	05066020AA	1	U						SHAFT, Axle Half [EK0], Right
		1	J						[EK0], Right
	05066021AA	1	U						[EK0], Left
		1	J						[EK0], Left
	05066022AA	1	J						[ED0,EN0], Right
		1	U						[ED0,EN0], Right
	05066023AA	1	J						[ED0,EN0], Left
		1	U						[ED0,EN0], Left

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

Housing,Axle,Front  
Figure 2-310

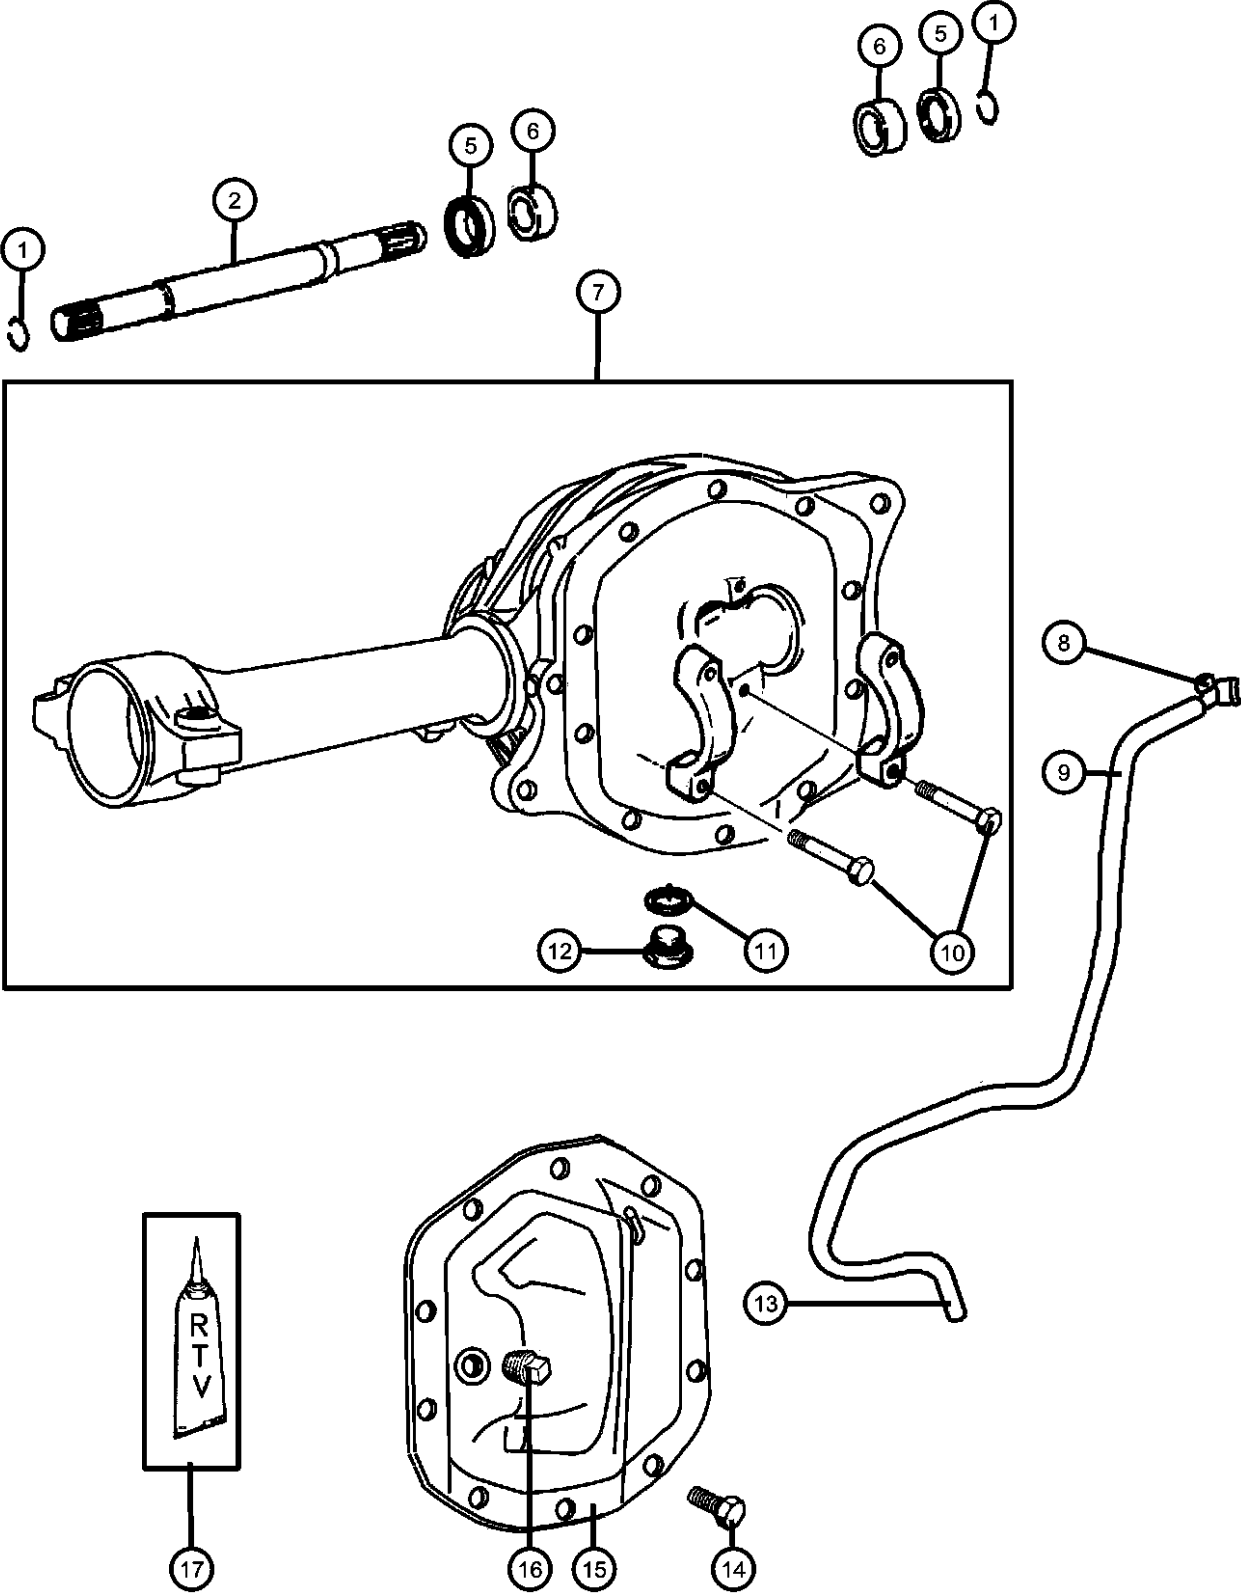


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	05066064AA	1	U						SNAP RING, Axle Shaft
		1	J						Inboard
2	05066057AB	1	U						SHAFT, Axle
		1	J						Inboard
-3	05069009AA	1	J						SNAP RING, Axle Shaft
		1	U						Outboard
-4	05066067AA	1	J						O RING
		1	U						Axle Shaft
5	05066066AA	2	U						SEAL, Axle Drive Shaft
		2	J						
6	05066056AA	2	J						BEARING, Axle Shaft
		2	U						
7	05066049AB	1	U						HOUSING, Front Axle
		1	J						
8	52104552AB	4	U						VENT, Axle
		1	J						
9	HFV00516AB	1	J						HOSE, Fuel And Vapor, 25 Foot
		1	U						Roll 5/16"
10	06035985AA	4	U						BOLT, Differential
		4	J						

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Housing,Axle,Front  
Figure 2-310

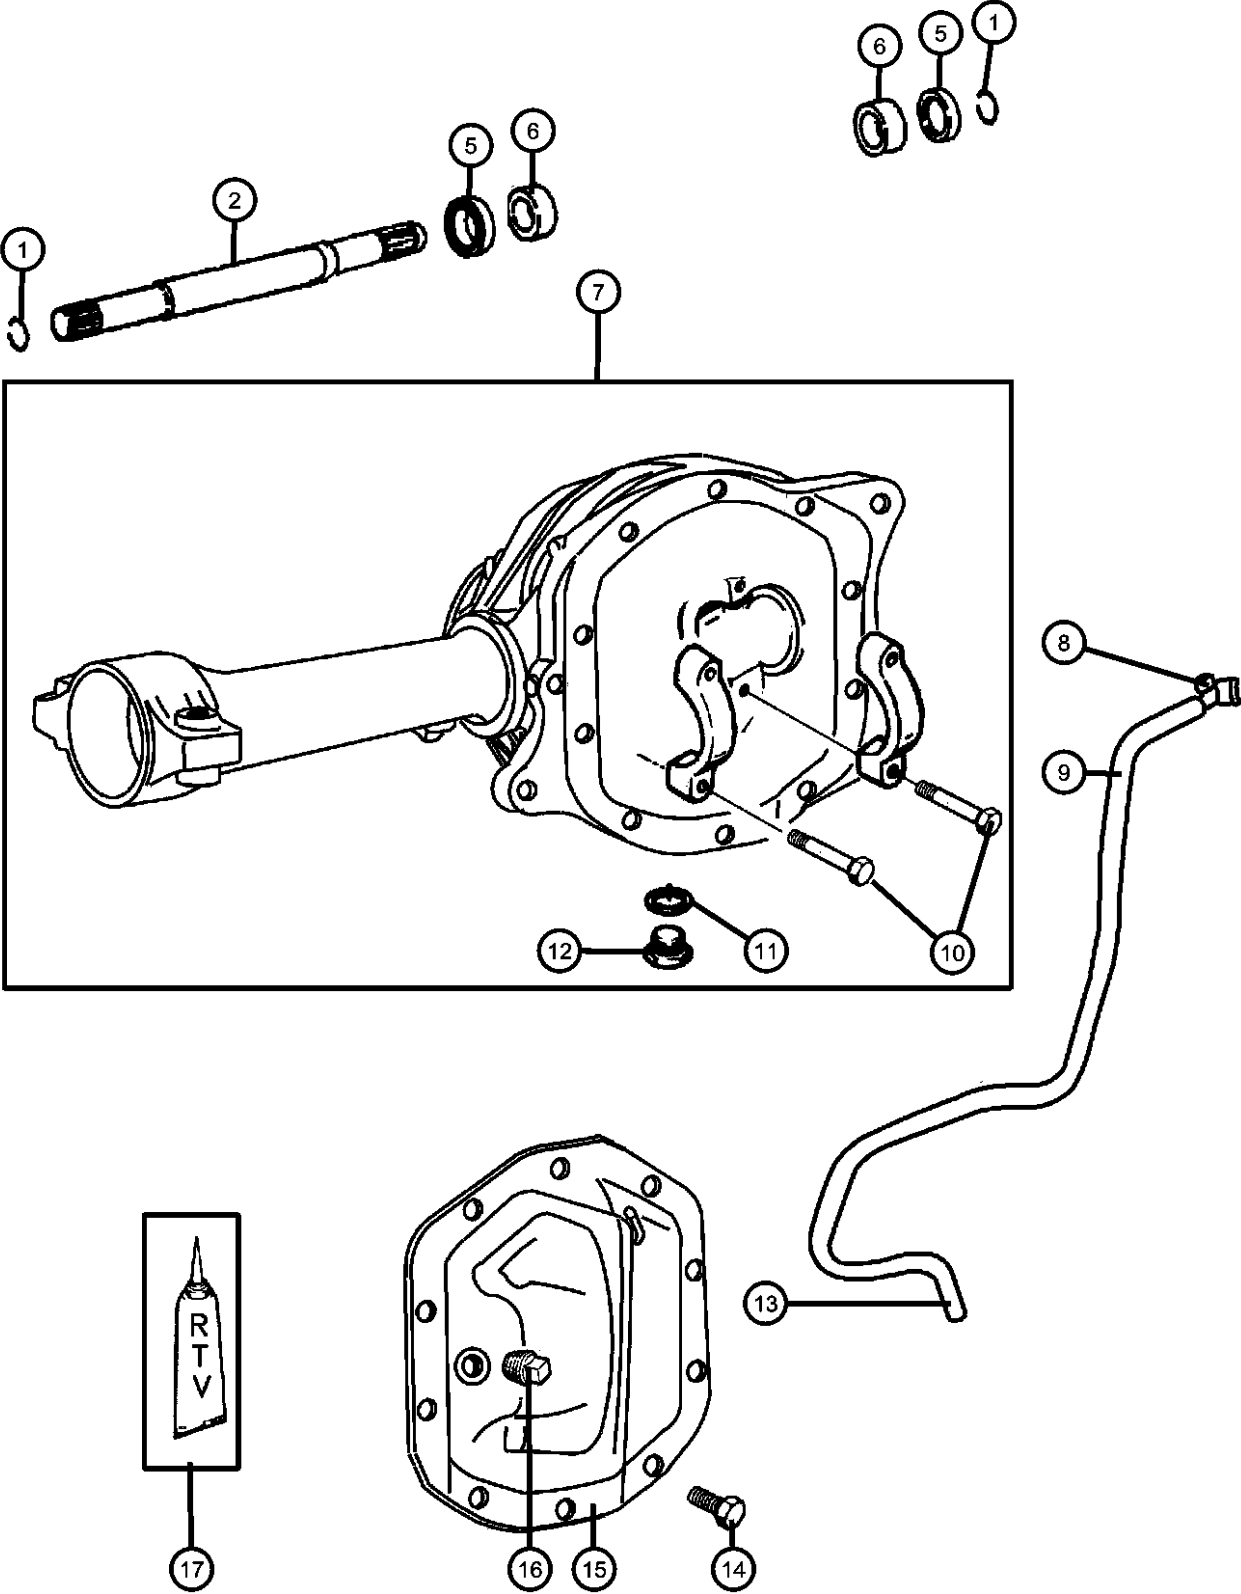

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
11	05066055AA	1	U						O RING
		1	J						
12	05066054AA	1	U						PLUG, Drain
		1	J						
13	06503573	1	J						CLAMP, Hose
		1	U						
14	05069008AA	1	U						BOLT KIT
		1	J						
15	05066538AA	1	J						COVER, Differential
		1	U						
16	J4004751	1	J						PLUG, Differential Cover
		1	U						
17	05010884AA	1	J						SEALANT, RTV
		1	U						

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Axle Assembly,Front  
Figure 2-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:Sales Codes;  
[DME] = Axle Ratio - 3.73  
[DMF] = Axle Ratio - 4.10  
[ED0]=Engines - All 2.2,2.5,2.4L 4 Cylinder Gas  
[EK0]=Engines - All 3.7L 6 Cylinder Gas  
[EN0]=Engines - All 4/5 Cylinder Turbo Diesel

AXLE, Service Front

1

05066068AC	1	J
	1	U
05066084AC	1	J
	1	U
05103064AA	1	U

[DME]  
[DME]  
[DMF,DBB,EN0]  
[DMF,DBB,EN0]  
[DMF,DG0,EN0]

04874468

Mopar SAE 80W-90 Gear Lube  
Quart Bottle

68003054AA

Mopar SAE 80W-90 Gear Lube  
16 Gallon Keg

04874469

Mopar SAE 75W-140 Synthetic  
Gear and Axle Lube Quart

68003055AA

Mopar SAE 75W-140 Synthetic  
Gear and Axle Lube 16 Gallon  
Keg

05010320AA

Mopar SAE 75W-90 Synthetic  
Gear Lube Quart

68003056

Mopar SAE 75W-90 Synthetic  
Gear Lube 16 Gallon Keg

P5007326

Performance Mobil 1, 75W - 90  
Synthetic Gear Lube

2

BRACKET, Mounting

52059464AB	1	J
	1	U
52059472AB	1	J
	1	U

[EK0], Right  
[EK0], Right  
[ED0,EN0], Right  
[ED0,EN0], Right

3

BRACKET, Mounting

52059465AC	1	J
	1	U
52059473AC	1	J

[EK0], Left  
[EK0], Left  
[ED0,EN0], Left


LIBERTY (KJ)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Axle Assembly,Front  
Figure 2-410

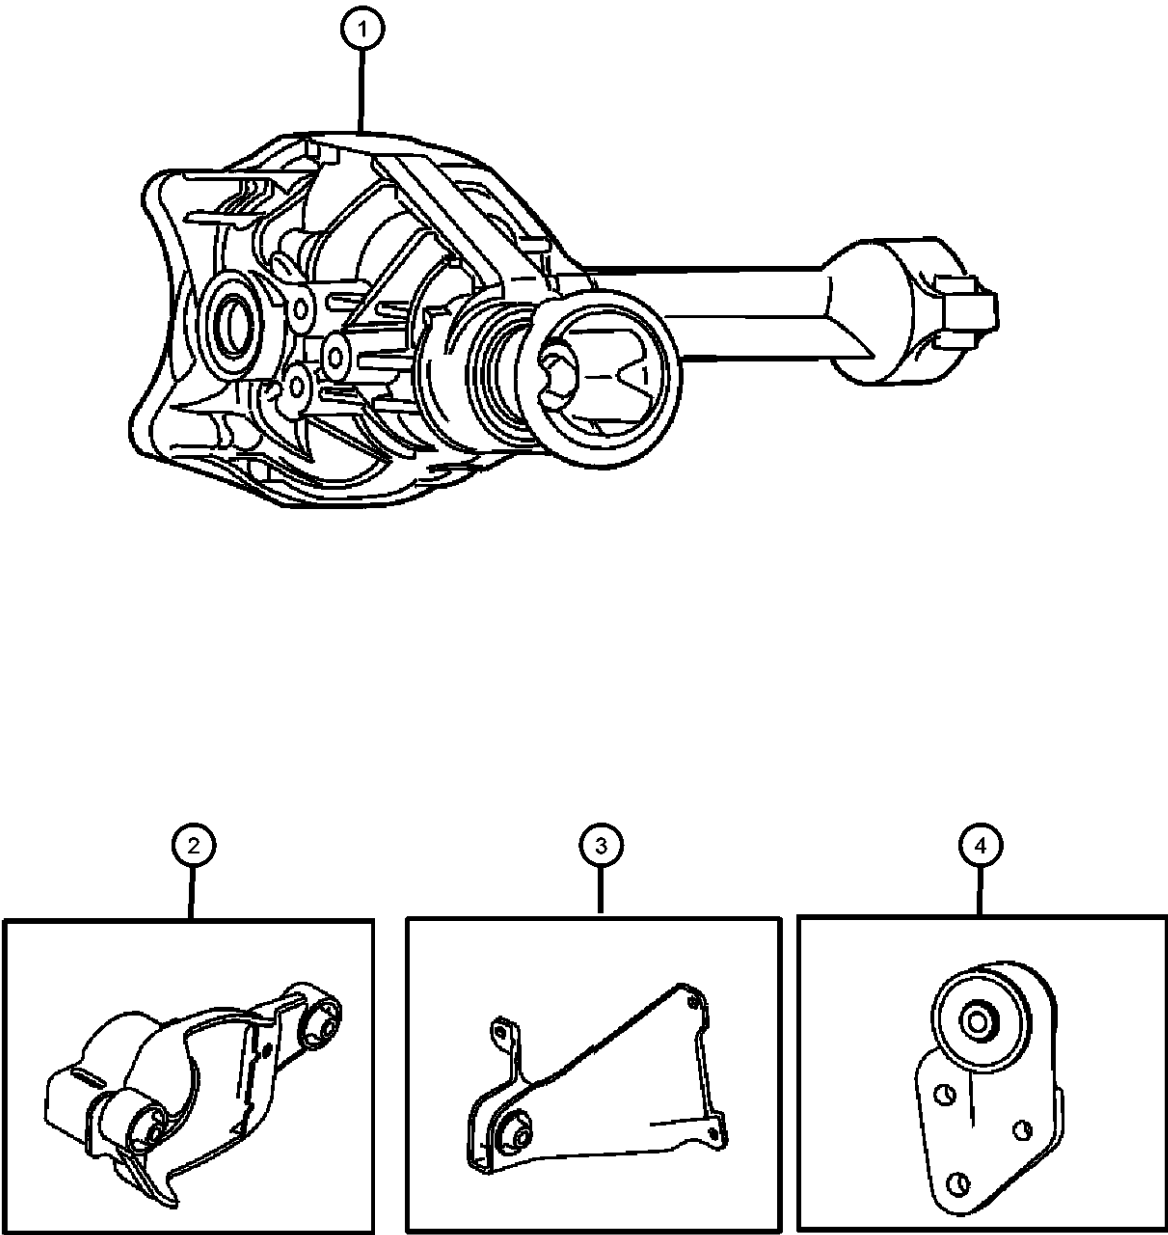


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
4		1	U						[ED0,EN0], Left
									BRACKET, Mounting
	52059467AC	1	J						[EK0], Left Rear
		1	U						[EK0], Left Rear
	52059475AC	1	J						[ED0,EN0], Left Rear
-5		1	U						[ED0,EN0], Left Rear
									BOLT
	06506067AA	4	J						Axle Assembly to Cradle, Mounting
-6		4	U						Axle Assembly to Cradle, Mounting
									NUT, Hex Flange Lock, M12x1.75
	06502697	4	J						Axle Assembly to Cradle & Right Bracket, Mounting
-7		4	U						Axle Assembly to Cradle & Right Bracket, Mounting
									SCREW AND WASHER, M10x1.50x45.00
	06101985	3	J						Left Front & Left Rear Bracket to Axle, Mounting
-8		3	U						Left Front & Left Rear Bracket to Axle, Mounting
									SCREW AND WASHER, Hex
	06505488AA	3	J						Left Rear Bracket to Axle, Mounting
-9		3	U						Left Rear Bracket to Axle, Mounting
									NUT, Hex Flange Lock, M14x1.50
	06502696	3	J						Left Front Bracket to Axle, Mounting
-10		3	U						Left Front Bracket to Axle, Mounting
									BOLT
	06506067AA	2	J						Right Front Bracket to Axle, Mounting
		2	U						Right Front Bracket to Axle, Mounting

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Differential,Front Axle  
Figure 2-610

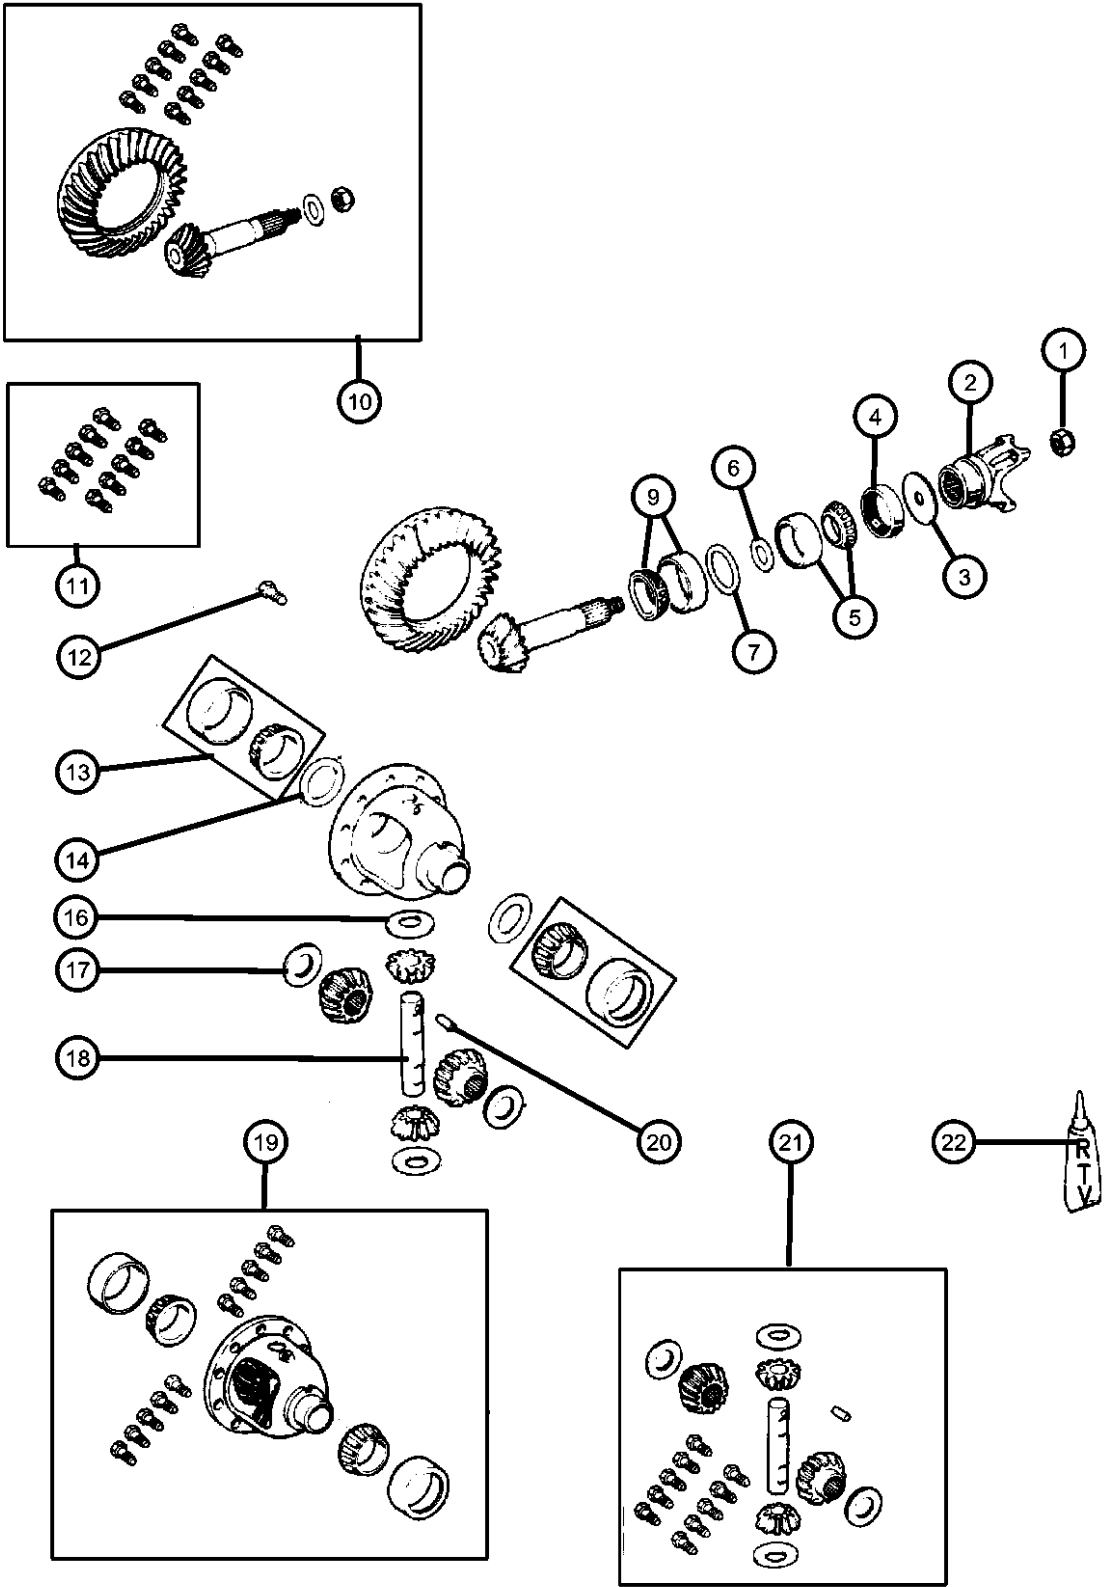

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note:Sales Codes;  
[DME] = Axle Ratio - 3.73  
[DMF] = Axle Ratio - 4.10

1									NUT, Pinion Yoke
	04720895	1	U						
		1	J						
2									YOKE, Axle
	05066050AB	1	J						[DME]
		1	U						[DME]
	05103049AA	1	U						[DMF]
3									SLINGER, Drive Pinion
	05066052AA	1	J						
		1	U						
4									SEAL, Drive Pinion
	05066053AA	1	J						
		1	U						
5									BEARING, Drive Pinion
	J8126499	1	U						Bearing and Cup, Front
		1	J						Bearing and Cup, Front
6									SPACER
	05066047AA	1	J						Crush
		1	U						Crush
7									SHIM, Drive Pinion Bearing
	05066572AA	1	J						[.045"]
		1	U						[.045"]
	05066573AA	1	J						[.046"]
		1	U						[.046"]
	05066574AA	1	J						[.047"]
		1	U						[.047"]
	05066591AA	1	J						[.041"]
		1	U						[.041"]

LIBERTY (KJ)									
SERIES	LINE								
P = Limited	J = LHD (4WD)								
H = Sport	U = RHD (4WD)								
M = Renegade	T = LHD (2WD)								
					BODY		ENGINE		TRANSMISSION
					74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD
							DOHC 16v SMPI		Manual
							EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD
							ENJ = Engine -2.5L 4 Cyl 16V		Manual
							Turbo Diesel		DG4 = Transmission-Multi-Speed
							ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE
							Turbo Diesel		DG6 = Transmission-4-Spd.
							ENO = 4Cyl Turbo Diesel		Automatic, 42RLE
							EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic
							ED0 = All 2.4L		5-45RFE
									DBB = All Manual Transmissions
									DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Differential,Front Axle  
Figure 2-610

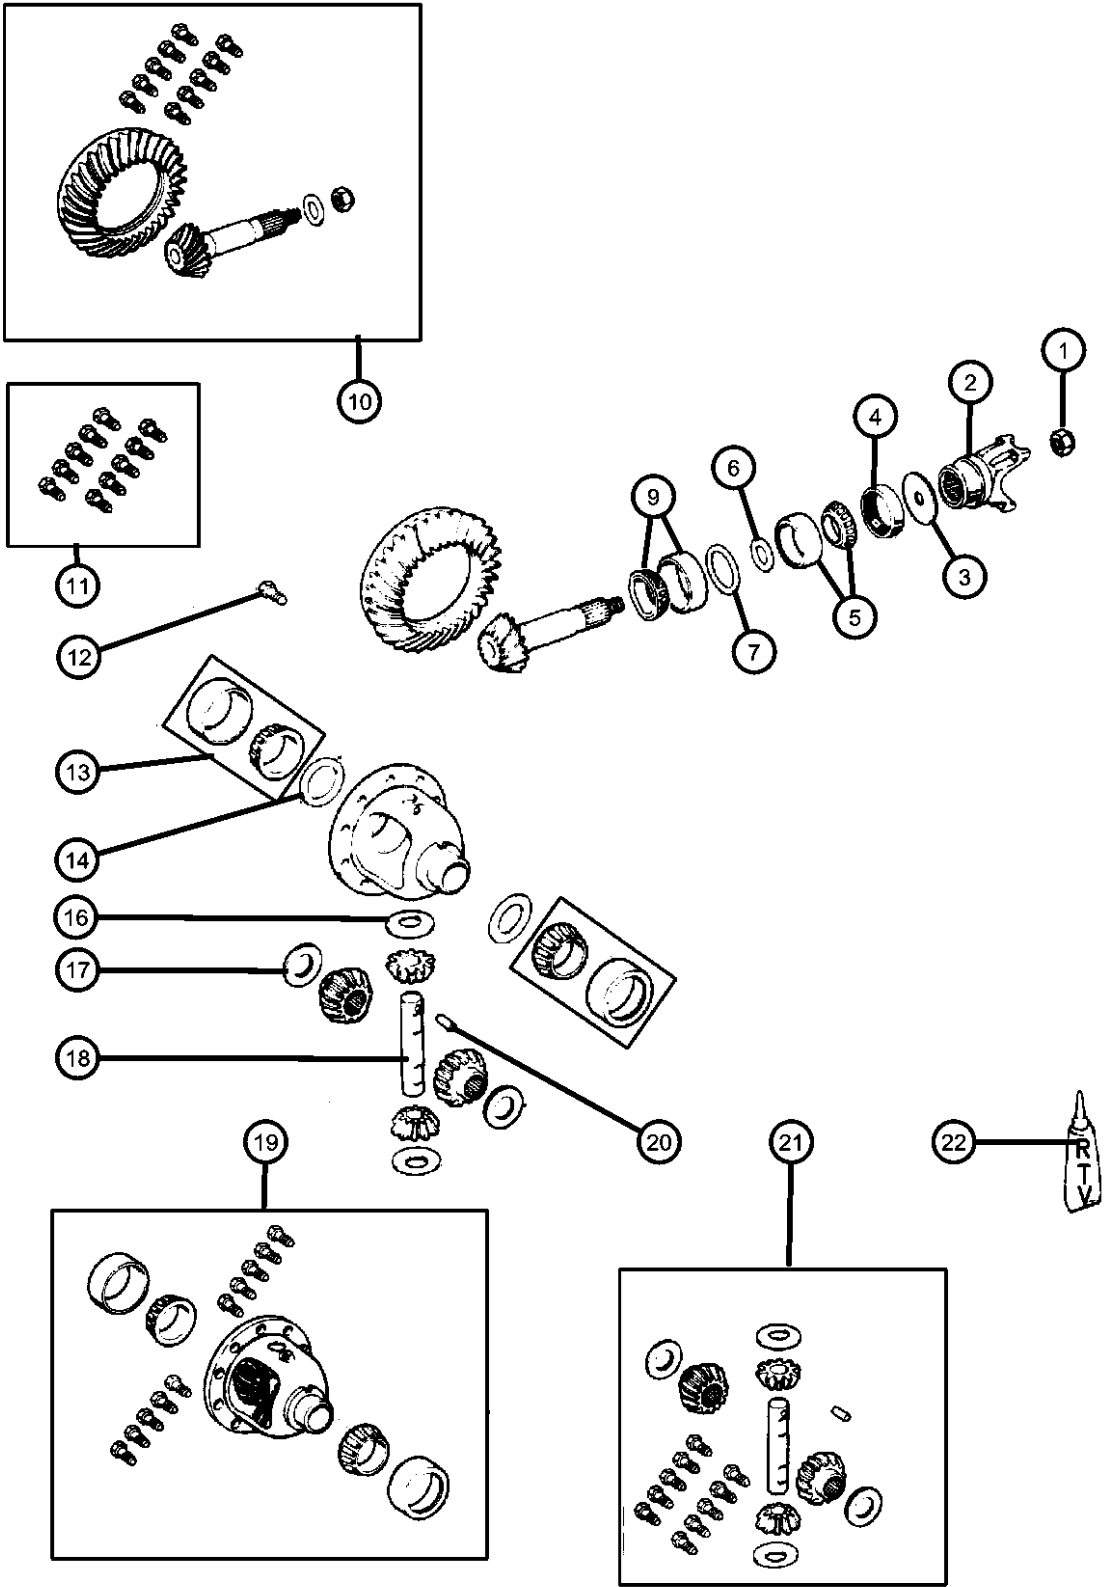


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	05066592AA	1	J						[.042"]
		1	U						[.042"]
	05066575AA	1	J						[.048"]
		1	U						[.048"]
	05066576AA	1	J						[.049"]
		1	U						[.049"]
	05066577AA	1	J						[.050"]
		1	U						[.050"]
	05066578AA	1	J						[.051"]
		1	U						[.051"]
	05066579AA	1	J						[.052"]
		1	U						[.052"]
	05066580AA	1	J						[.053"]
		1	U						[.053"]
	05066581AA	1	J						[.055"]
		1	U						[.055"]
	05066582AA	1	J						[.056"]
		1	U						[.056"]
	05066583AA	1	J						[.057"]
		1	U						[.057"]
	05066584AA	1	J						[.034"]
		1	U						[.034"]
	05066585AA	1	J						[.035"]
		1	U						[.035"]
	05066586AA	1	J						[.036"]
		1	U						[.036"]
	05066587AA	1	J						[.037"]
		1	U						[.037"]
	05066588AA	1	J						[.038"]
		1	U						[.038"]

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			EDO = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Differential,Front Axle  
Figure 2-610

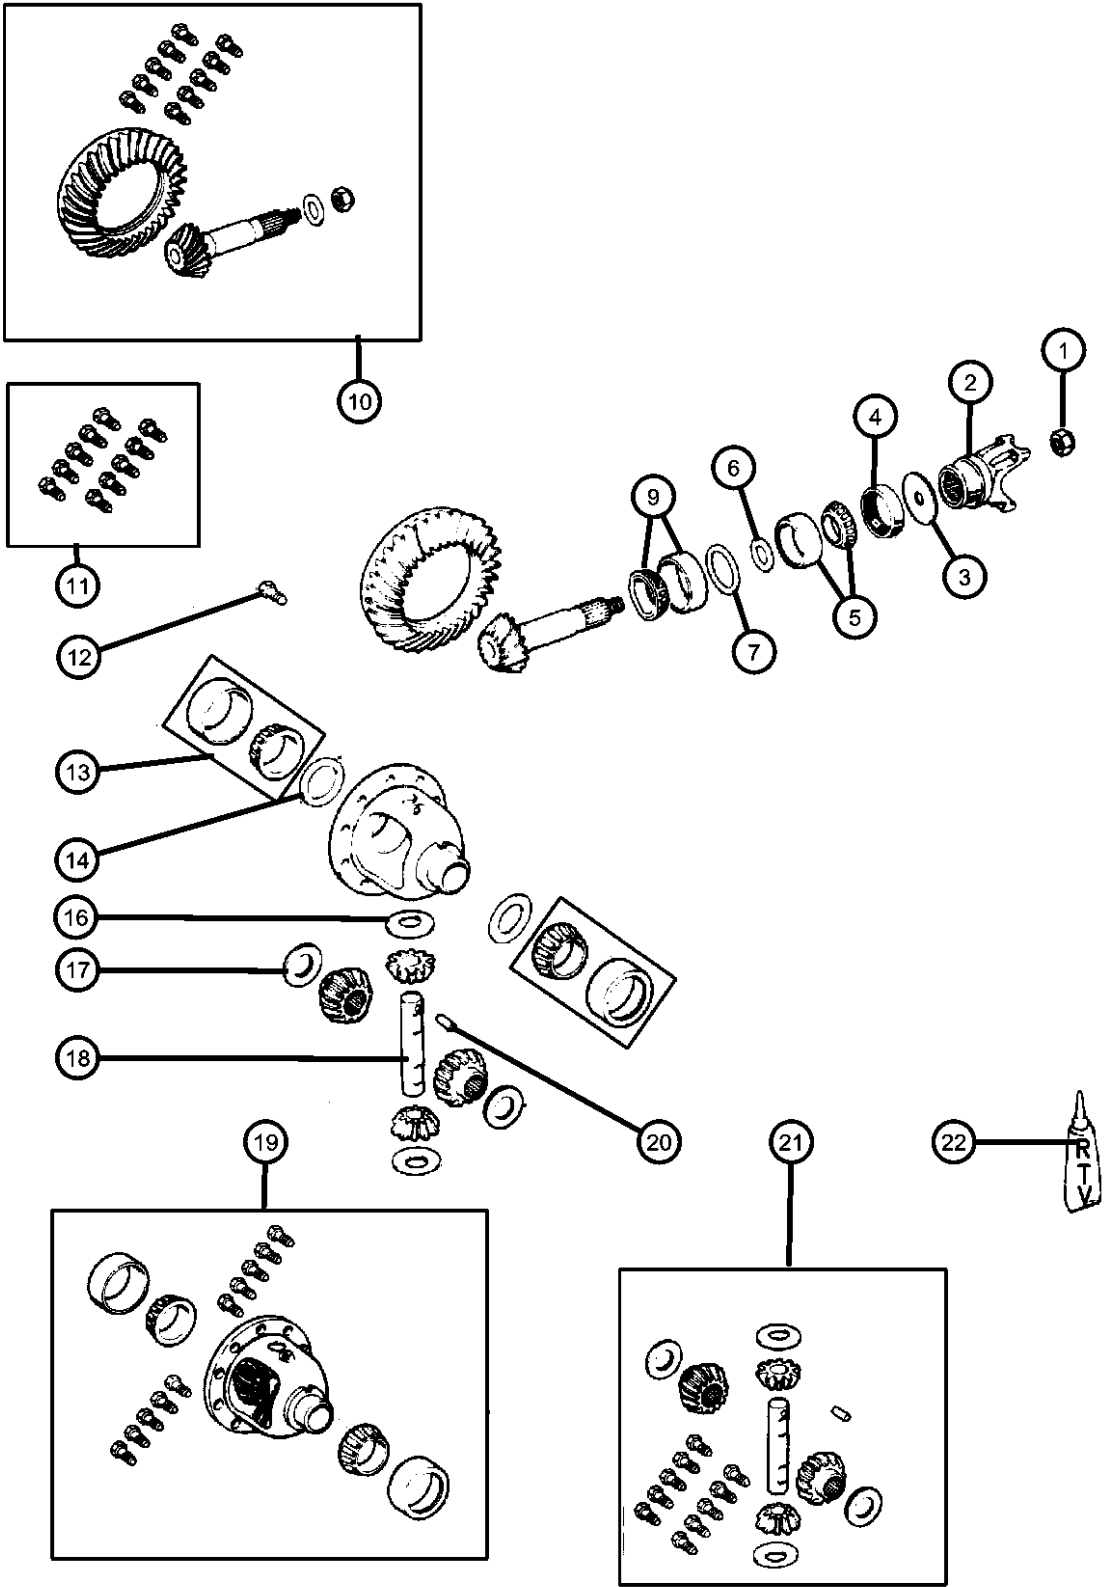


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	05066589AA	1	J						[.039"]
		1	U						[.039"]
	05066590AA	1	J						[.040"]
		1	U						[.040"]
	05066593AA	1	J						[.043"]
		1	U						[.043"]
	05066594AA	1	J						[.044"]
		1	U						[.044"]
	05066595AA	1	J						[.054"]
		1	U						[.054"]
	05066596AA	1	J						[.058"]
		1	U						[.058"]
-8									SHIM KIT, Pinion Shaft
	05066533AA	1	J						Consists of 25 Shims
		1	U						Consists of 25 Shims
9									BEARING, Drive Pinion
	04746979	1	J						Bearing and Cup, Rear
		1	U						Bearing and Cup, Rear
10									GEAR KIT, Ring And Pinion
	05066051AA	1	J						[DME]
		1	U						[DME]
	05066085AA	1	J						[DMF]
		1	U						[DMF]
11									BOLT KIT
	05069008AA	1	J						Contains 10-5252503 Screws
		1	U						Contains 10-5252503 Screws
12									SCREW, Drive Gear
	05252503	10	J						
		10	U						
13									BEARING, Differential

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Differential,Front Axle  
Figure 2-610

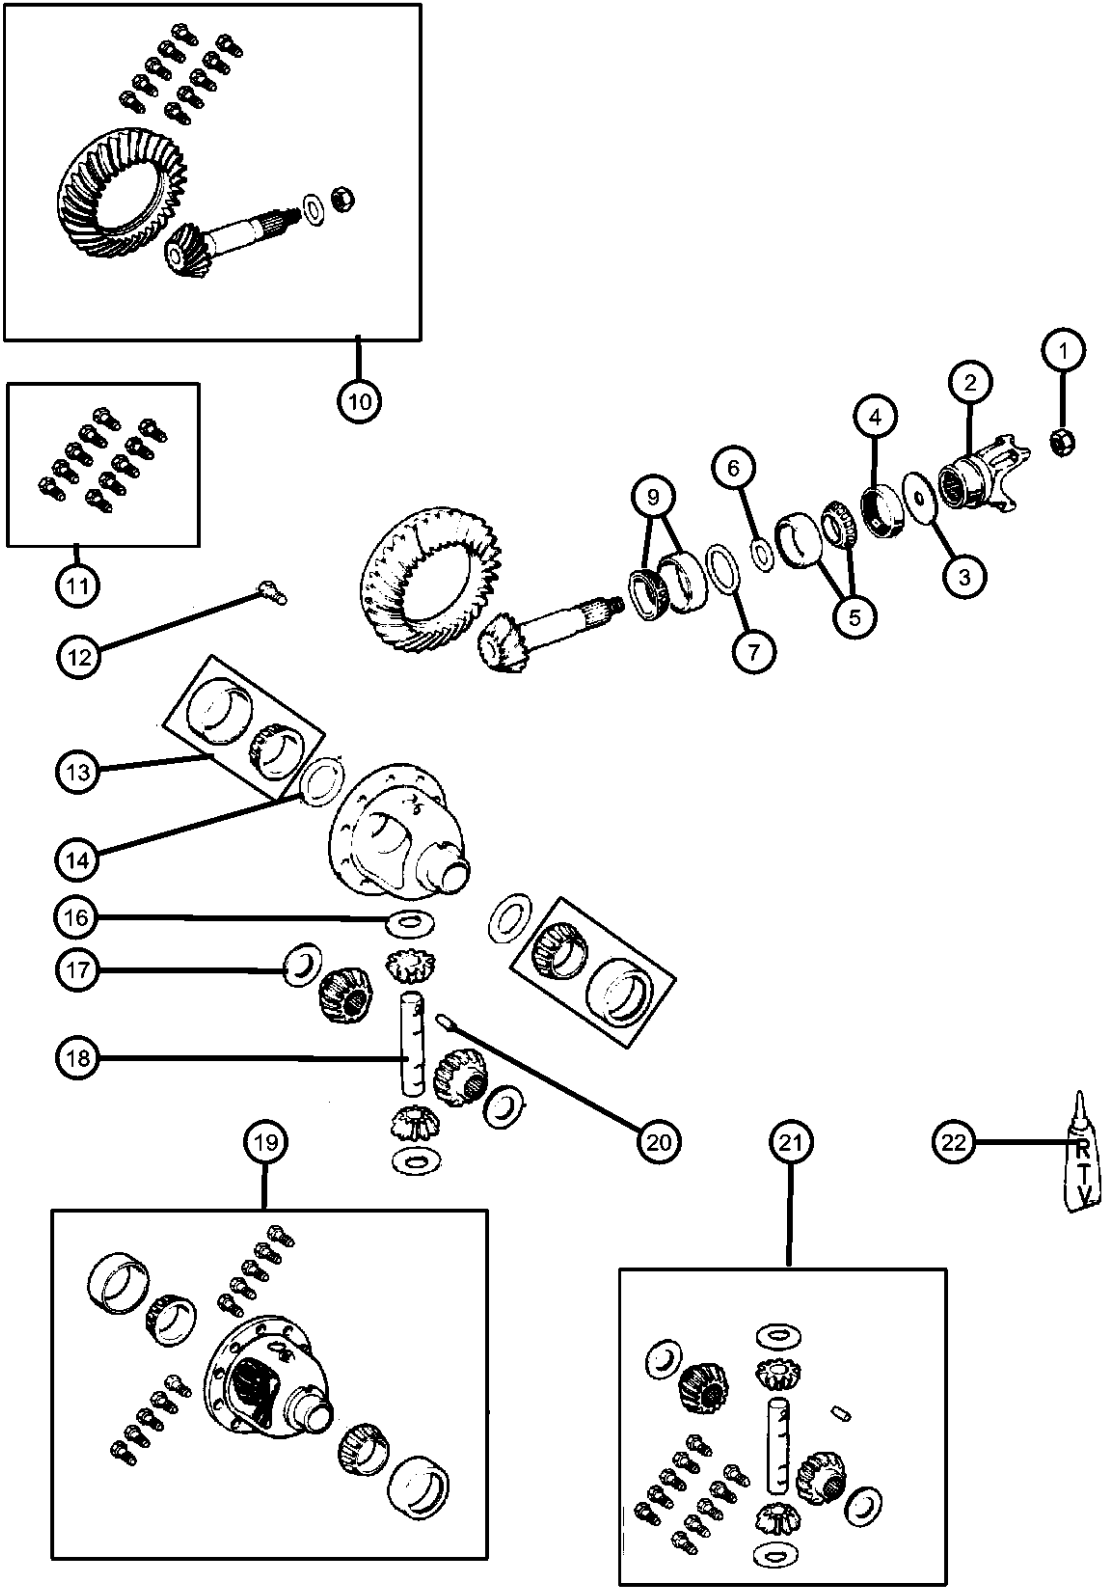


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	J8126500	1	J						
		1	U						
									SHIM, Differential Bearing
	05017218AA	1	J						[.109" ]
		1	U						[.109" ]
	05017219AA	1	J						[.110" ]
		1	U						[.110" ]
	05017220AA	1	J						[.111" ]
		1	U						[.111" ]
	05017221AA	1	J						[.112" ]
		1	U						[.112" ]
	05017222AA	1	J						[.113" ]
		1	U						[.113" ]
	05017223AA	1	J						[.114" ]
		1	U						[.114" ]
	05017224AA	1	J						[.115" ]
		1	U						[.115" ]
	05017225AA	1	J						[.116" ]
		1	U						[.116" ]
	05017226AA	1	J						[.117" ]
		1	U						[.117" ]
	05017227AA	1	J						[.118" ]
		1	U						[.118" ]
	05017228AA	1	J						[.119" ]
		1	U						[.119" ]
	05017229AA	1	J						[.120" ]
		1	U						[.120" ]
	05017230AA	1	J						[.121" ]
		1	U						[.121" ]
	05017231AA	1	J						[.122" ]

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Differential,Front Axle  
Figure 2-610

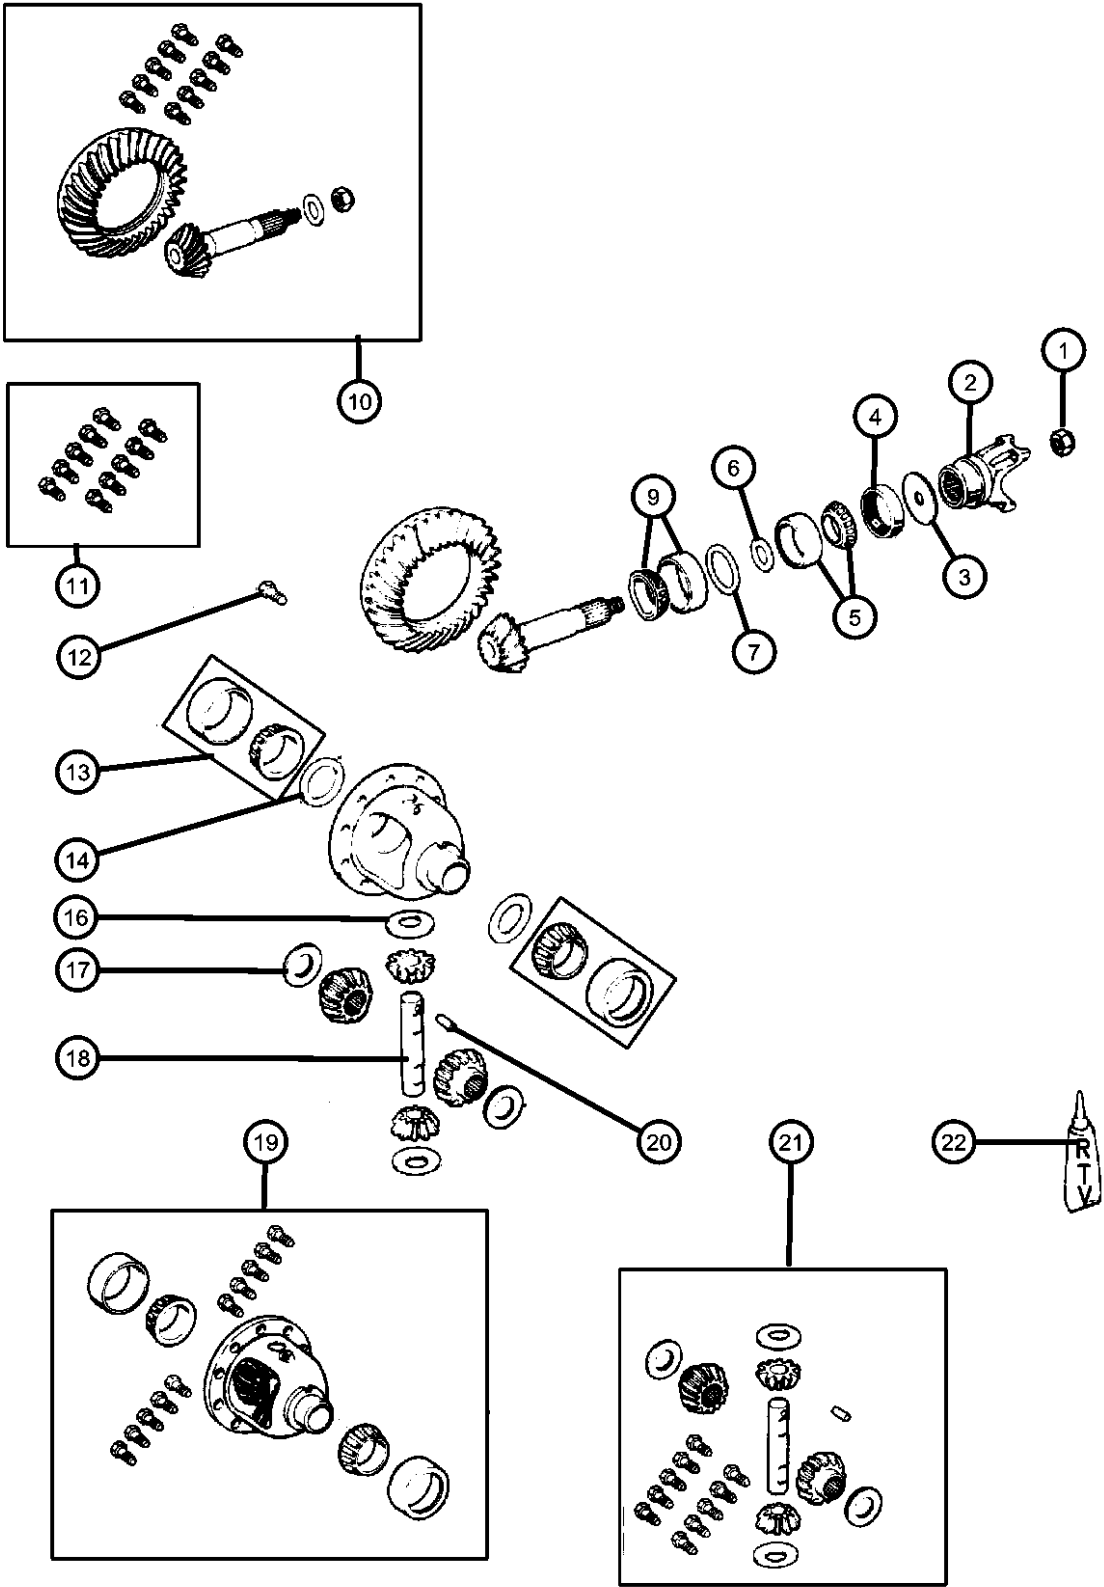

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	U						[.122" ]
	05017232AA	1	J						[.123" ]
		1	U						[.123" ]
	05017233AA	1	J						[.124" ]
		1	U						[.124" ]
	05017234AA	1	J						[.125" ]
		1	U						[.125" ]
	05017235AA	1	J						[.126" ]
		1	U						[.126" ]
	05017236AA	1	J						[.127" ]
		1	U						[.127" ]
	05017237AA	1	J						[.128" ]
		1	U						[.128" ]
	05017238AA	1	J						[.129" ]
		1	U						[.129" ]
	05017239AA	1	J						[.130" ]
		1	U						[.130" ]
	05017240AA	1	J						[.131" ]
		1	U						[.131" ]
	05017241AA	1	J						[.132" ]
		1	U						[.132" ]
	05017242AA	1	J						[.133" ]
		1	U						[.133" ]
	05017243AA	1	J						[.134" ]
		1	U						[.134" ]
	05017244AA	1	J						[.135" ]
		1	U						[.135" ]
	05017245AA	1	J						[.136" ]
		1	U						[.136" ]
	05017246AA	1	J						[.137" ]

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

Differential,Front Axle  
Figure 2-610

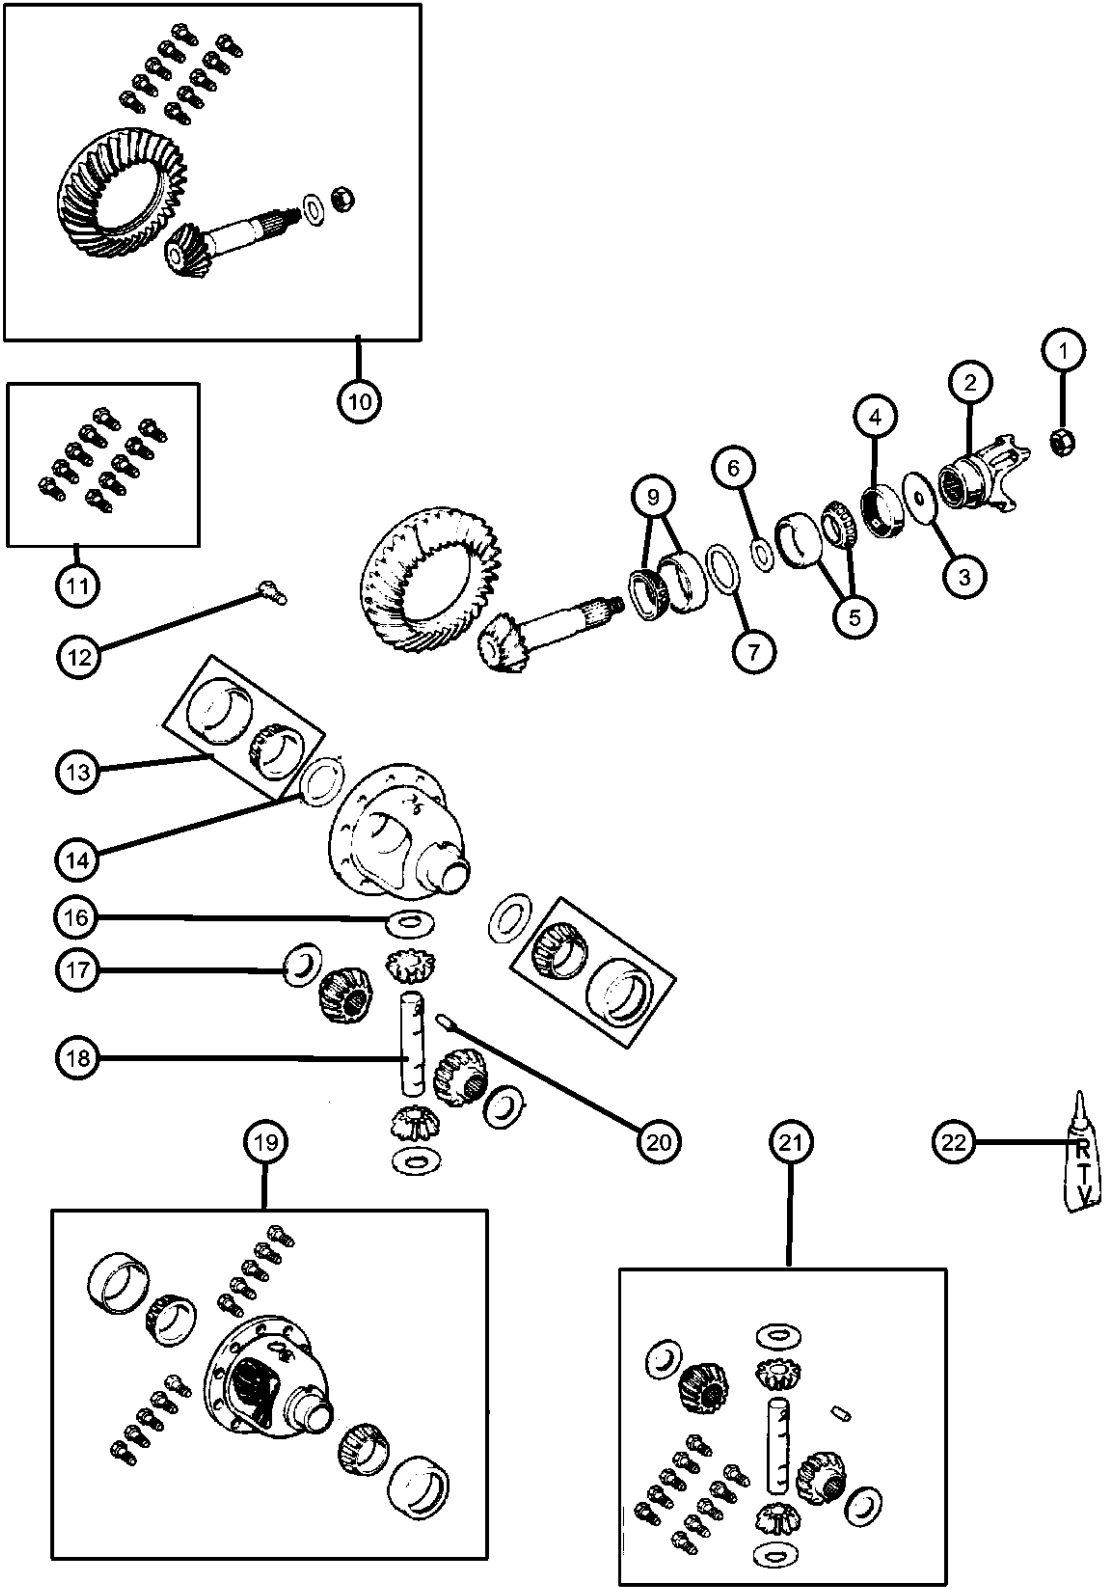


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	U						[.137" ]
	05017247AA	1	J						[.138" ]
		1	U						[.138" ]
	05017248AA	1	J						[.139" ]
		1	U						[.139" ]
	05017249AA	1	J						[.140" ]
		1	U						[.140" ]
	05017250AA	1	J						[.141" ]
		1	U						[.141" ]
	05017251AA	1	J						[.142" ]
		1	U						[.142" ]
	05017252AA	1	J						[.143" ]
		1	U						[.143" ]
	05017253AA	1	J						[.144" ]
		1	U						[.144" ]
	05017254AA	1	J						[.145" ]
		1	U						[.145" ]
	05017255AA	1	J						[.146" ]
		1	U						[.146" ]
	05017256AA	1	J						[.147" ]
		1	U						[.147" ]
	05017257AA	1	J						[.148" ]
		1	U						[.148" ]
-15									SHIM KIT, Differential
	05066539AA	1	J						Contains 40 Shims
		1	U						Contains 40 Shims
16									WASHER, Pinion Gear
	J8120831	2	J						Thrust
		2	U						Thrust
17									WASHER, Side Gear

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Differential,Front Axle  
Figure 2-610

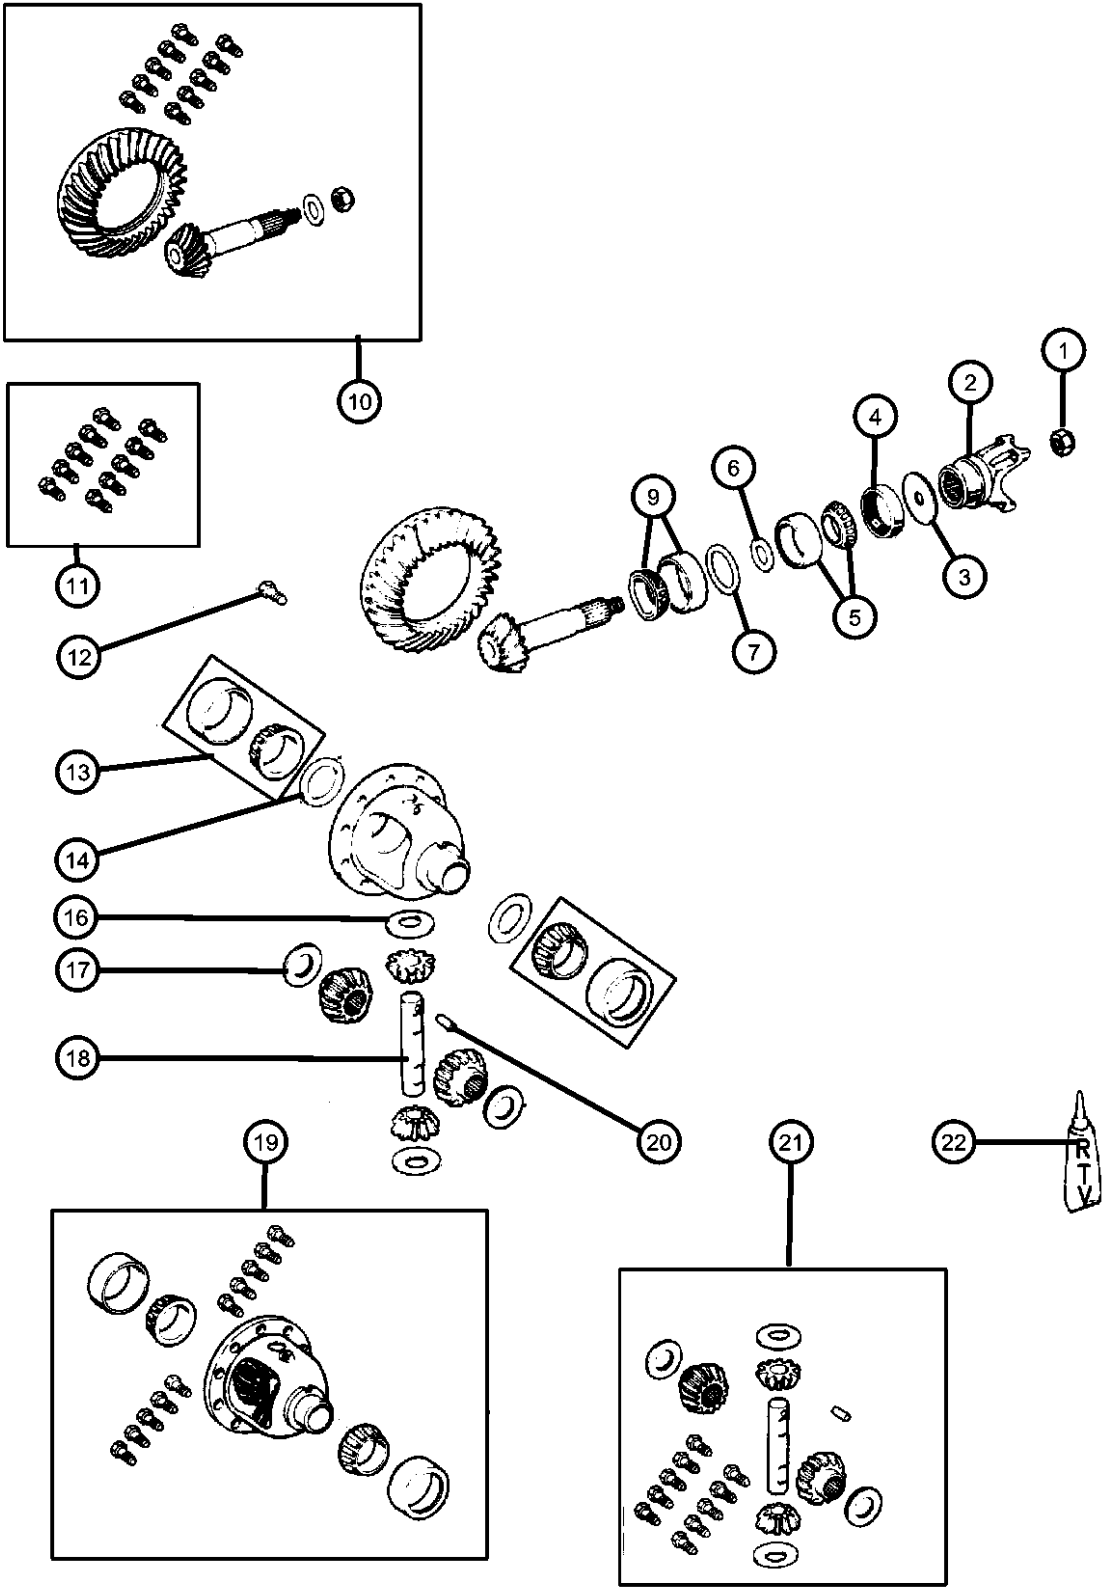


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
18	J8120832	2	J						Thrust
		2	U						Thrust
									SHAFT, Differential
	05003840AA	1	J						
19		1	U						CASE, Differential
	05066529AA	1	U						With Internal Parts
20		1	J						With Internal Parts
									PIN, Differential Shaft
21	01791563	1	J						
		1	U						
22	05066530AA	1	U						GEAR KIT, Center Differential
		1	J						
22	05010884AA	1	J						SEALANT, RTV
		1	U						

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Skid Plate,Front Axle  
Figure 2-810

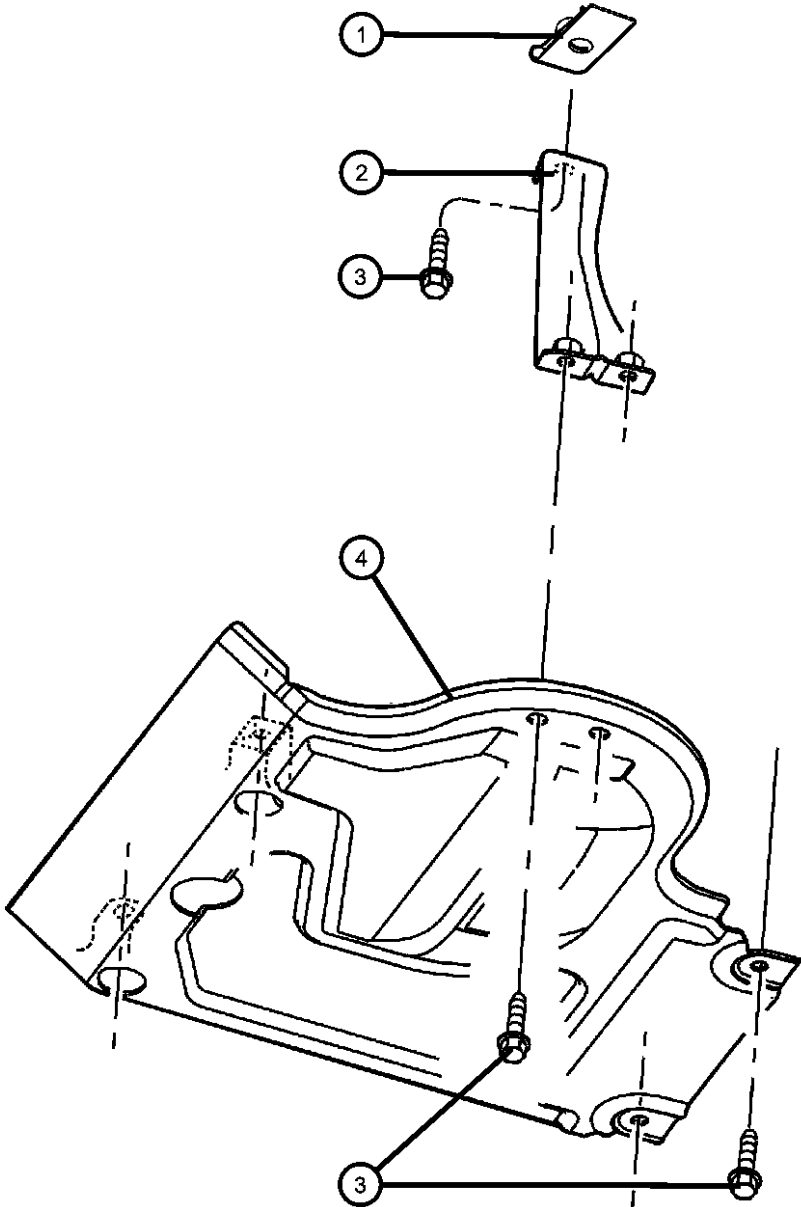

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1		1							NUT, U Type, M10 x 1.50, (NOT SERVICED)
2									BRACKET, Skid Plate
	52128544AA	1	J, U						Left
	52128545AA	1	J, U						Right
3	06101060	4	J, U						SCREW AND WASHER, Hex Head, M10x1.5x30
4	52128539AC	1	J, U						SKID PLATE, Front

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	







# Group - 3

## Rear Axle

### Group - 3 Rear Axle

Illustration Title	Group-Fig. No.
<b>Rear Axle</b> Axle Assembly,Rear,Corporate 8.25 [DRA] .....	Fig. 3 - 110
<b>Differential and Housing</b> Axle,Rear,with Differential and Housing,Corporate 8.25 [DRA].....	Fig. 3 - 210
<b>Rear Axle Vent</b> Vent,Rear Axle .....	Fig. 3 - 310

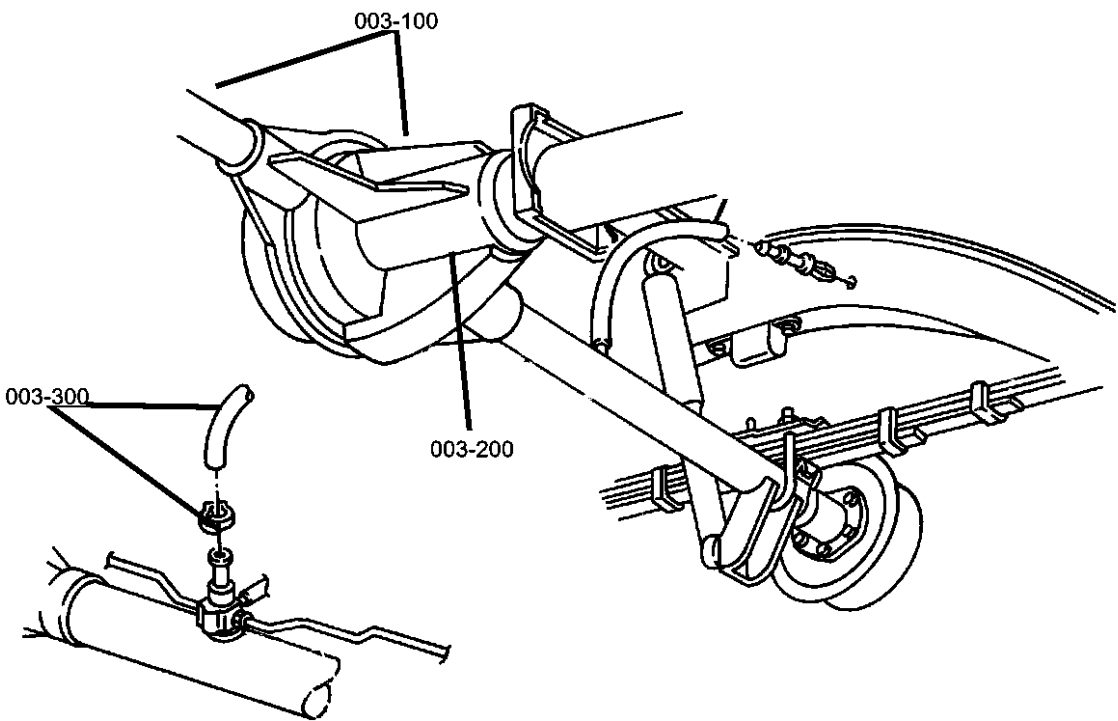

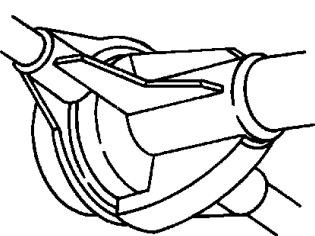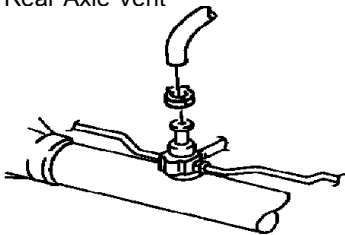
<b>003-100</b> Rear Axle	<b>003-200</b> Differential and Housing	<b>003-300</b> Rear Axle Vent	
			

Axle Assembly,Rear,Corporate 8.25 [DRA]  
Figure 3-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Codes  
[BRE]=Brakes - 4-Wheel Disc  
[BRY]=Brakes - Anti-Lock 4-Wheel Disc  
[DME]=Axle Ratio - 3.73  
[DMF]=Axle Ratio - 4.10  
[DRA]=Axle - Rear, Corporate 8.25  
[DSA]=Axle-Trac-Lok Differential

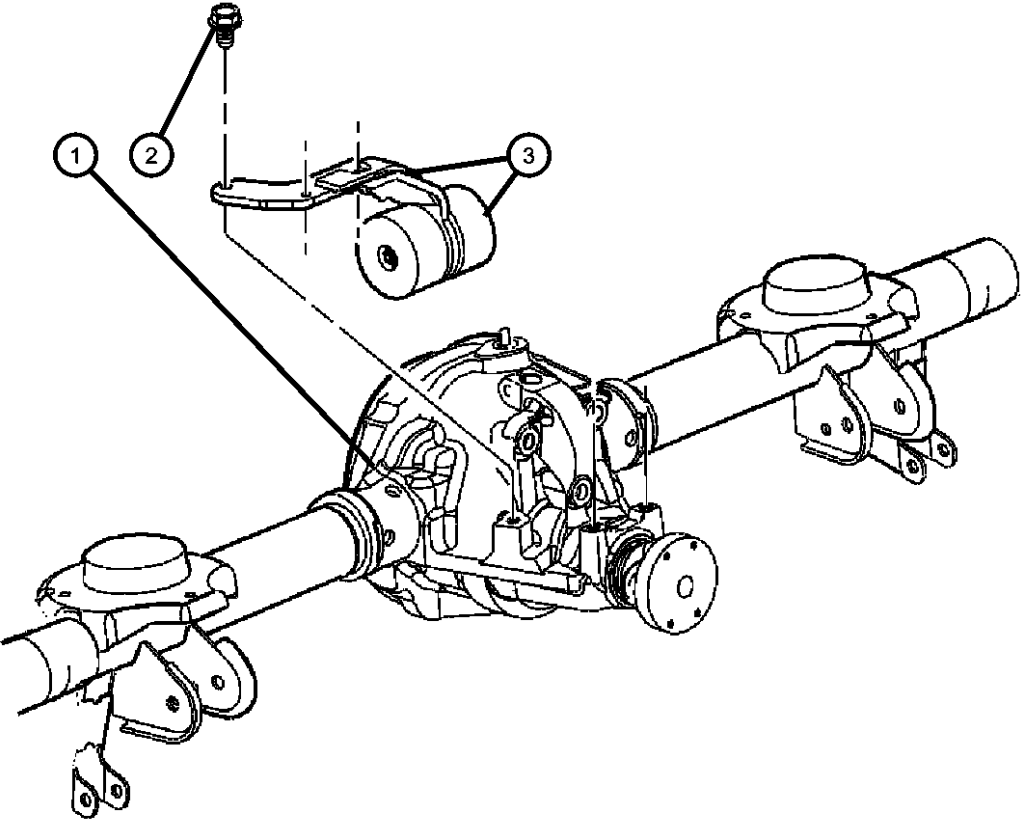

1									AXLE, Service Rear
	05102970AB	1							[DRA,DME,DSA] Tag 52114028AD
	04874469								Mopar SAE 75W-140 Synthetic Gear and Axle Lube Quart
	68003055AA								Mopar SAE 75W-140 Synthetic Gear and Axle Lube 16 Gallon Keg
	05102232AA								Mopar SAE 75W-90 Synthetic Gear Lube Quart - American Axle Manufacturing Axles
	05102971AB	1							[DRA,DME] Tag 52114030AD
	04874469								Mopar SAE 75W-140 Synthetic Gear and Axle Lube Quart
	68003055AA								Mopar SAE 75W-140 Synthetic Gear and Axle Lube 16 Gallon Keg
	05102232AA								Mopar SAE 75W-90 Synthetic Gear Lube Quart - American Axle Manufacturing Axles
	05102973AB	1							[DRA,DMF,DSA,ED1,ENJ] Tag 52114032AD
	05102974AA	1							[DRA,DMF,ED1,ENJ] Tag 52114034AD
	05104895AA	1							[DRA,DMF,ENR] Tag 52114170AC
	05104896AA	1							[DRA,DMF,DSA,ENR] Tag 52114169AC
2	06507369AA	3							BOLT, Axle Damper, Mounting
3	52111360AE	1							DAMPER, Axle

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD	Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed	Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd.	Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic	5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Axle,Rear,with Differential and Housing,Corporate 8.25 [DRA]  
 Figure 3-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note:Sales Codes;  
 [DME]=Axle Ratio - 3.73  
 [DMF]=Axle Ratio - 4.10  
 [DRA]=Axle - Rear,Corporate 8.25  
 [DSA]=Axle - Anti-Spin Differential

1	06028041	1							NUT, Pinion Yoke
2	02070117	1							WASHER, Pinion Yoke
3	52105065	1							FLANGE, Driveshaft Yoke
4	52070339AA	1							SEAL, Drive Pinion
5	02070316	1							BEARING, Drive PinionFront
6	02070317	1							CUP, Pinion BearingFront
7	05086370AB	1							HOUSING, Axle
8	04137696AB	1							BOLT, Axle Vent
9	06036533AA	8							STUD, Axle Housing to Backing Plate, Mounting
10	03507898AB	2							BEARING, Wheel
11	52070427AB	2							SEAL, Axle Drive Shaft
12	52070350AB	2							SHAFT, Axle
13	06036123AA	10							STUD, Wheel
14	03432695	4							SCREW, Hex Head, .50-13x2.38
15	05010884AA	1							SEALANT, RTV
16	03723681AC	1							COVER, Differential
17	06033043	10							SCREW AND WASHER, Hex Flange Head, .312-18x.562, Differential Cover, Mounting
18	52070428AA	1							PLUG, Differential Cover
19	03507876	2							ADJUSTER, Differential Bearing
20	03723859	2							LOCK, Differential Bearing
21	06023092	2							SCREW AND WASHER, Hex Head, .25-20x.50, Differential Bearing Lock, Mounting
22	03723569	2							CUP, Differential Side
23	01790541	2							BEARING, Differential
24									BOLT, Ring Gear

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EKO = All 3.7L	DBB = All Manual Transmissions
				EDO = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part

Axle,Rear,with Differential and Housing,Corporate 8.25 [DRA]  
 Figure 3-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	06507634AA	10							Hex Head-M10x1.00x21.00MM
	06508058AA	1							Torx Head-M10x1.00x21.00MM
25	52069657	1							SHAFT, Differential Pinion, Also Serviced In Differential Gear Package, Without [DSA]
26	52069427	1							CASE, Differential
	52069428	1							With 3/8-24X.840" Ring Gear Bolts-Without [DSA] With Internal Parts
	52114057AA	1							With 3/8-24X.840" Ring Gear Bolts-Without [DSA] Without Internal Parts
-27	04384226	1							With M10x1.00x21.00MM Ring Gear Bolts-Without [DSA] With Internal Parts
28	03507724	1							TONE RING, Sensor
29	04720973AB	1							SCREW, Hex Head, .312-18x1.80, Also Serviced in Differential Gear Package, Without [DSA] Differential Pinion Shaft, Mounting
	05140914AB	1							GEAR KIT, Ring And Pinion
	05018719AA	1							[DMF] With 3/8-24X.840" Ring Gear Bolts
	05135809AB	1							[DMF] With M10x1.00x21.00MM Ring Gear Bolts
30	02800484	1							[DME] With 3/8-24X.840" Ring Gear Bolts
31	02800485	1							[DME] With M10x1.00x21.00MM Ring Gear Bolts
32	03723520	AR							BEARING, Drive PinionRear
-33	03723521	AR							CUP, Pinion BearingRear
-34	03723522	AR							SHIM, Drive Pinion Bearing, 0.020
-35	03723523	AR							SHIM, Drive Pinion Bearing, 0.021
-36	03723524	AR							SHIM, Drive Pinion Bearing, 0.022
-37	03723525	AR							SHIM, Drive Pinion Bearing, 0.023
									SHIM, Drive Pinion Bearing, 0.024
									SHIM, Drive Pinion Bearing, 0.025

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16v	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
			EDO = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Axle,Rear,with Differential and Housing,Corporate 8.25 [DRA]  
 Figure 3-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-38	03723526	AR							SHIM, Drive Pinion Bearing, 0.026
-39	03723527	AR							SHIM, Drive Pinion Bearing, 0.027
-40	03723528	AR							SHIM, Drive Pinion Bearing, 0.028
-41	03723529	AR							SHIM, Drive Pinion Bearing, 0.029
-42	03723530	AR							SHIM, Drive Pinion Bearing, 0.030
-43	03723531	AR							SHIM, Drive Pinion Bearing, 0.031
-44	03723532	AR							SHIM, Drive Pinion Bearing, 0.032
-45	03723533	AR							SHIM, Drive Pinion Bearing, 0.033
-46	03723534	AR							SHIM, Drive Pinion Bearing, 0.034
-47	03723535	AR							SHIM, Drive Pinion Bearing, 0.035
-48	03723536	AR							SHIM, Drive Pinion Bearing, 0.036
-49	03723537	AR							SHIM, Drive Pinion Bearing, 0.037
-50	03723538	AR							SHIM, Drive Pinion Bearing, 0.038
51	03507575	1							SPACER, Drive Pinion Bearing
52	52069426	2							RETAINER, Axle Shaft
53	02852912	2							WASHER, Pinion Gear, Also Serviced In Differential Gear Package, Without [DSA]
54	02852912	2							PINION, Differential, Serviced In Differential Gear Package, (NOT SERVICED)
55	04883087AB	1							GEAR PACKAGE, Differential, Without [DSA]
56	04883087AB	1							GEAR, Differential, Serviced In Differential Gear Package, (NOT SERVICED)
57	04883085	1							WASHER PACKAGE, Side Gear Thrust, Also Serviced In Differential Gear Package, Without [DSA]
58	52098778AC	1							CASE, Differential
									With [DSA] With Internal Parts-With 3/8-24X.840" Ring Gear Bolts

LIBERTY (KJ)

SERIES	LINE
P = Limited	J = LHD (4WD)
H = Sport	U = RHD (4WD)
M = Renegade	T = LHD (2WD)

BODY
74 = 4 Door (104.3 WB)


ENGINE
ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI
EKG = Engine - 3.7L V6
ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel
ENR = Engine - 2.8L 4 Cyl Turbo Diesel
ENO = 4Cyl Turbo Diesel
EKO = All 3.7L
EDO = All 2.4L

TRANSMISSION
DDD = Transmission - 5-Speed HD Manual
DDK = Transmission - 5-Speed HD Manual
DG4 = Transmission-Multi-Speed Auto, 45RFE
DG6 = Transmission-4-Spd. Automatic, 42RLE
DGQ = Transmission-5-Spd Automatic 5-45RFE
DBB = All Manual Transmissions
DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part


Axle,Rear,with Differential and Housing,Corporate 8.25 [DRA]  
 Figure 3-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	52098778AE	1							With [DSA] With Internal Parts-With M10x1.00x21.00MM Ring Gear Bolts
59	68004687AA	1							SCREW, Hex Head, With [DSA]
60	05252506	1							DISC AND PLATE KIT, Differential, With [DSA]

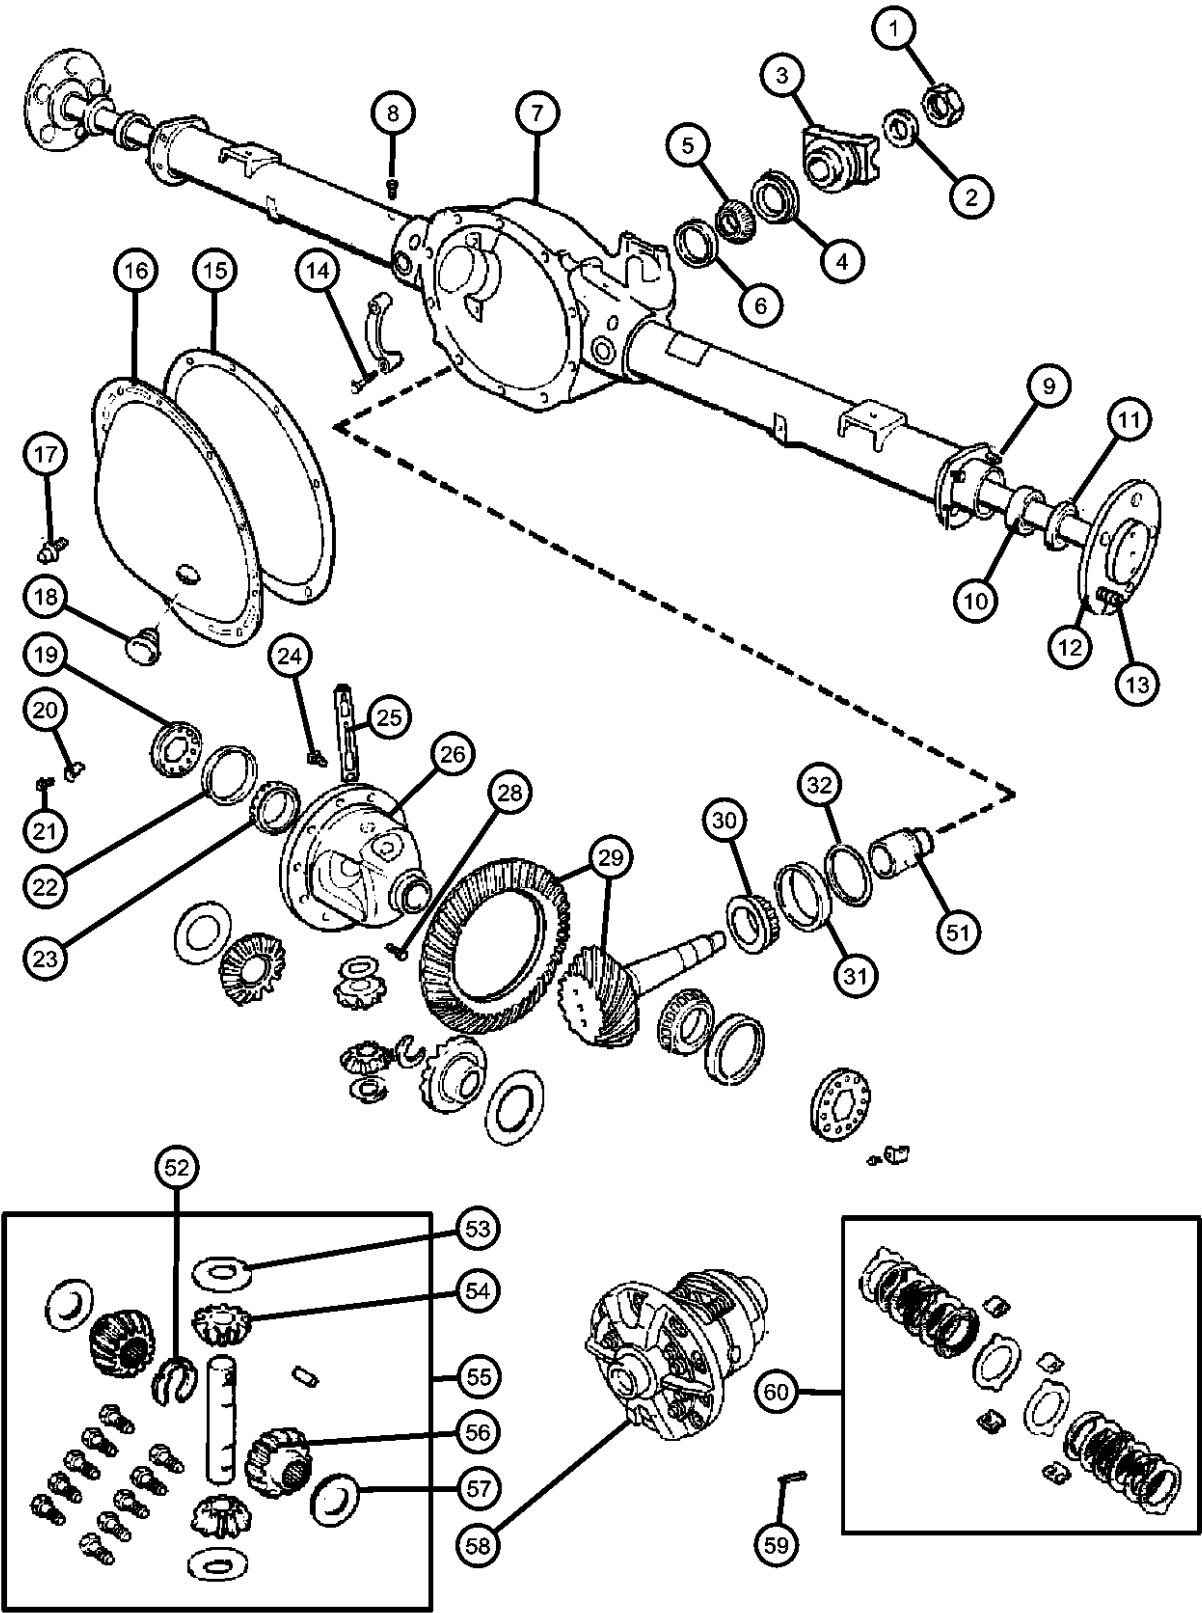

<b>LIBERTY (KJ)</b>					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

Vent,Rear Axle  
Figure 3-310

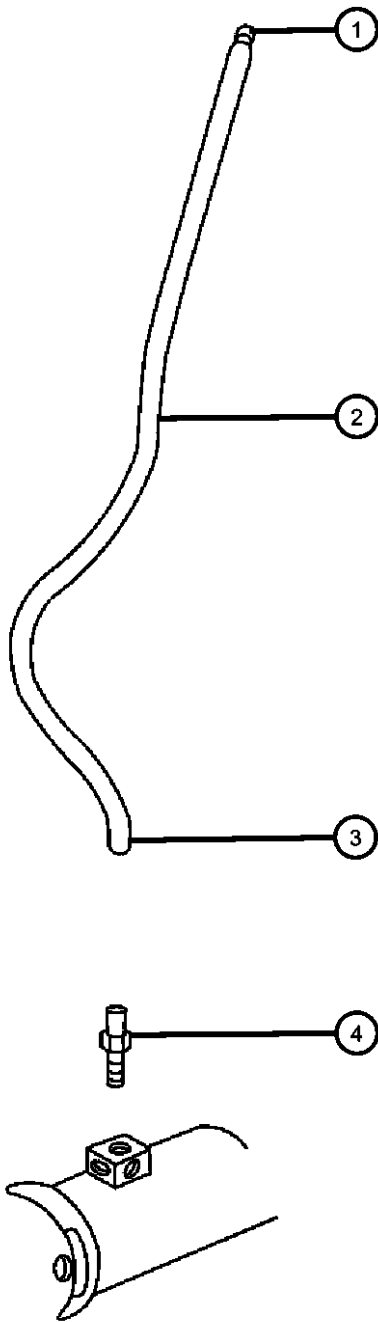

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:Sales Codes;  
[DBB]=Transmissions - All Manual  
[DG0]=Transmissions - All Automatic  
[DG4]=Transmission - Multi-Speed Automatic,45RF  
[DG6]=Transmission - 4 Speed Automatic,42RL  
[DRA]=Axle - Rear,Corporate 8.25

1	J5352955	1							VENT, Axle
2	HFV00516AB	1							HOSE, Fuel And Vapor, 25 Foot Roll 5/16"
3	06032633	1							CLIP, Vent Tube, Axle Vent Hose, Mounting
4	04137696AB	1							BOLT, Axle Vent

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	


AR = use ase required - = Non illustrated part


# Group - 4

## Parking Brake

### Group - 4 Parking Brake


Illustration Title	Group-Fig. No.
<b>Parking Brake Lever and Cables</b>	
Parking Brake Lever and Cables.....	Fig. 4 - 110
Parking Brake Assembly,Rear,Disc.....	Fig. 4 - 120

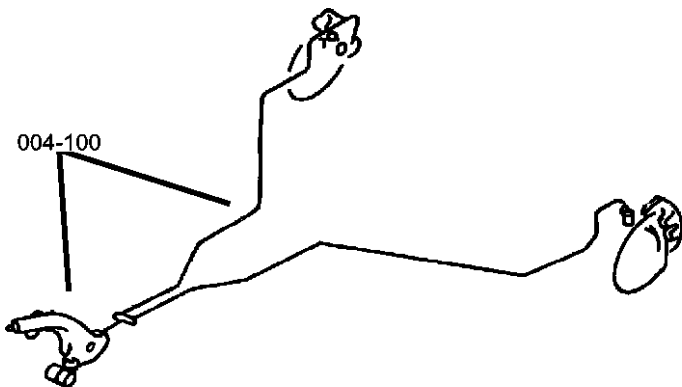

<b>004-100</b> Parking Brake Lever and Cables			
			



Parking Brake Lever and Cables  
Figure 4-110

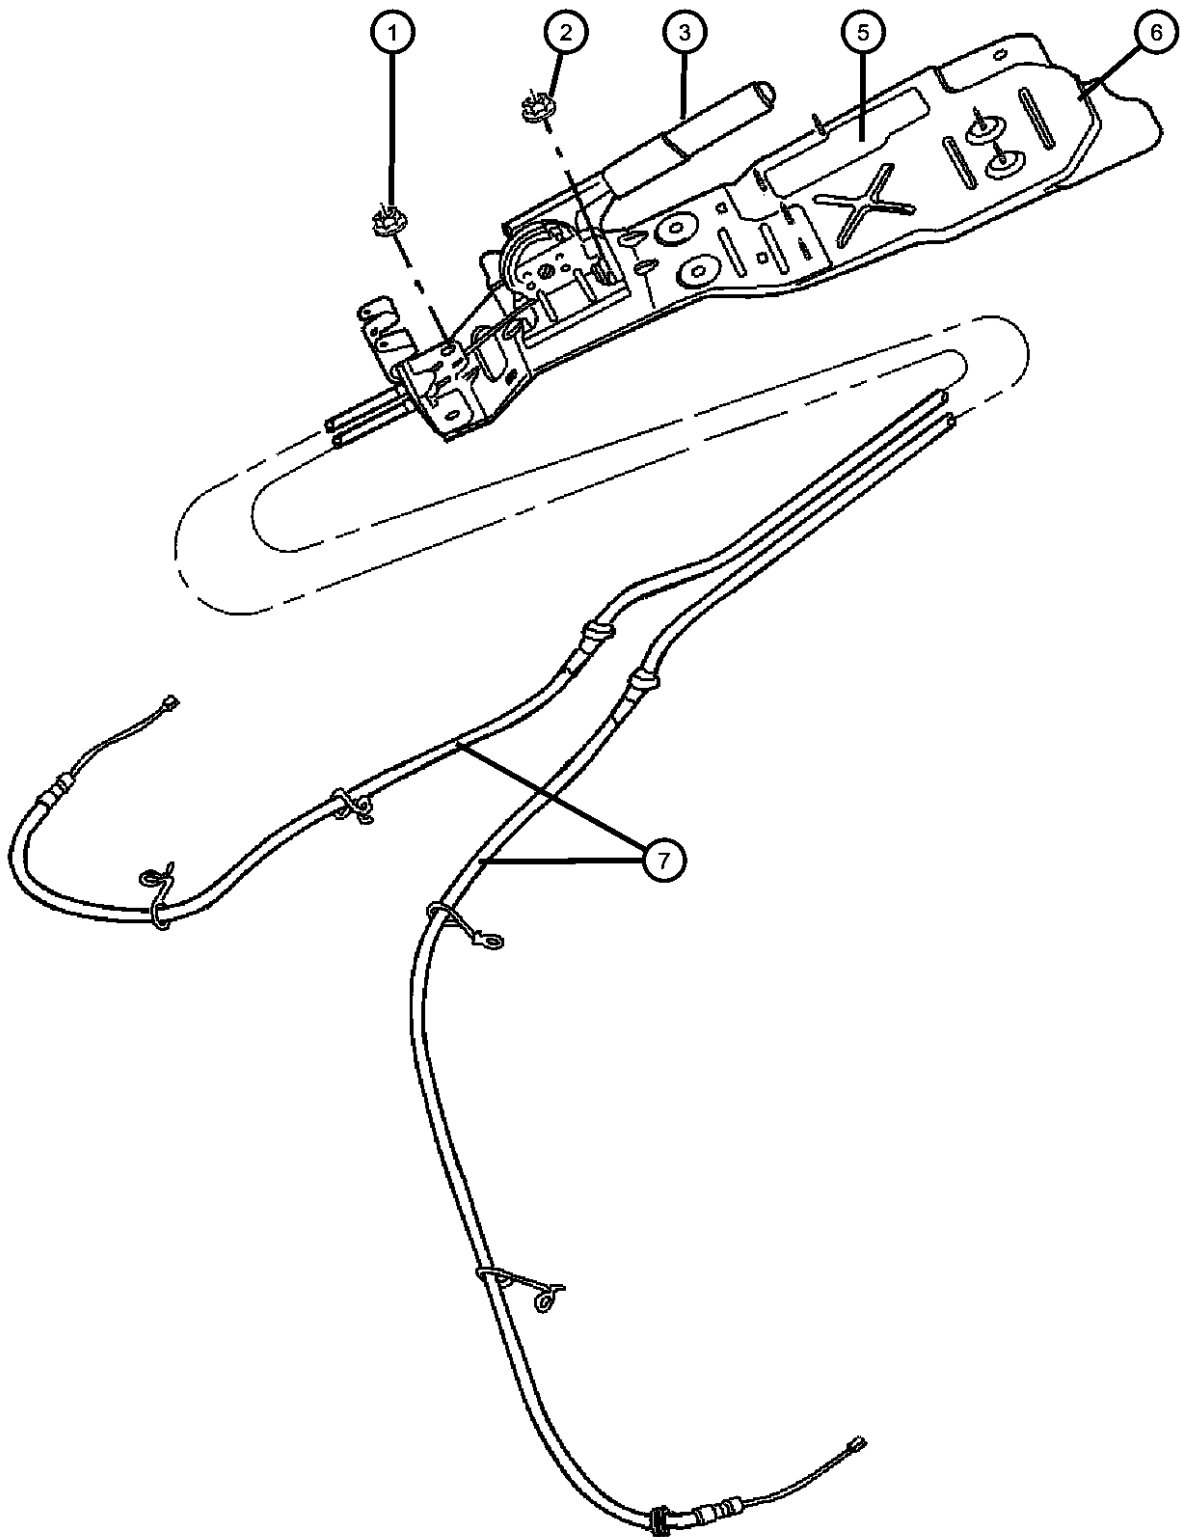


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:Sales Codes; [DD0]=Transmissions - All 5-Speed Manual [DG0]=Transmissions - All Automatic									
1	06501483	4							NUT, Hex Flange, M8x1.25, Park Brake Sled to Floor Pan, Mounting
2	06104716AA	4							NUT, Park Brake Lever to Sled, Mounting
3	52128860AB	1							LEVER, Park Brake
-4	52127960	1							SWITCH, Parking Brake, Indicator Light
5									SEAL, Parking Brake Housing
	52128503AA	1							[DG0]
	52128504AA	1							[DD0]
6									BRACKET, Parking Brake
	52128712AC	1							[DD0]
	52128714AC	1							[DG0]
7									CABLE, Parking Brake
	52128510AE	1							Right
	52128511AD	1							Left
-8	56021252	1							CLIP, Parking Brake Cable, Anti-Rotation [DD0]
-9	56021252	1							SCREW, Hex Flange Head, M8x1.25x25.00, (NOT SERVICED)
-10									CLIP, Cable Routing
	52128612AB	1							Holds Cable to Control Arm, Right
	52128613AB	1							Holds Cable to Control Arm, Left

LIBERTY (KJ)									
SERIES	LINE			BODY		ENGINE		TRANSMISSION	
P = Limited	J = LHD (4WD)			74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)					EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)					ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
						ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
						EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
						EK0 = All 3.7L		DBB = All Manual Transmissions	
						ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Parking Brake Assembly,Rear,Disc  
Figure 4-120

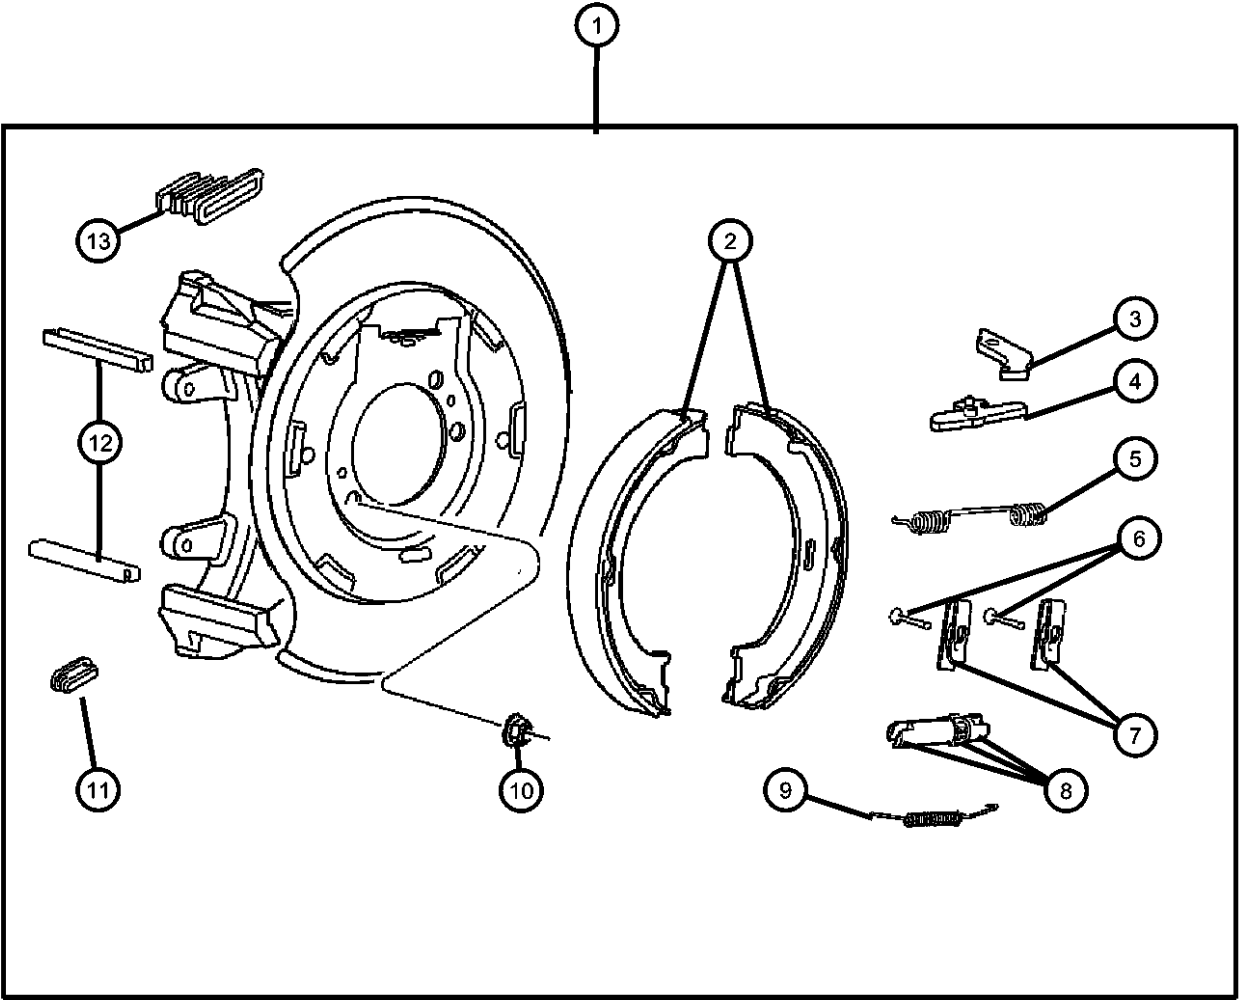


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									ADAPTER, Parking Brake
	52128414AB	1							Right
	52128415AB	1							Left
2	05093390AA	1							SHOE AND LINING KIT, Parking Brake
	BHKP7328								Mopar Parking Brake Hardware Kit
3	05093392AA	1							LEVER, Park Brake Adjusting
4									LEVER, Park Brake
	05093334AA	1							Right
	05093338AA	1							Left
5	05093393AA	1							SPRING, Park Brake Shoe Return
6	04762126	2							PIN, Brake Shoe Hold Down
7	04762125	2							CLIP, Parking Brake Hold Down
8	05093391AA	1							ADJUSTER, Parking Brake
9	04762116	1							SPRING, Park Brake Shoe Return
10	06036159AA	8							NUT, Hex, .375-24, Parking Brake Adapter, Mounting
11	04762121	1							PLUG, Brake Adjusting Hole
12	05093394AB	2							SLIPPER, Caliper
13	05093395AA	1							BOOT, Parking Brake Lever

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part







# Group - 5

## Service Brakes

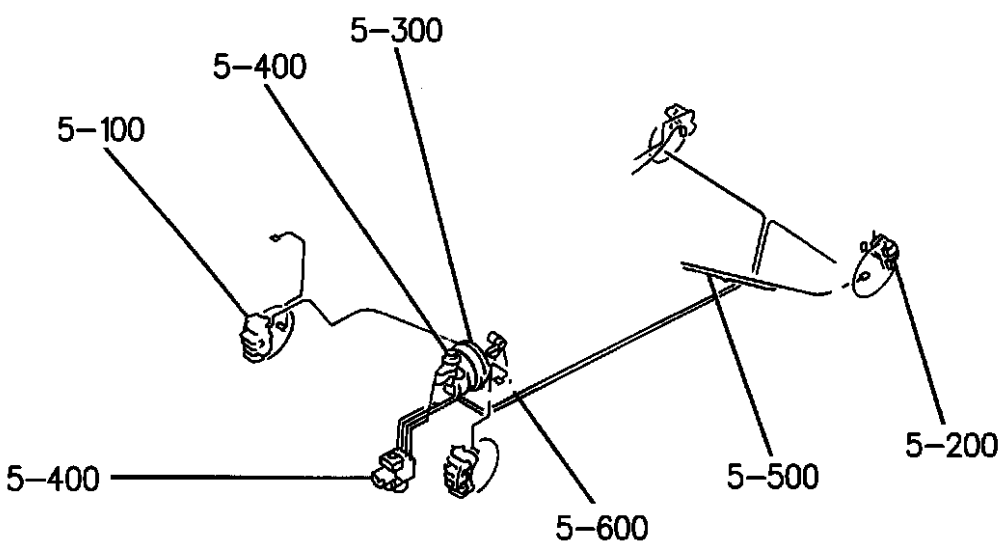


### Group - 5 Service Brakes

Illustration Title	Group-Fig. No.
<b>Front Brakes</b> Brakes,Front.....	Fig. 5 - 110
<b>Rear Brakes</b> Brakes,Rear,Disc.....	Fig. 5 - 210
<b>Power Brake Booster</b> Booster,Power Brake .....	Fig. 5 - 310
<b>Brake Master Cylinder</b> Master Cylinder,Brake .....	Fig. 5 - 410
<b>Brake Lines and Hoses</b> Brake Lines,Front,LHD .....	Fig. 5 - 510
Brake Lines,Front,RHD .....	Fig. 5 - 520
Brake Lines,Rear.....	Fig. 5 - 530
<b>Brake Pedals</b> Pedals,Brake and Clutch .....	Fig. 5 - 610
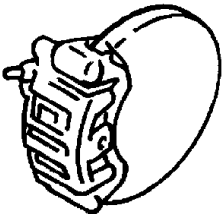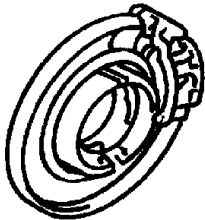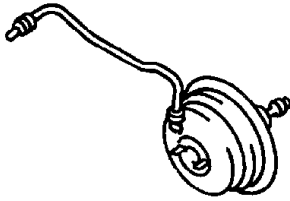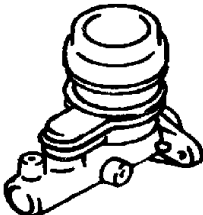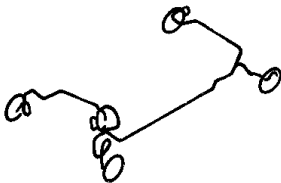
<b>005-100</b> Front Brakes 	<b>005-200</b> Rear Brakes 	<b>005-300</b> Power Brake Booster 	<b>005-400</b> Brake Master Cylinder 
<b>005-500</b> Brake Lines and Hoses 	<b>005-600</b> Brake Pedals 		

Brakes,Front  
Figure 5-110

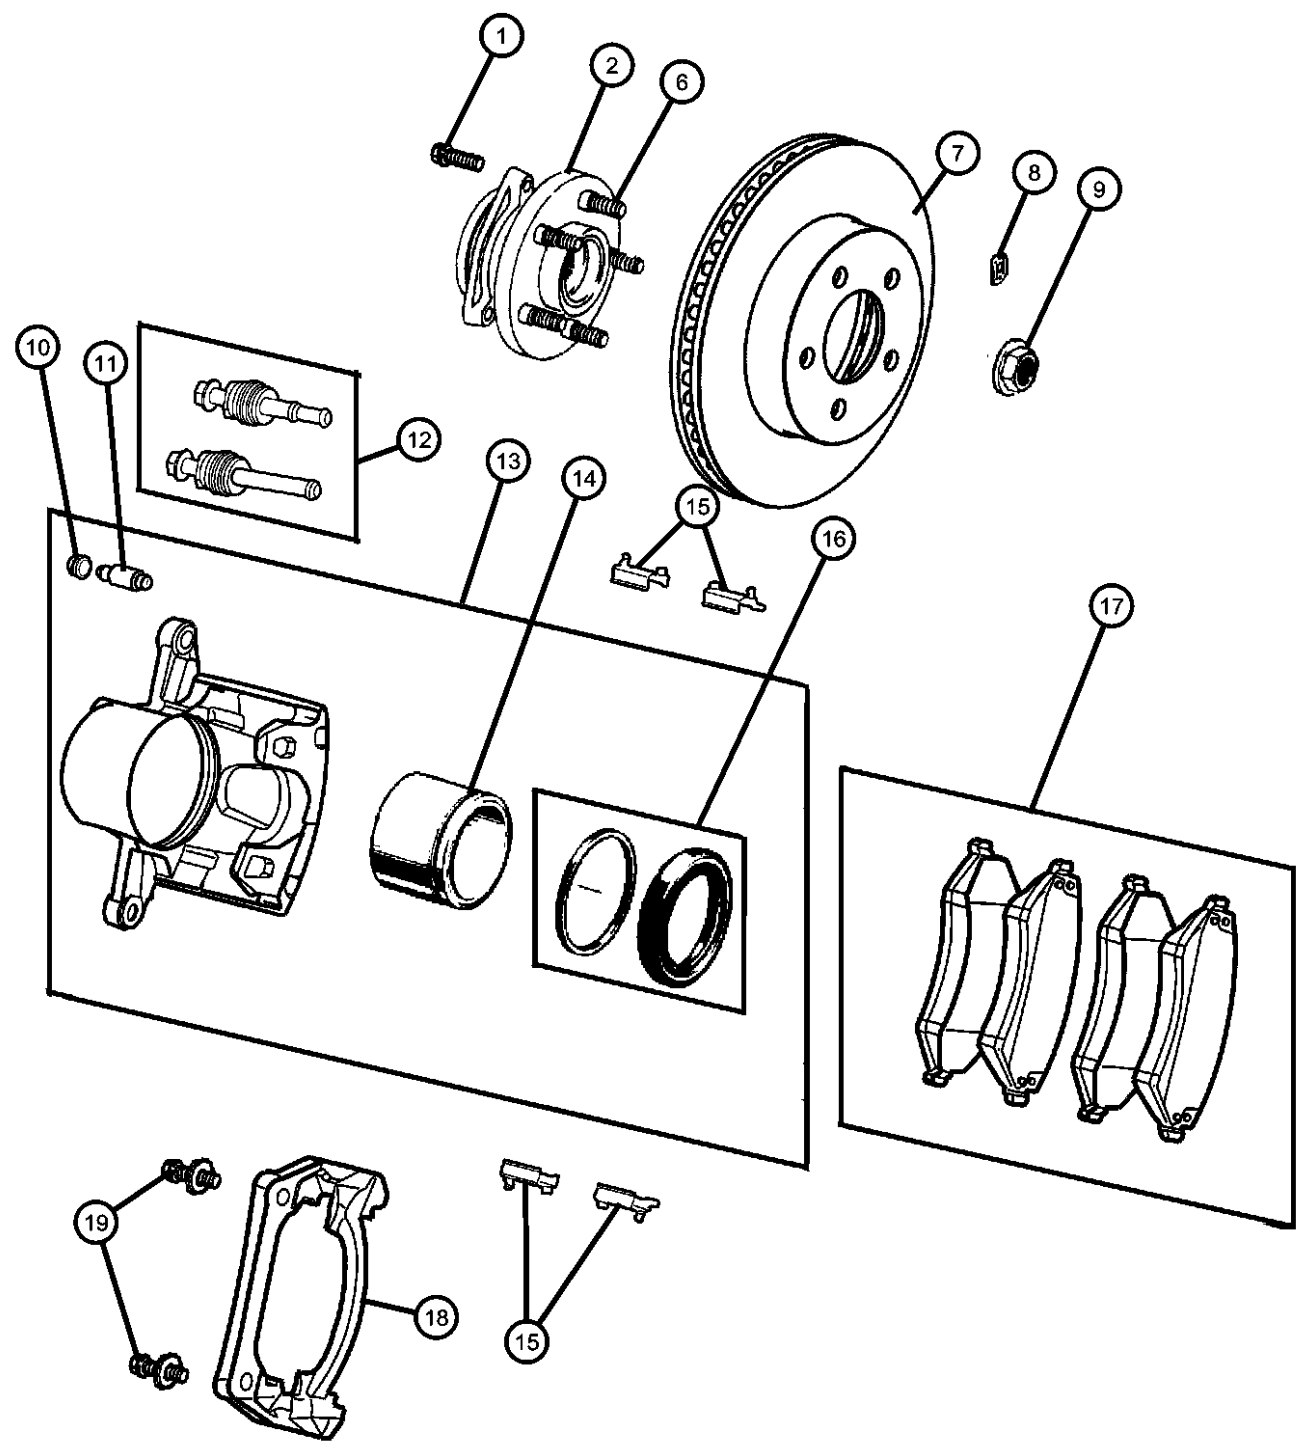


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:Sales Codes; [BRE]=Brakes - 4 Wheel Disc [BRY]=Brakes - Anti-Lock 4 Wheel Disc									
1	06503088	3							BOLT, Knuckle to Bearing Attaching, M12 x 1.75 x 43.00
2									HUB AND BEARING, Brake
	52128352AB	1							[BRE], Right or Left
	52128692AB	1							[BRY], Right
	52128693AB	1							[BRY], Left
-3									SENSOR, Anti-Lock Brakes
	52128694AB	1							Right
	52128695AB	1							Left
-4	05175374AA	1							BOLT, ABS Sensor, Mounting
-5	52128584AA	1							CLIP, Wiring, [BRY] Sensor Wire to Knuckle, Mounting
6	06036388AA	5							BOLT, Hub and Rotor
7	52128247AA	1							ROTOR, Brake
	V5018247AB								Mopar V-Line Alternative Brake Rotors
8	06031635	1							NUT, Push
9									NUT, Hex
	06506454AA	2	J, U						Halfshaft Retention
	06506633AA	2	T						
10	04238717	1							CAP, Bleeder
11	03780788	1							SCREW, Bleeder
12	05019987AA	1							PIN KIT, Disc Brake
13									CALIPER, Disc Brake
	05066422AA	1							Right
	VK642223AA								Mopar Loaded Brake Caliper Kit (2 Calipers, Brake Friction)
	05066423AA	1							Left
	VK642223AA								Mopar Loaded Brake Caliper Kit (2 Calipers, Brake Friction)
14	05066425AA	1							PISTON, Brake

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
				EDO = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Brakes,Front  
Figure 5-110

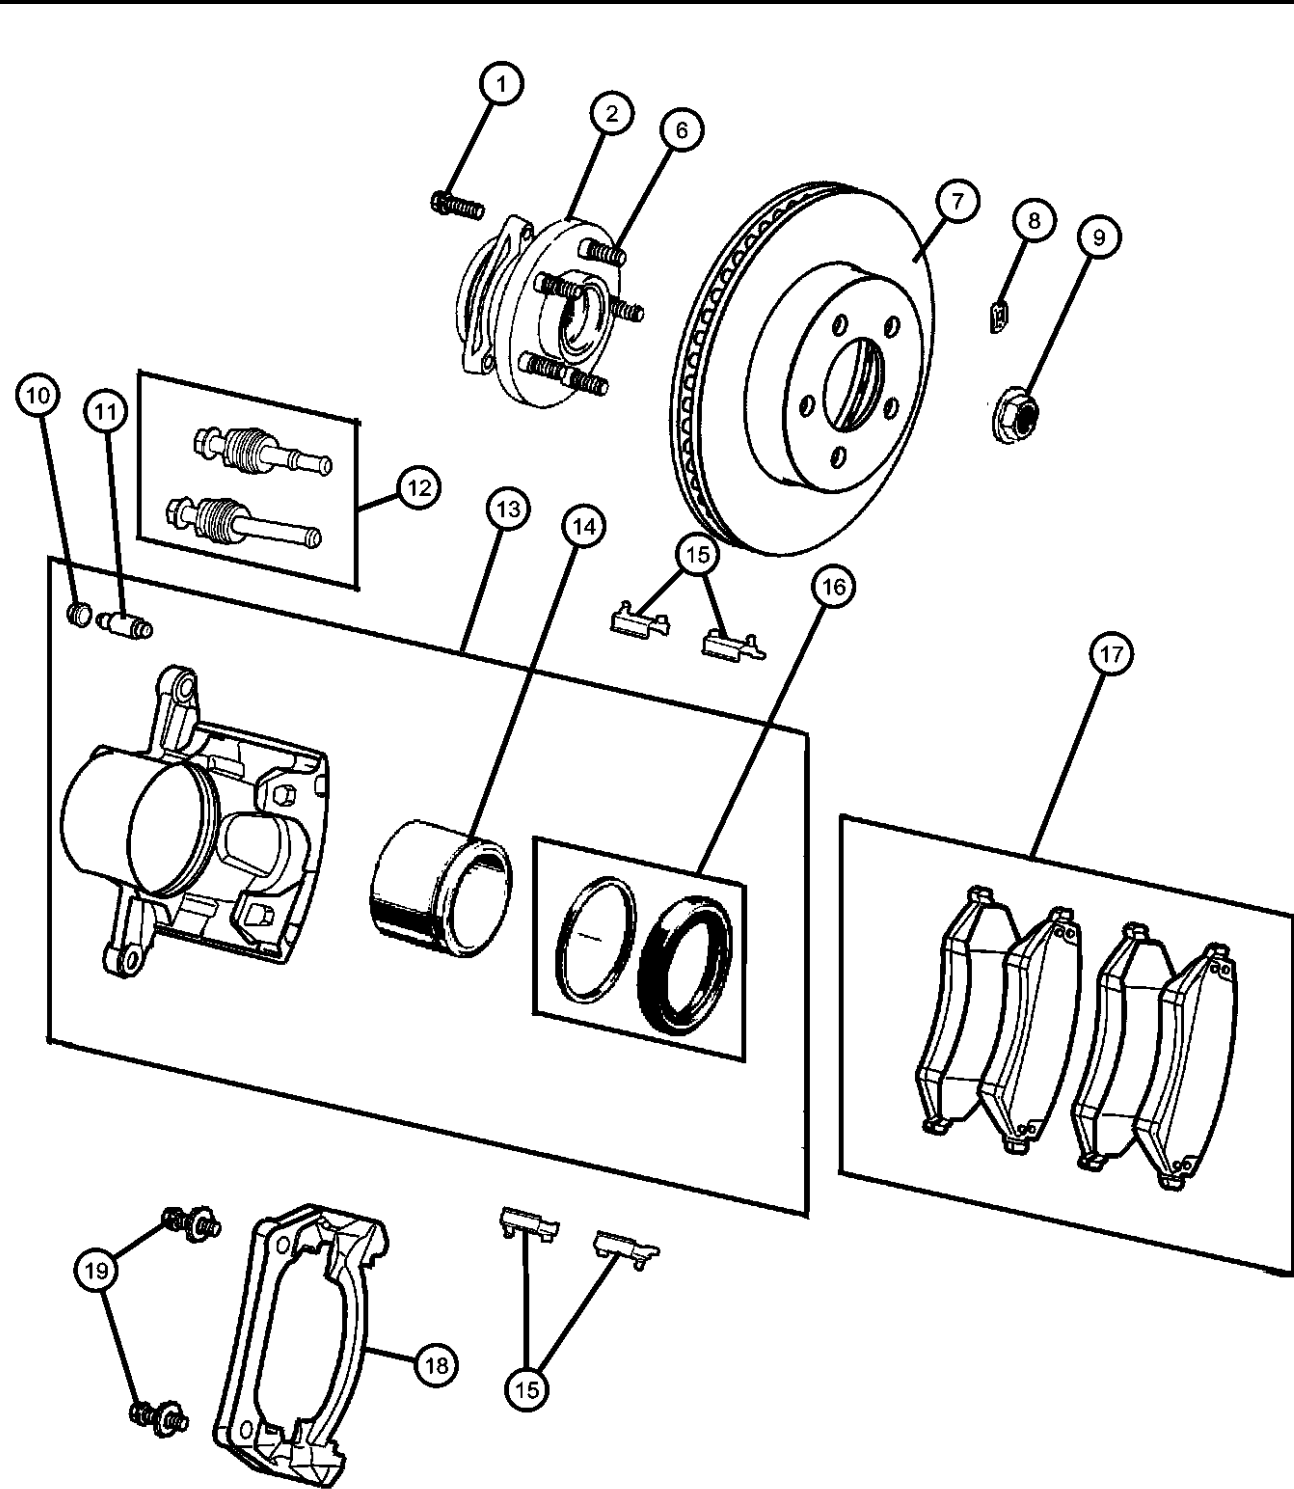ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
									
15	05019985AB	1							CLIP PACKAGE, Contains 4 Clips
16	05066426AA	1							BOOT AND SEAL, Disc Brake
17									PAD KIT, Front Disc Brake
	05066427AA	1							[BRE,BRY] B,C,U Without [ABB]
	VKJ08247								Make It New Brake Kits
	V3016427								Mopar V-Line Alternative Part Ceramic
	VOE08247								Make It Original Brake Kit
	VCKJ8247								Make It Ceramic Brake Kit
	V1013427								Mopar V-Line Alternative Part
	BHKH5665								Mopar V-Line Alternative Part Disc Hardware
	BHKH5082								Mopar V-Line Alternative Part Caliper Bolts
	VK642223AA								Mopar Loaded Brake Caliper Kit (2 Calipers, Brake Friction)
	05096349AA	1							[BRE,BRY,ABB] B
	BHKH5665								Mopar V-Line Alternative Part Disc Hardware
	BHKH5082								Mopar V-Line Alternative Part Caliper Bolts
	V1016349								Mopar V-Line Alternative Part
	05271808AA	1							Mexico Only
18	05066428AA	1							ADAPTER, Disc Brake CaliperRight or Left
19	06102149AA	2							BOLT, Caliper, Mounting

LIBERTY (KJ)  
SERIES  
P = Limited  
H = Sport  
M = Renegade


LINE  
J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

BODY  
74 = 4 Door (104.3 WB)

ENGINE  
ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L

TRANSMISSION  
DDD = Transmission - 5-Speed HD Manual  
DDK = Transmission - 5-Speed HD Manual  
DG4 = Transmission-Multi-Speed Auto, 45RFE  
DG6 = Transmission-4-Spd. Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic 5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

Brakes,Rear,Disc  
Figure 5-210

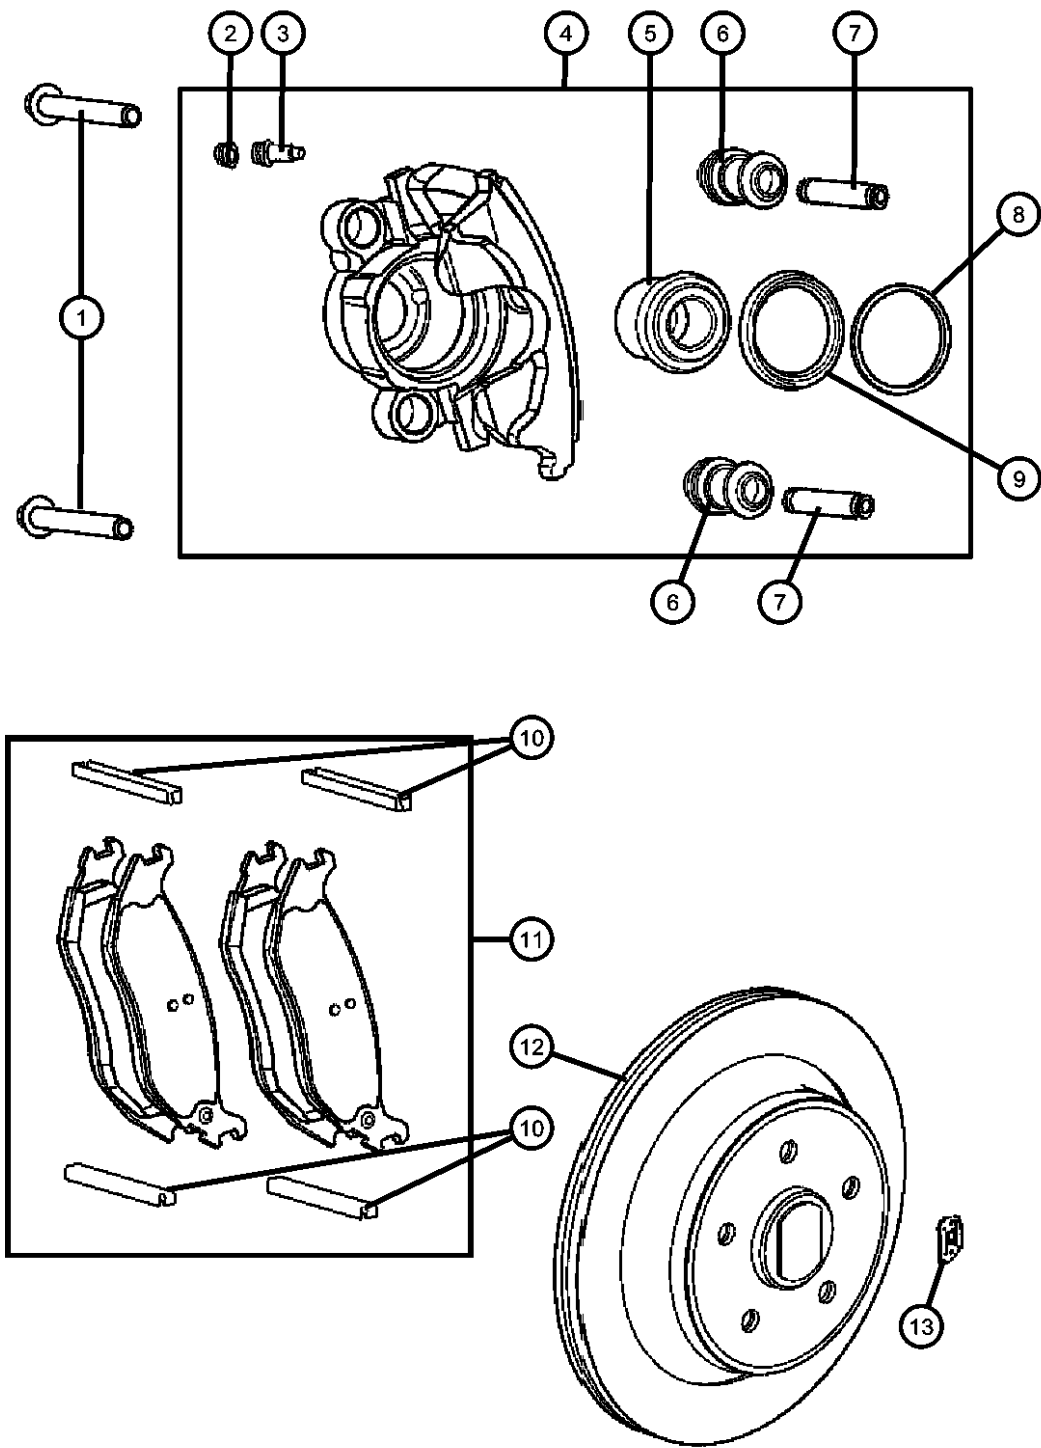


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	06507603AA	4							PIN, Caliper
2	05093278AA	1							CAP, Bleeder
3	J0920463	1							BLEEDER SCREW, Brake
4	05093274AA	1							CALIPER, Disc Brake
	VK327479AA								Right
	05093279AA	4							Mopar Loaded Brake Caliper Kit
	VK327479AA								(2 Calipers, Brake Friction)
									Left
									Mopar Loaded Brake Caliper Kit
									(2 Calipers, Brake Friction)
5	05093275AA	1							PISTON, Brake
6	04762106	2							BUSHING, Caliper
7	04762105	2							SLEEVE, Brake Caliper
8	05093276AA	1							SEAL, Caliper Piston
9	05093277AA	1							BOOT, Brake Piston
10	05093394AB	4							SLIPPER, Caliper
11	05083882AE	1							PAD KIT, Disc Brake
	V2013882								Mopar V-Line Alternative Part
	BHKH5695								Mopar V-Line Alternative Part
	BHKH5066								Disc Hardware
	V4010981								Mopar V-Line Alternative Part
	VCKJ0981AB								Caliper Bolts
	VRKJ3882AA								Mopar V-Line Alternative Part
									Ceramic
									Make It Ceramic Brake Kit
									Mopar Make it New Rear
12	52128411AB	2							ROTOR, Brake
	V5018411AA								Mopar V-Line Alternative Brake
									Rotors
13	06026430	4							NUT, Push

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Booster,Power Brake  
Figure 5-310

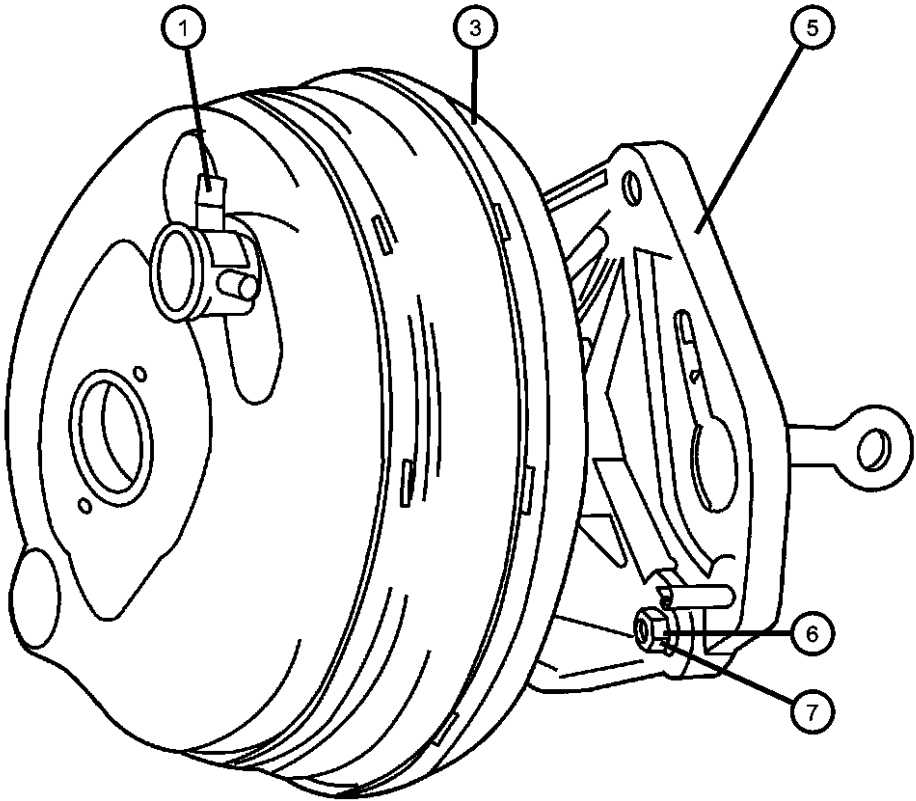


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: Sales Codes; [ED0]=Engines - All 2.2, 2.5, 2.4L 4 Cylinder Gas [EK0]=Engines - All 3.7L 6 Cylinder Gas [EN0]=Engines - All 4/5 Cylinder Turbo Diesel									
1									VALVE, Vacuum Check
	05072522AA	1	U						
		1	J, T						
-2	05103338AA	1	U						CAP, Vacuum Port
3									BOOSTER, Power Brake
	05134120AA	1	U						
		1	J, T						
-4	06506386AA	2							NUT, Hex Flange With Serration, Brake Booster to Actuator Mounting Bracket, Mounting
5									BRACKET, Brake Booster
	52128353AB	1	J, T						[DBB], Mounting
	52128356AB	1	U						[DBB], Mounting
	52128730AA	1	J, T						[DG0], Mounting
	52128731AA	1	U						[DG0], Mounting
6									NUT AND WASHER, Hex, M8x1.25
	06504175	3	J, T						Actuator Mounting Bracket to Dash Panel, Mounting
		2	U						Actuator Mounting Bracket to Dash Panel, Mounting
7	06506386AA	1	U						NUT, Hex Flange With Serration, Actuator Mounting Bracket to Dash Panel, Mounting
-8									HOSE, Vacuum Supply
	52128313AB	1	U						[ED0]-Engine To Booster
	52128314AD	1	U						[EK0]-Engine To Booster
	52128316AE	1	U						[EN0]-Engine To Booster
	52128317AA	1	J, T						[ED0]-Engine To Booster
	52128318AC	1	J, T						[EK0]-Engine To Booster
	52128370AA	1	J, T						[EN0]-Engine To Booster

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Master Cylinder,Brake  
Figure 5-410

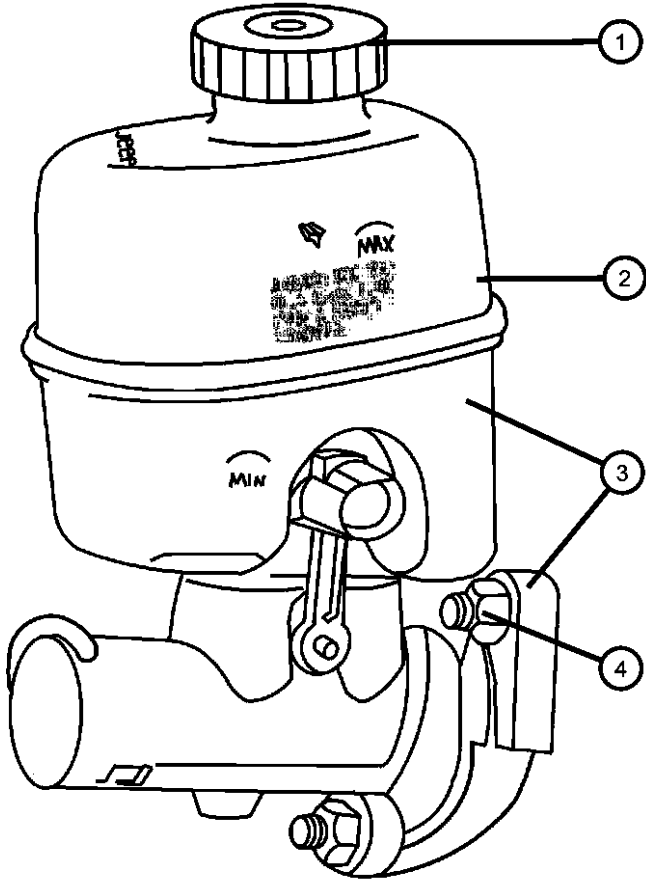


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	05072525AA	1	U						CAP, Master Cylinder Reservoir
		1	J, T						
2		1							RESERVOIR, Brake Master Cylinder, Order Item 3, (NOT SERVICED)
3	05072524AB	1	U						MASTER CYLINDER, Brake With Reservoir and Cap
	05072526AB	1	J, T						With Reservoir and Cap
4	05072523AA	1	J, T						NUT
		2	U						Master Cylinder to Booster, Mounting
									Master Cylinder to Booster, Mounting

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions



Brake Lines,Front,LHD  
Figure 5-510

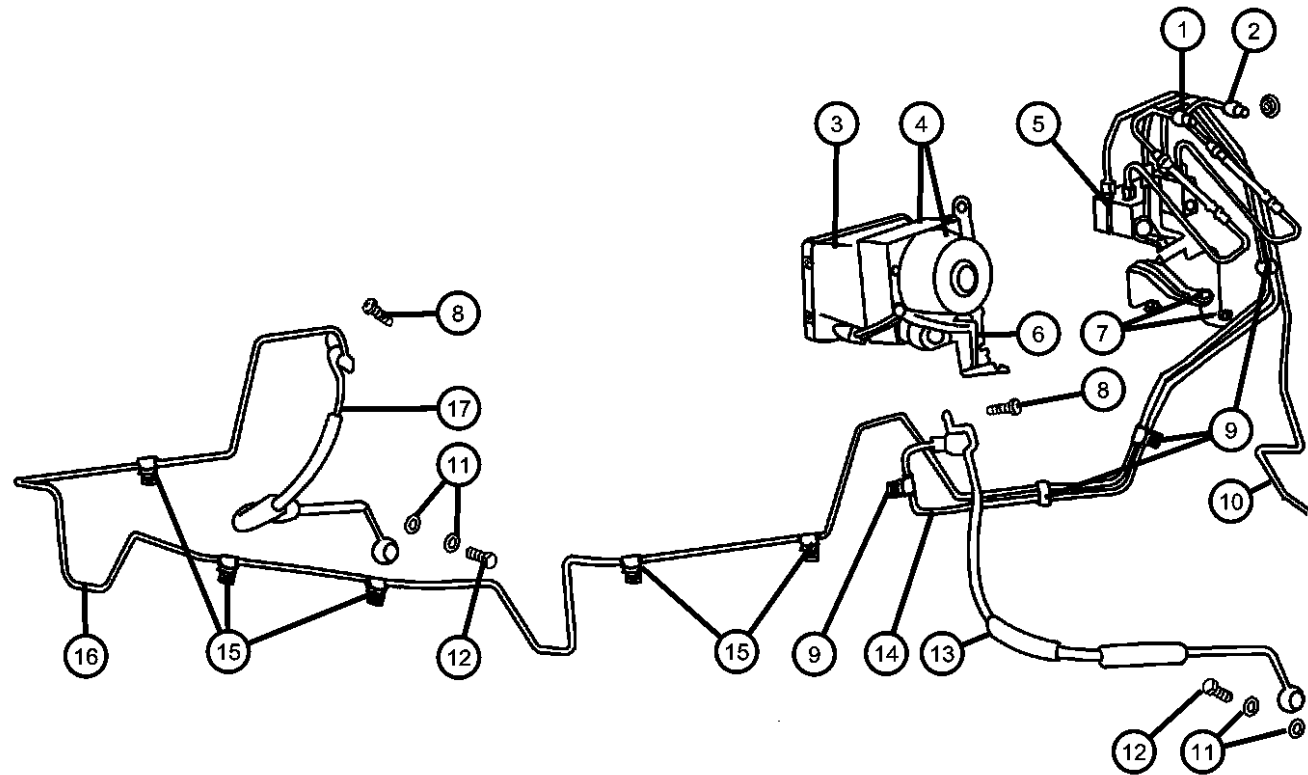


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	52128293AD	1	J, T						TUBE, Brake, Master Cylinder to Union Block/HCU, Secondary
2	52128292AC	1	J, T						TUBE, Brake, Master Cylinder to Union Block/HCU, Primary
3	05083084AA	1							MODULE, Anti-lock Brakes, [BRY]
4	05083083AA	1							CONTROL UNIT, Anti-Lock Brake, [BRY]
5	52128676AA	1							BLOCK, Brake Line Union, [BRE]
6	05066569AA	1							BRACKET, Hydraulic Control Unit, [BRY], Mounting
7	06100048	2							NUT, Hex, M6x1.00
8	06100048	2							SCREW, Pan Head, M6x1.00x16.00, (NOT SERVICED)
9	52008940	3							CLIP, Brake Line, 2 Way, Mounting
10	52128636AC	1							TUBE, Brake, Union Block/HCU to Rear Brake Hose
11	J3237672	4							GASKET, Brake Hose To CaliperMounting
12	06035832	2							BOLT, Banjo, To Caliper, Mounting
13	52128311AA	1							HOSE, BrakeLeft
14	52128304AB	1							TUBE, Brake, Union Block/HCU to Left Brake Hose
15	52128409AA	5							CLIP, Brake Line, 1 Way, Mounting
16	52128286AB	1							TUBE, Brake, Union Block/HCU to Right Brake Hose
17	52128312AA	1							HOSE, BrakeRight
-18	06505446AA	2							SCREW, Brake Hose to Wheel House, Mounting
-19	52128408AA	1							CLIP, Brake Line, 3 Way-Attaches Brake Tubes To Rail, Mounting

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Brake Lines,Front,RHD  
Figure 5-520

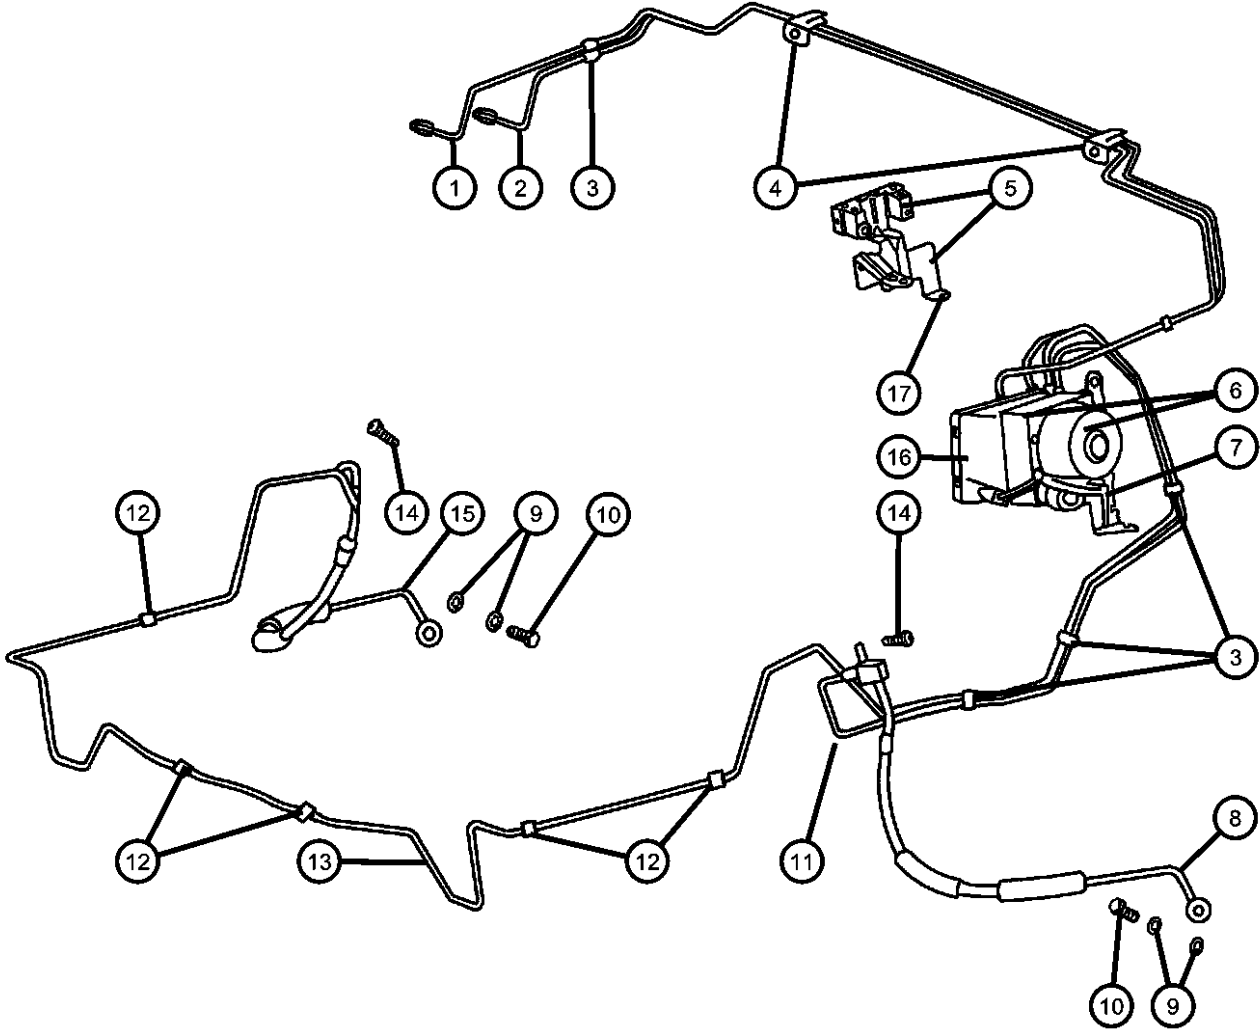

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	52128300AB	1	U						TUBE, Brake, Master Cylinder to Union Block/HCU, Secondary
2	52128297AC	1	U						TUBE, Brake, Master Cylinder to Union Block/HCU, Primary
3	52008940	2	U						CLIP, Brake Line, 2 Way
4	52128405AB	2	U						CLIP, Brake Line, 4 Way
5	52128676AA	1							BLOCK, Brake Line Union, [BRE]
6	05083083AA	1							CONTROL UNIT, Anti-Lock Brake, [BRY]
7	05066569AA	1							BRACKET, Hydraulic Control Unit, [BRY], Mounting
8	52128311AA	1							HOSE, BrakeLeft
9	06035886	4							GASKET, Brake Hose To CaliperMounting
10	06035832	2							BOLT, Banjo, To Caliper, Mounting
11	52128304AB	1							TUBE, Brake, Union Block/HCU to Brake Hose, Left
12	52008940	3							CLIP, Brake Line, 2 Way, Mounting
13	52128286AB	1							TUBE, Brake, Union Block/HCU to Brake Hose, Right
14	52128286AB	1							SCREW, Pan Head, M6x1.00x16.00, (NOT SERVICED)
15	52128312AA	1							HOSE, BrakeRight
16	05083084AA	1							MODULE, Anti-lock Brakes, [BRY]
17	06100048	2							NUT, Hex, M6x1.00
-18	52128636AC	1							TUBE, Brake, Union Block/HCU to Brake Hose, Rear


LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Brake Lines,Rear  
Figure 5-530

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Codes;  
[EN0]=Engines - All 4/5 Cylinder Turbo Diesel

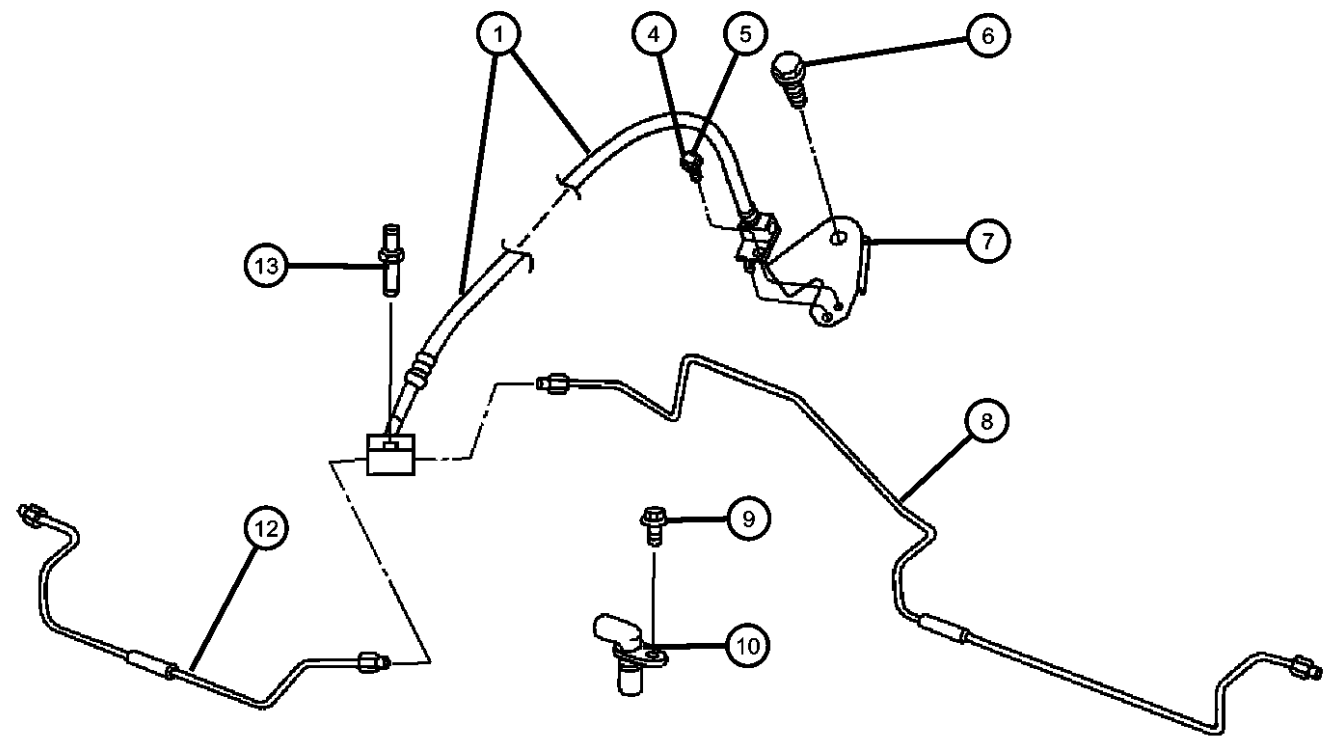


1	52128310AA	1							HOSE, Brake, With Union and Tee
-2	06035832	2							BOLT, Banjo, To Caliper, Mounting
-3	J3237672	4							GASKET, Brake Hose To Caliper
4	06503900	1							SCREW AND WASHER, Hex Head, M12x1.75x40, [EN0] Brake Hose Bracker to Left Rail, Mounting
5	06503343	1							SCREW, Brake Hose Bracker to Left Rail, Mounting
6	06503343	1							SCREW, Hex Flange Head, M6x1.00x15.00, Hose to Frame Mounting, (NOT SERVICED)
7	52128480AC	1							BRACKET, Brake Hose, [EN0]
8	52128514AC	1							HOSE, BrakeRight
9	06501979	1							SCREW AND WASHER, Hex Head, M6x1x17, Wheel Speed Sensor, Mounting
10	56041393AA	1							SENSOR, Wheel Speed
-11	05086373AA	1							O RING, SensorMounting
12	52128515AB	1							HOSE, BrakeLeft
13	04137696AB	1							BOLT, Axle Vent

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Pedals,Brake and Clutch  
Figure 5-610

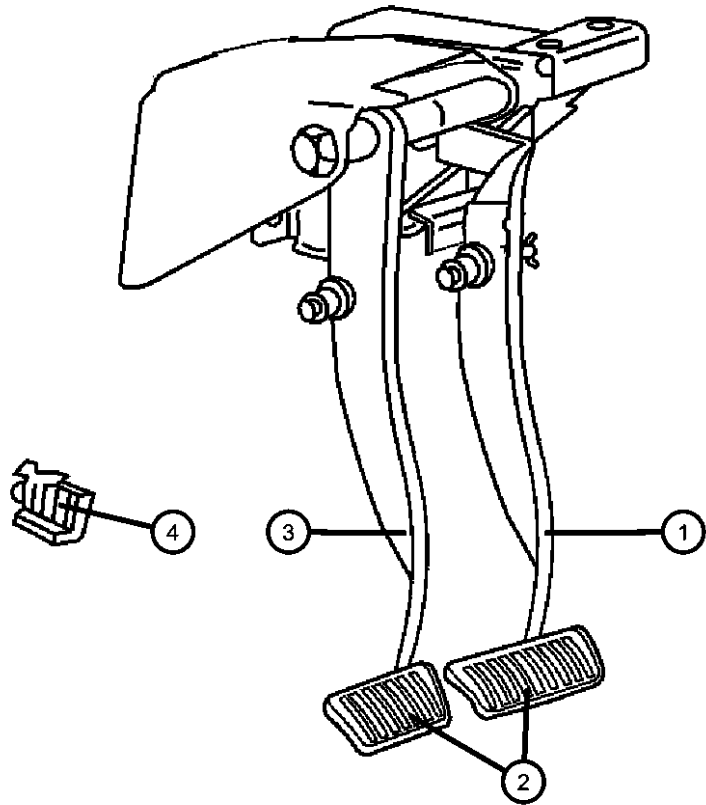


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:Sales Codes; DBB=Transmissions - All Manual DG0=Transmissions - All Automatic									
1									PEDAL, Brake
	52128345AC	1	U						[DG0]
	52128346AD	1	J, T						[DG0]
	52128347AD	1	J, T						[DBB]
	52128348AC	1	U						[DBB]
2									PAD, Pedal
	04779027	1	U						[DG0]
		1	J, T						[DG0]
	52009562	1	J, T						[DBB]
		1	U						[DBB]
3									PEDAL, Clutch
	52128396AC	1	J, T						[DBB]
	52128397AC	1	U						[DBB]
4	06035334	1							CLIP, Brake Push Rod
-5									TAPE, Anti-Squeak
	05019054AA	1	U						
		1	J, T						
-6	06506232AA	2							NUT, Screws on the end of the Pedal Pivot Shaft

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions





# Group - 6

## Clutch

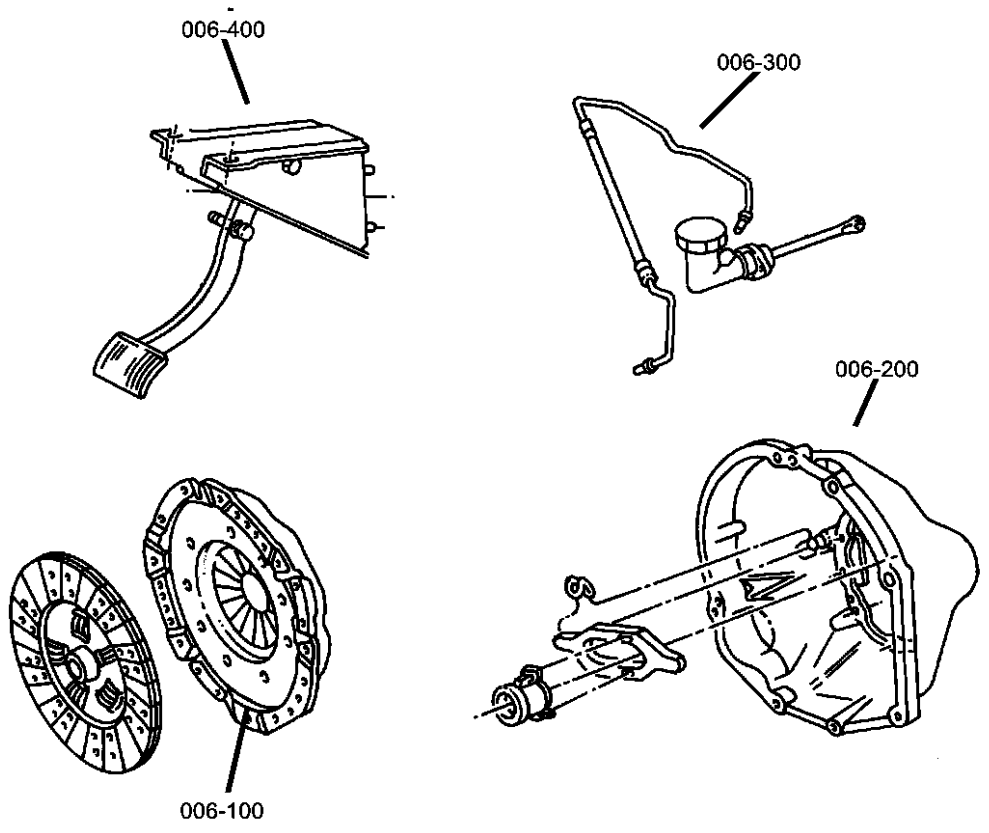

### Group - 6 Clutch

Illustration Title	Group-Fig. No.
<b>Clutch</b>	
Clutch .....	Fig. 6 - 110
<b>Clutch Housing</b>	
Clutch Housing .....	Fig. 6 - 210
<b>Clutch Controls</b>	
Clutch Control .....	Fig. 6 - 320
<b>Clutch Pedals</b>	
Pedal Clutch .....	Fig. 6 - 420

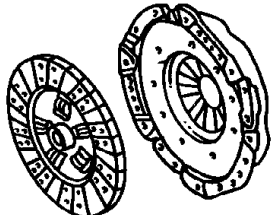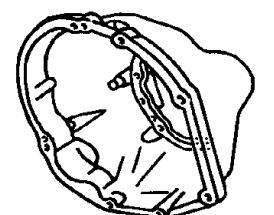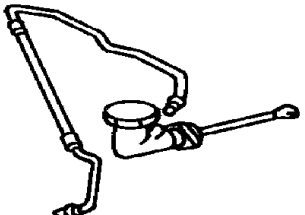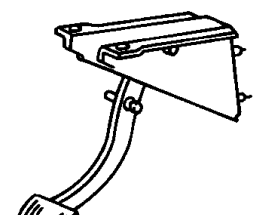
<div>006-100 Clutch</div> 	<div>006-200 Clutch Housing</div> 	<div>006-300 Clutch Controls</div> 	<div>006-400 Clutch Pedals</div> 
--	---	---	--

Clutch  
Figure 6-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


NOTE; Sales Codes  
[DBB]= All Manual Transmissions  
[EKG]= Magnum 3.7L V6  
[ED0] = All 2.2,2.5,2.4L 4 Cylinder Gas Engines  
[EN0]= All 2.5L 4 Cylinder Turbo Diesel Engines

1									DISC, Clutch
	52104303AB	1				EN0	DBB		
	52104315AC	1				EKG	DBB		
	52104581AC	1				ED0	DBB		
2									CLUTCH PACKAGE
	05066191AA	1				EN0	DBB		
	05066375AC	1				EKG	DBB		
	05072990AD	1				ED0	DBB		
3	06501474	6				ED0	DBB		BOLT, Hex Head, M8x1.25x16
4	06035626	6				EKG	DBB		BOLT, Hex Head, .375-16x.84
5	05072664AA	8				EN0	DBB		BOLT

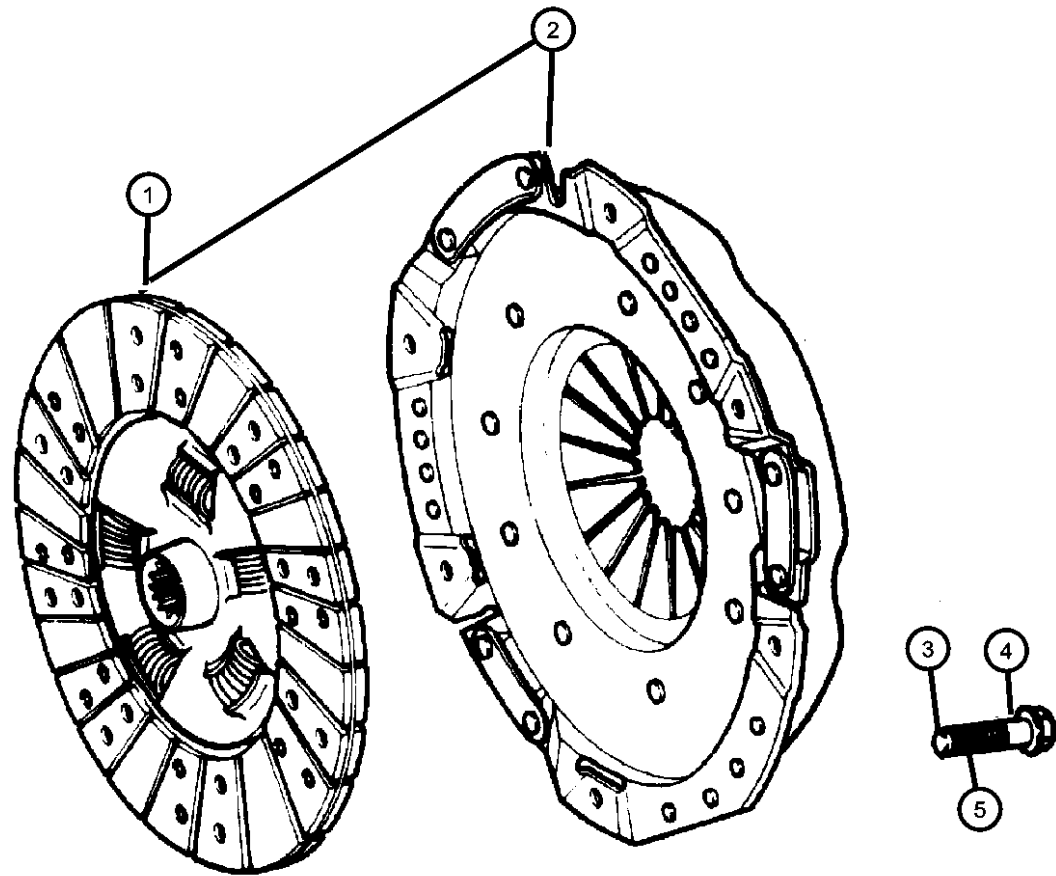

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

Clutch Housing  
Figure 6-210

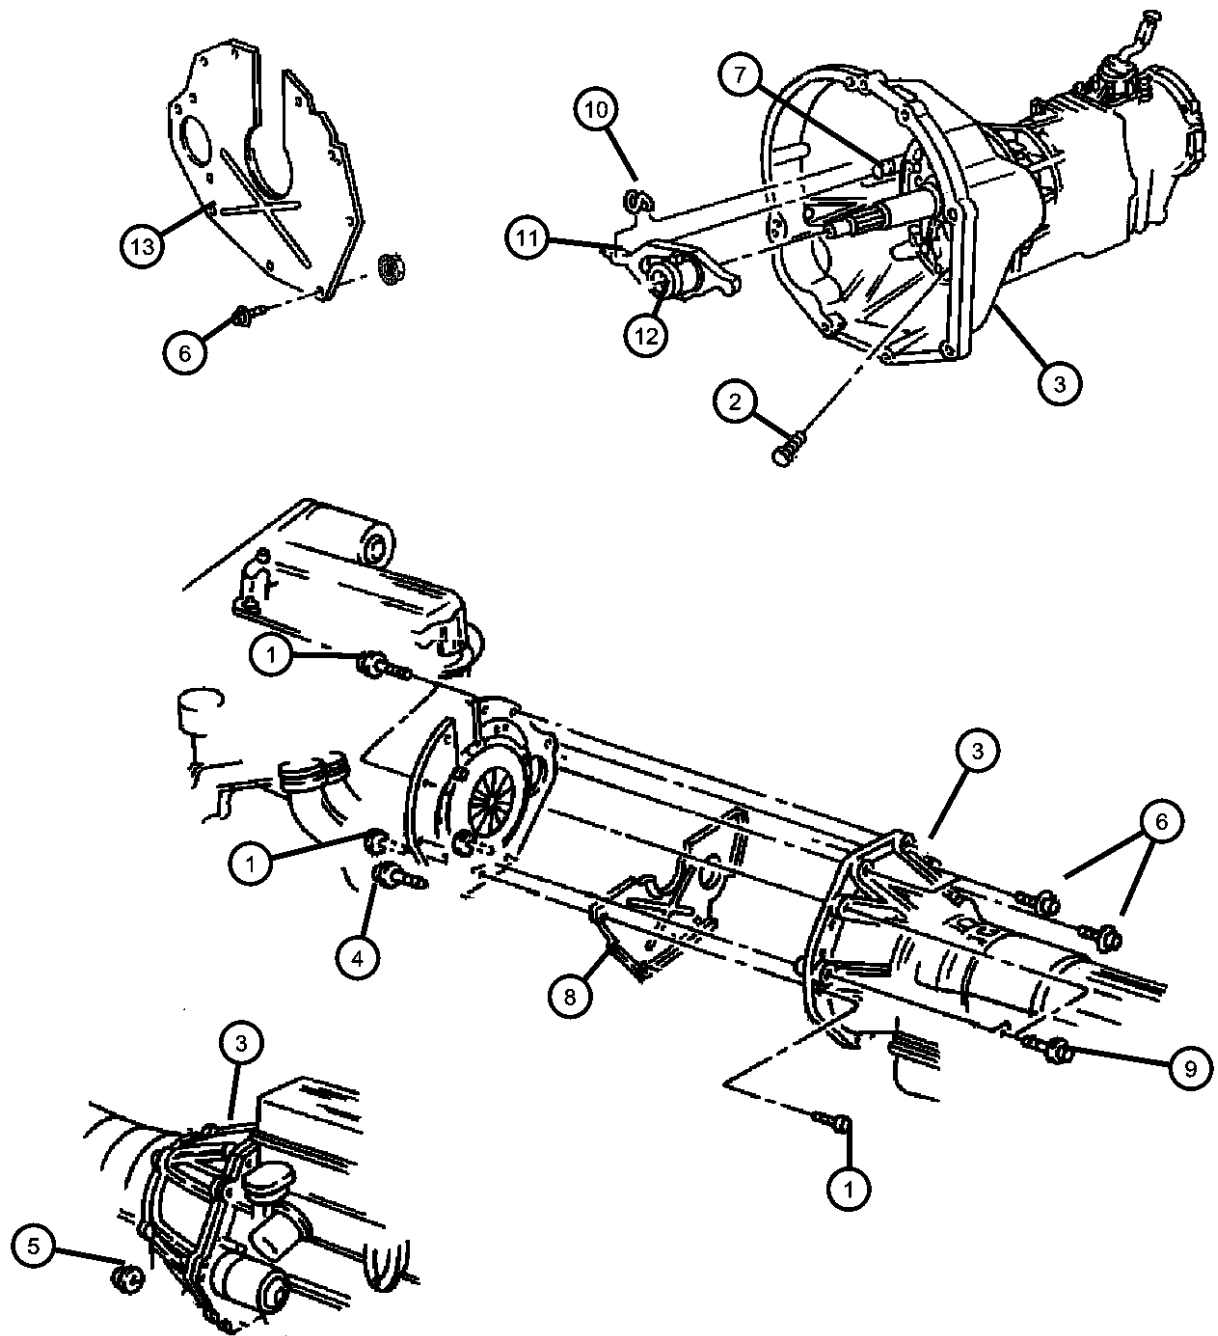


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE; Sales Codes									
[DBB] = All Manual Transmissions									
[ED0]= All 2.2,2.5,2.4L 4 Cylinder Gas Engines									
[EKG] = Magnum 3.7L V6									
[EK0 ]= All 3.7L 6 Cylinder Gas Eginer									
[EN0]= All 2.5L 4 Cylinder Turbo Diesel Engines									
1									SCREW, Hex Head, .375-16x1.5
	06022266	4				EK0	DBB		
		5				EN0	DBB		
2	06503299	9					DBB		BOLT, Hex Head
3									HOUSING, Clutch
	52104292AA	1				ED0	DBB		
	52104294AB	1				EKG, EN0	DBB		
4	00154877AA	1				EN0	DBB		SCREW AND WASHER, Hex Head
5	06036385AA	2				EK0	DBB		SCREW AND WASHER, Hex Head, .437-14x2.00
6	06501742	4				ED0	DBB		SCREW, Hex Head, M12x1.75x50
7									PIVOT, Clutch Release
	52087542	1				ED0	DBB		
		1				EKG, EN0	DBB		
8									COVER, Engine
	52104339AC	1				ED0	DBB		
	53021282AA	1				EK0			
9									SCREW, Hex Head, .375-16x1.5
	06022266	4				EK0	DBB		
		5				EN0	DBB		
10	04338855	1					DBB		SPRING, Clutch Release
11	52107555	1					DBB		FORK, Clutch Release
12	53008342AB	1					DBB		BEARING, Clutch Release
13									SPACER
	52104293AB	1				ED0	DBB		
	52104336AA	1				EKG	DBB		

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Clutch Control  
Figure 6-320

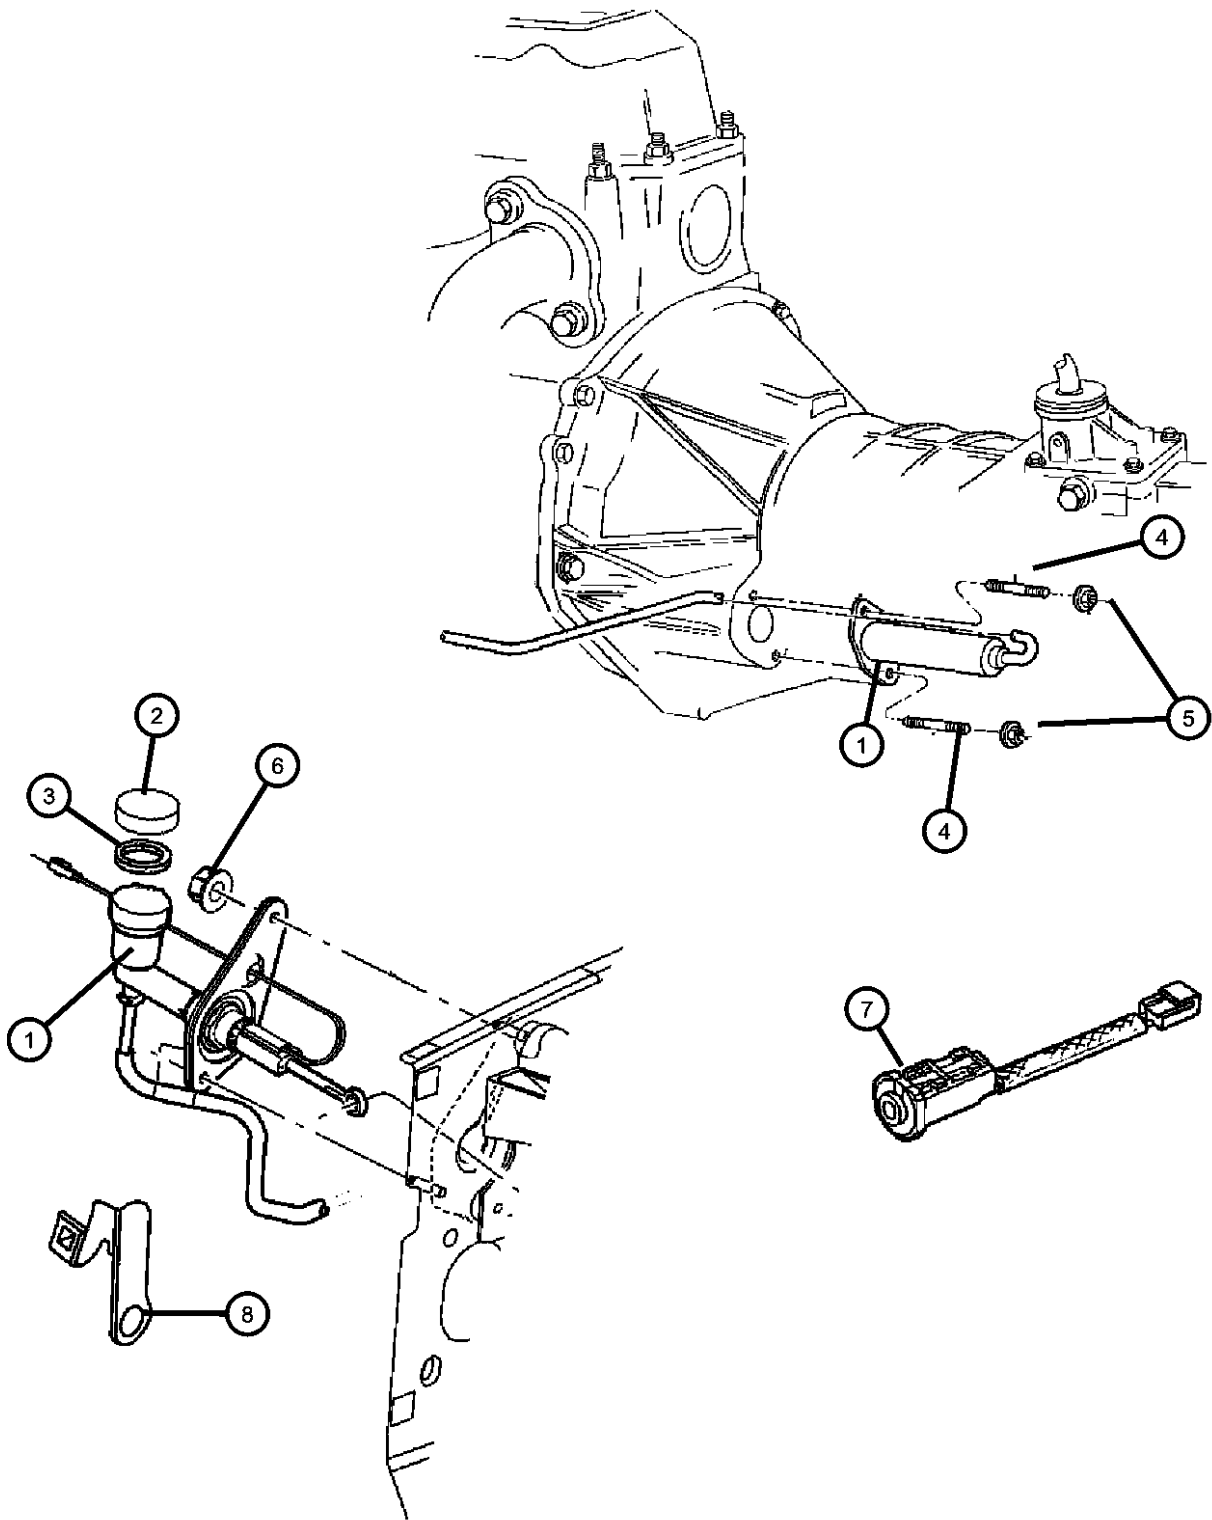

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE; Sales Codes [DBB] = All Manual Transmissions [DG0] = All Automatic Transmissions [ED0] = All 2.2,2.5,2.4,L 4 Cylinder Gas Engines [EKG] = Magnum 3.7L V6 Engine [EN0] = All 4/5 Turbo Diesel Engines									
1									HYDRAULIC CONTROL, Clutch Actuator
	52104298AB	1	U			ED0, EKG	DBB		Includes: Cap, Interlock Switch, Diaphragm & Bushing
	52104299AD	1	U			EN0	DBB		Includes: Cap, Interlock Switch, Diaphragm & Bushing
	52109746AB	1	J, T			ED0, EK0	DBB		Includes: Cap, Interlock Switch, Diaphragm & Bushing
		1	J, T			EN0	DBB		Includes: Cap, Interlock Switch, Diaphragm & Bushing
2									CAP, Clutch Reservoir
	04883544AA	1	U			ED0, EKG	DBB		
		1	U			EN0	DBB		
		1	J, T			ED0, EK0	DBB		
		1	J, T			EN0	DBB		
3									DIAPHRAGM, Clutch Reservoir
	05015607AA	1	U			ED0, EKG	DBB		
		1	U			EN0	DBB		
		1	J, T			ED0, EK0	DBB		
		1	J, T			EN0	DBB		
4	06036379AA	2					DBB		STUD, .312-18x2.00
5	00152472	2	J, U				DBB		NUT, Hex Flange Lock, .312-18
6	06504175	2					DBB		NUT AND WASHER, Hex, M8x1.25
7									SWITCH, Clutch Starter Interlock
	56010330AA	1	U			ED0, EKG	DBB		
		1	U			EN0	DBB		
		1	J, T			ED0, EK0	DBB		
		1	J, T			EN0	DBB		
8	52104353AC	1				ED0	DBB		BRACKET


LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part



Pedal Clutch  
Figure 6-420


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes; Sales Codes [DBB] = All Manual Transmissions									
1	04643448	1	J, T			ED0, EK0	DBB		BUSHING, Hydraulic Clutch Actuator
2	52009562	1	J, T				DBB		PAD, Pedal
3									PEDAL, Clutch
	52128396AC	1	J, T				DBB		
	52128397AC	1	U				DBB		

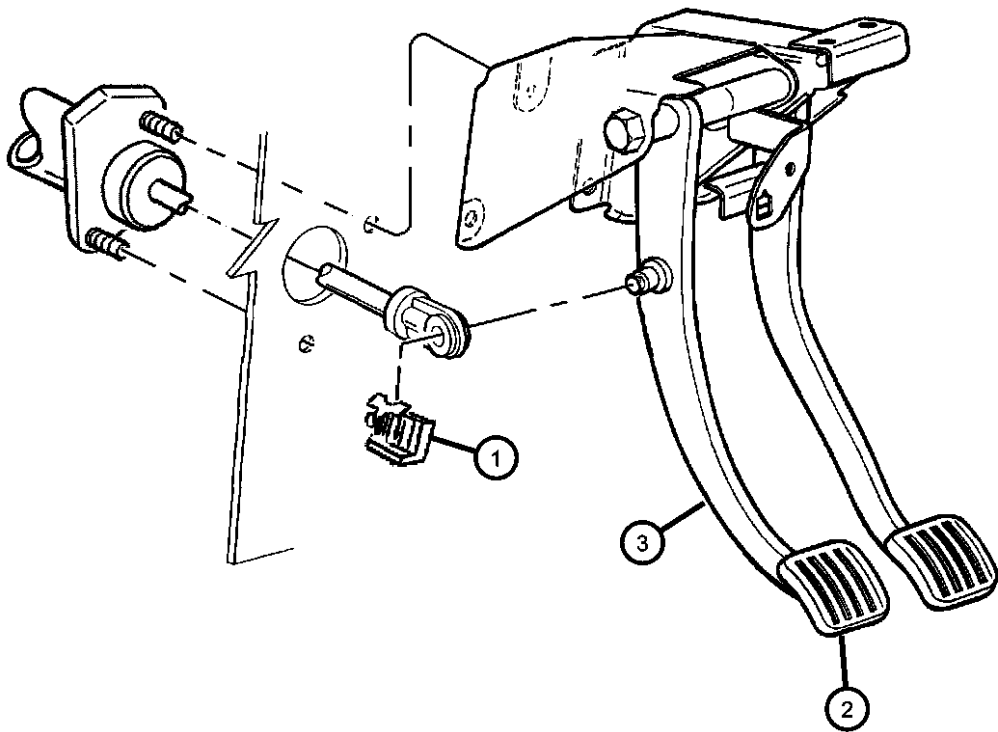

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

# Group - 7

## Cooling

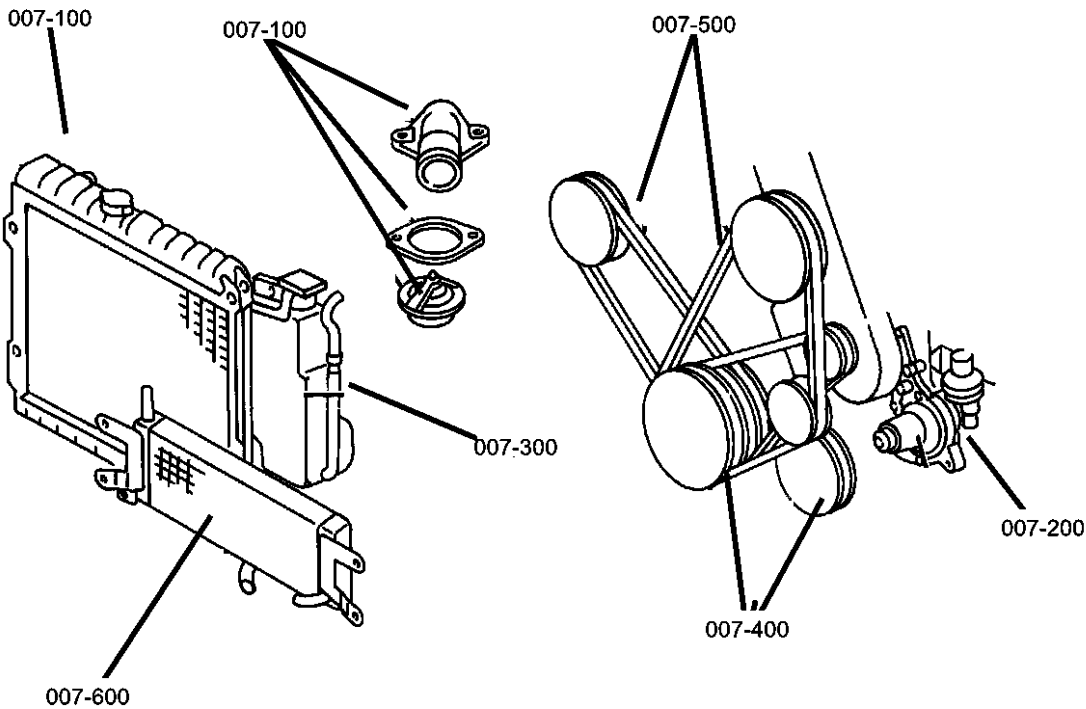

## Group - 7 Cooling

Illustration Title Group-Fig. No.

<b>Radiator and Related Parts</b>	
Radiator and Related Parts, 2.4L Engine .....	Fig. 7 - 110
Radiator and Related Parts, 3.7L Engine .....	Fig. 7 - 120
Radiator and Related Parts, 2.5,2.8L Diesel Engine .....	Fig. 7 - 130

<b>Water Pump and Related Parts</b>	
Water Pump and Related Parts, 2.4L Engine .....	Fig. 7 - 210
Water Pump and Related Parts, 3.7L Engine .....	Fig. 7 - 220
Water Pump and Related Parts, 2.5,2.8L Diesel Engine .....	Fig. 7 - 230








<b>Tank, Coolant Engine</b>	
Coolant Tank, 2.4L Engine .....	Fig. 7 - 305
Coolant Tank, 3.7L Engine .....	Fig. 7 - 310
Coolant Degasser Tank, 2.5,2.8L Diesel Engine .....	Fig. 7 - 320

<b>Pulleys and Related Parts</b>	
Drive Pulleys, 2.4L Engine .....	Fig. 7 - 410
Drive Pulleys, 3.7L Engine .....	Fig. 7 - 420
Drive Pulleys, 2.5,2.8L Diesel Engine .....	Fig. 7 - 430


<b>Drive Belts</b>	
Drive Belts, 2.4L Engine .....	Fig. 7 - 510
Drive Belts, 3.7L Engine .....	Fig. 7 - 520
Drive Belts, 2.5,2.8L Diesel Engine .....	Fig. 7 - 530

<b>Lines, Transmission Oil Cooler</b>	
Oil Cooler Lines .....	Fig. 7 - 610

<b>Grilles</b>	
Grille and Related Parts .....	Fig. 7 - 710
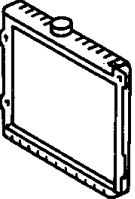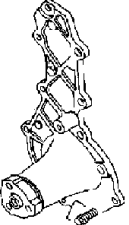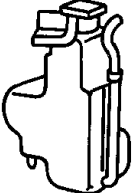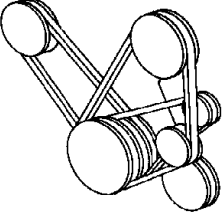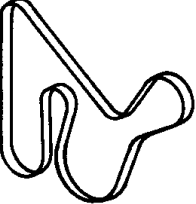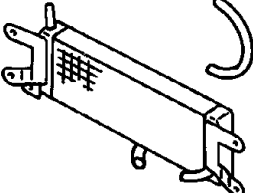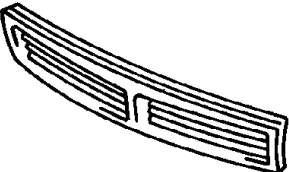
<b>007-100</b> Radiator and Related Parts 	<b>007-200</b> Water Pump and Related Parts 	<b>007-300</b> Tank, Coolant Engine 	<b>007-400</b> Pulleys and Related Parts 
<b>007-500</b> Drive Belts 	<b>007-600</b> Lines, Transmission Oil Cooler 	<b>007-700</b> Grilles 	

Radiator and Related Parts, 2.4L Engine  
Figure 7-110

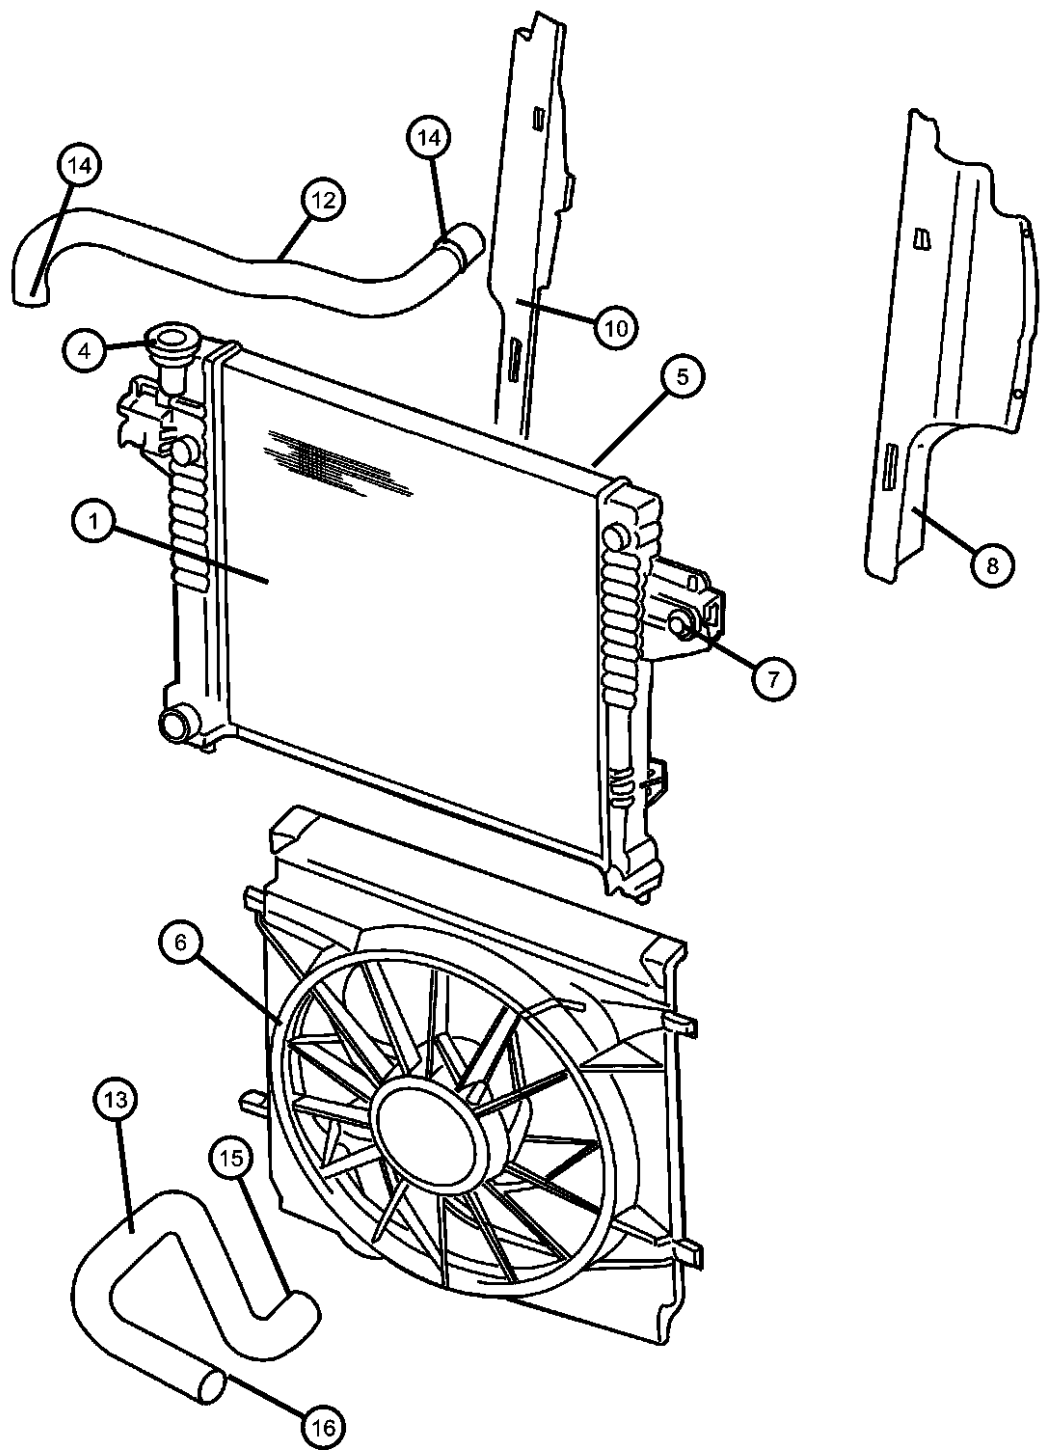


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines [DBB]= Manual Trans.									
1	52079731AC 05066386AA	1				ED0	DBB		RADIATOR, Engine Cooling Without Air Conditioning Mopar Coolant 5 Year/100,000 Mile Formula 1 Gallon
	52080123AC 05066386AA	1				ED0	DBB		With Air Conditioning Mopar Coolant 5 Year/100,000 Mile Formula 1 Gallon
-2	55176756AD	1							SUPPORT, Radiator
-3	55176763AE	1							CROSSMEMBER, Radiator
4	52079799AA 55116901AA	1 1				ED0 ED0	DBB DBB		CAP, Radiator Without Air Conditioning With Air Conditioning
5	52079651AA 52079666AA	2 2				ED0 ED0	DBB DBB		ISOLATOR, Radiator Upper
6	55037659AA	1				ED0	DBB		FAN MODULE, Radiator Cooling
7	55037659AA	1							BOLT AND CONED WASHER, Hex Head, M6x14x12.5, (NOT SERVICED)
8	52079766AD	1				ED0	DBB		SEAL, Radiator Side Air
-9	06036155AA	3				ED0	DBB		PIN, Push
10	52079767AE	1				ED0	DBB		SEAL, Radiator Side Air
-11	J4004262	4				ED0	DBB		PIN, Push, .15x.41
12	52079713AB	1				ED0			HOSE, Radiator Outlet
13	52079706AA	1				ED0			HOSE, Radiator Inlet
14	06033135	1				ED0			CLAMP
15	32002983	1				ED0			CLAMP, Hose, 32mm Black
16	06033135	1				ED0			CLAMP
-17	53010552AA	1				ED0			THERMOSTAT

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Radiator and Related Parts, 2.4L Engine  
Figure 7-110

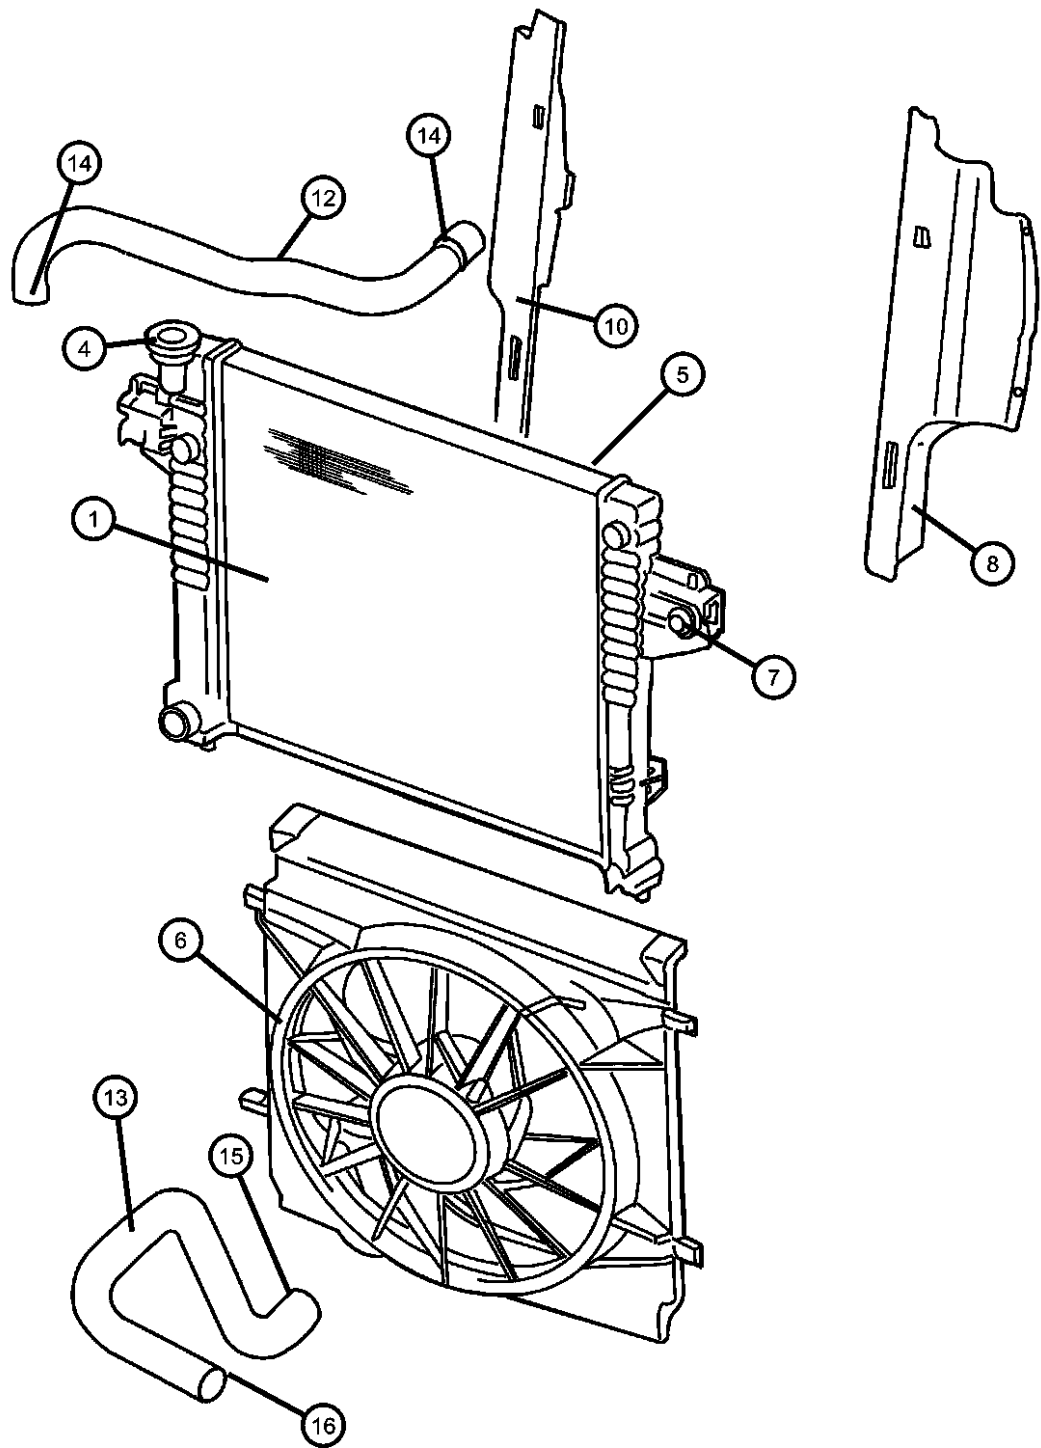

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-18	06503334	1				ED0			BOLT, Hex Flange Head, M8x1.25x28, Thermostat Housing attaching
-19	53010554AA	1				ED0			GASKET, Thermostat
-20	53010553AB	1				ED0			HOUSING, Thermostat
-21	04644269	1				ED0	DBB		DRAINCOCK, Radiator
-22	04781489AA	1				ED0			CONNECTOR, Water Outlet


LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Radiator and Related Parts, 3.7L Engine  
Figure 7-120


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION																																																																																				
Note; Sales Codes [EK0]= All 3.7L, 6 Cylinder Gas Engines [DBB]= Manual Trans [DG0]= Auto Trans [HAA]=Air Conditioning [NMC]=Heavy Duty Engine Cooling																																																																																													
1	52079729AC 05066386AA	1				EK0	DBB		RADIATOR, Engine Cooling [HC0] Mopar Coolant 5 Year/100,000 Mile Formula 1 Gallon																																																																																				
	05066386AA	1				EK0	DG0		[HC0] Mopar Coolant 5 Year/100,000 Mile Formula 1 Gallon																																																																																				
	52080120AC 05066386AA	1				EK0	DG0		[HAA] Mopar Coolant 5 Year/100,000 Mile Formula 1 Gallon																																																																																				
	05066386AA	1				EK0	DBB		[HAA] Mopar Coolant 5 Year/100,000 Mile Formula 1 Gallon																																																																																				
-2	55176756AD	1							SUPPORT, Radiator, Lower																																																																																				
-3	55176763AE	1							CROSSMEMBER, Radiator																																																																																				
-4	52079651AA 52079666AA	2 2				EK0 EN0	DG0 DG0		ISOLATOR, Radiator Lower Upper																																																																																				
5	55037465AB	1 1				EK0 EK0	DG0 DBB		CONDENSER, Air Conditioning																																																																																				
6	55037692AA	1 1				EK0 EK0	DBB DG0		SHROUD, Fan, Electric Fan Assy Without [NMC] Without [NMC]																																																																																				
-7	55037691AA	1				EK0	DBB		FAN, Cooling, El;ectric, [HAA+NMC]																																																																																				
8	52079718AD	1				EK0			DRIVE, Fan, Viscous																																																																																				
-9	52079654AD	1				EK0			FAN, Cooling, Mechanical																																																																																				
10									SEAL, Radiator Side Air																																																																																				
<div><div></div><div><table><tr><td colspan="2">LIBERTY (KJ)</td><td></td><td></td><td></td><td></td></tr><tr><td>SERIES</td><td>LINE</td><td>BODY</td><td>ENGINE</td><td colspan="2">TRANSMISSION</td></tr><tr><td>P = Limited</td><td>J = LHD (4WD)</td><td>74 = 4 Door (104.3 WB)</td><td>ED1 = Engine - 2.4L 4 Cyl</td><td colspan="2">DDD = Transmission - 5-Speed HD</td></tr><tr><td>H = Sport</td><td>U = RHD (4WD)</td><td></td><td>DOHC 16v SMPI</td><td colspan="2">Manual</td></tr><tr><td>M = Renegade</td><td>T = LHD (2WD)</td><td></td><td>EKG = Engine - 3.7L V6</td><td colspan="2">DDK = Transmission - 5-Speed HD</td></tr><tr><td></td><td></td><td></td><td>ENJ = Engine -2.5L 4 Cyl 16V</td><td colspan="2">Manual</td></tr><tr><td></td><td></td><td></td><td>Turbo Diesel</td><td colspan="2">DG4 = Transmission-Multi-Speed</td></tr><tr><td></td><td></td><td></td><td>ENR = Engine - 2.8L 4 Cyl</td><td colspan="2">Auto, 45RFE</td></tr><tr><td></td><td></td><td></td><td>Turbo Diesel</td><td colspan="2">DG6 = Transmission-4-Spd.</td></tr><tr><td></td><td></td><td></td><td>EN0 = 4Cyl Turbo Diesel</td><td colspan="2">Automatic, 42RLE</td></tr><tr><td></td><td></td><td></td><td>EK0 = All 3.7L</td><td colspan="2">DGQ = Transmission-5-Spd Automatic</td></tr><tr><td></td><td></td><td></td><td>ED0 = All 2.4L</td><td colspan="2">5-45RFE</td></tr><tr><td></td><td></td><td></td><td></td><td colspan="2">DBB = All Manual Transmissions</td></tr><tr><td></td><td></td><td></td><td></td><td colspan="2">DG0 = All Automatic Transmissions</td></tr></table></div></div>										LIBERTY (KJ)						SERIES	LINE	BODY	ENGINE	TRANSMISSION		P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD		H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual		M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD					ENJ = Engine -2.5L 4 Cyl 16V	Manual					Turbo Diesel	DG4 = Transmission-Multi-Speed					ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE					Turbo Diesel	DG6 = Transmission-4-Spd.					EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE					EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic					ED0 = All 2.4L	5-45RFE						DBB = All Manual Transmissions						DG0 = All Automatic Transmissions	
LIBERTY (KJ)																																																																																													
SERIES	LINE	BODY	ENGINE	TRANSMISSION																																																																																									
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD																																																																																									
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual																																																																																									
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD																																																																																									
			ENJ = Engine -2.5L 4 Cyl 16V	Manual																																																																																									
			Turbo Diesel	DG4 = Transmission-Multi-Speed																																																																																									
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE																																																																																									
			Turbo Diesel	DG6 = Transmission-4-Spd.																																																																																									
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE																																																																																									
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic																																																																																									
			ED0 = All 2.4L	5-45RFE																																																																																									
				DBB = All Manual Transmissions																																																																																									
				DG0 = All Automatic Transmissions																																																																																									
AR = use ase required    - = Non illustrated part																																																																																													
2004 KJ																																																																																													

Radiator and Related Parts, 3.7L Engine  
Figure 7-120

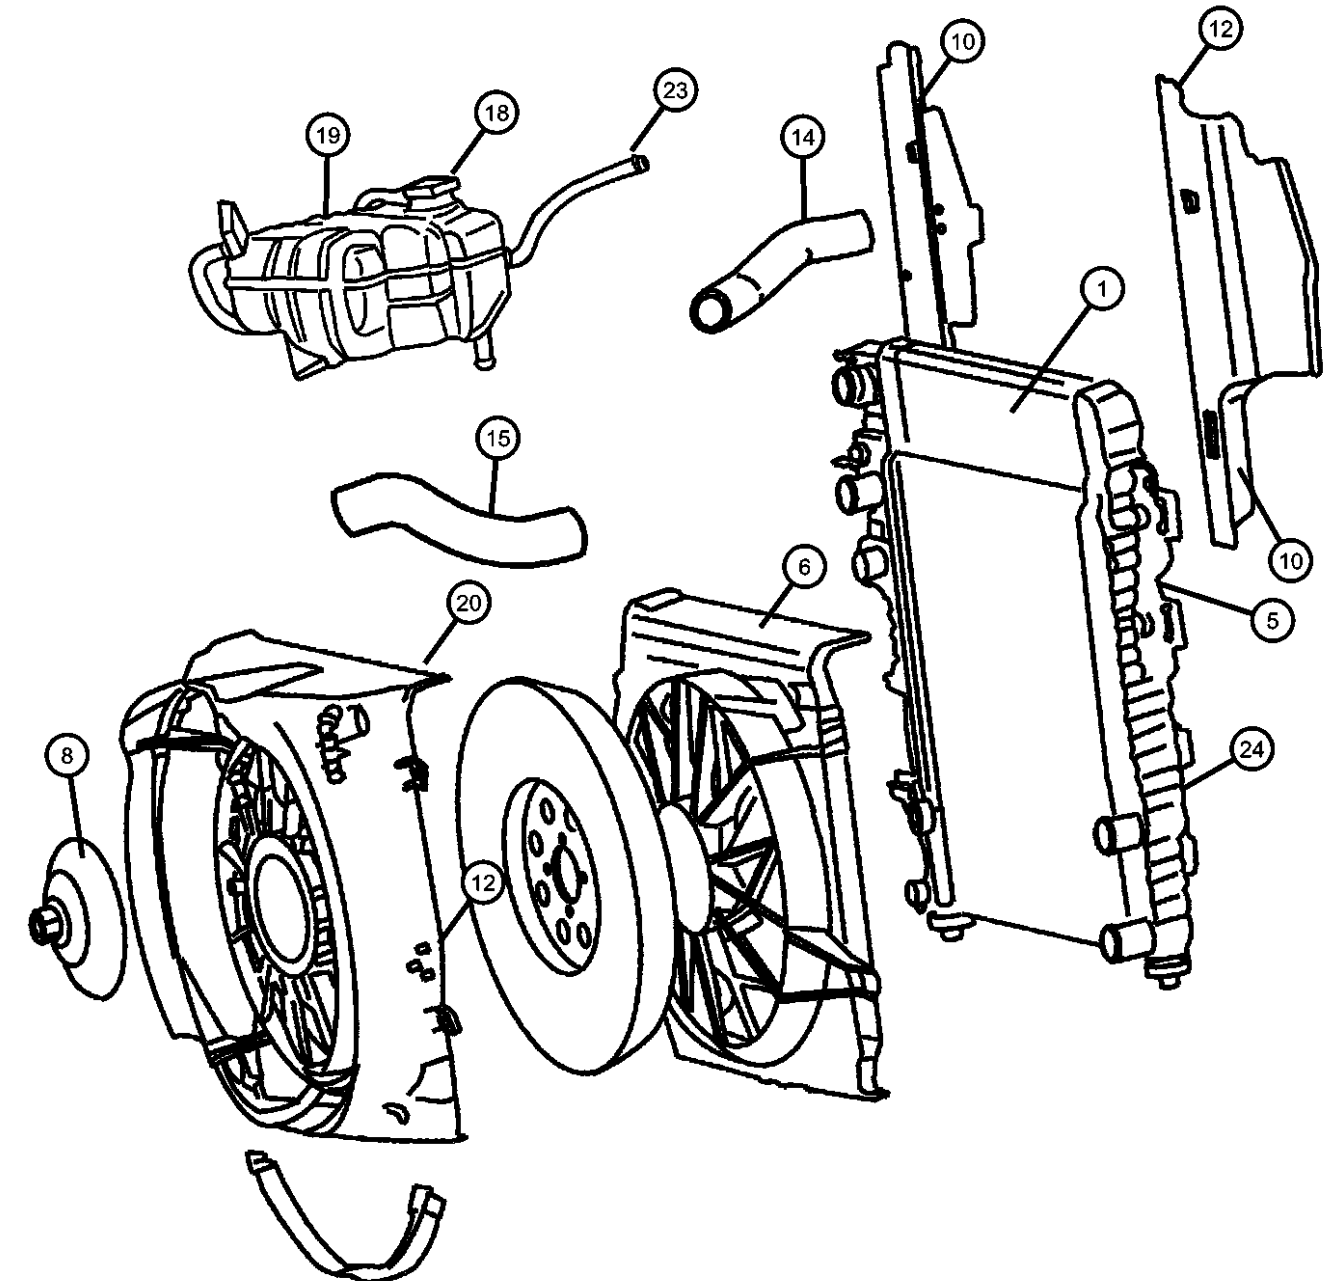										ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
											52079766AD	1				EK0	DG0		
												1				EK0	DBB		
										-11	06036155AA	6							PIN, Push
										12									SEAL, Radiator Side Air
											52079767AE	1				EK0	DG0		
												1				EK0	DBB		
										-13									PIN, Push, .15x.41
											J4004262	4				EK0	DG0		
												4				EK0	DBB		
										14	52079703AA	1				EK0			HOSE, Radiator Inlet
										15	52079712AB	1				EK0			HOSE, Radiator Outlet
										-16	06032277	1				EK0			CLAMP, Radiator, 55mm
										-17	52029090AA	1				EK0			CLAMP, Hose to Radiator, 47mm
										18	52079331	1				ED0			CAP, Coolant Reserve Tank
										19	52079848AA	1				EK0			BOTTLE, Coolant Recovery
										20									SHROUD, Fan
											52080127AA	1				EK0	DG0		
												1				EK0	DBB		
										-21	04644269	1				EK0	DG0		DRAINCOCK, Radiator
										-22	53020887AB	1				EK0			HOUSING, Thermostat
										23	55037642AB	1				EK0			CLIP, Hose
										24	52079697AB	1				EK0	DG0		COOLER, Auxiliary Trans. Oil
										-25	05191979AA	1	J, T, U			EK0	DG0		COOLER PACKAGE, Transmission Oil, Mopar Service Kit for Heavy Duty Cycle Operation, For Extreme Heat Conditions Only
										<b>LIBERTY (KJ)</b>									
										SERIES		LINE		BODY		ENGINE		TRANSMISSION	
										P = Limited		J = LHD (4WD)		74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
										H = Sport		U = RHD (4WD)				DOHC 16v SMPI		Manual	
										M = Renegade		T = LHD (2WD)				EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
																ENJ = Engine -2.5L 4 Cyl 16V		Manual	
																Turbo Diesel		DG4 = Transmission-Multi-Speed	
																ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
																Turbo Diesel		DG6 = Transmission-4-Spd.	
																EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
																EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
																ED0 = All 2.4L		5-45RFE	
																		DBB = All Manual Transmissions	
																		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Radiator and Related Parts, 2.5,2.8L Diesel Engine  
Figure 7-130

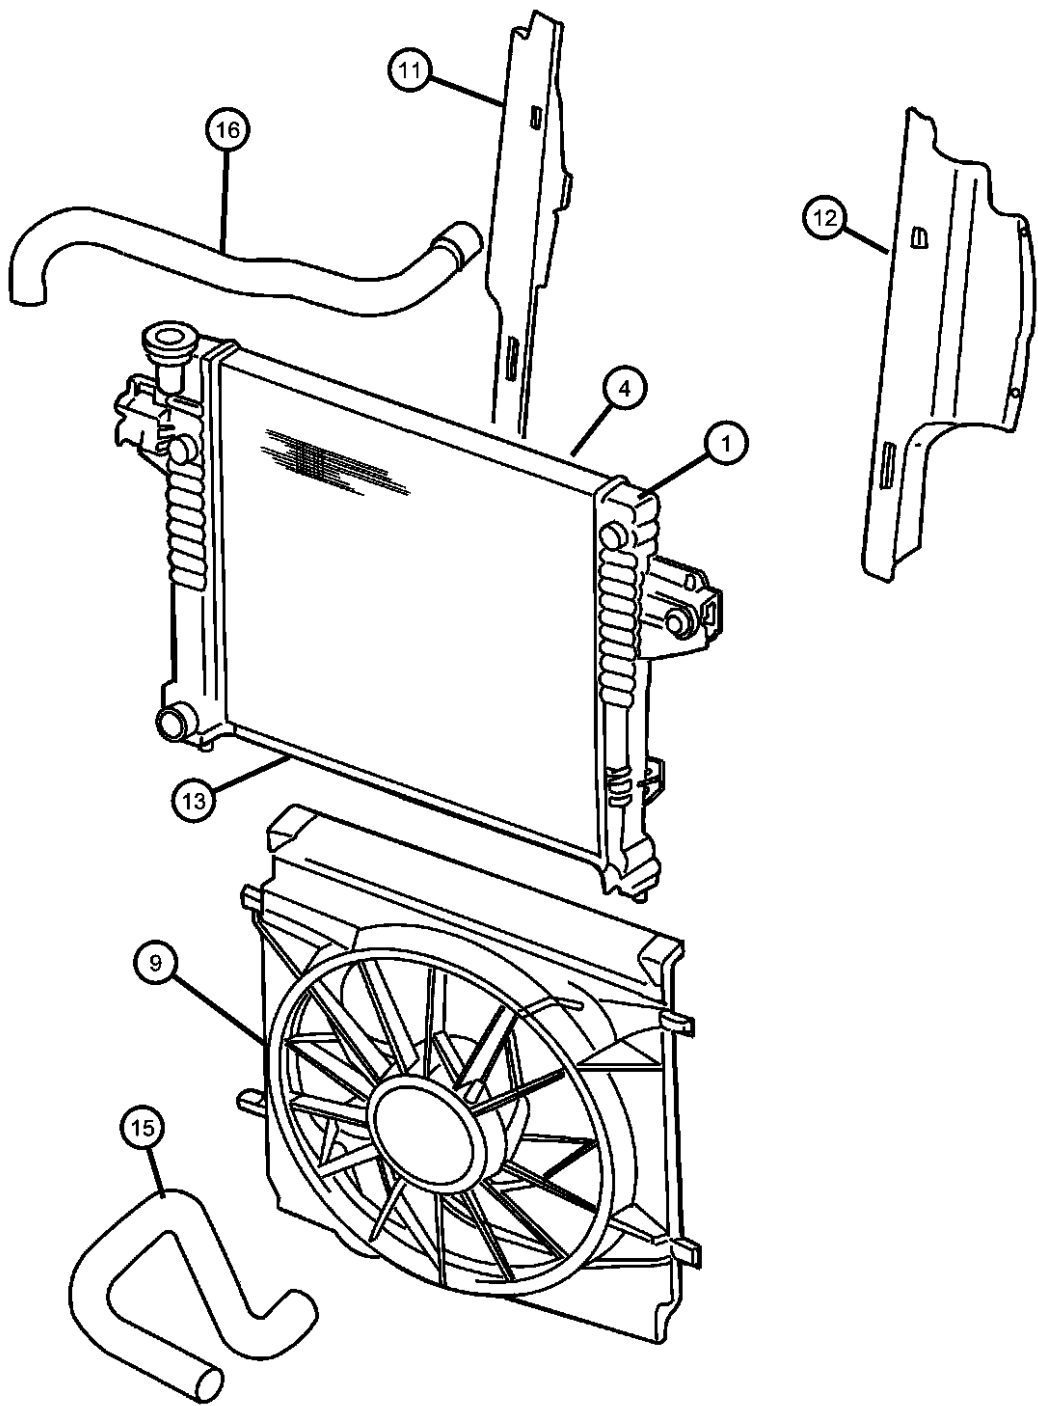

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note; Sales Codes  
[EN0]= All 4 Cylinder Diesel Engine  
[DBB]= Manual Trans

1									RADIATOR, Engine Cooling
	52079747AB	1				EN0	DBB		
	05066386AA								Mopar Coolant 5 Year/100,000 Mile Formula 1 Gallon
		1				EN0	DG0		
	05066386AA								Mopar Coolant 5 Year/100,000 Mile Formula 1 Gallon
-2	55176756AD	1							SUPPORT, Radiator
-3	55176763AE	1							CROSSMEMBER, Radiator
4									CONDENSER, Air Conditioning
	55037465AB	1				EN0	DBB		
		1				EN0	DG0		
-5									COOLER, Charge Air
	52079700AB	1				EN0	DBB		
		1				EN0	DG0		
-6	06034399	1				EN0			CLAMP, Charge Cooler Inlet
-7									HOSE, Charge Air Cooler
	52079800AC	1				EN0			Inlet
	52079801AD	1				EN0			Outlet
-8	55037700AA	1				EN0	DG0		COOLER, Auxiliary Trans. Oil
9									SHROUD, Fan
	52079674AB	1				EN0	DBB		
		1				EN0	DG0		
-10	52079879AB	1				EN0			SHROUD, Fan, Door
11									SEAL, Radiator Side Air
	52079766AD	1				EN0	DBB		
		1				EN0	DG0		
12									SEAL, Radiator
	52079760AA	1				EN0	DBB		

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Radiator and Related Parts, 2.5,2.8L Diesel Engine  
Figure 7-130

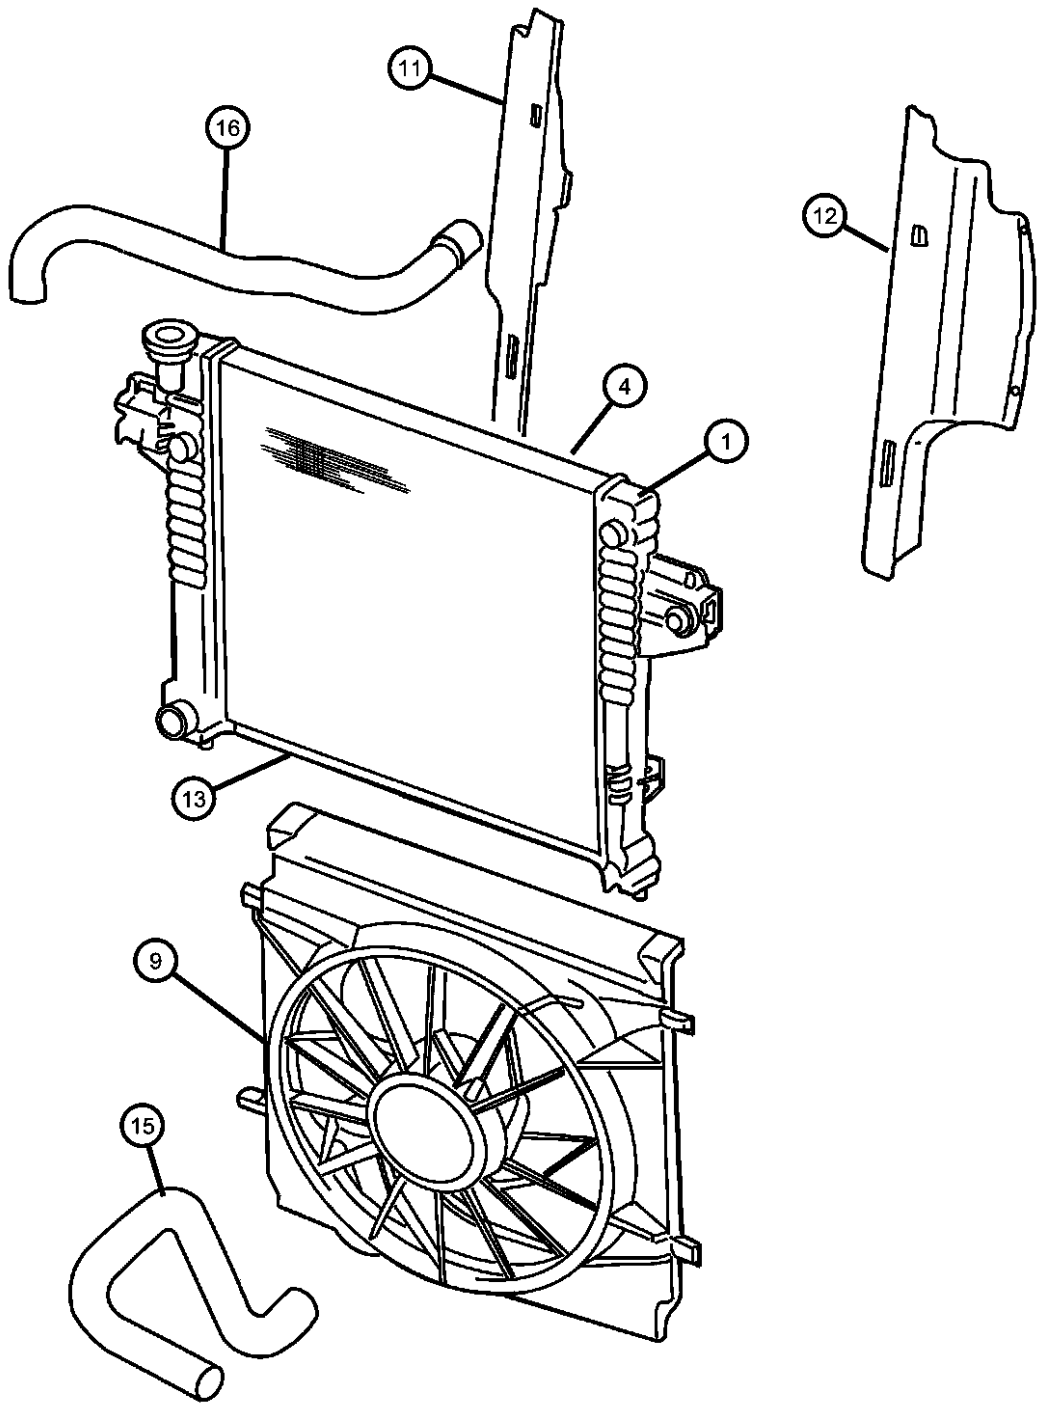


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
13	52079760AA	1				EN0	DG0		SEAL, Radiator
		1				EN0	DBB		
		1				EN0	DG0		
-14	J4004262	4				EN0	DBB		PIN, Push, .15x.41
		4				EN0	DG0		
		4				EN0	DG0		
15	52079716AB	1	J, U			EN0			HOSE, Radiator Outlet
16	52079708AA	1				EN0			HOSE, Radiator Inlet
-17	52079727AA	1				EN0			FAN, Cooling
-18	55037688AA	1				EN0			DRIVE, Fan, Viscous

LIBERTY (KJ)									
SERIES	LINE			BODY			ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)			74 = 4 Door (104.3 WB)			ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)						DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)						EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
							ENJ = Engine -2.5L 4 Cyl 16V	Manual	
							Turbo Diesel	DG4 = Transmission-Multi-Speed	
							ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
							Turbo Diesel	DG6 = Transmission-4-Spd.	
							EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
							EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
							ED0 = All 2.4L	5-45RFE	
								DBB = All Manual Transmissions	
								DG0 = All Automatic Transmissions	



Water Pump and Related Parts, 2.4L Engine  
Figure 7-210


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes									
[ED0]= All 2.2L, 2.5L, 2.4L, 4 C									
[EK0]= All 3.7L, 6 Cylinder Gas Engines									
1	04694307AC	1				ED0			PUMP, Water
2	06503255	4				ED0			BOLT, Hex Head, M6x1.0x22
3	04621564	1				ED0			SEAL, Water Pump Body
4	06503180	1				ED0			O RING, Water Inlet Tube
5	53010517AC	1				ED0			TUBE, Water Pump Inlet
6	06506770AA	5				ED0			SCREW

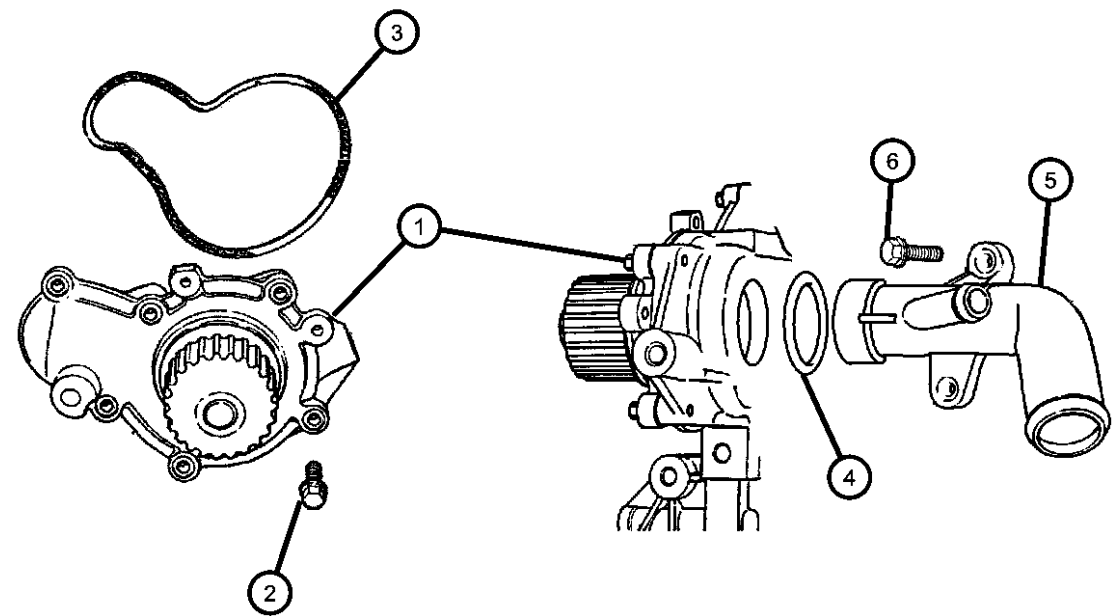

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Water Pump and Related Parts, 3.7L Engine  
Figure 7-220


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes									
[ED0]= All 2.2L, 2.5L, 2.4L, 4 C									
[EK0]= All 3.7L, 6 Cylinder Gas Engines									
1	53021187AA	1				EK0			PUMP, Water, Includes Gasket
2	53020865	1				EK0			GASKET, Water Pump
3	06035854	2				EK0			FITTING, Y-Style
4	06505502AA	2				EK0			SCREW
5	53020887AB	1				EK0			HOUSING, Thermostat
6	53020887AB	1							GASKET, Thermostat, Use RTV Sealer, (NOT SERVICED)
7	52079476AC	1				EK0			THERMOSTAT
8	53021313AA	1				EK0			SEAL, Crankshaft Oil, Front
9	53021238AB	1				EK0			COVER, Timing Belt
10	06102380AA	5				EK0			SCREW, Hex Flange Head
11	06102380AA	5							PLUG, (NOT SERVICED)
12	06102380AA	5							PLUG, (NOT SERVICED)
-13	53013505AA	1				EK0			CAP, Water Pump Pulley

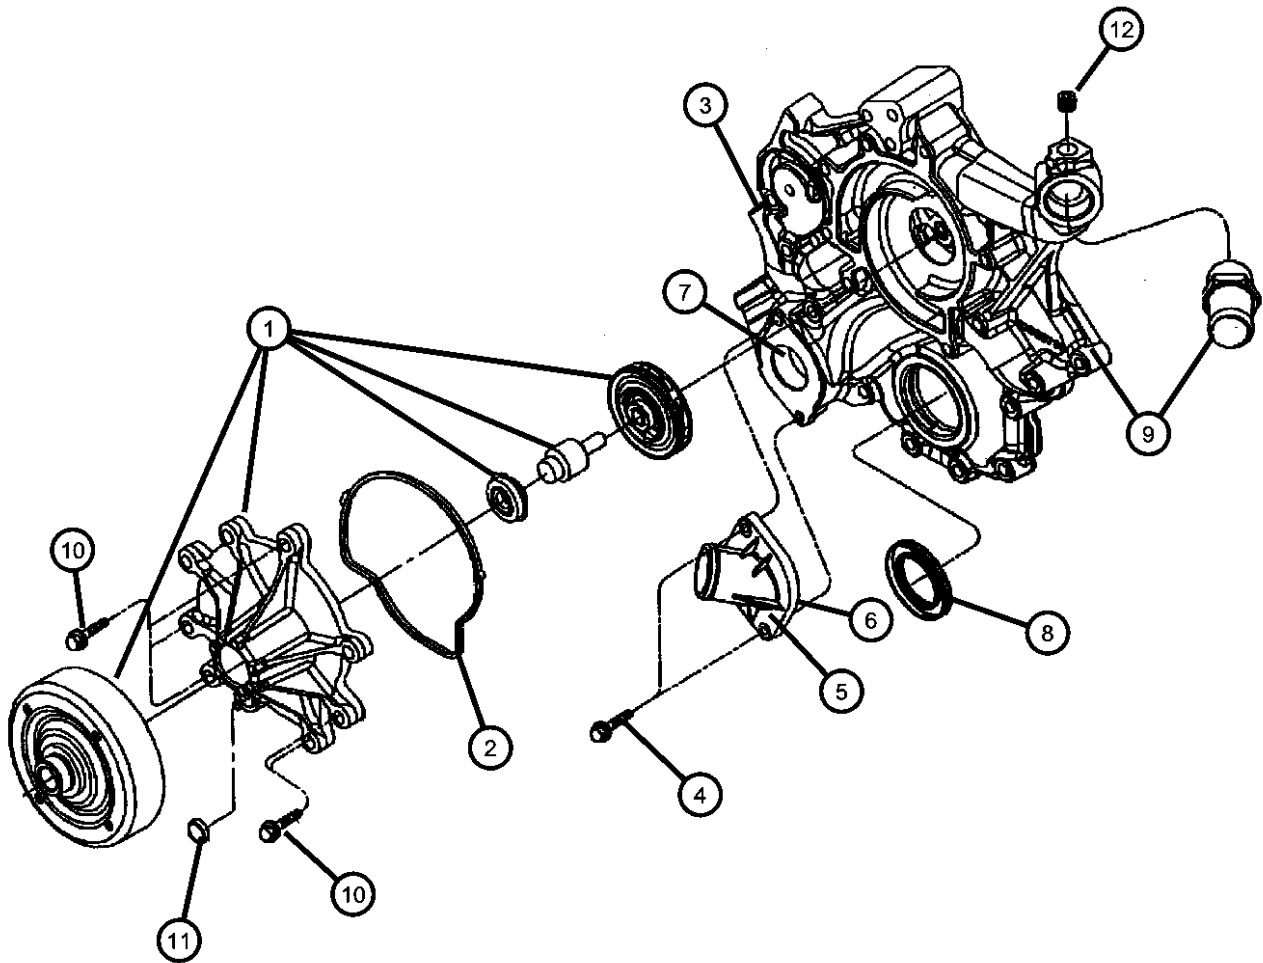

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Water Pump and Related Parts, 2.5,2.8L Diesel Engine  
Figure 7-230

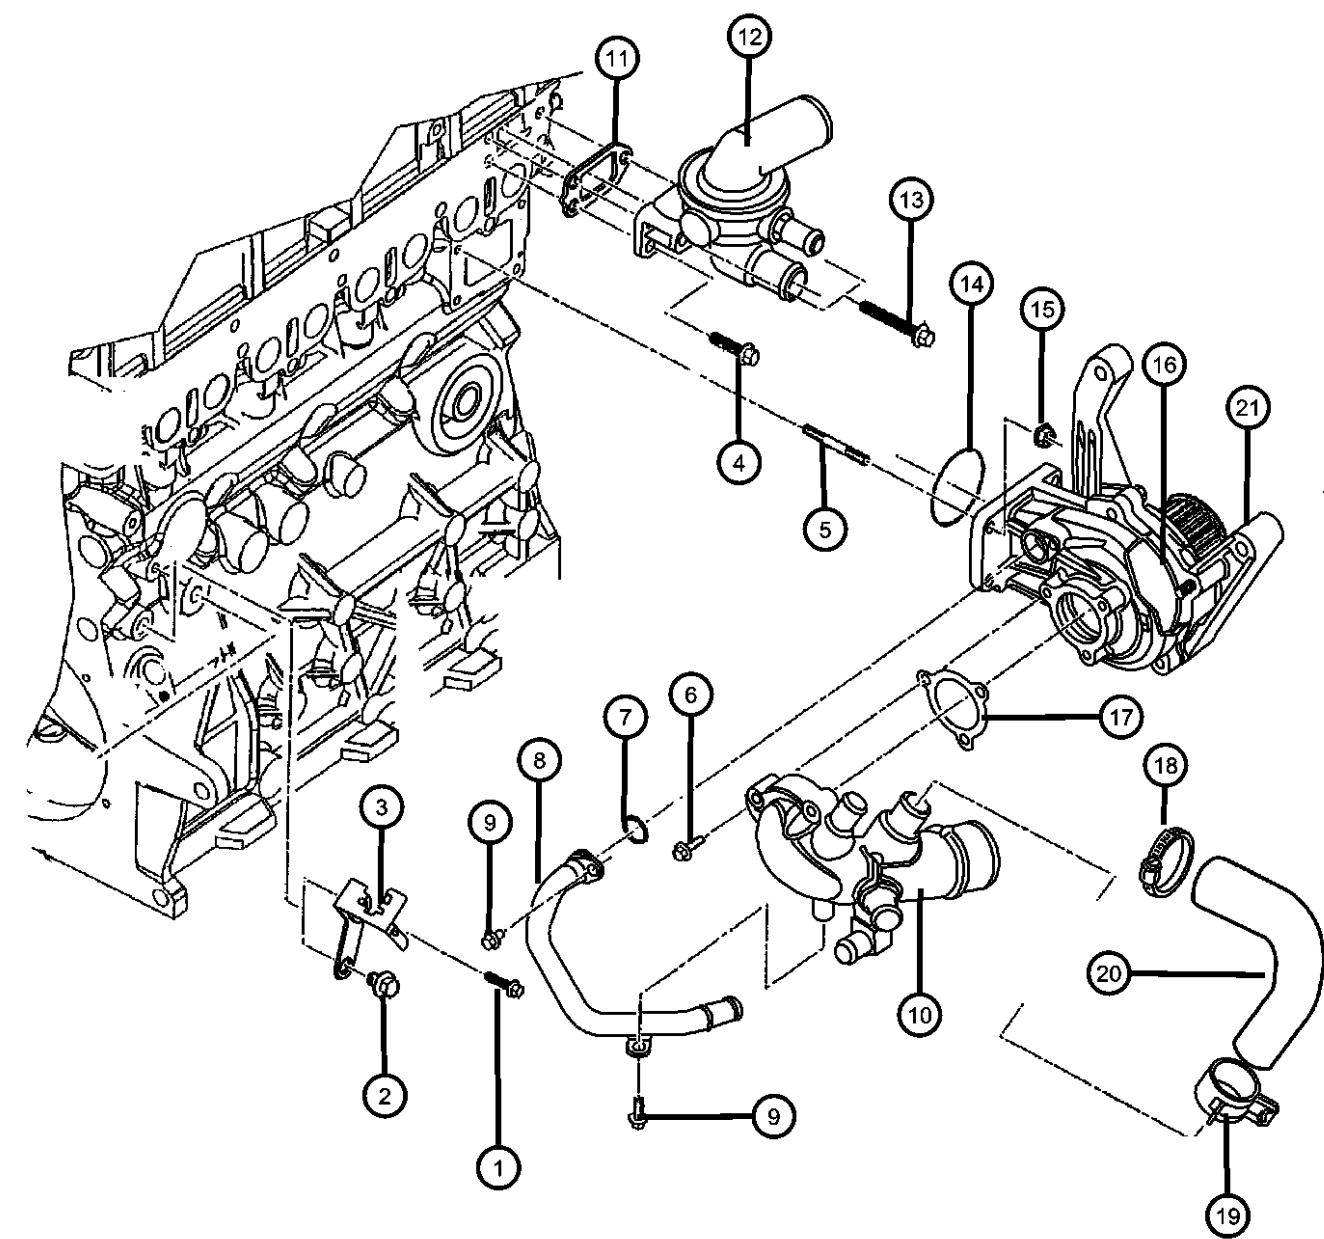

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note; Sales Codes  
[EN0]= All 4 Cylinder Diesel Engine  
[DBB]= Manual Trans

1	05003554AA	1				EN0	DG0		SCREW
2									SCREW
	05003724AA	1				EN0	DG0		
		1				EN0	DBB		
3		1							BRACKET, 05072692ac, (NOT REQUIRED)
4	04864537	1				EN0	DG0		BOLT, 8Mx20
5									STUD, Water Pump To Block
	04720550	4				EN0	DBB		
		4				EN0	DG0		
6									SCREW
	04864551	3				EN0	DBB		
		3				EN0	DG0		
7	05072698AA	1				EN0	DG0		O RING
8	05072703AB	1				EN0	DG0		PIPE, Water Pump Drain
9									BOLT, M6x10
	05003551AA	1				EN0	DG0		
		1				EN0	DBB		
10									ADAPTER, Water Pump
	05072704AA	1				EN0	DG0		
		1				EN0	DBB		
11									GASKET, Thermostat
	05066806AA	1				EN0	DG0		
		1				EN0	DBB		
12									THERMOSTAT
	05072705AB	1				EN0	DG0		
		1				EN0	DBB		
13									BOLT

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Water Pump and Related Parts, 2.5,2.8L Diesel Engine  
Figure 7-230

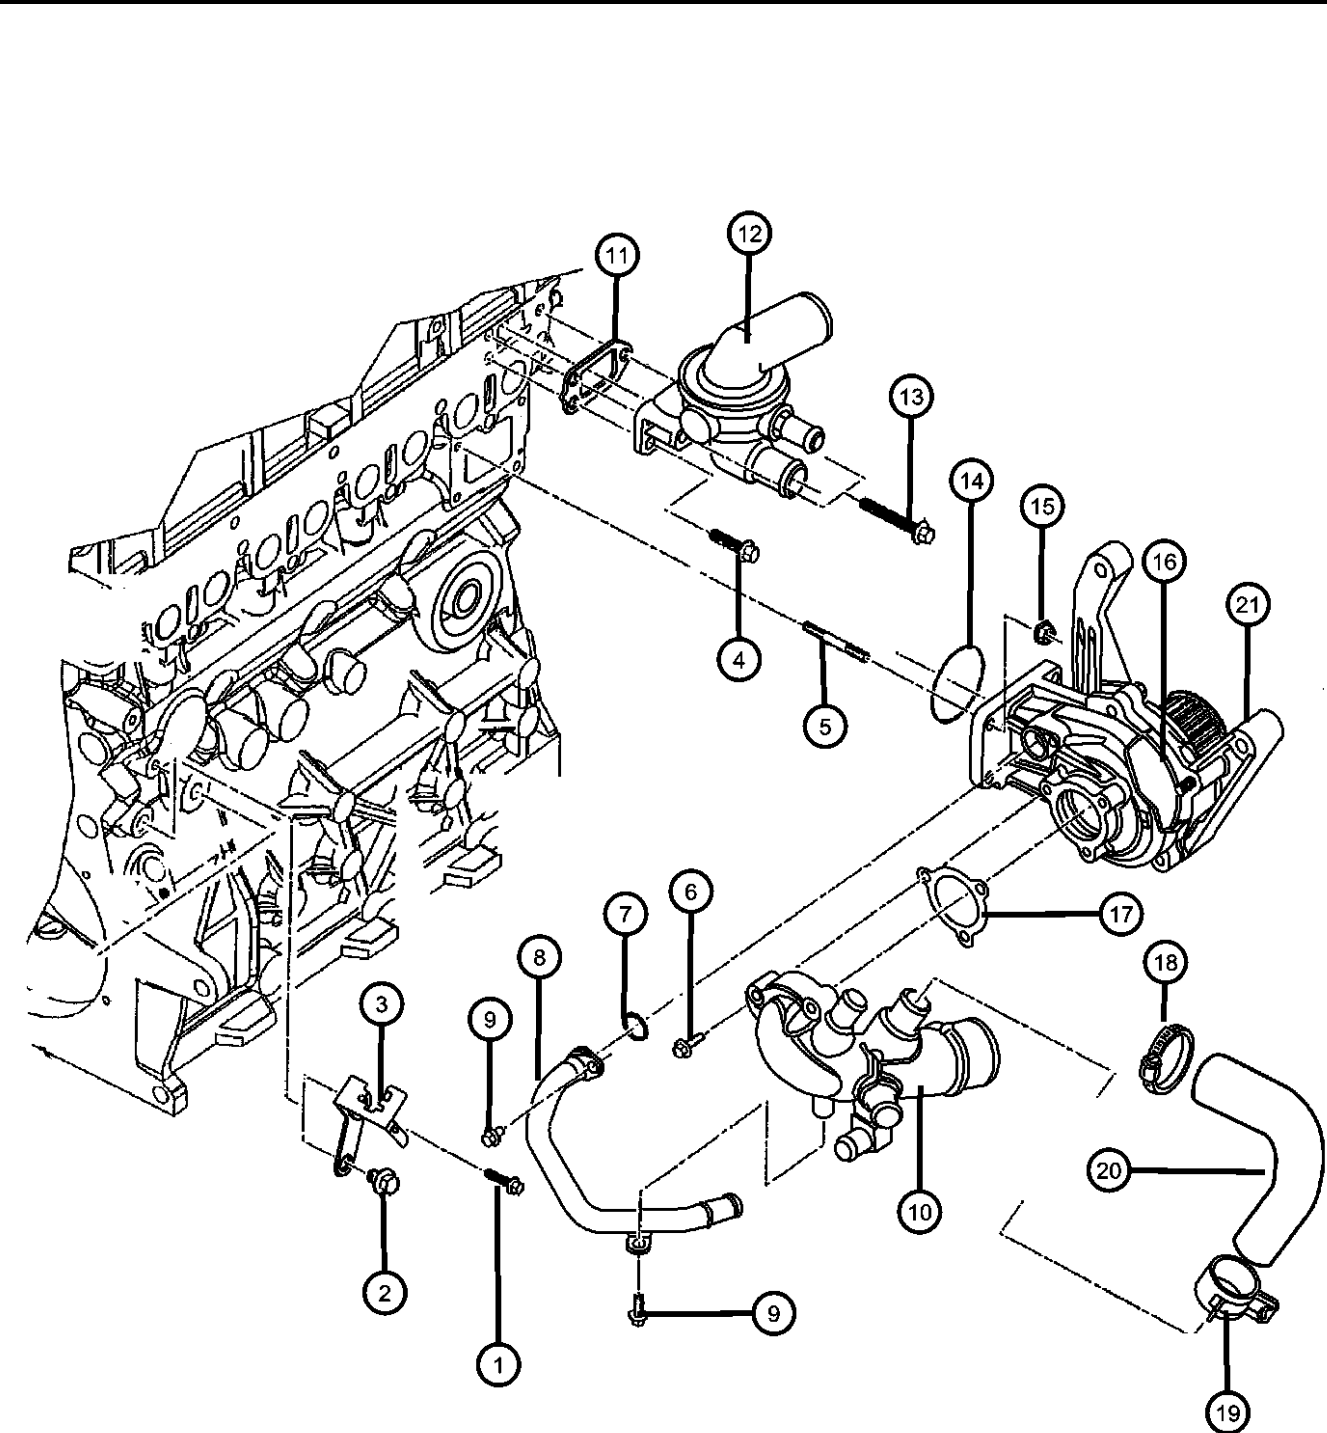

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	05015113AA	1				EN0	DG0		
		2				EN0	DBB		
14	05069141AA	1				EN0	DG0		O RING, Water Pump
		1				EN0	DBB		
15	04778961	4				EN0	DBB		NUT
		4				EN0	DG0		
16	05072707AA	1				EN0	DG0		O RING
		1				EN0	DBB		
17	04864575	1				EN0	DG0		GASKET, Water Pump
		1				EN0	DBB		
18	04720453	1				EN0	DG0		CLAMP, Hose
		1				EN0	DBB		
19	04886050AA	1				EN0	DG0		CLAMP, Heater Hose
		1				EN0	DBB		
20	05093912AA	1				EN0	DG0		HOSE, Water Pump Bypass
		1				EN0	DBB		
21	05093911AA	1				EN0	DG0		PUMP, Water
		1				EN0	DBB		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	


AR = use ase required - = Non illustrated part

Coolant Tank, 2.4L Engine  
Figure 7-305

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[ED0]= All 2.2L, 2.5L, 2.4L, 4 C  
[EK0]= All 3.7L, 6 Cylinder Gas Engines  
[EN0]= All 2.5L 4 Cylinder Diesel Engine

1	52079702AD	1				ED0			BOTTLE, Coolant Recovery
2	52079331	1				ED0			CAP, Coolant Reserve Tank
3	04026148	1				ED0			HOSE, Coolant Reserve Tank
4	J3180725	1				ED0			CLAMP, Hose
5	04026148	1				ED0			HOSE, Coolant Reserve Tank
6	06506603AA	2	J, T						NUT, M6x1.00
7	06506603AA	2							CLIP, (NOT SERVICED)
8	52080133AB	2				ED0			CLIP, Hose

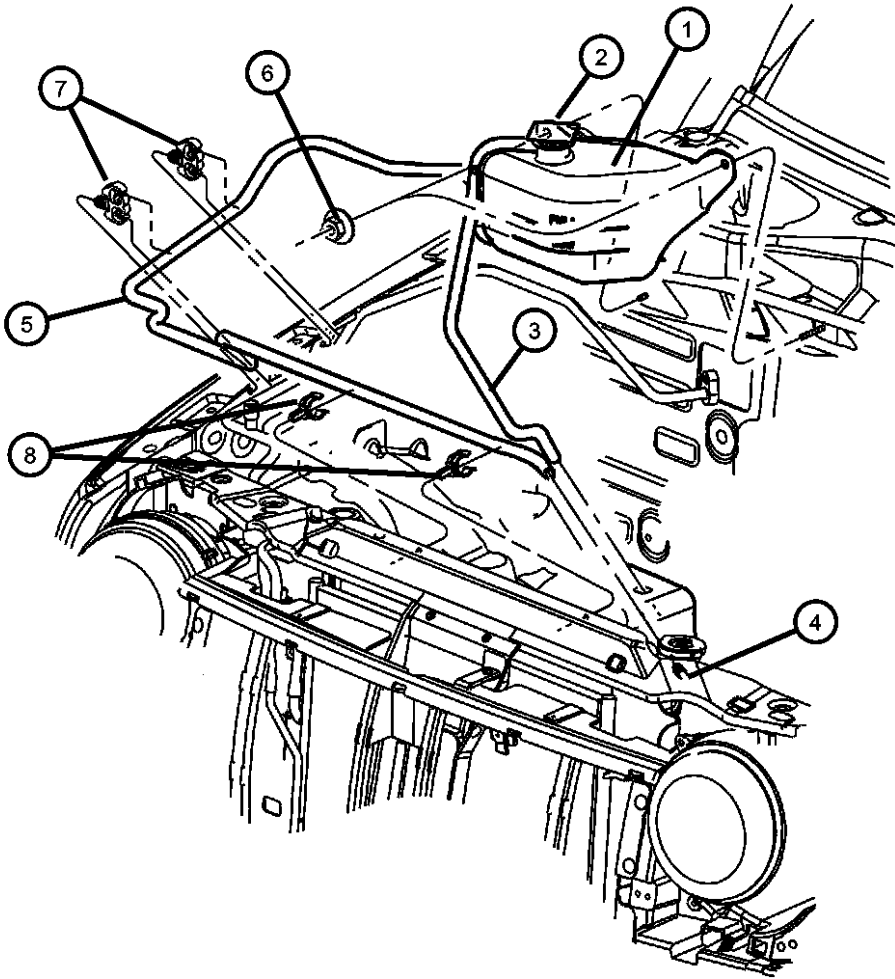

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part

Coolant Tank, 3.7L Engine  
Figure 7-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[EK0]= All 3.7L, 6 Cylinder Gas Engines


1	52079848AA	1				EK0			BOTTLE, Coolant Recovery
2	52079848AA	1							CAP, Radiator, 04596198, (NOT SERVICED)
3	04026148	1				ED0			HOSE, Coolant Reserve Tank
4	52079632AA	2				EK0			CLAMP, Oil Cooler Tube
5	06506603AA	2				ED0, EK0, EN0			NUT, M6x1.00
6	52128508AC	3				EK0			CLIP, Hose
7	52128508AC	3							CLIP, Hose, 52007404, (NOT SERVICED)
8	05086496AA	1				EK0			HOSE, Overflow, Roll Stock

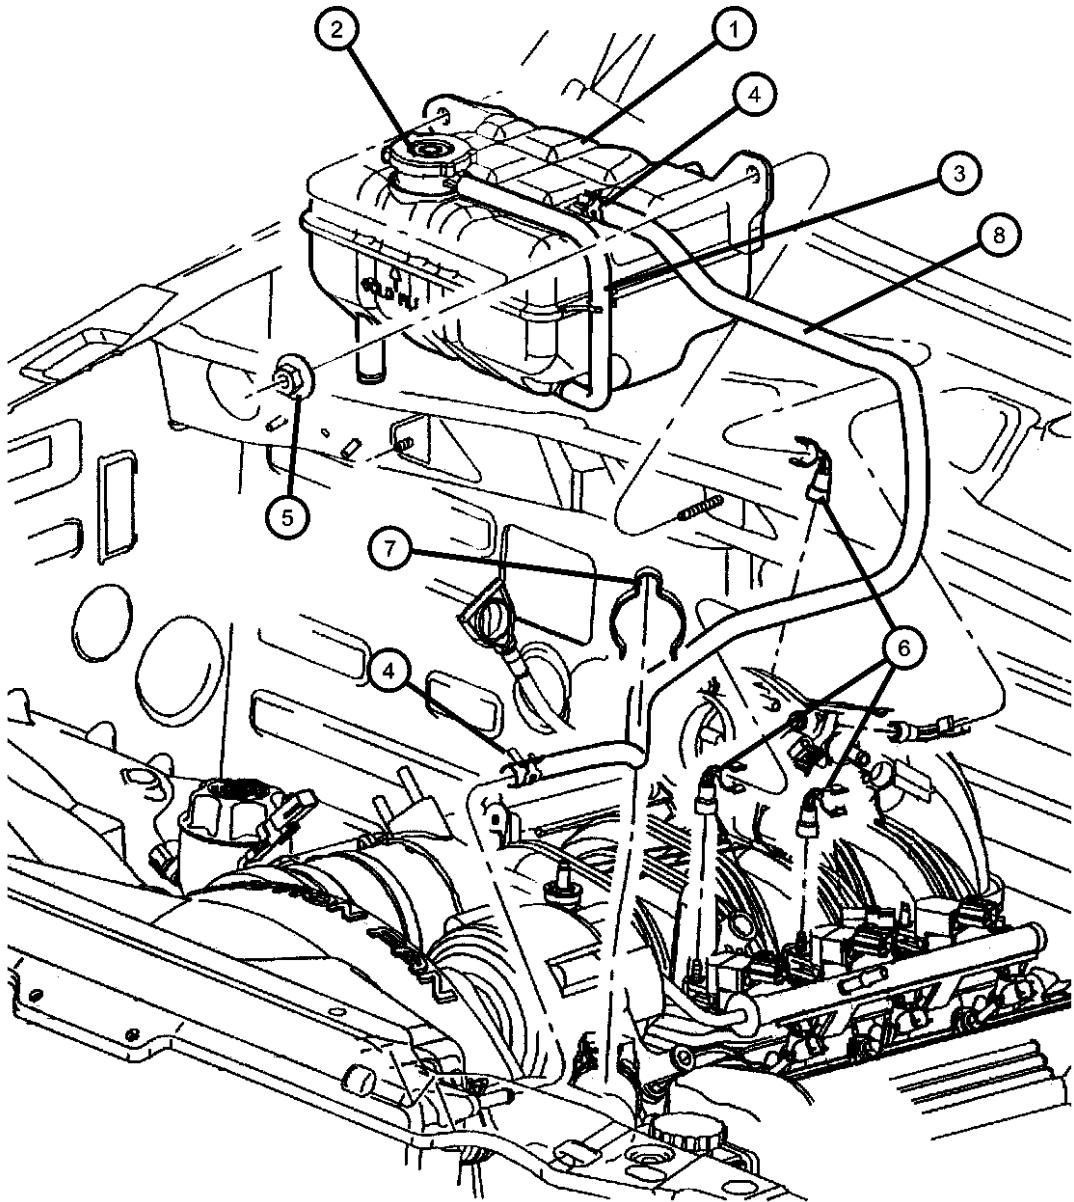

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Coolant Degasser Tank, 2.5,2.8L Diesel Engine  
Figure 7-320


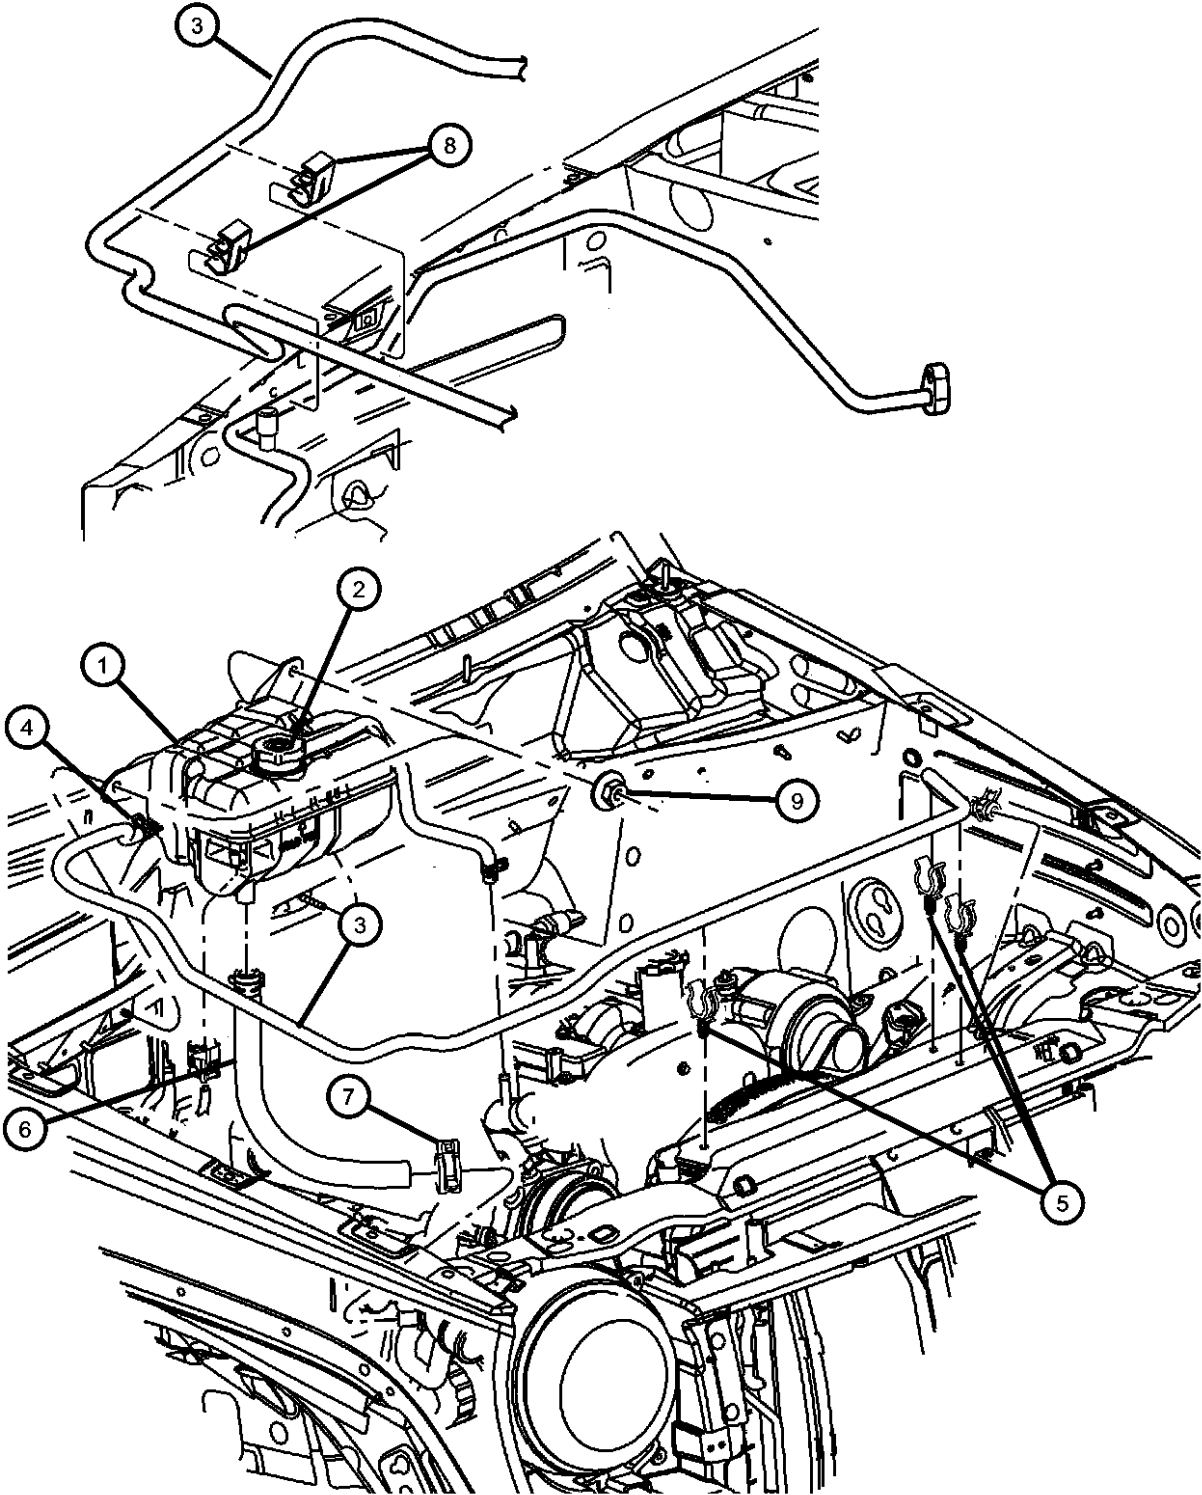


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	52079849AA	1				EN0			TANK, Coolant Reserve
2	52079849AA	1							CAP, Radiator, 04596198, (NOT SERVICED)
3	04026148	1				EN0			HOSE, Coolant Reserve Tank
4	52079632AA	4				EN0			CLAMP, Oil Cooler Tube
5	52080133AB	2				EN0			CLIP, Hose
6	52079856AB	1				EN0			HOSE, Coolant Recovery Bottle
7	06502018	2				EN0			CLAMP, Hose, M28.9 x 1.60
8	06502018	2							CLIP, (NOT SERVICED)
9	06502018	2							NUT, M6X1.00, (NOT SERVICED)

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Drive Pulleys, 2.4L Engine  
Figure 7-410

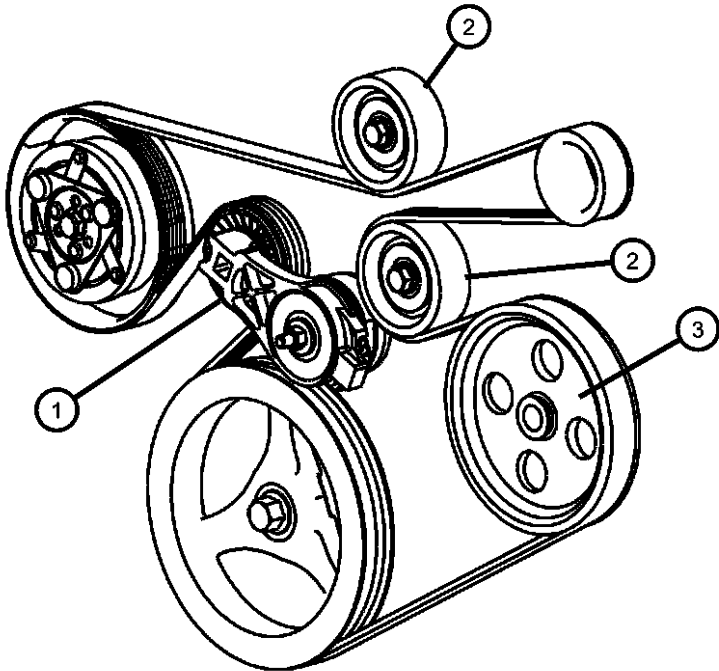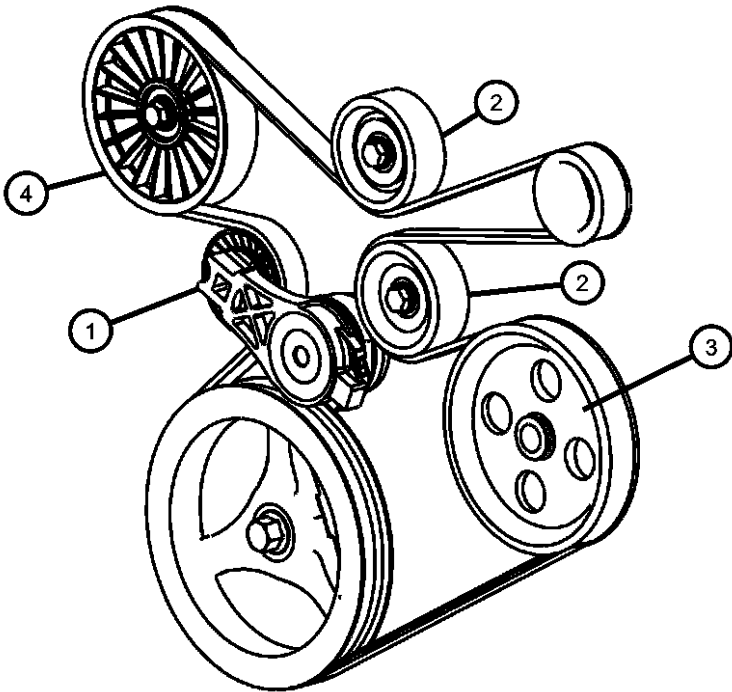

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[ED0]= All 2.2L, 2.5L, 2.4L, 4 C


1	04861277AB	1				ED0			TENSIONER, Belt
2	53013324AA	2				ED0			PULLEY, Idler
3	53031722AA	1				ED0			PULLEY, Power Steering Pump
4	53013366AA	1				ED0			PULLEY, Idler, without Air Conditioning
-5	34202781	1				ED0			SCREWIdler Pulley

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Drive Pulleys, 3.7L Engine  
Figure 7-420

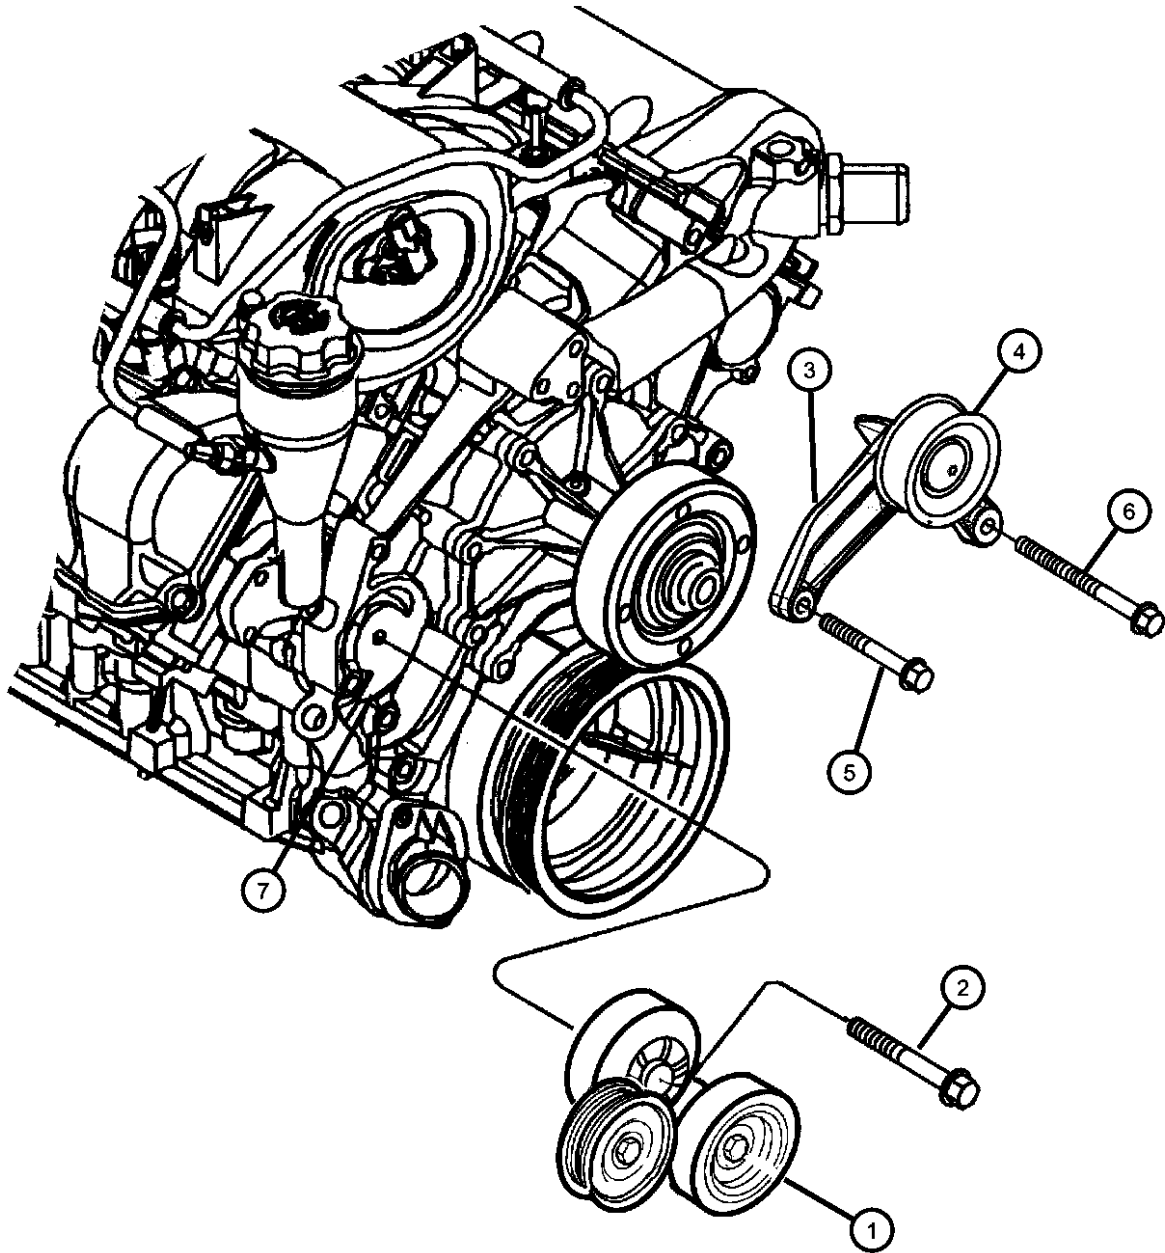


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes									
[ED0]= All 2.2L, 2.5L, 2.4L, 4 C									
[EK0]= All 3.7L, 6 Cylinder Gas Engines									
1	53030958AD	1				EK0			TENSIONER, Alternator Belt
2	06504930AA	1				EK0			SCREW AND WASHER, Hex Head, M10x1.5x70
3	53030959	1				EK0			BRACKET, Idler Pulley, [HC0]
4	53031045	1				EK0			PULLEY, Idler, [HC0]
5	06505487AA	1				EK0			SCREW AND WASHER, M10x1.5x45
6	06504344	1				EK0			SCREW AND WASHER, Hex Head
7	06507856AA	1				EK0			SCREW AND WASHER

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Drive Pulleys, 2.5,2.8L Diesel Engine  
Figure 7-430

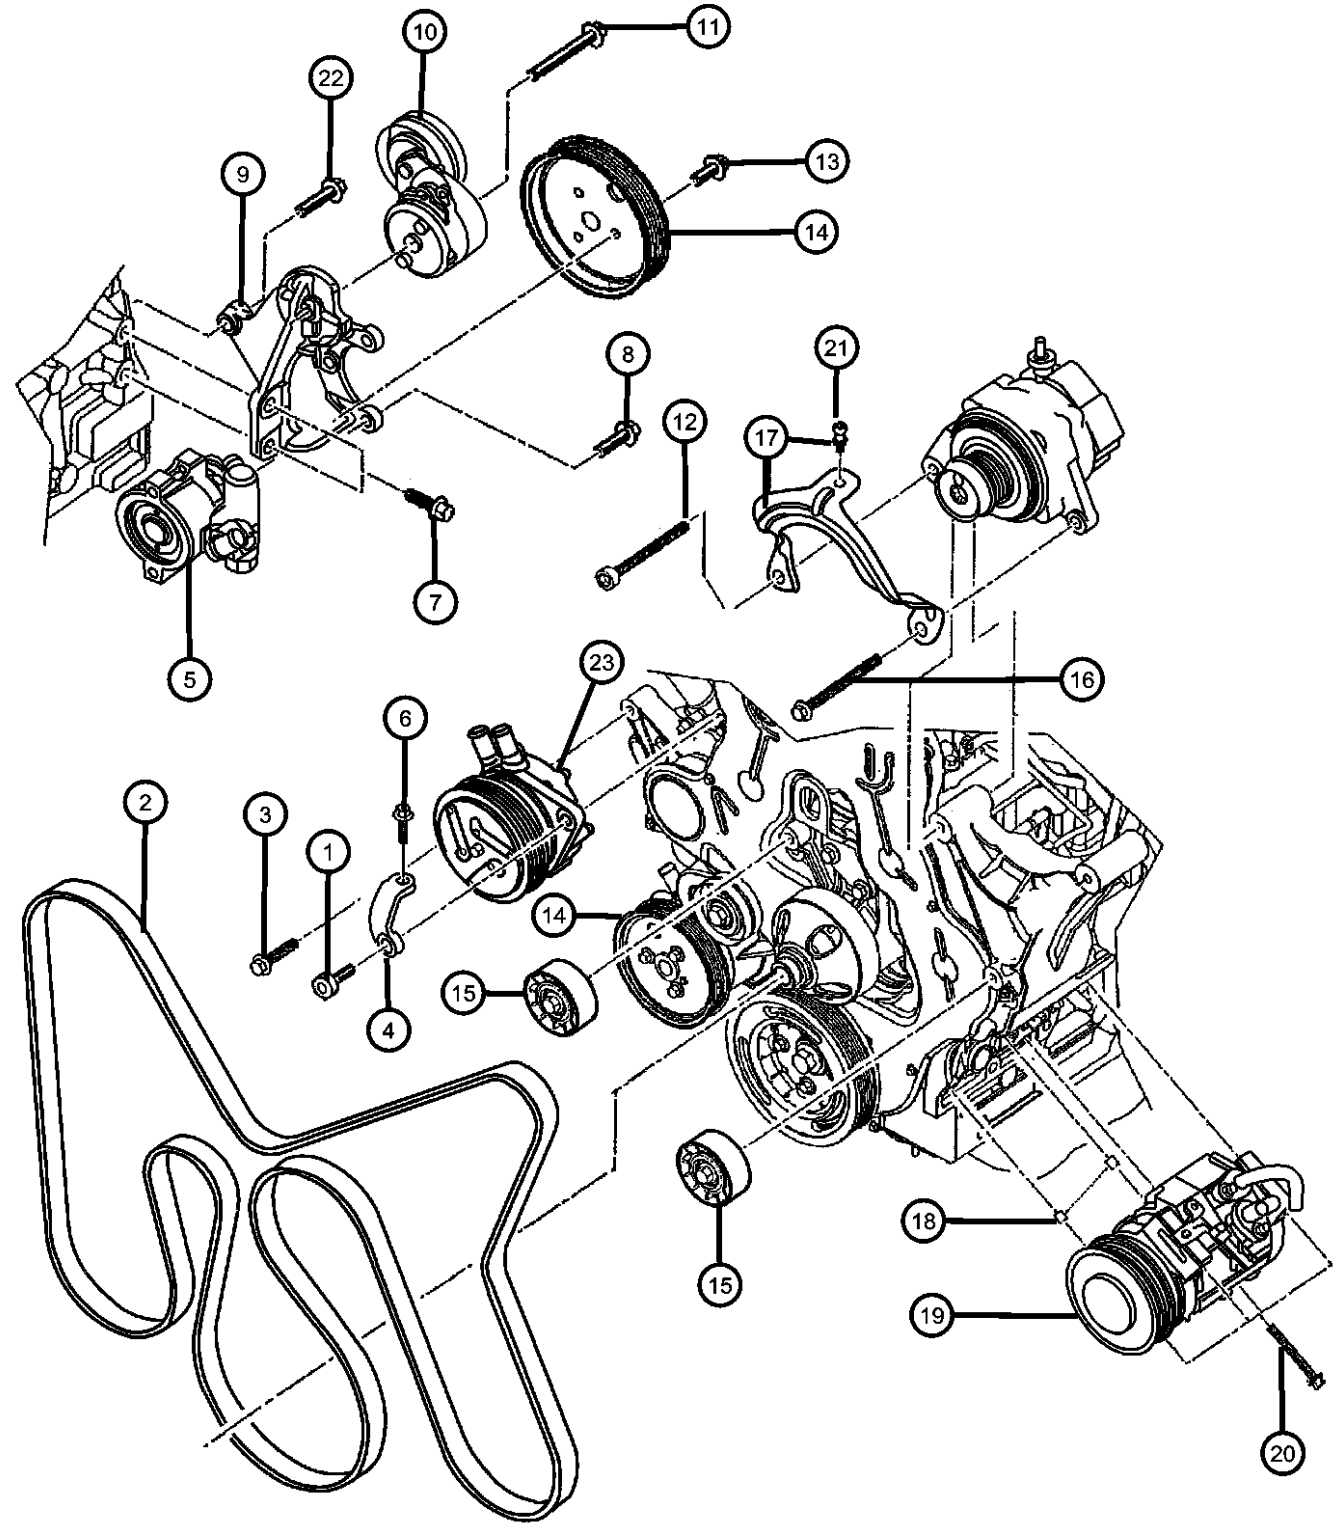

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Ote; Sales Codes  
[EN0]= All 4 Cylinder Diesel Engine

1									SCREW
	05093933AA	1				EN0	DG0		
		1				EN0	DBB		
2									BELT, Accessory Drive
	05072437AB	1				EN0	DG0		
		1				EN0	DBB		
3									BOLT, M10x45
	05003533AA	2				EN0	DBB		
		2				EN0	DG0		
4									BRACKET
	05072436AA	1				EN0	DG0		
		1				EN0	DBB		
5									PUMP, Power Steering
	52088712AC	1				EN0	DG0		
	05166226AA								Mopar Power Steering Fluid Pint
		1				EN0	DBB		
	05166226AA								Mopar Power Steering Fluid Pint
6									SCREW
	05003557AA	1				EN0	DG0		
		1				EN0	DBB		
7									BOLT, Adaptor Plate
	05003532AA	4				EN0	DBB		
		4				EN0	DG0		
8									BOLT, 8Mx20
	04864537	3				EN0	DG0		
		5				EN0	DBB		
9	05093935AA	1				EN0	DG0		BRACKET, Tensioner
10									TENSIONER, Belt

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16v	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Drive Pulleys, 2.5,2.8L Diesel Engine  
Figure 7-430

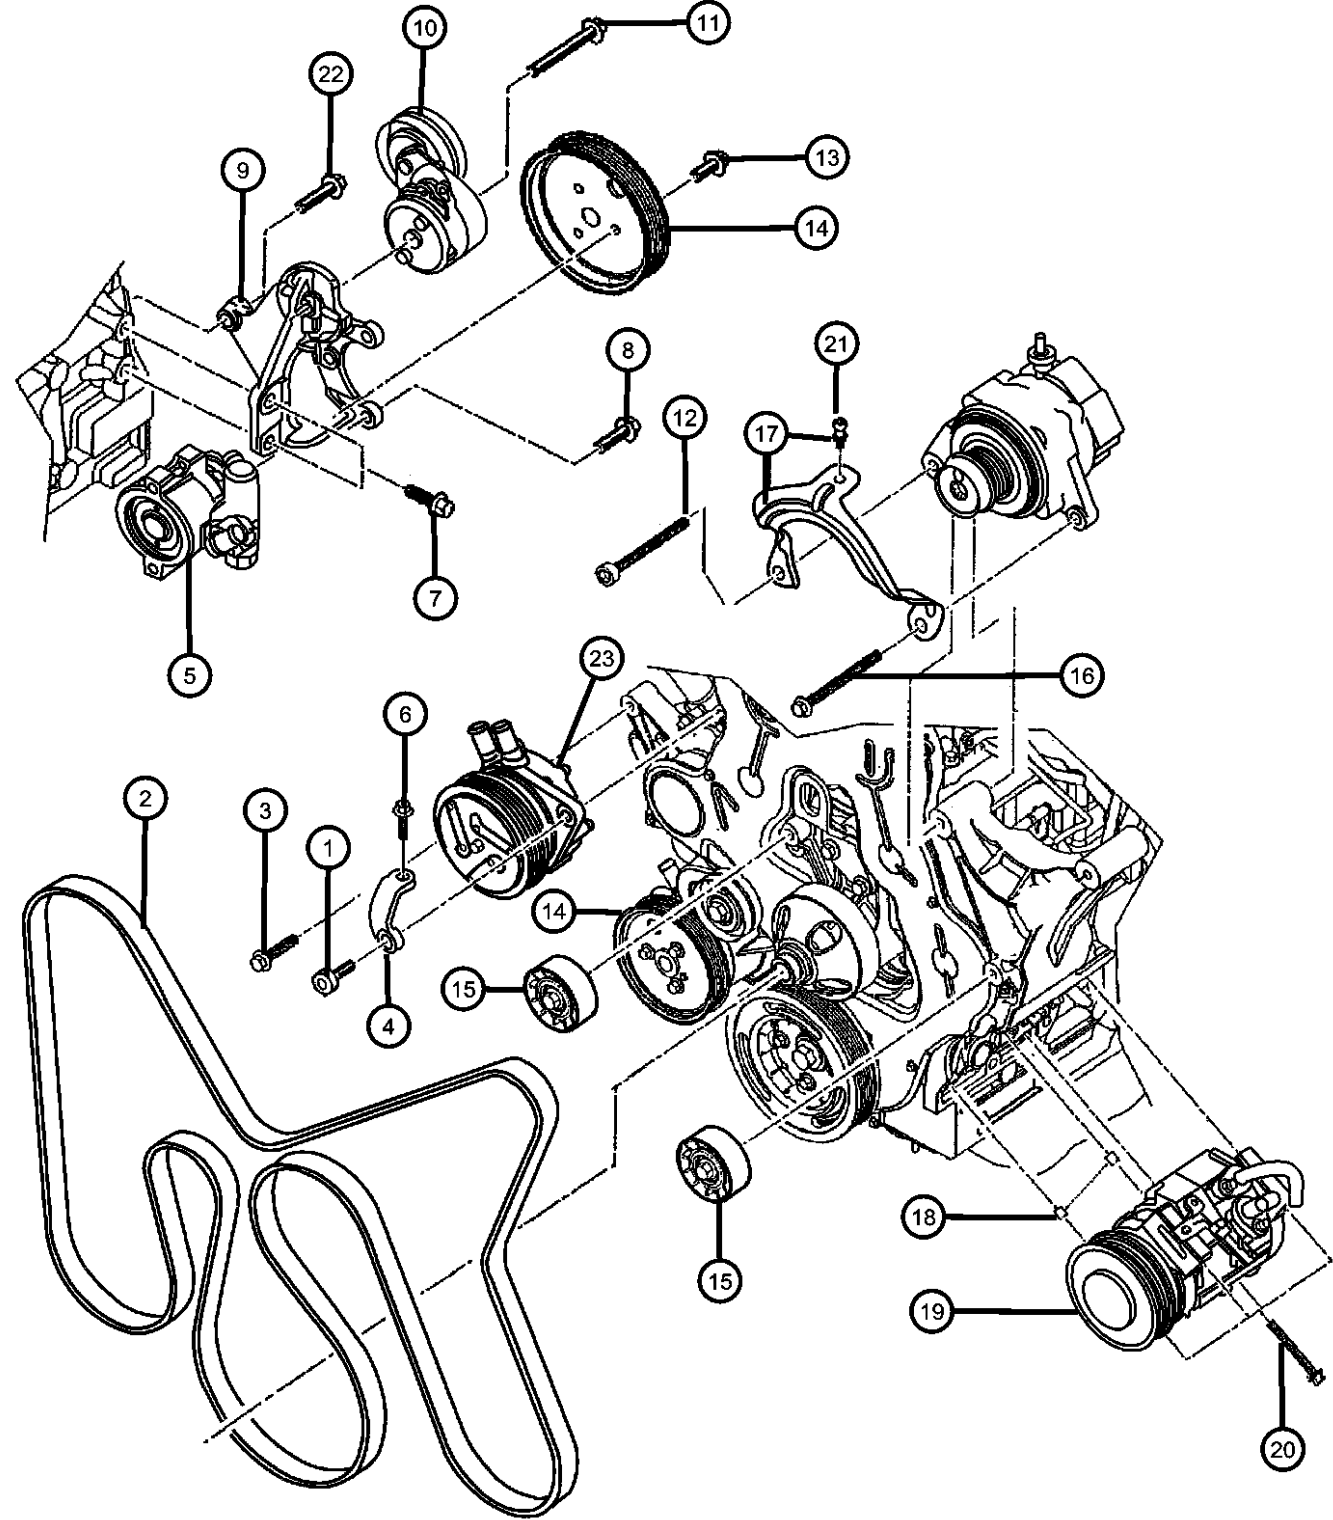


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
11	05072440AA	1				EN0	DG0		SCREW
		1				EN0	DBB		
12	05015612AA	1				EN0	DG0		SCREW
		1				EN0	DBB		
13	05093936AA	1				EN0	DG0		SCREW
		1				EN0	DBB		
14	05003554AA	1				EN0	DG0		PULLEY, Power Steering Pump
		3				EN0	DBB		
15	05072441AA	1				EN0	DG0		PULLEY, Idler
		1				EN0	DBB		
16	05066938AA	2				EN0	DBB		SCREW
		2				EN0	DG0		
17	05093938AA	1				EN0	DG0		BRACKET, Alternator
		1				EN0	DBB		
18	05093939AA	1				EN0	DG0		PIN
		1				EN0	DBB		
19	05066930AA	2				EN0	DBB		COMPRESSOR, Air Conditioning
		2				EN0	DG0		
20	55037467AB	1				EN0	DG0		BOLT
		1				EN0	DBB		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Drive Pulleys, 2.5,2.8L Diesel Engine  
Figure 7-430

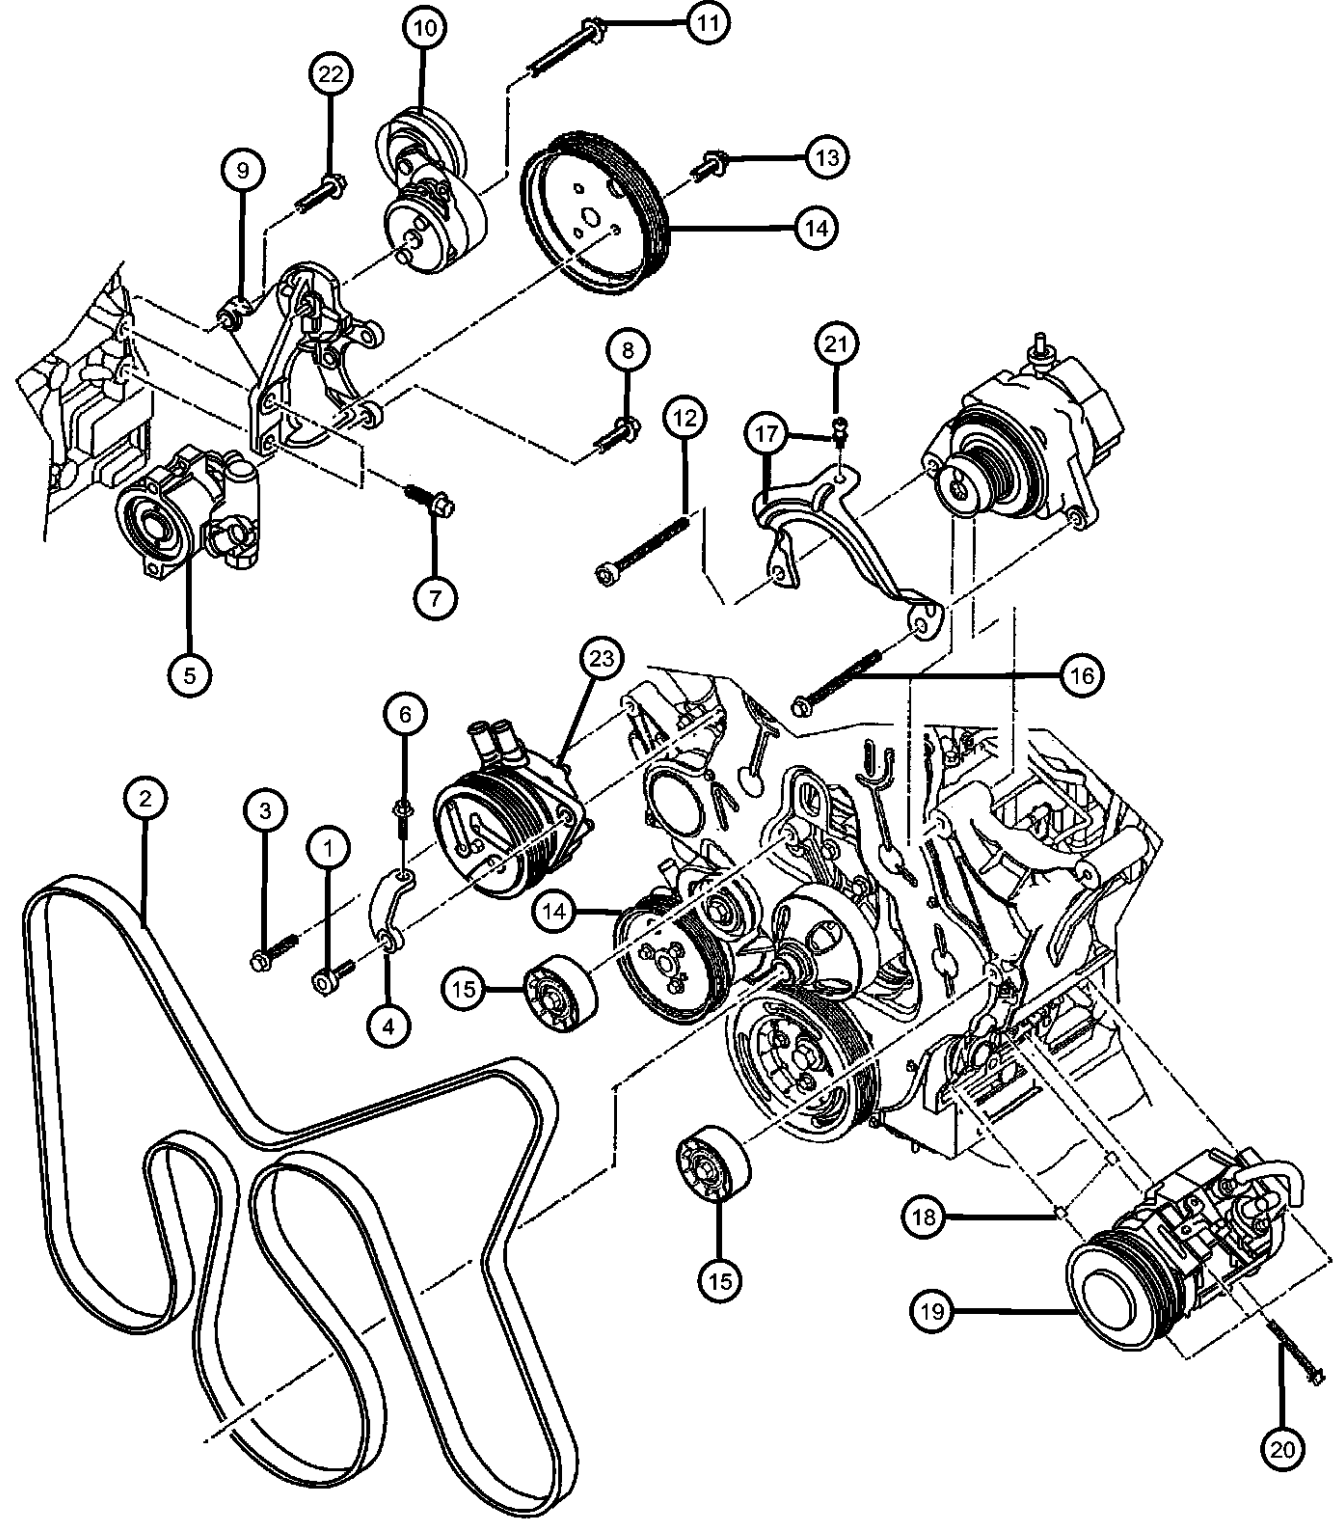


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
21	05015043AA	4				EN0	DBB		SCREW
		4				EN0	DG0		
	05093941AA	1				EN0	DG0		
		1				EN0	DBB		
22	04897253AA	1				EN0	DG0		BOLT, Hex Flange Head, M10x35
		1				EN0	DBB		
23	55037539AA	1				EN0	DG0		HEATER, Engine
		1				EN0	DBB		

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Drive Belts, 2.4L Engine  
Figure 7-510

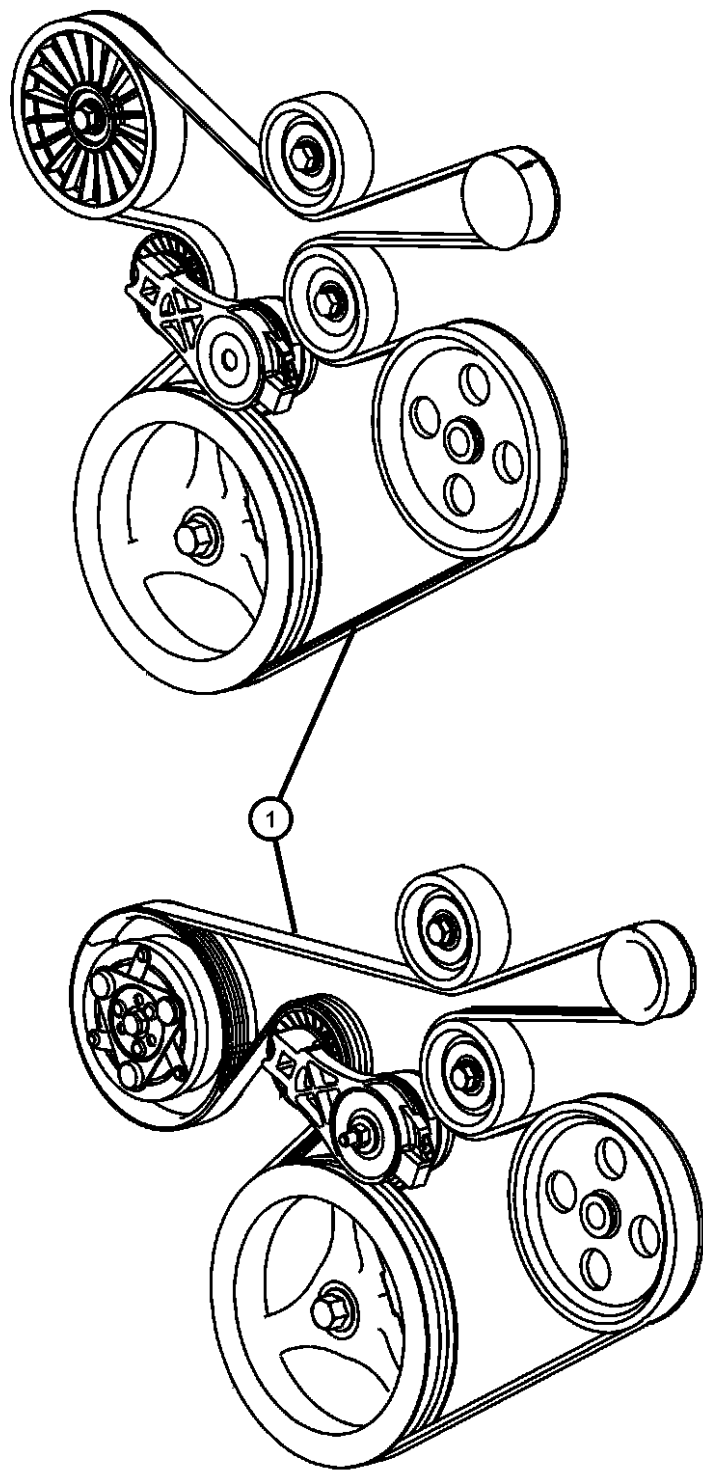

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder

1									BELT, Accessory Drive
	05281351AC	1				ED0			with Air Conditioning
	53013352AD	1				ED0			without Air Conditioning

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions



AR = use ase required - = Non illustrated part

Drive Belts, 3.7L Engine  
Figure 7-520

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[EK0]= All 3.7L, 6 Cylinder Gas Engines

1	53032037AJ	1				EK0			BELT, Accessory Drive, with or without Air Conditioning
---	------------	---	--	--	--	-----	--	--	---

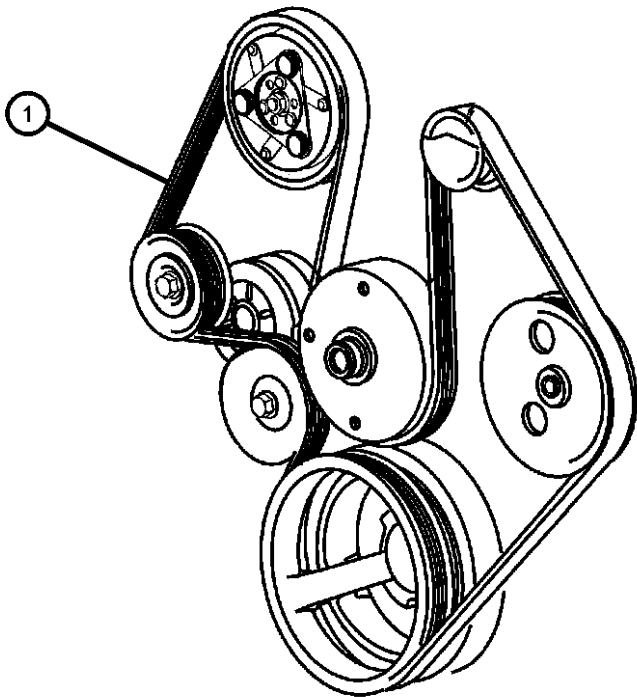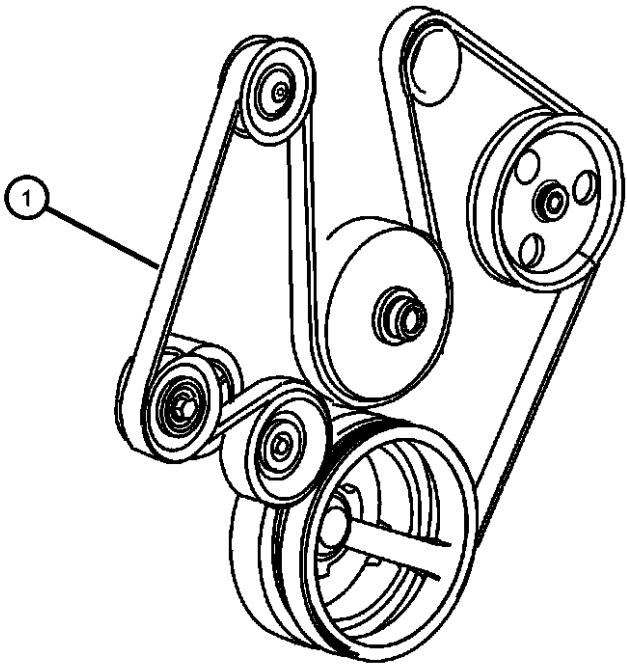


LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Drive Belts, 2.5,2.8L Diesel Engine  
Figure 7-530

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [EN0]= All 2..5L 4 Cylinder Diesel Engine									
1									BELT, Accessory Drive
	05072437AB	1				EN0	DG0		
		1				EN0	DBB		

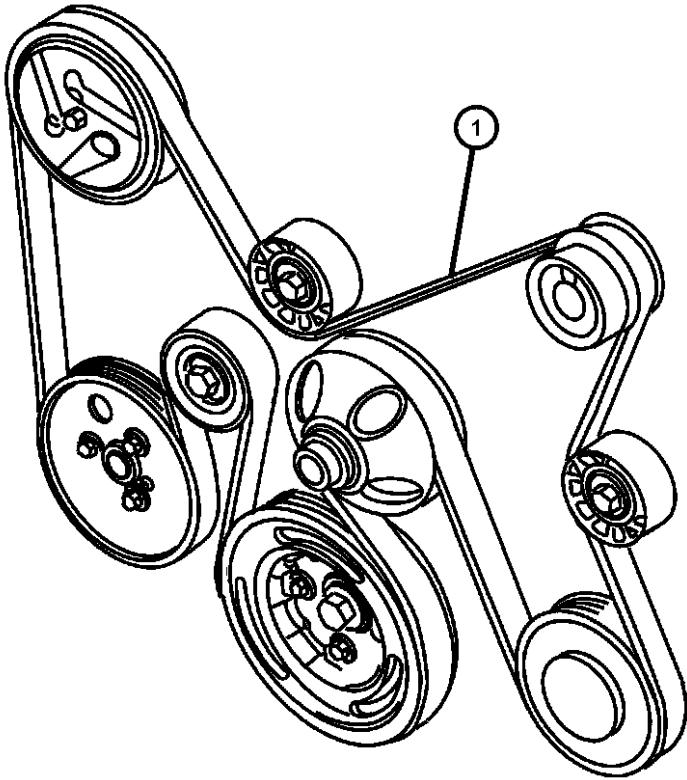

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Oil Cooler Lines  
Figure 7-610

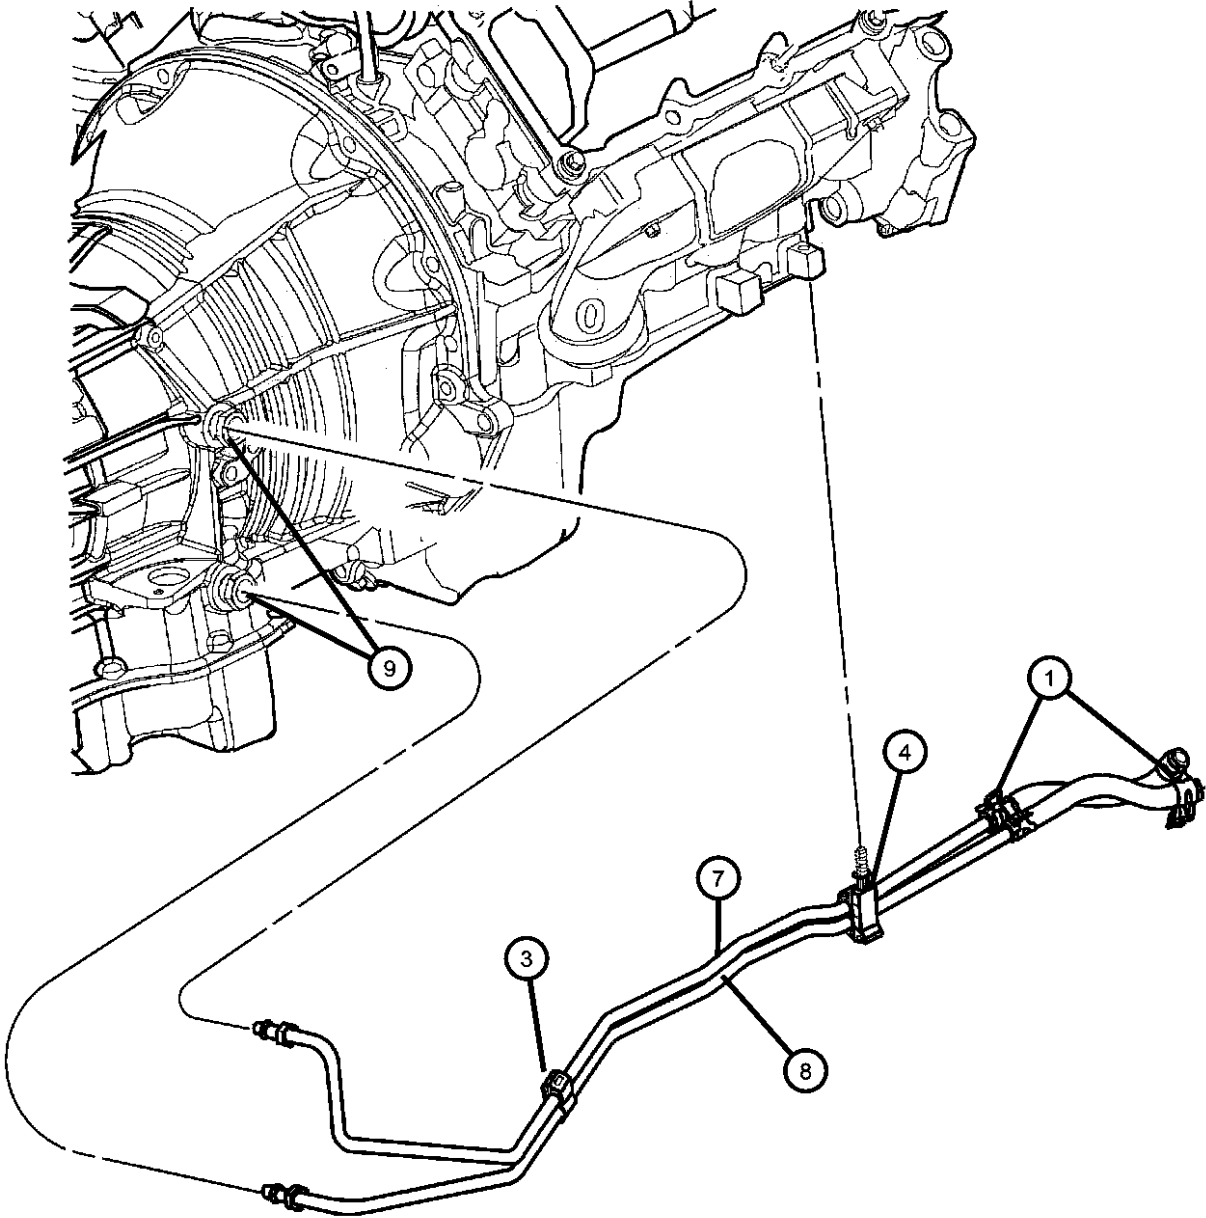

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[EK0]= All 3.7L, 6 Cylinder Gas Engines  
[EN0]= All 2.5L 4 Cylinder Diesel Engine

1	52079632AA	2				EK0			CLAMP, Oil Cooler Tube
-2	06502081	1	J, U						CLAMP, Oil Cooler Line
3	04815987AB	1					DG6		CLIP, Oil Cooler Tube
4	52079878AB	1					DG6		CLIP, Oil Cooler Tube
-5	06033878	2					DG6		NUT, Flared Tube
-6	52079877AA	1				EN0	DG0		CLIP, Oil Cooler Tube
7									TUBE AND HOSE, Supply
	05103255AA	1					DG6		
	52079844AC	1				EN0	DG0		
8									TUBE AND HOSE, Return
	05103256AA	1					DG6		
	52079846AC	1				EN0	DG0		
9									NUT, Transmission Case
	04799433AB	2	J, U				DG6		
		2	T				DG6		


LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part



Grille and Related Parts  
Figure 7-710


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55156608AB	1							GRILLE, Radiator
2	55156609AB	1							GRILLE, Texture
3	06036366AA	4							SCREW, Tapping, .164-18x.75




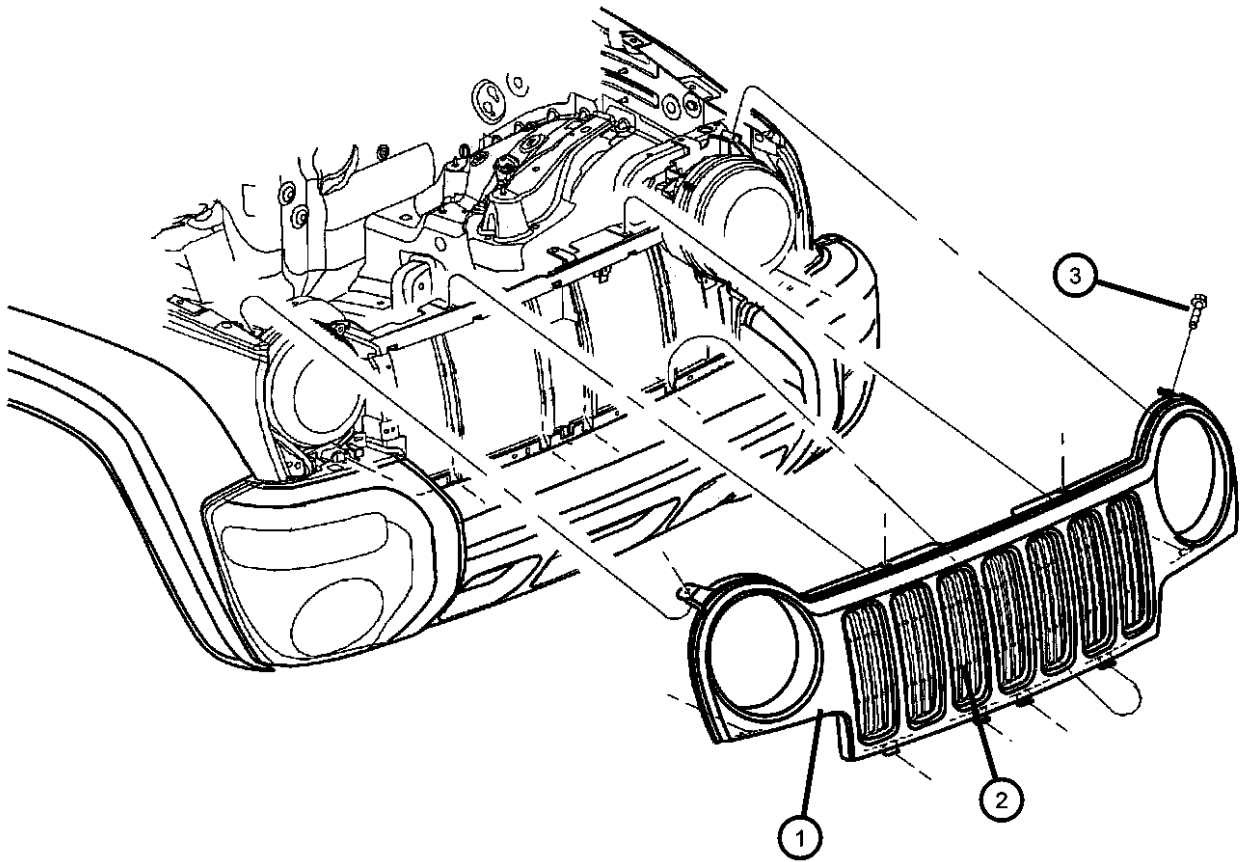

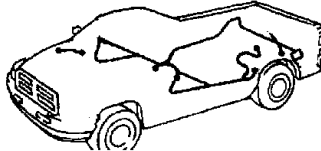

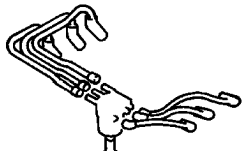
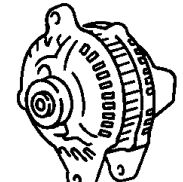
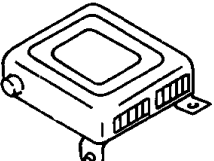
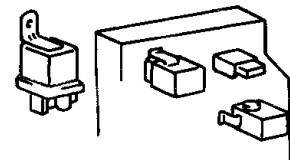
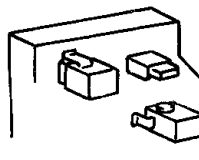
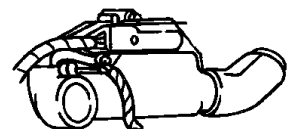
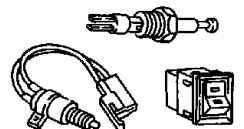
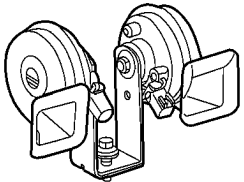


<b>LIBERTY (KJ)</b>				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

# Group - 8

## Electrical

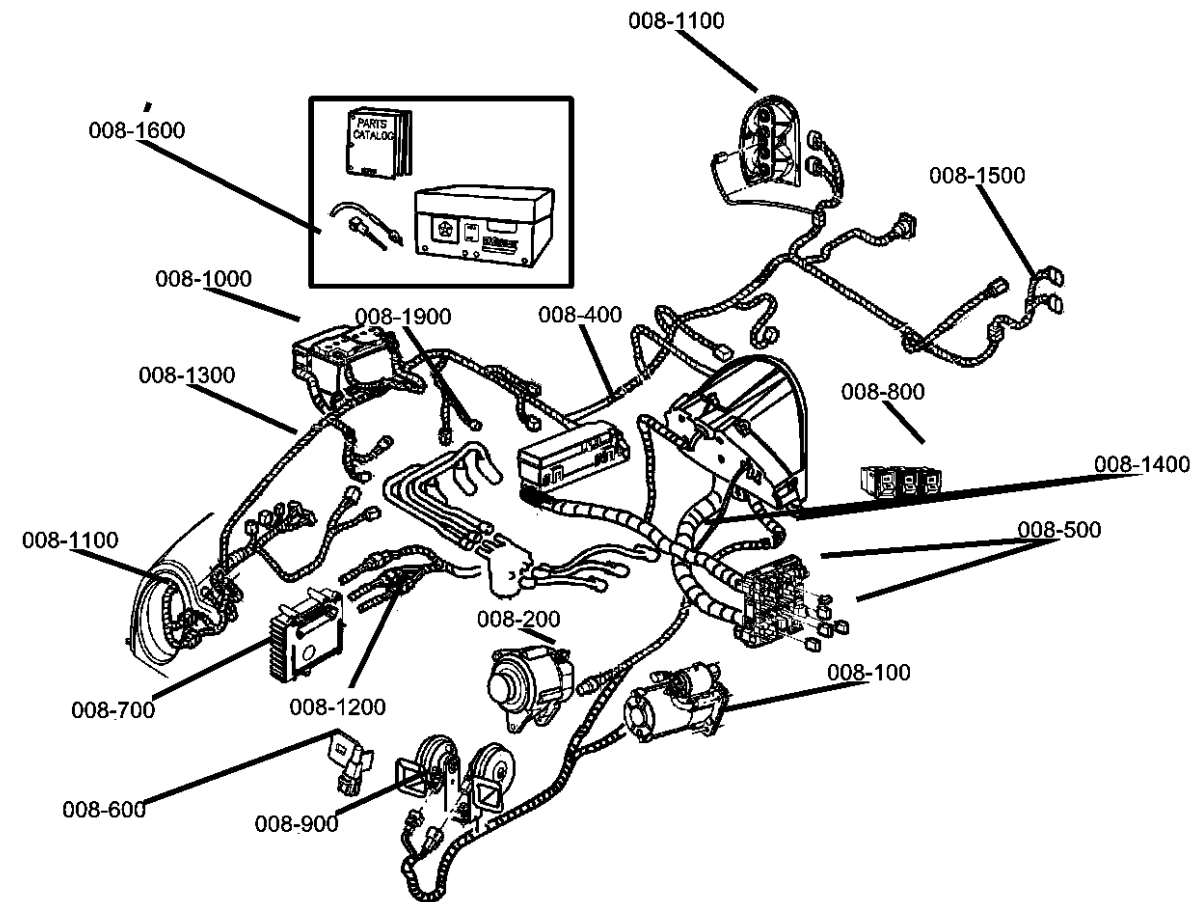

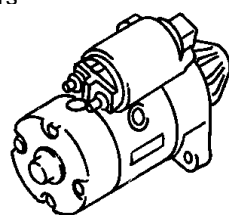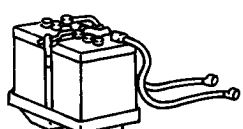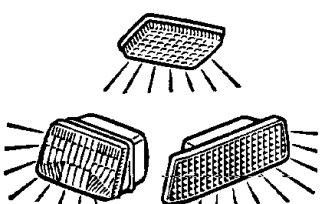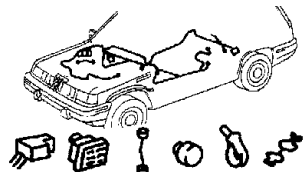
<b>008-100</b> Starters 	<b>008-1000</b> Battery Tray and Cables 	<b>008-1100</b> Lamps - Front, Rear and Courtesy 	<b>008-1200</b> Wiring-Engine & Related Parts 
<b>008-1300</b> Wiring-Headlamp to Dash 	<b>008-1400</b> Wiring-Instrument Panel <b>WIRING INSTR. PANEL</b>	<b>008-1500</b> Wiring-Body & Accessories 	<b>008-1600</b> Wiring Repair <b>WIRING REPAIR PKG.</b>
<b>008-1700</b> Air Bag Systems 	<b>008-1900</b> Spark Plugs-Cables-Coils 	<b>008-200</b> Alternators 	<b>008-400</b> Modules 
<b>008-500</b> Relays 	<b>008-600</b> Sensors 	<b>008-700</b> Single Board Engine Controllers 	<b>008-800</b> Switches 
<b>008-900</b> Horns 			

Group - 8 Electrical		Air Bags and Clock Spring.....Fig. 8 - 1710
Illustration Title	Group-Fig. No.	Spark Plugs-Cables-Coils
		Spark Plug - Coil .....Fig. 8 - 1910
<b>Starters</b>		
Starter and Mounting (2.4L Engine) [ED0] .....	Fig. 8 - 105	
Starter and Mounting (3.7L Engine) [EK0] .....	Fig. 8 - 110	
Starter and Mounting, 4.5L [EN0] .....	Fig. 8 - 115	
<b>Alternators</b>		
Alternator (2.4L Engine) [ED0] .....	Fig. 8 - 205	
Alternator (3.7L Engine) [EK0] .....	Fig. 8 - 210	
Alternator (2.5L Diesel Engine) [EN0] .....	Fig. 8 - 215	
<b>Modules</b>		
Modules .....	Fig. 8 - 410	
<b>Relays</b>		
Junction Block, Relays, Circuit Breaker .....	Fig. 8 - 510	
<b>Sensors</b>		
Sensor, Engine (2.4L Engine) [ED0] .....	Fig. 8 - 605	
Sensors, Engine (3.7L Engine) [EK0] .....	Fig. 8 - 610	
Sensors, Engine (2.5L Diesel) [EN0] .....	Fig. 8 - 615	
Sensors, Oxygen 2.4L [ED0] .....	Fig. 8 - 620	
Sensors, Oxygen 3.7L [EK0] .....	Fig. 8 - 625	
Sensor (Drive Train) .....	Fig. 8 - 635	
Sensor (Body) .....	Fig. 8 - 640	
<b>Single Board Engine Controllers</b>		
JTEC Modules & Solenoids .....	Fig. 8 - 710	
<b>Switches</b>		
Switches (Instrument Panel and Console) .....	Fig. 8 - 810	
Switches (Drive Train) .....	Fig. 8 - 820	
Switches (Body) .....	Fig. 8 - 830	
<b>Horns</b>		
Horns .....	Fig. 8 - 910	
<b>Battery Tray and Cables</b>		
Battery Tray & Cables .....	Fig. 8 - 1010	
<b>Lamps - Front, Rear and Courtesy</b>		
Lamp, Front .....	Fig. 8 - 1110	
Lamps Roof (Renegade) .....	Fig. 8 - 1115	
Lamp, Rear .....	Fig. 8 - 1120	
Lamp, Courtesy .....	Fig. 8 - 1130	
Bulbs .....	Fig. 8 - 1135	
<b>Wiring-Engine &amp; Related Parts</b>		
Wiring, Engine & Related Parts .....	Fig. 8 - 1210	
<b>Wiring-Headlamp to Dash</b>		
Wiring, Headlamp / Dash .....	Fig. 8 - 1310	
<b>Wiring-Instrument Panel</b>		
Wiring Instrument Panel .....	Fig. 8 - 1410	
<b>Wiring-Body &amp; Accessories</b>		
Wiring, Body & Accessories .....	Fig. 8 - 1510	
<b>Wiring Repair</b>		
Wiring, Repair Package .....	Fig. 8 - 1610	
<b>Air Bag Systems</b>		
Air Bag Module and Sensors .....	Fig. 8 - 1705	

Starter and Mounting (2.4L Engine) [ED0]  
 Figure 8-105

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes: [ED0] = 2.4L 4 Cylinder Engine									
1	56041436AC	1				ED0			STARTER
2	06102120AA	2				ED0, EK0			SCREW AND WASHER, Hex Head, Starter mounting

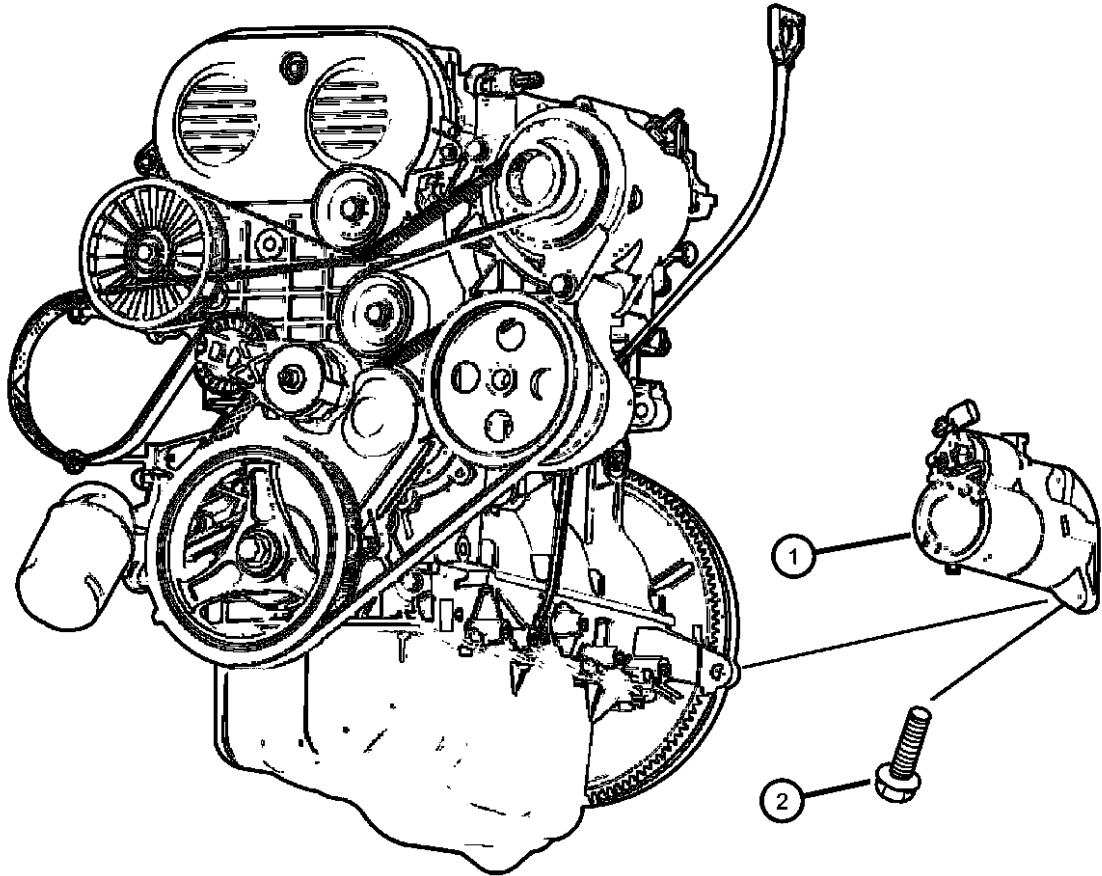

<b>LIBERTY (KJ)</b>				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions


AR = use ase required    - = Non illustrated part

Starter and Mounting (3.7L Engine) [EK0]  
 Figure 8-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Notes:  
 [EK0]=3.7L V6 Engine  
 [ED0] = 2.4L 4 Cylinder Engine


1	56041641AF	1				EK0			STARTER
2	06102120AA	2				ED0, EK0			SCREW AND WASHER, Hex Head, Starter mounting SHIELD, Starter
3	56044116AC	1				EK0			SCREW, Hex Flange Head, M12X1.75X110.00, M6x1x12, (NOT SERVICED)
4	56044116AC	1							

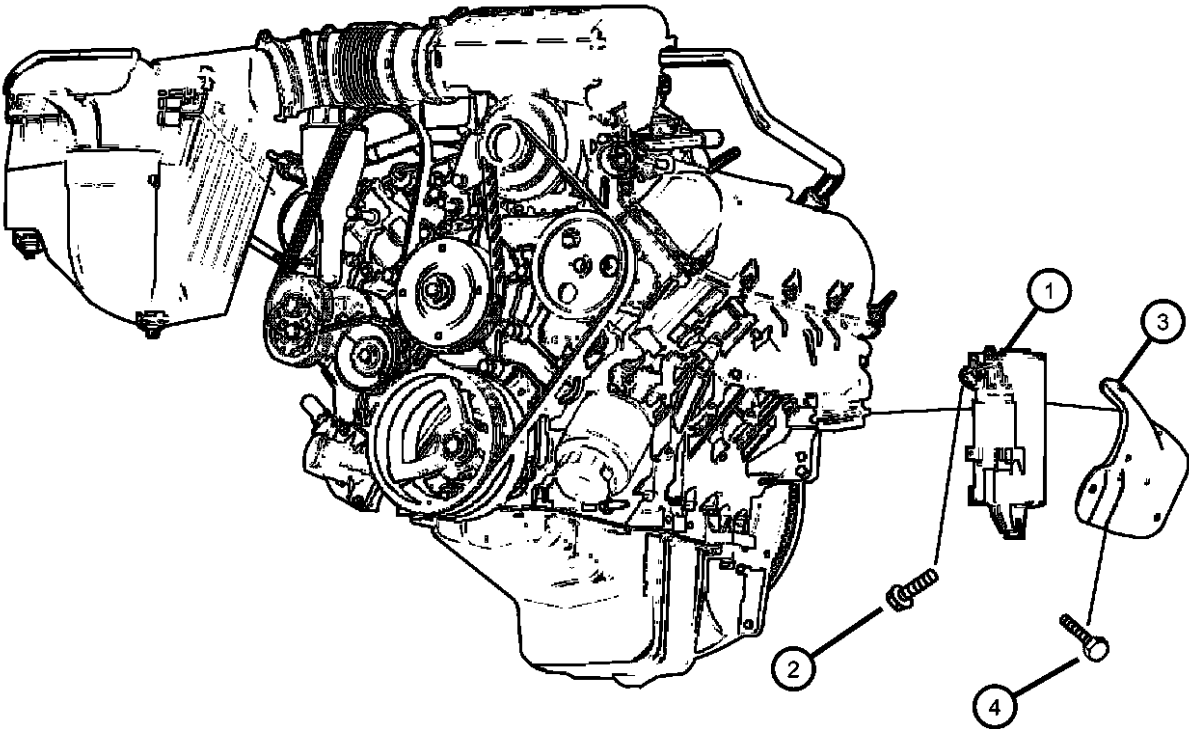

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part


**Starter and Mounting, 4.5L [EN0]**  
**Figure 8-115**

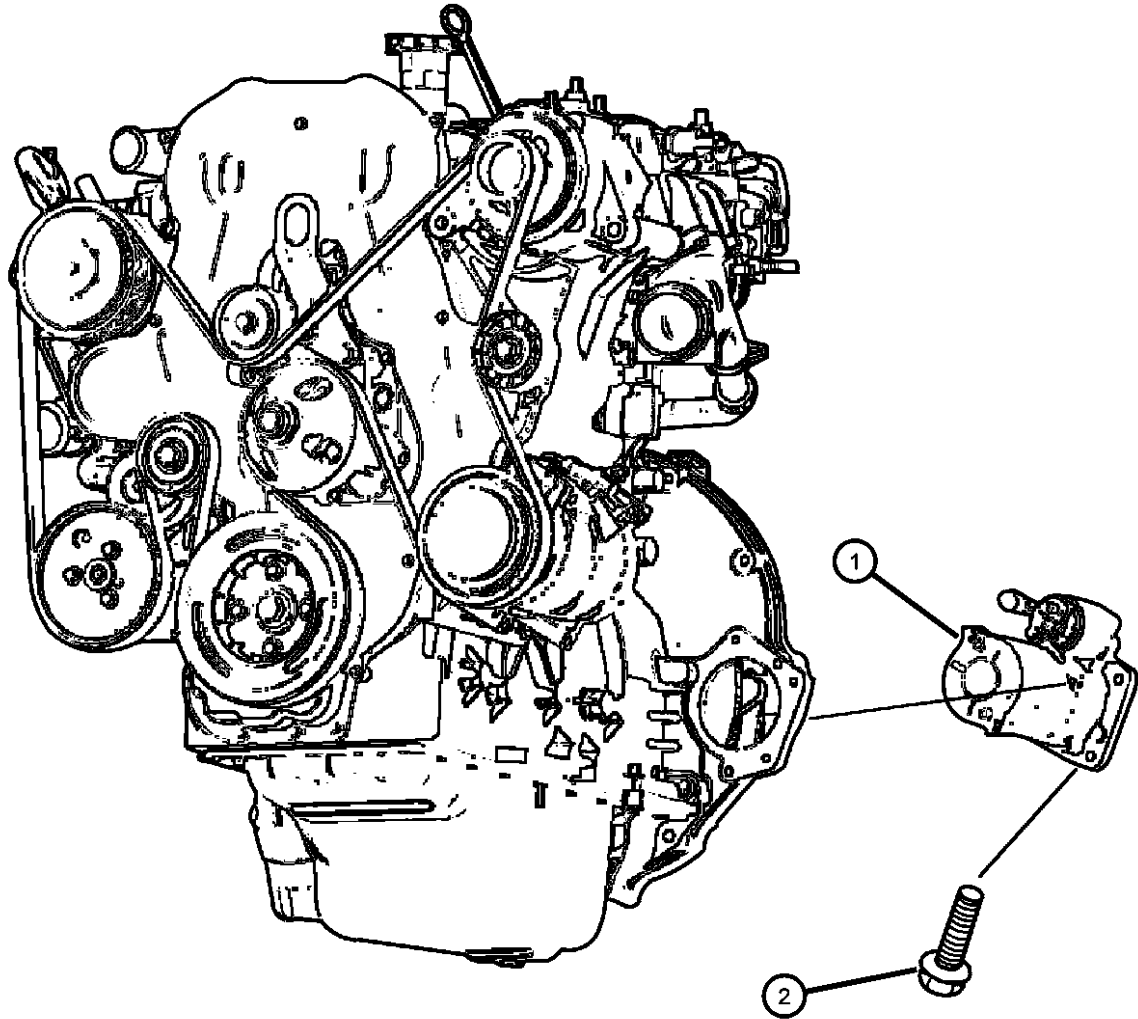

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes: [EN0] = 2.5L Diesel Engine [DG0] = All Automatic Transmissions [DBB] = All Manual Transmissions									
1	56041579AB	1				EN0			STARTER
2	06504171	3				EN0			SCREW, Hex Flange Head, M8x1.25x32
-3									WASHER, Starter
	04723279	1				EN0	DG0		
		1				EN0	DBB		

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Alternator (2.4L Engine) [ED0]  
Figure 8-205

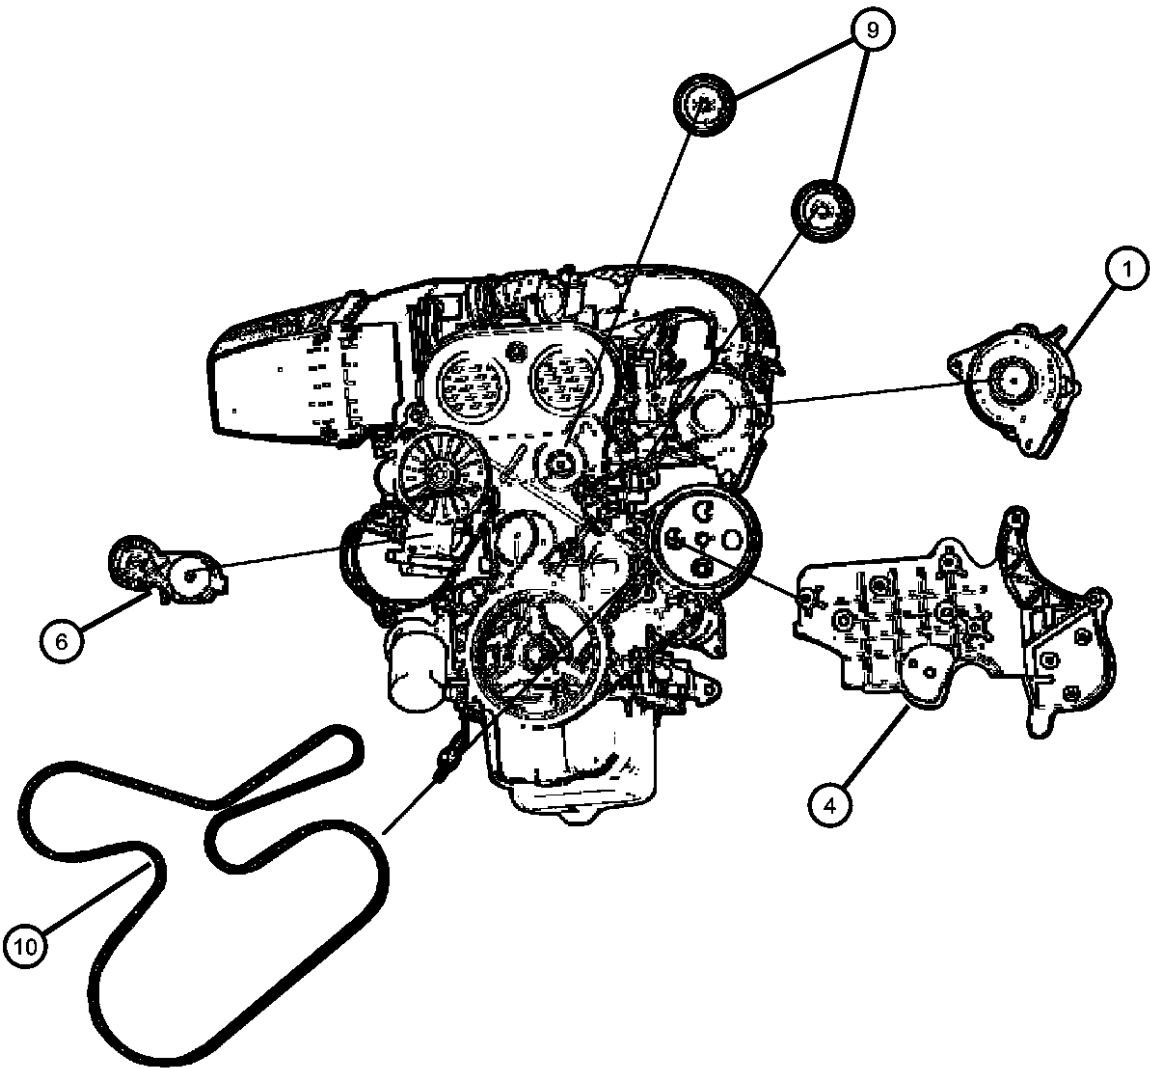

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Notes:  
[ED0] = 2.4L 4 Cylinder Engine

1	56044532AC	1				ED0			ALTERNATOR, 136 Amp
-2	06102120AA	1				ED0			SCREW AND WASHER, Hex Head, Alternator Mounting
-3	06506737AA	2				ED0			SCREW, Alternator Bracket, Bracket to Block
4	04861371AA	1				ED0			BRACKET, Alternator
-5	06506990AA	3				ED0			SCREW, Hex Head, M10x1.5x40, Alternator Bracket to Block
6	04861277AB	1				ED0			TENSIONER, Belt
-7	06506991AA	1				ED0			STUD, Alternator, Tensioner Mounting
-8	06102167AA	1				ED0			NUT AND WASHER
9	53013324AA	2				ED0			PULLEY, Idler
10									BELT, Accessory Drive
	05281351AC	1				ED0			without Air Conditioning
	53013352AD	1				ED0			with Air Conditioning
-11	53013352AD	1							PULLEY, Alternator, Serviced in Alternator Assembly, (NOT SERVICED),
-12	53013352AD	1							CAP, Alternator Pulley, Serviced in Alternator Assembly, (NOT SERVICED)
-13	34202781	1				ED0			SCREW Idler Pulley


LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Alternator (3.7L Engine) [EK0]  
Figure 8-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Notes:  
[ED0]=2.4L 4 Cylinder Engine  
[EK0] = 3.7L V6 Engine

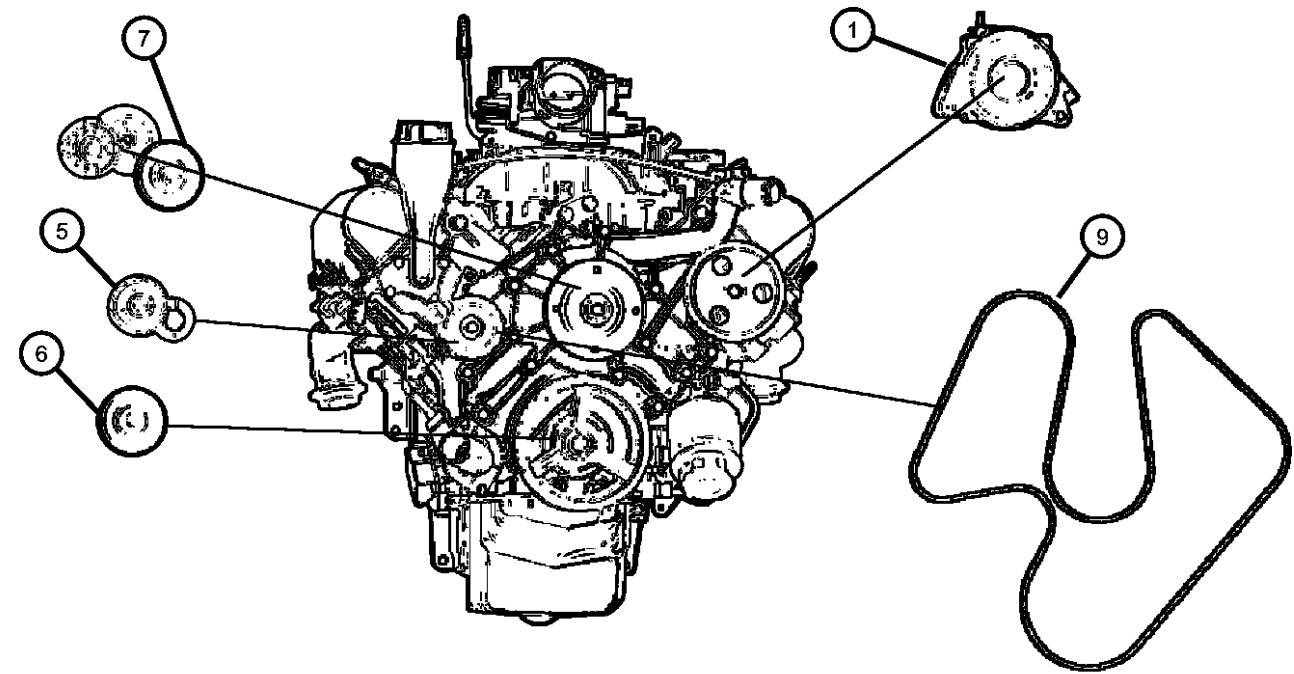

1									ALTERNATOR
	56029914AA	1		M		EK0			160 Amp
	56041693AC	1		H, P		EK0			136 Amp
-2	06102120AA	2				ED0, EK0			SCREW AND WASHER, Hex Head
-3	06504344	1				EK0			SCREW AND WASHER, Hex Head, Alternator to Front Cover Attaching
-4	06505482AA	1				EK0			SCREW AND WASHER, Hex Head, M8x1.25x50, Alternator to Cylinder Head
5	53030959	1				EK0			BRACKET, Idler Pulley
6	53031045	1				EK0			PULLEY, Idler
7	53030958AD	1				EK0			TENSIONER, Alternator Belt
-8	06505488AA	1				EK0			SCREW AND WASHER, Hex, Alternator to Front Cover attaching
9	53032037AJ	1				EK0			BELT, Accessory Drive

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	




Alternator (2.5L Diesel Engine) [EN0]  
Figure 8-215

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
<div>Notes: [EN0]=All 4/5 Cylinder Turbo Diesel Engines [DBB]=All Manual Transmissions [DG0]=All Automatic Transmissions</div> <div></div>									
1	56041578AE	1				EN0	DG0		ALTERNATOR
		1				EN0	DBB		
-2	05015067AA	1				EN0	DG0		BOLT, Hex Flange Head
		1				EN0	DBB		
3	53013495AA	1				EN0			BRACKET, Alternator
4	06501474	3				EN0			BOLT, Hex Head, M8x1.25x16
-5	06502696	1				EN0			NUT, Hex Flange Lock, M14x1.50
6	05072753AA	1				EN0	DG0		BRACKET
		1				EN0	DBB		
7	05003724AA	1				EN0	DG0		SCREW
		1				EN0	DBB		
8	05003532AA	4				EN0	DBB		BOLT, Adaptor Plate
		4				EN0	DG0		
9	05066939AA	3				EN0	DG0		SCREW
-10	05066862AA	2				EN0	DBB		PIN
		2				EN0	DG0		Alignment Pin for Mounting Bracket
		2				EN0	DG0		Alignment Pin for Mounting Bracket
11	05066938AA	2				EN0	DBB		PULLEY, Idler
		2				EN0	DG0		
12									BELT, Accessory Drive

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	


Alternator (2.5L Diesel Engine) [EN0]  
Figure 8-215

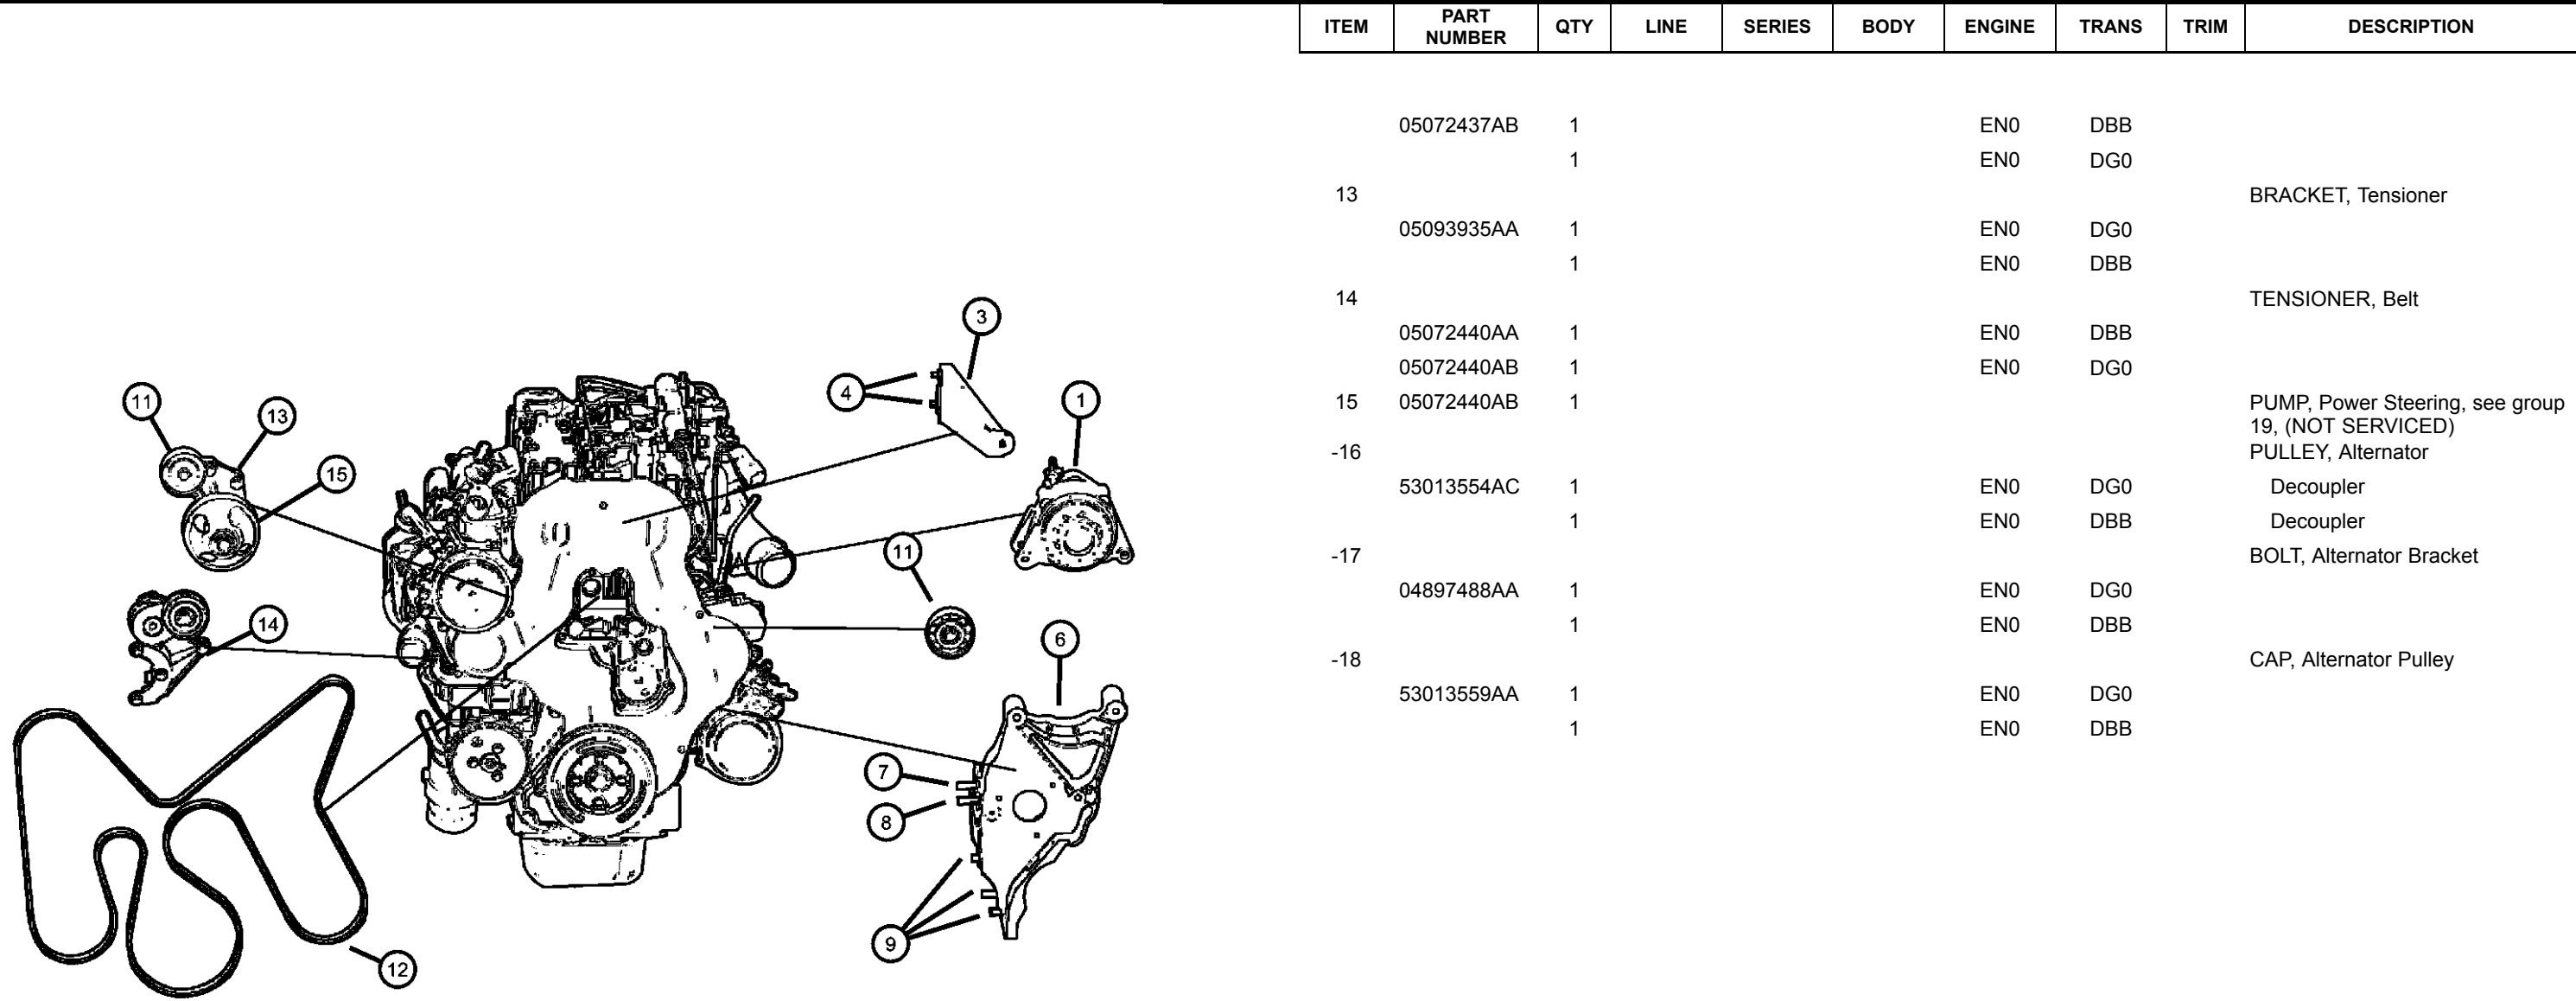

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	05072437AB	1				EN0	DBB		
		1				EN0	DG0		
13									BRACKET, Tensioner
	05093935AA	1				EN0	DG0		
		1				EN0	DBB		
14									TENSIONER, Belt
	05072440AA	1				EN0	DBB		
	05072440AB	1				EN0	DG0		
15	05072440AB	1							PUMP, Power Steering, see group 19, (NOT SERVICED)
-16									PULLEY, Alternator
	53013554AC	1				EN0	DG0		Decoupler
		1				EN0	DBB		Decoupler
-17									BOLT, Alternator Bracket
	04897488AA	1				EN0	DG0		
		1				EN0	DBB		
-18									CAP, Alternator Pulley
	53013559AA	1				EN0	DG0		
		1				EN0	DBB		

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

Modules  
Figure 8-410

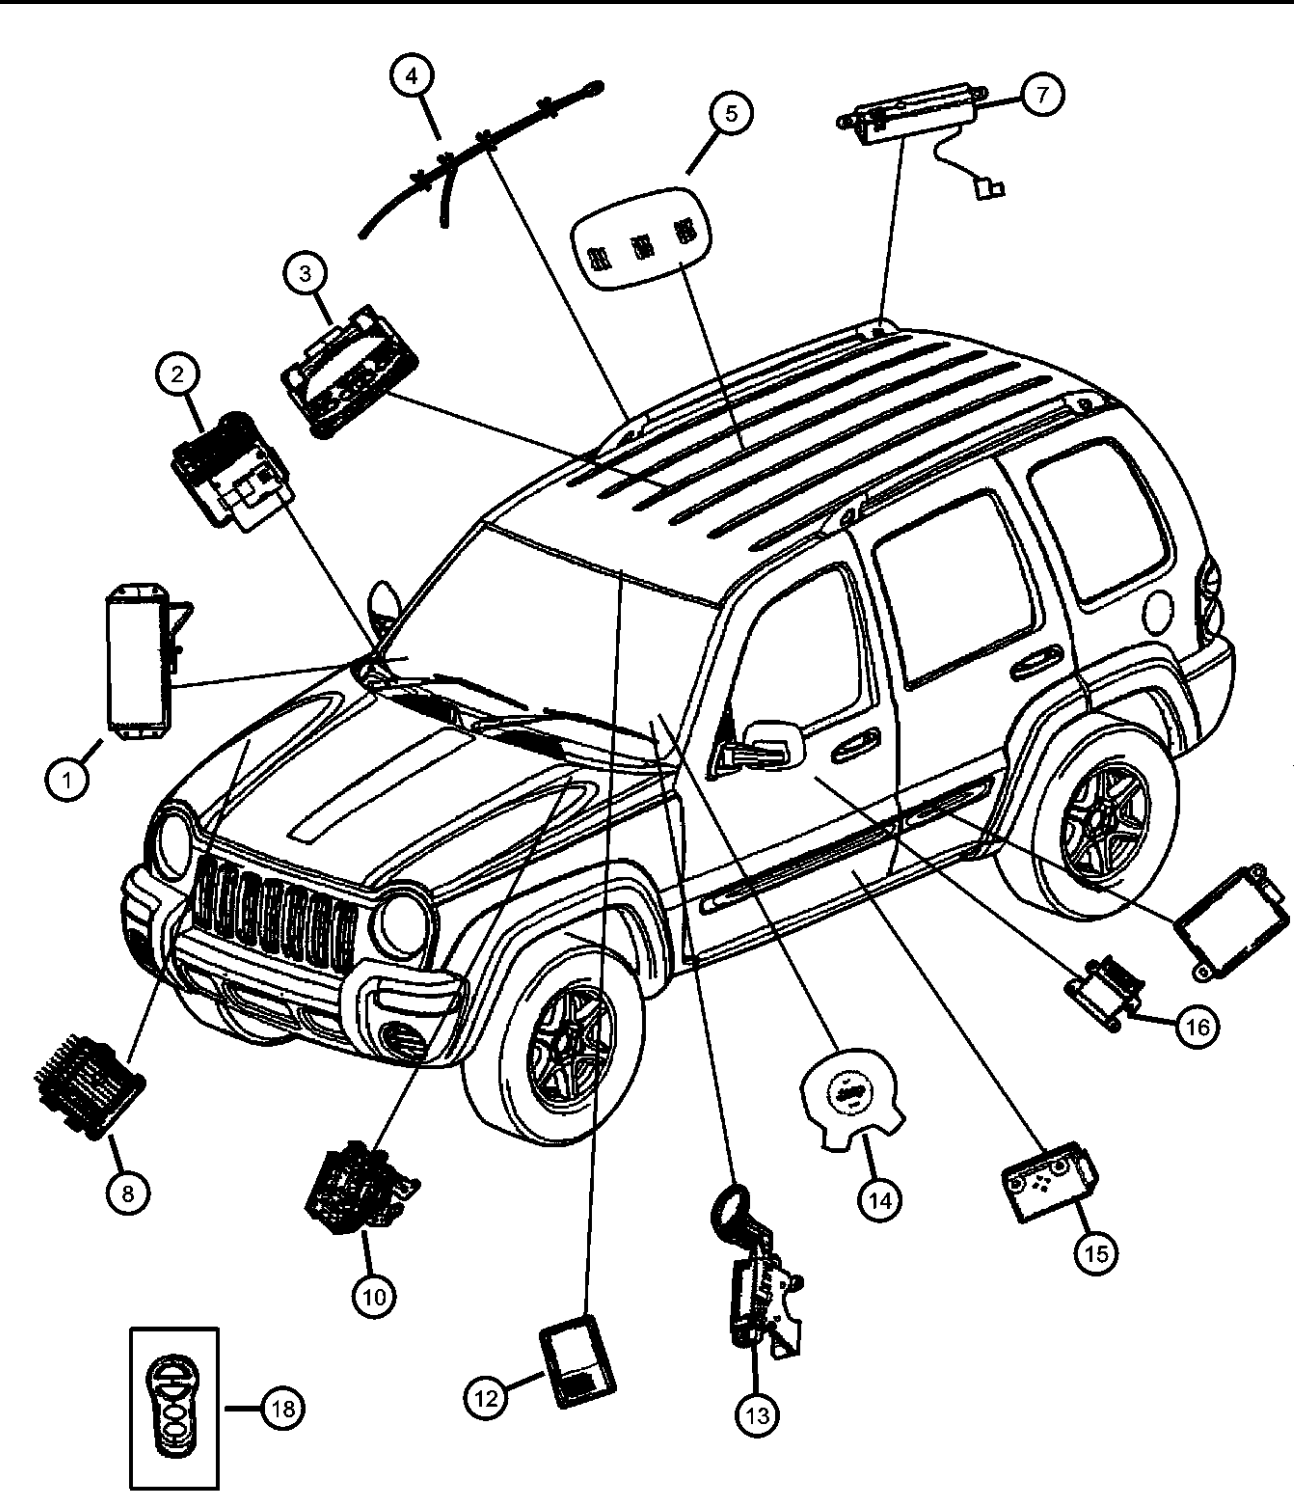


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes: [EKG]=3.7L 6 Cylinder Engine [EN0]= All 4/5 Cylinder Turbo Diesel Engine [DG0]=All Automatic Transmissions [DG4] =Multi-Speed Automatic Transmissions [DG6]=All 4 Speed Automatic Transmissions [DGQ]=All 5 Speed Automatic Transmissions									
1	55315103AA	1							AIR BAG, Passenger
2									MODULE, Body Controller
	05104692AE	1							[GWA,GXM,LNJ,RSP] Europe
	05104693AE	1							
		1							
3									MODULE, Overhead Console
	56010437AA	1	J, U						EVIC without Universal Garage Door Opener (With Sunroof)
		1	J, U						EVIC without Universal Garage Door Opener (Without Sunroof)
	56010438AB	1	J, T						EVIC with Universal Garage Door Opener (Without Sunroof)
		1	J, T						EVIC with Universal Garage Door Opener (With Sunroof)
4									AIR BAG, Side Curtain
	55315018AH	1							Up to 07/21/03, Right
	55315019AH	1							Up to 07/21/03, Left
	55315098AA	1							After 07/21/03, Right
	55315099AA	1							After 07/21/03, Left
5									MODULE, Intrusion
	5GV82TL2AG	1							Export
		1	J, U						Export
-6									RETAINER, Electronic Module
	56010331AB	1	J, U						Export
		1							Export
7									ANTENNA
	56038526AE	1							

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6 Turbo Diesel	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Modules  
Figure 8-410

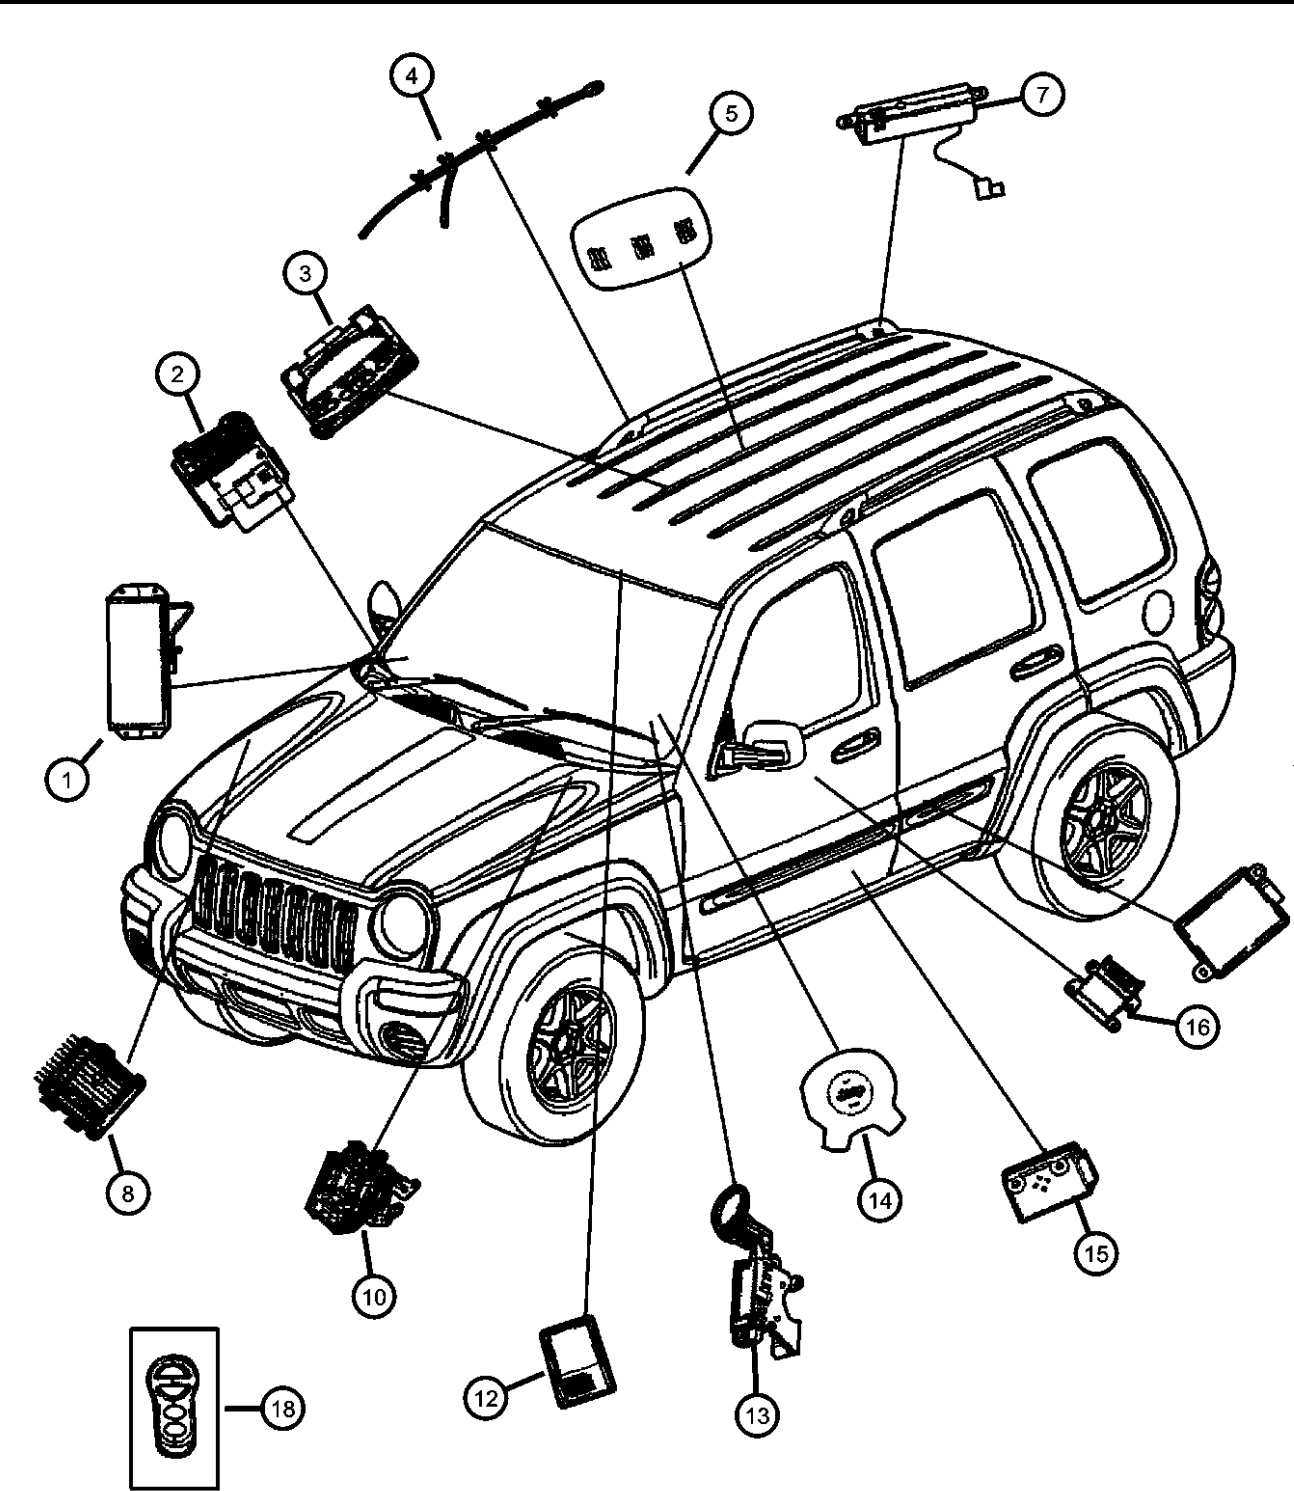

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
8	56038527AD	1							Export
	56044585AC	1				EN0	DGQ		MODULE, Transmission Control
	56044682AA	1				EN0	DGQ		Up to 06/11/03
-9									After 06/11/03
	56041377AB	1	J, T			EN0	DGQ		BRACKET, Transmission Control Unit
	56041809AA	1	U			EN0	DGQ		
10	05083084AA	1							MODULE, Anti-lock Brakes
-11	05083083AA	1							CONTROL UNIT, Anti-Lock Brake
12									RECEIVER, Keyless Entry
	56010394AA	1							315 MHZ BCM Interconnect
	56010395AA	1							433.92 MHZ BCM Interconnect (Export)
	56010424AA	1							315 MHZ BCM Interconnect (Export)
13	56010209AC	1							MODULE, Immobilizer
14									AIR BAG, Driver
	5JS05DX9AA	1		H, M					Instrument Cluster without Tach
	5JS061X9AA	1		M, P					Instrument Cluster with Tach
									MODULE, Heated Seat Control
15									Europe
	56010113AA	1	J, U						Mexico
		1	J, T						USA / Canada
		1	J, T						MODULE, Occupant Restraint
16									Export
	56038862AB	1							[CGS], Export
	56038864AC	1							[CGS]
	56038865AC	1							
-17	56038961AB	1							COVER, Module
18	56038787AB	1							TRANSMITTER, Keyless Entry

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Modules  
Figure 8-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION		
	04602261AB	2							433.92 MHZ BCM, Export		
	56010562AB	2							315 MHZ BCM, Export		
	04602260AA	2									
	-19								LABEL, Air Bag Warning		
	04649282AA	4							Airbag Warning Seat Side (English)		
	04787437AA	2							Airbag Warning, Sunvisor (English / French (Canada))		
-20	05064022AF	1							MODULE, Telematics		
-21	56038763AB	1							BRACKET, Module, [RSP]		

**LIBERTY (KJ)**

SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Junction Block, Relays, Circuit Breaker  
Figure 8-510

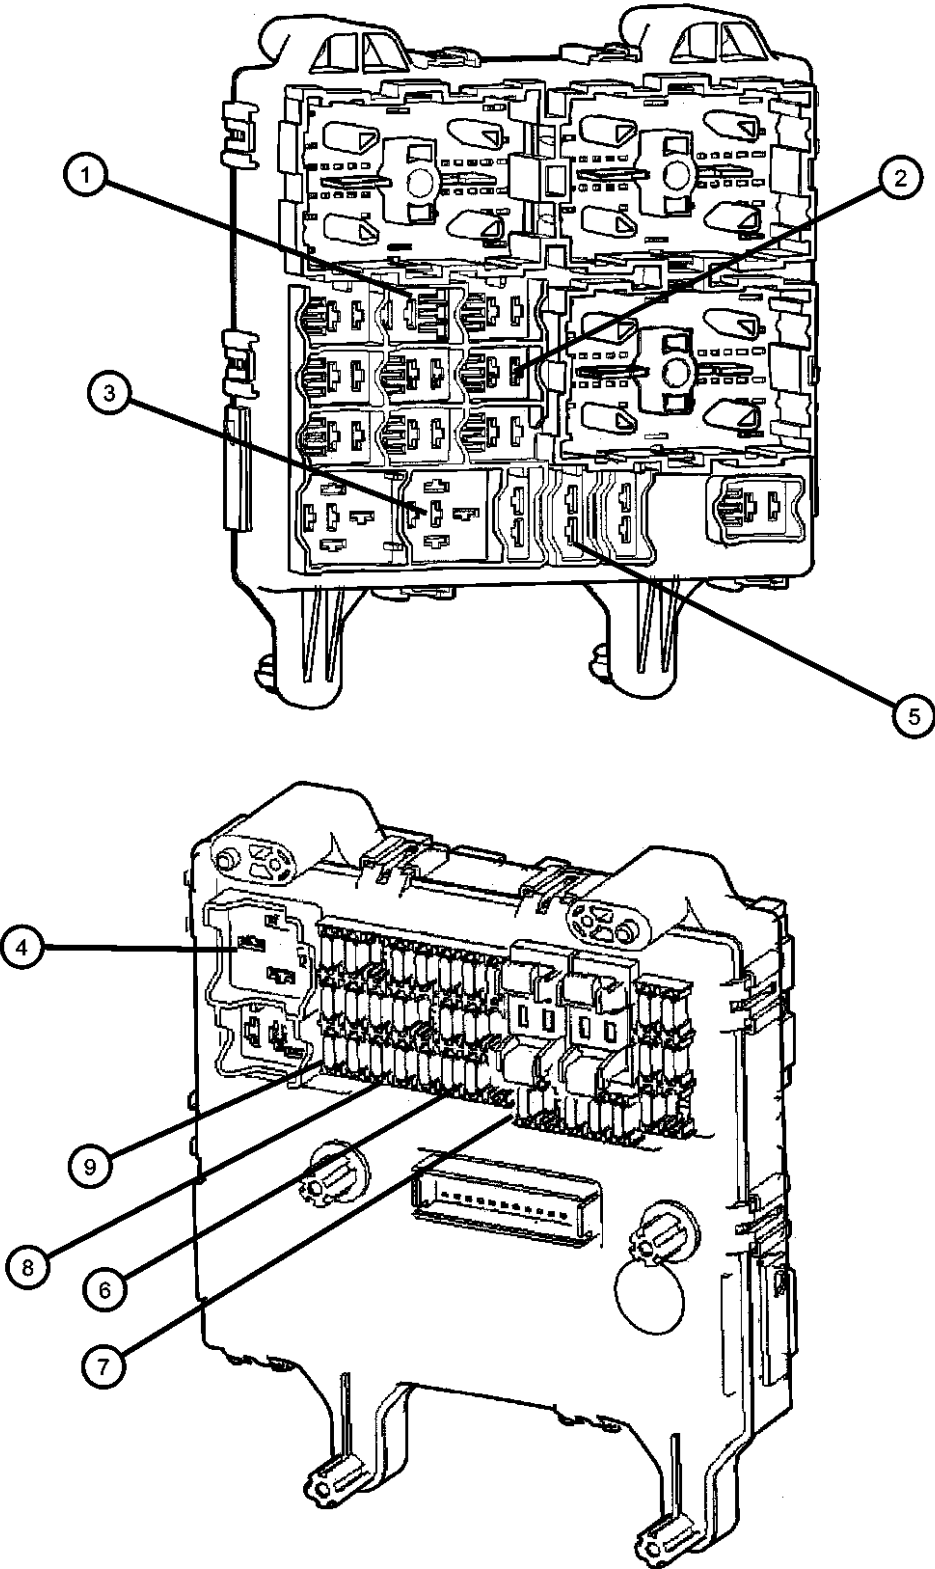


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes: [EN0]= All 4/5 Cylinder Turbo Diesel Engine									
1	56010435AC	1	J, T						JUNCTION BLOCK, Relay
	56010436AC	1	J, T						Without Sunroof (USA / Canada / Mexico)
		1	J, U						With Sunroof (USA / Canada / Mexico)
									Europe
2	04671168	1							RELAY, Mini
	56006709	2							High Beam, Door Locks, Foglamp
3	04727370AA	1							RELAY, Mini
		2				EN0			Heated Backlight in J.B.
									Glow Plug
4	56042216AB	1							RELAY, Daytime Running Lamp
5	56021543	1							BREAKER, Circuit, 25 AMP
6	000ATM10	1	J, T						FUSE, Mini, 10 AMP, Red
7	000ATM15	1	J, T						FUSE, Mini, 15 AMP, Light Blue
8	000ATM20	1	J, T						FUSE, Mini, 20 AMP, Yellow
9	000ATM30	AR							FUSE, Mini, 30 AMP, Green
-10	05072937AA	1	U						PULLER, Fuse
		1	J, T						
-11	56010333AD	1	J, T						BRACKET, Junction Block
	56010334AD	1	U						

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE	74 = 4 Door (104.3 WB)			
P = Limited	J = LHD (4WD)			ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


Sensor, Engine (2.4L Engine) [ED0]  
Figure 8-605

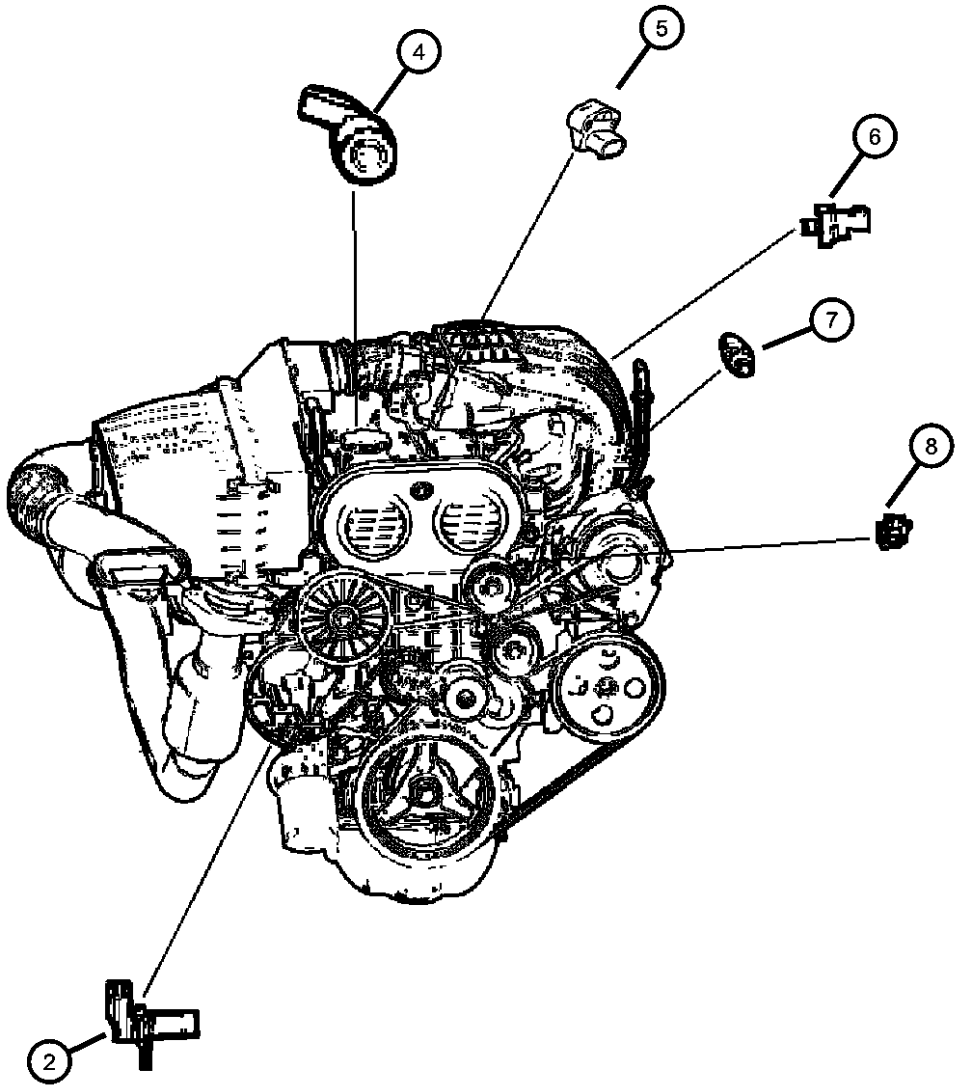

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes: [ED0]=2.4L 4 Cylinder Engine [DDK]=All 5 Speed Heavy Duty Manual Transmissions									
-1	06503486	1				ED0			SCREW, Tapping, Oxygen Sensor Wiring Bracket attaching
2	05269873	1				ED0			SENSOR, Crankshaft Position
-3	06507220AA	1				ED0			SCREW, M6x1x14
4	05072759AA	1				ED0			SENSOR, Camshaft
5	04606487AB	1				ED0			SENSOR, Charge Air Temp
6	04606487AB	1							SENSOR, Knock, (NOT REQUIRED)
7	56027873	1				ED0			SENSOR, Coolant Temperature
8	05019411AB	1				ED0			SENSOR KIT, Throttle Position
-9	05013320AA	1	T			ED0	DDK		O RING, Speed Sensor
-10	56041018AC	1				ED0			SENSOR, MAP

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Sensors, Engine (3.7L Engine) [EK0]  
Figure 8-610

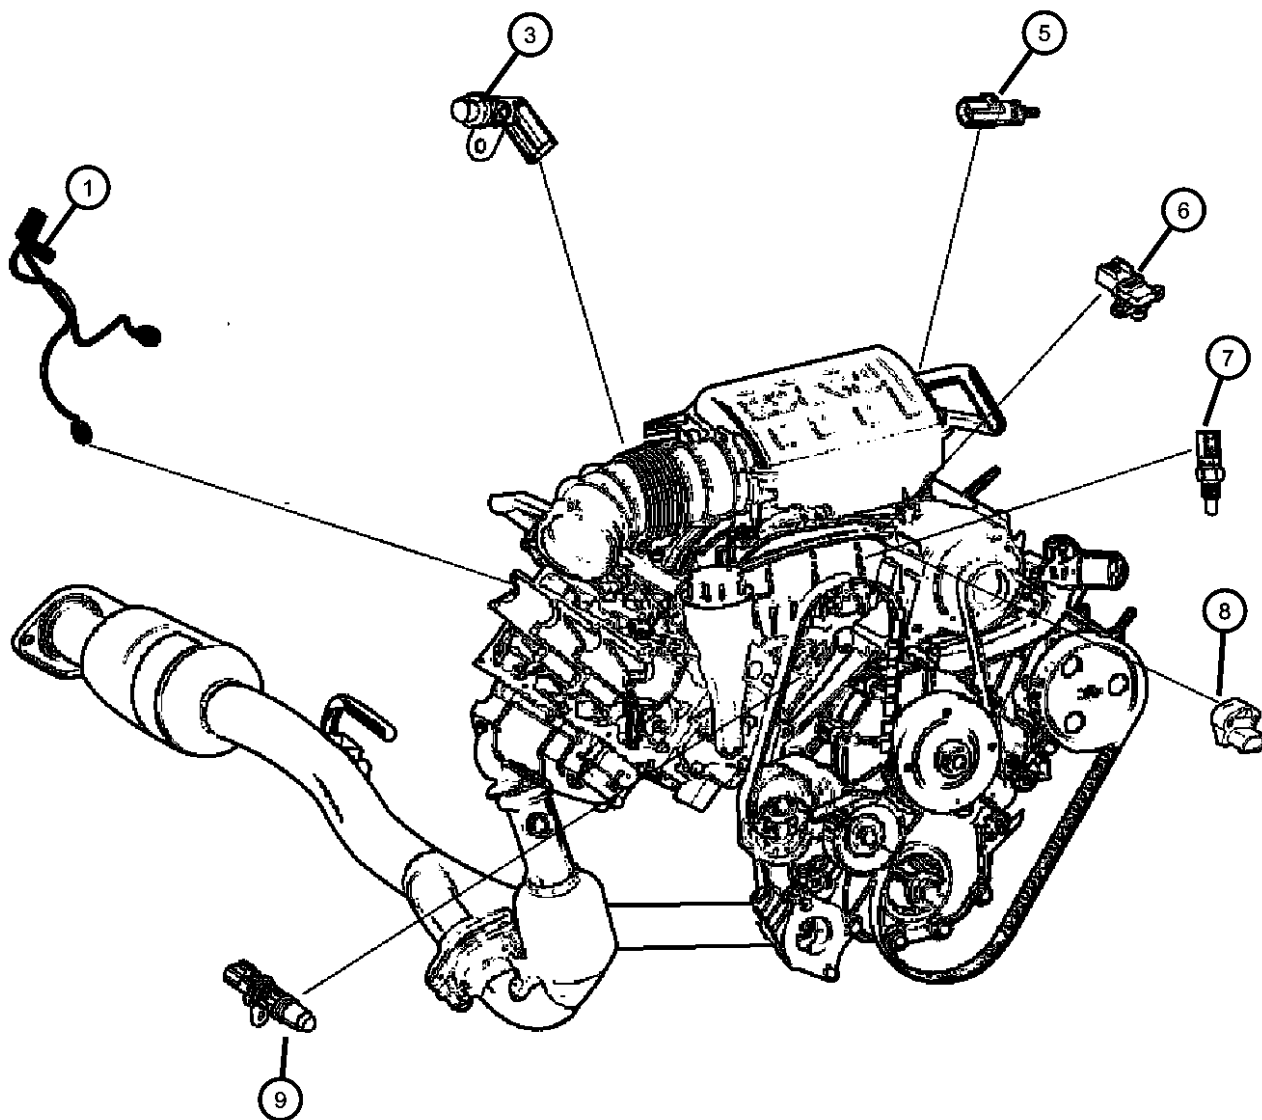


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes: [EK0]=3.7L V6 Engine									
1	56041679AC	1				EK0			SENSOR, Knock
-2	56041849AA	1				EK0			BRACKET, Knock Sensor
3	56044180AB	1				EK0			SENSOR, Crankshaft Position
-4									BRACKET, Oxygen Sensor
	56041823AB	1				EK0	DG0		
		2				EK0	DBB		
5	56028364AA	1				EK0			SENSOR, Air Temperature
6	56041018AC	1				EK0			SENSOR, MAP
7	56027873	1				EK0			SENSOR, Coolant Temperature
8	05019411AB	1				EK0			SENSOR KIT, Throttle Position
9	56041584AE	1				EK0			SENSOR, Camshaft
-10	04606487AB	1				EK0			SENSOR, Charge Air Temp

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions



Sensors, Engine (2.5L Diesel) [EN0]  
Figure 8-615

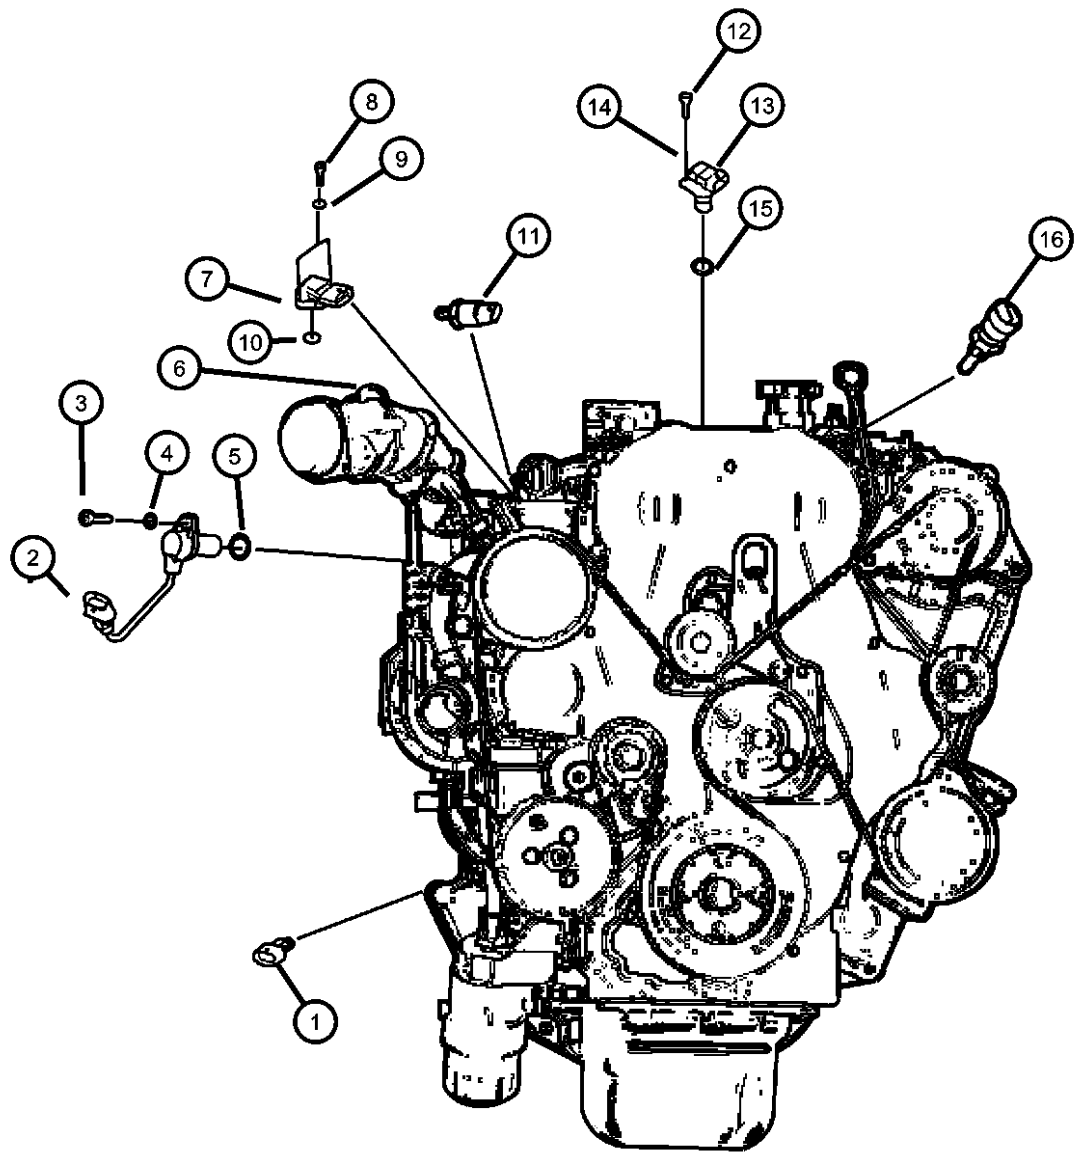


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes: [EN0]=All 4/5 Cylinder Turbo Diesel Engines [DBB]=All Manual Transmissions [DG0]=All Automatic Transmissions									
1	56028807AB	1				EN0	DBB		SENDING UNIT, Oil Pressure
		1				EN0	DG0		
2	05066882AA	1				EN0	DG0		SENSOR, Crankshaft
		1				EN0	DBB		
3	05003551AA	1				EN0	DG0		BOLT, M6x10
		1				EN0	DBB		
4	04723204	5				EN0	DBB		WASHER, Implement Attaching
		5				EN0	DG0		
5	05066860AA	1				EN0	DG0		O RING
		1				EN0	DBB		
6		1							SENSOR PACKAGE, Air Flow Meter, (NOT REQUIRED)
7	05093898AA	1				EN0	DG0		SENSOR, Air Temperature
		1				EN0	DBB		
8	05010858AA	1				EN0	DG0		SCREW
		1				EN0	DBB		
9	04723204	1				EN0	DG0		WASHER, Implement Attaching
		1				EN0	DBB		
10	05066860AA	1				EN0	DBB		O RING

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Sensors, Engine (2.5L Diesel) [EN0]  
Figure 8-615

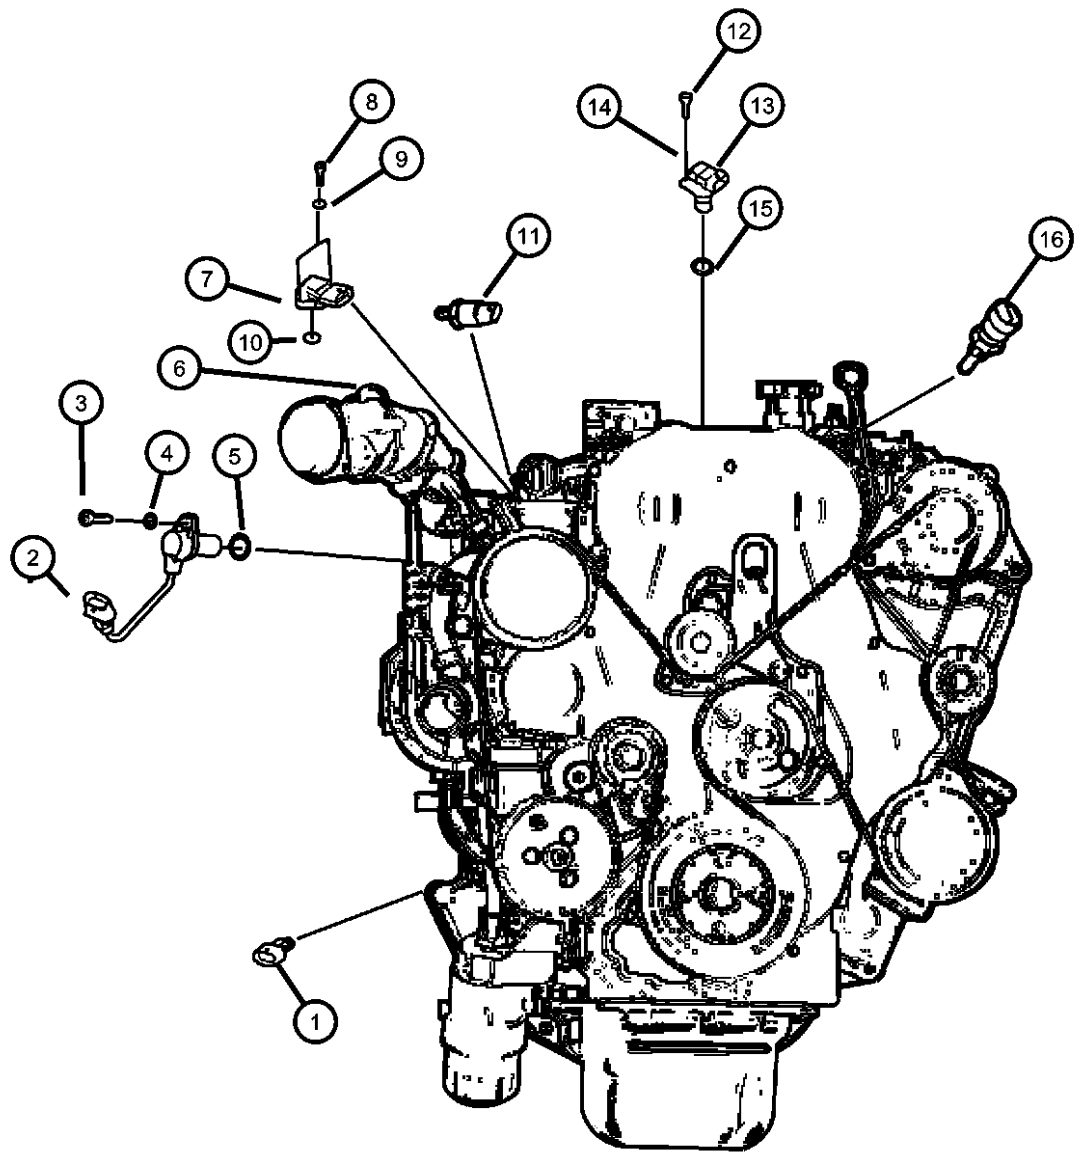


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
11		1				EN0	DG0		SENSOR, Fuel Pressure
	05072726AA	1				EN0	DG0		
		1				EN0	DBB		
12									SCREW
	05010858AA	1				EN0	DBB		
		1				EN0	DG0		
13									SENSOR, Camshaft
	05066856AB	1				EN0	DG0		
		1				EN0	DBB		
14									WASHER, Implement Attaching
	04723204	1				EN0	DG0		
		1				EN0	DBB		
15									O RING
	05066860AA	1				EN0	DBB		
		1				EN0	DG0		
16									SENSOR, Temperature Sending Unit
	05066779AA	1				EN0	DG0		
		1				EN0	DBB		
-17									SENDING UNIT, Oil Pressure
	56028807AB	1				EN0	DBB		
		1				EN0	DG0		
-18	04799062	2	J, U			EN0	DGQ		O RING, Speed Sensor
-19									BRACKET
	05093910AA	1				EN0	DG0		Crank Sensor Wiring
		1				EN0	DBB		Crank Sensor Wiring

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


Sensors, Oxygen 2.4L [ED0]  
Figure 8-620

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	56029049AA	1				ED0			SENSOR, Oxygen, Before catalyst
2	56029050AA	1				ED0			SENSOR, Oxygen, After catalyst

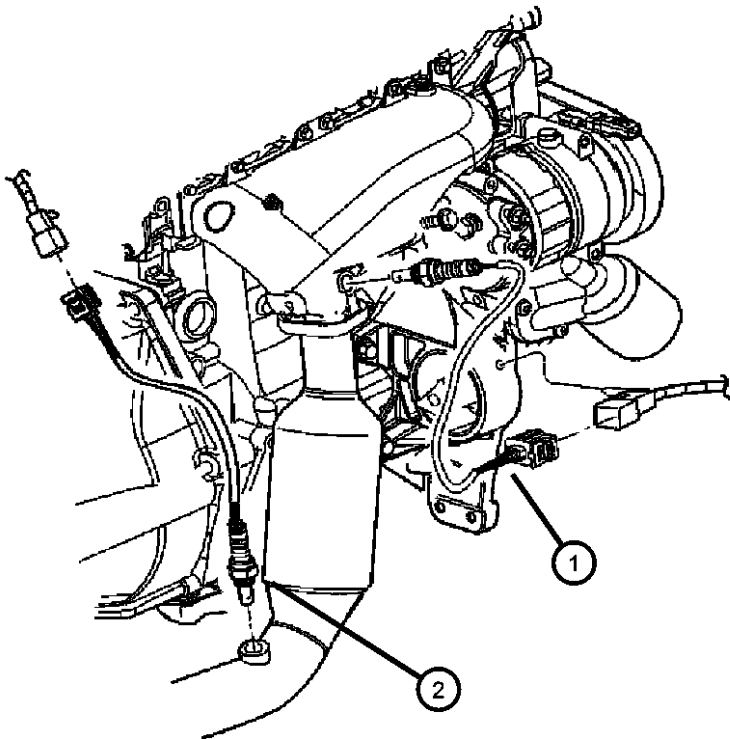

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions


Sensors, Oxygen 3.7L [EK0]  
Figure 8-625

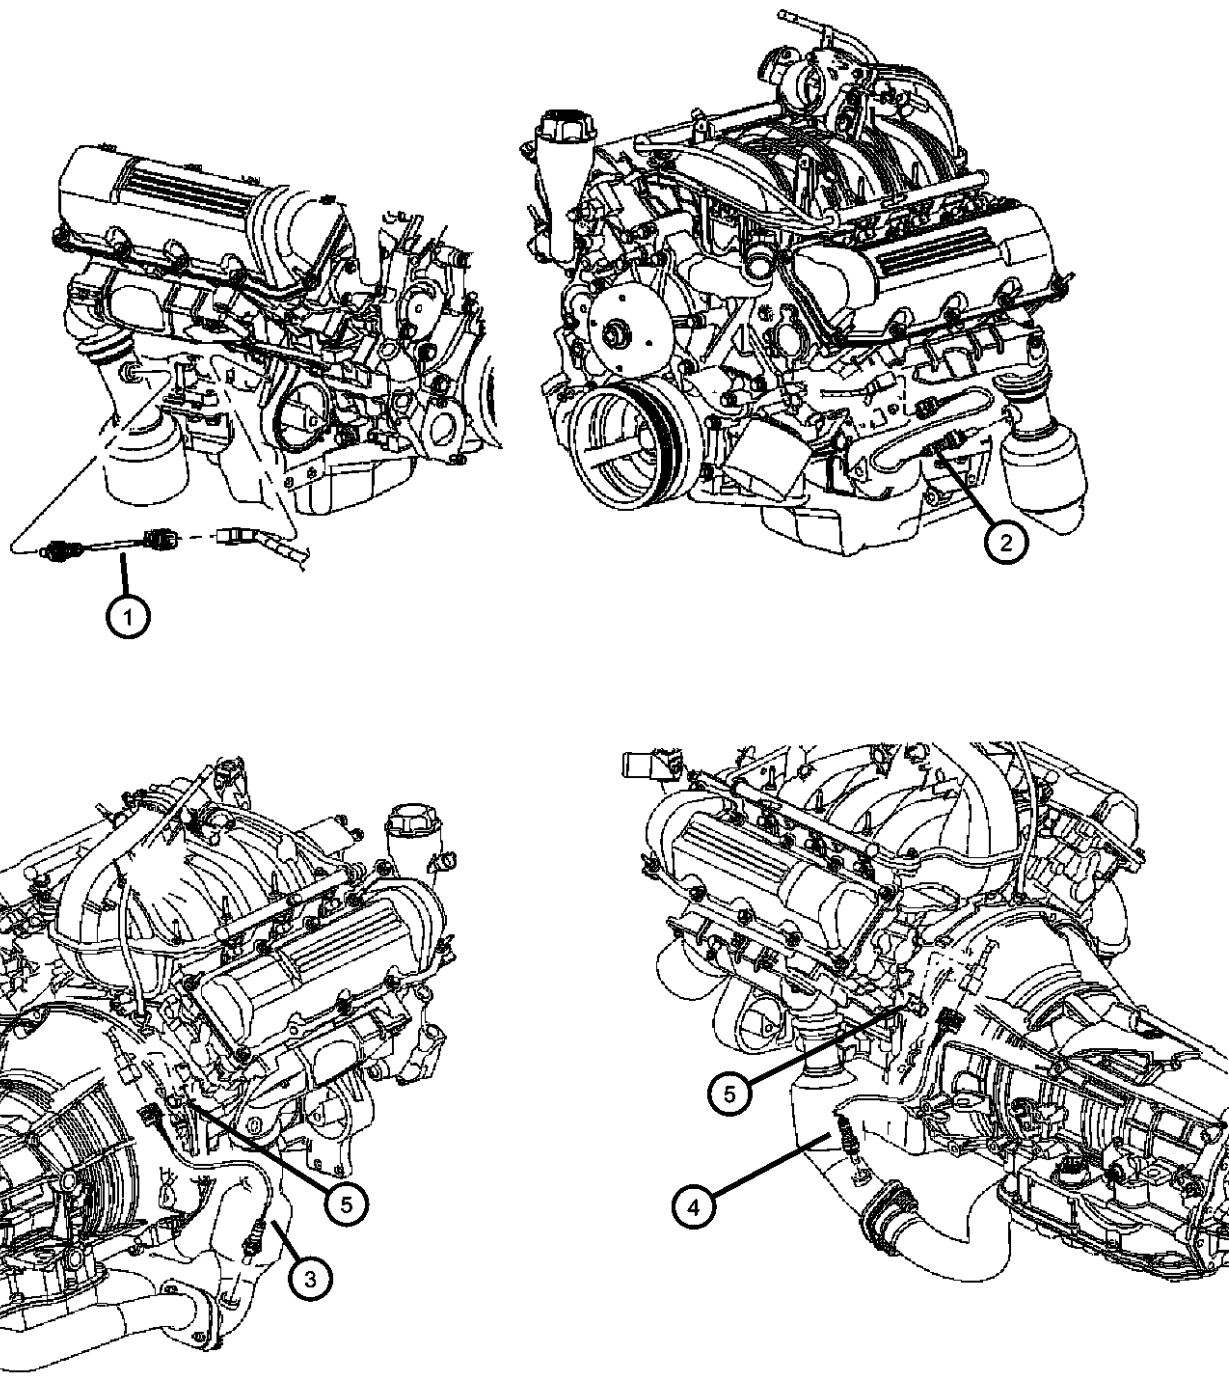

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	56028994AA	1				EK0			SENSOR, Oxygen, Before Catalyst, Right
2	56028994AA	1				EK0			SENSOR, Oxygen, Before catalyst, Left
3	56028996AA	1				EK0			SENSOR, OxygenAfter Catalyst, Right
4	56028996AA	1				EK0			SENSOR, Oxygen, After catalyst, Left
5	56041823AB	1				EK0	DG0		BRACKET, Oxygen Sensor
		2				EK0	DBB		

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

Sensor (Drive Train)  
Figure 8-635

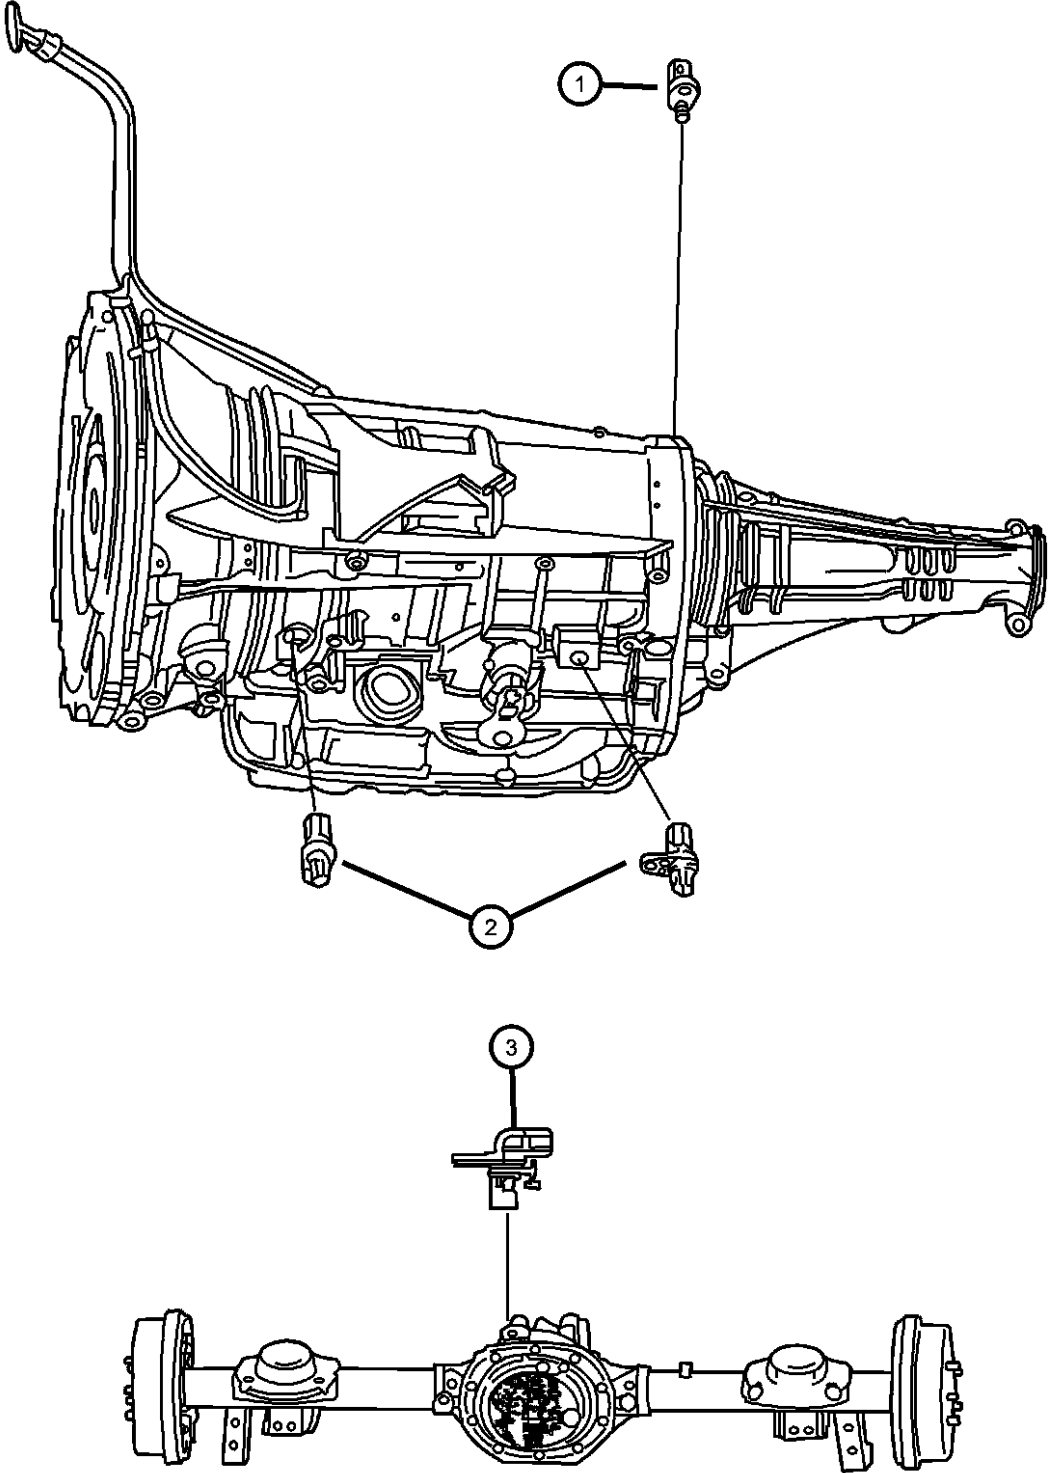


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Notes: [DGQ] = 5 Speed Automatic Transmission [DG4 ]= Multi-Speed Automatic Transmission [DG6] = 4 Speed Automatic Transmission [ED0] = 2.4L Engine [EK0] = 3.7L Engine [EN0] = 2.5L Turbo Diesel Engine									
1									TRANSDUCER, Pressure Sensor
	04799758AC	1	J, U			EN0	DGQ		
		1	T				DG4		
		1	J, U				DG4		
2									SENSOR, Transmission Output Speed
	04799061	2	J, U			EN0	DGQ		Input / Output Speed Sensor
		2	J, U			EN0	DGQ		Output Speed Sensor
	52854001AA	1	T				DG6		Output Speed Sensor
		1	J, U				DG6		
3	56041393AA	1							SENSOR, Wheel Speed
-4	05086373AA	1							O RING, Sensor, Wheel Speed Sensor
-5									SWITCH, Transfer Case, 5 Position
	05083138AA	1	J, U			ED0, EK0, EN0			
		1	J, U			EN0			

LIBERTY (KJ)									
SERIES	LINE								
P = Limited	J = LHD (4WD)			BODY		ENGINE		TRANSMISSION	
H = Sport	U = RHD (4WD)			74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
M = Renegade	T = LHD (2WD)					DOHC 16v SMPI		Manual	
						EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
						ENJ = Engine -2.5L 4 Cyl 16V		Manual	
						Turbo Diesel		DG4 = Transmission-Multi-Speed	
						ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
						Turbo Diesel		DG6 = Transmission-4-Spd.	
						EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
						EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
						ED0 = All 2.4L		5-45RFE	
								DBB = All Manual Transmissions	
								DG0 = All Automatic Transmissions	

Sensor (Body)  
Figure 8-640


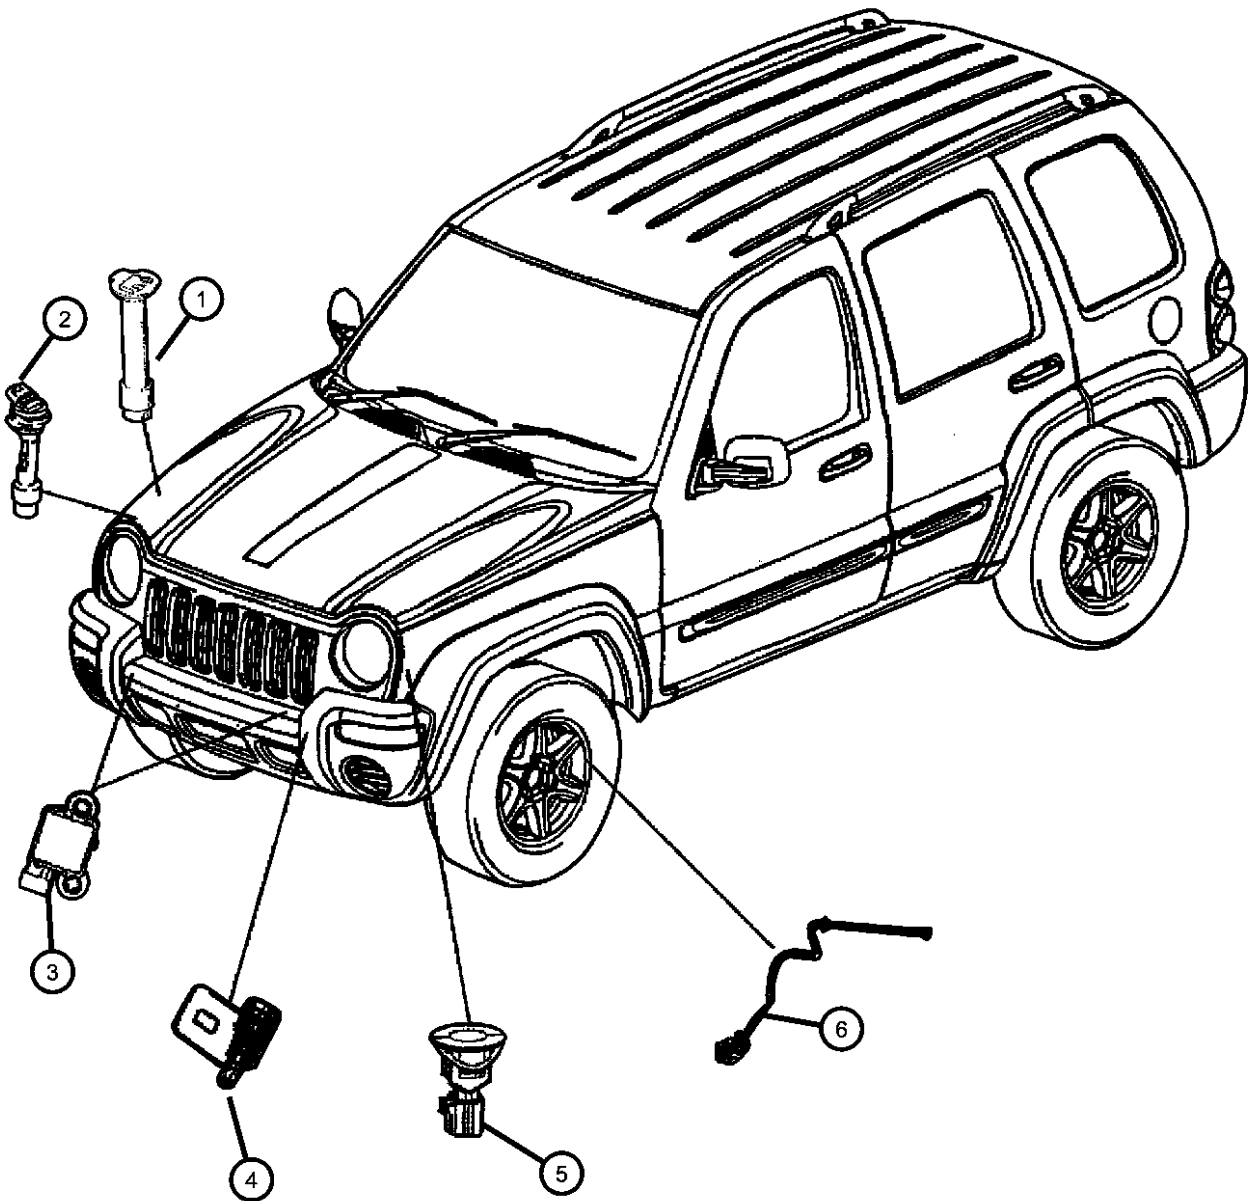


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes: [ED0] = 2.4L 4 Cylinder Engine [EK0] = 3.7L V6 Engine [EN0] = 2.5L 4 Cylinder Turbo Diesel									
1	04882797	1							SENSOR, Washer Fluid Level
2	04682425	1				EN0			SENSOR, Coolant Level
3	05084000AA	2							SENSOR, Air Bag
4									SENSOR, Ambient Temperature
	56042395	1	U			EK0, ED0			
		1	U			EN0			
		1	J, T						
5	56041053	1							SENSOR, Battery Temperature
6									SENSOR, Anti-Lock Brakes
	52128694AB	1							USA / Canada / Mexico, Right
		1							Europe, Right
	52128695AB	1							USA / Canada / Mexico, Left
		1							Europe, Left
-7	52088990AC	5							SENSOR, Tire Pressure, Valve stem
-8	52109664AA	1							MAGNET, Tire Pressure Sensor
-9	52088961AA	5							NUT, Tire Pressure Sensor, Tire Pressure Sensor mounting
-10	05083124AA	5							CAP, Valve stem

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

**JTEC Modules & Solenoids**  
**Figure 8-710**

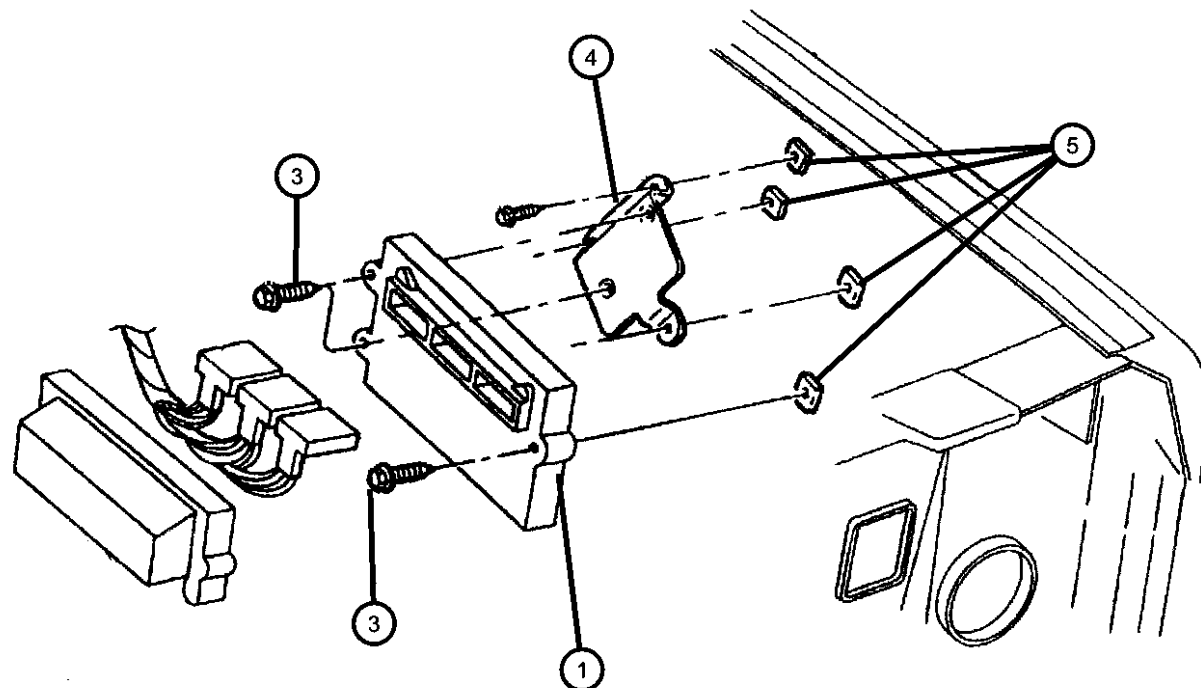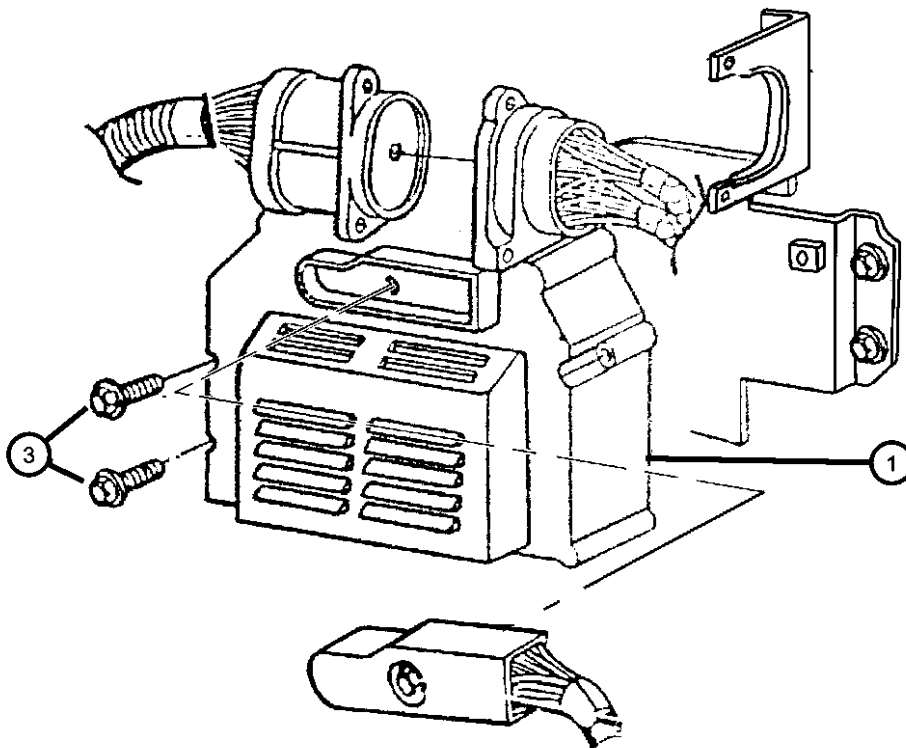

**Notes:**

[ED0] = 2.4L 4 Cylinder Engine  
 [EK0] = 3.7L V6 Engine  
 [EN0] = All 2.5L Cylinder Turbo Diesel Engine  
 [DBB] = All Manual Transmissions  
 [DG0] = All Automatic Transmissions  
 [NA1] = Export Emissions  
 [NAS] = US 50 States  
 [NB2] = Euro Stage II Emissions  
 [NB4] = Euro Stage IV Emissions  
 [NBJ] = Japan Low Emissions Vehicle

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									MODULE, Powertrain Control
	56044208AC	1				EK0	DG0		[NAS]
	56044209AC	1				EK0	DBB		[NAS]
	56044221AA	1				EK0	DG0		[NA1] With [NB4] (Export)
	56044223AA	1				EK0	DBB		[NA1] With [NB4] (Export)
	56044224AA	1				EK0	DG0		[NA1] With [NB4] (Export)
	56044225AC	1				ED0	DBB		[NAS]
	56044227AA	1				ED0	DBB		[NA1] With [NB4] (Export)
	56044299AB	1				EN0	DG0		
	56044352AB	1				EN0	DBB		
-2									MODULE, Engine Controller
	56044299AA	1				EN0	DG0		
	56044352AA	1				EN0	DBB		
3	06035884	3				ED0, EK0			SCREW
4									BRACKET, Control Unit
	56041384AC	1				EN0			Export
	56044353AA	1				ED0, EK0			
5	56044353AA	1							NUT, Hex Flange Lock, M5, M5x0.80, (NOT SERVICED)

**LIBERTY (KJ)**

SERIES LINE  
 P = Limited J = LHD (4WD)  
 H = Sport U = RHD (4WD)  
 M = Renegade T = LHD (2WD)

BODY  
 74 = 4 Door (104.3 WB)

ENGINE  
 ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI  
 EKG = Engine - 3.7L V6  
 ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel  
 ENR = Engine - 2.8L 4 Cyl Turbo Diesel  
 EN0 = 4Cyl Turbo Diesel  
 EK0 = All 3.7L  
 ED0 = All 2.4L

TRANSMISSION  
 DDD = Transmission - 5-Speed HD Manual  
 DDK = Transmission - 5-Speed HD Manual  
 DG4 = Transmission-Multi-Speed Auto, 45RFE  
 DG6 = Transmission-4-Spd. Automatic, 42RLE  
 DGQ = Transmission-5-Spd Automatic 5-45RFE  
 DBB = All Manual Transmissions  
 DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ





Switches (Instrument Panel and Console)  
Figure 8-810

										ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
										8	55037533AD	1		P					Left
										9									CONTROL, A/C And Heater
											56010696AA	1	J, T						SWITCH, Mirror
											56010697AA	1	U						Export
										10									SWITCH, Clutch Starter Interlock
											56010330AA	1	U			ED0, EKG	DBB		
												1	U			EN0	DBB		
												1	J, T			ED0, EK0	DBB		
												1	J, T			EN0	DBB		
										11	05083344AA	1							SWITCH PACKAGE, Stop Lamp
										12	56010204AE	1							SWITCH, Headlamp Leveling
										13	56010204AE	1							SWITCH, Overdrive Lockout, Served in Shifter Assembly, (NOT SERVICED)
										14	56010091AB	1							SWITCH, Power Window, Rear
										15									BEZEL, Power Window Switch
											0WA64WL8AB	1							[L2]
												1							[L5]
											0WA64XDVAB	1							[D2]
												1							[DV]
										16									SWITCH, Parking Brake
											52127960	1					DD0		
												1					DG0		
										-17	04793138	1					DD0		INSULATOR, 6 Way Male, Parking Brake
										18	56010677AA	1							SWITCH, Power Window, Master Switch Front
										19									BEZEL, Power Window Switch
											5JQ92WL8AA	1							[L2]
												1							[L5]
											5JQ92XDVAA	1							[D2]
										<b>LIBERTY (KJ)</b>									
										SERIES		LINE		BODY		ENGINE		TRANSMISSION	
										P = Limited		J = LHD (4WD)		74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
										H = Sport		U = RHD (4WD)				DOHC 16v SMPI		Manual	
										M = Renegade		T = LHD (2WD)				EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
																ENJ = Engine -2.5L 4 Cyl 16v		Manual	
																Turbo Diesel		DG4 = Transmission-Multi-Speed	
																ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
																Turbo Diesel		DG6 = Transmission-4-Spd.	
																EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
																EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
																ED0 = All 2.4L		5-45RFE	
																		DBB = All Manual Transmissions	
																		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

### Figure 8-810

**ITEM**

**PART  
NUMBER**

QTY

**LINE**

## SERIES

## BODY

## ENGINE

**TRANS**

**TRIM**

**DESCRIPTION**

-20

5GM78TL2AA

1

1

J, T

J, U

1

[DV]

SWITCH, SunroofExportExport

SERIES

LINE

P = Limited  
H = Sport  
M = Reneg.

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

## BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EK0 = All 3.7L  
ED0 = All 2.4L

## TRANSMISSION

DDD = Transmission - 5-Speed HD  
 Manual  
 DDK = Transmission - 5-Speed HD  
 Manual  
 DG4 = Transmission-Multi-Speed  
 Auto, 45RFE  
 DG6 = Transmission-4-Spd.  
 Automatic, 42RLE  
 DGQ = Transmission-5-Spd Automatic  
 54RFE  
 DBB = All Manual Transmissions  
 DG0 = All Automatic Transmissions


AR = use ase required

- = Non illustrated part

2004 KJ

**<< RETURN TO GROUP INDEX**


Switches (Drive Train)  
Figure 8-820

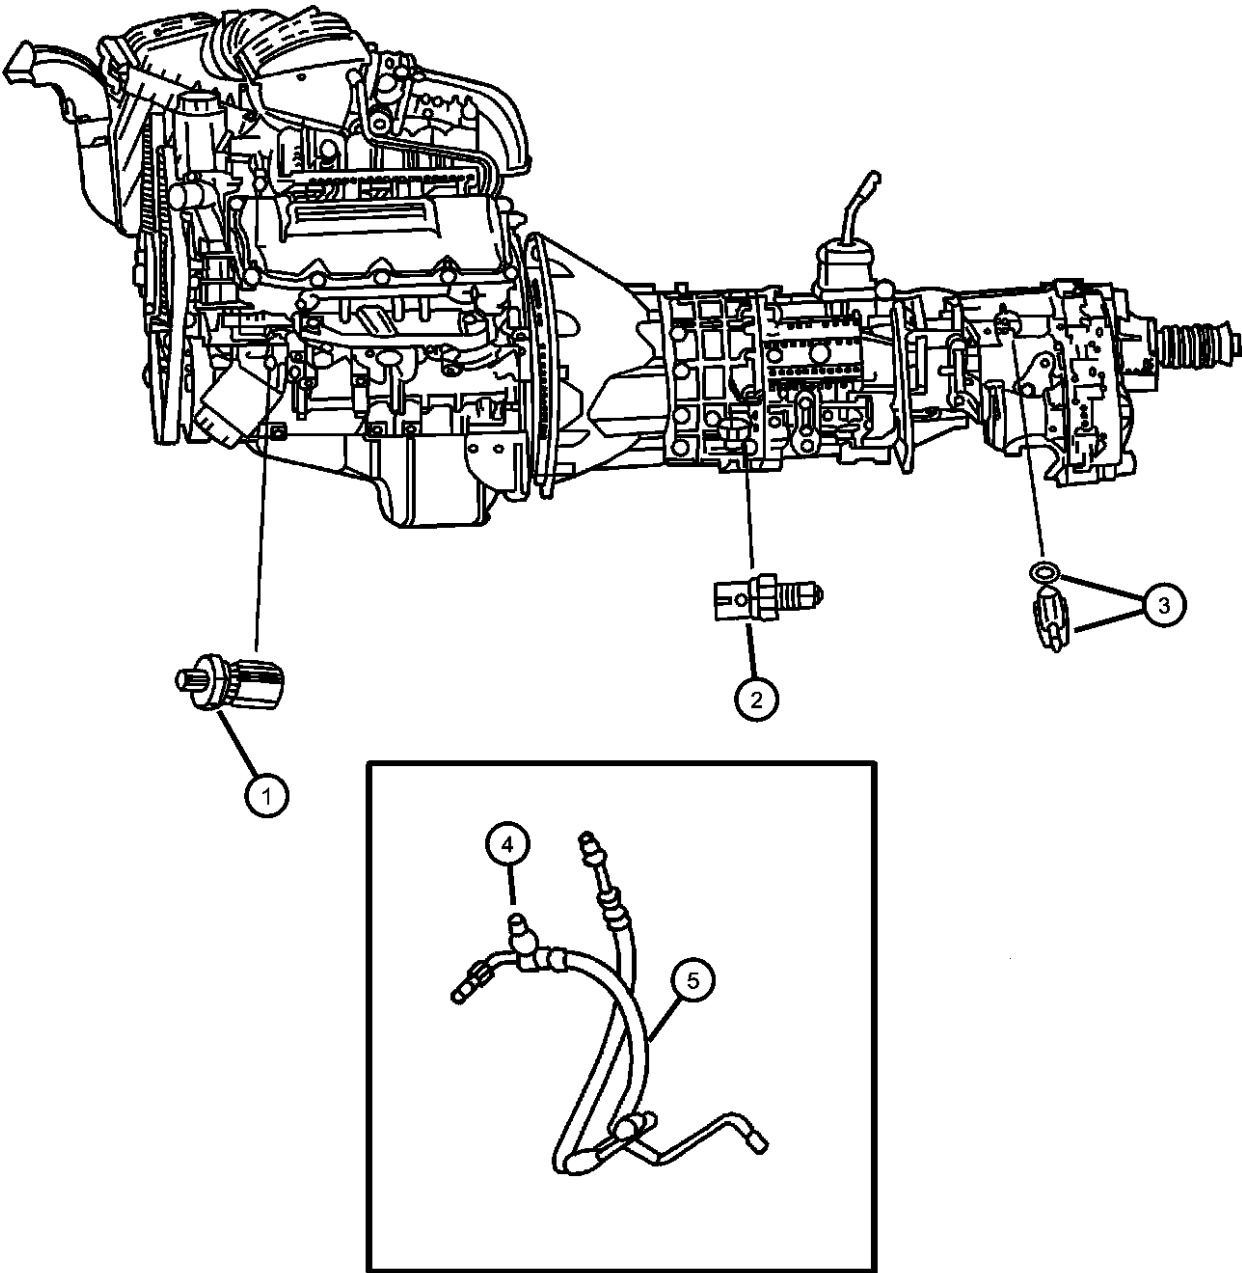

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	56028807AB	1				EN0	DBB		SENDING UNIT, Oil Pressure
		1				EN0	DG0		
2	05013336AA	1	J, U			ED0	DDK		SWITCH, Back Up Lamp
		1	T			ED0	DDK		
	56007163	1	J, U			EN0	DDD		
		1	T			EKG	DDD		
		1	J			EKG	DDD		
3	05083138AA	1	J, U			ED0, EK0, EN0			SWITCH, Transfer Case, 5 Position
		1	J, U			EN0			
4	56044169AA	1	J, T			ED0			SWITCH, Power Steering
		1	U			ED0			
5		1							HOSE, Power Steering, (NOT SERVICED)
-6	04608303AB	1				ED0			SWITCH, Oil Pressure
	04868672AA	1				EK0			

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Switches (Body)  
Figure 8-830

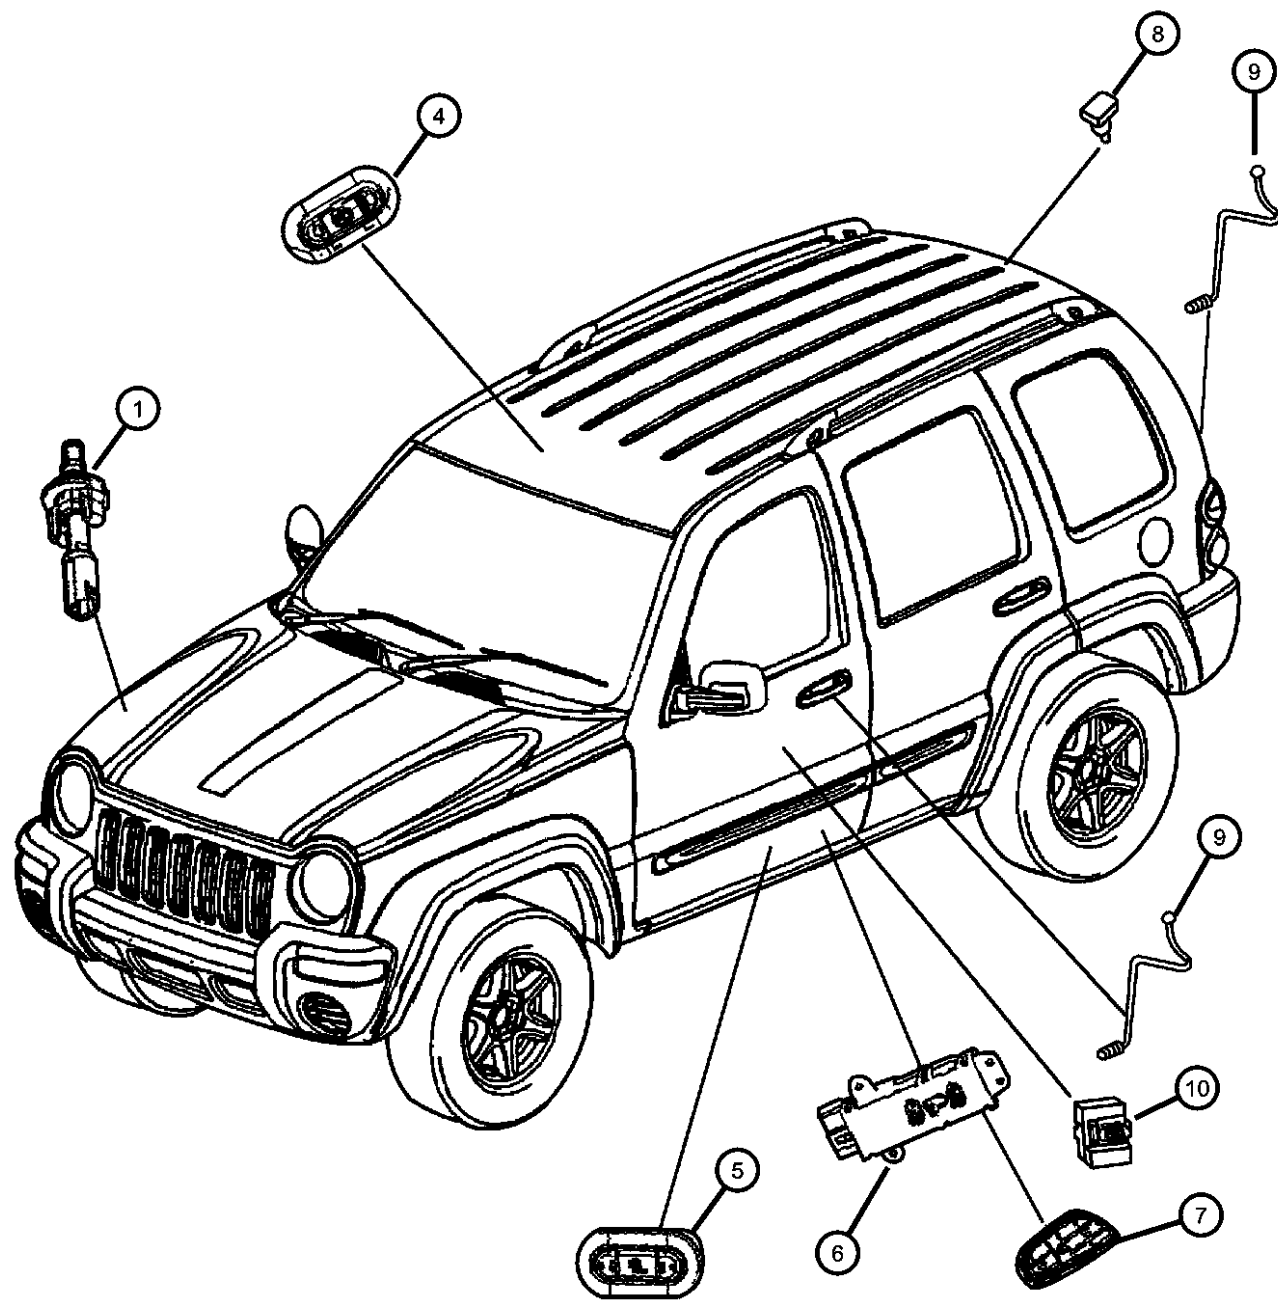


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	04707875AB	1							SWITCH, Underhood
-2	56010290AB	1							BRACKET, Hood Ajar Disarm Switch
-3	56010147AE	1							PLATE, Striker, Underhood Switch
4									SWITCH, Sunroof
	5GM78TL2AA	1	J, T						
		1	J, U						
		1							
5									SWITCH, Heated Seat
	5GW44DX9AB	2	J, T						[D2] Up to 12/04/03
		2	J, T						[L2] Up to 12/04/03
		2	J, U						[DV] Export up to 12/04/03
		2	J, U						[L2] Export up to 12/04/03
	5GW44DX9AC	2	J, T						[D2] After 12/04/03
		2	J, T						[L2] After 12/04/03
		2	J, U						[DV] Export after 12/04/03
		2	J, U						[L2] Export after 12/04/03
6	55352782AA	2							SWITCH, Seat
7									KNOB, Power Seat Switch
	04607042AB	1							Right
	04607043AB	1							Left
8									SWITCH, Reading Lamp
	04685445	1	J, U						Rear Cargo Lamp (Export)
		1	J, T						Rear Cargo Lamp (U.S.A. / Mexico / Canada)
9									SWITCH, Security Alarm
	05072956AA	1	J, T						
	05072957AA	1	J, T						[LSA,GXM]
10									SWITCH, Door Lock
	56010695AA	2							
		1	J, T						

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Switches (Body)  
Figure 8-830

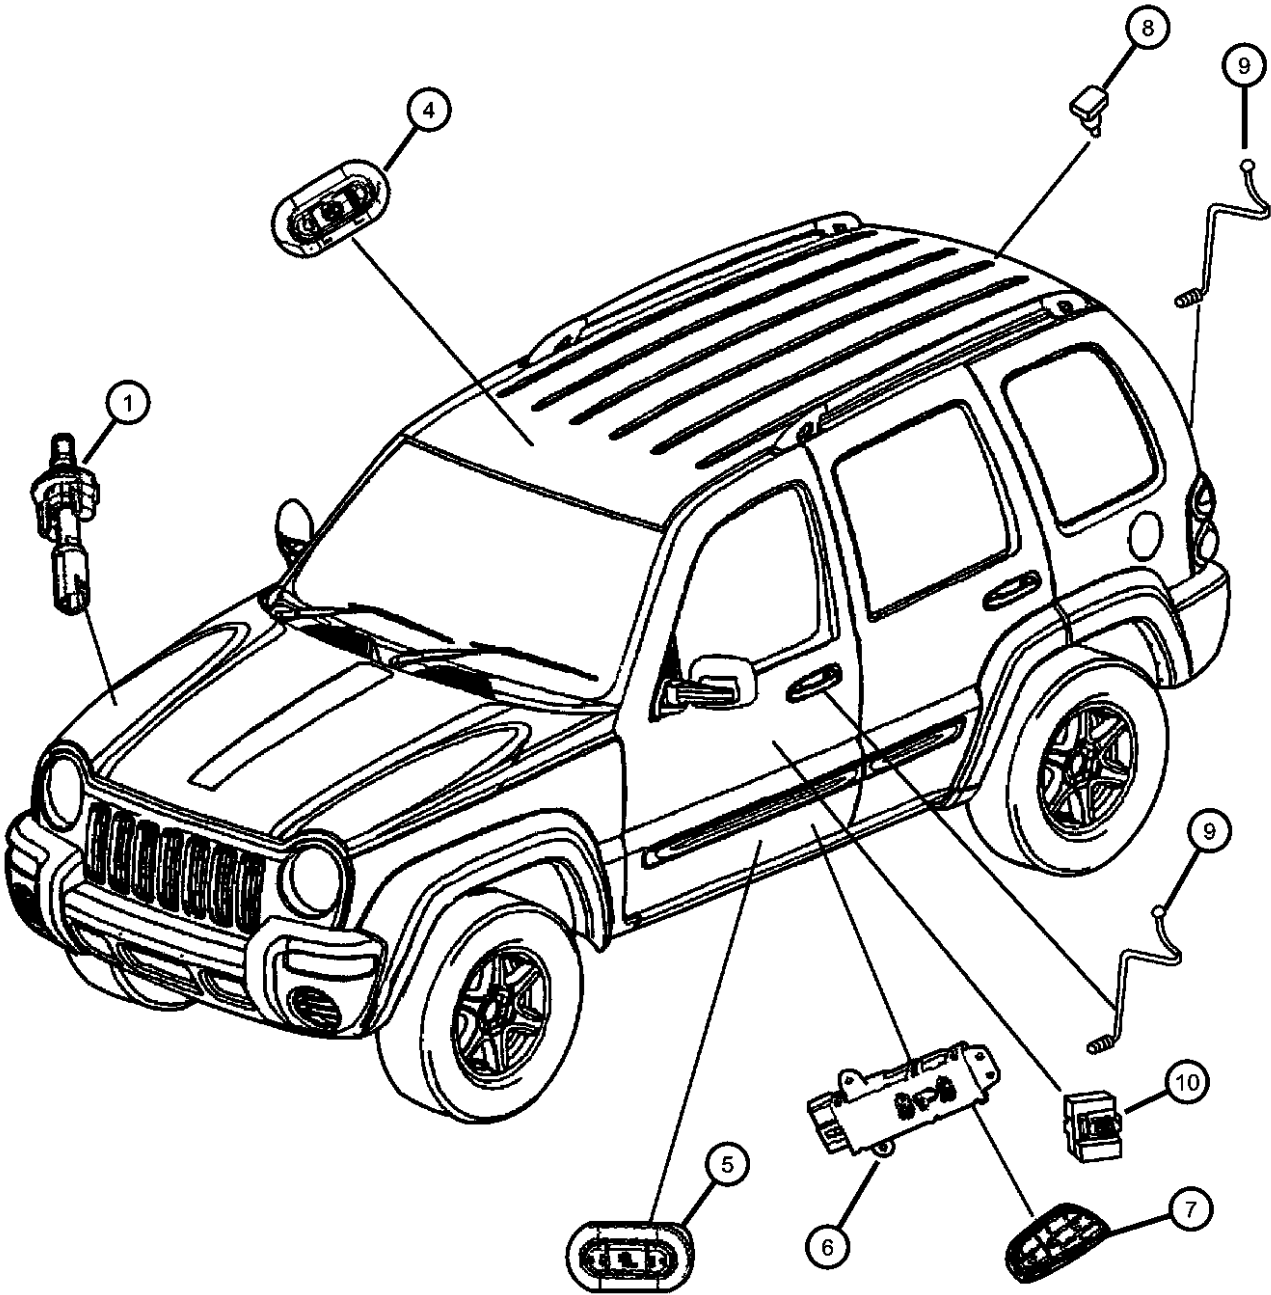


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-11	04886258AA	1	U		74				SWITCH, Programing Bypass
-12	56010696AA	1	J, T						SWITCH, Mirror
	56010697AA	1	U						

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions


Horns  
Figure 8-910

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	56010313AC	1							HORN AND BRACKET, Dual SIREN, Alarm
-2	56010335AC	1							

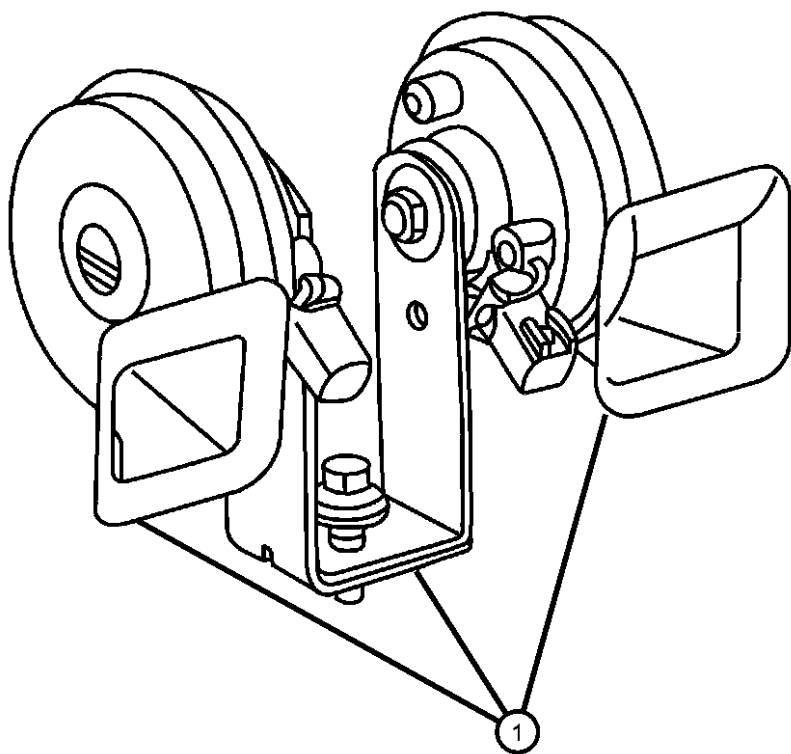

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Battery Tray & Cables  
Figure 8-1010

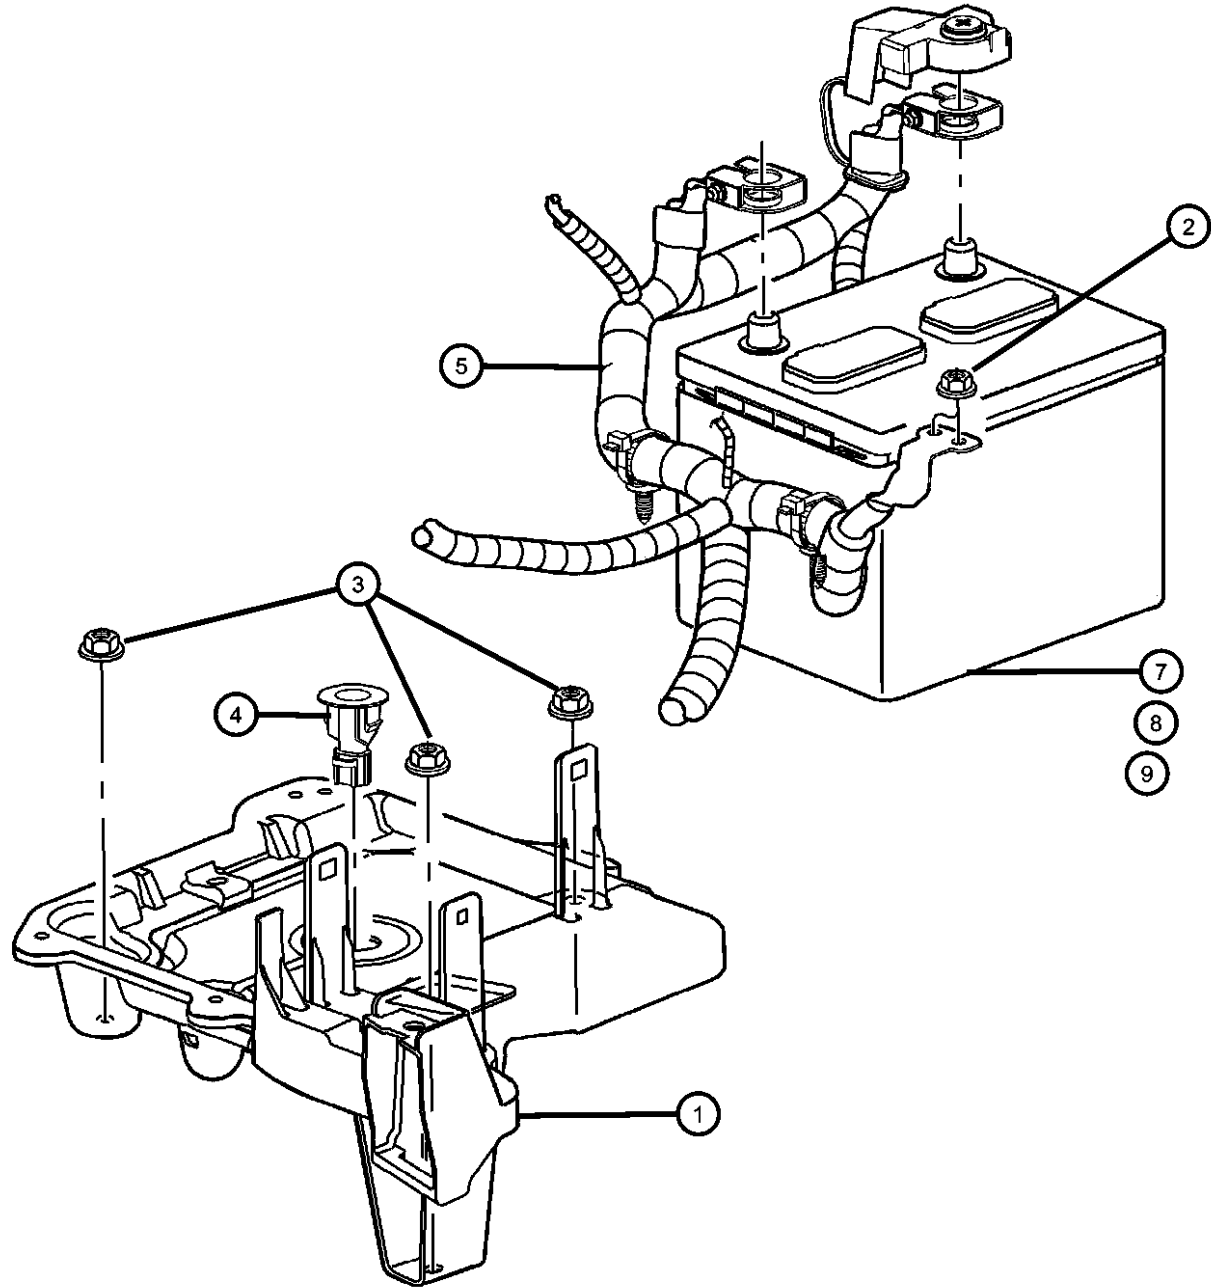

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Notes:  
[ED0] = 2.4L 4 Cylinder Engine  
[EK0] = 3.7L V6 Cylinder Engine  
[EN0] =All 4/5 Cylinder Turbo Diesel Engine


1									SUPPORT, Battery
	55360639AA	1				ED0, EK0			
	04609365AC								Mopar Power Pro 7
	55360654AA	1				EN0			
2	06101808	2							NUT, Hex, M6x1
3	06504030	2	J, T						NUT AND WASHER, Hex, M6x1
4	56041053	1							SENSOR, Battery Temperature
5									WIRING, Alternator and Battery
	56010480AE	1		H, P		EK0			
	56010481AC	1				ED0			
	56050402AB	1				EN0			
-6	56010479AC	1		M		EK0			WIRING, Alternator
7									BATTERY
	04364944	1				ED0, EK0			[BC2] Up to 12/18/03
	BAUNV34650								Mopar Universal Battery
	NAS34770EX								Mopar NASCAR Battery
	04609365AD	1				ED0, EK0			[BC2] After 12/18/03
	BA078770EX								Mopar Power Pro 7
	BA034600EX								Mopar Power Pro 6
	BA034500EX								Mopar Power Pro 5
	JEEP034770								Mopar Jeep Xtreme
	BAUNV34650								Mopar Universal Battery
	BAUNV75450								Mopar Universal Battery
8	04868999AB	1				EN0			BATTERY, Storage
9	04850377	1				ED0, EK0			BATTERY, Dry, Size 34 CCA 600, Mexico
-10									LABEL, Battery
	04793062	1				ED0, EK0			Europe

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Battery Tray & Cables  
Figure 8-1010

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	56041046	1	J, T						Canada
-11	55136959AC	1							BRACKET, Battery Hold Down

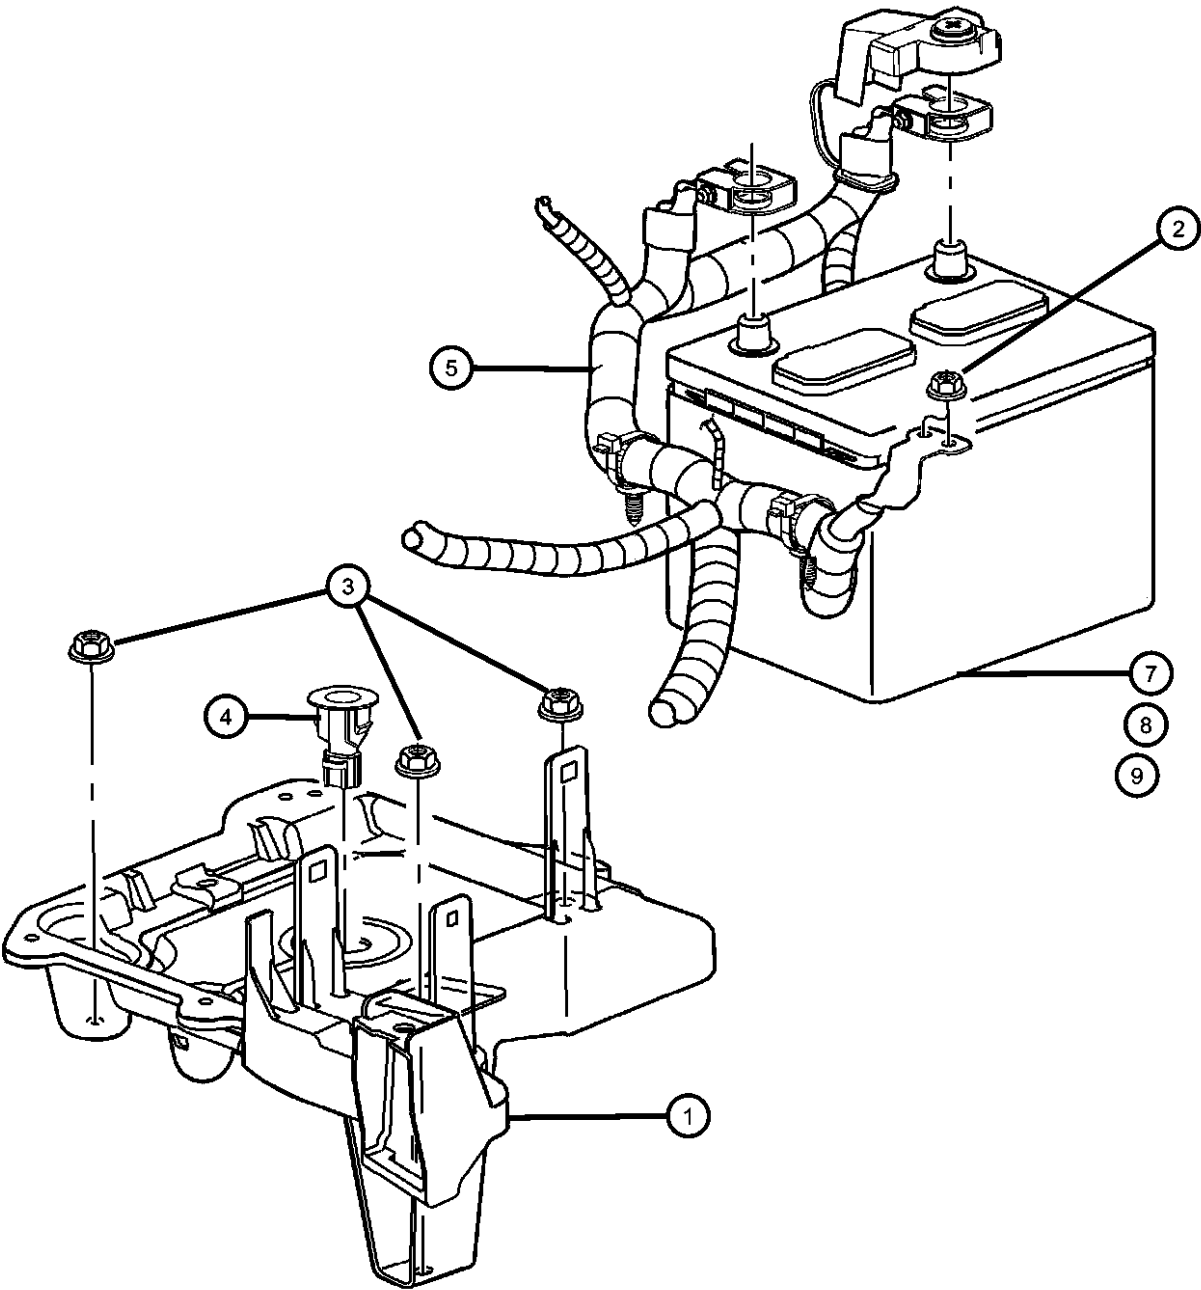



<b>LIBERTY (KJ)</b>				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions



Lamp, Front  
Figure 8-1110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Notes:  
[ED0] = 2.4L 4 Cylinder Engine  
[EK0] = 3.7L V6 Cylinder Engine  
[EN0] =All 4/5 Cylinder Turbo Diesel Engine

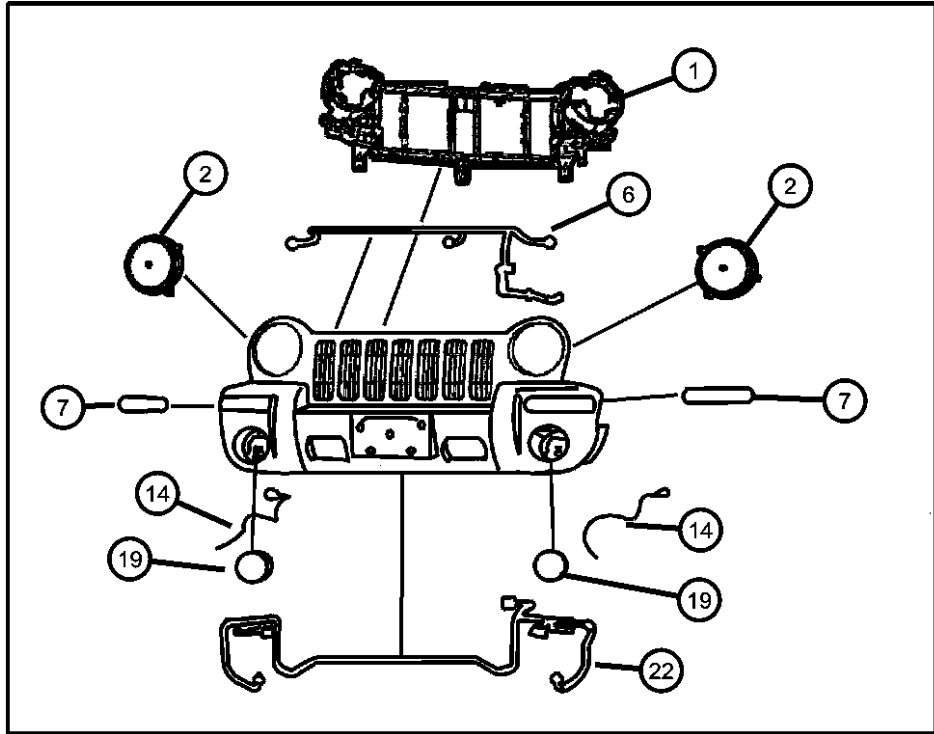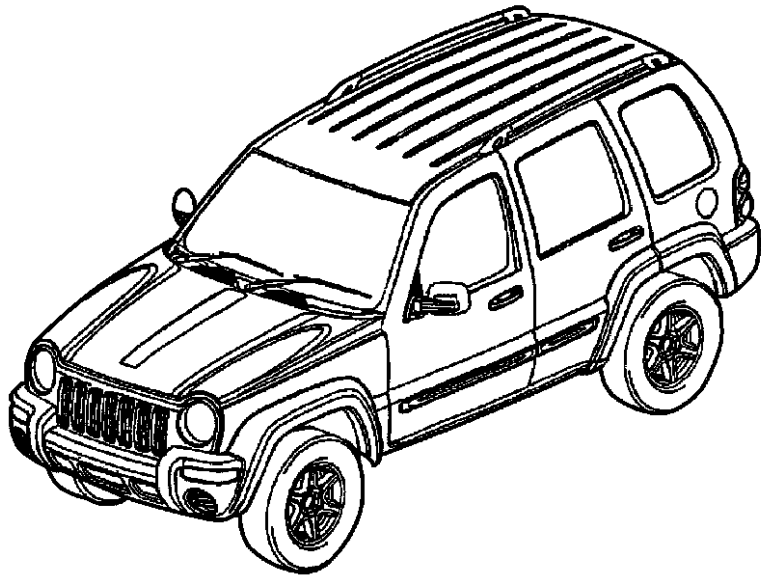

1	55155800AF	1	J			ED0, EK0			REINFORCEMENT, Grille Opening
		1	J			EN0			
		1	U			ED0, EK0			
		1	U			EN0			
		1	J, T						
2	55155808AB	1	J, T						HEADLAMP Right
	55155809AB	1	J, T						Left
	55155812AD	1	J			ED0, EK0			Export, Right
		1	J			EN0			Export, Right
	55155813AD	1	J			ED0, EK0			Export, Left
		1	J			EN0			Export, Left
	55155814AD	1	U			ED0, EK0			Export, Right
		1	U			EN0			Export, Right
	55155815AD	1	U			ED0, EK0			Export, Left
		1	U			EN0			Export, Left
	55155816AD	1	J			ED0, EK0			Export with Headlamp Leveling, Right
		1	J			EN0			Export with Headlamp Leveling, Right
	55155817AD	1	J			ED0, EK0			Export with Headlamp Leveling, Left
		1	J			EN0			Export with Headlamp Leveling, Left
	55155818AD	1	U			ED0, EK0			Export with Headlamp Leveling, Right
		1	U			EN0			Export with Headlamp Leveling, Right
	55155819AD	1	U			ED0, EK0			Export with Headlamp Leveling, Left

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Lamp, Front  
Figure 8-1110


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	U			EN0			Export with Headlamp Leveling, Left
-3	06505903AA	4							SCREW AND WASHER, Self Tapping, M6x1x22, Headlamp Mounting
-4									BULB, Headlamp
	L0009006	2							Export
	L0009007QL	1	J, T						Right & Left
-5	05126316AA	1	J, T						RETAINER, Headlamp Bulb
6									WIRING, Headlamp
	55155946AA	1	J, T						
	55155947AA	1	J			ED0, EK0			Export
		1	U			ED0, EK0			
		1	U			EN0			Export
	55155948AA	1	J			ED0, EK0			Export with Headlamp Leveling
		1	U			ED0, EK0			Export with Headlamp Leveling
		1	U			EN0			Export with Headlamp Leveling
7									LAMP, Front Combination
	55155910AC	1							Right
	55155911AC	1							Left
	55155934AC	1							Export, Right
	55155935AC	1							Export, Left
-8	06036216AA	2							SCREW, Tapping, .164-18x.625, Combination lamp attaching
-9	L0003157	1							BULB, 3157
-10	04857327AB	1							SOCKET, Turn signal
-11	55156754AA	1							SOCKET, Side Marker
-12	L0000168	1							BULB, 168
-13	04857327AB	1							SOCKET
14	05288895AC	1							LAMP, Side Repeater
-15	00153625	2							BULB, W10/5
-16	04676801	1							GASKET, Side Marker Lamp

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Lamp, Front  
Figure 8-1110


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-17	05288931AA	1							SOCKET, Side Repeater Lamp
-18	55156010AA	1							WIRING, Side Repeater Lamp
19									LAMP, Fog
	05083895AC	1							Left
	05083896AC	1							Right
-20	L0009145	1							BULB, Fog Lamp, 50 Watt
-21	06506579AA	6							SCREW, Fog Lamp, Foglamp Mounting
22									WIRING, Front End Lighting
	55155949AA	1							[MLC]
	55155950AC	1							[LNJ,MLA]
		1							[MLC,LNJ]
		1							[ML3]
		1							[MCU]
	55155951AB	1							[MLC,ABE]
	55155952AC	1							[MLC,ABE,LNJ]
		1							[ML3,ABE]
		1							[MLA,ABE,LNJ]
		1							[MCU,ABE]
-23	52112063AC	4							LAMP, Off Road
-24	5HZ08RXFAF	1							COVER, Light Bar Support, Black
-25	52112062AA	1							WIRING, Off Road Light
-26	5HZ07RXFAF	4							COVER, Lamp

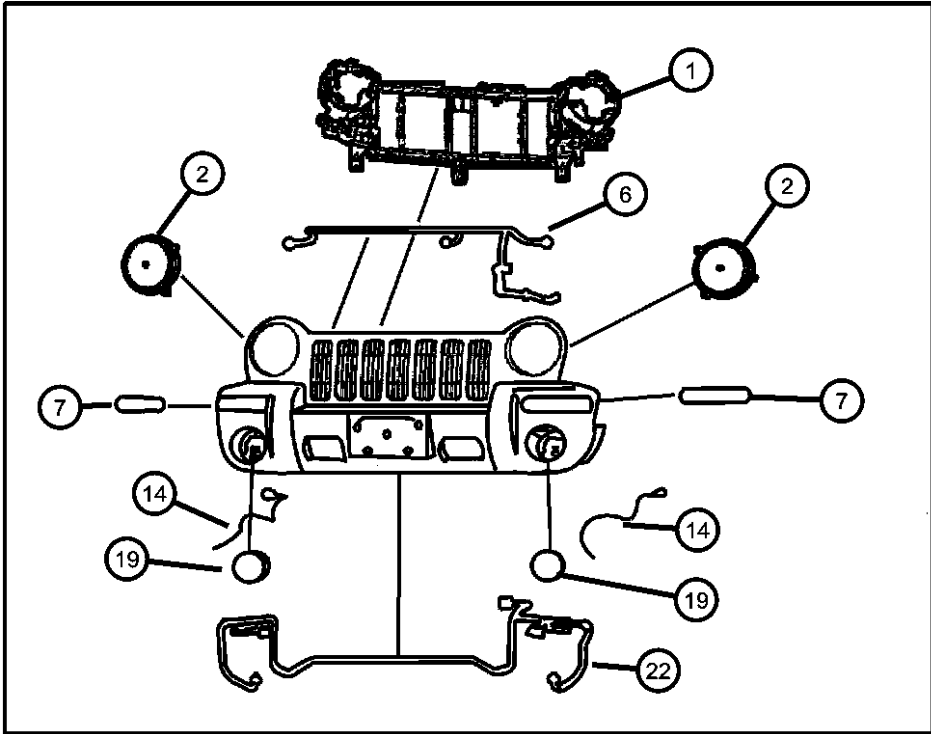

<b>LIBERTY (KJ)</b>				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Lamps Roof (Renegade)  
Figure 8-1115



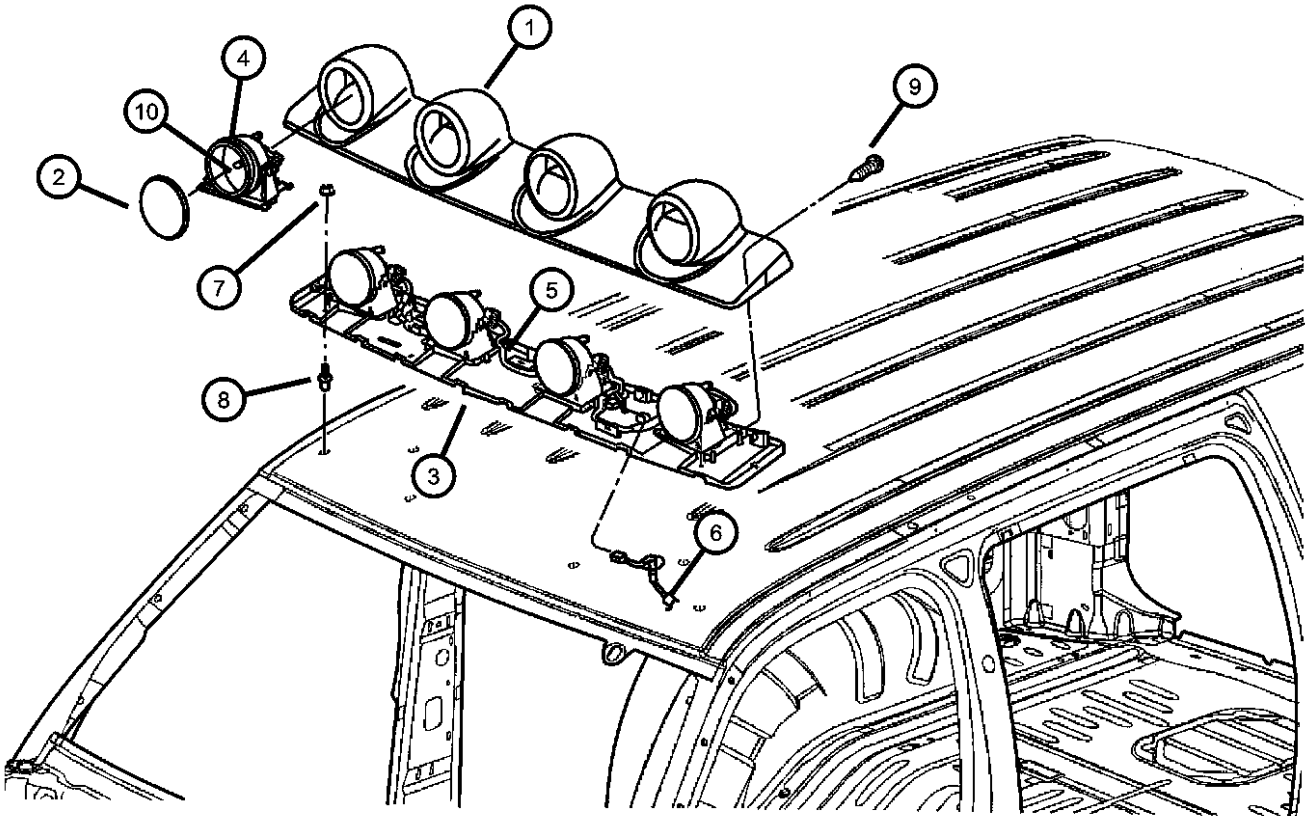


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5HZ01RXFAF	1							COVER, Light Bar Support
	5HZ01RXFAG	1							Up to 11/20/03
	5HZ08RXFAF	1							After 11/20/03
	5HZ08RXFAG	1							Up to 11/20/03, Export
	5HZ08RXFAG	1							After 11/20/03, Export
2	5HZ07RXFAF	4							COVER, Lamp
3	05083967AA	1							BAR, Light Support
4	52112063AC	4							LAMP, Off Road
5									WIRING, Off Road Light
	52112062AA	1							
	52112092AA	1							Export
6	56010419AB	1		M					WIRING, Roof Lamps
7	06507782AA	6							RIVET STUD
8	06505953AA	4							NUT AND WASHER, M6x1
9	06507783AA	4							SCREW, Shoulder
10	L0009007QL	1	J, T						BULB, Headlamp

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Lamp, Rear  
Figure 8-1120

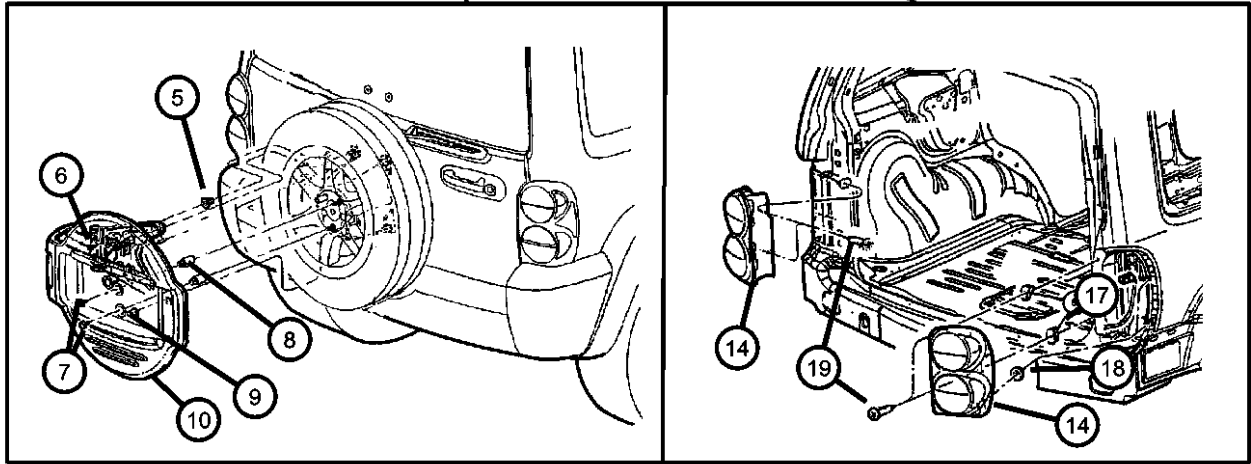
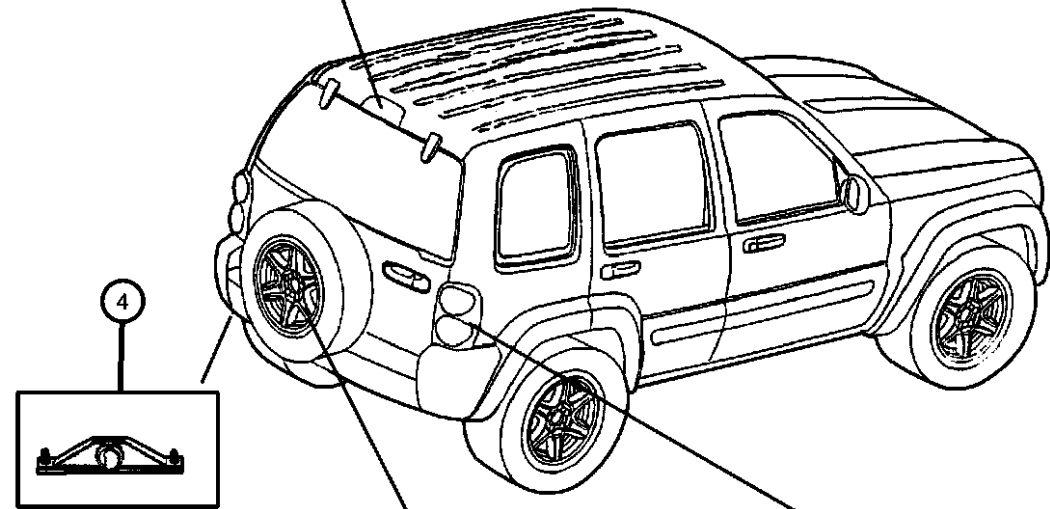
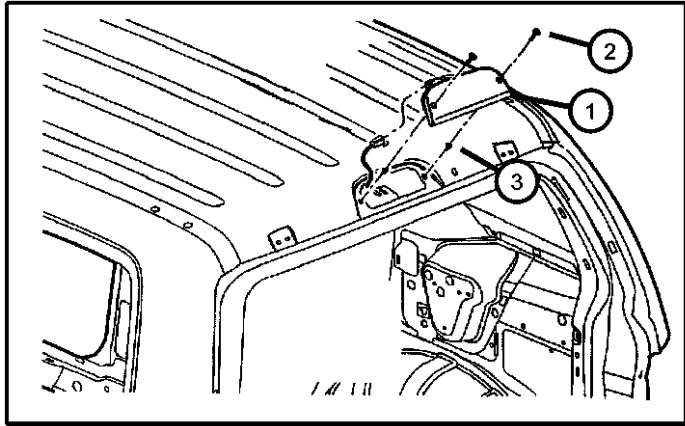


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55155832AB	1							LAMP, High Mounted Stop
2	06036534AA	2							SCREW, .19-16x1.00
3	06507330AA	2							NUT, Plastic Snap-in
4									LAMP, License Plate
	04574904	1							[MLC]
		1		M					[ML3]
		1							[MLA]
5		1							NUT/RIVET, M6x1.0, (NOT SERVICED),
6	06506429AA	2	J, U						SCREW, M8x1.25x21
7	06506429AA	2	J, U						SCREW, M8x1.25x21
8	06036303AA	2	J, U						NUT, .50-20
9	06507799AA	4							NUT, Wheel
10									BRACKET, License Plate
	5HF06RXFAI	1	J, U	H, P					Black
		1	J, U	M					Black
-11									LAMP, License
	55156006AA	2	J, U	H, P					[TBR], Export
		2	J, U	M					[TBR], Export
-12									WIRING, License Lamp
	56010329AD	1							
		1		M					
-13	00153625	2							BULB, W10/5
14									LAMP, Tail Stop Turn
	55155828AH	1							Right
	55155829AH	1							Left
	55155830AH	1							Export, Right
	55155831AH	1							Export, Left
-15	L0003157	1							BULB, 3157
-16									SOCKET, Board
	04676589	3							Tail Lamp Socket

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
			EDO = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


Lamp, Rear  
Figure 8-1120

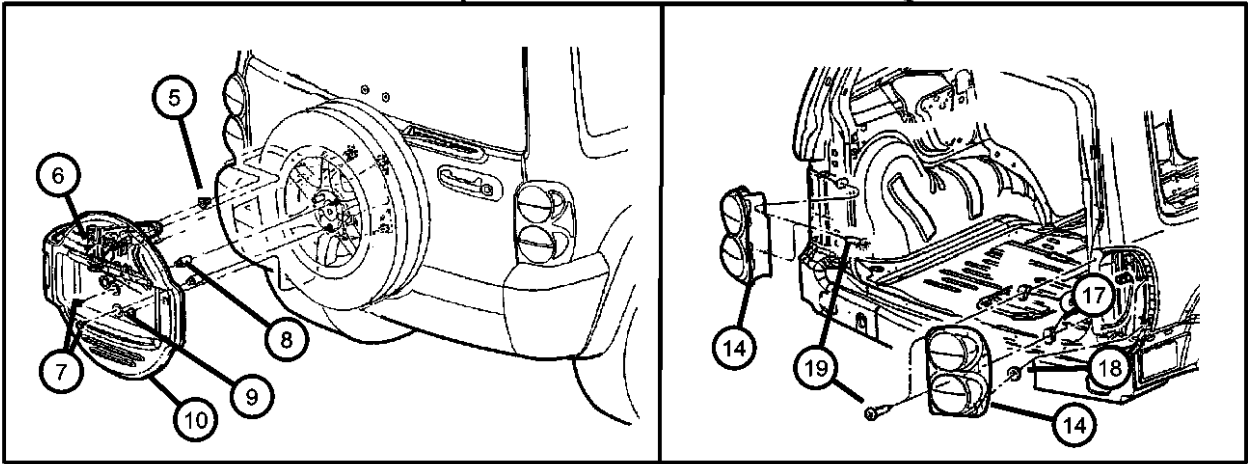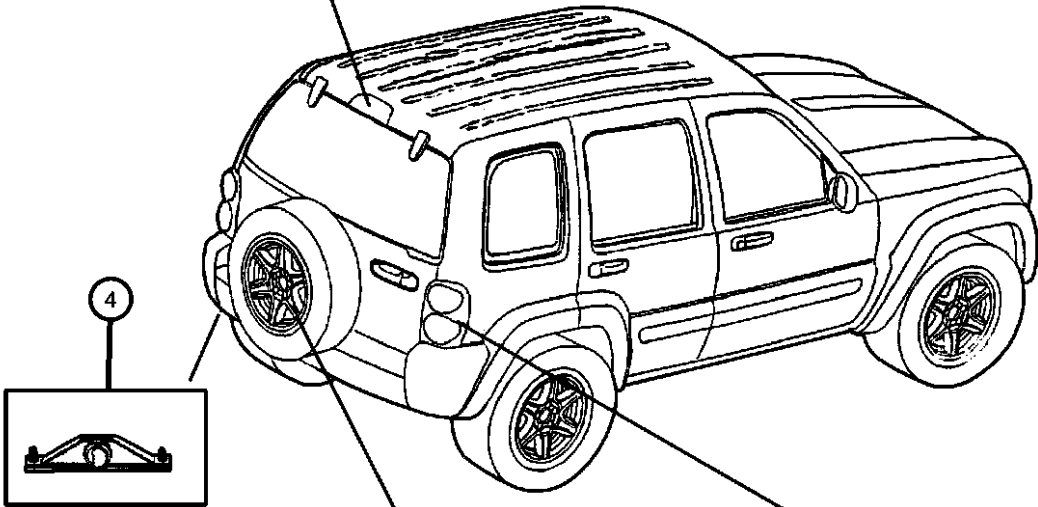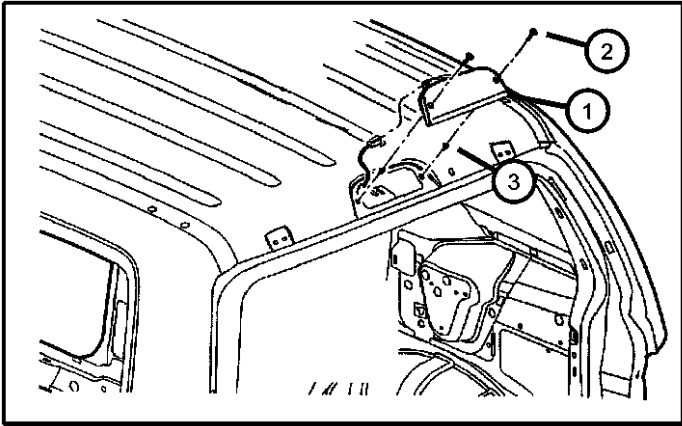

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		4							Tail Lamp Socket (Export)
17	06036508AA	4							NUT, Plastic Snap-in
18	06507347AA	4							NUT, Plastic Snap-in
19	06036366AA	4							SCREW, Tapping, .164-18x.75
-20									WIRING, Rear Lamp
	56010085AI	1	J, U						Export
	56010086AH	1	J, T						

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Lamp, Courtesy  
Figure 8-1130

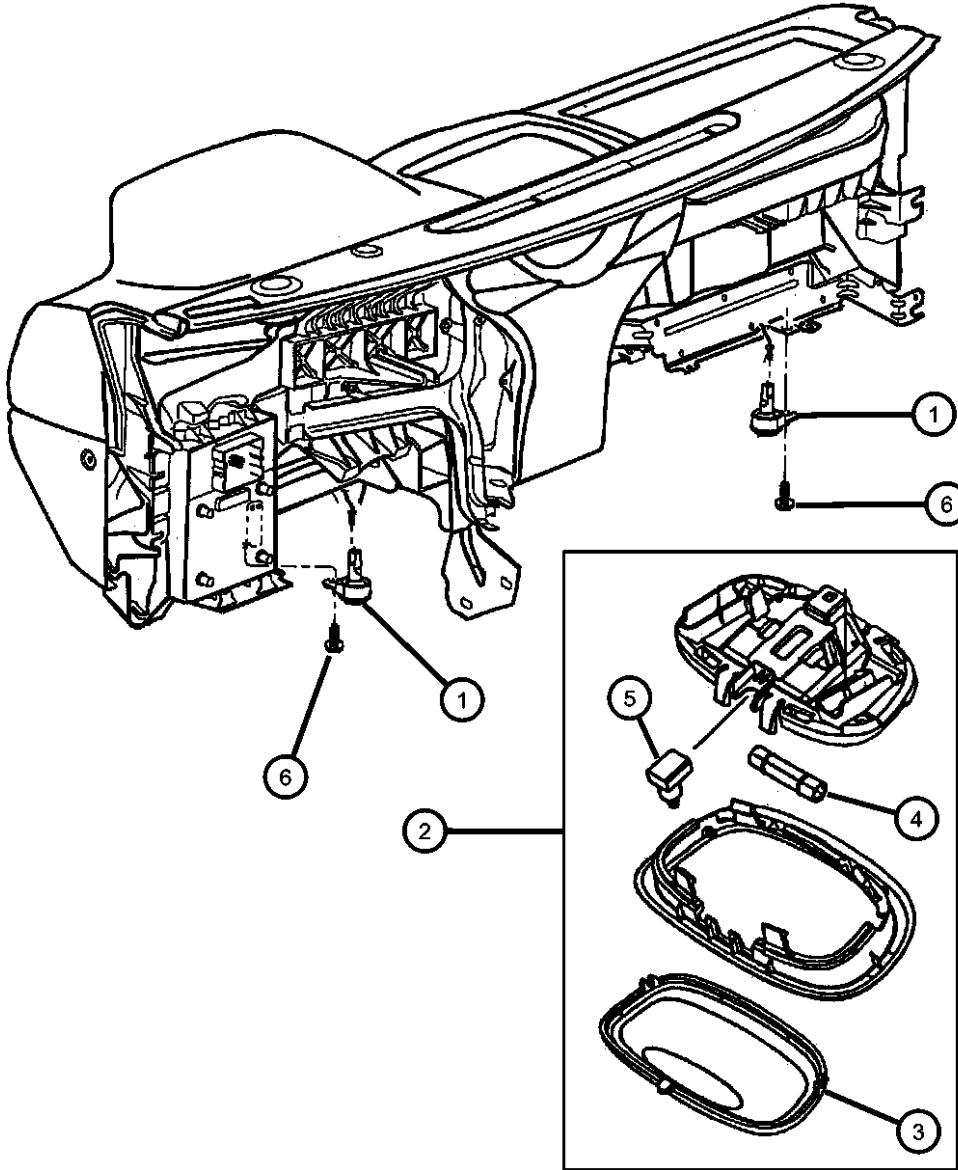

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	56042559AA	2		M, P					LAMP, Courtesy
2	5FT10TL2	1	J, T						LAMP, Cargo, Beige
3	55196755AA	1	J, T						LENS, Cargo Lamp
4	L0021202	1	J, T						BULB, 212-2
5	04685445	1	J, T						SWITCH, Reading Lamp, Cargo Lamp
6	04685445	1							SCREW, Tap./Hex. Flg. HD M4.2x1.70x15.00, (NOT SERVICED)
-7	04437661	3	J, T						LAMP, Message Center
-8	0JV76TL2	1	J, T						LAMP, Dome, Beige
-9	04762566	1	J, T						LENS, Dome Lamp
-10	04762566	1	J, T						LENS, Dome Lamp
-11									COVER, Lamp
	5HZ07RXFAB	4							Light Bar Roof Mounted (Up to 10/30/02)
	5HZ07RXFAF	4							Light Bar Roof Mounted (10/30/02 & After)
-12	56010552AB	1							LAMP, Warning, Passenger Airbag ON/OFF System
-13									LAMP, Reading
	0PB83TL2AB	1	J, U						
		1	J, T						

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Bulbs  
Figure 8-1135

LAMPS/LIGHTING - EXTERIOR

BULB APPLICATION TABLE	
LAMP	BULB
BACKUP	3157 P27/7W 1
BRAKE	3157 P27/7W 1
CENTER HIGH MOUNTED STOP	921/W16W 2
FRONT FOG (FASCIA MOUNTED)	H3/55W
FRONT FOG (GRILLE MOUNTED)	9145/H10 3
FRONT PARK/TURN	3157 P27/7W 1
FRONT POSITION	W5W 4
FRONT SIDE MARKER	168 5
HEADLAMP (NORTH AMERICA)	9007QL 6
HEADLAMP (EXCEPT NORTH AMERICA)	H-4 W0W6 7
LICENSE (NORTH AMERICA)	168 5
LICENSE (EXCEPT NORTH AMERICA)	W5W 4
LIGHT BAR (OFF ROAD)	9006LL 8
REAR FOG	3157 P27/7W 1
REAR PARK/TAIL	3157 P27/7W 1
REAR TURN	3757A PY27/7W
SIDE REPEATER	W5W 4

LAMPS/LIGHTING - INTERIOR

COURTESY LAMPS

BULB APPLICATION TABLE	
LAMP	BULB
Cargo	578
Courtesy	906 9
Front Map/Reading	578
Rear Dome	578
Vanity Mirror	MOPAR 6501966 10

PANEL LAMPS

BULB APPLICATION TABLE	
LAMP	BULB
Ash Receiver	161 11
Cluster Illumination	103 12
Compass Mini-Trip Illumination	MOPAR 4437661 13
Heater-A/C Control Illumination	74 14
Transmission Range Indicator Illumination	S14V

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
N									
1	L0003157	1							BULB, 3157
2	L0000921	1							BULB, 921
3	L0009145	1							BULB, Fog Lamp, 50 Watt
4	L002825W5W	2							BULB, W10/5
5	L0000168	1							BULB, 168
6	L0009007QL	1	J, T						BULB, Headlamp
7									BULB, H4 Clear
	J3242537	1	J			ED0, EK0			
		1	J			EN0			
		1	U			ED0, EK0			
		1	U			EN0			
8	L0009006	1							BULB, Headlamp, Light bar
9	L0000906	1		M, P					BULB, 906
10	L0000037	1	J, U						BULB, 37
11	L0000037	1							BULB, 161, (NOT SERVICED)
12	04839738AA	9				ED0, EK0			BULB AND SOCKET
13									LAMP, Message Center
	04437661	1	J, U						
		1	J, T						
14	05069170AA	1							BULB, Heater and A/C Control
-15	L0003893	2							BULB, T8/4, Side Repeater Lamp
-16									BULB, 192
	00154537	2	J, T						
		2	J, U						
-17	L0000579	1	J, T						BULB, 579
-18	MS820083	1	J, T				DG0		BULB, 14V 1.4W, Shift indicator

LIBERTY (KJ)

SERIES

P = Limited  
H = Sport  
M = Renegade

LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EK0 = All 3.7L  
ED0 = All 2.4L

TRANSMISSION


DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ



Wiring, Engine & Related Parts  
Figure 8-1210

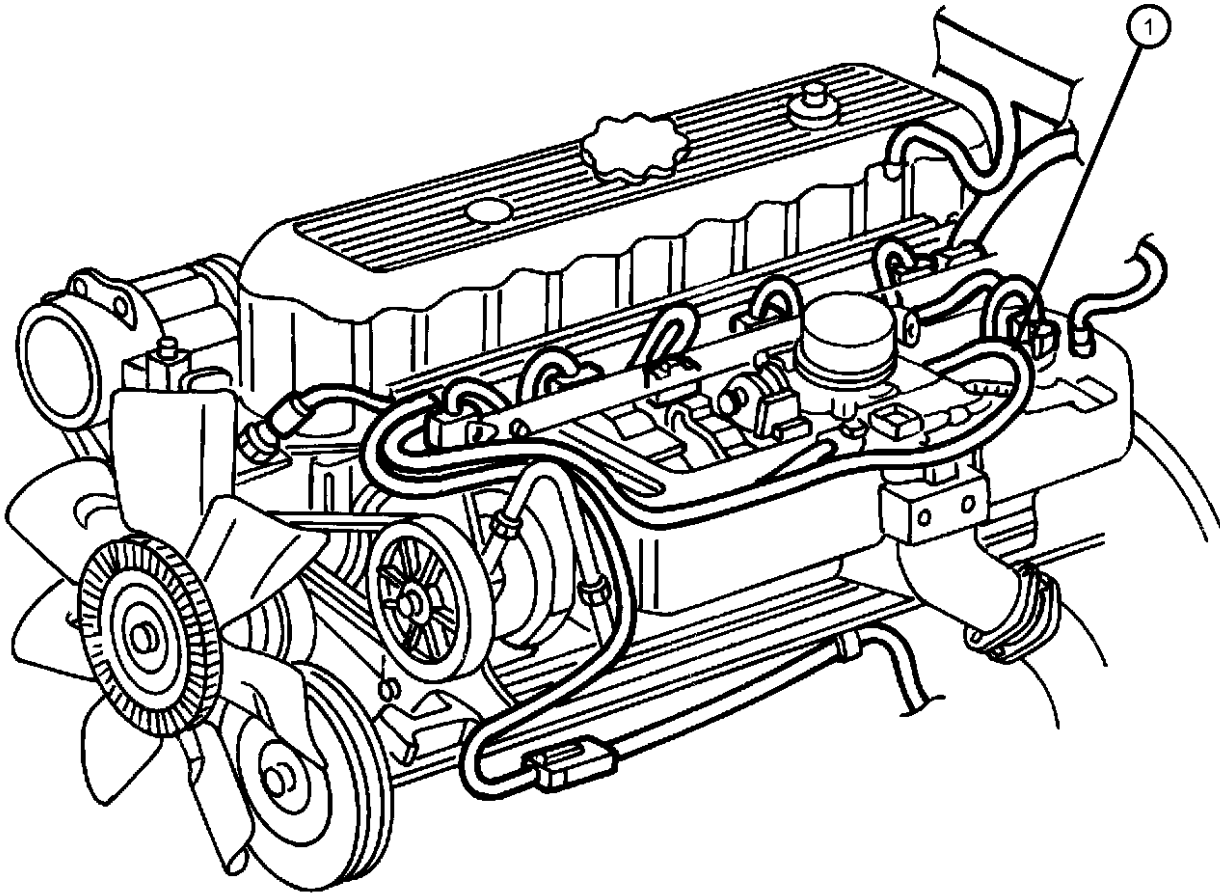

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Notes:  
[ED0] = 2.4L 4 Cylinder Engine  
[EK0] = 3.7L V6 Cylinder Engine  
[EN0] =All 4/5 Cylinder Turbo Diesel Engines  
[DBB]=All Manual Transmissions  
[DG0]=All Automatic Transmissions  
[DG6]=4 Speed Automatic Transmissions  
[DDD]= 5 Speed Heavy Duty Manual Transmission  
[DDK]= 5 Speed Heavy Duty Manual Transmission

1									WIRING, Engine
	56044190AB	1				ED0			
	56044216AE	1	T			EK0	DD0		Up to 01/13/04
	56044216AF	1	T			EK0	DD0		After 01/13/04
	56044302AE	1	J			EK0	DG0		Up to 01/13/04
	56044302AF	1	J			EK0	DG0		After 01/13/04
	56044303AE	1	U			EK0	DG0		Up to 01/13/04
	56044303AF	1	U			EK0	DG0		After 01/13/04
	56044505AE	1	T			EK0	DG0		Up to 01/13/04
	56044505AF	1	T			EK0	DG0		After 01/13/04
	56044506AE	1	J, T			ED0	DBB		
	56044507AE	1	U			ED0	DBB		
	56044508AC	1	J, T			EN0	DG0		
	56044509AC	1	J, T			EN0	DDD		
	56044510AB	1	U			EN0	DG0		
	56044511AB	1	U			EN0	DDD		
	56044614AE	1	J			EK0	DD0		Up to 01/13/04
	56044614AF	1	J			EK0	DD0		After 01/13/04
-2	56041379AA	2				EN0			CLIP, Housing
-3									BRACKET, Wiring
	56010275AB	1	U						Headlamp & Dash to Injector Inline
	56010291AB	1	J, T						Headlamp & Dash to Injector Inline
	56044125AC	1				EN0			Battery Harness

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part


Wiring, Engine & Related Parts  
Figure 8-1210

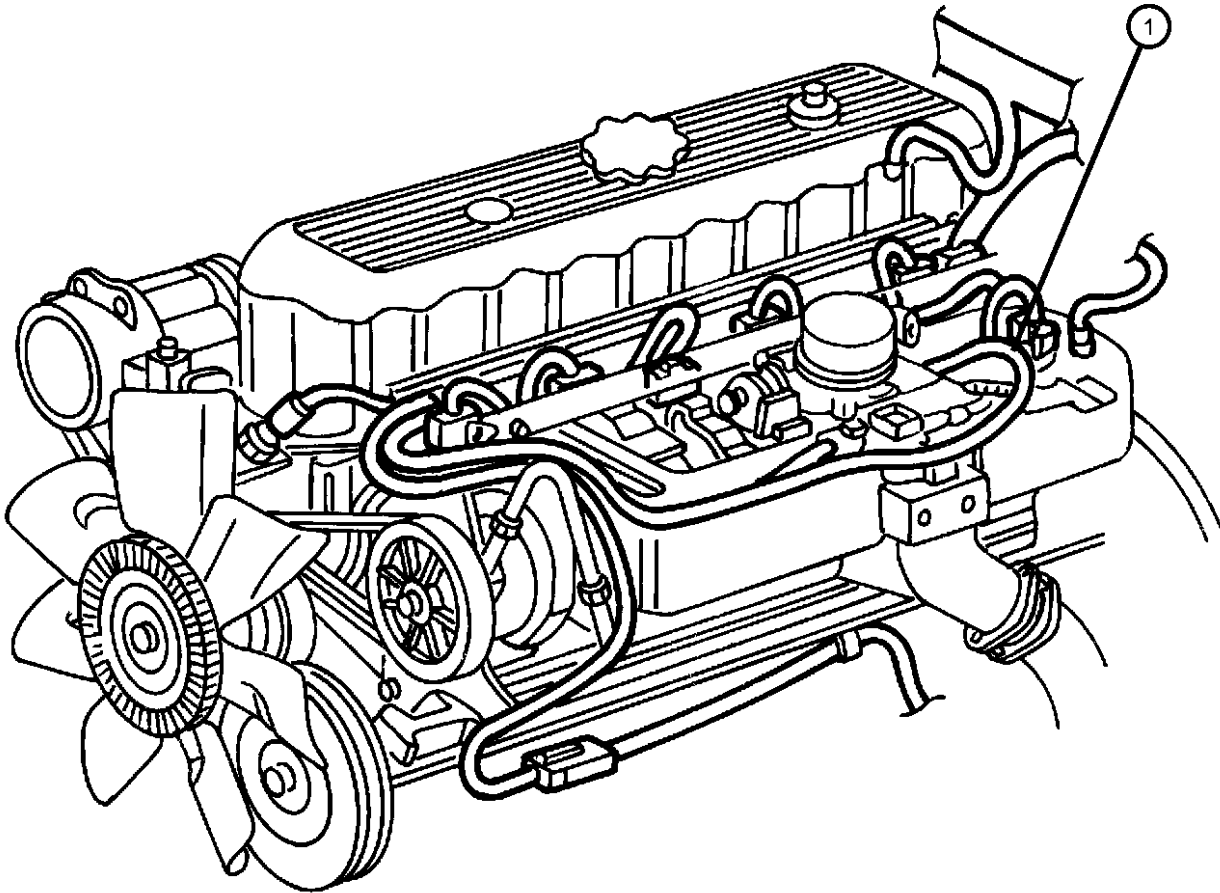

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	56044156AA	1				ED0			Battery Harness
-4	56041379AA	2				EN0			CLIP, Housing
-5									WIRING, Glow Plug
	05072674AA	1				EN0	DG0		
		1				EN0	DBB		
-6									WIRING, Alternator and Battery
	56010480AC	1		H, P		EK0			
	56010481AC	1				ED0			
	56050402AB	1				EN0			
-7	56050308AA	1				EK0			BRACKET, Wiring Harness
-8									STRAP, Ground
	56038529AB	1				ED0			Engine/Body/Hood
	56038554AB	1				EK0			Engine/Body/Hood
	56038750AA	1							Hood to Fender
-9									CORD, Engine Block Heater
	56041974AA	1				EK0			
	56044160AA	1				ED0			
-10									HEATER, Engine
	04557686AB	1				ED0			
	55037539AA	1				EN0	DG0		
		1				EN0	DBB		
-11	06503096	1				ED0			O RING, Engine Block Heater

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Wiring, Headlamp / Dash  
Figure 8-1310

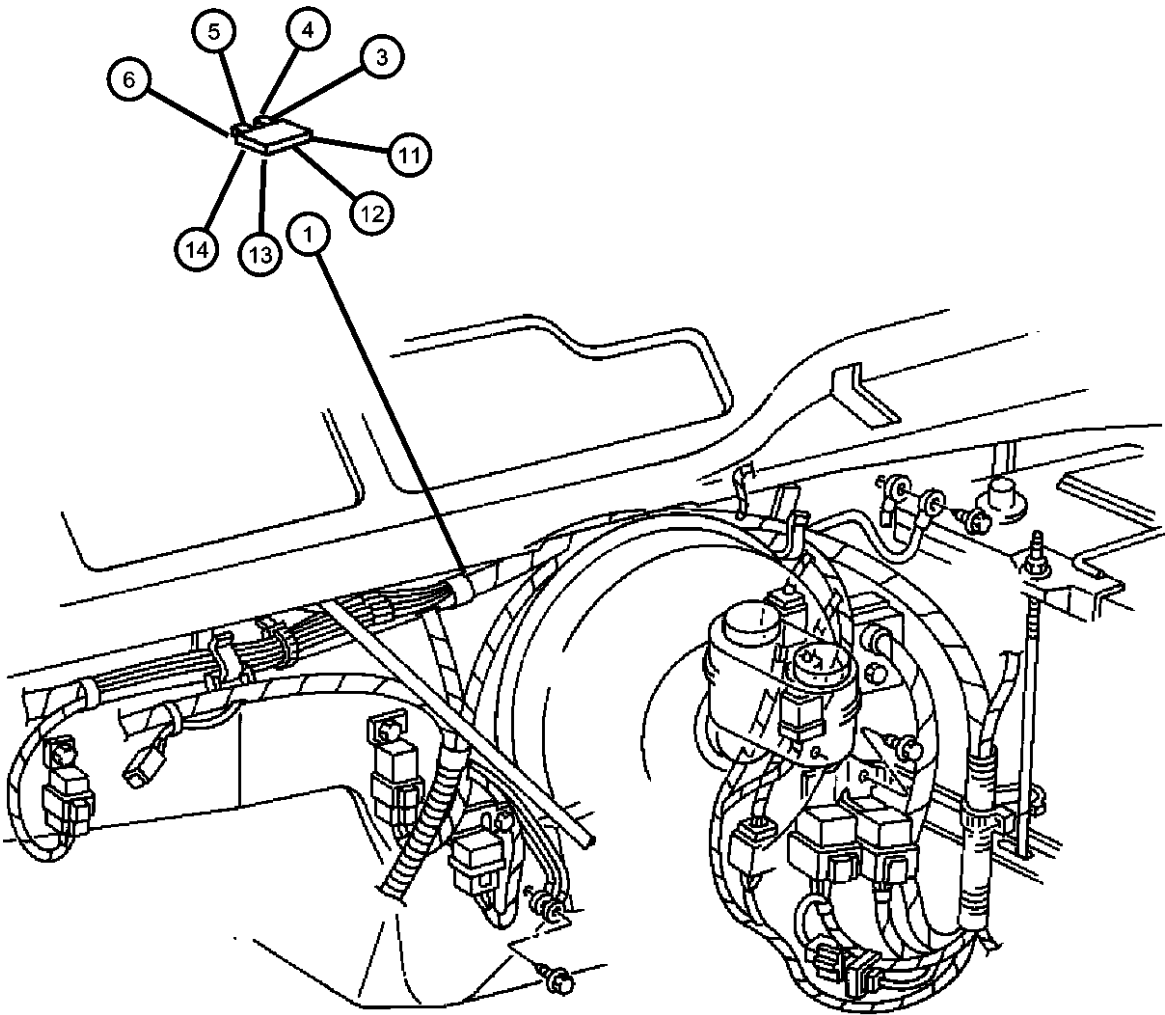


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Notes:  
 [BRE] = 4 Wheel Disc  
 [BRY] = Anti-Lock 4 Wheel Disc  
 [ED0] = 2.4L 4 Cylinder Engine  
 [EK0] = 3.7L V6 Cylinder Engine  
 [EN0] =All 4/5 Cylinder Turbo Diesel Engine  
 [DBB]=All Manual Transmissions  
 [DG0]=All Automatic Transmissions  
 Square Convuluted Tubing is Serviced with the Headlamp to Dash Harness Only

1									WIRING, Headlamp to Dash
	56010445AD	1	U			ED0, EK0	DBB		[BRY]
	56010446AD	1	U			ED0, EK0	DBB		[BRE]
	56010447AD	1	U			ED0, EK0	DG0		[BRY]
	56010448AD	1	U			ED0, EK0	DG0		[BRE]
	56010449AC	1	U			EN0	DBB		[BRE]
	56010450AC	1	U			EN0	DBB		[BRY]
	56010440AD	1	J, T			ED0, EK0	DG0		[BRY,LSB,LSC]
	56010441AD	1	J, T			ED0, EK0	DG0		[BRE,NHM]
	56010442AD	1	J			ED0, EK0	DG0		[BRE]
	56010443AD	1	J, T			ED0, EK0	DBB		[BRY]
	56010444AF	1	J, T			ED0, EK0	DBB		[BRE]
	56050483AB	1	J, T			ED0, EK0	DG0		[BRE]
	56010451AC	1	J, T			EN0	DBB		[BRY]
	56010452AC	1	J, T			EN0	DBB		[BRE]
	56010453AC	1	J, T			EN0	DG0		[BRY]
	56010454AC	1	J, T			EN0	DG0		[BRE]
	56010456AC	1	U			EN0	DG0		[BRY]
	56010458AC	1	U			EN0	DG0		[BRE]
	56050482AB	1	J, T			ED0, EK0	DG0		[BRY]
-2	68029179AA	1							TROUGH, Wiring, COVERS THE HEADLAMP AND DASH WIRING UNDER THE RADIATOR SUPPORT
-3	56021543	1							BREAKER, Circuit

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

Wiring, Headlamp / Dash  
Figure 8-1310

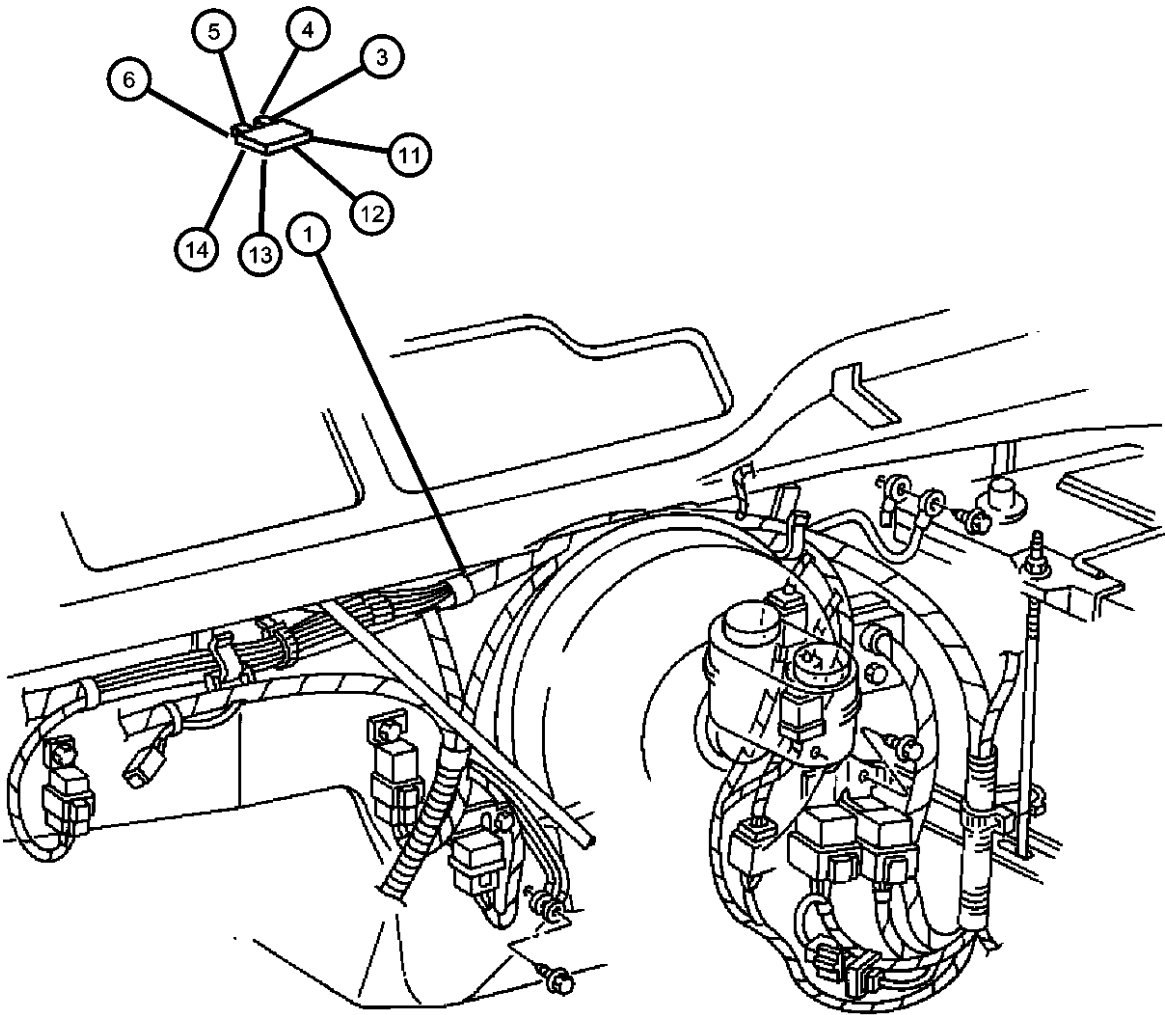


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
4	000ATM10	1	J, T						FUSE, Mini, 10 AMP, Red
5	000ATM15	1	J, T						FUSE, Mini, 15 AMP, Light Blue
6	000ATM20	1	J, T						FUSE, Mini, 20 AMP, Yellow
7	000ATM30	AR							FUSE, Mini, 30 AMP, Green
-8									PULLER, Fuse
	05072937AA	1	U						
		1	J, T						
-9									BRACKET, Wiring
	56010275AB	1	U						Headlamp & Dash to Injector Inlines
	56010291AB	1	J, T						Headlamp & Dash to Injector Inlines
	56044125AC	1				EN0			Battery Harness
	56044156AA	1				ED0			Battery Harness
-10	56009948AA	1							COLLAR, Insulator, Headlamp & Dash to I/Panel
-11									COVER, Power Distribution Center
	05114515AA	1	J, T			EN0	DBB		
		1	J, T			EN0	DG0		
		1	U			EN0	DG0		
		1	U			EN0	DBB		
	05114516AA	1	J, T			ED0, EK0	DG0		
		1	J, T			ED0, EK0	DBB		
		1	U			ED0, EK0	DBB		
12	06102078AA	AR							FUSE CARTRIDGE, 50 Amp
13	06102075AA	AR							FUSE CARTRIDGE, 20 Amp
14	06102076AA	AR							FUSE CARTRIDGE, 30 Amp
15	06102077AA	AR							FUSE CARTRIDGE, 40 Amp
-16	06101757	1							FUSIBLE LINK

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part


Wiring Instrument Panel  
Figure 8-1410

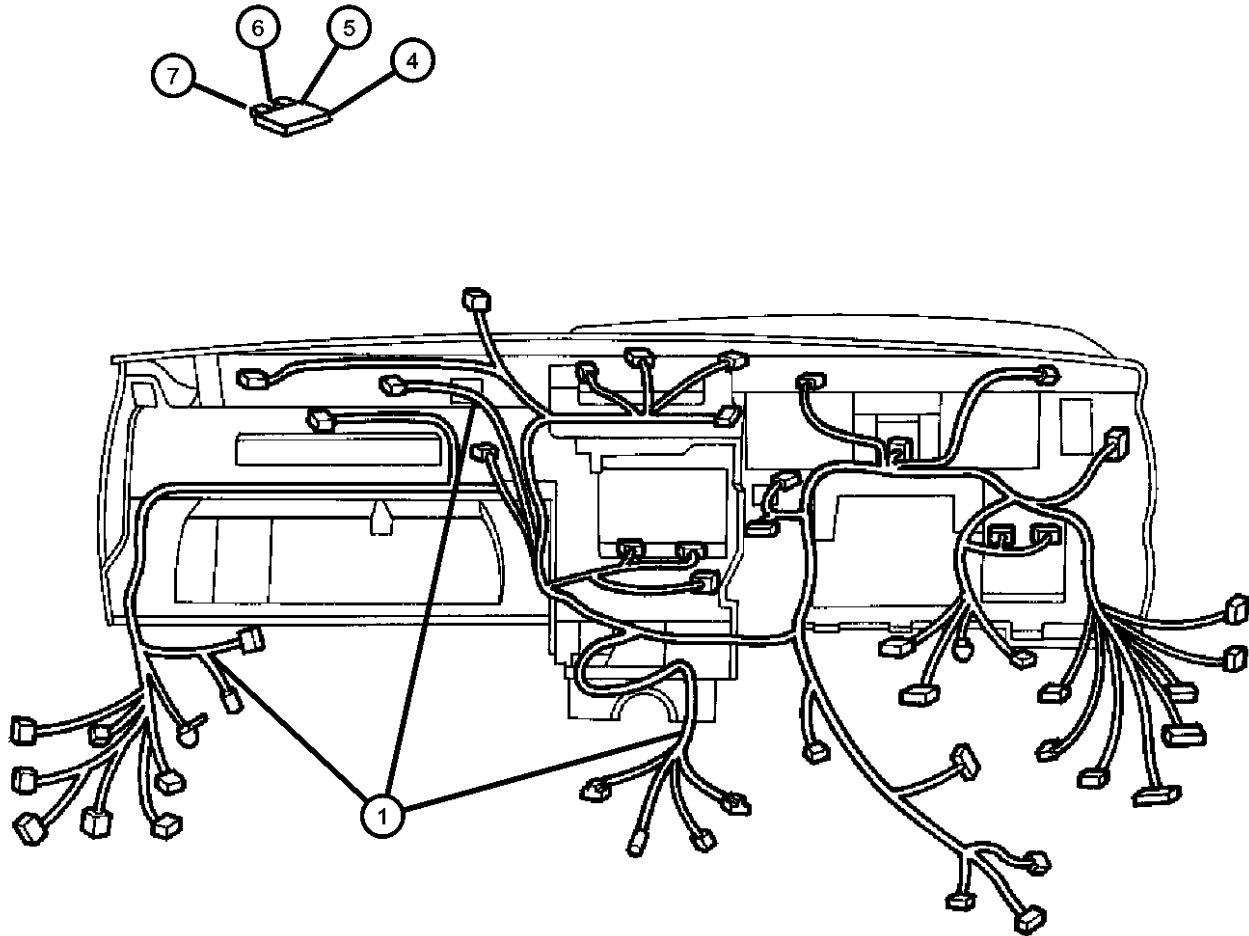

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									WIRING, Instrument Panel
	56010620AD	1	U						Export
	56010622AD	1	J, T						[AJP]
	56010623AD	1	J						Export
	56010624AD	1	J, T						
	56010625AD	1							[LNS]
-2									JUNCTION BLOCK, Relay
	56010435AC	1	J, T						
	56010436AC	1	J, T						[GWA,GXM,LNJ,RSP]
		1	J, U						Export
-3									BRACKET, Junction Block
	56009986AB	1							Lower Mounting
	56010333AD	1	J, T						Upper Mounting
	56010334AD	1	U						Upper Mounting
4	000ATM10	1	J, T						FUSE, Mini, 10 AMP, Red
5	000ATM15	1	J, T						FUSE, Mini, 15 AMP, Light Blue
6	000ATM20	1	J, T						FUSE, Mini, 20 AMP, Yellow
7	000ATM30	AR							FUSE, Mini, 30 AMP, Green
-8	06102078AA	AR							FUSE CARTRIDGE, 50 Amp
-9									PULLER, Fuse
	05072937AA	1	U						
		1	J, T						
-10									BREAKER, Circuit
	56007290	1							18 amp
	56021543	1							25 amp
-11	56042070	1							COVER, Wiring ProtectorExport

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

Wiring, Body & Accessories  
Figure 8-1510

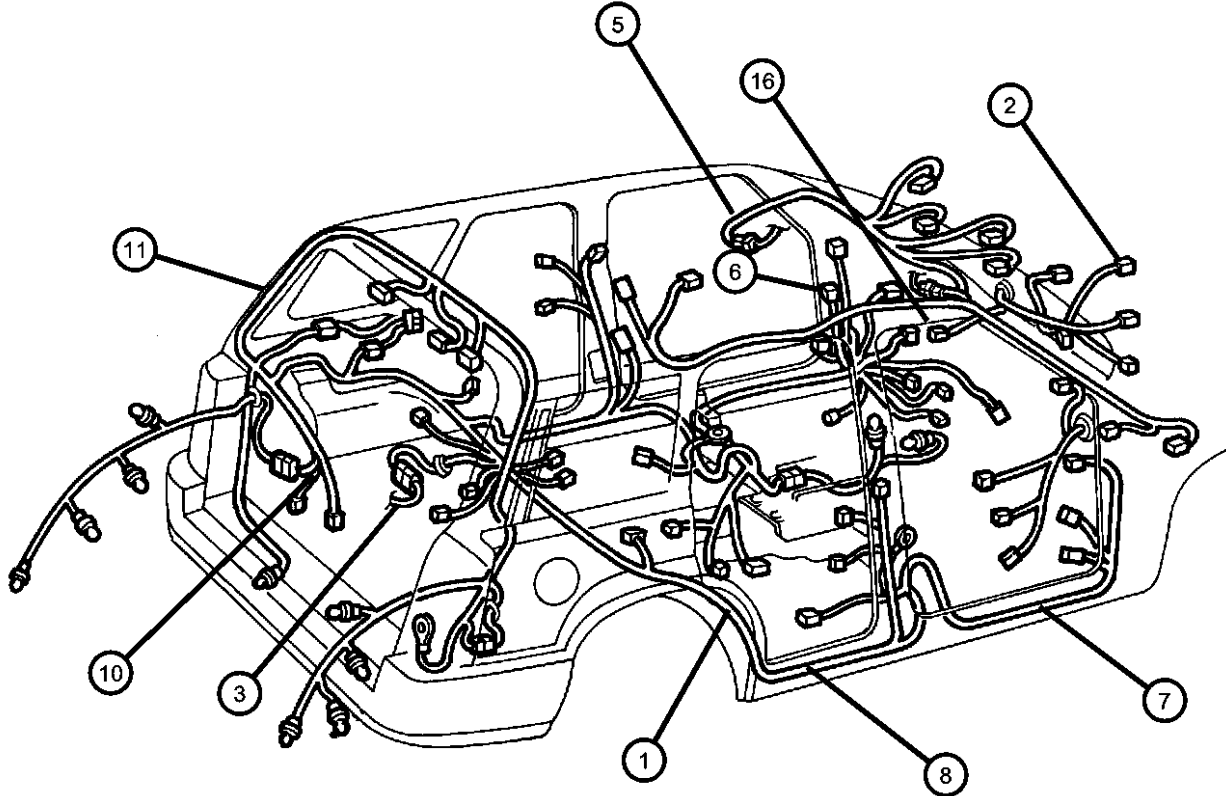


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes: [ED0] = 2.4L 4 Cylinder Engine [EK0] = 3.7L V6 Cylinder Engine [EN0] = 2.5L Diesel									
1									WIRING, Body
	56010590AE	1	J, T						[JPH]
	56010591AE	1	J, T						[JPY]
	56010592AE	1	J, T						[CGS,JPT,JPM]
		1	J, T						[CGS,JPM], Export
	56010593AE	1	J, T						[CGS]
	56010594AE	1	U						[CGS,JPM]
	56010595AE	1	J, T						[CGS,JPY,AHT]
	56010597AE	1	J, T						[JPT,JPM]
		1	J, T						[JPM], Export
	56010618AE	1	U						[JPM]
	56050621AA	1	J, T						[CGS,JPT]
		1	J, T						[CGS], Export
	56050622AA	1	J, T						[JPT]
		1	J, T						Base, Export
	56050623AA	1	U						Base
	56050624AA	1	U						[CGS]
2									WIRING, Front End Lighting
	55155949AA	1							Without Foglamps
	55155950AC	1							With Foglamps
	55155951AB	1							Without Foglamps & without Export Equipment Package
	55155952AC	1							With Foglamps & with Export Equipment Package
3									WIRING, Rear Body
	56010467AC	1	U						Base
	56010468AC	1	J, T						[GWA,ABE,CUD]
	56010469AC	1	J, T						Base

LIBERTY (KJ)									
SERIES	LINE			BODY		ENGINE		TRANSMISSION	
P = Limited	J = LHD (4WD)			74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)					DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)					EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
						ENJ = Engine -2.5L 4 Cyl 16v		Manual	
						Turbo Diesel		DG4 = Transmission-Multi-Speed	
						ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
						Turbo Diesel		DG6 = Transmission-4-Spd.	
						EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
						EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
						ED0 = All 2.4L		5-45RFE	
								DBB = All Manual Transmissions	
								DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Wiring, Body & Accessories  
Figure 8-1510

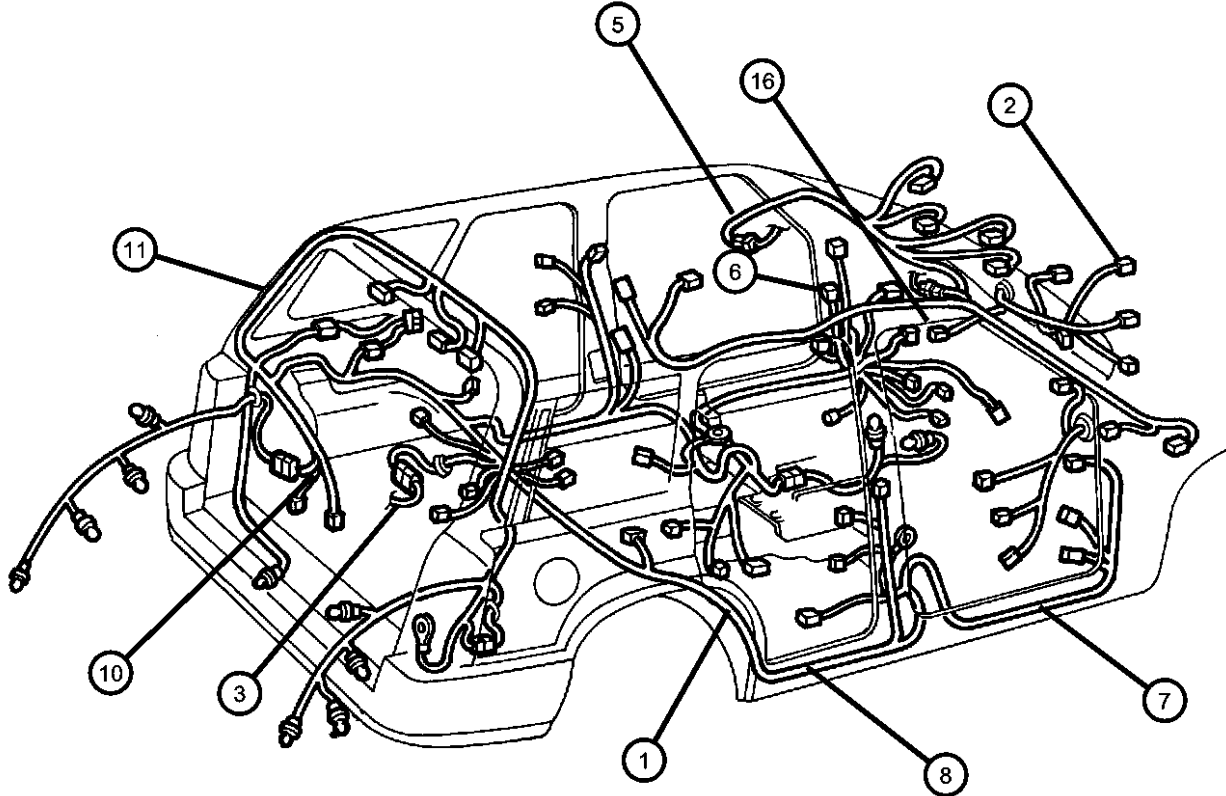


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-4	56010470AC	1	J, T						[AHT] COVER, Body Wiring
	56010044AC	2	J, T						
5	05101961AA	1	U						WIRING, Sunroof
		1							WIRING, Steering Wheel
6	56010170AC	1		H, M					With Luxury Steering Wheel, Speed Control & without Audio Control
		1		P					With Luxury Steering Wheel, Speed Control & without Audio Control
7	56010171AC	1		H, M					With Luxury Steering Wheel, Speed Control & with Audio Control
		1		P					With Luxury Steering Wheel, Speed Control & with Audio Control
7	56010185AB	1							With Luxury Steering Wheel
	56010555AE	1	J, T						WIRING, Front Door
	56010556AD	1	J, T						Security Alarm, Power Locks, with or without Speed Senitive Power Locks, Power Mirrors, without Infinity 6 Speaker System & With or without Power Driver & Front Passenger Window, Drivers Side
	56010557AE	1	J, T						With Infinity 6 Speaker System, Passenger Side
	56010558AE	1	J, T						With Security Alarm, Power Driver & Front Passenger Windows & Without Infinity 6 Speaker System, Drivers Side
									With Power Driver & Front Passenger Windows & Without Infinity 6 Speaker System, Passenger Side

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Wiring, Body & Accessories  
Figure 8-1510

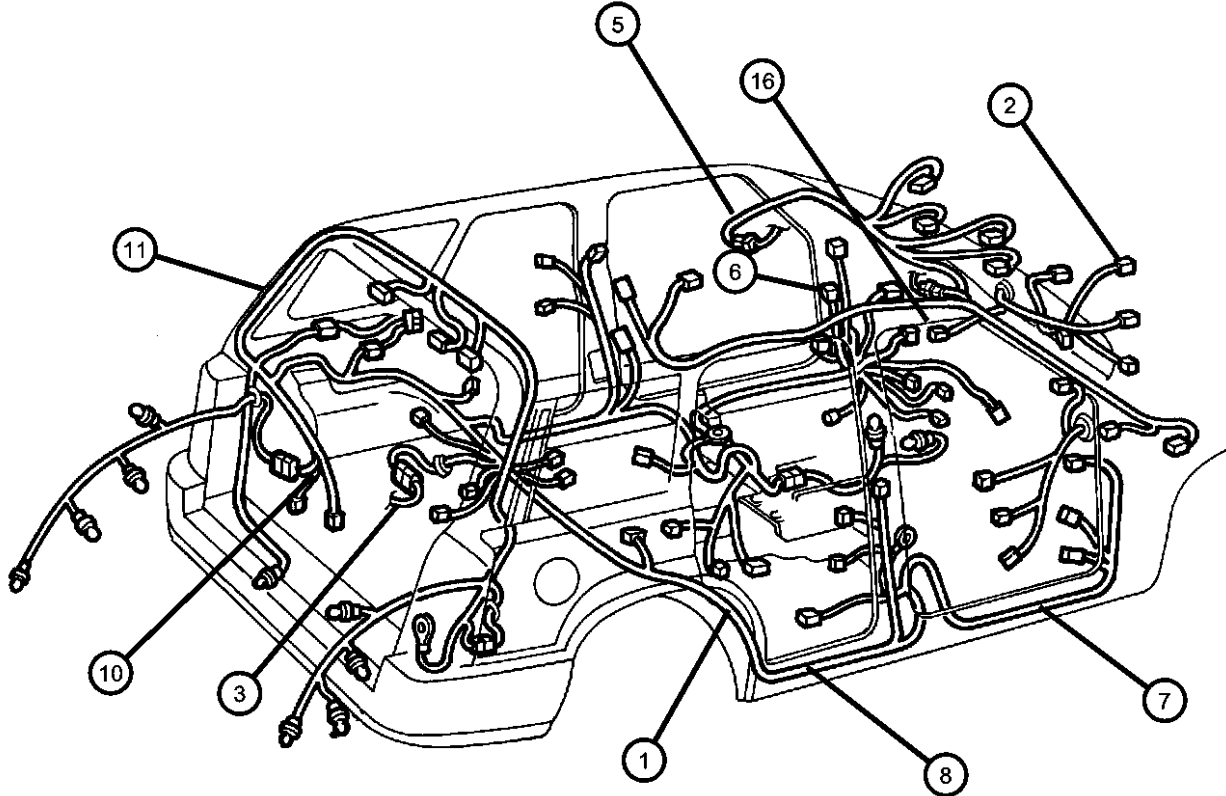


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	56010561AE	1	J, T						Without Power Driver & Front Passenger Windows, Power Mirrors, Speed Sensitive Power Locks, & without Infinity 6 Speaker System, Drivers Side
		1	U						Without Power Driver & Front Passenger Windows, Power Mirrors, Speed Sensitive Power Locks, & without Infinity 6 Speaker System, Drivers Side
	56010571AD	1	J, T						With Infinity 6 Speaker System, Drivers Side
	56050701AB	1	J, T						With Power Locks, with or without Speed Sensitive Power Locks, Power Mirrors, without Infinity 6 Speaker System & With or without, Security Alarm, Power Driver & Front Passenger Windows, Drivers Side
	56050703AB	1	J, T						With Power Driver & Front Passenger Windows & Without Infinity 6 Speaker System & without Security Alarm, Drivers Side
	56050705AB	1	J, T						With Infinity 6 Speaker System & without Security Alarm, Drivers Side
8									WIRING, Rear Door
	56010614AD	2							[JPY]
	56010615AE	2							[JPB,JPH]
	56010616AD	2							
-9									GROMMET, Door Wiring
	56010326AC	2							Front door
	56010327AB	2							Rear door
	56010328AA	1							Swing gate
10									WIRING, Tailgate
	56050309AC	1							
	56050310AC	1							[GXM]

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions



Wiring, Body & Accessories  
Figure 8-1510

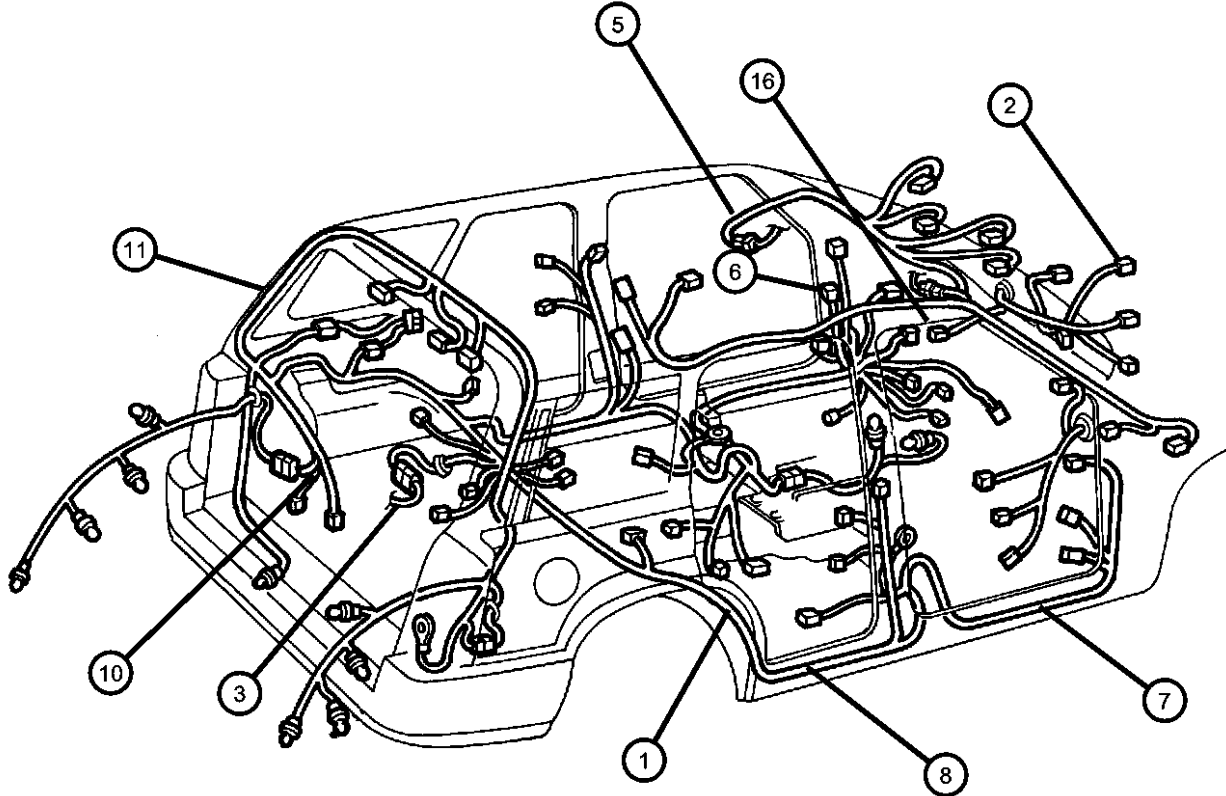


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
11	56050311AC	1							Export
									WIRING, Rear Lamp
	56010085AI	1	J, U						
	56010086AH	1	J, T						
-12	56038366AB	1							CONNECTOR, 7 Way, Trailer tow
-13	05102404AA	1							WIRING KIT, 7 Way, Female
-14	05102405AA	4							WIRING KIT, 10 Way, Female, Trans soleniod
-15	56019823	1							ADAPTER, Trailer Tow
16									WIRING, Overhead Console
	04760644	1	J, T						
		1	J, U						
-17									COVER, Wiring Protector
	56010046AC	1							Right
	56010047AC	1							Left
	56042070	1							[ABE]
-18	56010354AA	4							CLIP, Floor Pan Cover Button
-19	56010419AB	1			M				WIRING, Roof Lamps
-20									WIRING, Off Road Light
	52112062AA	1							
	52112092AA	1							[ABE]
-21	56010329AD	1							WIRING, License Lamp
-22									WIRING, Fuel Module
	56010598AA	1				ED0, EK0			
	56010599AA	1				EN0			
-23									WIRING, Seat
	05127457AA	1							[CF5]
	05127458AA	1							[CF5,JPS]
	05127460AA	1							[CF5,JPS] Mexico

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Wiring, Body & Accessories  
Figure 8-1510

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1							[CF5,JPS], Export
-24	05143017AA	1							WIRING, Power Door Lock, Swing gate handle

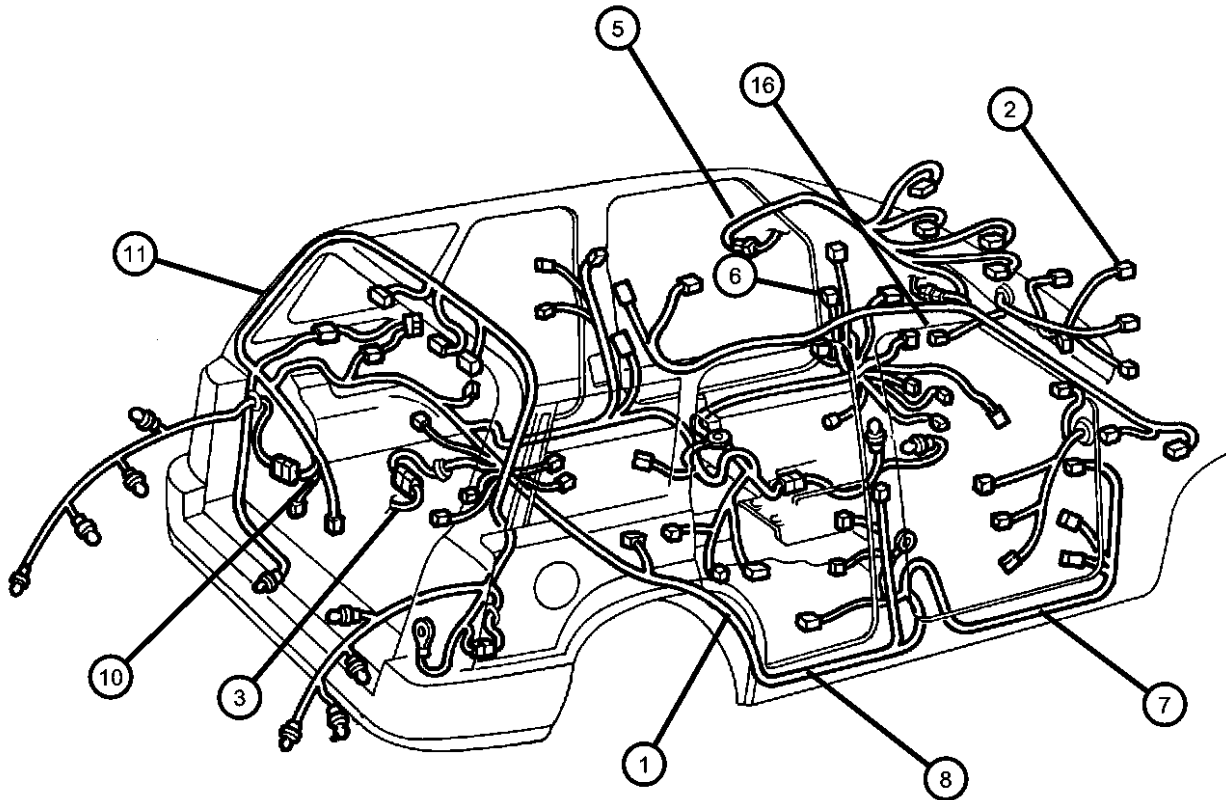

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Wiring, Repair Package  
Figure 8-1610

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Notes:  
[DG4] = All Multi Speed Automatic Transmissions

-1	05013930AD	1							WIRING PACKAGE, Underhood Connector Repair, For Electrical Connector Repair Information visit the World Wide Web at <a href="http://dto.vftis.com/mopar/disclaimer.asp">http://dto.vftis.com/mopar/dis- claimer.asp</a> , Underhood Wiring
-2	05013930AD	1							WIRING PACKAGE, Underhood Connector Repair
-3	05019912AA	1							TOOL, Crimping
-4	05014757AD	1							MANUAL, Connector Repair
-5	05073029AA	1							WIRING KIT, Electric Repair, With Tool
-6	56021384	2							CLIP, Wiring
-7	53008550	1	T				DG4		CLIP
-8	05083221AA	1							WIRING KIT, 22 Way, Female
-9	05018620AA	1							WIRING PACKAGE, Terminal Repair
-10	06016155	3							STRAP, Tie


For Electrical Connector Repair Information visit  
the World Wide Web at

<http://dto.vftis.com/mopar/disclaimer.asp>

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

Air Bag Module and Sensors  
Figure 8-1705


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	05084000AA	2							SENSOR, Air Bag
2									MODULE, Occupant Restraint
	56038862AE	1							
	56038864AD	1							Export
	56038865AC	1							[CGS], Export
	56038961AE	1							[CGS]
-3	56038787AB	1							COVER, Module, Occupant restraint module
4	05084000AA	2							SENSOR, Air Bag
-5	55352877AF	1							MODULE, Occupant Classification

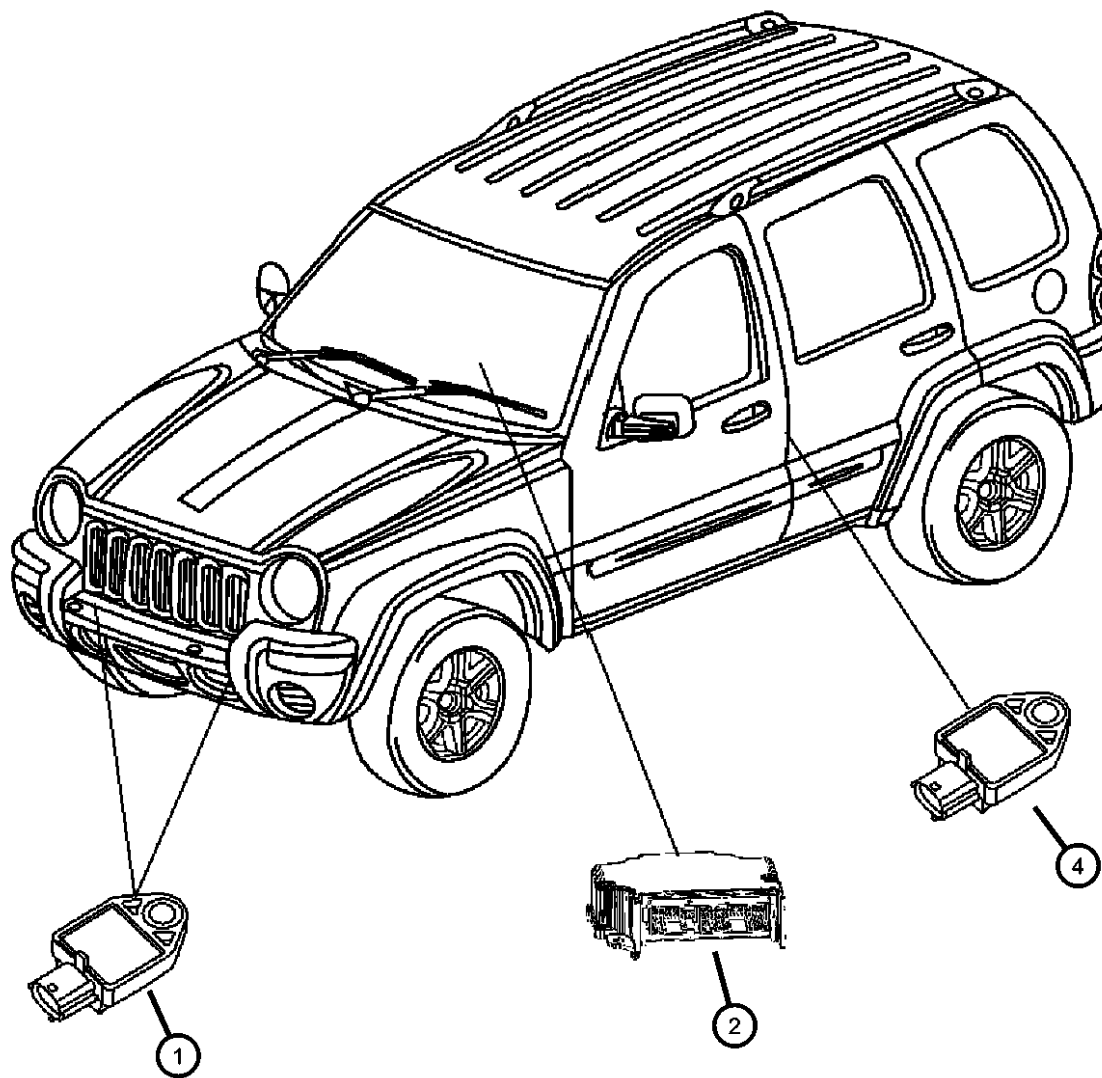

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Air Bags and Clock Spring  
Figure 8-1710

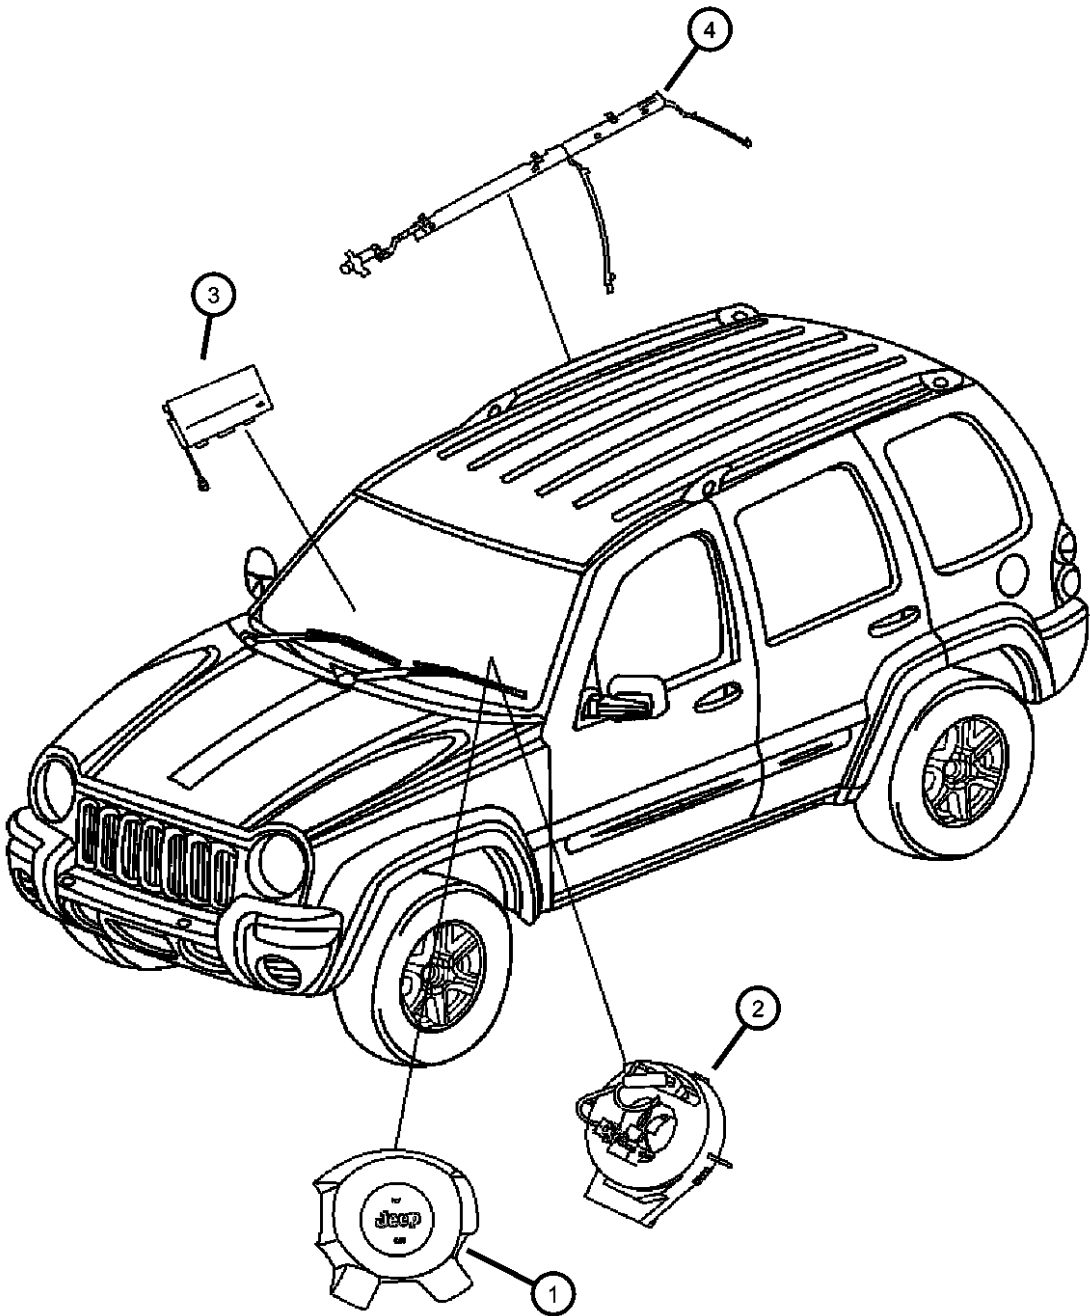


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5JS05DX9AA	1		H, M					AIR BAG, Driver
	5JS061X9AA	1		M, P					[JA2]
	5JS061X9AB	1		H, M, P					[JA2]
2	56010146AF	1							CLOCKSPRING
	56010187AG	1							[RDZ]
3	55315103AA	1							AIR BAG, Passenger
4	55315018AH	1							AIR BAG, Side Curtain
	55315019AH	1							Up to 07/21/03, Right
	55315098AA	1							Up to 07/21/03, Left
	55315099AA	1							After 07/21/03, Right
									After 07/21/03, Left

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Spark Plug - Coil  
Figure 8-1910

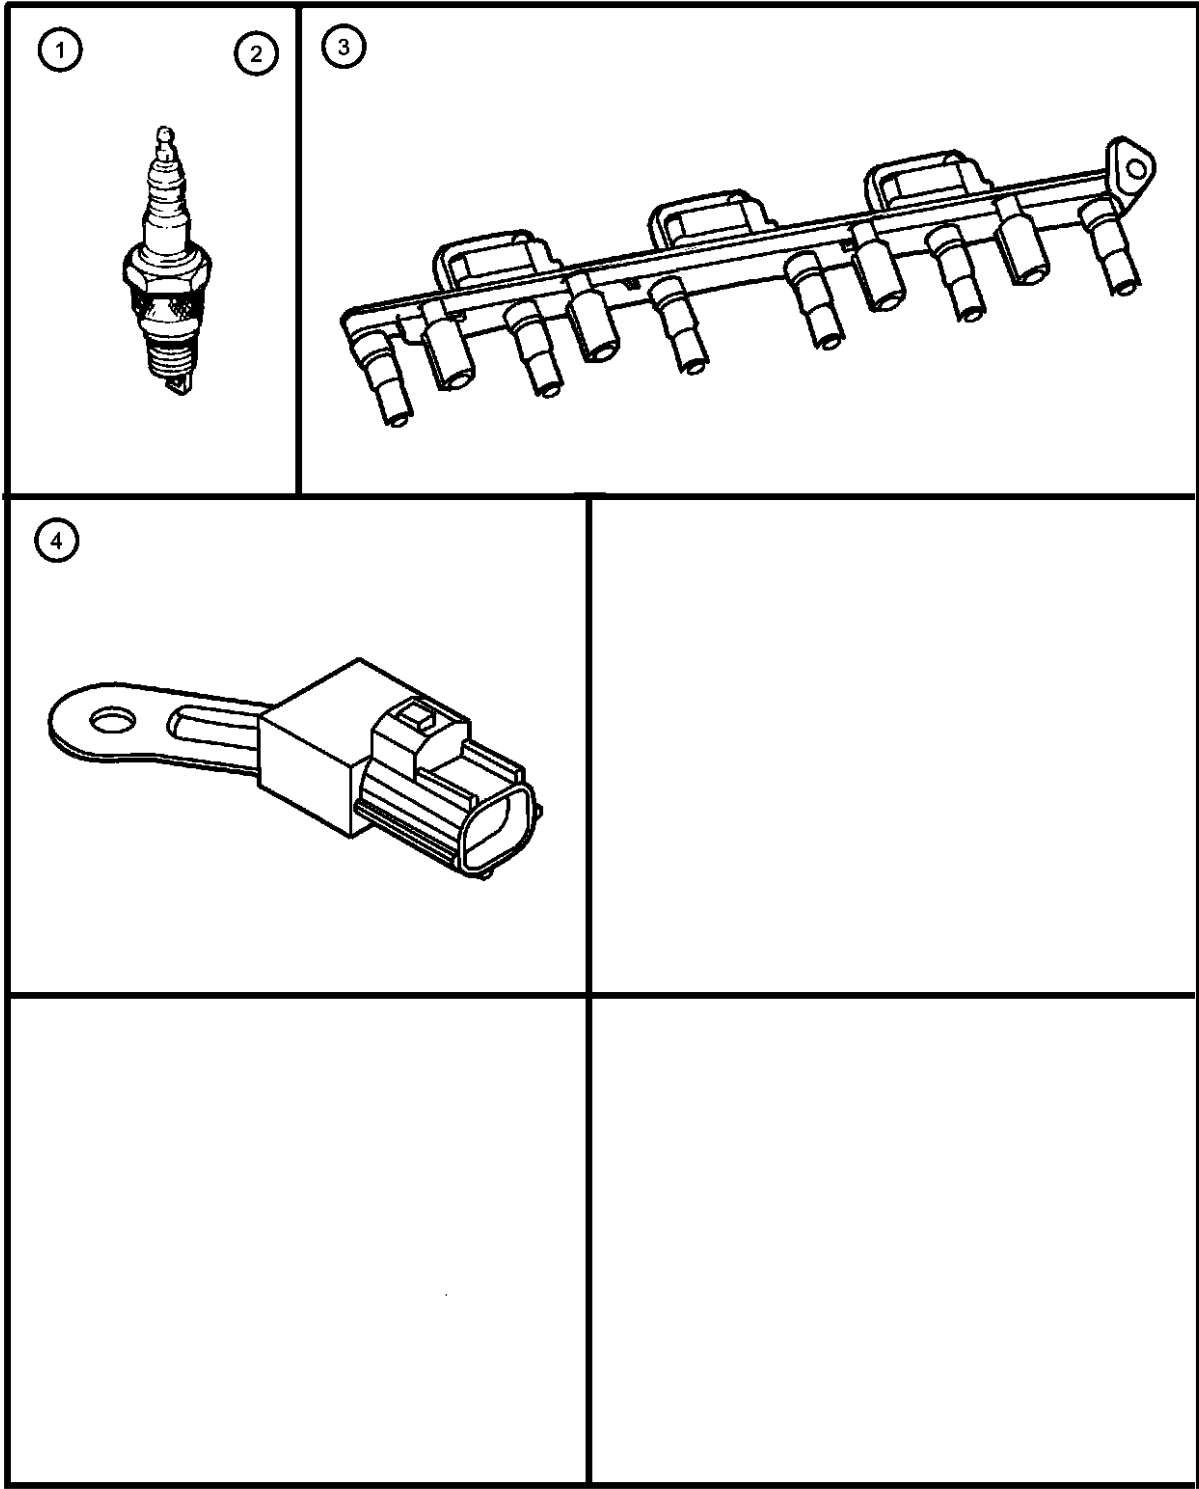

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Notes: [ED0]=2.4L 4 Cylinder Engine [EK0]=3.7L V6 Cylinder Engine									
1									SPARK PLUG
	SPRE14MCC5	4				ED0			Up to 11/27/03
	SPZFR6F11G	6				EK0			
2	05149002AA	4				ED0			SPARK PLUG, RE16MC, After 11/27/03
3									COIL, Ignition
	04609103AB	1				ED0			
	56028138AE	6				EK0			
4	56041915AC	1				ED0, EK0			CAPACITOR, Ignition
-5									CABLE, Ignition
	56041818AC	2				ED0			[#2,3]
	56044075AC	2				ED0			[#1,4]
-6	06502921	4				ED0			SCREW, Ignition Coil Mounting
-7	06101802	6				EK0			NUT, Ignition Coil Mounting
-8	04693243AA	4				ED0			ISOLATOR
-9	05102091AA	1				ED0			CABLE PACKAGE, Ignition
-10	05072382AA	6				EK0			O RING, Coil
-11	05149003AA	4				ED0			SPARK PLUG, LZTR4A-11

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

# Group - 08A

## Instrument Panel and Radios and Consoles

### Group - 08A Instrument Panel and Radios and Consoles



Illustration Title Group-Fig. No.

**Instrument Panel**  
Instrument Panel ..... Fig. 08A - 110


**Instrument Panel Cluster**  
Instrument Panel Cluster ..... Fig. 08A - 210

**Radio, Antenna, and Speakers**  
Radios..... Fig. 08A - 310  
Speakers..... Fig. 08A - 320  
Antenna..... Fig. 08A - 330

**Consoles**  
Console, Overhead ..... Fig. 08A - 410  
Console, Floor..... Fig. 08A - 420

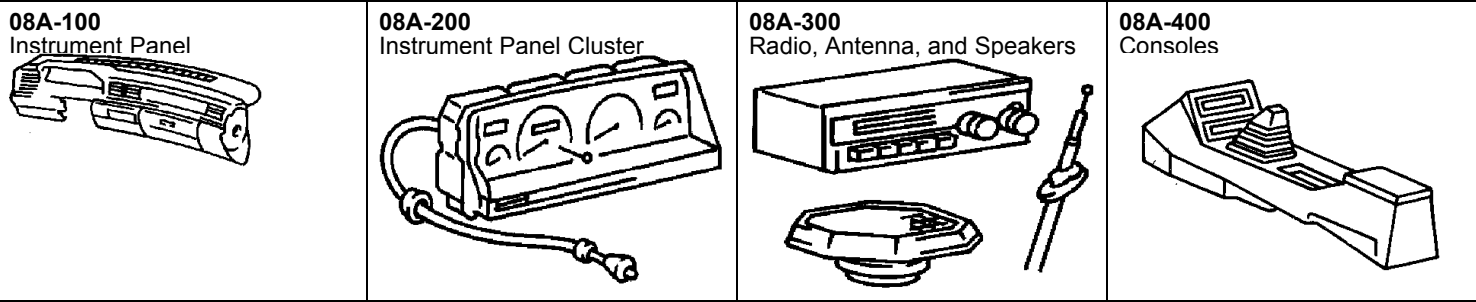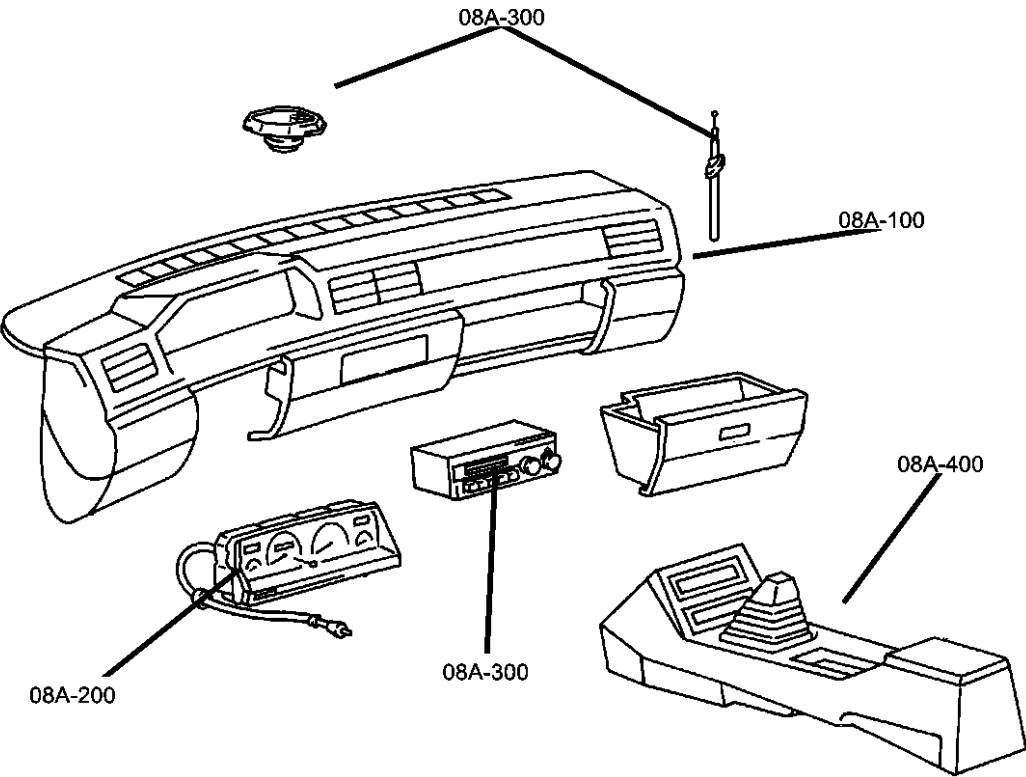

Instrument Panel  
Figure 08A-110

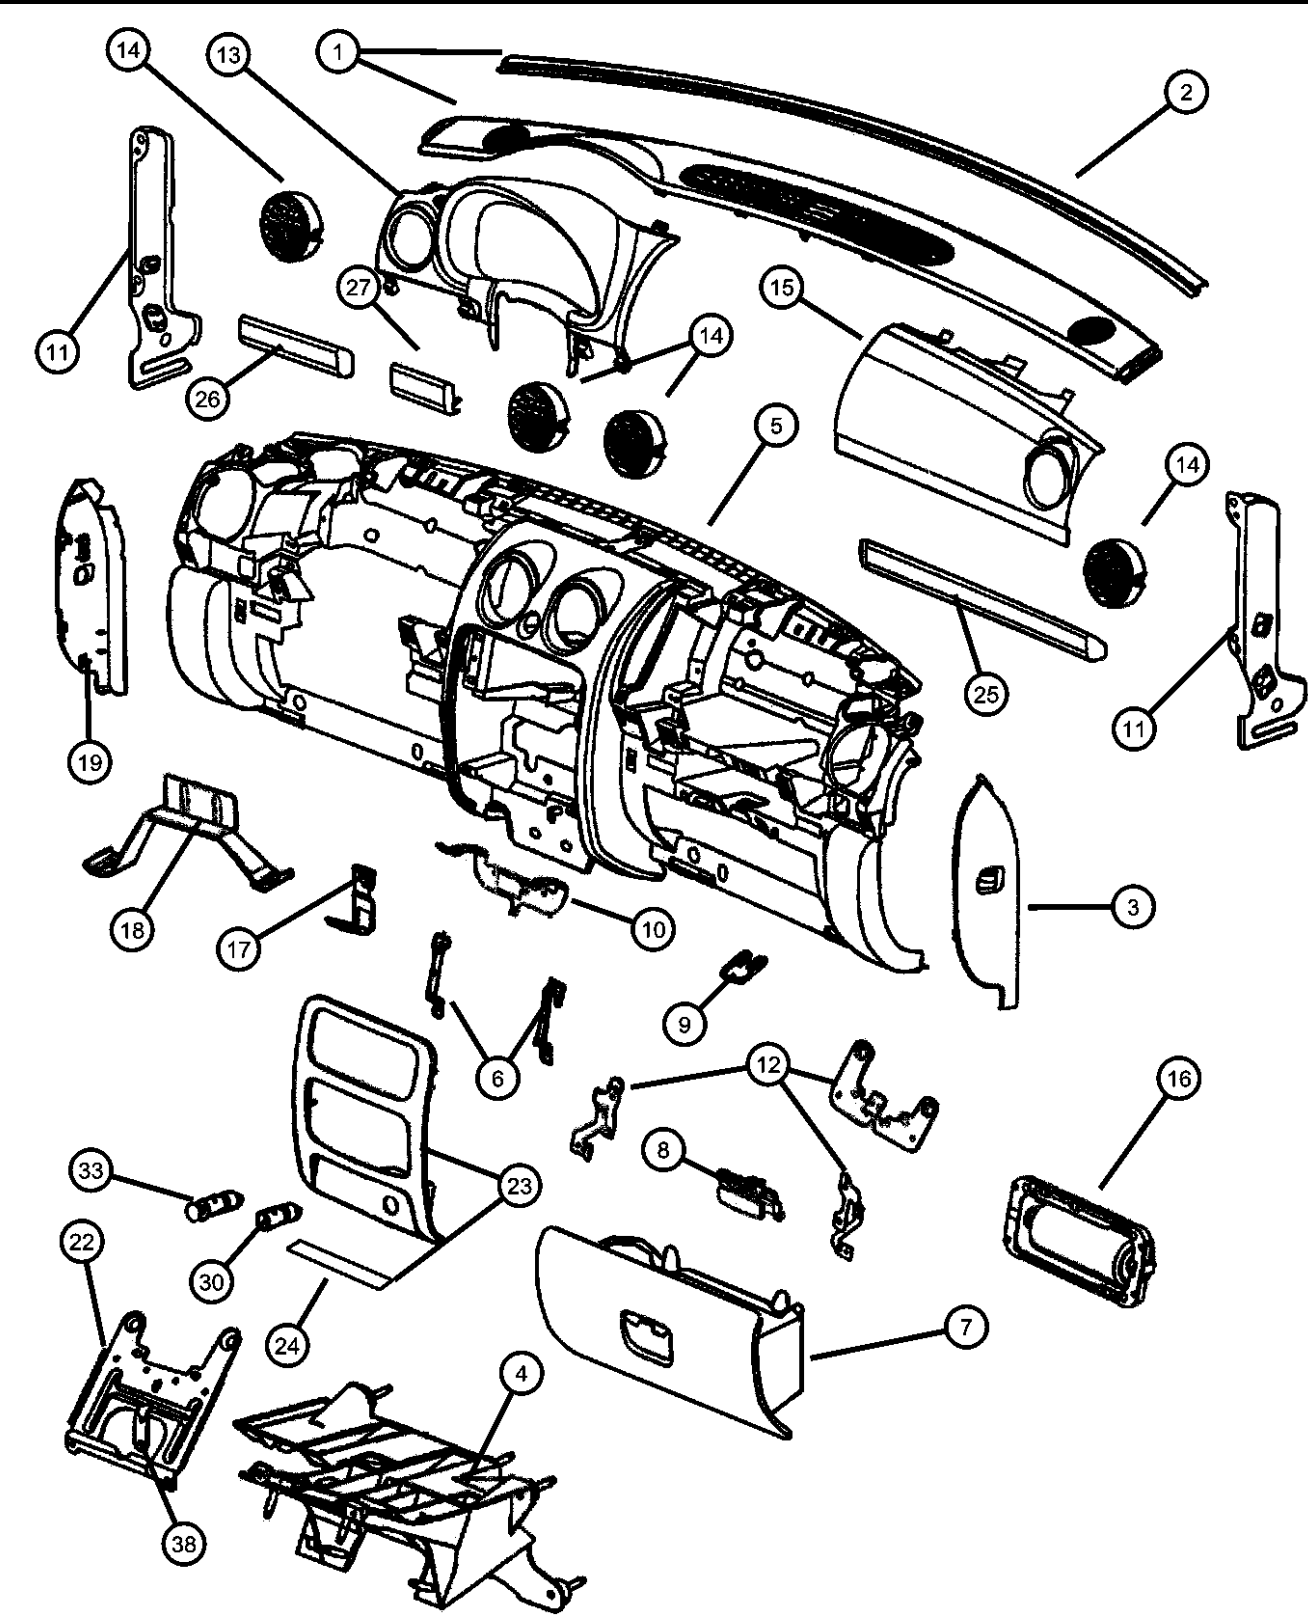


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes: [XCA] = Used with Grab Handle									
1	5GD54WL8AD	1	J, T						COVER, Instrument Panel [L2] (Seal Serviced with Cover Only) [L5] (Seal Serviced with Cover Only) [D2] (Seal Serviced with Cover Only) [DV] (Seal Serviced with Cover Only) [L2] (Seal Serviced with Cover Only) [L5] (Seal Serviced with Cover Only) [DV] (Seal Serviced with Cover Only)
		1	J, T						
	5GD54XD-VAD	1	J, T						
		1	J, T						
	5GJ79WL8AD	1	U						
		1	U						
	5GJ79XDVAD	1	U						SEAL, Instrument Panel, (NOT SERVICED), COVER, Instrument Panel Opening [L2] [L5] [D2] [DV] [L2] [L5] [DV]
2	5GJ79XDVAD	1							
3	5GN55WL8AD	1	J, T						
		1	J, T						
	5GN55XD-VAD	1	J, T						
		1	J, T						
	5GN56WL8AD	1	U						BRACKET, Steering Column Lower Lower PANEL, Instrument [L2] With [XCA] (Radio Bracket, Glovebox & Latch Included) [L5] With [XCA] (Radio Bracket, Glovebox & Latch Included)
		1	U						
	5GN56XD-VAD	1	U						
4	55314987AA	1	J, T						
	55314988AA	1	U						
5	0ZE85WL8AA	1	J, T						
		1	J, T						

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DOHC 16v SMPI	DDD = Transmission - 5-Speed HD	Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v	Turbo Diesel	DG4 = Transmission-Multi-Speed	Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl	Turbo Diesel	DG6 = Transmission-4-Spd.	Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic	5-45RFE
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part



Instrument Panel  
Figure 08A-110

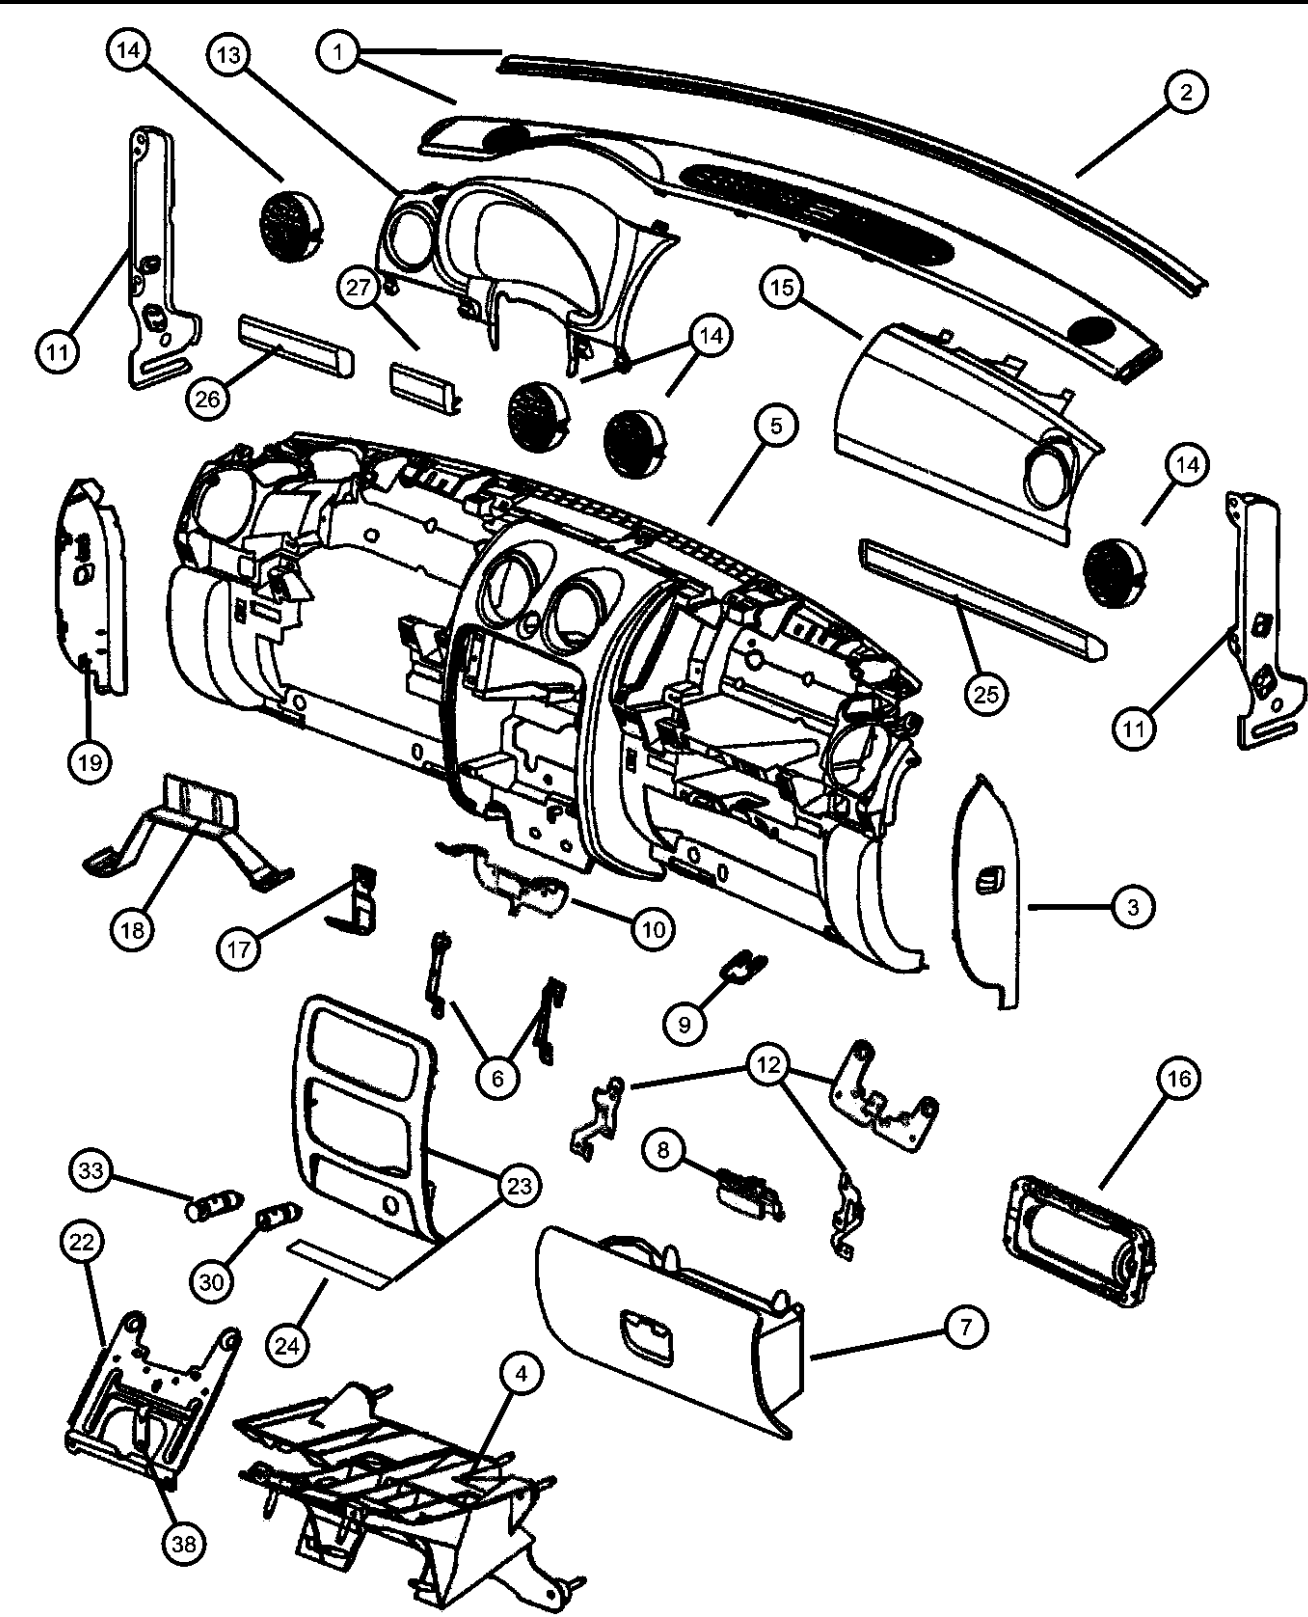


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	0ZE85XDVAA	1	J, T						[D2] With [XCA] (Radio Bracket, Glovebox & Latch Included)
		1	J, T						[DV] With [XCA] (Radio Bracket, Glovebox & Latch Included)
	0ZE87WL8AA	1	U						[L2] (Radio Bracket, Glovebox & Latch Included)
		1	U						[L5] (Radio Bracket, Glovebox & Latch Included)
	0ZE87XDVAA	1	U						[DV] (Radio Bracket, Glovebox & Latch Included)
	5JM34WL8AC	1	J, T						[L2]
		1	J, T						[L5]
	5JM34XDVAC	1	J, T						[D2]
		1	J, T						[DV]
	5JX85WL8AA	1	J, T						[L2] Without [XCA] (Radio Bracket, Glovebox & Latch Included)
		1	J, T						[L5] Without [XCA] (Radio Bracket, Glovebox & Latch Included)
	5JX85XDVAA	1	J, T						[D2] Without [XCA] (Radio Bracket, Glovebox & Latch Included)
		1	J, T						[DV] Without [XCA] (Radio Bracket, Glovebox & Latch Included)
6									BRACKET, Radio
	05072596AA	1	U						
		1	J, T						
7									GLOVE BOX, Instrument Panel
	0ZE71WL8AA	1	U						[L2] (Glovebox Latch Included)
		1	U						[L5] (Glovebox Latch Included)
		1	J, T						[L2] (Glovebox Latch Included)
		1	J, T						[L5] (Glovebox Latch Included)
	0ZE71XDVAA	1	J, T						[D2] (Glovebox Latch Included)
		1	J, T						[DV] (Glovebox Latch Included)

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16v	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
			EDO = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


Instrument Panel  
Figure 08A-110

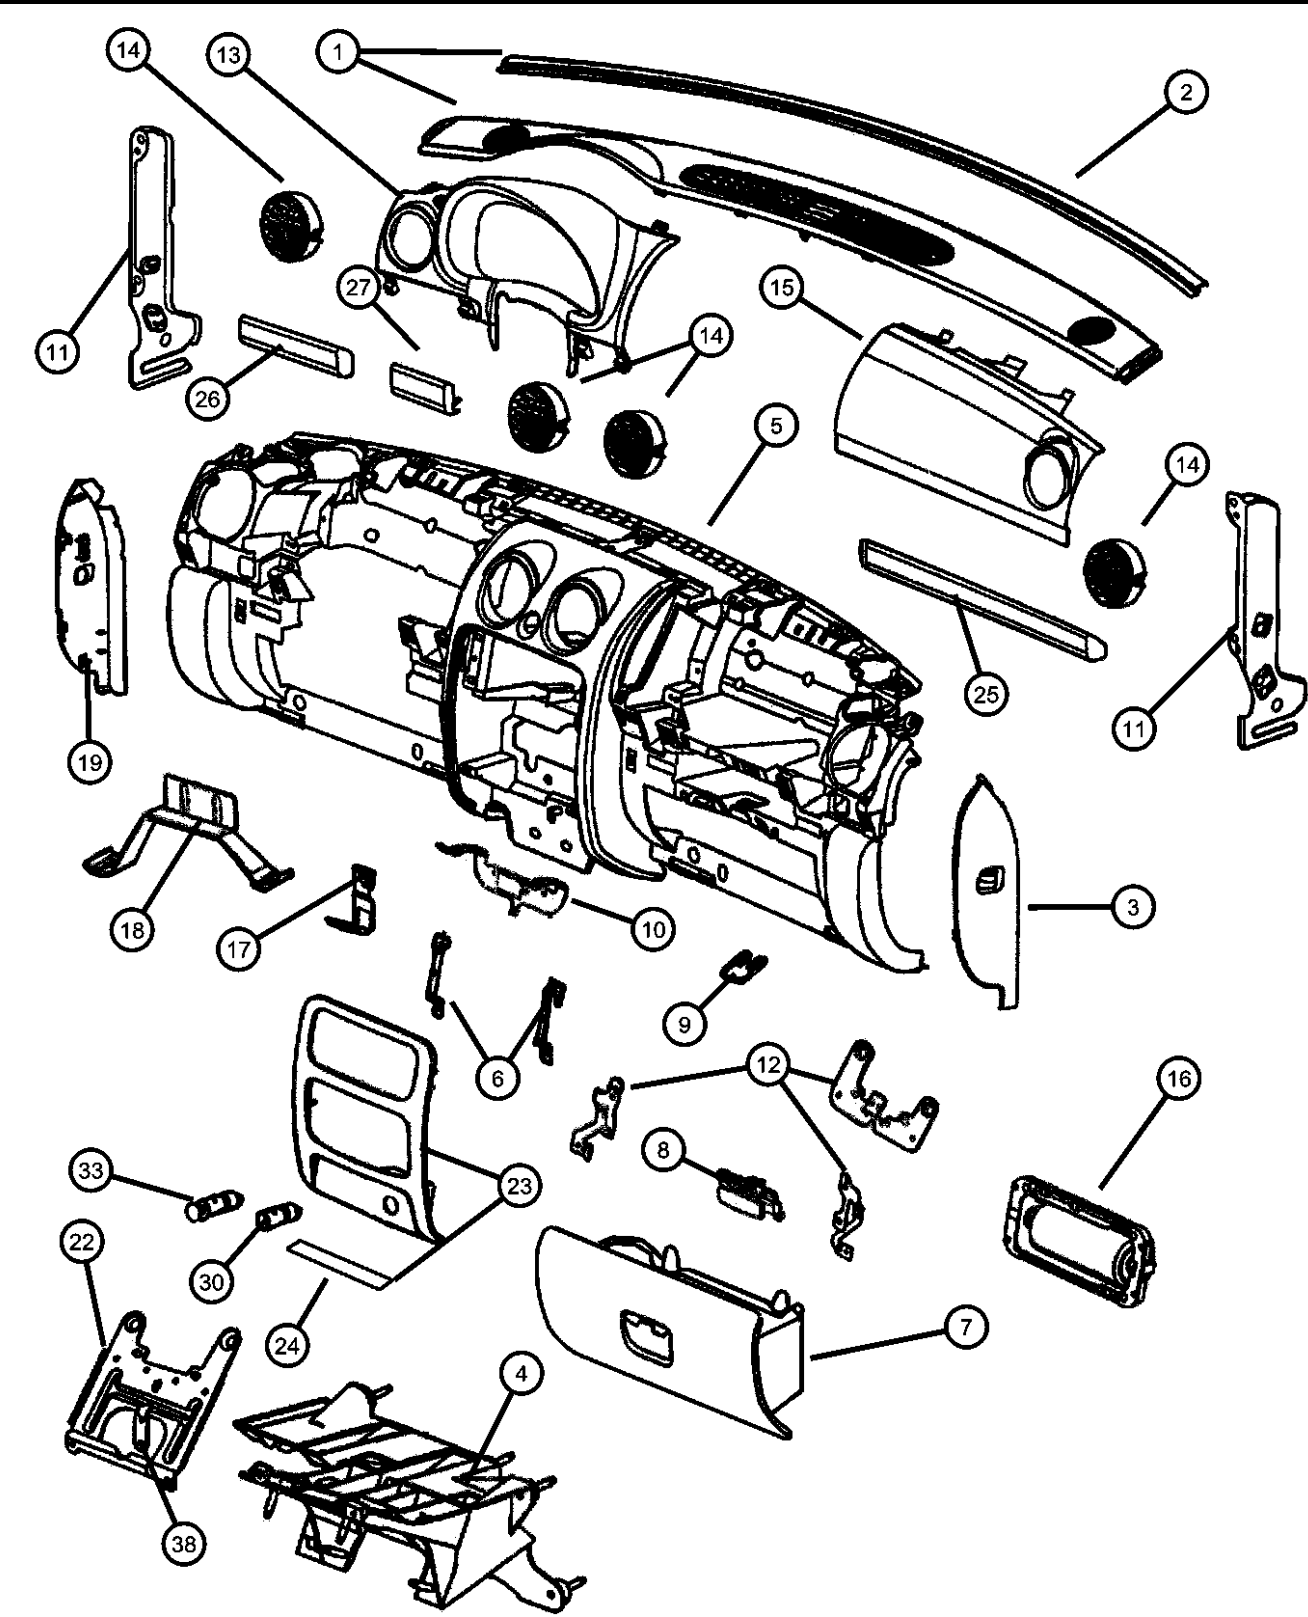

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
8	0WQ54WL8AA	1	U						[DV] (Glovebox Latch Included)
									LATCH, Glovebox Door
		1	J, T						[L2]
		1	J, T						[L5]
	0WQ54XD-VAA	1	U						[L2]
		1	U						[L5]
		1	J, T						[D2]
		1	J, T						[DV]
9	05072605AA	1	U						[DV]
		1	U						STRIKER, Glove Box Door Latch
10	05072606AA	1	U						
		1	J, T						BRACKET, Audio Equipment
11	05073523AA	1	U						
		1	J, T						BRACKET, Instrument Panel
		1	J, T						Instrument Panel Right End
		1	U						Instrument Panel End
	56052063AB	1	J, T						Left
		1	U						Left
		1	U						Bracket Guide Alignment, Right
		1	J, T						Bracket Guide Alignment, Right
12	56052122AA	1	U						Bracket Guide Alignment, Left
		1	J, T						Bracket Guide Alignment, Left
	56052123AA	1	U						Bracket Guide Alignment, Left
		1	J, T						Bracket Guide Alignment, Left
	56052057AB	1	J, T						BRACKET, Air Bag
		1	U						Passenger Door Mounting
		1	U						Passenger, Center
		1	J, T						Inboard, Left
	56052060AB	1	U						Inboard, Right

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

Instrument Panel  
Figure 08A-110

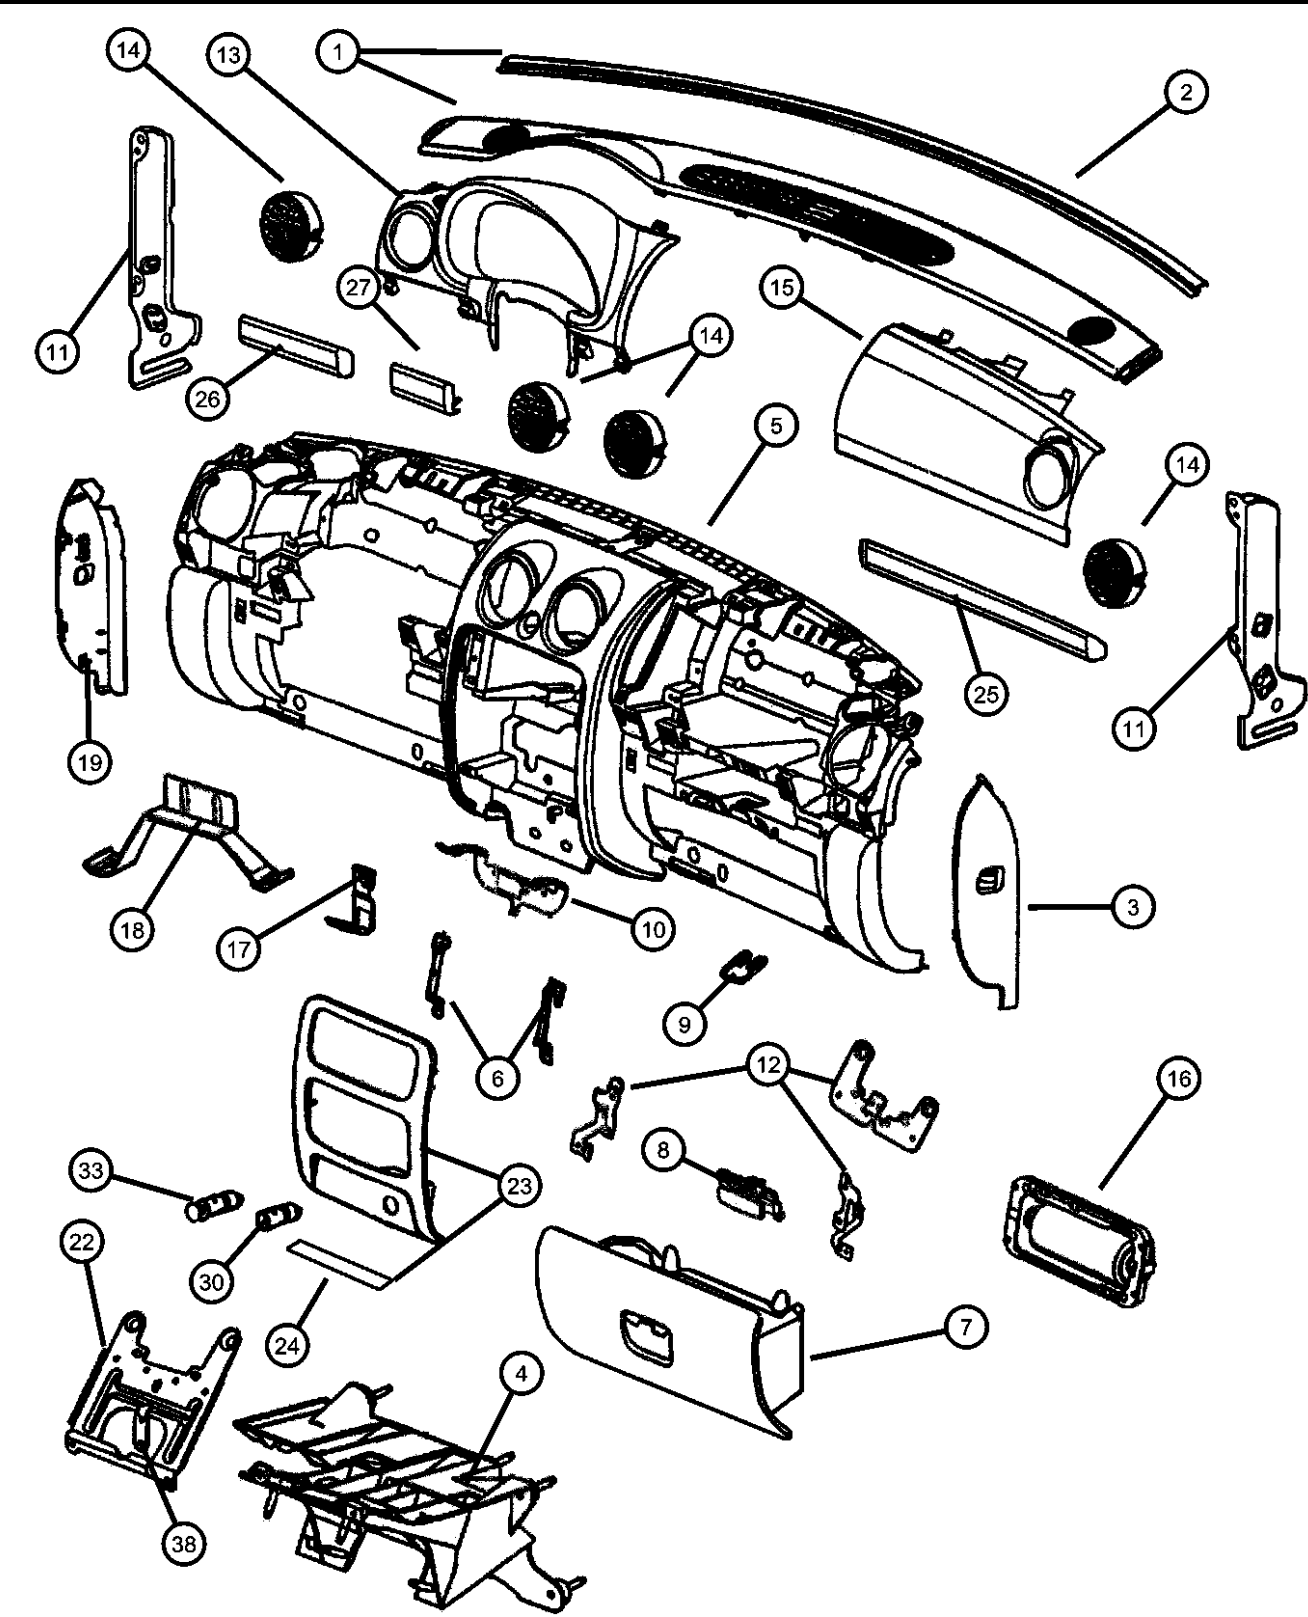


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
13	56052061AB	1	J, T						Outboard, Right
	56052062AB	1	U						Outboard, Left
	0WD13WL8AA	1	U						BEZEL, Cluster
		1	U						[L2]
	0WD13XD-VAA	1	U						[L5]
	5JA36WL8AB	1	J, T						[DV]
		1	J, T						[L2]
	5JA36XDVAB	1	J, T						[L5]
		1	J, T						[D2]
		1	J, T						[DV]
14	56052065AA	4	U						OUTLET, Air Conditioning & Heater
		4	J, T						
15	0WD14WL8AB	1	U						DOOR, Passenger Air Bag, Air
		1	U						Outlet Included (Heat Staked)
	0WD14XDVAB	1	U						[L2]
	0ZE70WL8AA	1	J, T						[L5]
		1	J, T						[DV]
	0ZE70XDVAA	1	J, T						[L2] With [XCA]
		1	J, T						[L5] With [XCA]
		1	J, T						[D2] With [XCA]
		1	J, T						[DV] With [XCA]
	5HZ98WL8AB	1	J, T						[L2] Without [XCA]
16		1	J, T						[L5] Without [XCA]
	5HZ98XDVAB	1	J, T						[D2] Without [XCA]
		1	J, T						[DV] Without [XCA]
	55315103AA	1							AIR BAG, Passenger
	55037453AC	1							BRACKET, Instrument Panel, Hush
									Panel Bracket
	55037453AC	1							BRACKET, Instrument Panel,
									Instrument Panel to Floor

LIBERTY (KJ)									
SERIES	LINE			BODY			ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)			74 = 4 Door (104.3 WB)			ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)						DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)						EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
							ENJ = Engine -2.5L 4 Cyl 16V	Manual	
							Turbo Diesel	DG4 = Transmission-Multi-Speed	
							ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
							Turbo Diesel	DG6 = Transmission-4-Spd.	
							ENO = 4Cyl Turbo Diesel	Automatic, 42RLE	
							EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
							ED0 = All 2.4L	5-45RFE	
								DBB = All Manual Transmissions	
								DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part



Instrument Panel  
Figure 08A-110

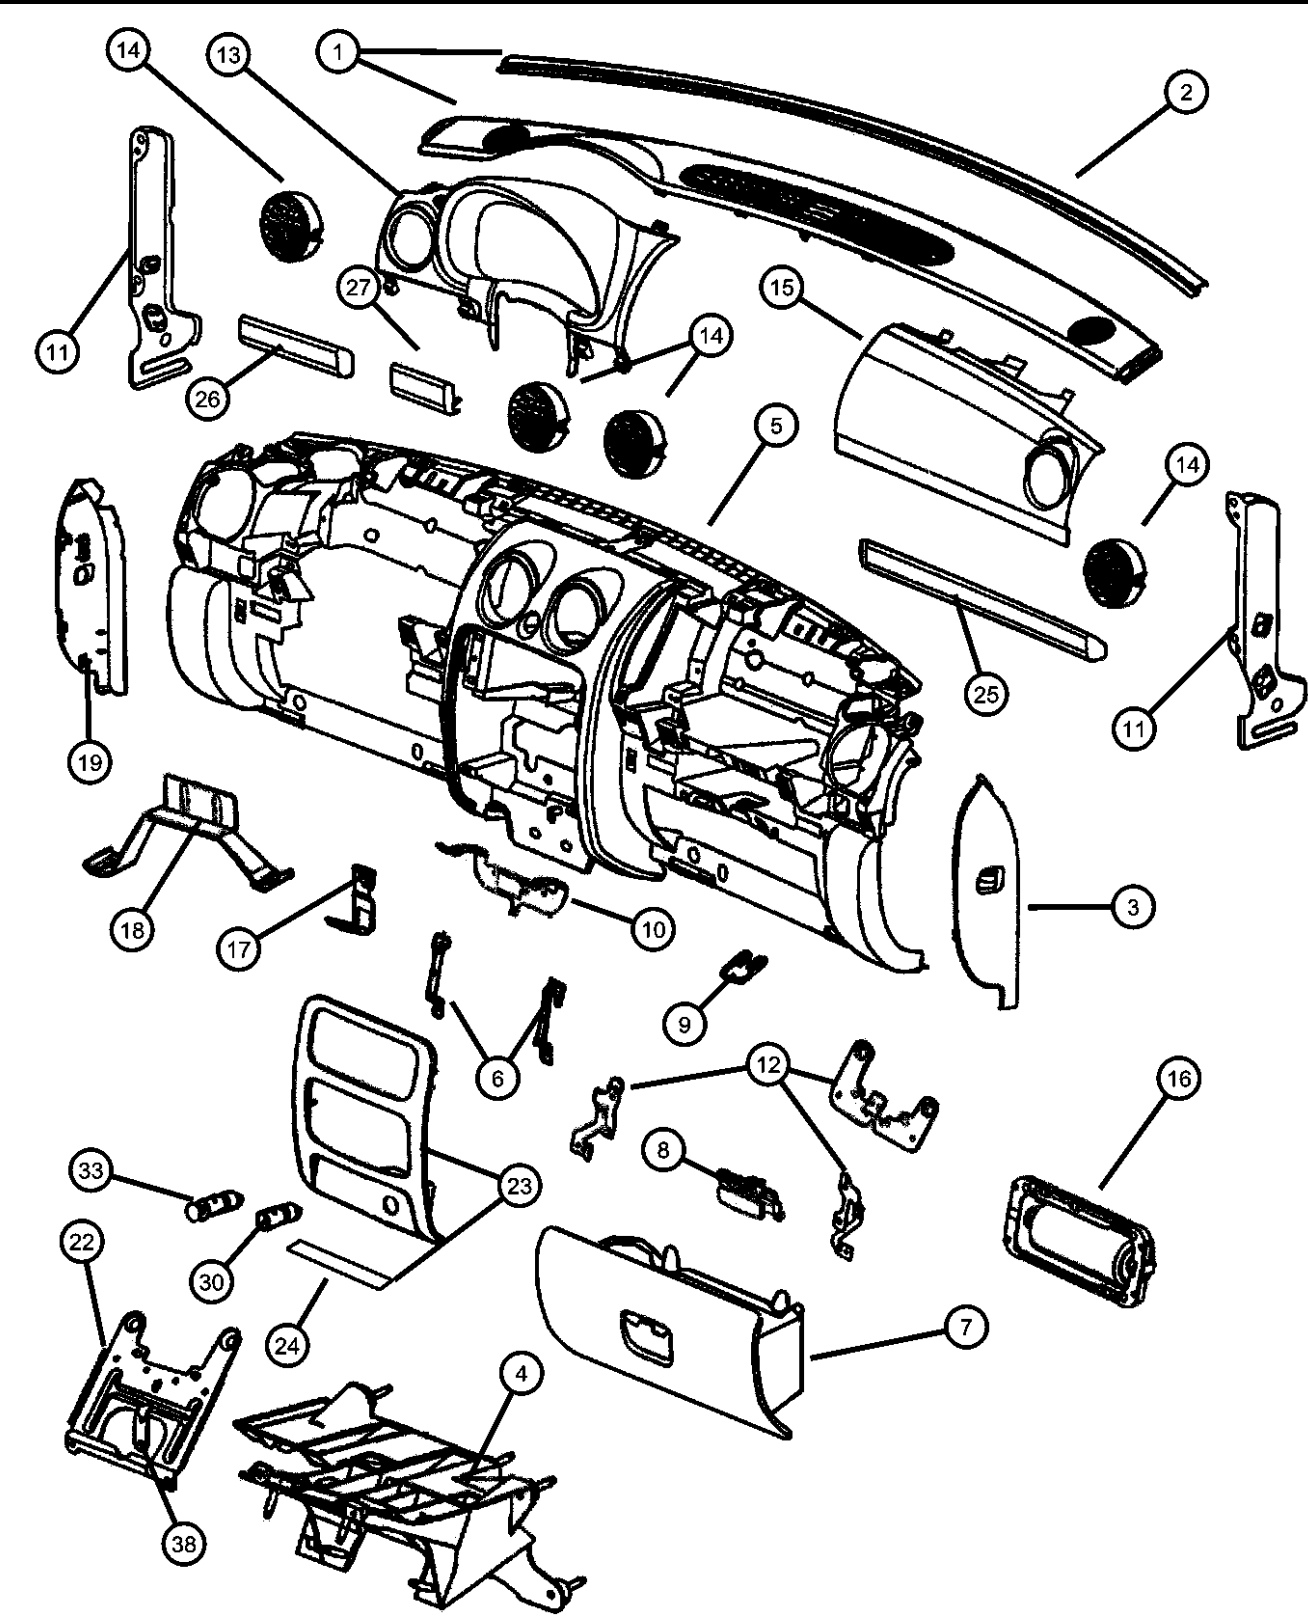


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	U	H					[L5] Black with Black Cubby Bin & Mat (Sport)
		1	J, T						[L2] Black with Black Cubby Bin & Mat (Renegade)
		1	U						[L2] Black with Black Cubby Bin & Mat (Renegade)
24	05093855AA	1	U						PAD, Instrument Panel
		1	J, T						Cubby Bin (Black Rubber Mat)
25	0WB001DVAA	1	U	H					BEZEL, Instrument Panel
		1	U	P					[DV] Passenger Side, Above Glovebox (Sport)
		1	U						[DV] Passenger Side, Above Glovebox (Limited)
		1	U						[DV] Passenger Side, Above Glovebox (Renegade)
	0WB001L8AA	1	U	H					[L5] Passenger Side, Above Glovebox (Sport)
		1	U	P					[L2] Passenger Side, Above Glovebox (Limited)
		1	U	P					[L5] Passenger Side, Above Glovebox (Limited)
		1	U						[L2] Passenger Side, Above Glovebox (Renegade)
		1	U						[L5] Passenger Side, Above Glovebox (Renegade)
	5JA401DVAA	1	J, T	H					[DV] Passenger Side, Above Glovebox (Sport)
		1	J, T	P					[DV] Passenger Side, Above Glovebox (Limited)
		1	J, T						[DV] Passenger Side, Above Glovebox (Renegade)
	5JA401L8AA	1	J, T	H					[L5] Passenger Side, Above Glovebox (Sport)
		1	J, T	P					[L2] Passenger Side, Above Glovebox (Limited)
		1	J, T	P					[L5] Passenger Side, Above Glovebox (Limited)
		1	J, T						[L2] Passenger Side, Above Glovebox (Renegade)

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Instrument Panel  
Figure 08A-110

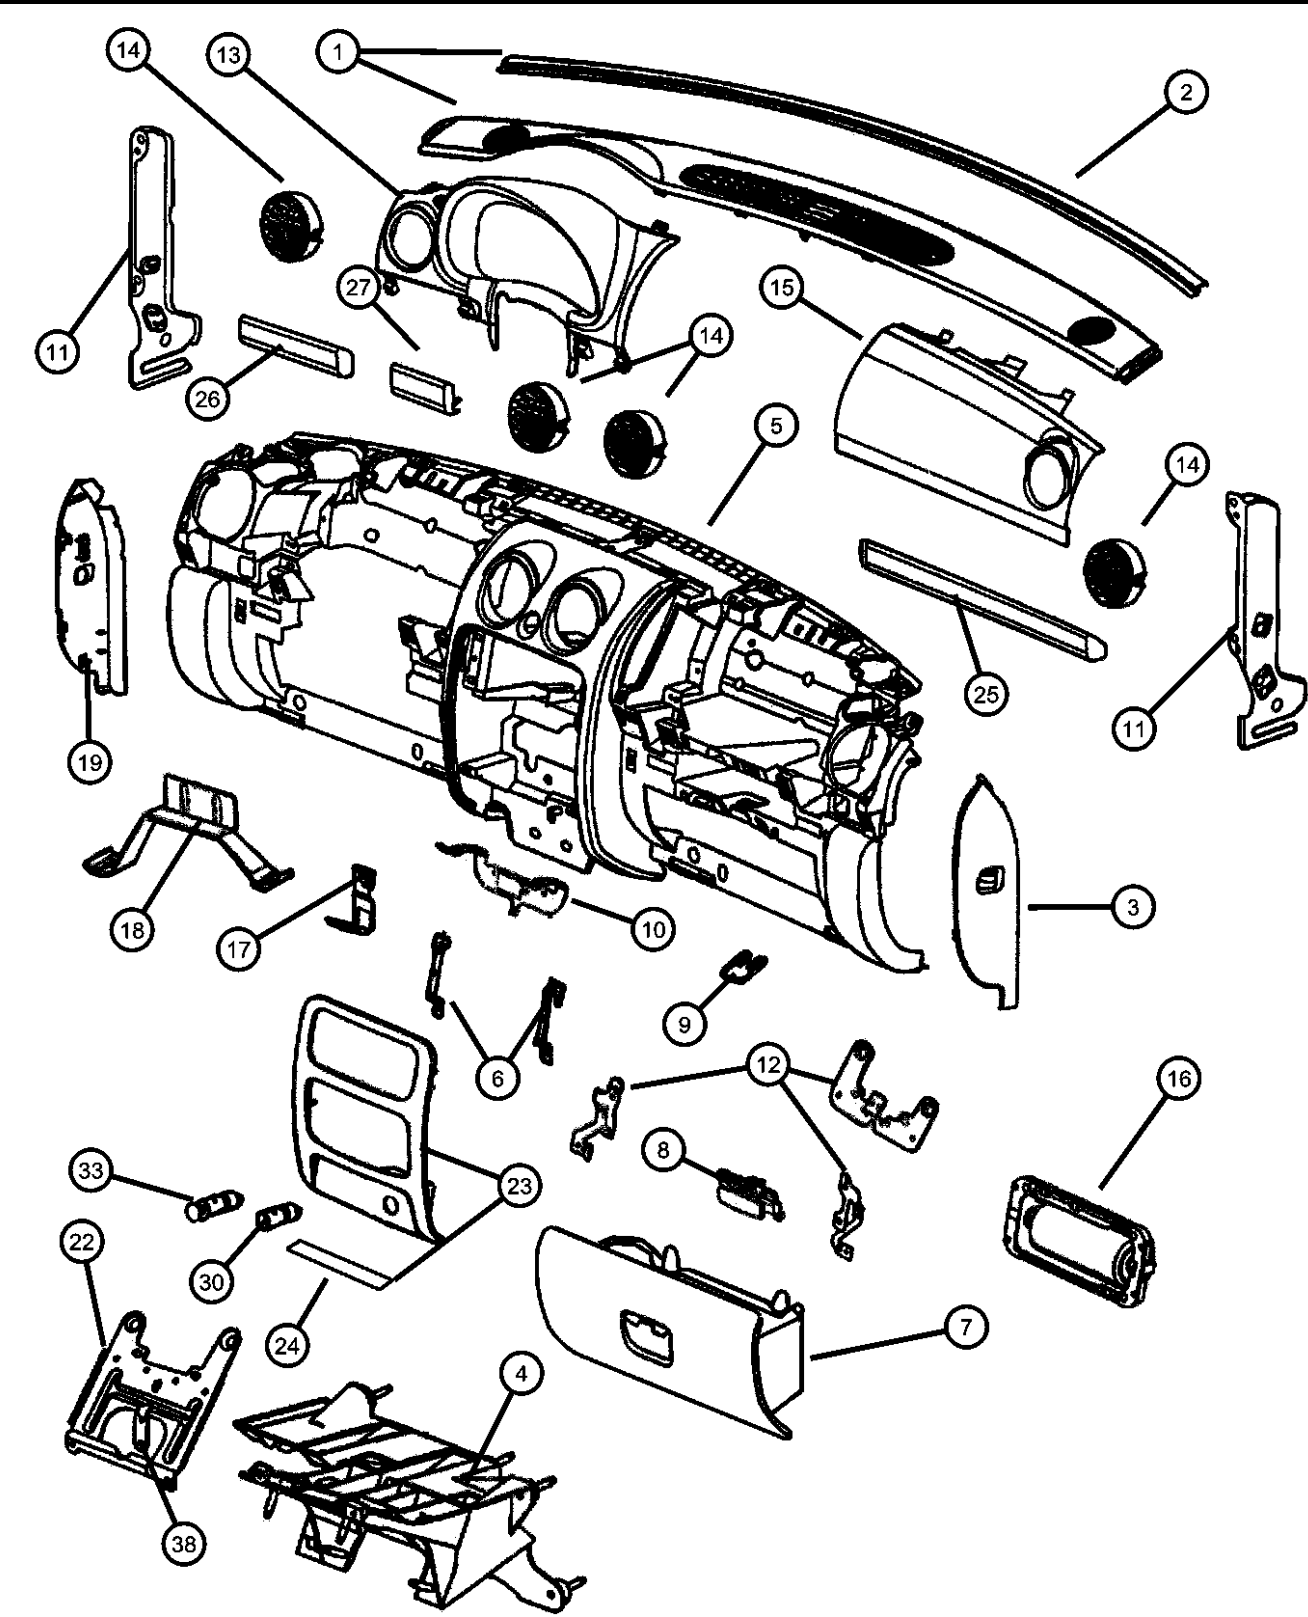


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
26		1	J, T						[L5] Passenger Side, Above Glovebox (Renegade) BEZEL, Instrument Panel
	0WA981DVAA	1	U	H					[DV] Outboard Side of Steering Wheel, with or without Headlamp Leveling (Sport)
		1	U	P					[DV] Outboard Side of Steering Wheel, with or without Headlamp Leveling (Limited)
	0WA981L8AA	1	U	H					[L5] Outboard Side of Steering Wheel, with or without Headlamp Leveling (Sport)
		1	U	P					[L2] Outboard Side of Steering Wheel, with or without Headlamp Leveling (Limited)
	0XW301DVAA	1	J, T						[DV] Outboard Side of Steering Wheel, with Headlamp Leveling
	0XW301L8AA	1	J, T						[L2] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	J, T						[L5] Outboard Side of Steering Wheel, with Headlamp Leveling
	0ZE791DVAA	1	J, T	H					[DV] Outboard Side of Steering Wheel, without Headlamp Leveling (Sport)
		1	J, T	P					[D2] Outboard Side of Steering Wheel, without Headlamp Leveling (Limited)
		1	J, T	P					[DV] Outboard Side of Steering Wheel, without Headlamp Leveling (Limited)
	0ZE791L8AA	1	J, T	H					[L5] Outboard Side of Steering Wheel, without Headlamp Leveling (Sport)

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
P = Limited	J = LHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
M = Renegade	T = LHD (2WD)			ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				ENO = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EKO = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Instrument Panel  
Figure 08A-110

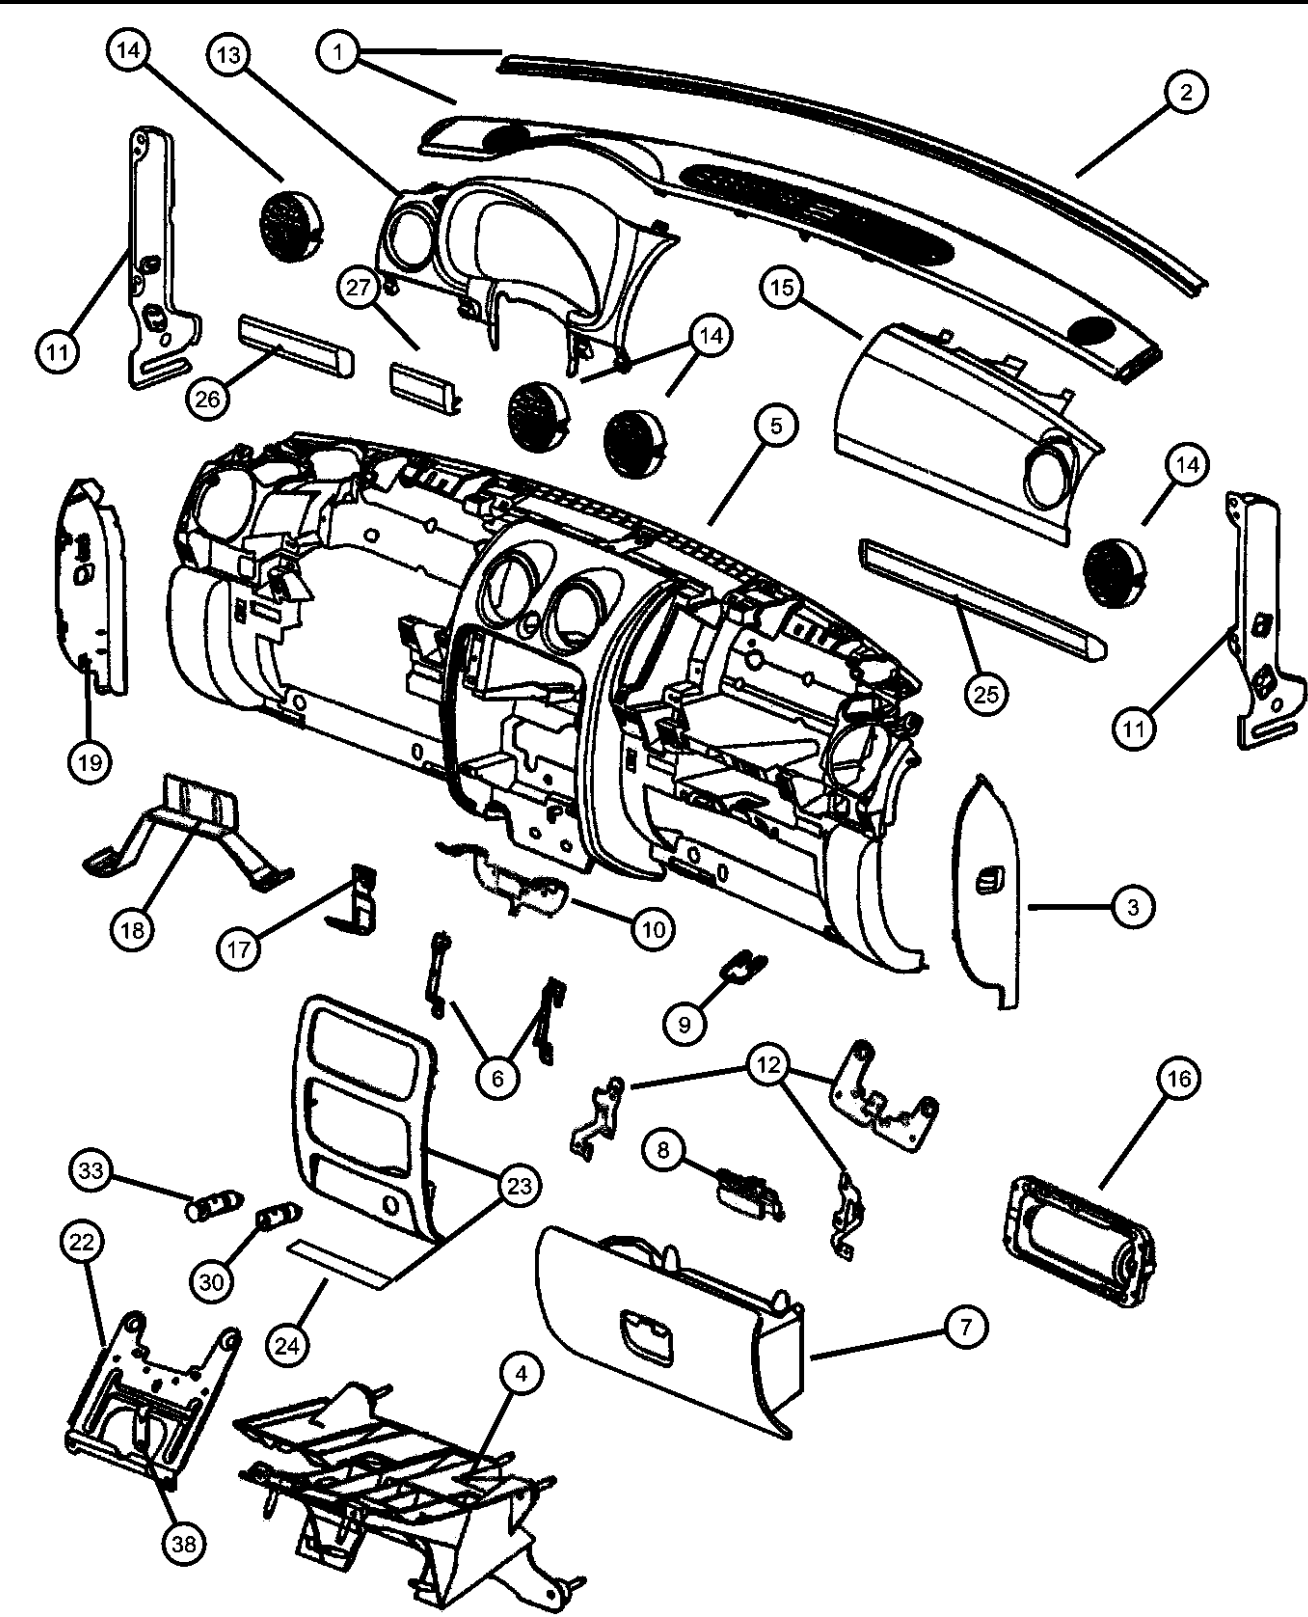


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	J, T						[D2] Outboard Side of Steering Wheel, without Headlamp Leveling (Renegade)
	0ZE801L8AA	1	J, T						[L5] Outboard Side of Steering Wheel, without Headlamp Leveling (Renegade)
		1	J, T						[L2] Outboard Side of Steering Wheel, without Headlamp Leveling (Renegade)
	0ZE831DVAA	1	U						[DV] Outboard Side of Steering Wheel, with Headlamp Leveling
	0ZE831L8AA	1	U						[L2] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	U						[L5] Outboard Side of Steering Wheel, with Headlamp Leveling
27									BEZEL, Instrument Panel
	0WA991DVAA	1	U	H					[DV] Inboard Side of Steering Wheel (Sport)
		1	U	P					[DV] Inboard Side of Steering Wheel (Limited)
		1	U						[DV] Inboard Side of Steering Wheel (Renegade)
	0WA991L8AA	1	U	H					[L5] Inboard Side of Steering Wheel (Sport)
		1	U	P					[L2] Inboard Side of Steering Wheel (Limited)
		1	U	P					[L5] Inboard Side of Steering Wheel (Limited)
		1	U						[L2] Inboard Side of Steering Wheel (Renegade)
		1	U						[L5] Inboard Side of Steering Wheel (Renegade)
	0WB011DVAA	1	U	H					[DV] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	U	P					[DV] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	U						[DV] Outboard Side of Steering Wheel, with Headlamp Leveling
	0WB011L8AA	1	U	H					[L5] Outboard Side of Steering Wheel, with Headlamp Leveling

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Instrument Panel  
Figure 08A-110

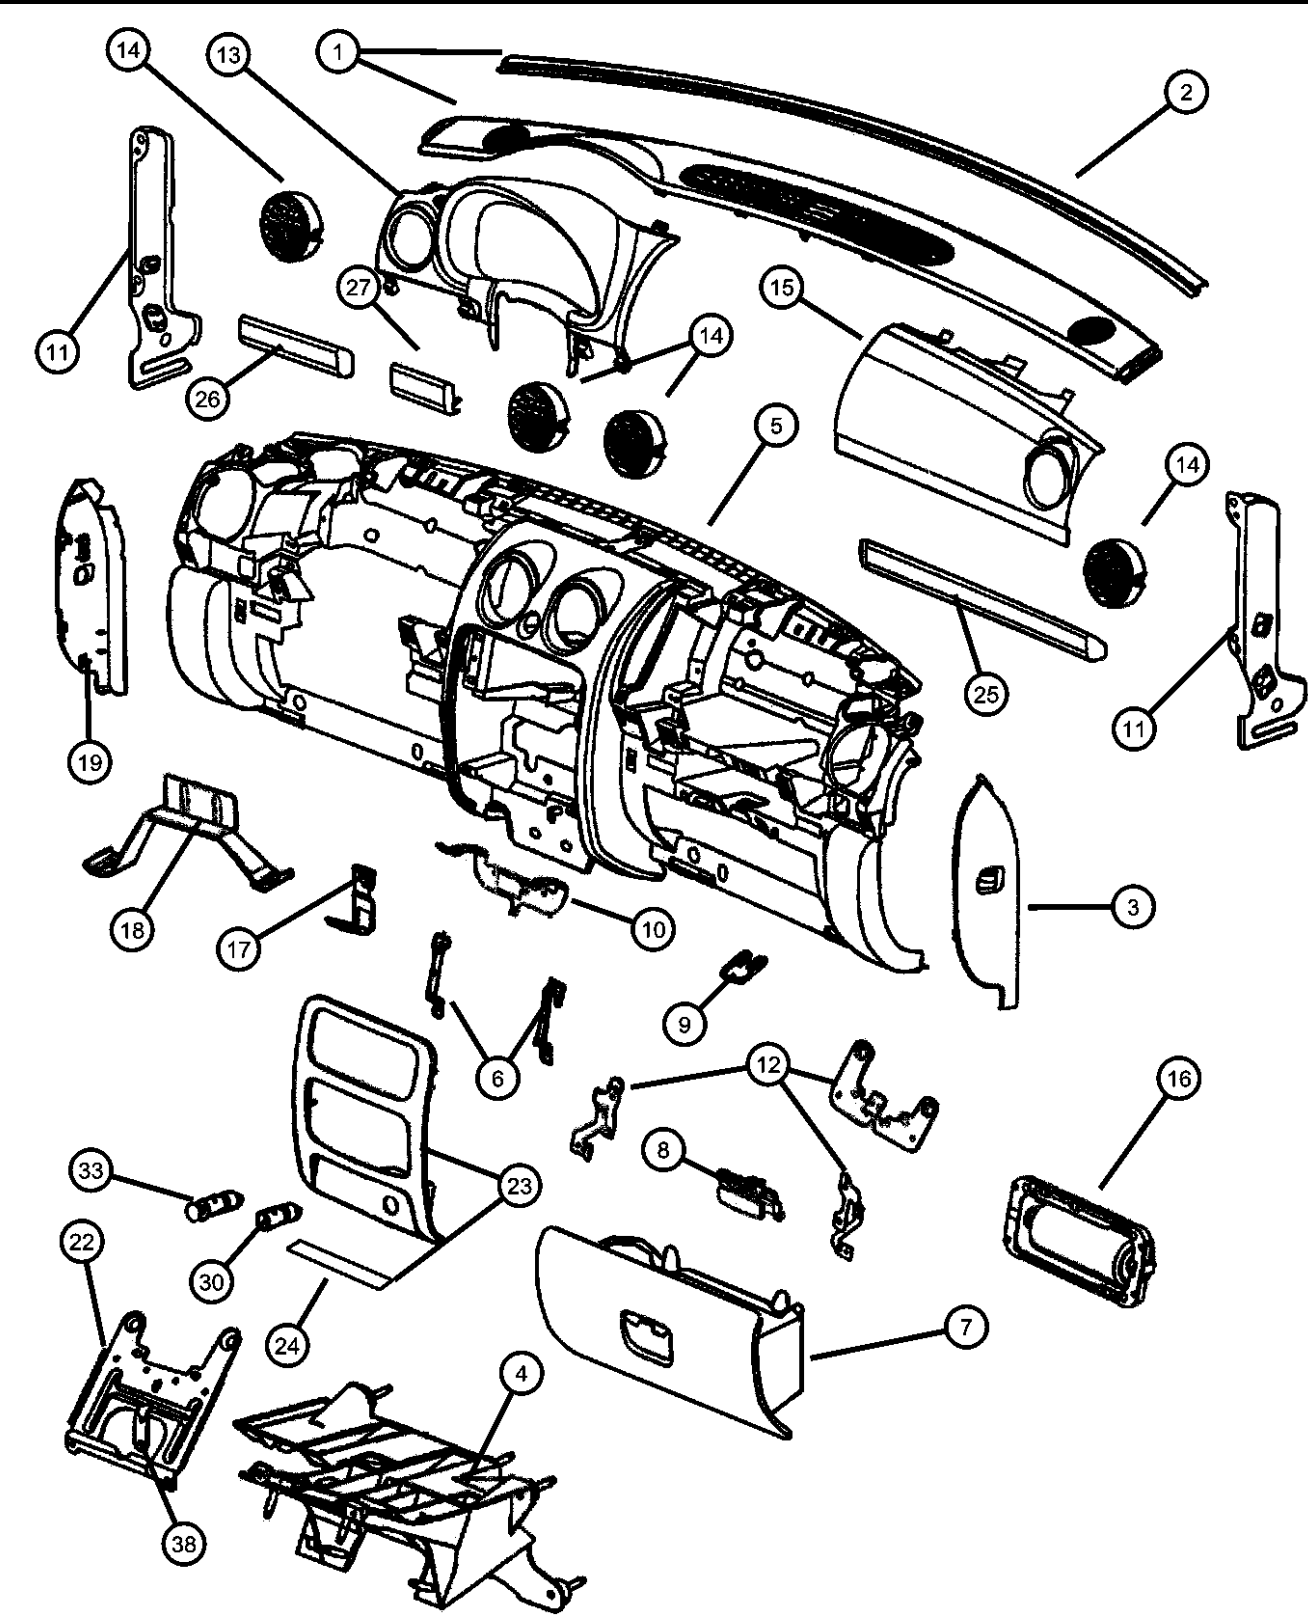


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	U	P					[L2] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	U	P					[L5] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	U						[L2] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	U						[L5] Outboard Side of Steering Wheel, with Headlamp Leveling
	0WB051DVAA	1	J, T	H					[DV] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	J, T	P					[DV] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	J, T						[DV] Outboard Side of Steering Wheel, with Headlamp Leveling
	0WB051L8AA	1	J, T	H					[L5] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	J, T	P					[L2] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	J, T	P					[L5] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	J, T						[L2] Outboard Side of Steering Wheel, with Headlamp Leveling
		1	J, T						[L5] Outboard Side of Steering Wheel, with Headlamp Leveling
	0ZE781DVAA	1	J, T	H					[DV] Inboard Side of Steering Wheel (Sport)
		1	J, T	P					[D2] Inboard Side of Steering Wheel (Limited)
		1	J, T	P					[DV] Inboard Side of Steering Wheel (Limited)
		1	J, T						[DV] Inboard Side of Steering Wheel (Renegade)
		1	J, T						[D2] Inboard Side of Steering Wheel (Renegade)
	0ZE781L8AA	1	J, T	H					[L5] Inboard Side of Steering Wheel (Sport)
		1	J, T	P					[L2] Inboard Side of Steering Wheel (Limited)
		1	J, T	P					[L5] Inboard Side of Steering Wheel (Limited)
		1	J, T						[L5] Inboard Side of Steering Wheel (Renegade)

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				EDO = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part



Instrument Panel  
Figure 08A-110

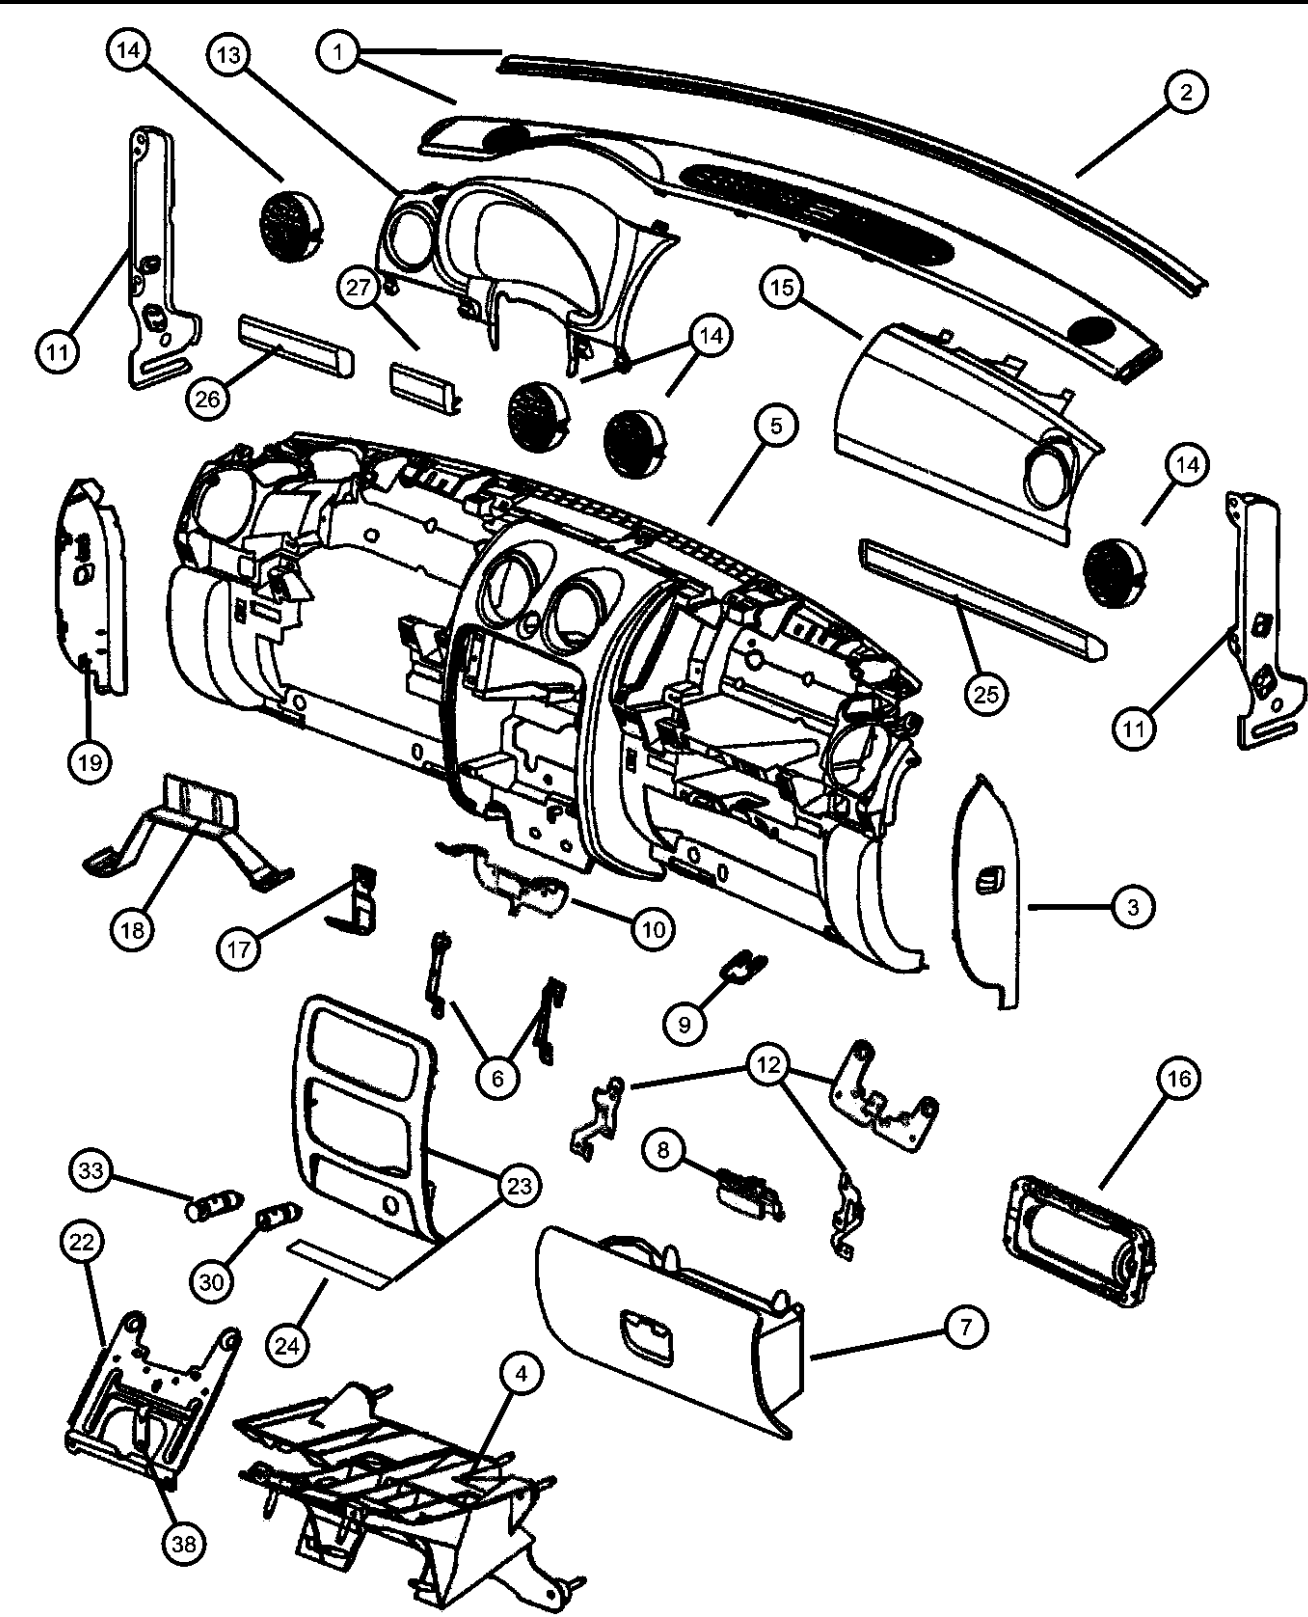


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-28		1	J, T						[L2] Inboard Side of Steering Wheel (Renegade) HANDLE, Grab
	0ZE751DVAA	1	J, T	H					[DV] Instrument Panel Grab Handle Kit (Bolt Cover Caps Included) Sport
		1	J, T	P					[D2] Instrument Panel Grab Handle Kit (Bolt Cover Caps Included) Limited
		1	J, T	P					[DV] Instrument Panel Grab Handle Kit (Bolt Cover Caps Included) Limited
		1	J, T						[DV] Instrument Panel Grab Handle Kit (Bolt Cover Caps Included) Renegade
	0ZE751L8AA	1	J, T	H					[L5] Instrument Panel Grab Handle Kit (Bolt Cover Caps Included) Sport
		1	J, T	P					[L2] Instrument Panel Grab Handle Kit (Bolt Cover Caps Included) Limited
		1	J, T	P					[L5] Instrument Panel Grab Handle Kit (Bolt Cover Caps Included) Limited
		1	J, T						[L5] Instrument Panel Grab Handle Kit (Bolt Cover Caps Included) Renegade
		1	J, T						[L2] Instrument Panel Grab Handle Kit (Bolt Cover Caps Included) Renegade
-29									CAP, Bolt Cover
	0ZE761DVAA	1	J, T						[DV], Left
		1	J, T						[D2], Left
	0ZE761L8AA	1	J, T						[L5], Left
		1	J, T						[L2], Left
	0ZE771DVAA	1	J, T						[DV], Right
		1	J, T						[D2], Right
	0ZE771L8AA	1	J, T						[L5], Right

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Instrument Panel  
Figure 08A-110

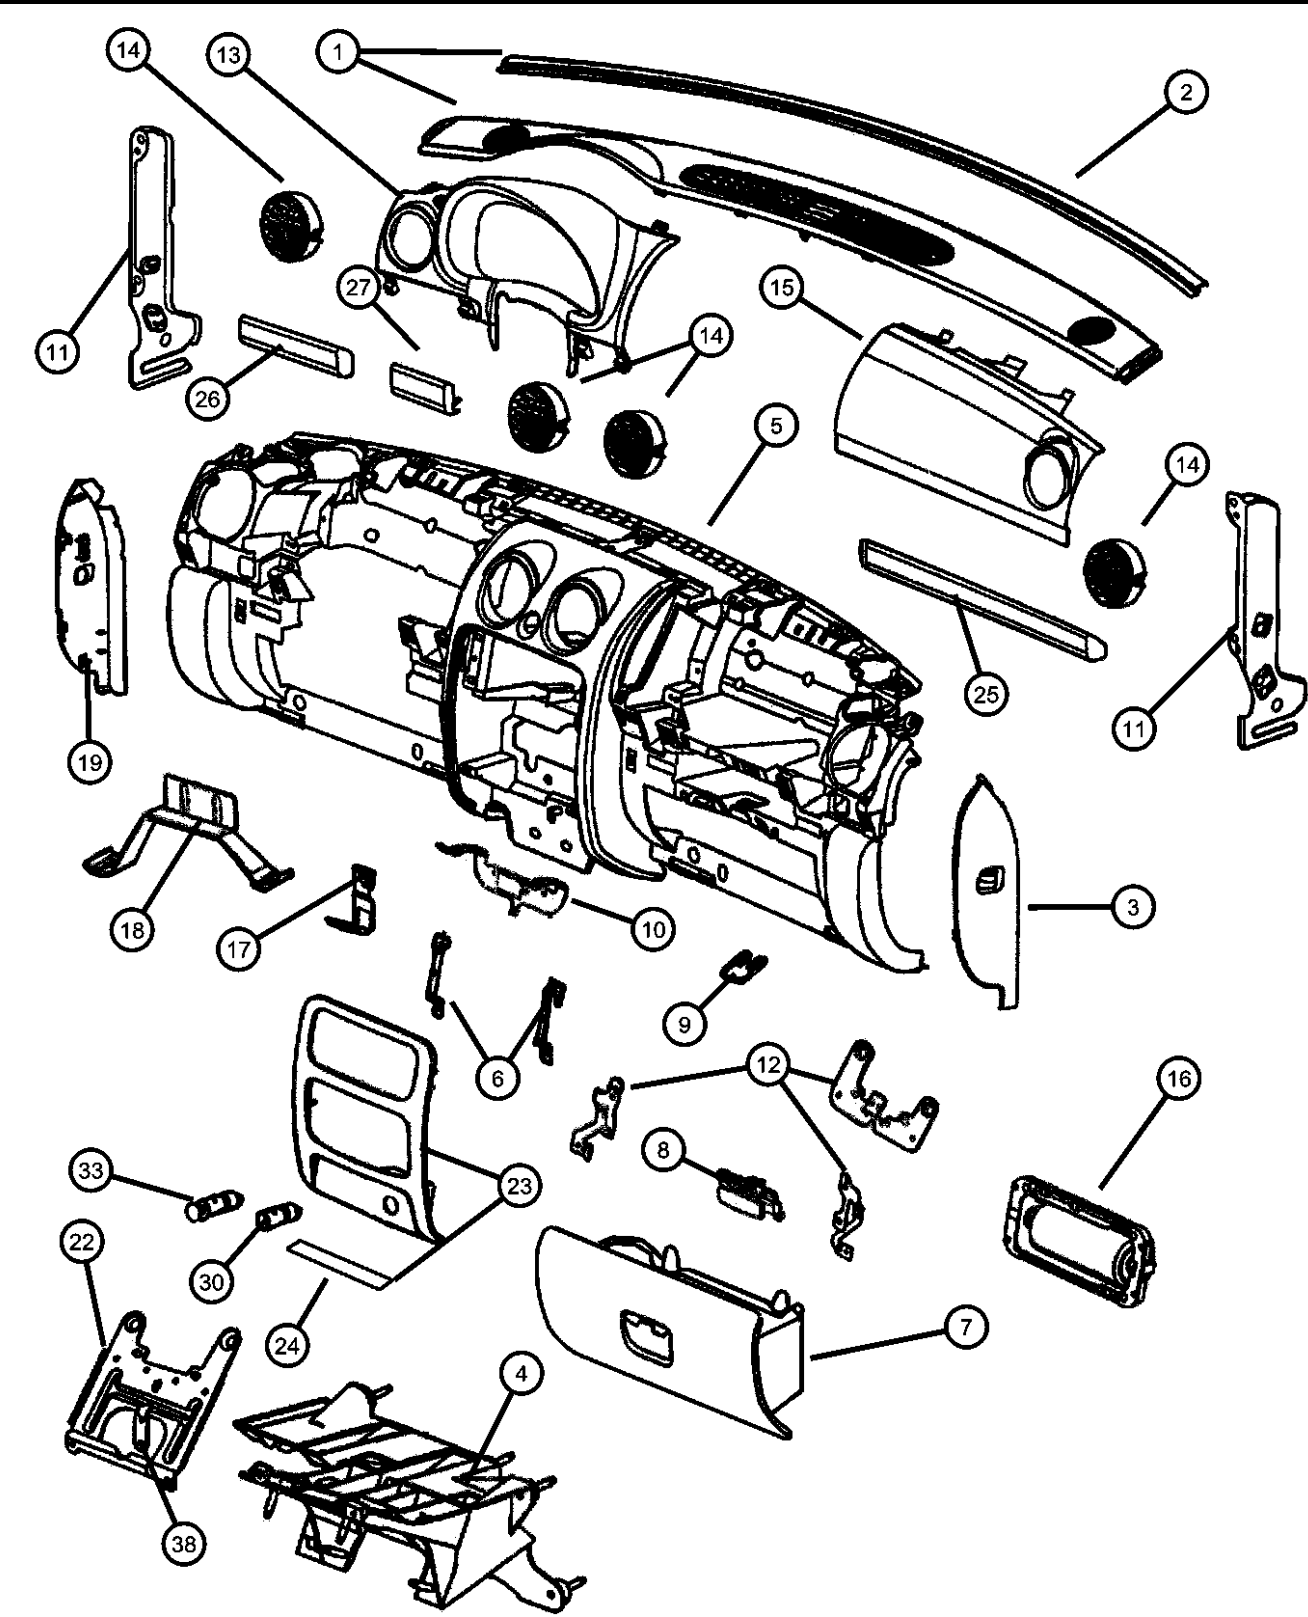


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	J, T						[L2], Right
30	04793554AB	1							POWER OUTLET
-31									MOUNT, Power Outlet
	04685668AA	1							Rear
	56010621AA	1							
-32	04685590	1							BASE, Cigar Lighter
33	04685536	1							KNOB AND ELEMENT, Cigar Lighter
-34	04793555	1							RING, Cigar Lighter Mounting
-35									PANEL, CLOSEOUT
	55352786AD	1	J, T						Right
	55352787AE	1	J, T						Left
	55352788AE	1	U						Right
	55352789AF	1	U						Left
-36	06101945	4							SCREW, Closeout Panel Attaching
-37	04595823AB	1							SMOKERS KIT, Ash Receiver With Lighter
38	04595665AB	1							ASH RECEIVER, Floor Console
-39	05140877AA	1	U						GROMMET, Instrument Panel

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Instrument Panel Cluster  
Figure 08A-210

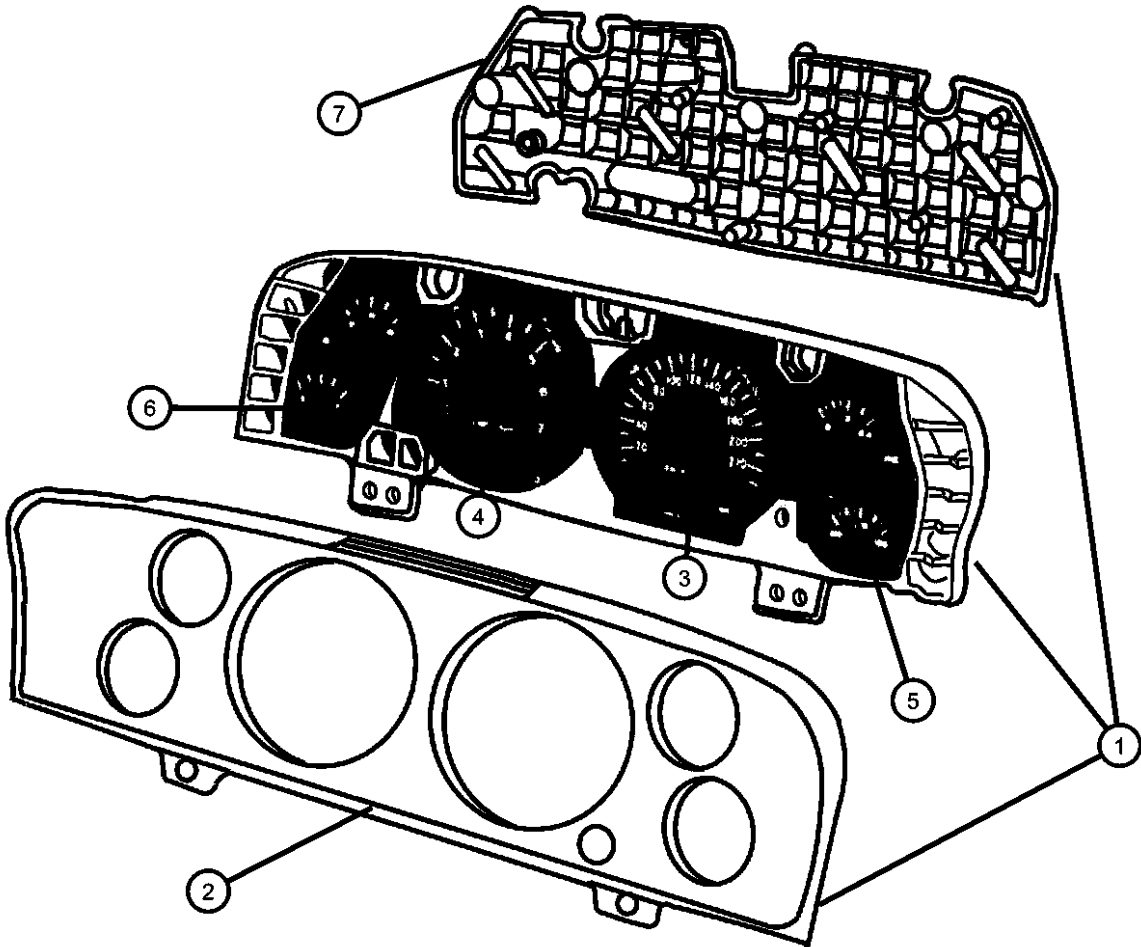


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Notes:  
[ED0] = 2.4L 4 Cylinder Engine  
[EK0] = 3.7L V6 Cylinder Engine  
[EN0] =All 4/5 Cylinder Turbo Diesel Engines  
[JA2]=Instrument Cluster with Tach  
[JAY]=Instrument Cluster with Tach  
[JCB]= 120 MPH with Primary  
[JDJ]= 240 KPH with Primary  
[JDR]= 240 KPH without Primary  
[ABU]=United Kingdom Equipment Package

1									CLUSTER, Complete Cluster Assembly w/Lens, Circuit Board, Odometer Knob, Bulbs & Gauges
	56010572AE	1				ED0, EK0			[JCB+JAY-ABU]
	56010573AE	1				ED0, EK0			[JCB+JAY+ABU]
	56010574AE	1				ED0, EK0			[JDJ+JAY]
	56010575AE	1				ED0, EK0			[JDR+JAY]
	56010576AE	1				EN0			[JCB+JAY]
	56010577AE	1				EN0			[JDJ+JAY]
	56010578AE	1				EN0			[JDR+JAY]
	56010582AE	1				ED0, EK0			[JCB+JA2-ABU]
	56010583AE	1				ED0, EK0			[JCB+JA2+ABU]
	56010584AE	1				ED0, EK0			[JDJ+JA2]
	56010585AE	1				ED0, EK0			[JDR+JA2]
	56010586AE	1				EN0			[JCB+JA2]
	56010587AE	1				EN0			[JDJ+JA2]
	56010588AE	1				EN0			[JDR+JA2]
2									MASK AND LENS, Instrument Cluster
	04828962AB	1				ED0, EK0			Sport & Renegade
		1				EN0			Sport & Renegade
	04832731AB	1				ED0, EK0			Limited
		1				EN0			Limited

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	



Instrument Panel Cluster  
Figure 08A-210

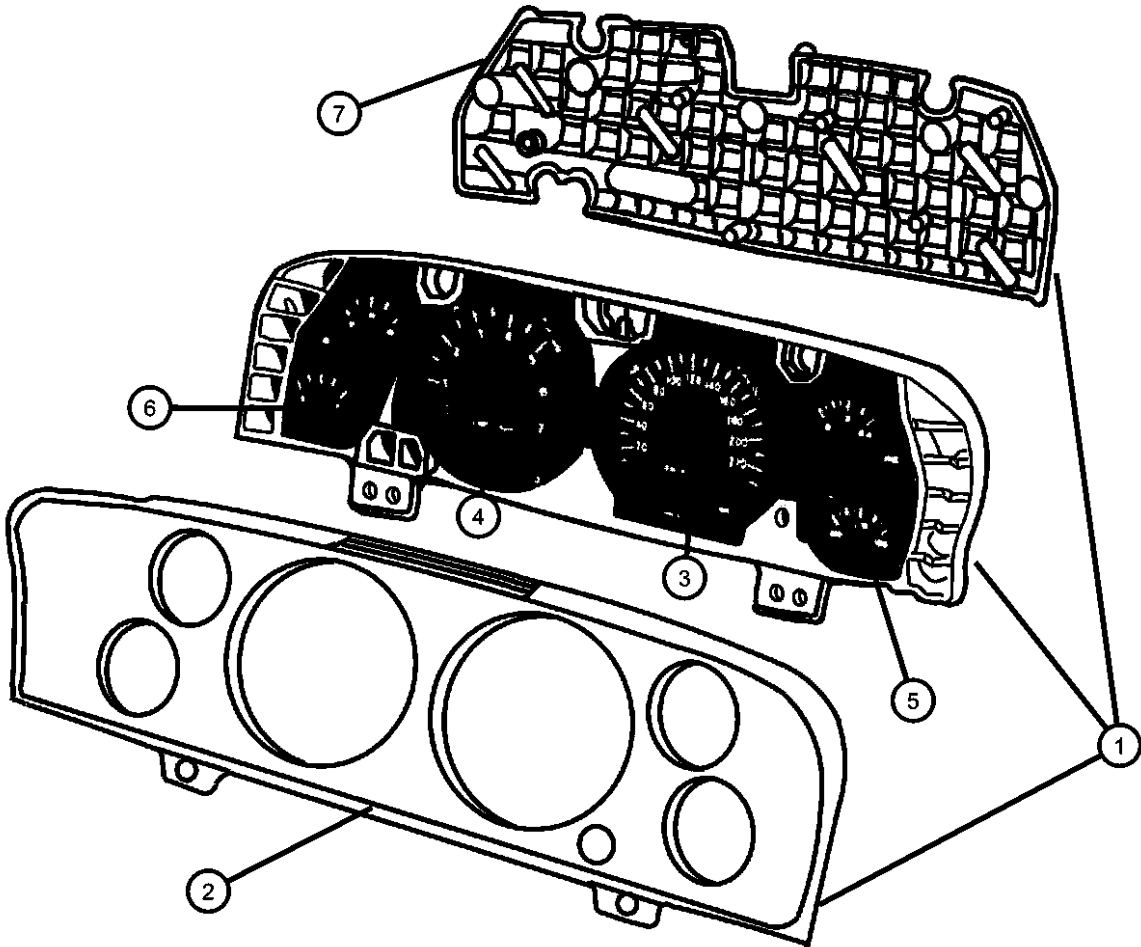

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
3		1							GAUGE, Speedometer, Serviced with Cluster Assembly, (NOT SERVICED),
4		1							GAUGE, Tachometer, Serviced with Cluster Assembly, (NOT SERVICED)
5		1							GAUGE, Temperature And Oil, Serviced with Cluster Assembly, (NOT SERVICED)
6		1							GAUGE, Fuel And Volt, Serviced with Cluster Assembly, (NOT SERVICED)
7		1							BOARD, Circuit, Serviced with Cluster Assembly, (NOT SERVICED)
-8	04827989AA	9				ED0, EK0			BULB AND SOCKET
		9				EN0			
-9		9							KNOB, Odometer Reset, Serviced with Cluster Assembly, (NOT SERVICED)
-10		9							SCREW, Tapping, M4.2X1.70X15.00, (NOT SERVICED)

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

Radios  
Figure 08A-310

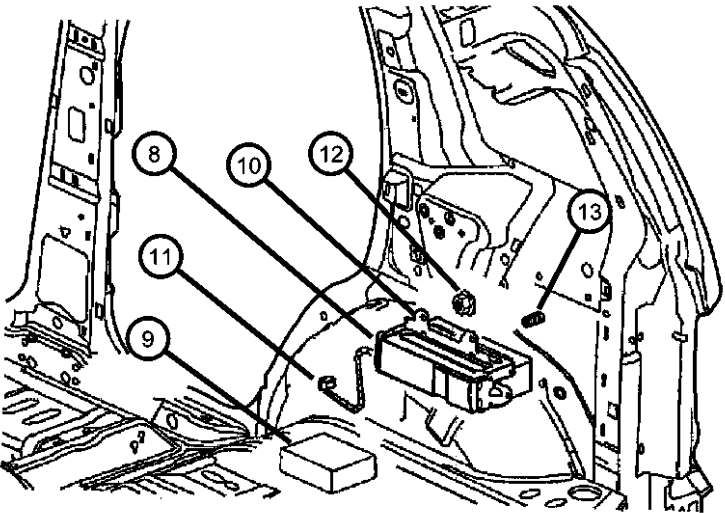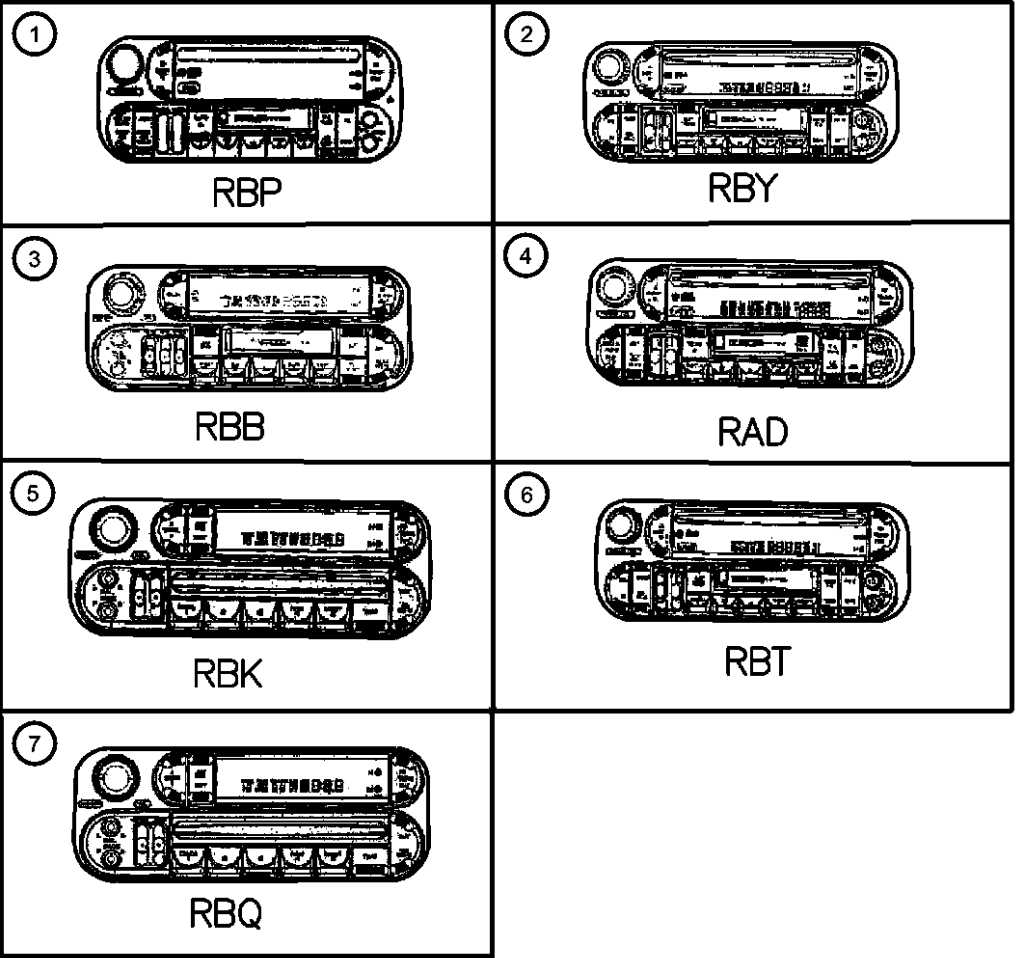

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Notes:  
[RAD]=AM/FM w/Cassette & CD Changer Control (Europe)  
[RBB]=AM/FM w/Cassette & CD Changer  
[RBK]=AM/FM w/CD Changer Control  
[RBP]=AM/FM w/Cassette & CD Changer Control  
[RPQ]=AM/FM w/CD 6-Disc Changer  
[RBT]=AM/FM/MW/RDS Cassette & CD Changer Control (Japan)  
[RBY]=AM/FM w/Cassette & CD Changer Control  
[RCJ]=6 Speaker System (Infinity)  
[REM] CD Changer 6-Disc Remote  
[RSP]= Uconnect Hand Free Communication

1									RADIO, AM/FM/Cassette With CD [RBP] [REH]
	05091606AA	1							
	05091650AB	1							
2	05091609AC	1							RADIO, AM/FM/Cassette With CD, [RBY]
3	05091555AD	1							RADIO, AM/FM/Cassette With CD, [RBB]
4	05091601AD	1							RADIO, AM/FM/Cassette With CD, [RAD]
5	05091556AD	1							RADIO, AM/FM with CD and Equalizer, [RBK]
6	05091608AA	1							RADIO, AM/FM/Cassette With CD, [RBT]
7	05091979AA	1							RADIO, AM/FM with CD and Equalizer, [RBQ]
8	Z6038616AA	1							CHANGER, CD, [REM] 6-Disc
9	04797433	1							MAGAZINE, CD Changer, [REM]
10	56038605AA	1							BRACKET, CD Changer, [REM]
11									CABLE, CD Changer [REM] [REM]
	56038596AF	1			J, T				
	56038598AG	1			U				
12	06100047	4							NUT AND WASHER, Hex Nut-Coned Washer, M6 x 1.00, [REM]
13	06503846	4							STUD, Single Ended, Knurled, Pilot Point, M6x1.00x20.00, [REM]
-14									CHOKE, Speaker


LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				EDO = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Radios  
Figure 08A-310

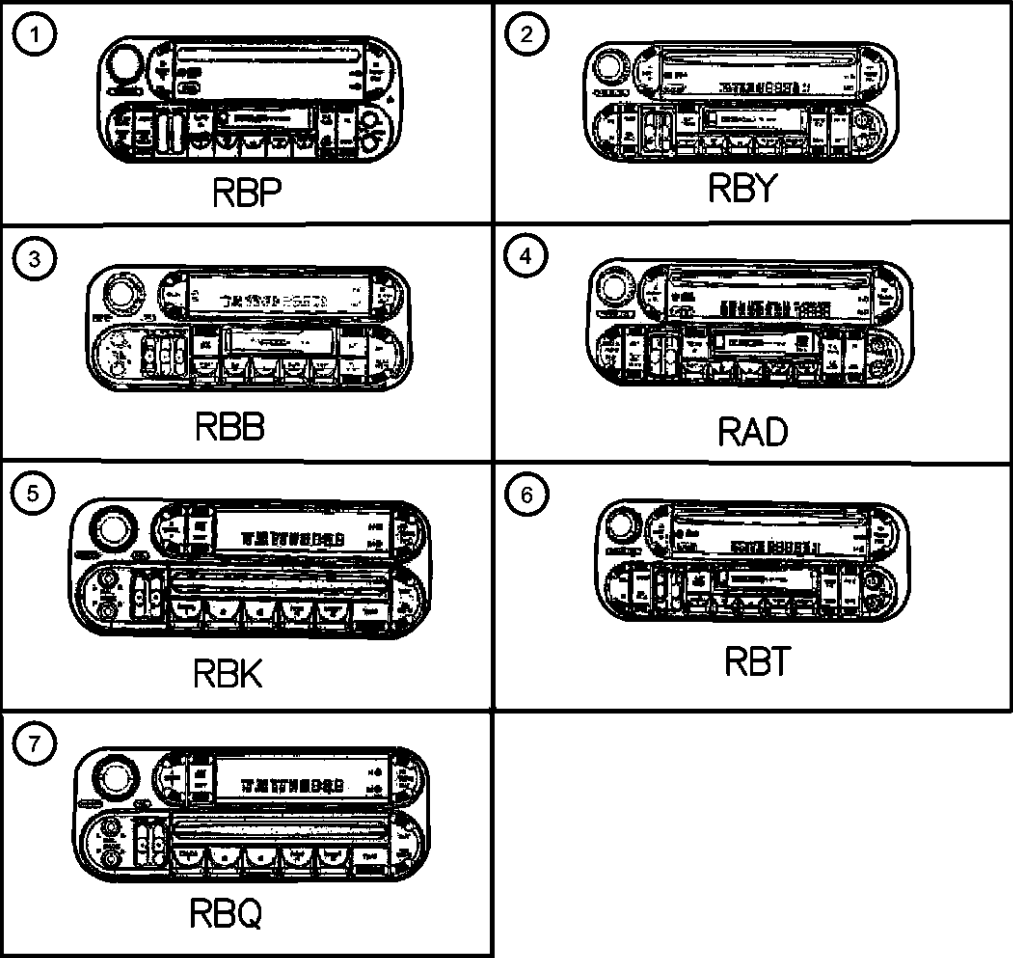

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-15	56038654AA	1	J, T						[RCJ]
	56038655AA	1	U						[RCJ]
	56038596AG	1	J, T						CABLE, CD Changer
-16	56038598AG	1	U						[REM]
	56010551AB	1							[REM]
-17	56038750AA	1							CABLE, Telematics Communication, [RSP] STRAP, Ground

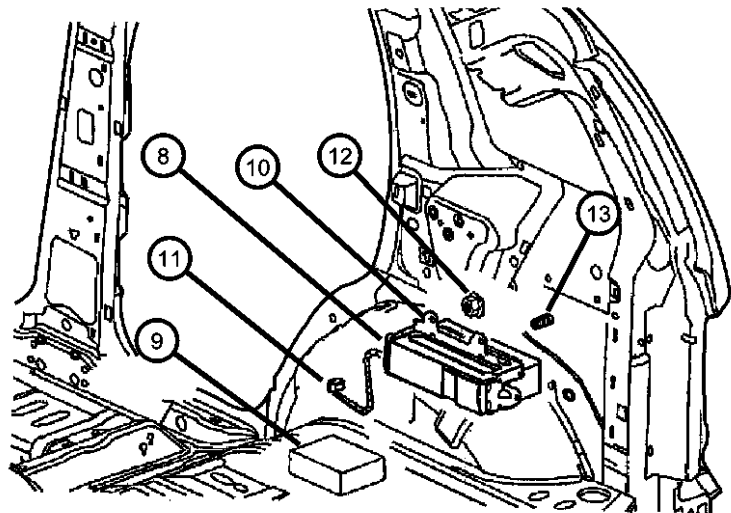

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions




AR = use ase required - = Non illustrated part

Speakers  
Figure 08A-320

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Notes:  
[RCG]=Standard Sound System  
[RCJ]=Premium Sound System

1									SPEAKER, 6.5"
	05082451AC	2							[RCG] Standard, Front Door
	56038593AG	2							[RCJ] Premium (Amplifier Serviced with Speaker Assembly Only), Front Door
2									SPEAKER, 6.5"
	05082451AC	2							[RCG] Standard, Rear Door
	56038800AB	2							RCJ] Premium, Rear Door
3									SPEAKER, Tweeter
	56010666AB	2							[RCG] Standard, Instrument Panel
	56038815AB	2							[RCJ] Premium, Instrument Panel
4	06507009AA	6							NUT, Plastic Snap-in, Door Speaker Mounting
5	06507009AA	6							SCREW, M4.2X1.70X15.00 (Door Speaker Mounting), (NOT SERVICED)
6	06507009AA	6							SCREW, 0.164-18X.750 (I/Panel Speaker Mounting), (NOT SERVICED)

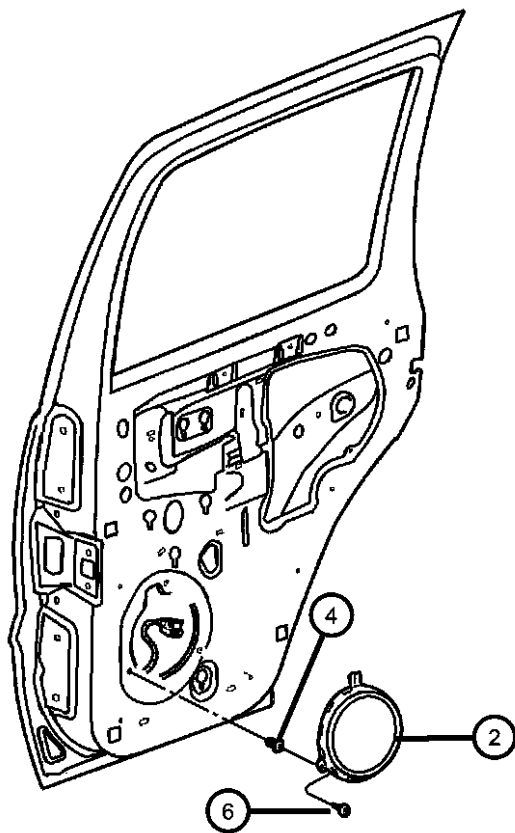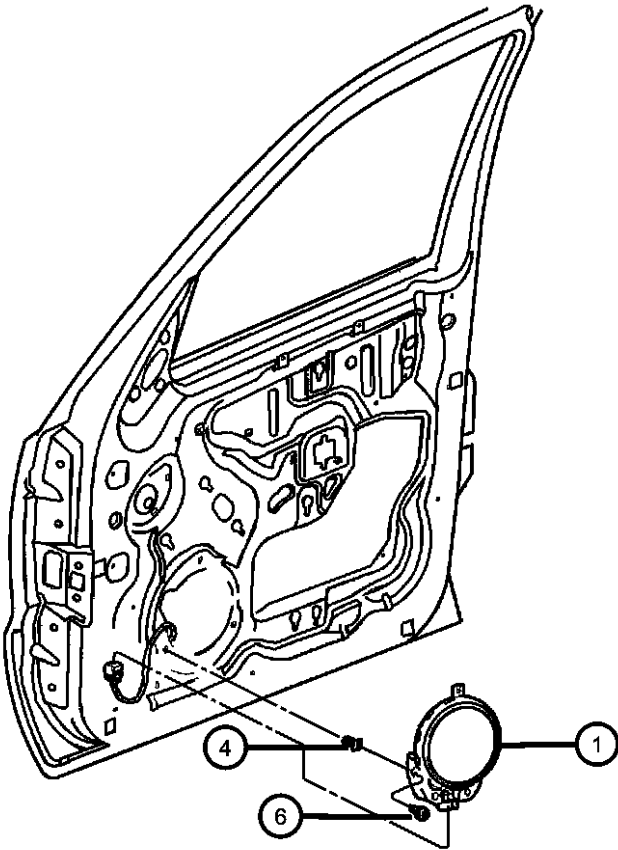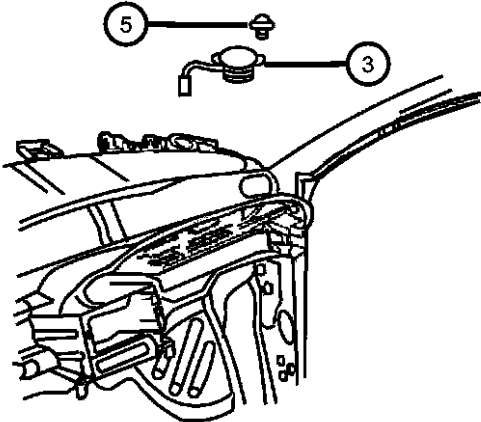

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Antenna  
Figure 08A-330


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	56038545AE	1							MAST, Antenna, Spiral Ground with 5/16" Thread (Bright)
2	56038523AA	1							COVER, Antenna Opening
3	56038581AA	1							NUT
4	56038581AA	1							GROMMET, Serviced with Cable Base Assembly with Lead, (NOT SERVICED)
5	56038526AE	1							ANTENNA, Cable Base Assembly with Lead
6	56038580AB	1							ADAPTER, Antenna, Bezel
7	04780615AB	2							PLUG, Body, .75 Diameter
8	56038527AD	1							ANTENNA, Antenna Module Radio
9	56038527AD	1							SCREW, (NOT SERVICED)
-10									CABLE, Antenna
	56038559AF	1							Radio to Cowl
	56038575AG	1							Antenna Module to Cowl
	56038576AG	1							Radio to Cowl (RHD)
-11	05066205AC	1							ANTENNA, Satellite

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Console, Overhead  
Figure 08A-410

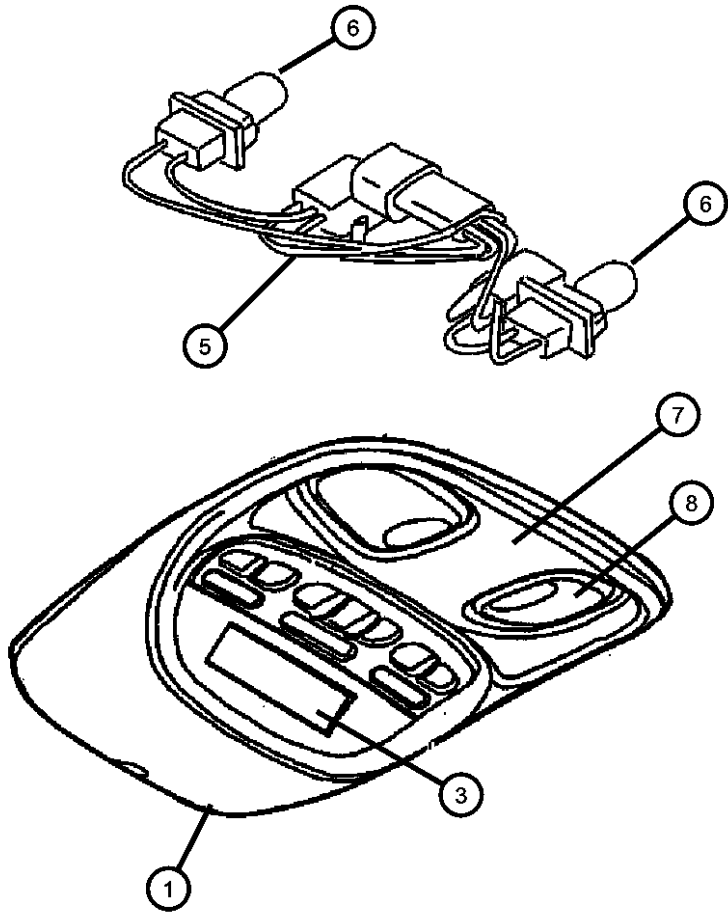


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									CONSOLE, Overhead Mini, Less Electronics
	05014271AA	1	J, T						Without Sunroof
		1	J, U						Without Sunroof
	0WA951L2AA	1	J, U						With Sunroof
	1AR331L2AA	1							With Sunroof
-2									RETAINER, Overhead Console
	05072348AA	1	J, U						
		1	J, T						
3									MODULE, Overhead Console Export
	56010437AA	1							
	56010438AD	1	J, T						
-4									MODULE, Intrusion
	5GV82TL2AG	1							
		1	J, U						
5									WIRING, Overhead Console
	04760644	1	J, T						[AHM+GWA+CUD=CGS]
		1	J, U						[CUD+GWA+LSC+CGS]
6									BULB, 192
	L0000192	2	J, U						
		2	J, T						
7									LAMP, Reading
	0PB83TL2AB	1	J, U						Without Sunroof
		1	J, T						Without Sunroof
	0WA901L2AA	1	J, T						With Sunroof
		1	J, U						With Sunroof
8									LENS, Cargo Lamp
	55196755AA	1	J, T						
		1	J, U						
-9									BULB, 212-2
	L0021202	1	J, T						

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Console, Overhead  
Figure 08A-410

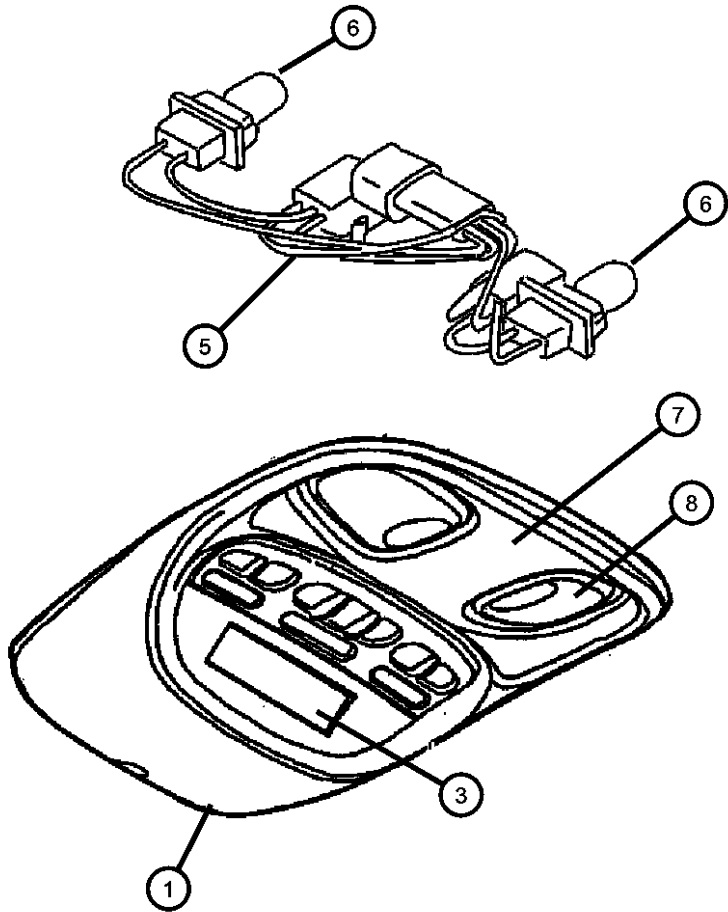


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-10		1	J, U						SWITCH, Reading Lamp
	04685445	1	J, T						
		1	J, U						
-11									SWITCH, Sunroof
	5GM78TL2AA	1	J, T						
		1							
-12									RETAINER, Electronic Module
	56010331AB	1	J, U						
		1							
-13									LAMP, Message Center
	04437661	1	J, U						
		1	J, T						
-14	0JV76TL2	1	J, T						LAMP, Dome, Beige
-15	05012882AA	1							LENS, Message Center


LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

**Console, Floor**  
**Figure 08A-420**

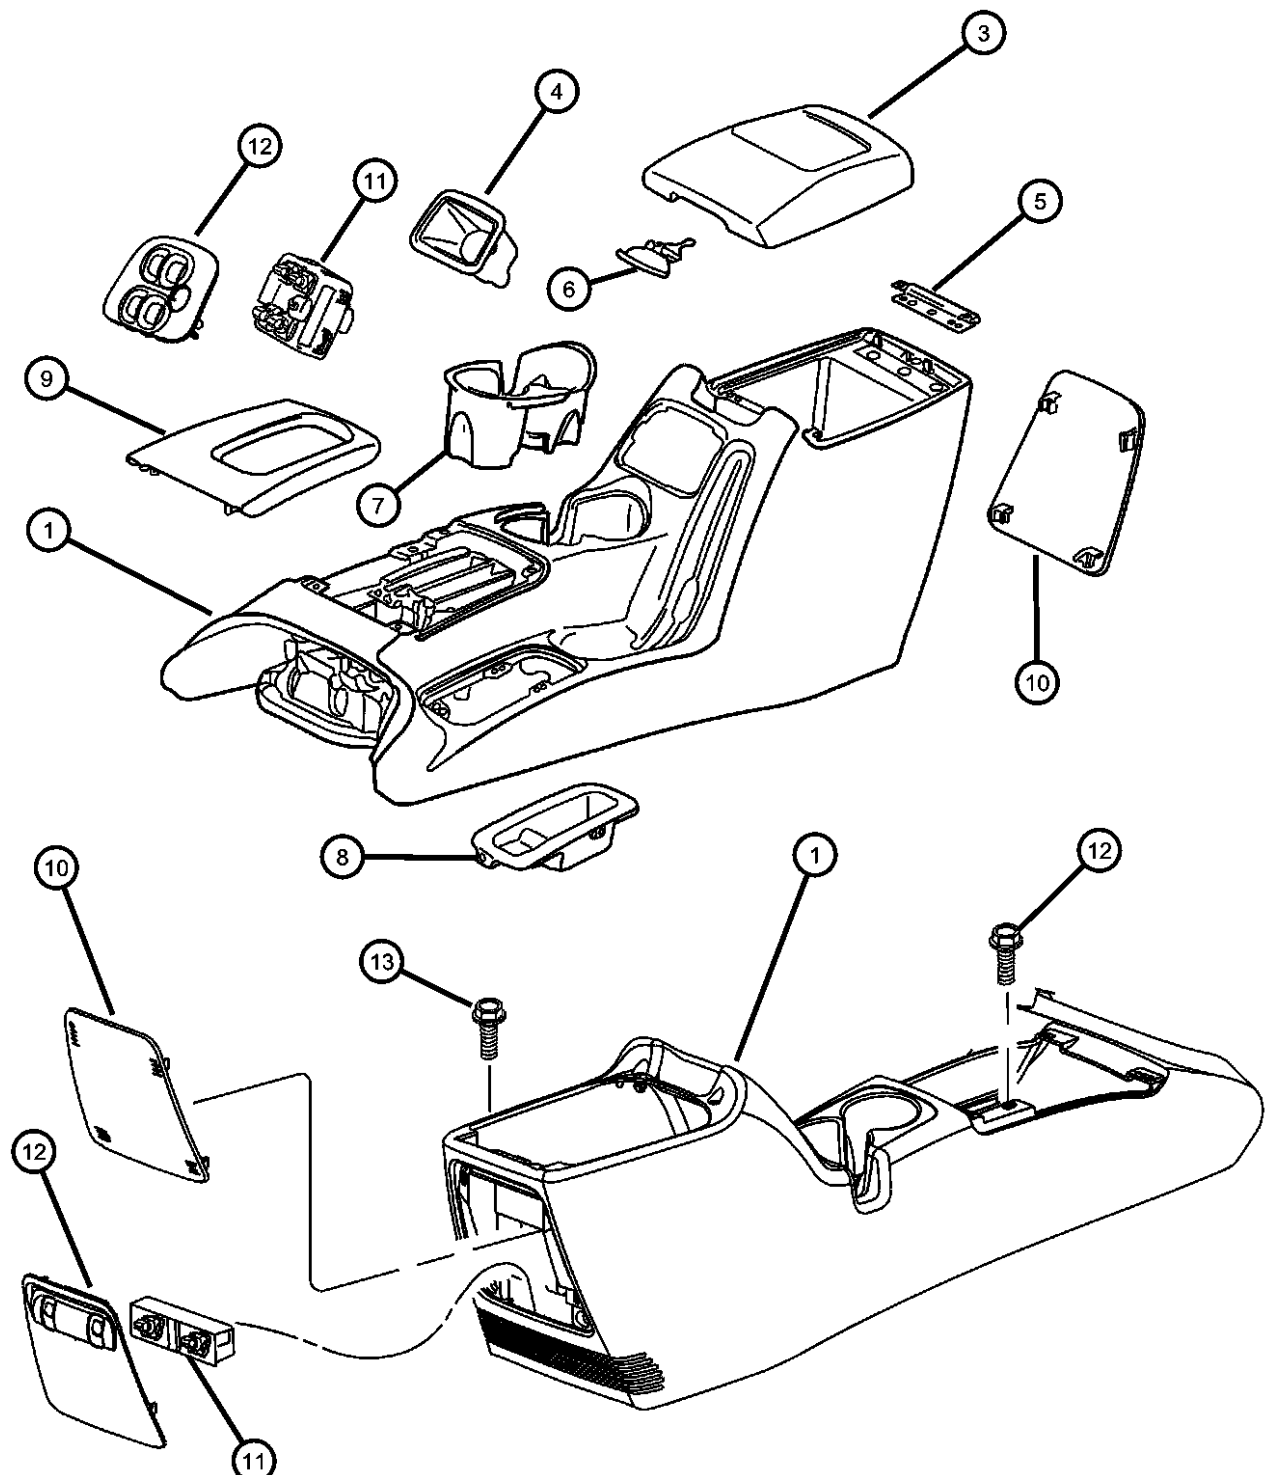ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
<div><div></div><div><p>Notes:</p><p>[DBB]=All Manual Transmissions</p><p>[DG0]=All Automatic Transmissions</p></div></div>									
1	0WD581DVAC	1					DG0		CONSOLE, Base
		1					DG0		[D2] Serviced with 2 Clips & Heat Staked Rubber Brake Handle Shield
	0WD581L8AC	1					DG0		[DV] Serviced with 2 Clips & Heat Staked Rubber Brake Handle Shield
		1					DG0		[L2] Serviced with 2 Clips & Heat Staked Rubber Brake Handle Shield
	0WD851DVAB	1					DBB		[L5] Serviced with 2 Clips & Heat Staked Rubber Brake Handle Shield
		1					DBB		[D2] Serviced with 2 Clips & Heat Staked Rubber Brake Handle Shield
	0WD851L8AB	1					DBB		[DV] Serviced with 2 Clips & Heat Staked Rubber Brake Handle Shield
		1					DBB		[L2] Serviced with 2 Clips & Heat Staked Rubber Brake Handle Shield
		1					DBB		[L5] Serviced with 2 Clips & Heat Staked Rubber Brake Handle Shield
-2	05072907AB	1					DBB		BRACKET, Floor Console
3	0WD591DVAA	1					DG0		LID, Floor Console Bin
		1					DG0		[D2] Serviced with Hinge & Latch
	0WD591L8AA	1					DG0		[DV] Serviced with Hinge & Latch
		1					DG0		[L2] Serviced with Hinge & Latch
	0WD591DVAB	1					DBB		[L5] Serviced with Hinge & Latch
		1					DBB		[D2] Serviced with Hinge & Latch
	0WD591L8AB	1					DBB		[DV] Serviced with Hinge & Latch
		1					DBB		[L2] Serviced with Hinge & Latch
		1					DBB		[L5] Serviced with Hinge & Latch
<div><div>LIBERTY (KJ)</div><div><div>SERIES</div><div>P = Limited H = Sport M = Renegade</div></div><div><div>LINE</div><div>J = LHD (4WD) U = RHD (4WD) T = LHD (2WD)</div></div></div> <div><div>BODY</div><div>74 = 4 Door (104.3 WB)</div></div> <div><div>ENGINE</div><div>ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel ENO = 4Cyl Turbo Diesel EKO = All 3.7L EDO = All 2.4L</div></div> <div><div>TRANSMISSION</div><div>DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions</div></div>									
AR = use ase required - = Non illustrated part									
2004 KJ									

**Console, Floor**  
**Figure 08A-420**

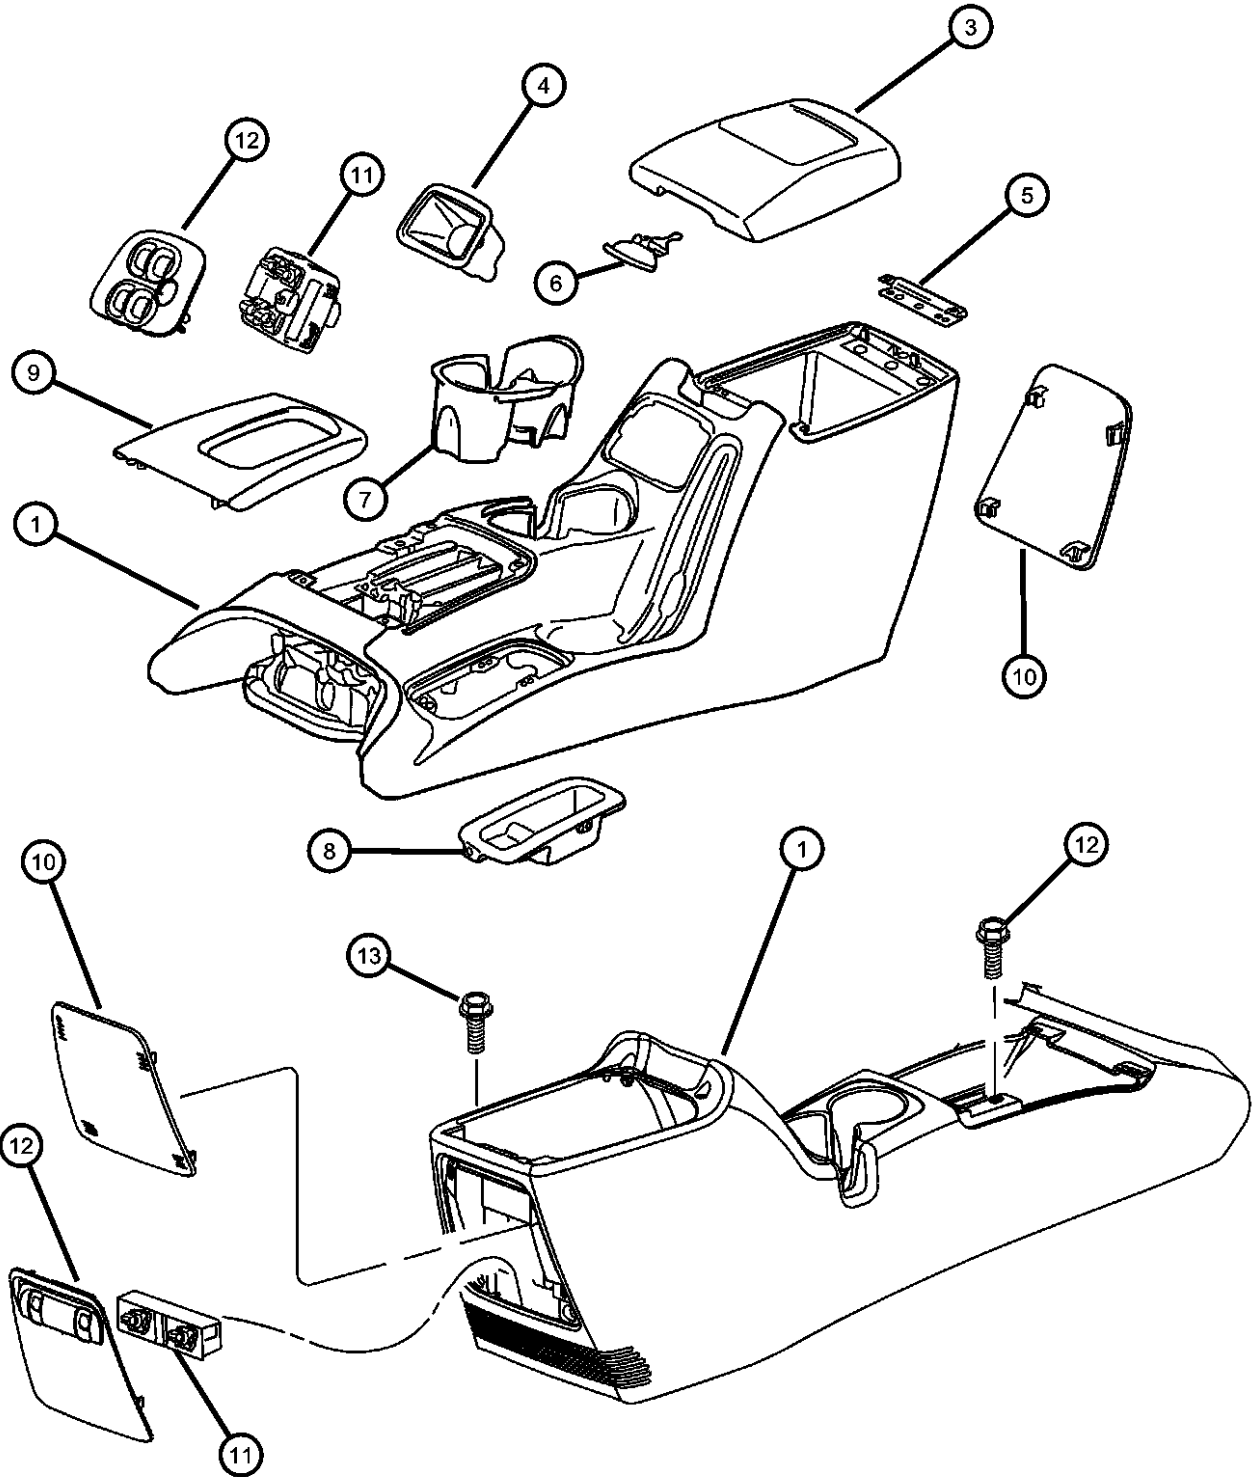


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
4	05072904AB	1					DBB		BIN, Floor Console
		1					DG0		Serviced with 2 Bumpers & 5 Screws
	5GP34WL8AC	1							Serviced with 2 Bumpers & 5 Screws
	5GP34XD-VAC	1							[L5] Without Power Window Switch, Front
									[DV] Without Power Window Switch, Front
5	05072906AA	1					DBB		HINGE, Floor Console Lid
		1					DG0		
6	05072905AA	1					DBB		LATCH, Console Lock
		1					DG0		
7	05072903AA	1					DBB		CUPHOLDER, Floor Console
		1					DG0		
8	5GG16DX9AC	1	T						COVER, Floor Console, Two Wheel Drive Vehicle Only
9	5GP21DX9AE	1					DG0		BEZEL, Gear Selector
	5HK42SZ5AD	1		M, P			DG0		[AYG,ALS] Columbia Edition Group, Special Edition [JA2]
10	5GP35WL8AC	1							COVER, Switch Opening
	5GP35XD-VAC	1							[L5] Without Power Window Switch
									[DV] Without Power Window Switch
11	56010091AB	1							SWITCH, Power Window
	56010677AA	1							2 Gang, Rear
									Front of Console 4 Gang, Front
12	0WA64WL8AB	1							BEZEL, Power Window Switch
									[L2], Rear

<b>LIBERTY (KJ)</b>					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EKO = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

AR = use ase required    - = Non illustrated part

Console, Floor  
Figure 08A-420

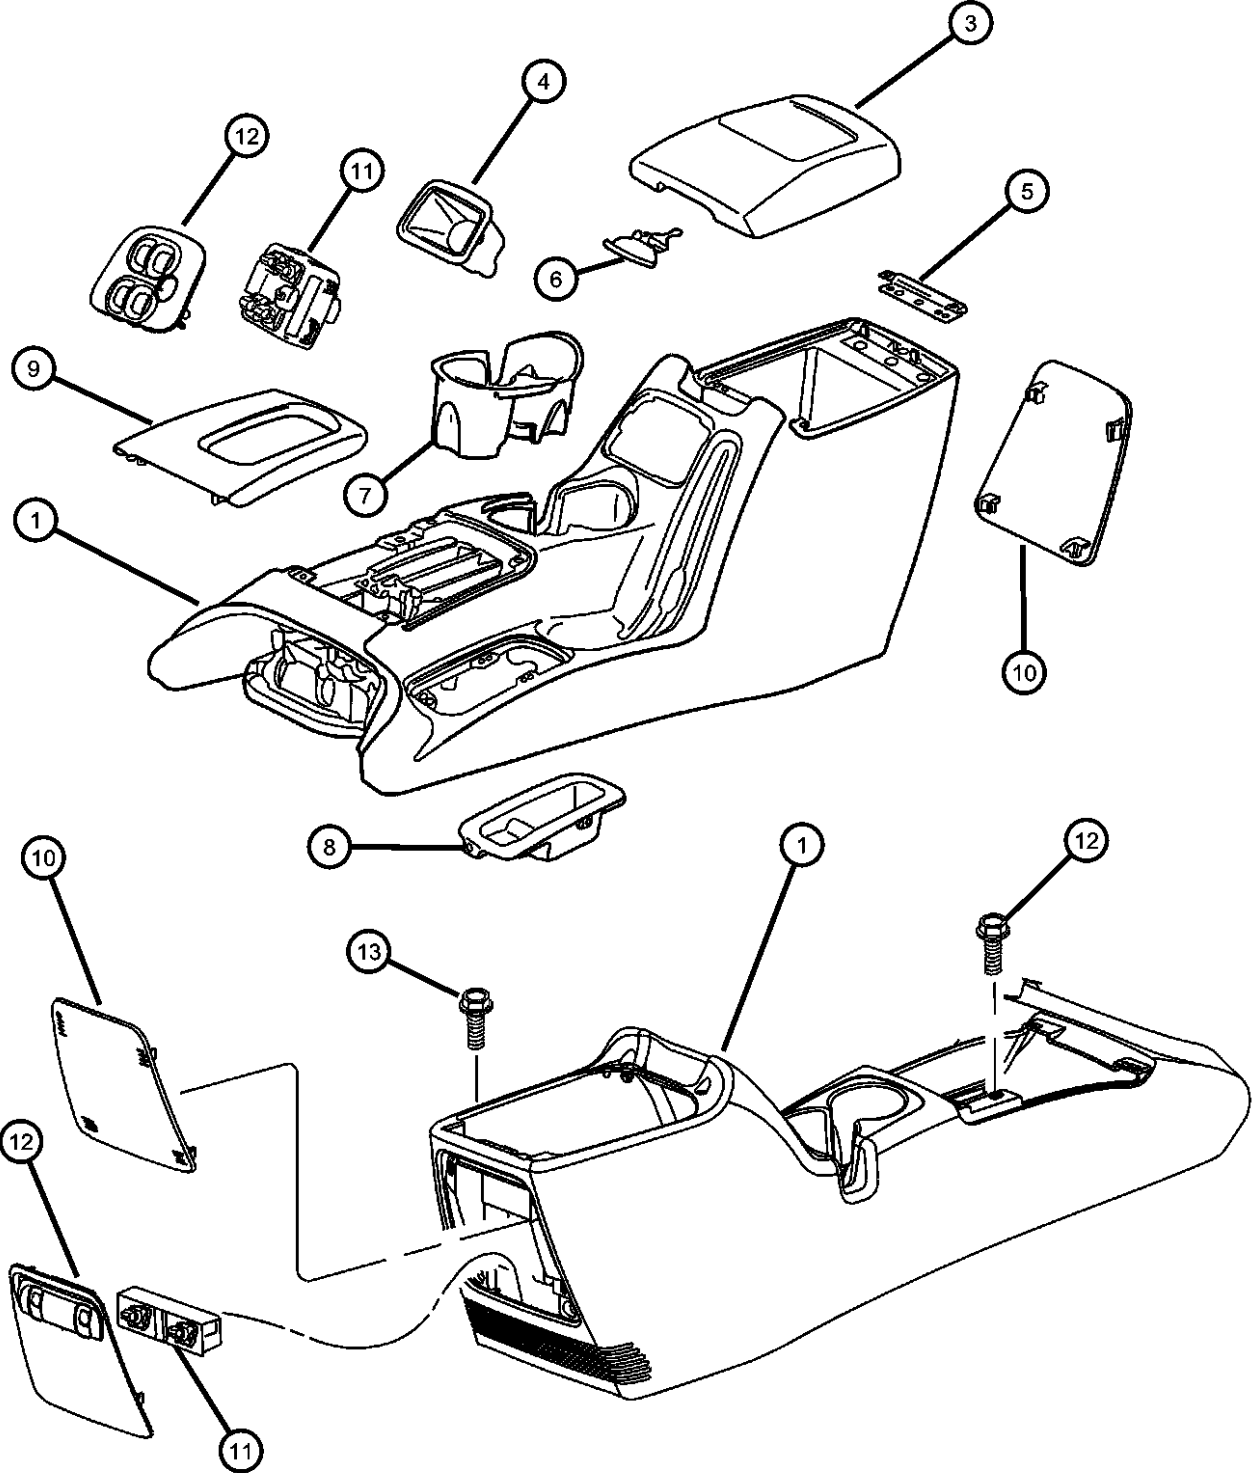

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1							[L5], Rear
	0WA64XDVAB	1							[D2], Rear
		1							[DV], Rear
	5JQ92WL8AA	1							[L2], Front
		1							[L5], Front
	5JQ92XDVAA	1							[D2], Front
		1							[DV], Front
13		1							SCREW, Hex Flange Head, M4.2x1.70x16.00, (NOT SERVICED),
-14	04595823AB	1							SMOKERS KIT, Ash Receiver With Lighter
-15	04595665AB	1							ASH RECEIVER, Floor Console
-16	04685536	1							KNOB AND ELEMENT, Cigar Lighter
-17	06101945	4							SCREWConsole To Floor

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

# Group - 9

## Engine Mounting


### Group - 9 Engine Mounting


Illustration Title

Group-Fig. No.


#### Engine Mounting

Front, Engine Mounting .....	Fig. 9 - 110
Front, Engine Mounting .....	Fig. 9 - 115
Front, Engine Mounting .....	Fig. 9 - 120
Front, Engine Mounting .....	Fig. 9 - 125
Rear, Transmission Mounting .....	Fig. 9 - 130
Rear, Transmission Mounting .....	Fig. 9 - 135
Rear, Transmission Mounting .....	Fig. 9 - 140
Rear, Transmission Mounting .....	Fig. 9 - 145
Rear, Transmission Mounting .....	Fig. 9 - 150
Rear, Transmission Mounting .....	Fig. 9 - 155
Rear, Transmission Mounting .....	Fig. 9 - 160
Rear, Transmission Mounting .....	Fig. 9 - 165

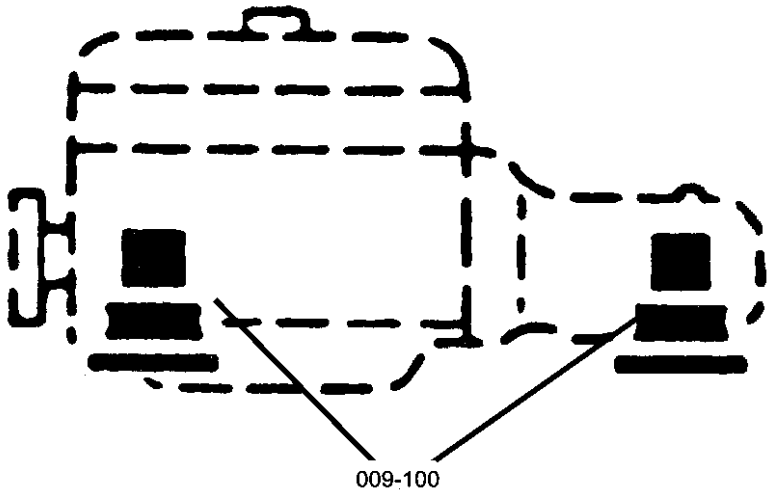
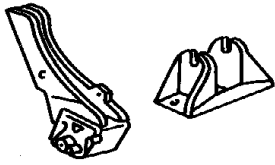
<div>009-100</div> <div>Engine Mounting</div> <div></div>			
---	--	--	--

Front, Engine Mounting  
Figure 9-110

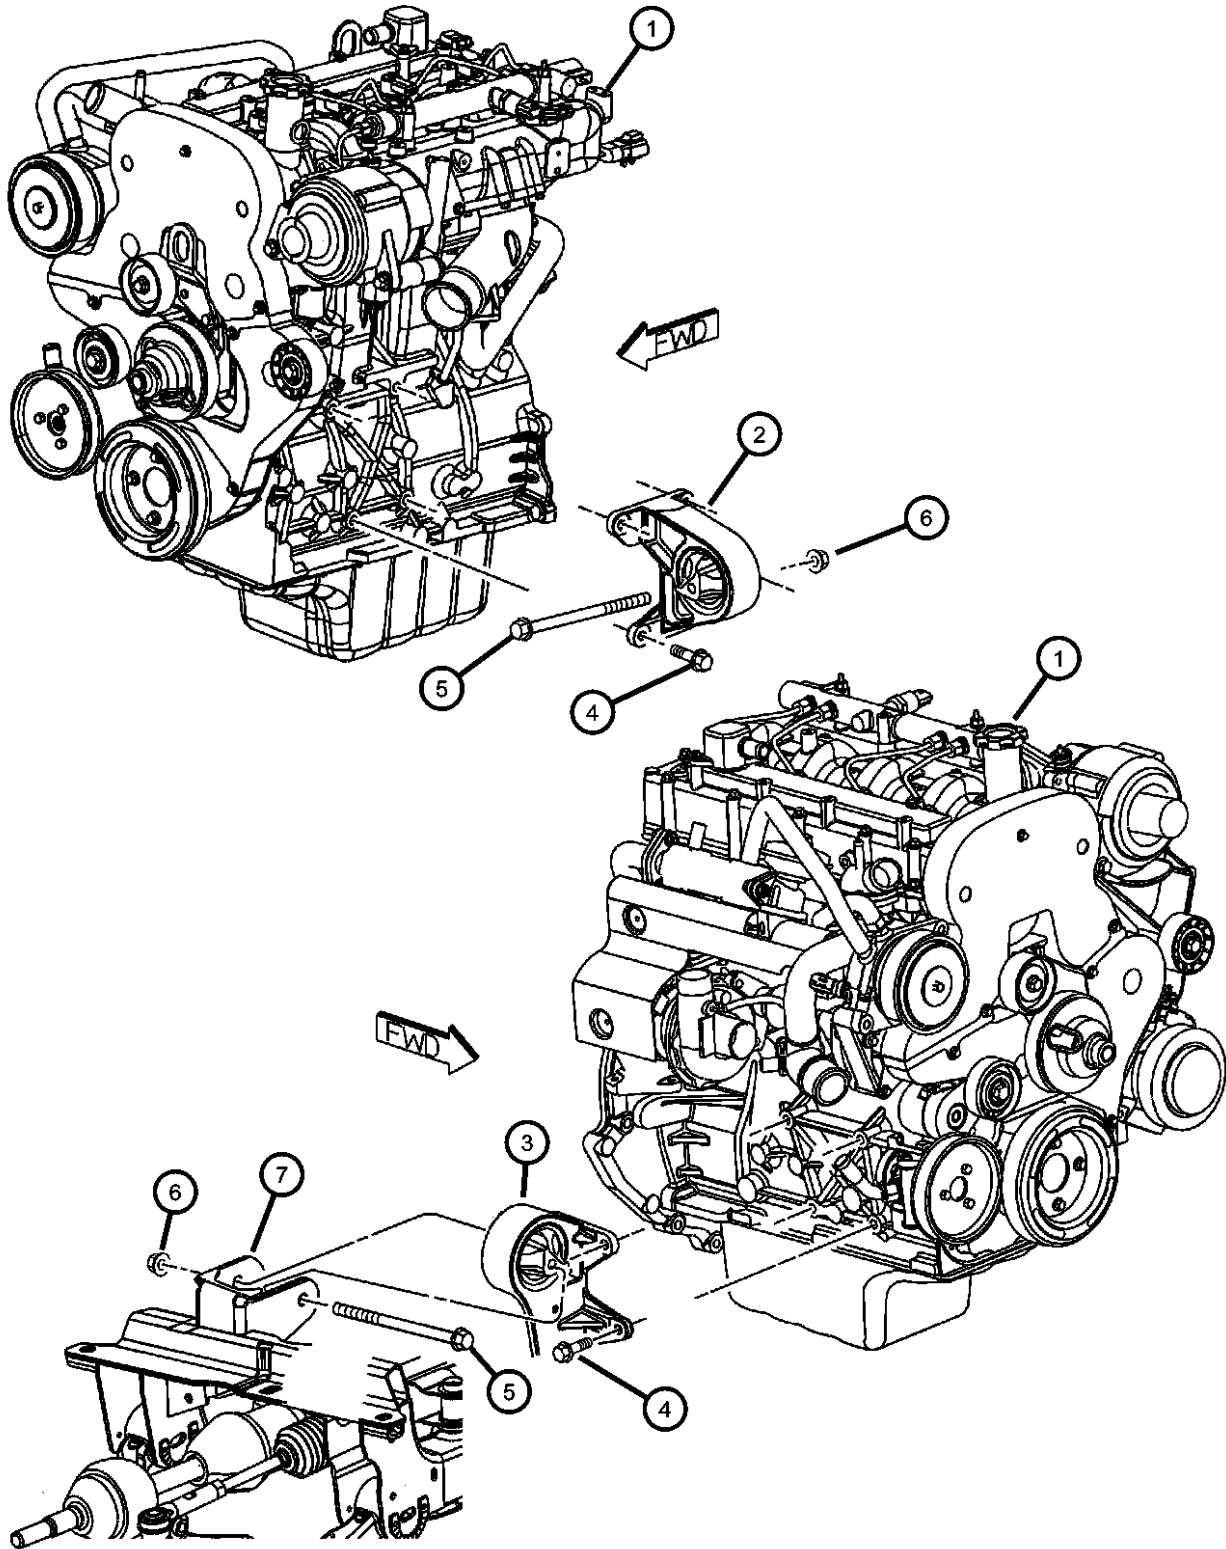

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note:  
Sales Code  
[EK0]= All 3.7L 6 Cylinder Engines  
[EN0]= All 4/5 Cylinder Turbo Diesel Engines

1	06101945	4							ENGINE, Complete, Diesel, See Engine Group, (NOT SERVICED)
2	52059201AE	1				EN0			INSULATOR, Engine MountLeft
3	52059200AD	1				EN0			INSULATOR, Engine MountRight
4	06503699	8				EK0, EN0			SCREW AND WASHER, Hex Head, M10x1.5x28
5	34202606	1							BOLT, Hex Head
6	06502697	2							NUT, Hex Flange Lock, M12x1.75
7	06502697	2							BRACKET, Serviced With Cradle Assembly, (NOT SERVICED)

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Front, Engine Mounting  
Figure 9-115

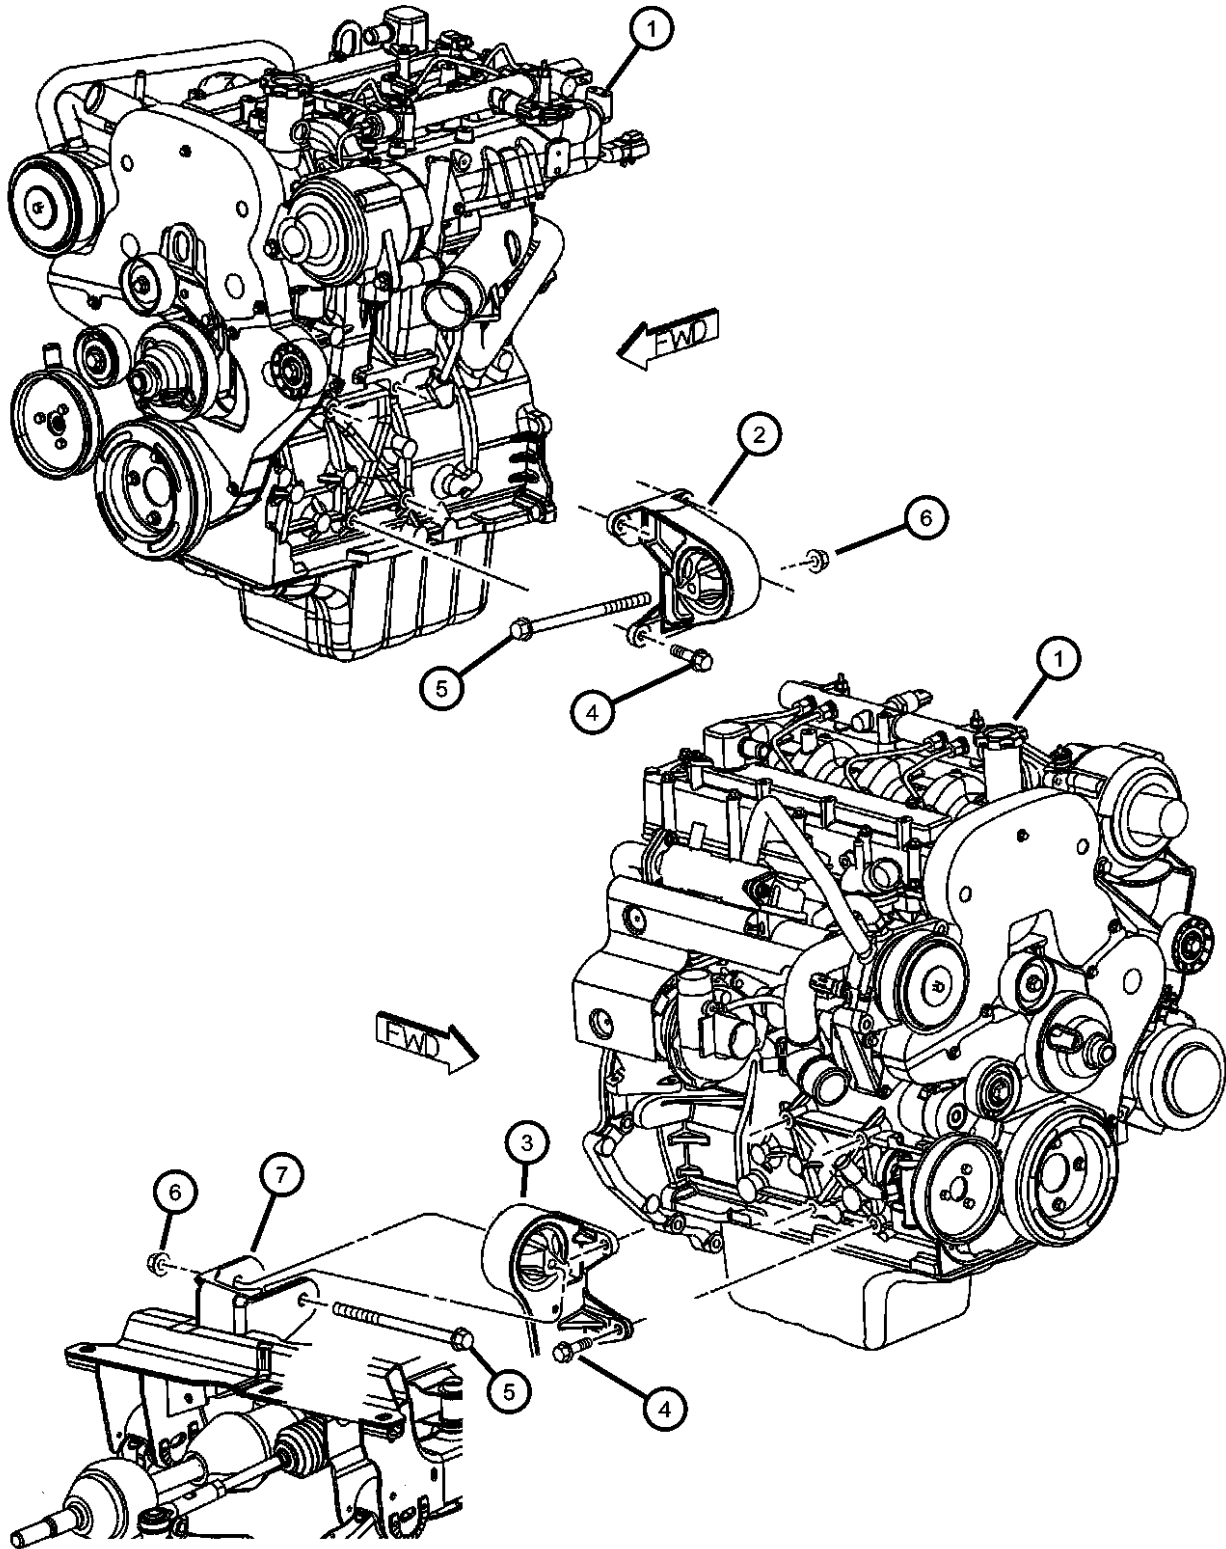

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note:  
Sales Code  
[EK0]= All 3.7L 6 Cylinder Engines  
[EN0]= All 4/5 Cylinder Turbo Diesel Engines


1	06502697	2							ENGINE, Complete, Diesel, See Engine Group, (NOT SERVICED)
2	52059201AE	1				EN0			INSULATOR, Engine MountLeft
3	52059200AD	1				EN0			INSULATOR, Engine MountRight
4	06503699	8				EK0, EN0			SCREW AND WASHER, Hex Head, M10x1.5x28
5	34202606	1							BOLT, Hex Head
6	06502697	2							NUT, Hex Flange Lock, M12x1.75
7	06502697	2							BRACKET, Serviced With Cradle Assembly, (NOT SERVICED)

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Front, Engine Mounting  
Figure 9-120

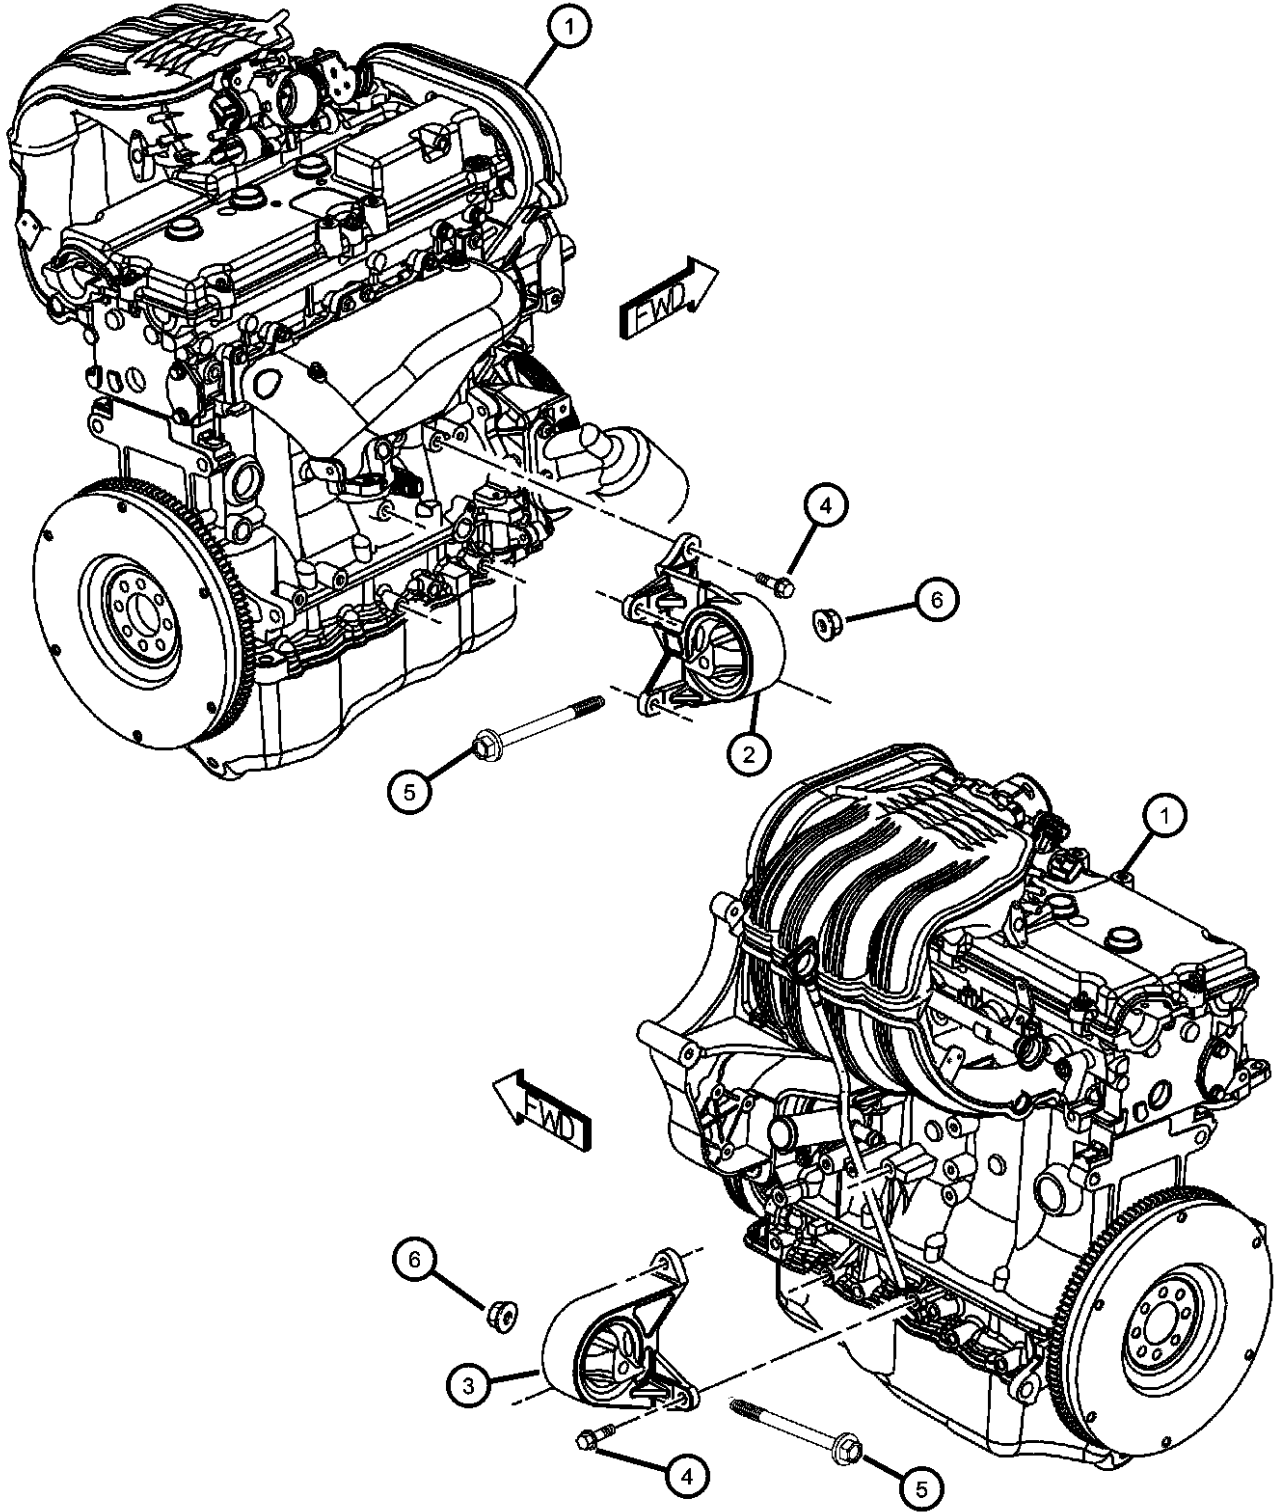

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note:  
Sales Codes  
[ED0]= All 2.2L,2.5L,2.4L,4 Cylinder Gas Engines

1	06502697	2							ENGINE, Complete, See Engine Group, (NOT SERVICED)
2	52059252AC	1				ED0			INSULATOR, Engine MountRight
3	52059253AC	1				ED0			INSULATOR, Engine MountLeft
4	06503699	1							SCREW AND WASHER, Hex Head, M10x1.5x28
5	06507388AA	2							BOLT, Hex Head
6	06502697	2							NUT, Hex Flange Lock, M12x1.75

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Front, Engine Mounting  
Figure 9-125

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[EK0]= All 3.7L 6 Cylinder Gas Engines  
[EN0]= All 4/5 Cylinder Turbo Diesels

1	06502697	2							ENGINE, Complete, See Engine Group, (NOT SERVICED)
2	52059226AB	1				EK0			INSULATOR, Engine MountRight
3	52059227AC	1				EK0			INSULATOR, Engine MountLeft
4	06503699	8				EK0, EN0			SCREW AND WASHER, Hex Head, M10x1.5x28
5	34202606	1							BOLT, Hex Head
6	06502697	2							NUT, Hex Flange Lock, M12x1.75

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear, Transmission Mounting  
Figure 9-130

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DBB]=All Manual Transmissions  
[EN0]=All 4/5 Cyl. Turbo Diesel Engines

1	06502697	2							TRANSMISSION, 5 Speed, See Manual Transmission Group, (NOT SERVICED)
2	52128707AA	1				EN0			CROSSMEMBER, Transmission
3	06506000AA	4							SCREW AND WASHERInboard
4	34202606	1							BOLT, Hex Head
5	06033358	4					DBB		SCREW AND WASHER, Hex Head Locking, .437-14x1.25
6	52058539AB	1	J, U			EN0	DBB		BRACKET AND INSULATOR, Transmission Support
7	06505826AA	4							SCREW AND WASHEROuter

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part

Rear, Transmission Mounting  
Figure 9-135

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DGQ]=5 Speed Automatic Transmission - [5-45RFE]  
[EN0]=All 4/5 Turbo Diesel Engines

1	06505826AA	4							TRANSMISSION, See Automatic Transmission Group, (NOT SERVICED)
2	52128707AA	1				EN0			CROSSMEMBER, Transmission
3	06506000AA	4							SCREW AND WASHERInner
4	06505826AA	4							SCREW AND WASHEROuter
5	34202606	1							BOLT, Hex Head
6	06503699	1							SCREW AND WASHER, Hex Head, M10x1.5x28
7	52059313AA	1				EN0	DGQ		BRACKET, Support Rear

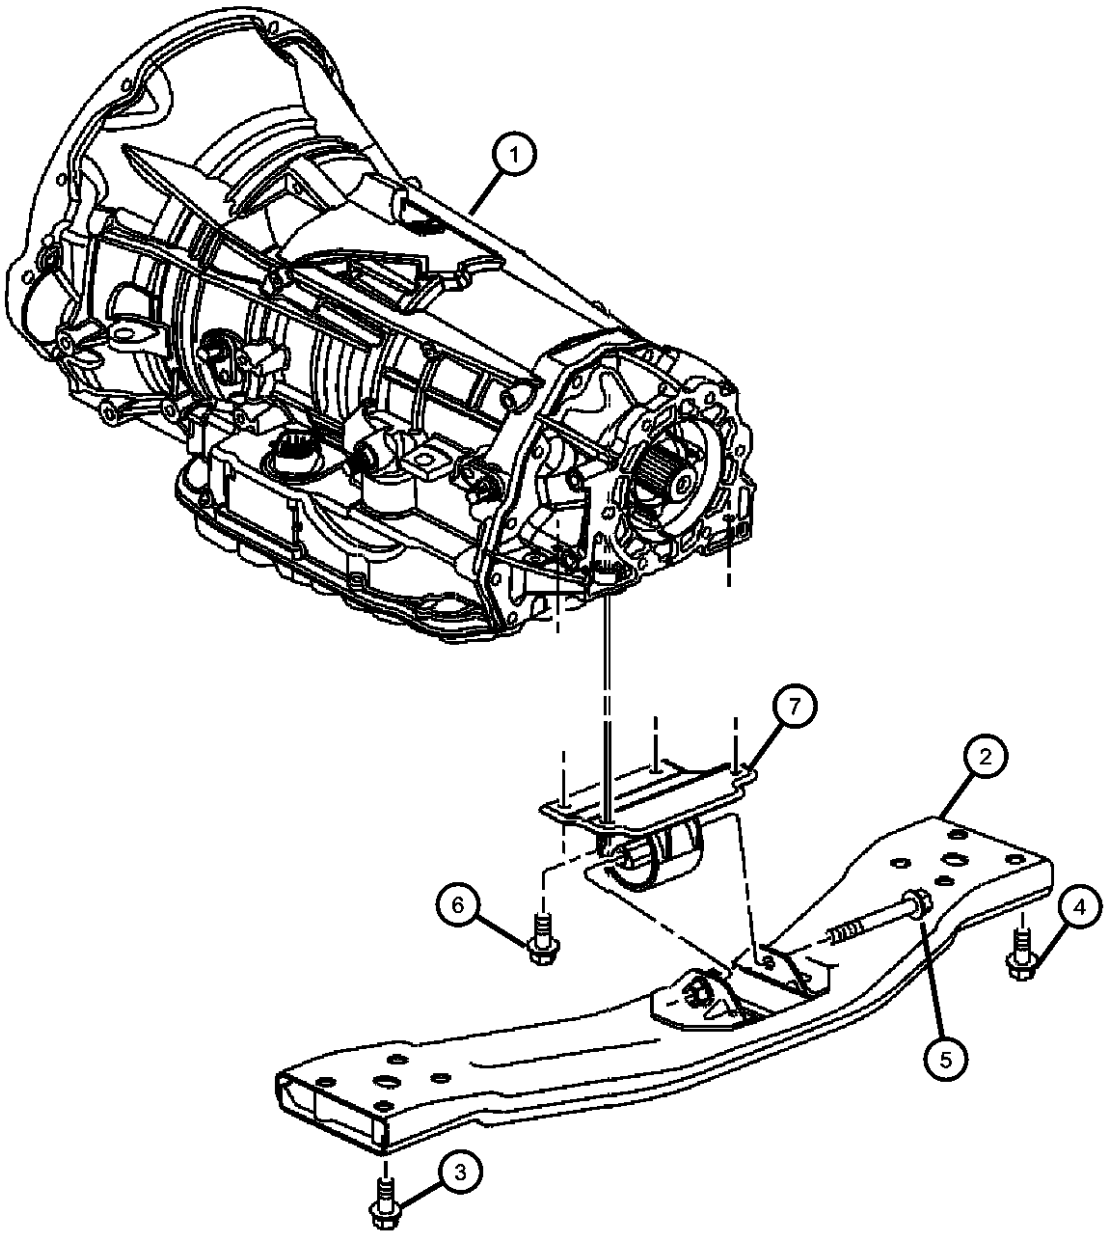


LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear, Transmission Mounting  
Figure 9-140

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DBB]=All Manual Transmissions  
[DDK]=5 Speed Heavy Duty Manual Transmission  
[EKG]=3.7L V-6 Engine  
[ED0]=All 2.2, 2.5, 2.4L 4 cyl. Engine

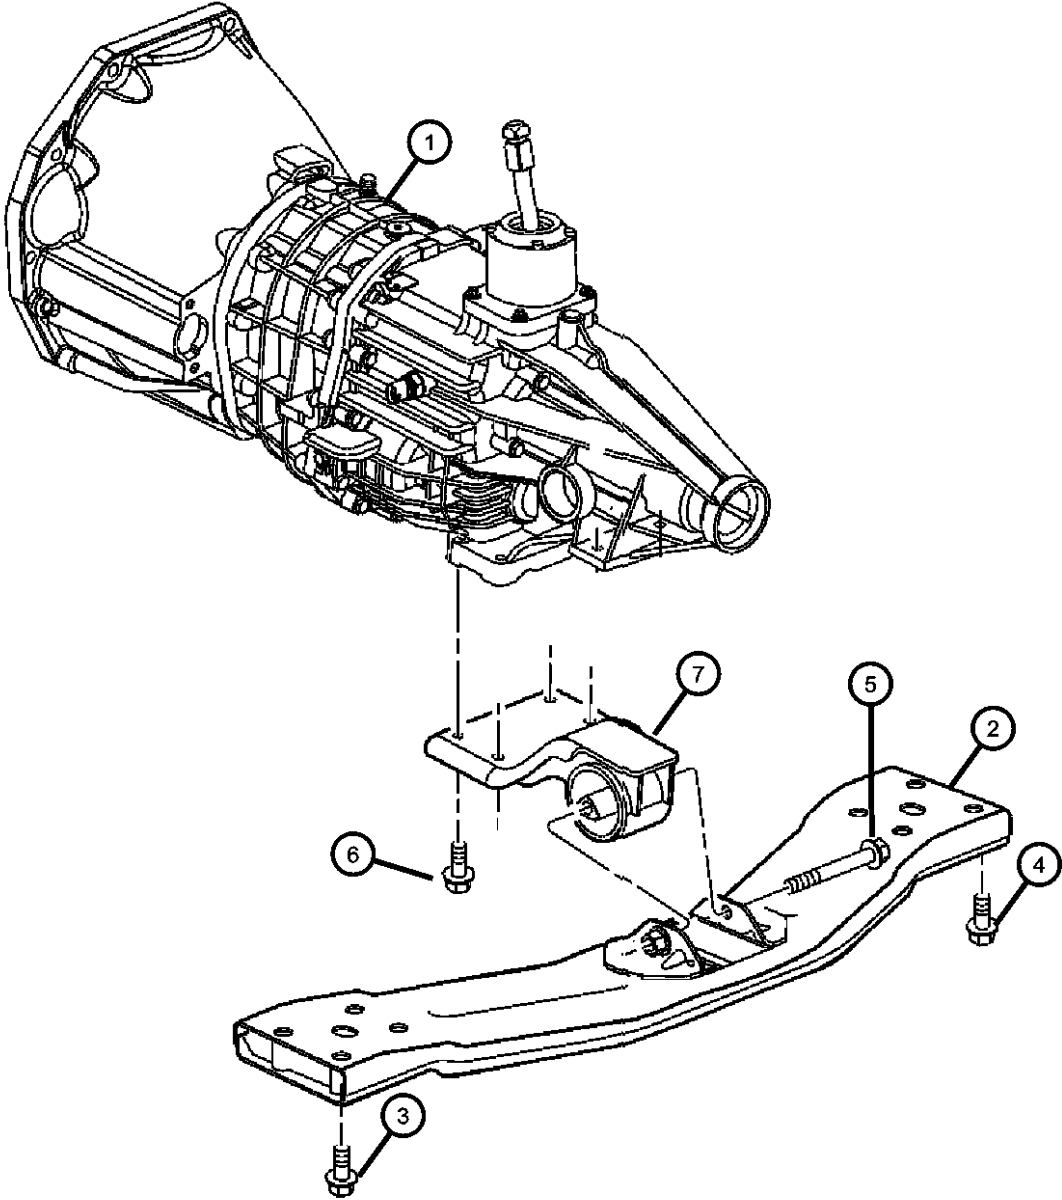

1	52059313AA	1							TRANSMISSION, 5 Speed, See Manual Transmission Group, (NOT SERVICED)
2	52128702AA	1				ED0, EKG			CROSSMEMBER, Transmission
3	06506000AA	4							SCREW AND WASHERInner
4	06505826AA	4							SCREW AND WASHEROuter
5	34202606	1							BOLT, Hex Head
6	06033358	4					DBB		SCREW AND WASHER, Hex Head Locking, .437-14x1.25
7	52059299AB	1				ED0	DDK		BRACKET AND INSULATOR, Transmission Support

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part

Rear, Transmission Mounting  
Figure 9-145

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DBB]=All Manual Transmissions  
[DDK]=5 Speed Heavy Duty Manual Transmission  
[EKG]=3.7L V-6 Engine  
[ED0]=All 2.2, 2.5, 2.4L 4 cyl. Engine


1	52059299AB	1							TRANSMISSION, 5 Speed, See Manual Transmission Group, (NOT SERVICED)
2	52128702AA	1				ED0, EKG			CROSSMEMBER, Transmission
3	06506000AA	4							SCREW AND WASHERInner
4	06505826AA	4							SCREW AND WASHEROuter
5	34202606	1							BOLT, Hex Head
6	06033358	4					DBB		SCREW AND WASHER, Hex Head Locking, .437-14x1.25
7	52059299AB	1				ED0	DDK		BRACKET AND INSULATOR, Transmission Support

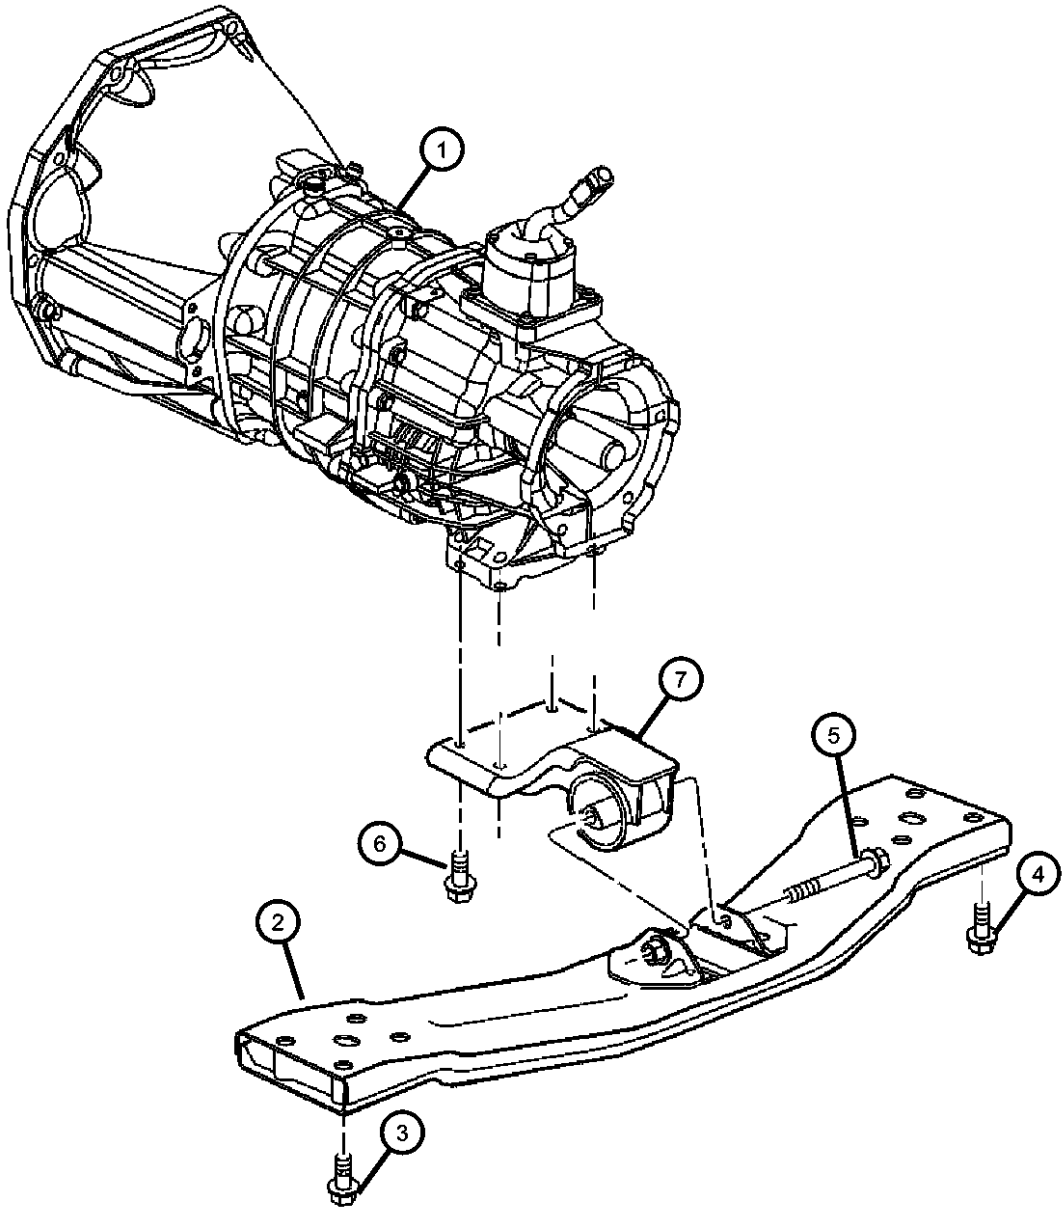

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear, Transmission Mounting  
Figure 9-150

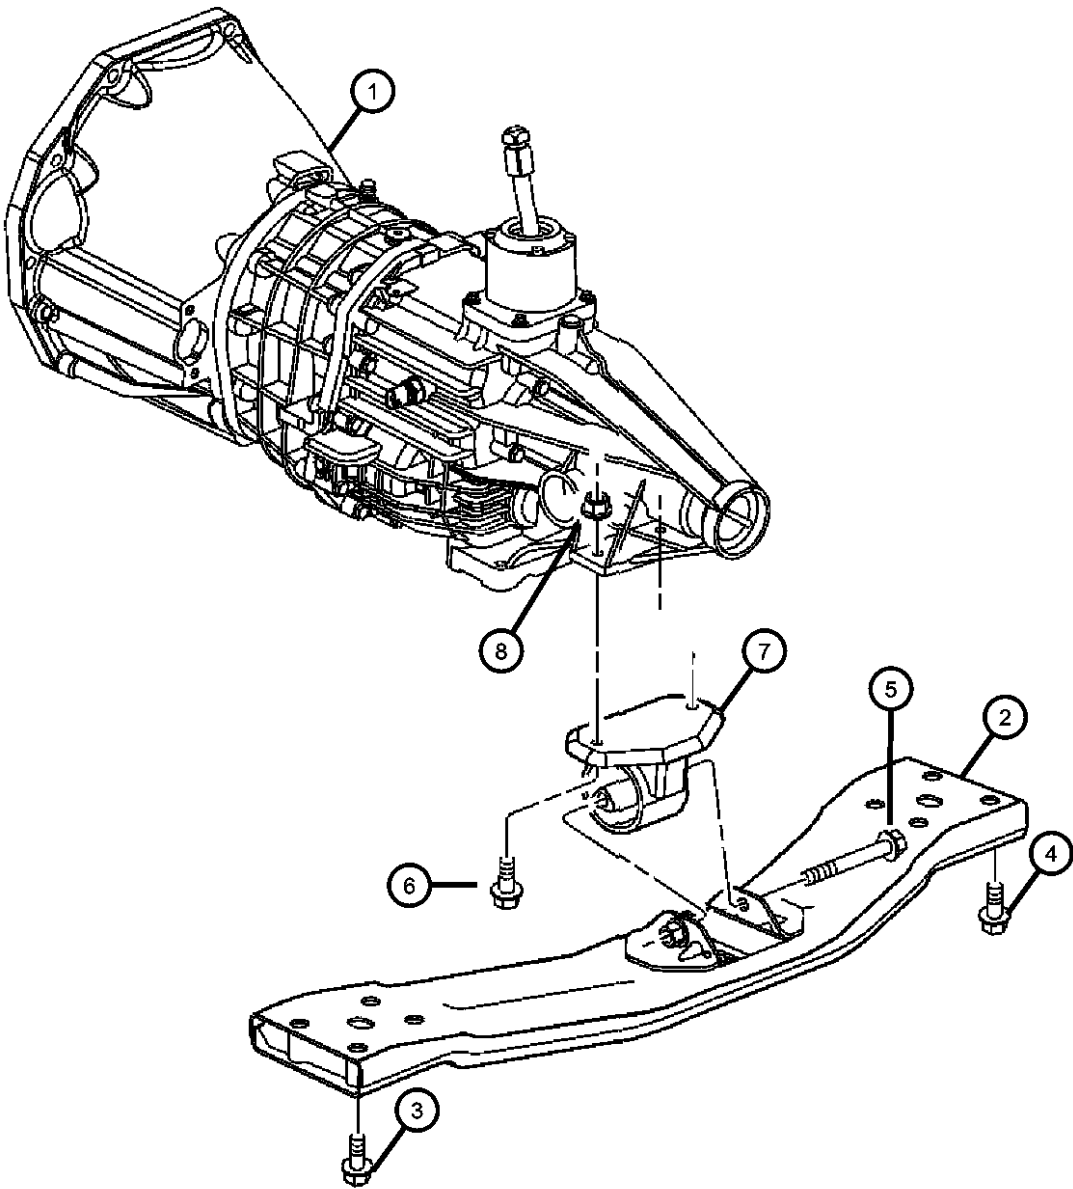

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DBB]=All Manual Transmissions  
[DG6]=4 Speed Automatic Transmission - [42RLE]  
[EKG]=3.7L V-6 Engine  
[ED0]=All 2.2, 2.5, 2.4L 4 Cyl. Engines  
[EK0]=All 3.7L V-6 Engines

1	52059299AB	1							TRANSMISSION, 5 Speed, See Manual Transmission Group, (NOT SERVICED)
2	52128702AA	1				ED0, EKG			CROSSMEMBER, Transmission
3	06506000AA	4							SCREW AND WASHERInner
4	06505826AA	4							SCREW AND WASHEROuter
5	34202606	1							BOLT, Hex Head
6	06502936	2	T			EK0	DBB, DG6		SCREW AND WASHER, Hex Head Pilot Point, M12x1.75x45
7	52059309AA	1	T			EK0	DBB		BRACKET AND INSULATOR, Transmission Support
8	06506633AA	2	T			EK0	DBB		NUT, Hex


LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

Rear, Transmission Mounting  
Figure 9-155

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DBB]=All Manual Transmissions  
[EKG]=3.7L V-6 Engine  
[ED0]=All 2.2, 2.5, 2.4L 4 Cyl. Engines  
[EK0]=All 3.7L V-6 Engines

1	06506633AA	2							TRANSMISSION, 5 Speed, See Manual Transmission Group, (NOT SERVICED)
2	52128702AA	1				ED0, EKG			CROSSMEMBER, Transmission
3	06506000AA	4							SCREW AND WASHERInboard
4	34202606	1							BOLT, Hex Head
5	06033358	4					DBB		SCREW AND WASHER, Hex Head Locking, .437-14x1.25
6	52059324AA	1	J, U			EK0	DBB		BRACKET AND INSULATOR, Transmission Support
7	06505826AA	4							SCREW AND WASHEROuter

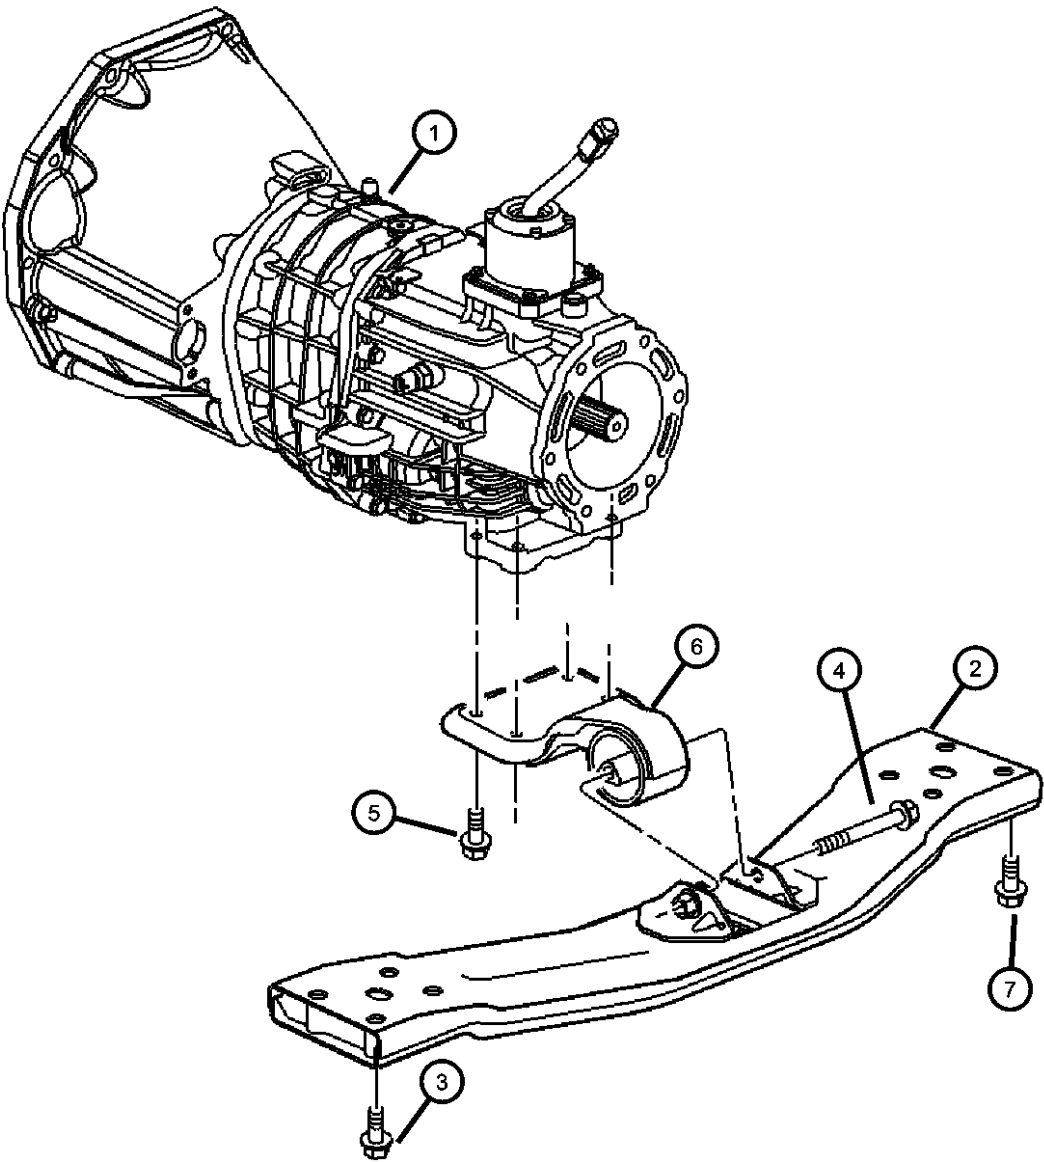

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part




Rear, Transmission Mounting  
Figure 9-160

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[EKG]=3.7L V-6 Engine  
[DG6]=5 Speed Automatic Transmission - [5-45RFE]  
[ED0]=All 2.2, 2.5, 2.4L 4 Cyl. Engines  
[EK0]=All 3.7L V-6 Engines

1	06505826AA	4							TRANSMISSION, See Automatic Transmission Group, (NOT SERVICED)
2	52128702AA	1				ED0, EKG			CROSSMEMBER, Transmission
3	06506000AA	4							SCREW AND WASHERInner
4	06505826AA	4							SCREW AND WASHEROuter
5	34202606	1							BOLT, Hex Head
6	06503699	2							SCREW AND WASHER, Hex Head, M10x1.5x28
7	52128651AA	1	T			EK0	DG6		BRACKET AND INSULATOR, Transmission Support

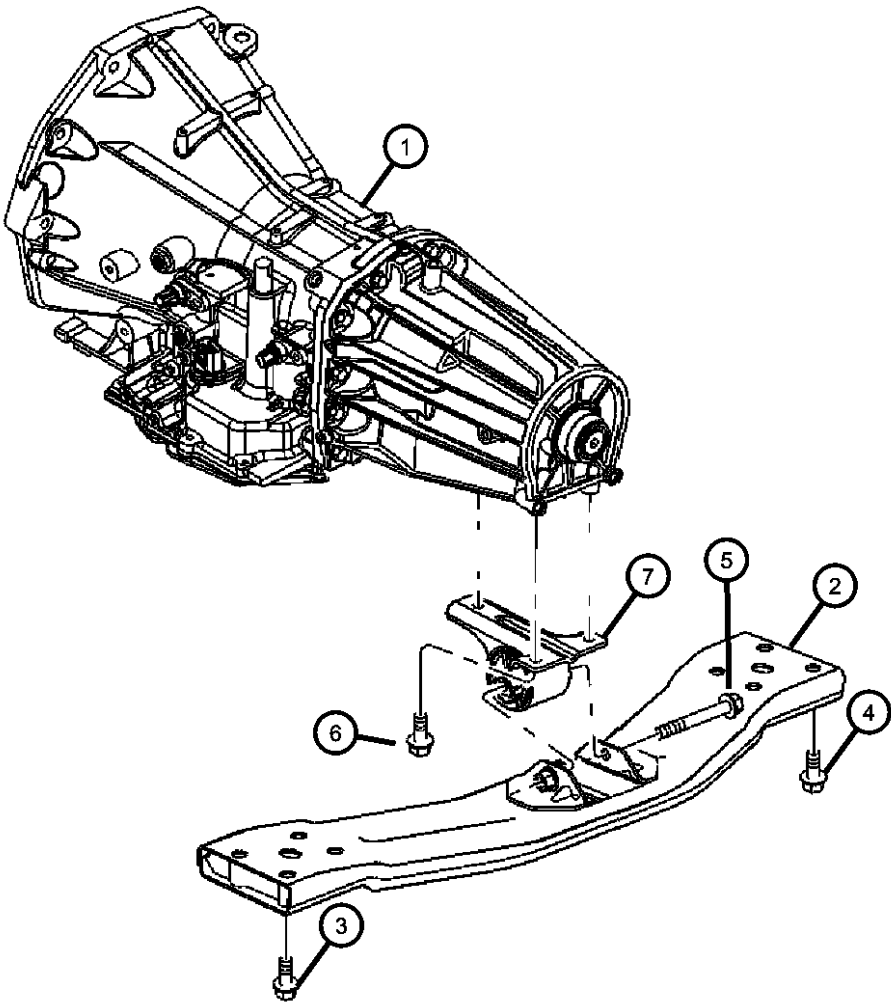


LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear, Transmission Mounting  
Figure 9-165

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[EKG]=3.7L V-6 Engine  
[DG6]=5 Speed Automatic Transmission - [5-45RFE]  
[ED0]=All 2.2, 2.5, 2.4L 4 Cyl. Engines  
[EK0]=All 3.7L V-6 Engines

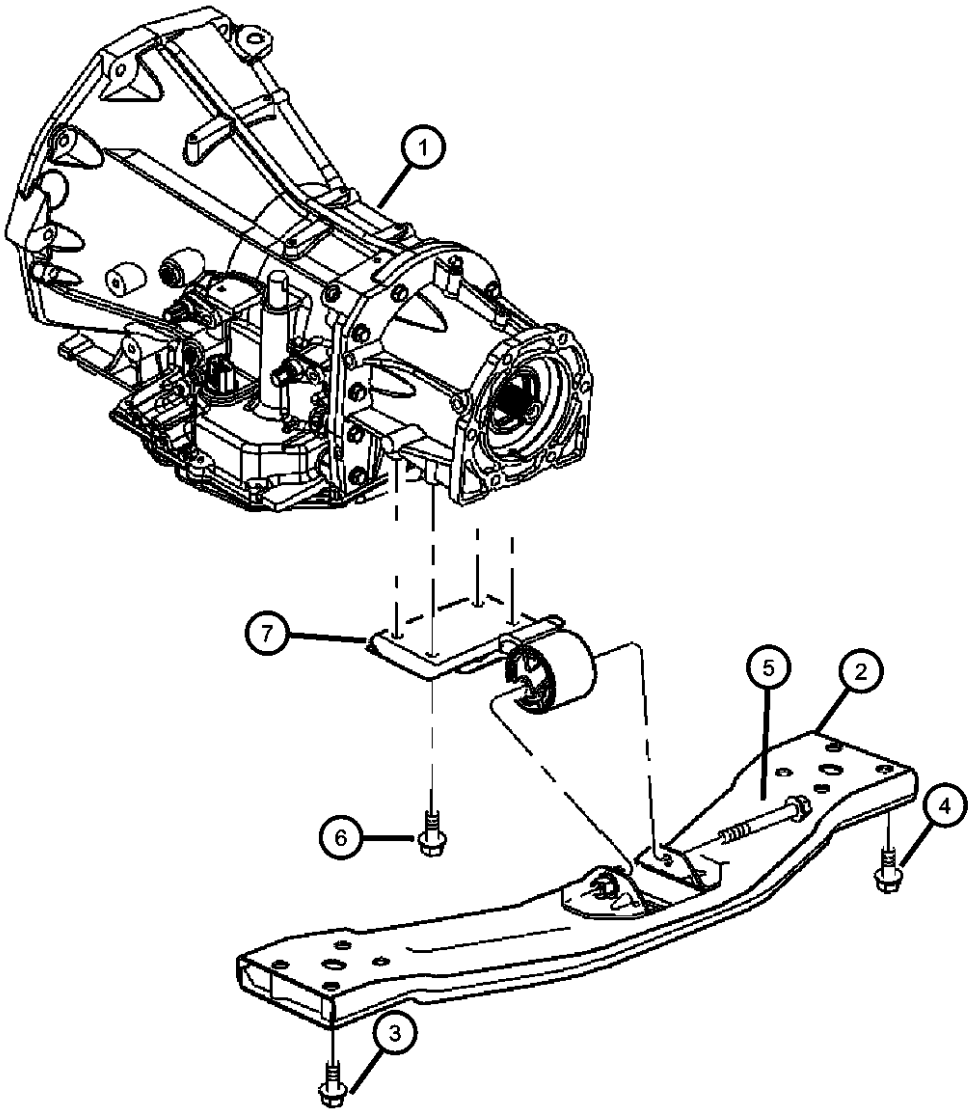


1	52128651AA	1							TRANSMISSION, See Automatic Transmission Group, (NOT SERVICED)
2	52128702AA	1				ED0, EKG			CROSSMEMBER, Transmission
3	06505826AA	4							SCREW AND WASHERInner
4	06505826AA	4							SCREW AND WASHEROuter
5	34202606	1							BOLT, Hex Head
6	06503699	4	J, U				DG6		SCREW AND WASHER, Hex Head, M10x1.5x28
7	52128654AA	1	J, U			EK0	DG6		BRACKET AND INSULATOR, Transmission Support

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions




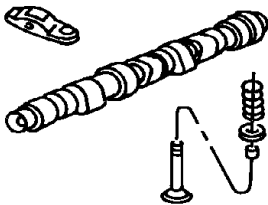
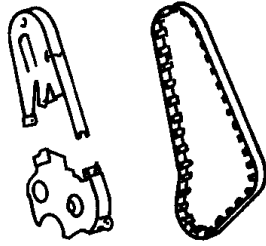
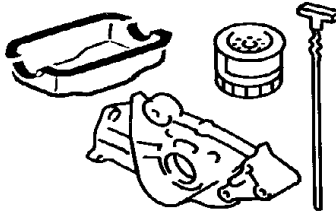
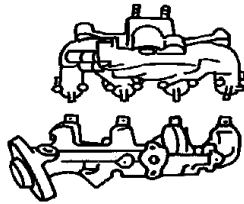
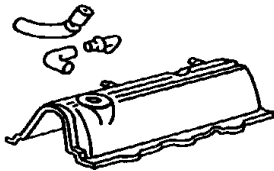
AR = use ase required - = Non illustrated part

Group - 2.4L  
Engine 2.4L Four Cylinder

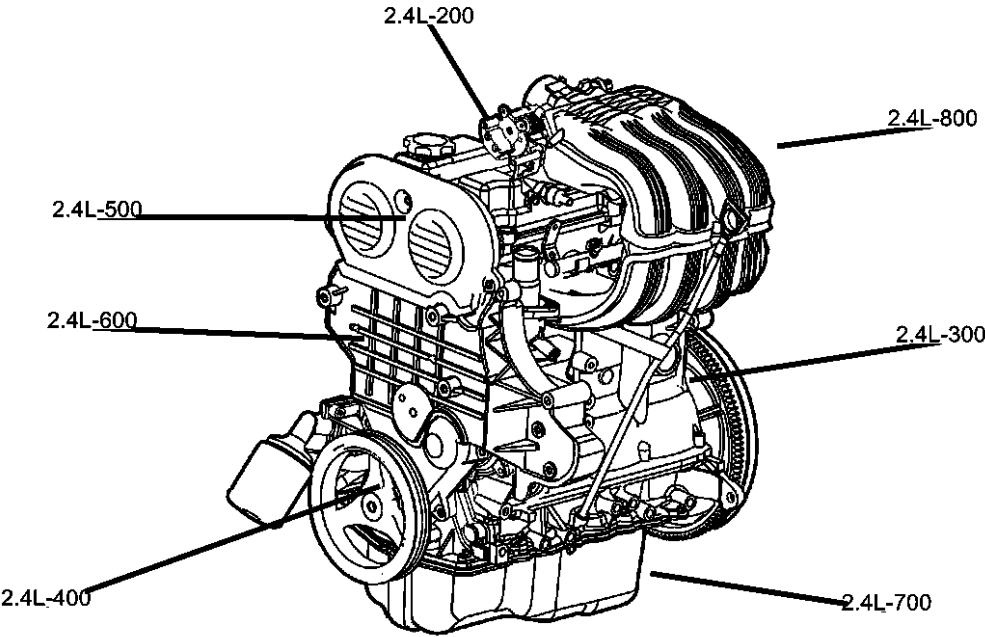


Group - 2.4L Engine 2.4L Four Cylinder

Illustration Title	Group-Fig. No.
<b>Cylinder Head</b> Cylinder Head, 2.4L [ED1].....	Fig. 2.4L - 210
<b>Cylinder Block</b> Cylinder Block, 2.4L [ED1].....	Fig. 2.4L - 310
<b>Crankshaft, Piston, and Drive Plate</b> Crankshaft, Pistons and Flywheel, 2.4L [ED1].....	Fig. 2.4L - 410
<b>Camshafts and Valves</b> Camshaft and Valves 2.4L [ED1] .....	Fig. 2.4L - 510
<b>Timing Belt and Cover</b> Timing Belt and Cover, 2.4L [ED1].....	Fig. 2.4L - 610
Balance Shafts, 2.4L [ED1].....	Fig. 2.4L - 620
<b>Engine Oiling</b> Engine Oiling, 2.4L [ED1].....	Fig. 2.4L - 710
<b>Manifolds</b> Intake and Exhaust Manifolds, 2.4L [ED1] .....	Fig. 2.4L - 810
<b>Crankcase Ventilation</b> Crankcase Ventilation , 2.4L [ED1] .....	Fig. 2.4L - 910
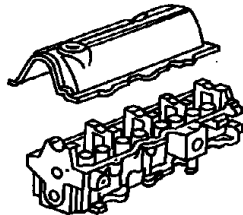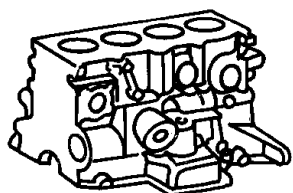
<b>2.4L-200</b> Cylinder Head 	<b>2.4L-300</b> Cylinder Block 	<b>2.4L-400</b> Crankshaft, Piston, and Drive Plate 	<b>2.4L-500</b> Camshafts and Valves 
<b>2.4L-600</b> Timing Belt and Cover 	<b>2.4L-700</b> Engine Oiling 	<b>2.4L-800</b> Manifolds 	<b>2.4L-900</b> Crankcase Ventilation 

Cylinder Head, 2.4L [ED1]  
Figure 2.4L-210

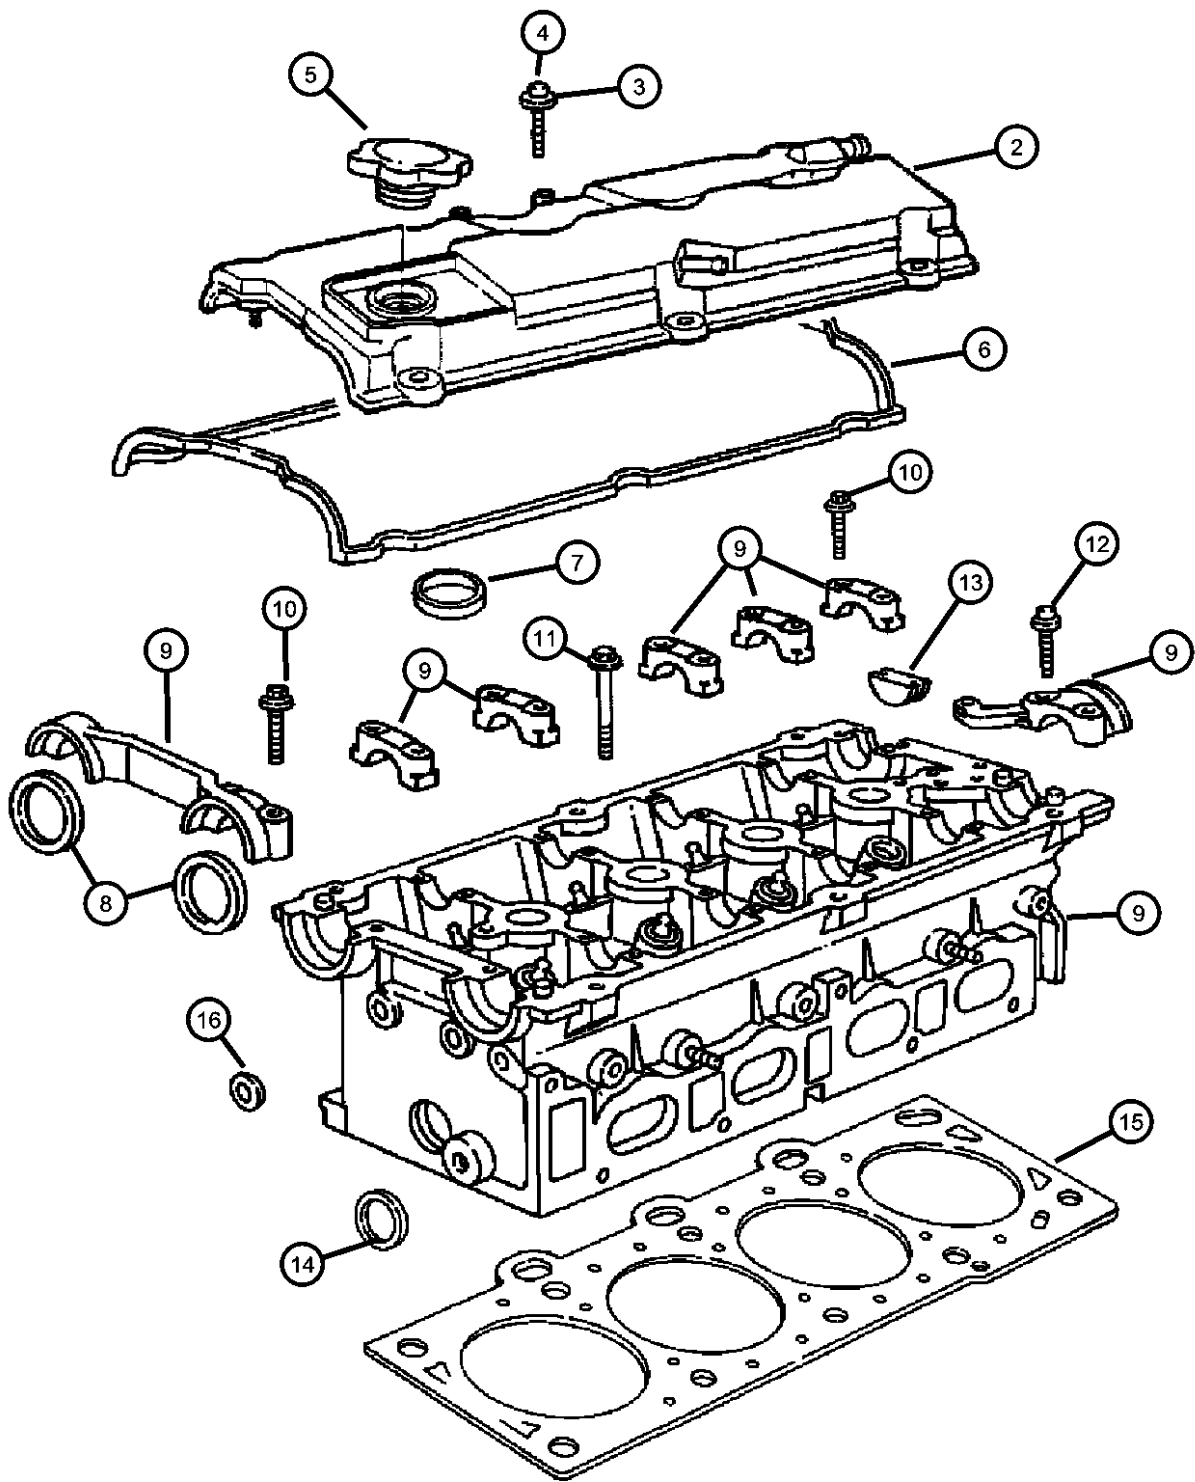


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes [ED0] = All 2.2L,2.5L,2.4L, 4 Cylinder Gas Engines									
-1	05072474AC	1				ED0			GASKET PACKAGE, Engine Upper
2	53010493AD	1				ED0			COVER, Cylinder Head
3	53010493AD	1							SCREW, (NOT SERVICED)
4	04777997AA	3				ED0			ISOLATOR, Cylinder Head Cover, Grommet And Bolt
5	04648831AA	1				ED0			CAP, Oil Filler
6	04777478	1				ED0			GASKET, Valve Cover
7	04777477	4				ED0			GASKET, Spark Plug Well
8	04777086	2				ED0			SEAL, CamshaftFront
9	04667088AG	1				ED0			HEAD, Cylinder
10	06100918	18				ED0			BOLT, Hex Flange Head, M6x1.00x35
11	06504033	10				ED0			BOLT, Cylinder Head
12	06101527	6				ED0			SCREW, Hex Flange Head, M8x1.25x40
13	04667731	1				ED0			PLUG, Camshaft
14	04556020	2				ED0			PLUG, Core, 1.25 Diameter
15	04884443AB	1				ED0			GASKET, Cylinder Head
16	06036543AA	6				ED0			PLUG, Pipe

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				ENO = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EKO = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Cylinder Block, 2.4L [ED1]  
Figure 2.4L-310

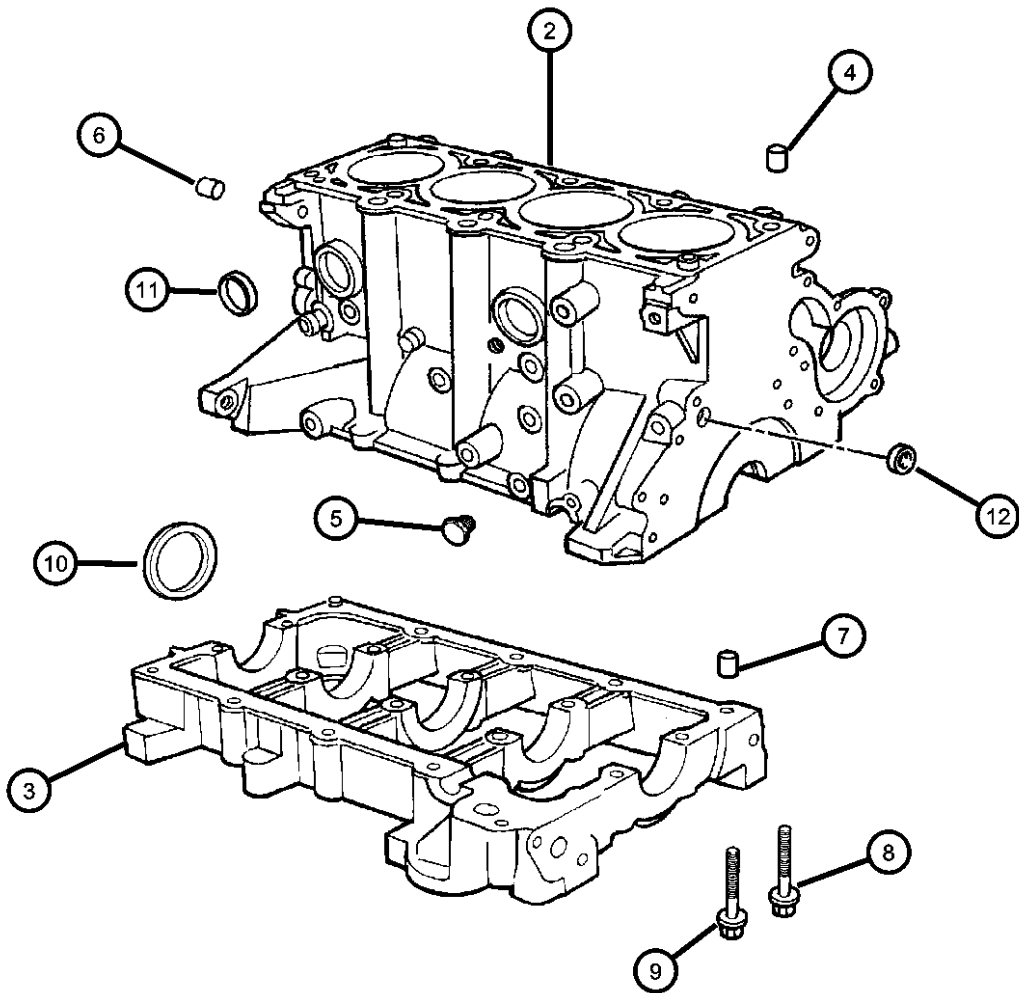

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note; Sales Codes  
[DBB]= All Manual Transmissions  
[ED0]= ALL 2.2L,2.5L,2.4L, 4 Cylinder Gas Engines

-1	05072475AA	1				ED0			GASKET PACKAGE, Engine Lower
2	05019344AB	1				ED0			BLOCK, Short
	04761838AB								Mopar 5W-30 Engine Oil Quart
	04761844AC								Mopar 5W-30 Engine Oil Gallon
3	05019344AB	1							BEDPLATE, Serviced With Short Block Only, (NOT SERVICED)
4	04448856	2				ED0			DOWEL, Block To Cylinder Head
5	06036543AA	6				ED0			PLUG, Pipe
6	05240849	2				ED0			DOWEL
7	04694106	2				ED0			DOWEL, Engine Block To Bedplate
8	06503387	10				ED0			BOLT, Main Bearing Cap
9	06504257	9				ED0			BOLT, Hex Head, M8x1.25x70
10	04621939AB	1				ED0			SEAL, Rear Main Crankshaft
11	06034804	4				ED0			PLUG, Core, 1.39 DiameterCylinder Block
12	04556018AB	1				ED0			PLUG, Cylinder Block Oil Hole
-13	53013486AA	2				ED0			BRACKET, Engine Lift
-14	06034331	1				ED0			PLUG, Hex Socket, 3/8-18NPTx.475
-15	06507155AA	1				ED0			STUD, Double Ended

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Crankshaft, Pistons and Flywheel, 2.4L [ED1]  
Figure 2.4L-410

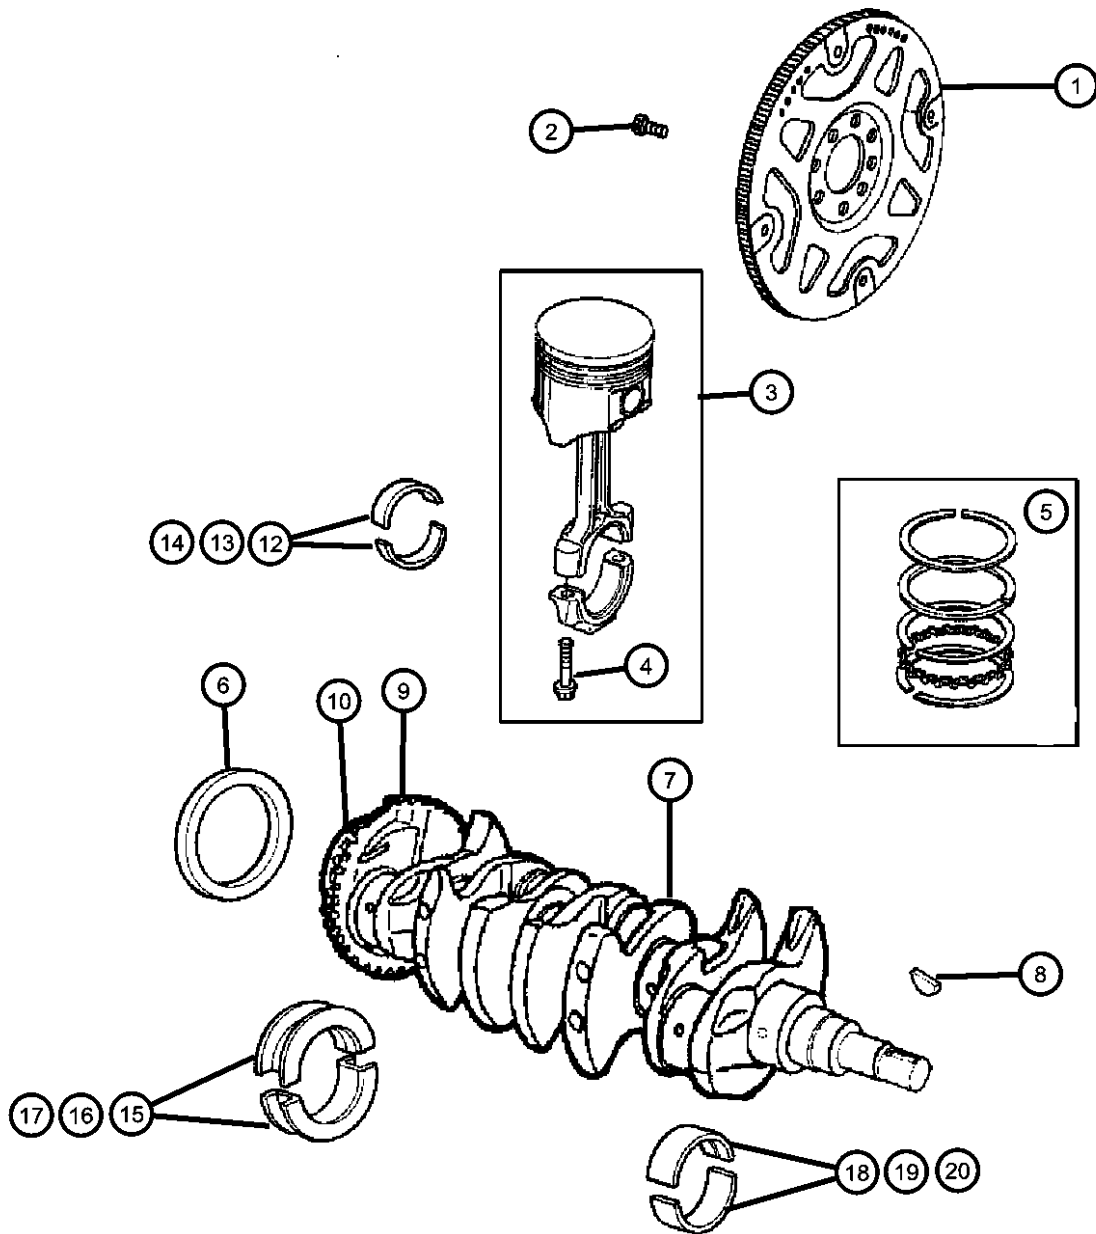

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[DBB] = All Manual Transmissions  
[ED0]= All 2.2L,2.5L, 2.4L, 4 Cylinder Gas Engines

1	52104578AB	1				ED0	DBB		FLYWHEEL
2	06507240AA	8				ED0	DBB		SCREW
3	05066565AB	4				ED0			PISTON PIN AND ROD
4	06503116	8				ED0			BOLT, Connecting Rod
5	05073524AA	1				ED0			PISTON RING SET, COMPLETE ENGINE, STD.
6	04621939AB	1				ED0			SEAL, Rear Main Crankshaft
7	04781643AA	1				ED0			CRANKSHAFT
8	06035473	1				ED0			KEY, Crankshaft Sprocket
9	05114417AA	1				ED0			RING PACKAGE, Crankshaft Target
10	52104337AA	1				ED0	DBB		BEARING, Pilot
-11	06506656AA	4				ED0			SCREW
12	05093448AB	8				ED0			BEARING KIT, Connecting Rod, Standard
13	05093449AA	8				ED0			BEARING KIT, Connecting Rod, .025 mm U/S
14	05012590AA	AR				ED0			BEARING KIT, Connecting Rod, .25 mm U/S
15	05012585AB	1				ED0			BEARING KIT, Crankshaft Thrust, Std
16	05012586AB	2				ED0			BEARING KIT, Crankshaft Thrust, .025mm Undersize
17	05012587AB	2				ED0			BEARING KIT, Crankshaft Thrust, .25mm Undersize
18	05012582AA	4				ED0			BEARING KIT, Crankshaft, Standard
19	05012583AA	4				ED0			BEARING KIT, Crankshaft, .025mm Undersize
20	05012584AA	4				ED0			BEARING KIT, Crankshaft, .25mm Undersize

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Camshaft and Valves 2.4L [ED1]  
Figure 2.4L-510

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note; Sales Codes  
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines

1	04781681AA	1				ED0			CAMSHAFT, Intake
2	04667969AB	8				ED0			VALVE, Intake, Standard
3	04667970AB	8				ED0			VALVE, Intake, .015" O/S
4	04781679AA	1				ED0			CAMSHAFT, Exhaust
5	04777898AA	8				ED0			VALVE, Exhaust, Standard
6	04777899AA	8				ED0			VALVE, Exhaust, .015" O/S
7	53010549AB	1				ED0			RING, Tone
8	04884042AA	16				ED0			ROCKER ARM, Valve Roller
9	04777976AA	16				ED0			ADJUSTER, Valve Lash
10	04777050AC	32				ED0			LOCK, Valve Spring Retainer
11	04648682AB	16				ED0			RETAINER, Valve Spring
12	04648907AA	16				ED0			SPRING, Valve
13	04648619	16				ED0			SEAL, Valve Guide
14	04648619	16							GUIDE, Intake/Exhaust Valve, Standard Size, (NOT SERVICED)
15	04667411	1				ED0			GUIDE, Intake/Exhaust Valve, 7mm Oversize
16	04777086	2				ED0			SEAL, Camshaft
17	06100997	1				ED0			PIN, Dowel, Exhaust Cam
18									PLUG, Camshaft
	04667731	1				ED0			Cylinder Head
	53010521AA	1				ED0			

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Timing Belt and Cover, 2.4L [ED1]  
Figure 2.4L-610

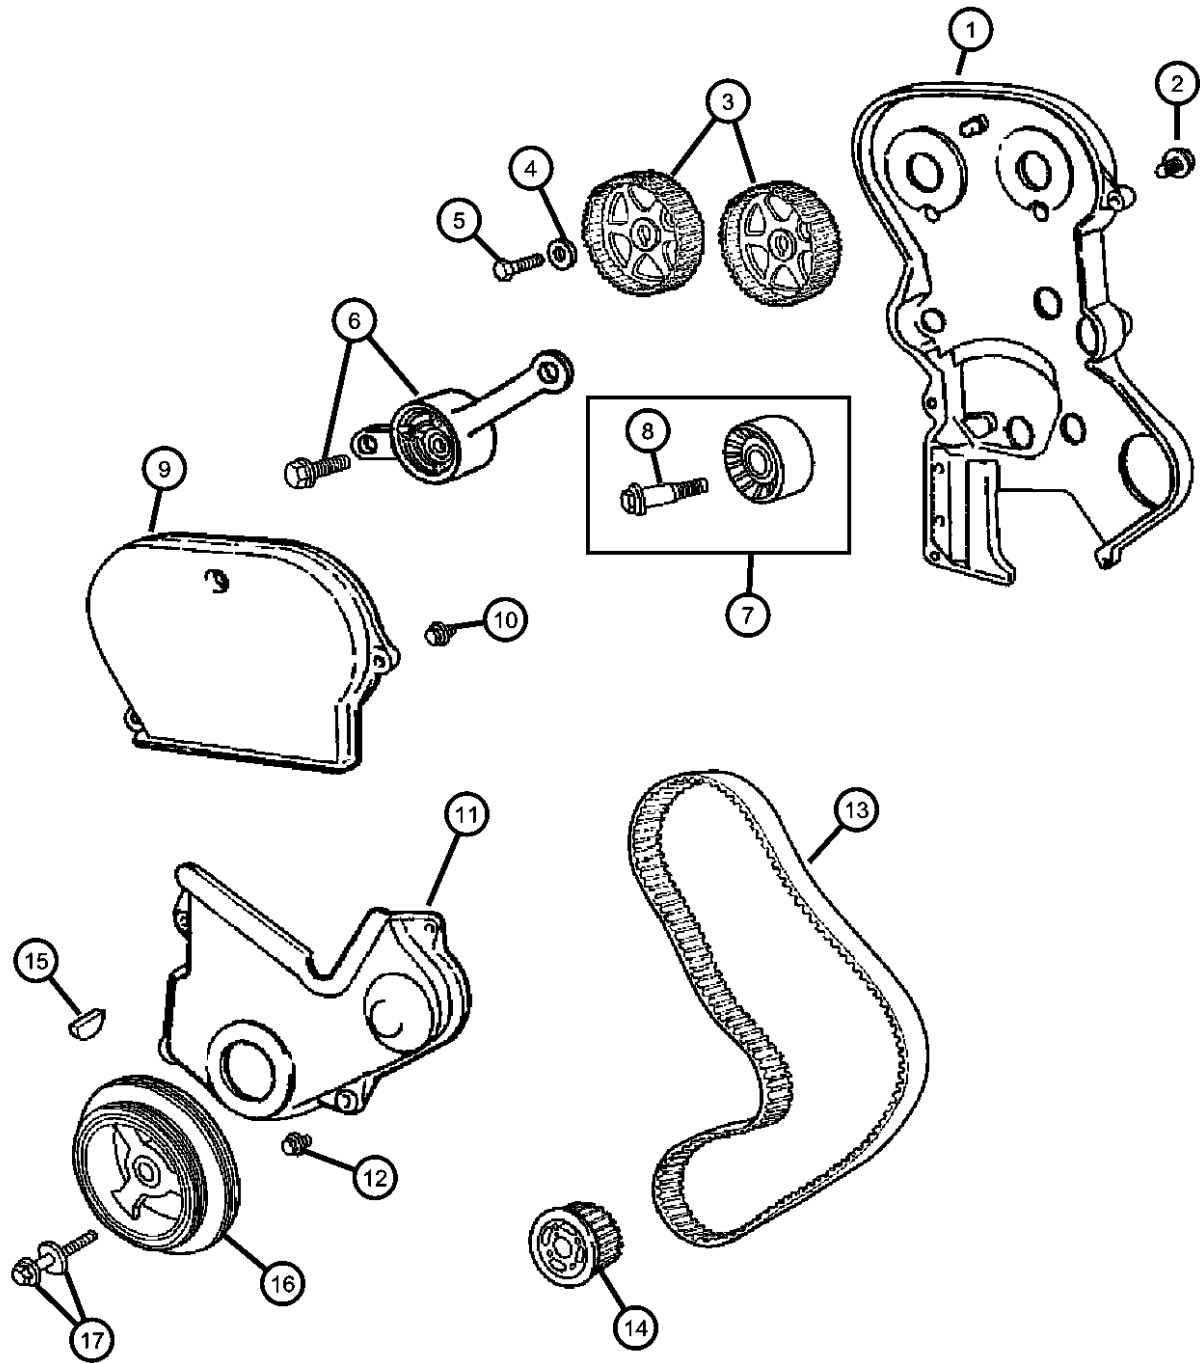

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines

1	53010482AC	1				ED0			COVER, Timing Belt, Inner
2	06502926	3				ED0			BOLT, Hex Flange Head, M6x1.0x20, Inner Cover Attach
3	04667609	2				ED0			GEAR, Camshaft
4	06503438	2				ED0			WASHER, Flared, 13x35.00x4.70
5	06501405	2				ED0			BOLT, Hex Head, M12x1.50x52
6	04781570AB	1				ED0			TENSIONER, Belt
7	04781569AB	1				ED0			PULLEY, Idler
8	06507550AA	1				ED0			BOLT, Idler Pulley attaching
9	53010483AB	1				ED0			COVER, Timing Belt, Outer
10	06101952	5				ED0			SCREW, Hex Flange Head Tapping, M4.8 x 1.59 x 25.00
11	53010484AB	1				ED0			COVER, Timing Belt, Outer, Lower
12	06101331	1				ED0			BOLT, M6x1.00x20
13	04621844	1				ED0			BELT, Timing
	TB000265								Mopar V-Line Alternative Part
14	04648939AA	1				ED0			GEAR, Crankshaft
15	06035473	1				ED0			KEY, Crankshaft Sprocket
16	53010477AA	1				ED0			DAMPER, Crankshaft
17	06503553	1				ED0			BOLT, Hex Flange Head, M12x1.75x87.50

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part




Balance Shafts, 2.4L [ED1]  
Figure 2.4L-620

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines									
1	04621517	1				ED0			SHAFT, Balance, Driver
2	06500150	2				ED0			KEY, Crankshaft Sprocket
3	04323043	1				ED0			COVER, Balance Shaft Carrier
4	06501714	4				ED0			SCREW AND WASHER, Hex Head, M6x1x18
5	04621518	1				ED0			SHAFT, Balance, Driver
6	04621519AC	1				ED0			CARRIER, Balance Shaft
7	05203466	2				ED0			PIN, DowelCarrier Attaching
8	05203466	2							BEARING, Balance Shaft, Seived With Carrier, Item 6, (NOT SERVICED)
9	06504878AA	2				ED0			BOLT
10	06503389	2				ED0			BOLT, Hex Flange Head, M10x1.50x108
11	04621952	1				ED0			GEAR, Balance Shaft Driver
12	06501404	2				ED0			SCREW AND WASHER, Hex Head, M8x1.25x25
13	04621951	1				ED0			GEAR, Balance Shaft Driven
14	04323039	1				ED0			COVER, Balance Shaft Gear
15	06505188AA	1				ED0			STUD, M6x1.00x40.00
16	06100047	1				ED0			NUT AND WASHER, Hex Nut-Coned Washer, M6 x 1.00
17	04621541	1				ED0			GEAR, Crankshaft
18	04621996	1				ED0			CHAIN, Balance Shaft
19	06100271	2				ED0			BOLT AND CONED WASHER, Hex Head, M6x45x12.5
20	04323041AD	1				ED0			TROUGH, Carrier Cover
21	04483485	1				ED0			GEAR, Balance Shaft
22	06100279	1				ED0			SCREW AND WASHER, Hex Head, M6x1x35
23	06508008AA	1				ED0			SCREW, Hex Flange Head
24	04884473AA	1				ED0			TENSIONER, Chain

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Engine Oiling, 2.4L [ED1]  
Figure 2.4L-710

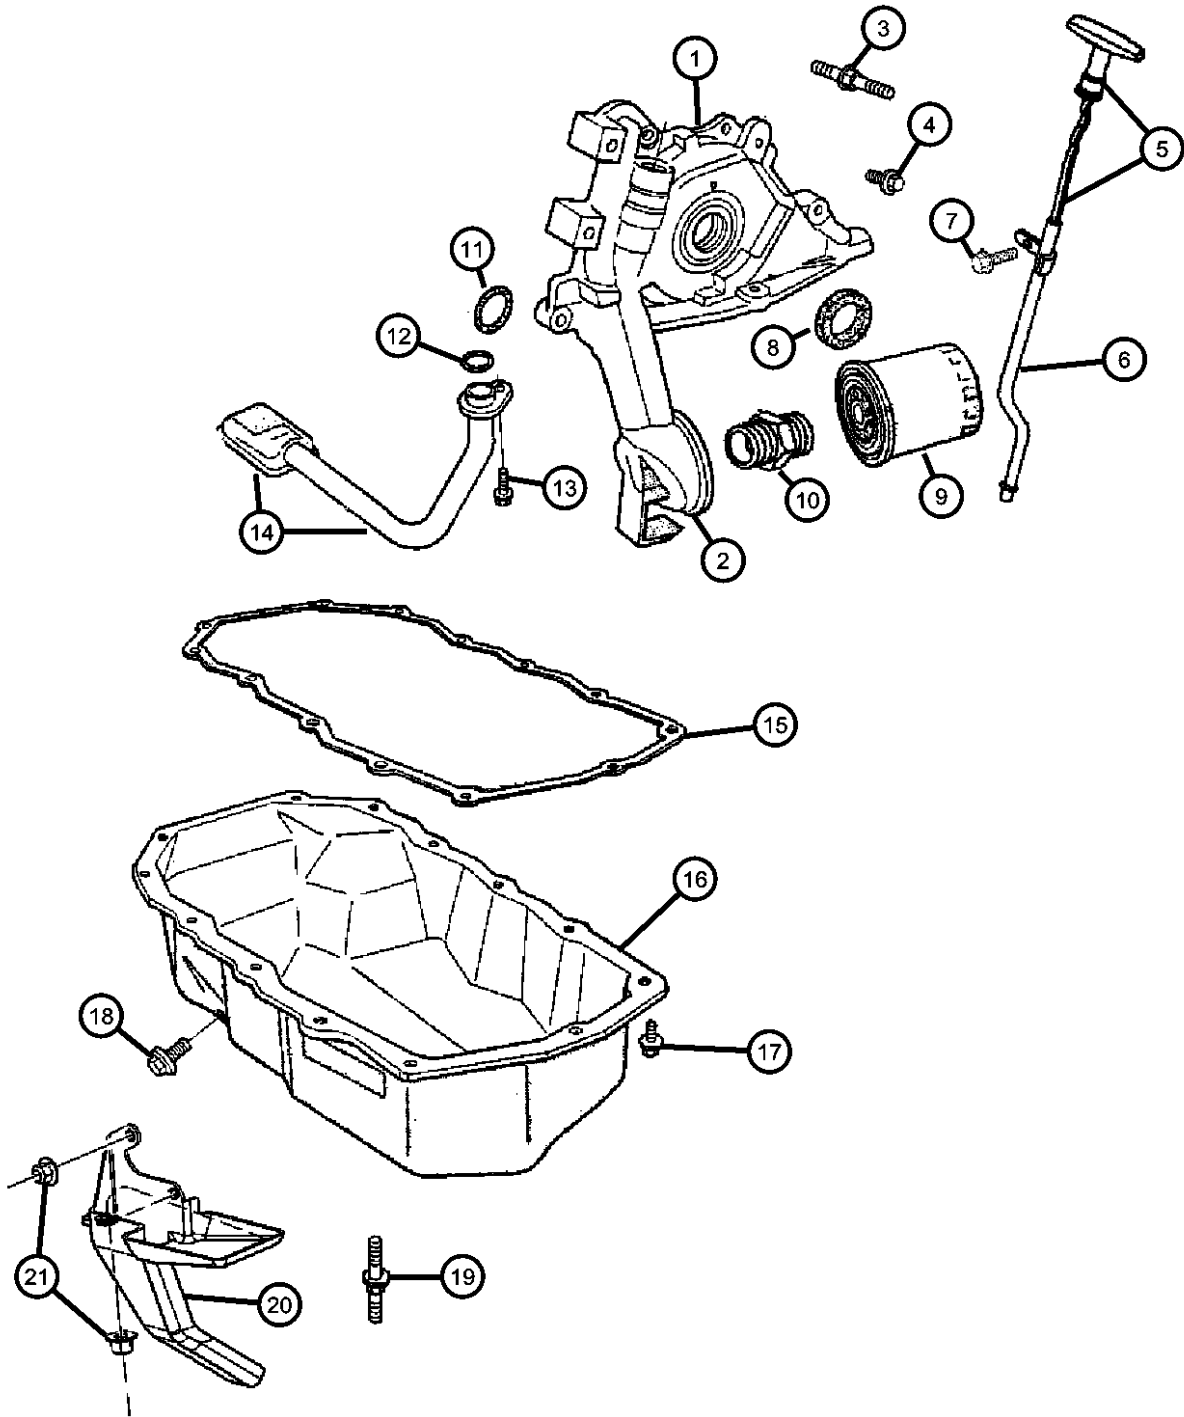


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines									
1	53010487AA	1				ED0			PUMP, Engine Oil
2	53010534AA	1				ED0			ADAPTER, Oil Filter
3	06507335AA	3				ED0			STUD, Double Ended, Oil Pump to Adapter
4	06100296	3				ED0			BOLT, Hex Head
5	53010494AC	1				ED0			INDICATOR, Engine Oil Level
6	53010476AB	1				ED0			TUBE, Oil Filler
7	06505788AA	1				ED0			STUD
8	04667198	1				ED0			SEAL, Front Main Crankshaft
9	04105409	1				ED0			FILTER, Engine Oil
10	04694119	1				ED0			CONNECTOR, Oil Filter Adapter
11	04483444AB	3				ED0			O RING, Front Cover Oil Inlet
12	06032920	1				ED0			SEAL, Oil Pick Up Tube
13	06500070	1				ED0			SCREW AND WASHER, Hex Head, M8x1.25x25
14	53010488AA	1				ED0			TUBE, Oil Pickup
15	04621579	1				ED0			GASKET, Oil Pan
16	53010491AA	1				ED0			PAN, Engine Oil
17	06503969	11				ED0			BOLT, Hex Flange Head, M6x1.00x17
18	06035417	1				ED0			PLUG, Oil Drain
19	06502647	2				ED0			STUD, M6x1.00x44, Oil Pan mounting
20	53013550AA	1	J, T			ED0			GUARD, Splash
21	06505316AA	3	J, T			ED0			NUT

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EKO = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Intake and Exhaust Manifolds, 2.4L [ED1]  
Figure 2.4L-810

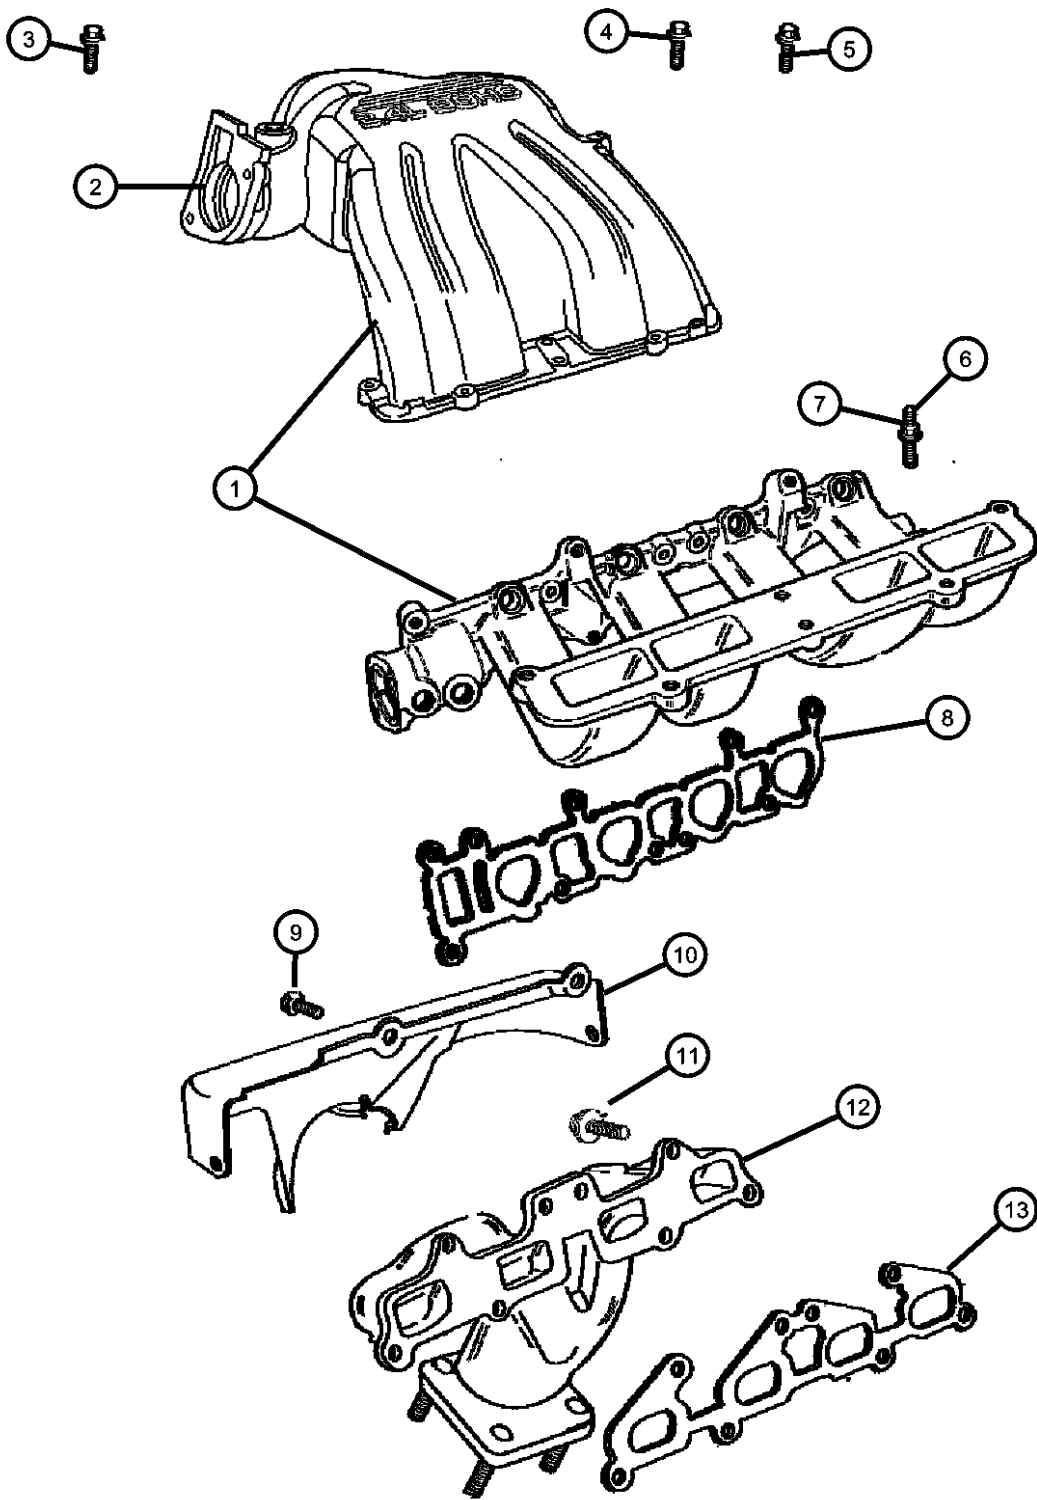


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines									
1	04884485AA	1				ED0			MANIFOLD, Intake
2	04884486AA	1				ED0			GASKET, Throttle Body To Intake
3	06101451	3				ED0			SCREW AND WASHER, Hex Head, M6x1x25
4	06102192AA	1				ED0			SCREW, Intake Manifold
5	06101506	2				ED0			BOLT AND CONED WASHER, M8x1.25x18
6	06506770AA	5				ED0			SCREW
7	06506770AA	5							NUT, Lock, (NOT REQUIRED)
8	53013534AA	4				ED0			GASKET, Intake Manifold
9	06506663AA	3				ED0			SCREW, Hex Flange Head, M8x1.25x11
10	53013264AA	1				ED0			SHIELD, Exhaust Manifold
11	06503131	10				ED0			BOLT, Hex Flange Head, M8x1.25x30
12	53013263AB	1				ED0			MANIFOLD, Exhaust
13	04781255AA	1				ED0			GASKET, Exhaust Manifold

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Crankcase Ventilation , 2.4L [ED1]  
Figure 2.4L-910


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines									
1	53013093AA	1				ED0			TUBE, Crankcase Vent To Air Cleaner
-2	04777240AD	1				ED0			VALVE, PCV, Threaded Style
-3	53013231AA	1				ED0			HARNESS, CCV to Intake Manifold

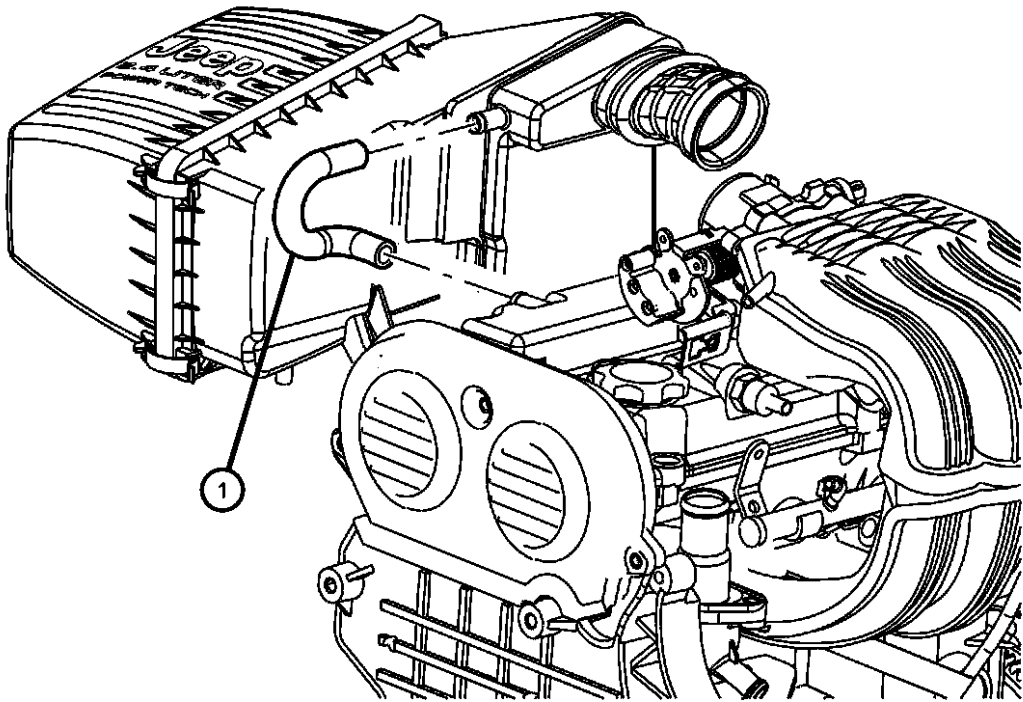

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

# Group - 3.7L

## Engine 3.7L Six Cylinder

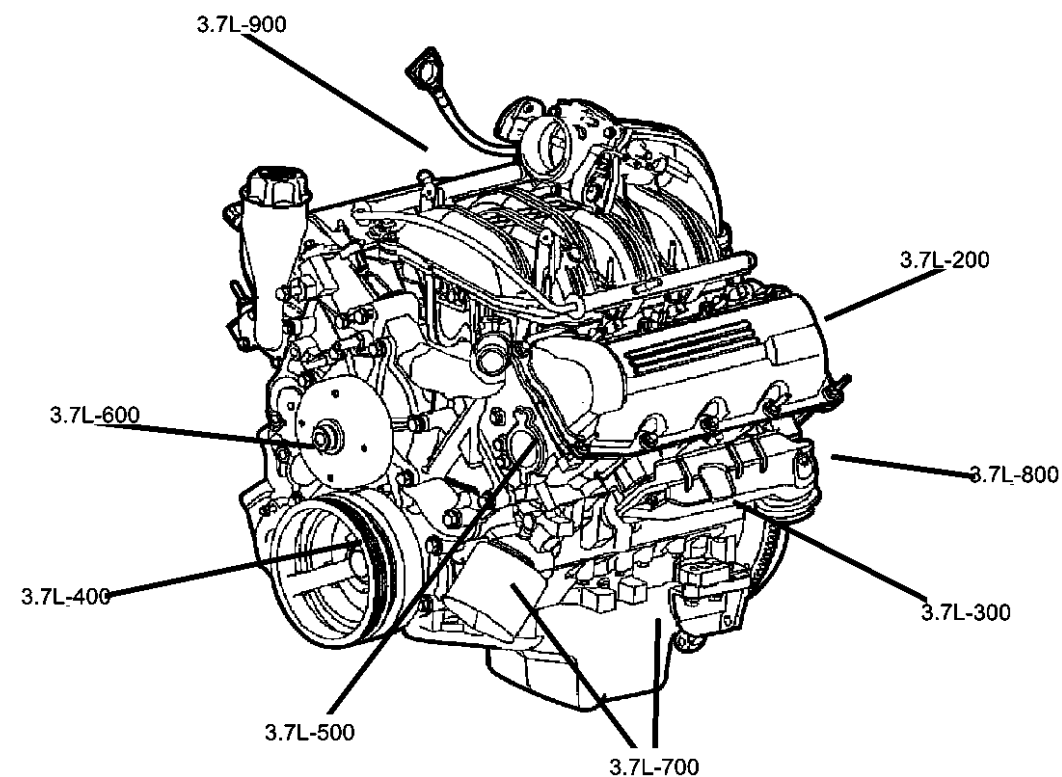

<b>3.7L-200</b> Cylinder Head	<b>3.7L-300</b> Cylinder Block	<b>3.7L-400</b> Crankshaft, Piston and Torque Converter	<b>3.7L-500</b> Camshafts & Valves
<b>3.7L-600</b> Timing Belt and Cover	<b>3.7L-700</b> Engine Oiling	<b>3.7L-800</b> Manifolds	<b>3.7L-900</b> Crankcase Ventilation

Group - 3.7L Engine 3.7L Six Cylinder

Illustration Title	Group-Fig. No.
<b>Cylinder Head</b>	
Cylinder Head 3.7L [EKG] .....	Fig. 3.7L - 210
<b>Cylinder Block</b>	
Cylinder Block, 3.7L [EKG] .....	Fig. 3.7L - 310
<b>Crankshaft, Piston and Torque Converter</b>	
Crankshaft, Pistons and Flywheel, 3.7L [EKG] .....	Fig. 3.7L - 410
<b>Camshafts &amp; Valves</b>	
Camshaft And Valve, 3.7L [EKG] .....	Fig. 3.7L - 510
<b>Timing Belt and Cover</b>	
Timing Cover, 3.7L [EKG] .....	Fig. 3.7L - 610
Timing Chain and Guides, 3.7L [EKG].....	Fig. 3.7L - 620
<b>Engine Oiling</b>	
Engine Oiling, 3.7L [EKG] .....	Fig. 3.7L - 710
<b>Manifolds</b>	
Manifolds, Intake and Exhaust, 3.7L [EKG] .....	Fig. 3.7L - 810
<b>Crankcase Ventilation</b>	
Crankcase Ventilation, 3.7L [EKG].....	Fig. 3.7L - 910

Cylinder Head 3.7L [EKG]  
Figure 3.7L-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


NOTES: Upper Gasket Package Contains: Cylinder Head and Cylinder Head Cover Gaskets, Intake and Exhaust Manifold Gaskets, Throttle Body Sales Codes  
[EK0] = All 3.7L 6 Cylinder Gas Engines

-1									GASKET PACKAGE, Engine Upper, See Notes
	05135792AA	1				EK0	DBB		
		1				EK0	DG0		
2	53020987AB	1				EK0			HEAD, Cylinder, Left
3	53020988AB	1				EK0			HEAD, Cylinder, Right
4	06506785AA	8				EK0			SCREW AND WASHER, Hex Head
5	06505528AA	16				EK0			SCREW AND WASHER, Hex Head
6	53020989	2				EK0			GASKET, Cylinder Head, Left and Right
7	05240849	4				EK0			DOWEL, Block To Clutch Housing
8									GASKET, Valve Cover
	53020991	1				EK0			Left
	53020992	1				EK0			Right
9	53020995	1				EK0			COVER, Cylinder Head, Left
10	53020996	1				EK0			COVER, Cylinder Head, Right
11									SCREW
	53021309AA	5				EK0			Left
		4				EK0			Right
12		4							STUD, Serviced With Valve Cover, (NOT SERVICED)
13	04556020	2				EK0			PLUG, Core, 1.25 Diameter, Water Jacket Core
14	06036307AA	1				EK0			PLUG, Oil Gallery .25-18x.413, Rear of Head
15	06036308AA	2				EK0			PLUG, [.375-18x.475], Water Jacket Vent
16	53021031	1				EK0			PLUG, Access Hole
17	53021032	1				EK0			O RING

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Cylinder Block, 3.7L [EKG]  
Figure 3.7L-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Lower Gasket Package contains: Front and Rear Crankshaft Seals, Oil Pick Up Tube Seal; Oil Pan, Chain Case and Water Pump Gaskets Sales Codes [EK0] = All 3.7L 6 Cylinder Gas Engines									
-1									GASKET PACKAGE, Engine Lower, See Notes
	05135793AA	1				EK0	DBB		
		1				EK0	DG0		
2	05103475AA	1				EK0			BLOCK, Short
	04761838AB								Mopar 5W-30 Engine Oil Quart
	04761844AC								Mopar 5W-30 Engine Oil Gallon
3	05103475AA	1							BEDPLATE, Serviced With Short Block, (NOT SERVICED)
4	01122532	2				EK0			DOWEL, Block To Clutch Housing
5	06034804	8				EK0			PLUG, Core, 1.39 Diameter
6	06034804	8							BUSHING, Balance Shaft, Serviced In Short Block Only, (NOT SERVICED)
7	06034804	8				EK0			PLUG, Core, 1.39 Diameter
8	06102156AA	5				EK0			SCREW, Hex Flange Head, M8x1.25x44
9	06506187AA	2				EK0			STUD
10	06505394AA	6				EK0			SCREW AND WASHER
11	06504410	7				EK0			SCREW, Hex Head
12	04663942	1				EK0			PLUG, Core, 1.50 Diameter
13	06036307AA	3				EK0			PLUG, Cylinder Block Coolant Drain, [.250-18x.413]
14	06036114AA	4				EK0			PLUG, Pipe, Cylinder Block Oil Hole, [.500-14x.560]
15	53010533AA	5				EK0			DOWEL

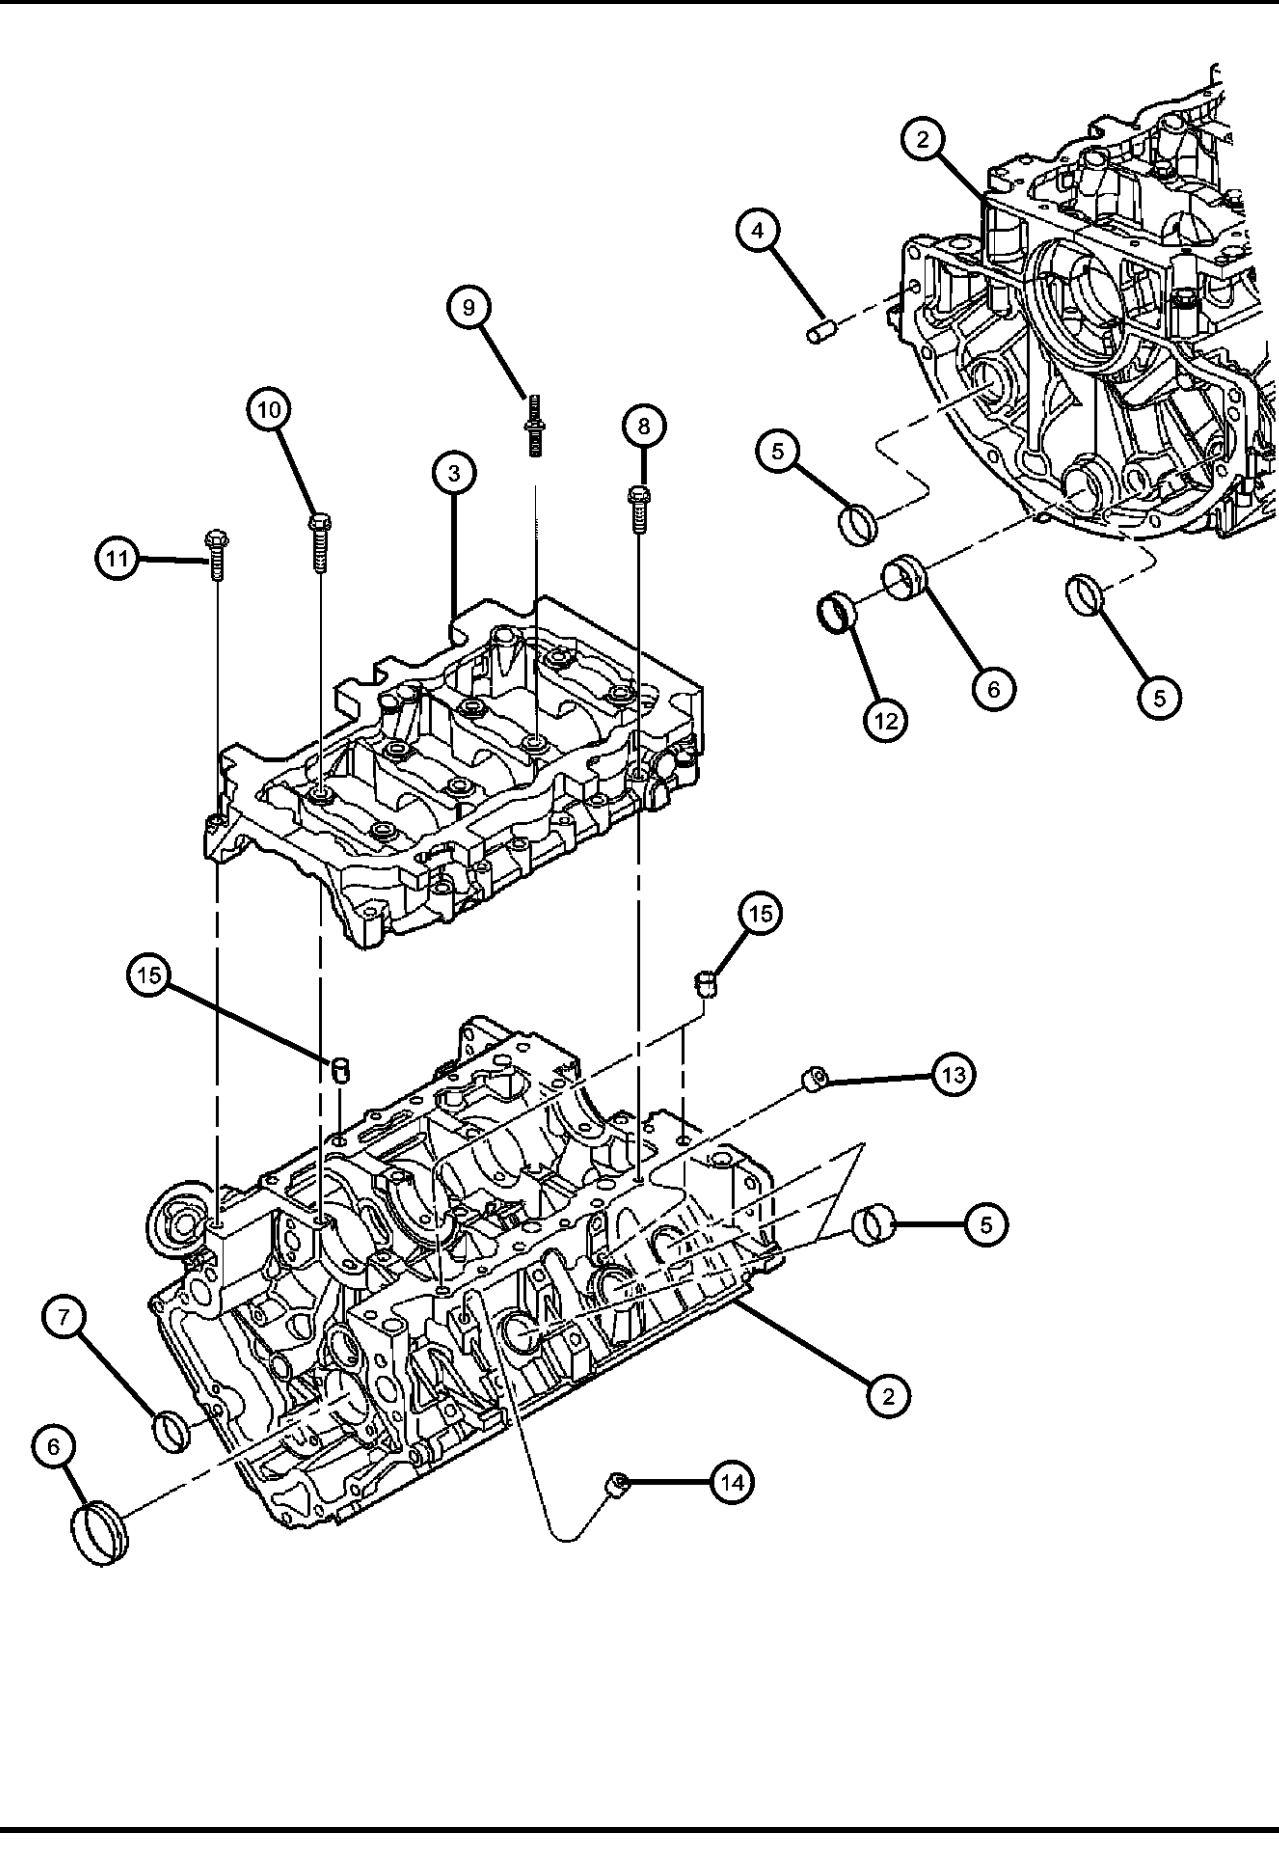

LIBERTY (KJ)  
SERIES  
P = Limited  
H = Sport  
M = Renegade

LINE  
J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)


BODY  
74 = 4 Door (104.3 WB)

ENGINE  
ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EK0 = All 3.7L  
ED0 = All 2.4L

TRANSMISSION  
DDD = Transmission - 5-Speed HD Manual  
DDK = Transmission - 5-Speed HD Manual  
DG4 = Transmission-Multi-Speed Auto, 45RFE  
DG6 = Transmission-4-Spd. Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic 5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions



Crankshaft, Pistons and Flywheel, 3.7L [EKG]  
Figure 3.7L-410

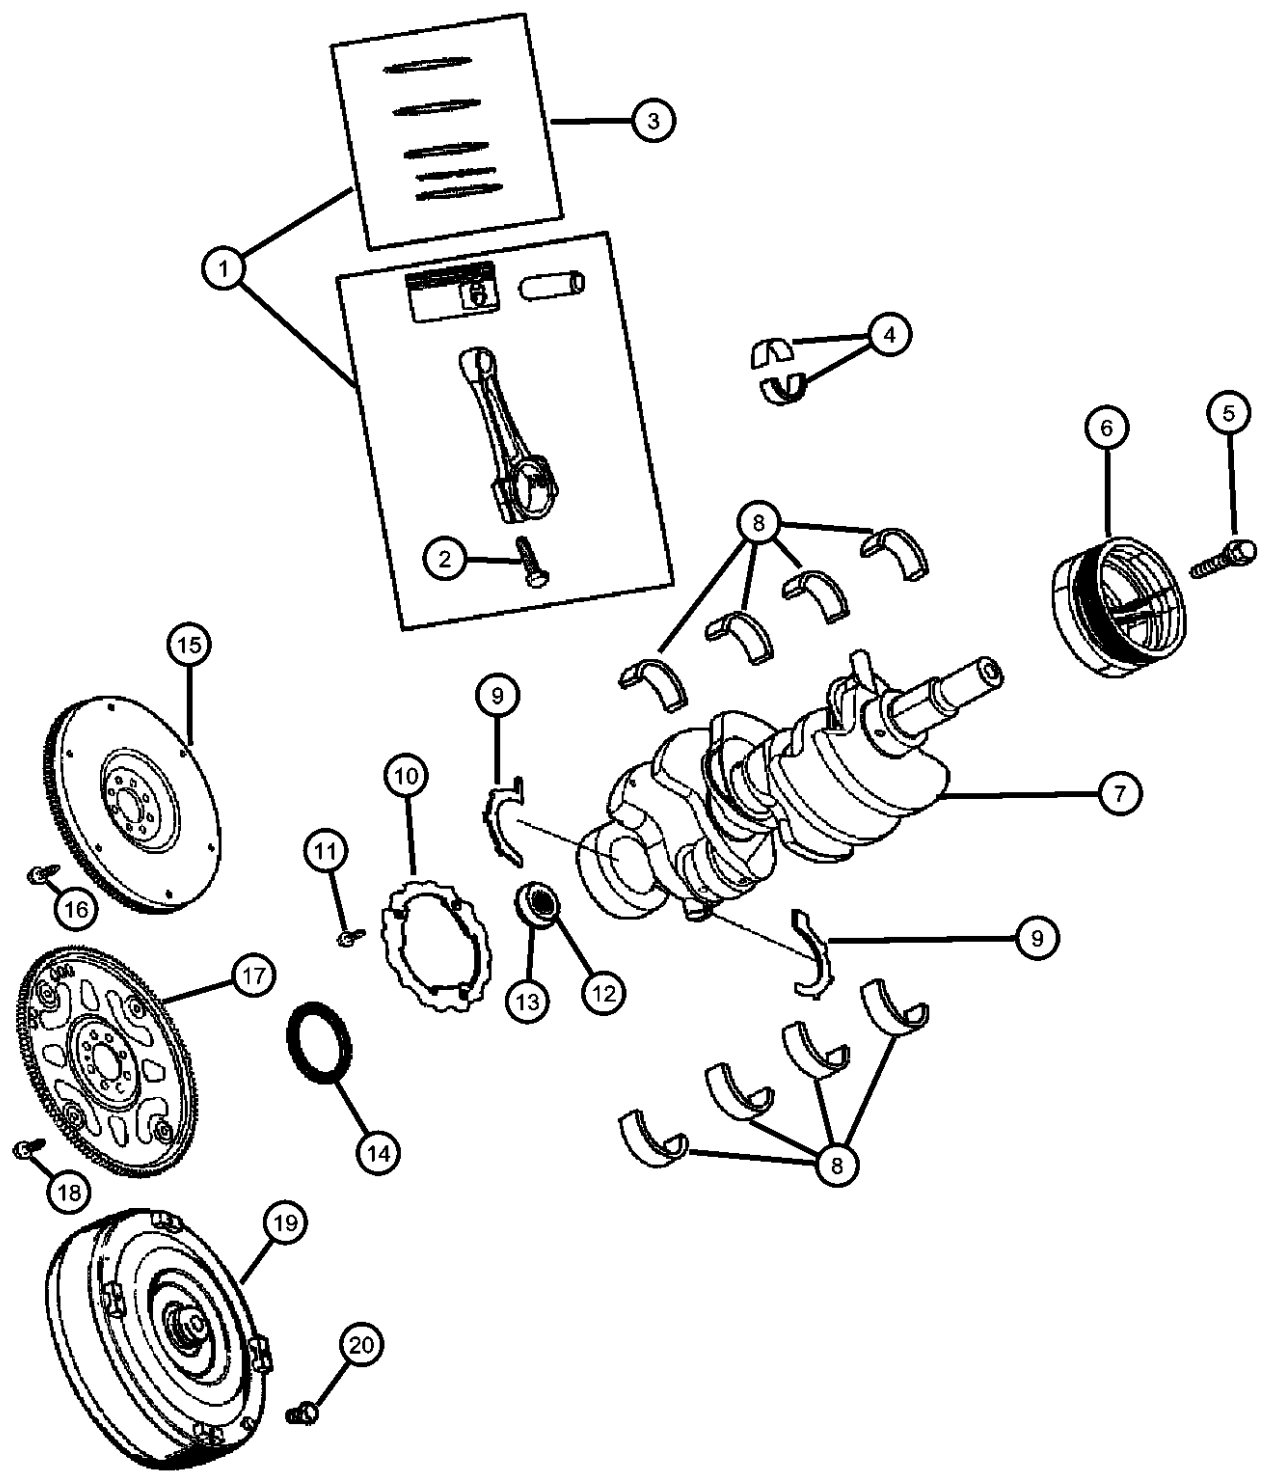

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: For Crankshaft Identification, Stamping Location and Bearing Information Refer to the Service Manual

Sales Codes:

[DBB] = All Manual Transmissions

[DG0] = All Automatic Transmissions

[EK0] = All 3.7L 6 Cylinder Gas Engines

1	05019316AA	6				EK0			PISTON PIN AND ROD, STD
2	06504720	12				EK0			BOLT, Connecting Rod
3	05012364AC	6				EK0			RING PACKAGE, Piston, Standard Size
4	05019447AA	12				EK0			BEARING PACKAGE, Connecting Rod, Standard
5	06504415	1				EK0			SCREW AND WASHER
6	53020689AB	1				EK0			DAMPER, Crankshaft
7	53020959AB	1				EK0			CRANKSHAFT
8									BEARING PACKAGE, Crankshaft, A Grade
	05066740AA	2				EK0			[U] Crankshaft, Mains 2 and 3
	05066733AA	2				EK0			[R] Crankshaft, Mains 1 and 4
	05066734AA	2				EK0			[R] Crankshaft, Mains 2 and 3
	05066735AA	2				EK0			[S] Crankshaft, Mains 1 and 4
	05066736AA	2				EK0			[S] Crankshaft, Mains 2 and 3
	05066737AA	2				EK0			[T] Crankshaft, Mains 1 and 4
	05066738AA	2				EK0			[T] Crankshaft, Mains 2 and 3
	05066739AA	2				EK0			[U] Crankshaft, Mains 1 and 4
9	05012356AB	1				EK0			WASHER PACKAGE, Washer, Thrust
10	05012356AB	1							RING, Tone, Serviced with Crankshaft, (NOT SERVICED)
11	06504480	3				EK0			SCREW, M6x1x25
12	53009180AB	1				EK0	DBB		BEARING, Pilot
13	04736204AB	1				EK0	DG6		SLEEVE, Crankshaft Pilot
14	53020788	1				EK0			SEAL, Crankshaft Bearing Oil
15	53021280AA	1				EK0	DBB		FLYWHEEL
16	06504398	8				EK0	DBB		SCREW

LIBERTY (KJ)

SERIES

P = Limited

H = Sport

M = Renegade

LINE

J = LHD (4WD)

U = RHD (4WD)

T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl

DOHC 16v SMPI

EKG = Engine - 3.7L V6

ENJ = Engine -2.5L 4 Cyl 16V

Turbo Diesel

ENR = Engine - 2.8L 4 Cyl

Turbo Diesel

ENO = 4Cyl Turbo Diesel

EK0 = All 3.7L

ED0 = All 2.4L

TRANSMISSION

DDD = Transmission - 5-Speed HD

Manual

DDK = Transmission - 5-Speed HD

Manual

DG4 = Transmission-Multi-Speed

Auto, 45RFE

DG6 = Transmission-4-Spd.

Automatic, 42RLE

DGQ = Transmission-5-Spd Automatic

5-45RFE

DBB = All Manual Transmissions

DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


2004 KJ

Crankshaft, Pistons and Flywheel, 3.7L [EKG]  
Figure 3.7L-410

										ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
										17	04736253AA	1				EK0	DG6		PLATE, Torque Converter Drive
										18	06503465	8				EK0	DG0		BOLT, Drive Plate and Flywheel
										19	05093944AA	1	T				DG6		CONVERTER PACKAGE, Torque
												1	J, U				DG6		
										20	01949765	4					DG4		SCREW, Hex Head Header Point, .312-24x.44, Driveplate to Conv
										<b>LIBERTY (KJ)</b>									
										SERIES		LINE		BODY		ENGINE		TRANSMISSION	
										P = Limited		J = LHD (4WD)		74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
										H = Sport		U = RHD (4WD)				DOHC 16v SMPI		Manual	
										M = Renegade		T = LHD (2WD)				EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
																ENJ = Engine -2.5L 4 Cyl 16V		Manual	
																Turbo Diesel		DG4 = Transmission-Multi-Speed	
																ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
																Turbo Diesel		DG6 = Transmission-4-Spd.	
																EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
																EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
																ED0 = All 2.4L		5-45RFE	
																		DBB = All Manual Transmissions	
																		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Camshaft And Valve, 3.7L [EKG]  
Figure 3.7L-510

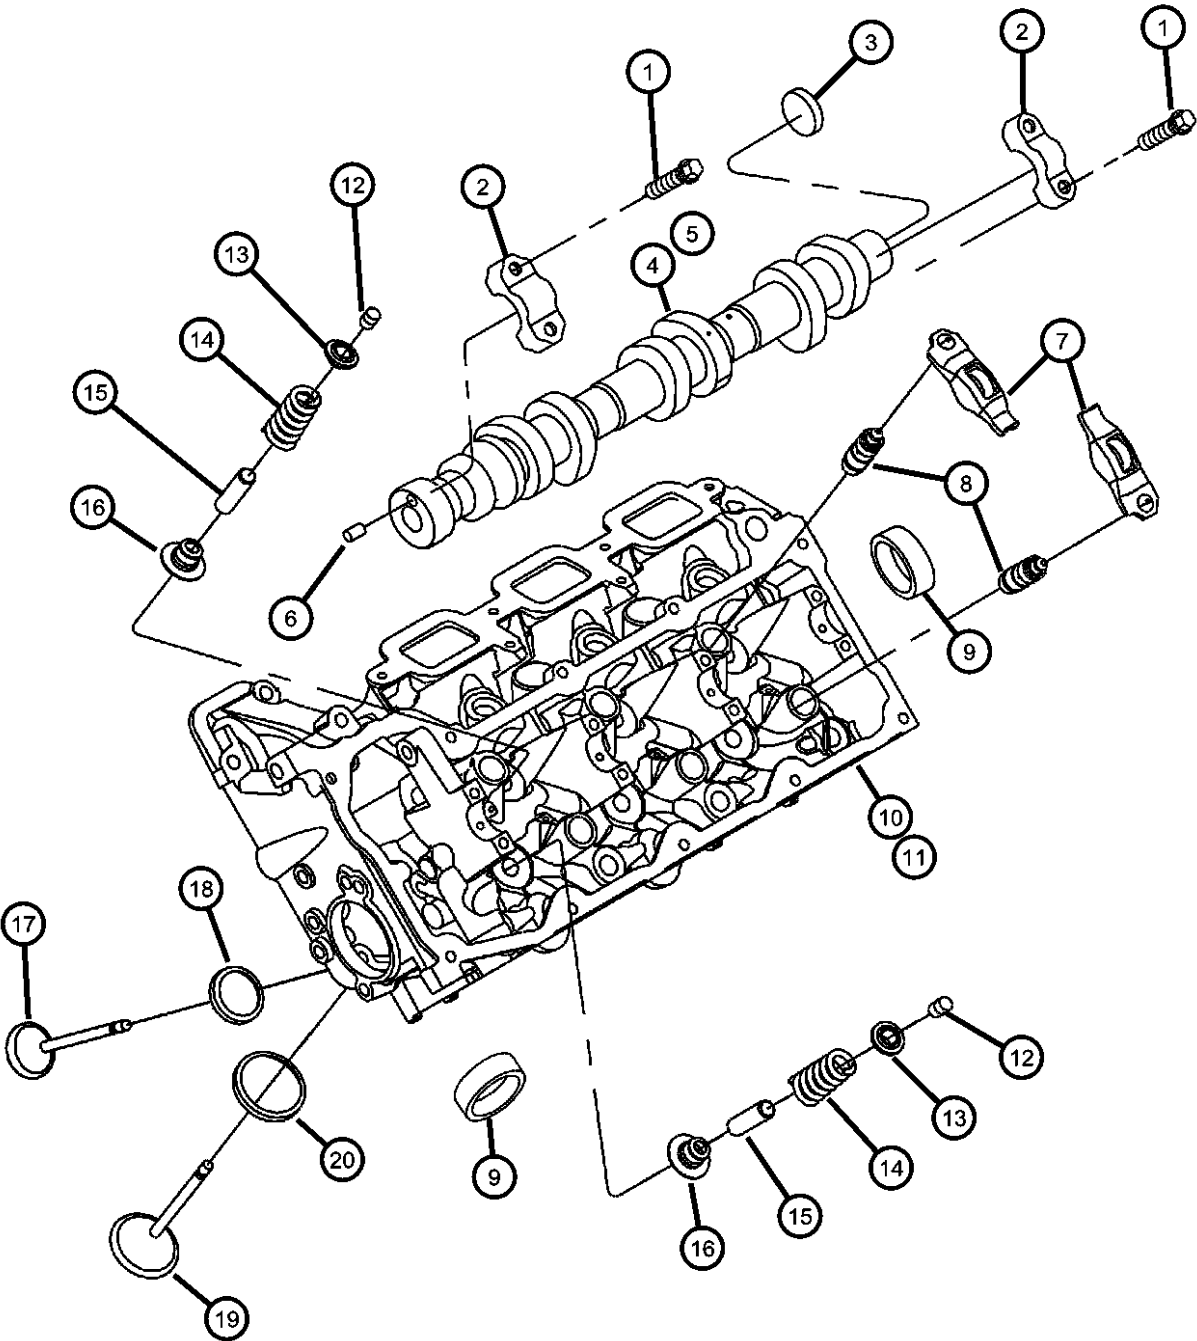

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTES:  
Sales Codes  
[EK0] = All 3.7L 6 Cylinder Gas Engines

1	06505034AA	8				EK0			SCREW, M6x1x40
2	06505034AA	8							CAP, Serviced With Head Only, (NOT SERVICED)
3	06036473AA	1				EK0			WASHER
4	53021203AB	1				EK0			CAMSHAFT, Engine, Left
5	53021204AB	1				EK0			CAMSHAFT, Engine, Right
6	06100902	1				EK0			DOWEL, M6x14
7	53021913AA	12				EK0			ROCKER ARM, Valve
8	53021077	12				EK0			ADJUSTER, Valve Lash
9	04556020	2				EK0			PLUG, Core, 1.25 Diameter
10	53020987AB	1				EK0			HEAD, Cylinder, Left
11	53020988AB	1				EK0			HEAD, Cylinder, Right
12	04536513AB	24				EK0			LOCK, Valve Spring Retainer
13	04781090AA	12				EK0			RETAINER, Valve Spring
14									SPRING, Valve
	53021775AA	6				EK0			Intake
	53021873AA	6				EK0			Exhaust
15	53021873AA	6							INSERT, Valve Guide, Serviced With Head Only, (NOT SERVICED)
16	53020752AD	12				EK0			SEAL, Valve Guide
17	53021916AA	6				EK0			VALVE, Exhaust, Standard
18	53021916AA	6							SEAT, Exhaust Valve, Serviced With Head Only, (NOT SERVICED)
19	53020747AB	6				EK0			VALVE, Intake, Standard
20	53020747AB	6							SEAT, Intake Valve, Serviced With Head Only, (NOT SERVICED)

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part

Timing Cover, 3.7L [EKG]  
Figure 3.7L-610

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES:  
Sales Codes  
[EK0] = All 3.7L 6 Cylinder Gas Engines

1	53021238AB	1				EK0			COVER, Timing Belt
2	53021238AB	1							PIPE FITTING, Chain Case Cover, .375-18x2, Serviced with Cover, (NOT SERVICED)
3	06036308AA	3				EK0			PLUG, Also serviced wih Cover
4	06035854	2				EK0			FITTING, Y-Style, Also serviced wih Cover
5	53021313AA	1				EK0			SEAL, Crankshaft Oil, Front, Also serviced wih Cover
6	53021226AA	1				EK0			GASKET, Chain Case Cover, Also serviced wih Cover
7	53021239AA	2				EK0			O RING, Also serviced wih Cover
8	06505293AA	1				EK0			STUD
9	06507776AA	3				EK0			SCREW, Hex Flange Head
10	06102380AA	5				EK0			SCREW, Hex Flange Head
11	06102381AA	5				EK0			SCREW, Hex Flange Head

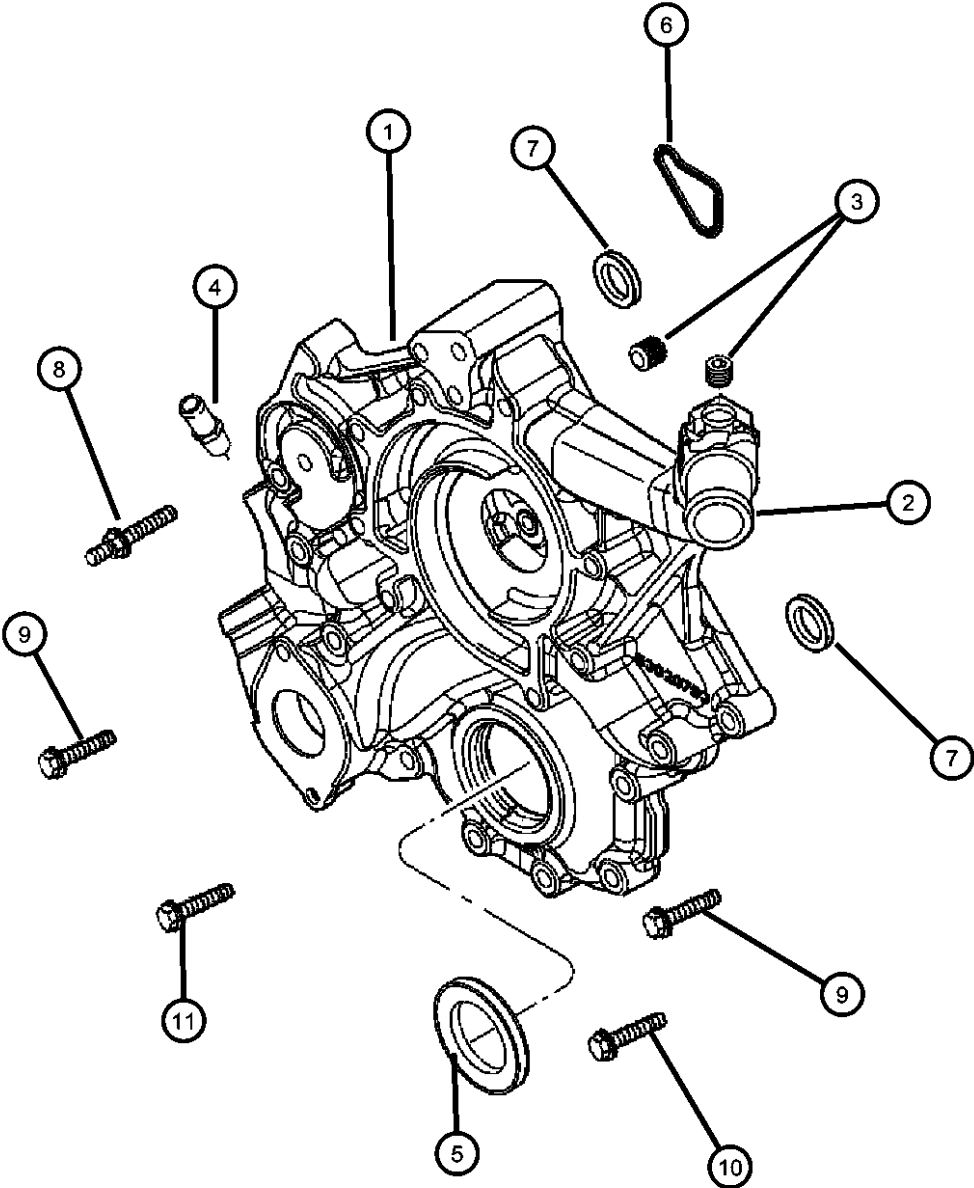


LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Timing Chain and Guides, 3.7L [EKG]  
Figure 3.7L-620

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

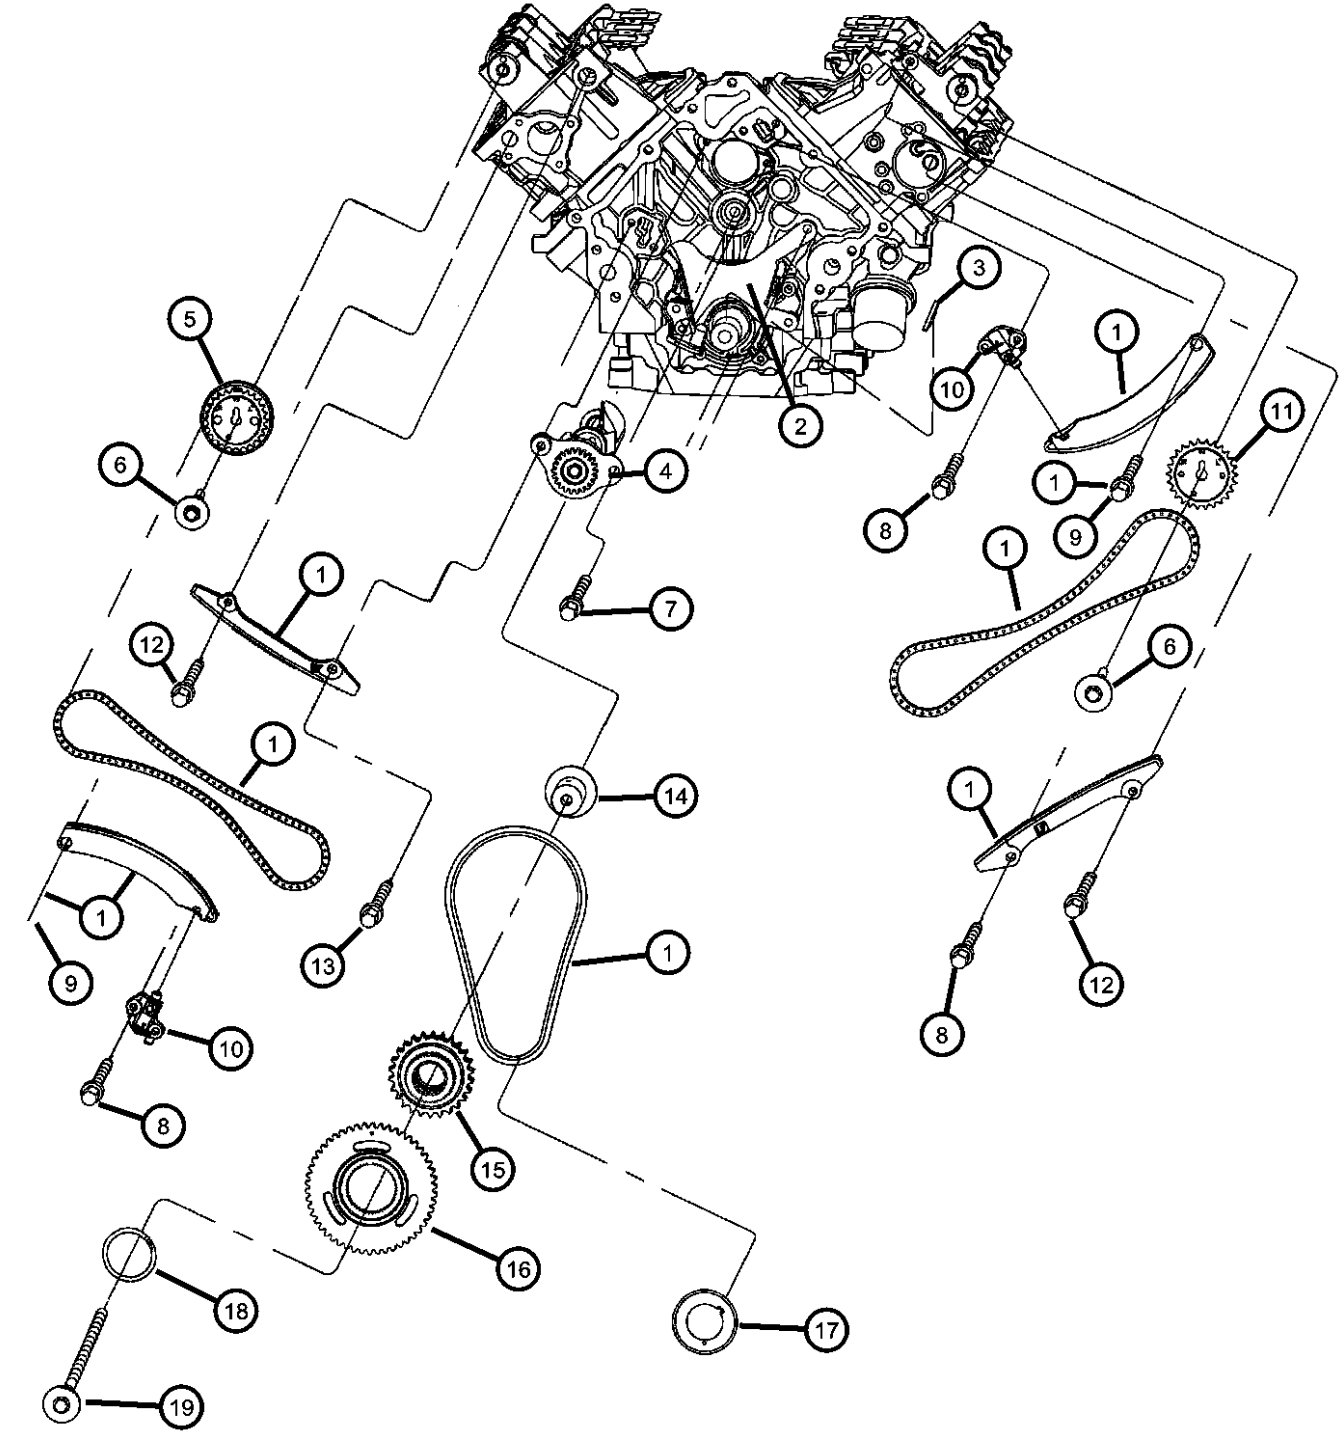


NOTES:  
Sales Codes  
[EK0] = All 3.7L, 6 Cylinder Gas Engines

1	05019423AC	1				EK0			TIMING DRIVE PACKAGE, Engine
2	53020681	1				EK0			TENSIONER, Chain, Primary, Also serviced in Timing Drive Package
3	06504471	1				EK0			KEY, Woodruff
4	53020818	1				EK0			SHAFT, Balance
5	53021291AD	1				EK0			SPROCKET, Camshaft, Right
6	06504429	2				EK0			SCREW AND WASHER, Hex
7	06101452	1				ED0, EK0			SCREW AND WASHER, Hex Head, M8x1.25x20
8	06503257	5				EK0			BOLT, Hex Head, M8x1.25x37.50
9	06506028AA	2				EK0			SCREW, Also serviced in Drive Package
10									TENSIONER, Chain
	53021249AA	1				EK0			Secondary, Right
	53021250AA	1				EK0			Secondary, Left
11	53021290AA	1				EK0			SPROCKET, Camshaft, Left
12	06102111AA	2				EK0			SCREW AND WASHER
13	06102190AA	1				EK0			SCREW
14	53020835	1				EK0			SHAFT, Idler
15	53021298AB	1				EK0			SHAFT, Balance, Driver
16	53021170AA	1				EK0			SPROCKET, Idler
17	53020679	1				EK0			SPROCKET, Crankshaft
18	53021171AA	1				EK0			RETAINING RING, Idler
19	06504370	1				EK0			SCREW AND WASHER, Hex

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Engine Oiling, 3.7L [EKG]  
Figure 3.7L-710

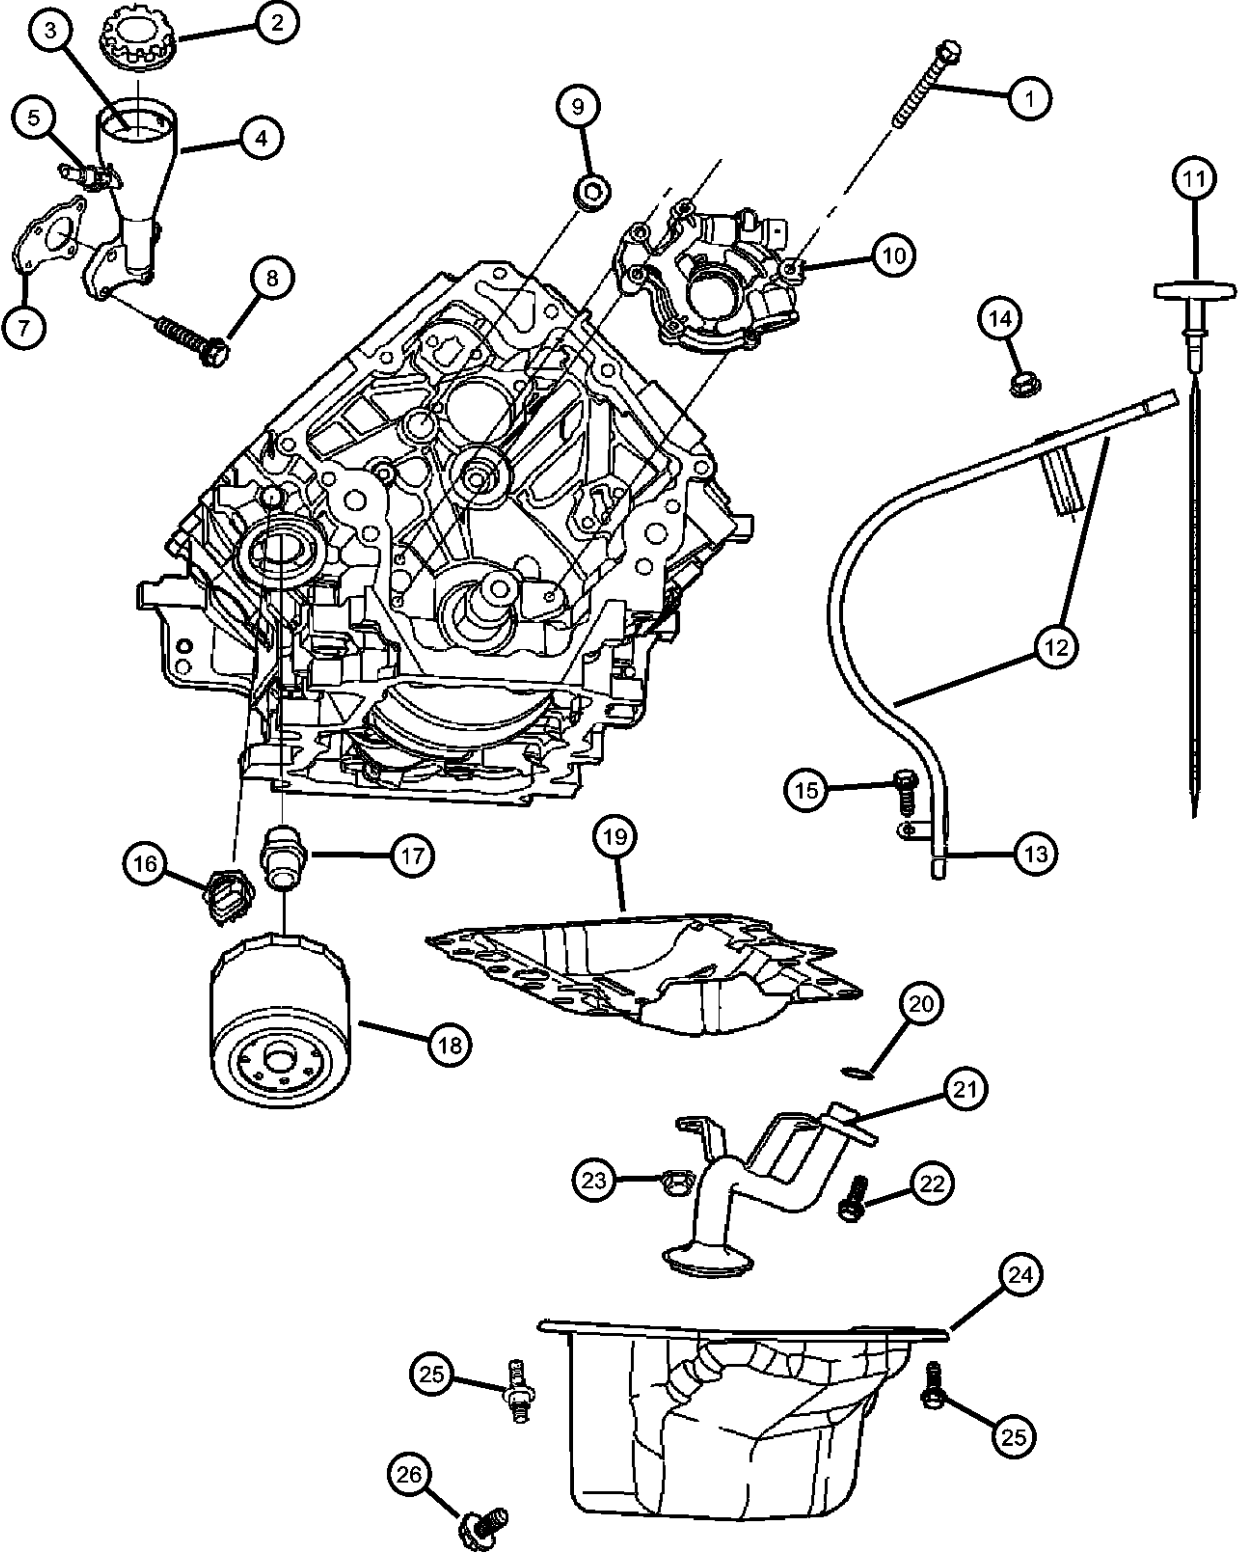


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Code [EK0] = All 3.7L 6 Cylinder Gas Engines									
1	06100932	1				EK0			BOLT, Hex
2	53032389AC	1				EK0			CAP, Oil Filler
3	53032126AA	1				EK0			BAFFLE, Oil Fill, None
4	53020890	1				EK0			HOUSING, Oil Fill
5	53032800AA	1				EK0			VALVE, Crankcase Vent
-6	53031711AA	1				EK0			O RING
7	53020889AB	1				EK0			GASKET, Oil Fill Housing
8	06505504AA	3				EK0			SCREW
9	06036114AA	4				EK0			PLUG, Pipe
10	53020827	1				EK0			PUMP, Engine Oil
11	53021026AG	1				EK0			INDICATOR, Engine Oil Level
12	53021274AE	1				EK0			TUBE, Oil Gauge
13	53021144AA	1				EK0			O RING, Engine Oil Indicator
14	06102050AA	1				EK0			SCREW, Hex Flange Head, M6.3 x 1.81 x 15.00
15	06504810AA	1				EK0			SCREW AND WASHER, Hex
16	04868672AA	1				EK0			SWITCH, Oil Pressure
17	53007563	1				EK0			CONNECTOR, Oil Filter
18	04781452AA	1				EK0			FILTER, Engine Oil
19	53021001AB	1				EK0			GASKET, Oil Pan
20	53020861	1				EK0			SEAL, Oil Pick Up Tube
21	53021776AA	1				EK0			TUBE, Oil Pickup
22	06102046AA	1				EK0			SCREW AND WASHER
23	06502756	2				EK0			NUT, Hex Lock, M8x1.25
24	53021779AB	1				EK0			PAN, Engine Oil
25	06504810AA	17				EK0			SCREW AND WASHER, Hex
26	06506100AA	1				EK0			PLUG, Oil Drain

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Manifolds, Intake and Exhaust, 3.7L [EKG]  
Figure 3.7L-810

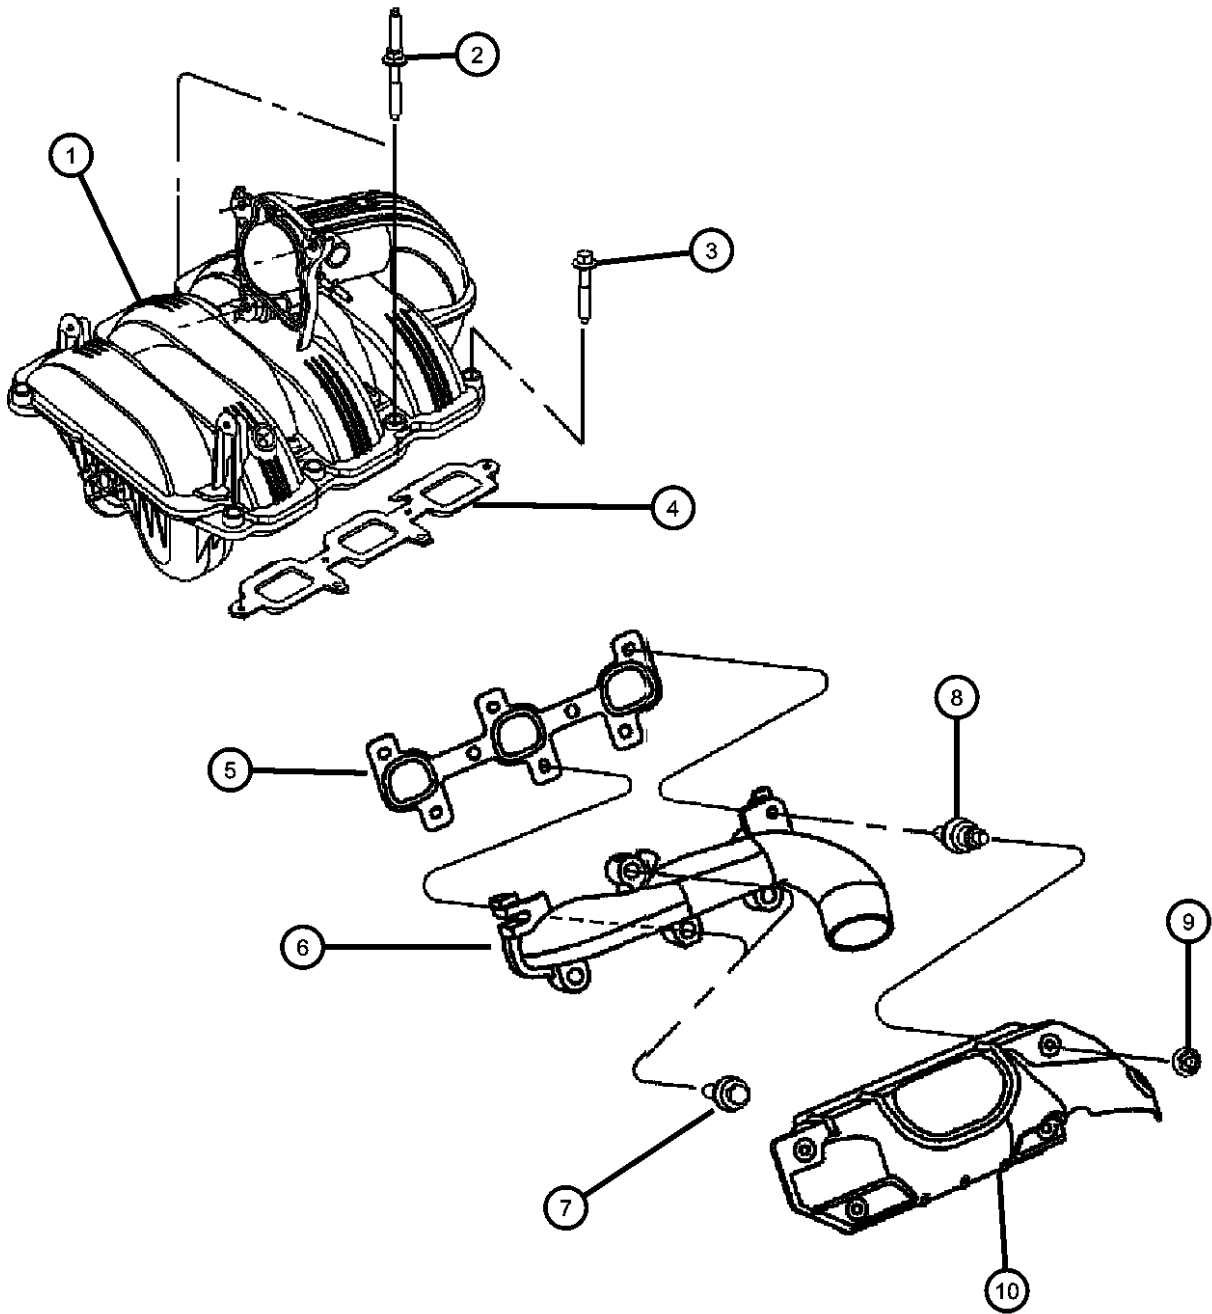

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


NOTES:  
Sales Codes  
[EK0] = All 3.7L 6 Cylinder Gas Engines

1	53031080AF	1				EK0			MANIFOLD, Intake
2	06505500AA	7				EK0			STUD
3	06505499AA	1				EK0			SCREW
4	53010310AB	6				EK0			SEAL, Intake Manifold
5									GASKET, Exhaust Manifold
	53031090	1				EK0			Right
	53031091	1				EK0			Left
6									MANIFOLD, Exhaust
	53031085AB	1				EK0			Left
	53031086AB	1				EK0			Right
7	06504340	4				EK0			SCREW AND WASHER, Hex
8	06504331	8				EK0			STUD
9	06505316AA	8				EK0			NUT
10									SHIELD, Exhaust Manifold
	53031092AB	1				EK0			Right
	53031093AB	1				EK0			Left

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	


Crankcase Ventilation, 3.7L [EKG]  
Figure 3.7L-910

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

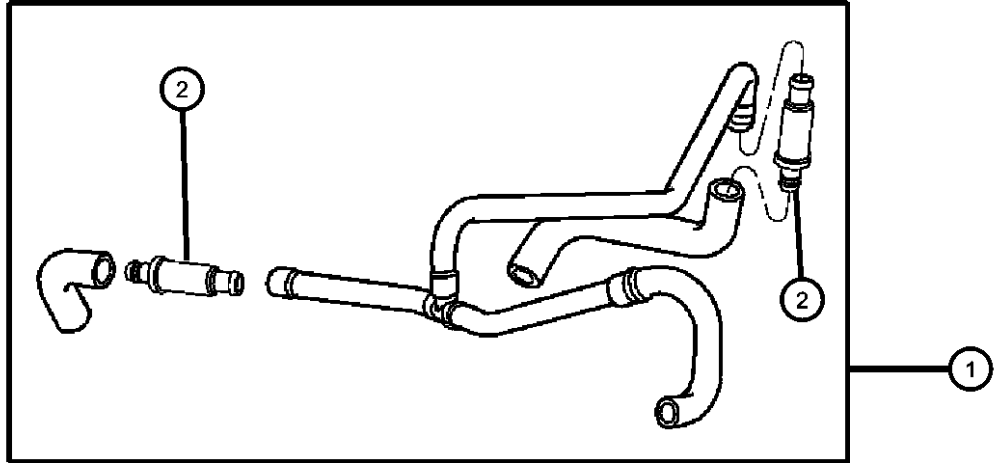

NOTES:  
Sales Codes  
[EK0] = All 3.7L 6 Cylinder Gas Engines

1	53013723AA	1				EK0			HOSE, Breather
2	53030850AB	2				EK0			BREATHER, Crankcase
3	06035854	2				EK0			FITTING, Y-Style
4	53031133AE	1				EK0			TUBE, Crankcase Vent To Intake Manifold
5	53032126AA	1				EK0			BAFFLE, Oil Fill, None
6	53020890	1				EK0			HOUSING, Oil Fill
7	53032800AA	1				EK0			VALVE, Crankcase Vent
8	06505504AA	3				EK0			SCREW
9	06505566AA	1				EK0			STUD

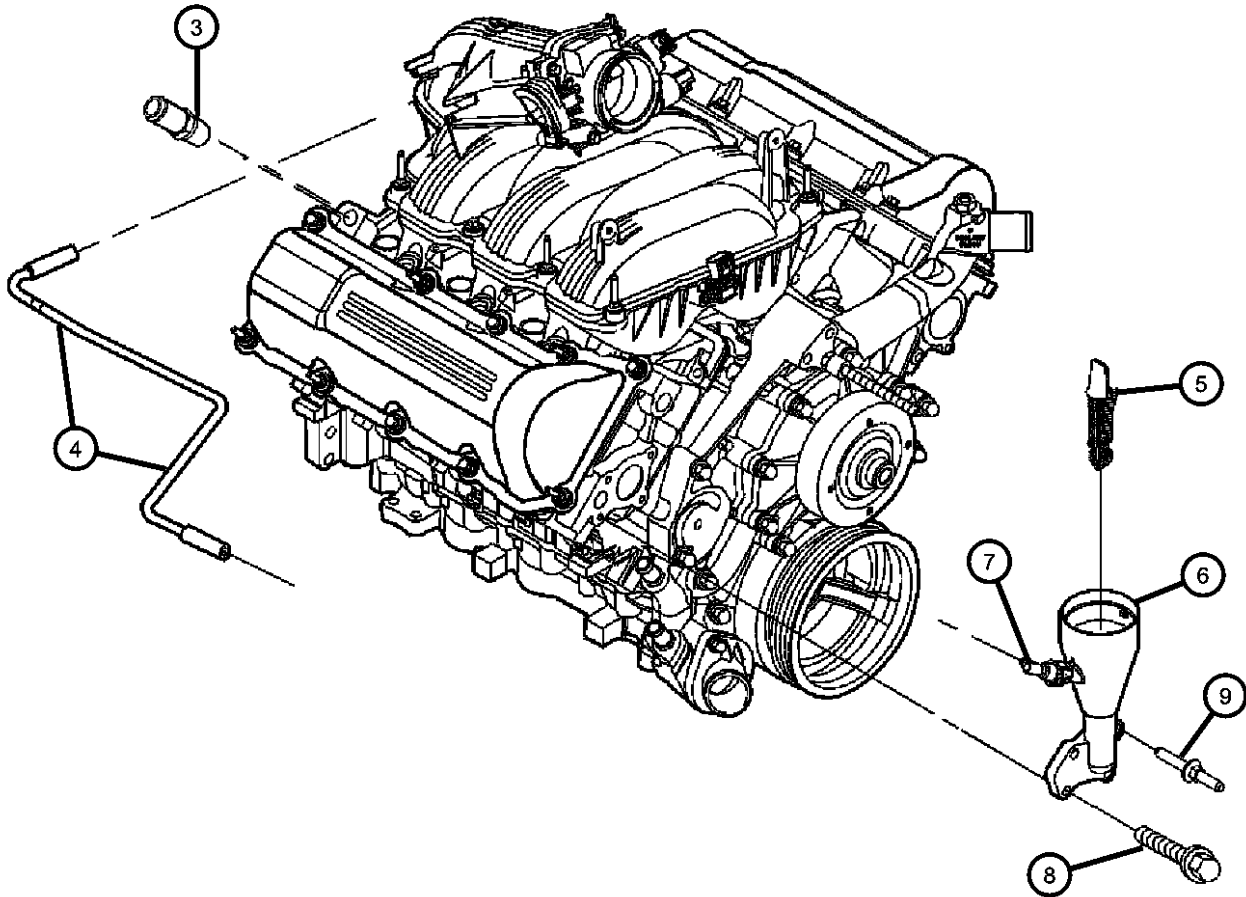


LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Group - 2.5LD

Engine 2.5L Four Cylinder (Turbo Diesel)

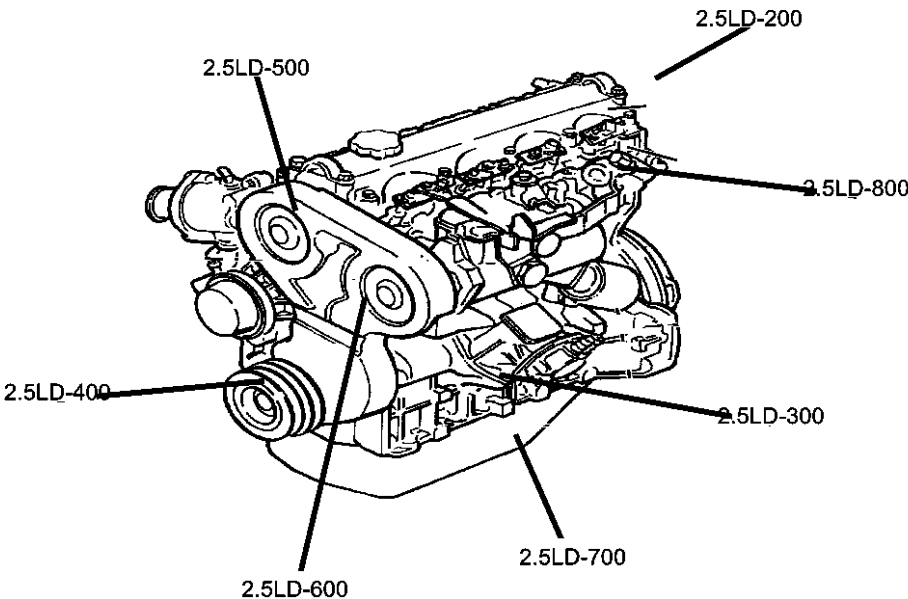


Group - 2.5LD Engine 2.5L Four Cylinder (Turbo Diesel)

Illustration Title	Group-Fig. No.
<b>Cylinder Head</b>	
Cylinder Head 2.5L [ENJ].....	Fig. 2.5LD - 210
Rocker Cover and Rocker Cover Assembly 2.5L [ENJ].....	Fig. 2.5LD - 220
<b>Cylinder Block</b>	
Cylinder Block 2.5L [ENJ] .....	Fig. 2.5LD - 310
<b>Crankshaft, Piston and Drive Plate</b>	
Crankshaft,Pistons and Related Parts 2.5L [ENJ] .....	Fig. 2.5LD - 410
<b>Camshafts &amp; Valves</b>	
Camshaft and Valves 2.5L [ENJ].....	Fig. 2.5LD - 510
<b>Timing Belt and Cover</b>	
Timing Cover and Related Parts 2.5L [ENJ] .....	Fig. 2.5LD - 610
<b>Engine Oiling</b>	
Engine Oiling and Balance Shafts 2.5L [ENJ].....	Fig. 2.5LD - 710
Oil Cooler 2.5L [ENJ] .....	Fig. 2.5LD - 720
Engine Oil Filter Adapter And Lines 2.5L Diesel [ENJ].....	Fig. 2.5LD - 730
<b>Manifolds</b>	
Manifolds 2.5L [ENJ].....	Fig. 2.5LD - 810
<b>Crankcase Ventilation</b>	
Crankcase Ventilation 2.5L [ENJ] .....	Fig. 2.5LD - 910

<div>2.5LD-200</div> <div>Cylinder Head</div> <div></div>	<div>2.5LD-300</div> <div>Cylinder Block</div> <div></div>	<div>2.5LD-400</div> <div>Crankshaft, Piston and Drive Plate</div> <div></div>	<div>2.5LD-500</div> <div>Camshafts &amp; Valves</div> <div></div>
<div>2.5LD-600</div> <div>Timing Belt and Cover</div> <div></div>	<div>2.5LD-700</div> <div>Engine Oiling</div> <div></div>	<div>2.5LD-800</div> <div>Manifolds</div> <div></div>	<div>2.5LD-900</div> <div>Crankcase Ventilation</div> <div></div>

Cylinder Head 2.5L [ENJ]  
Figure 2.5LD-210

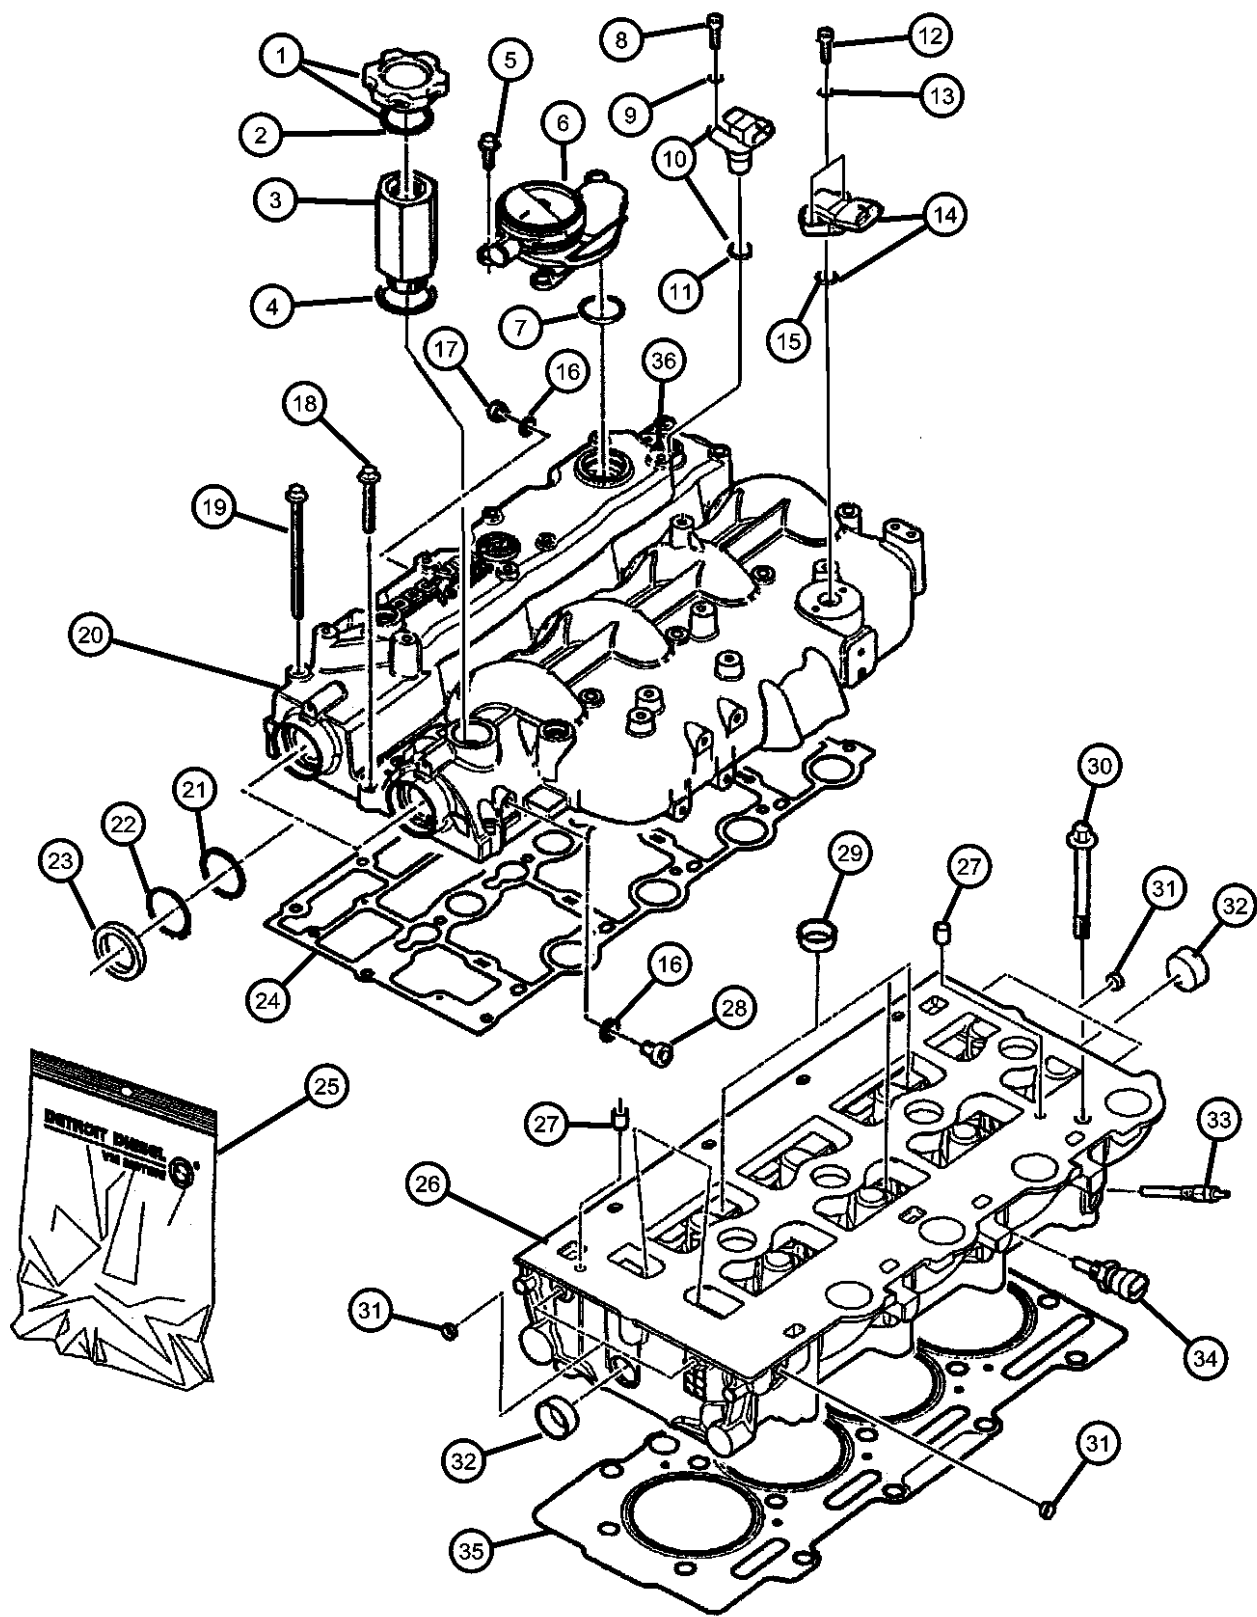


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DBB] = All Manual Transmissions [EN0] = All 4 Cylinder Turbo Diesel Engines									
1	04863741	1				EN0	DBB		CAP, Oil Filler
2	04720300	1				EN0	DBB		GASKET, Oil Filler Cap
3	05072678AA	1				EN0	DBB		SPACER, Oil Filler
4	05066853AA	1				EN0	DBB		GASKET, Oil Filler Connector
5	05003553AA	3				EN0	DBB		SCREW
6	05114348AA	1				EN0	DBB		VALVE, Pressure Control
7	05114347AA	2				EN0	DBB		O RING, Pressure Relief Valve
8	05003551AA	1				EN0	DBB		BOLT, M6x10
9	04723204	5				EN0	DBB		WASHER, Implement Attaching
10	05066856AB	1				EN0	DBB		SENSOR, Camshaft
11	05066860AA	1				EN0	DBB		O RING
12	05010858AA	1				EN0	DBB		SCREW
13	04723168	1				EN0	DBB		WASHER, Fuel Solenoid Wire
14	05093898AA	1				EN0	DBB		SENSOR, Air Temperature
15	04864689	4				EN0	DBB		O RING
16	04720713	2				EN0	DBB		WASHER, Implement Attaching
17	05066787AA	2				EN0	DBB		PLUG, Cylinder Block
18	05066960AA	6				EN0	DBB		SCREW
19	05066960AA	6				EN0	DBB		SCREW
20									COVER, Cylinder Head
	05139867AA	1				EN0	DBB		
		1				EN0	DG0		
21	05066844AA	2				EN0	DBB		SPACER
22	05066841AA	2				EN0	DBB		SNAP RING
23	05066958AA	2				EN0	DBB		SEAL
24	05066786AA	1				EN0	DBB		GASKET, Valve Cover
25	05096231AA	1				EN0	DBB		GASKET KIT, Cylinder Head Overhall

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Cylinder Head 2.5L [ENJ]  
Figure 2.5LD-210

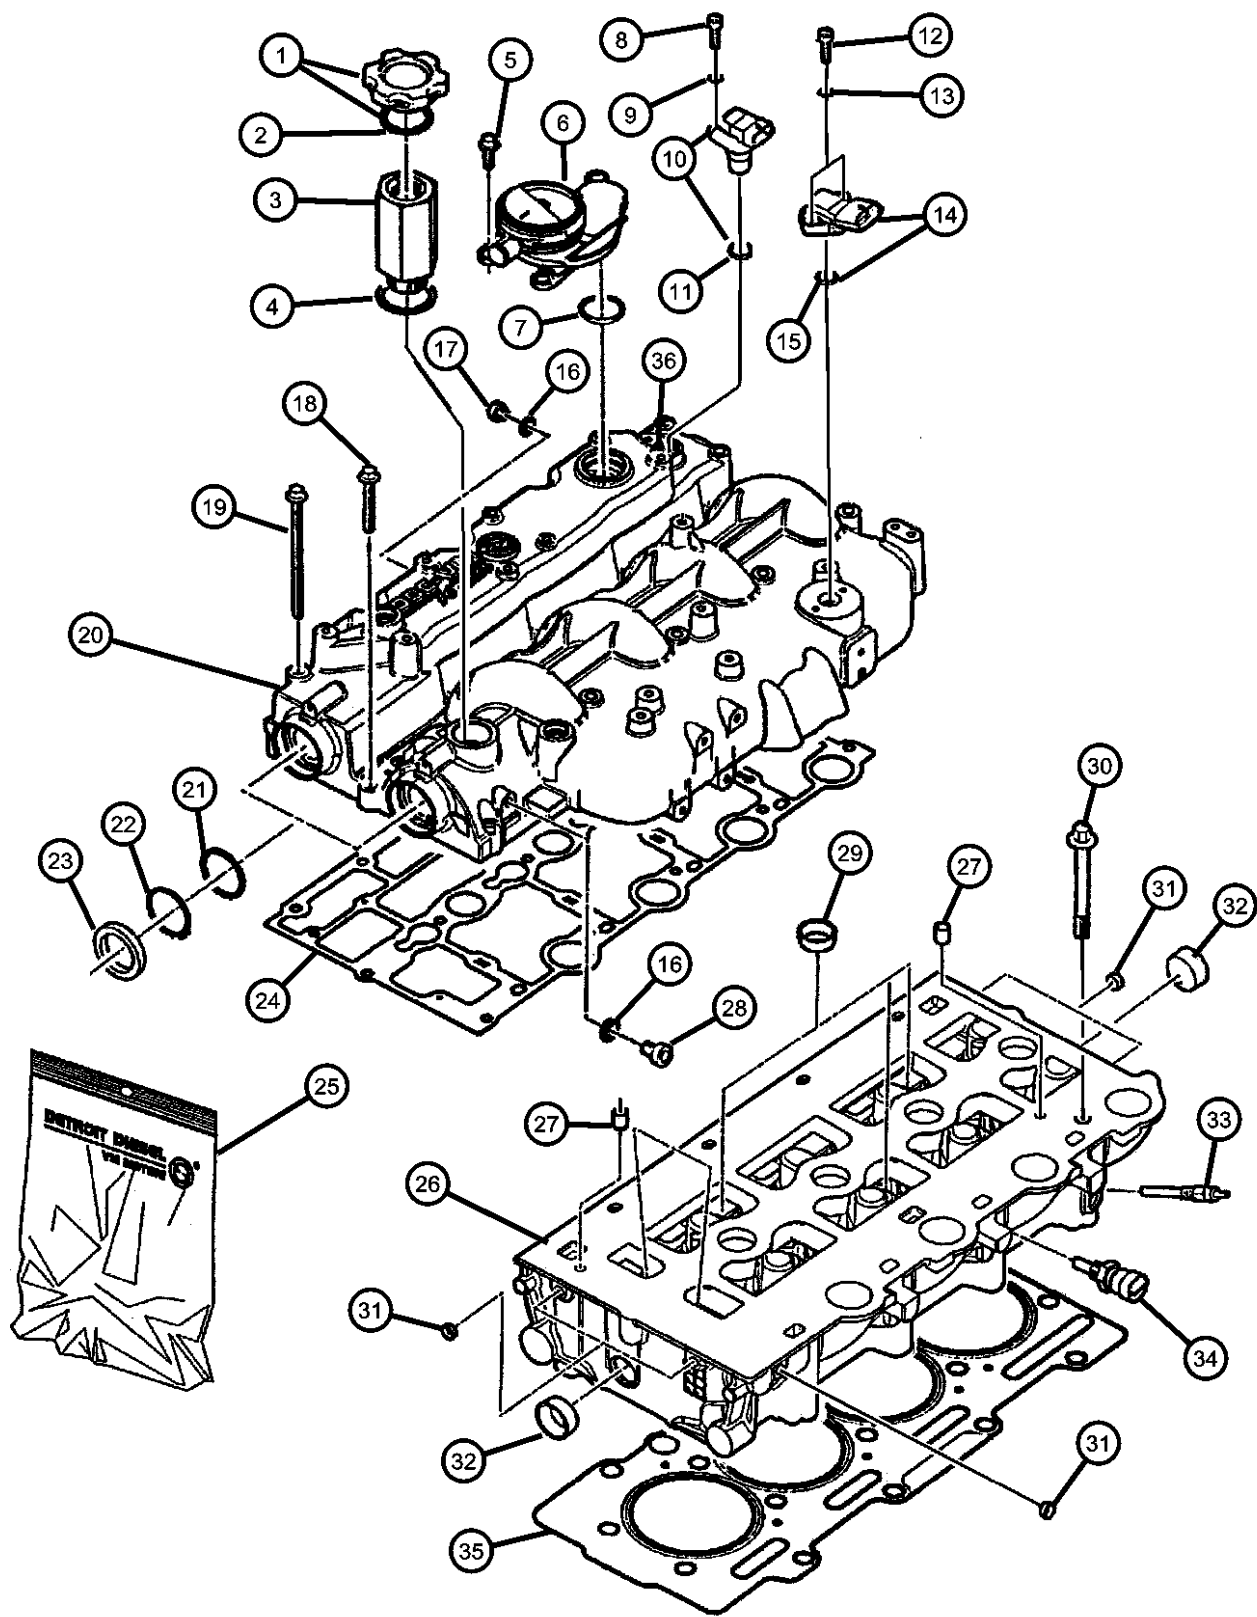


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
26	05093893AB	1				EN0	DBB		HEAD, Cylinder
27	04720165	1				EN0	DBB		DOWEL, Rocker
28	05066913AA	3				EN0	DBB		STUD
29	04723228	3				EN0	DBB		PLUG, Cylinder Block Oil Hole
30	05066957AB	18				EN0	DBB		BOLT, Cylinder Head
31	05066836AA	2				EN0	DBB		PLUG, Cylinder Block
32	05066836AA	2				EN0	DBB		PLUG, Cylinder Block
33	05066840AA	4				EN0	DBB		GLOW PLUG
34	05066779AA	1				EN0	DBB		SENSOR, Temperature Sending Unit
35									GASKET, Cylinder Head
	05072675AA	1				EN0	DBB		[1.32MM]
	05072676AA	1				EN0	DBB		[1.42MM]
	05072677AA	1				EN0	DBB		[1.52MM]
36	05093895AA	1				EN0	DBB		STUD
-37	04882405	4				EN0	DBB		STUD

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rocker Cover and Rocker Cover Assembly 2.5L [ENJ]  
Figure 2.5LD-220

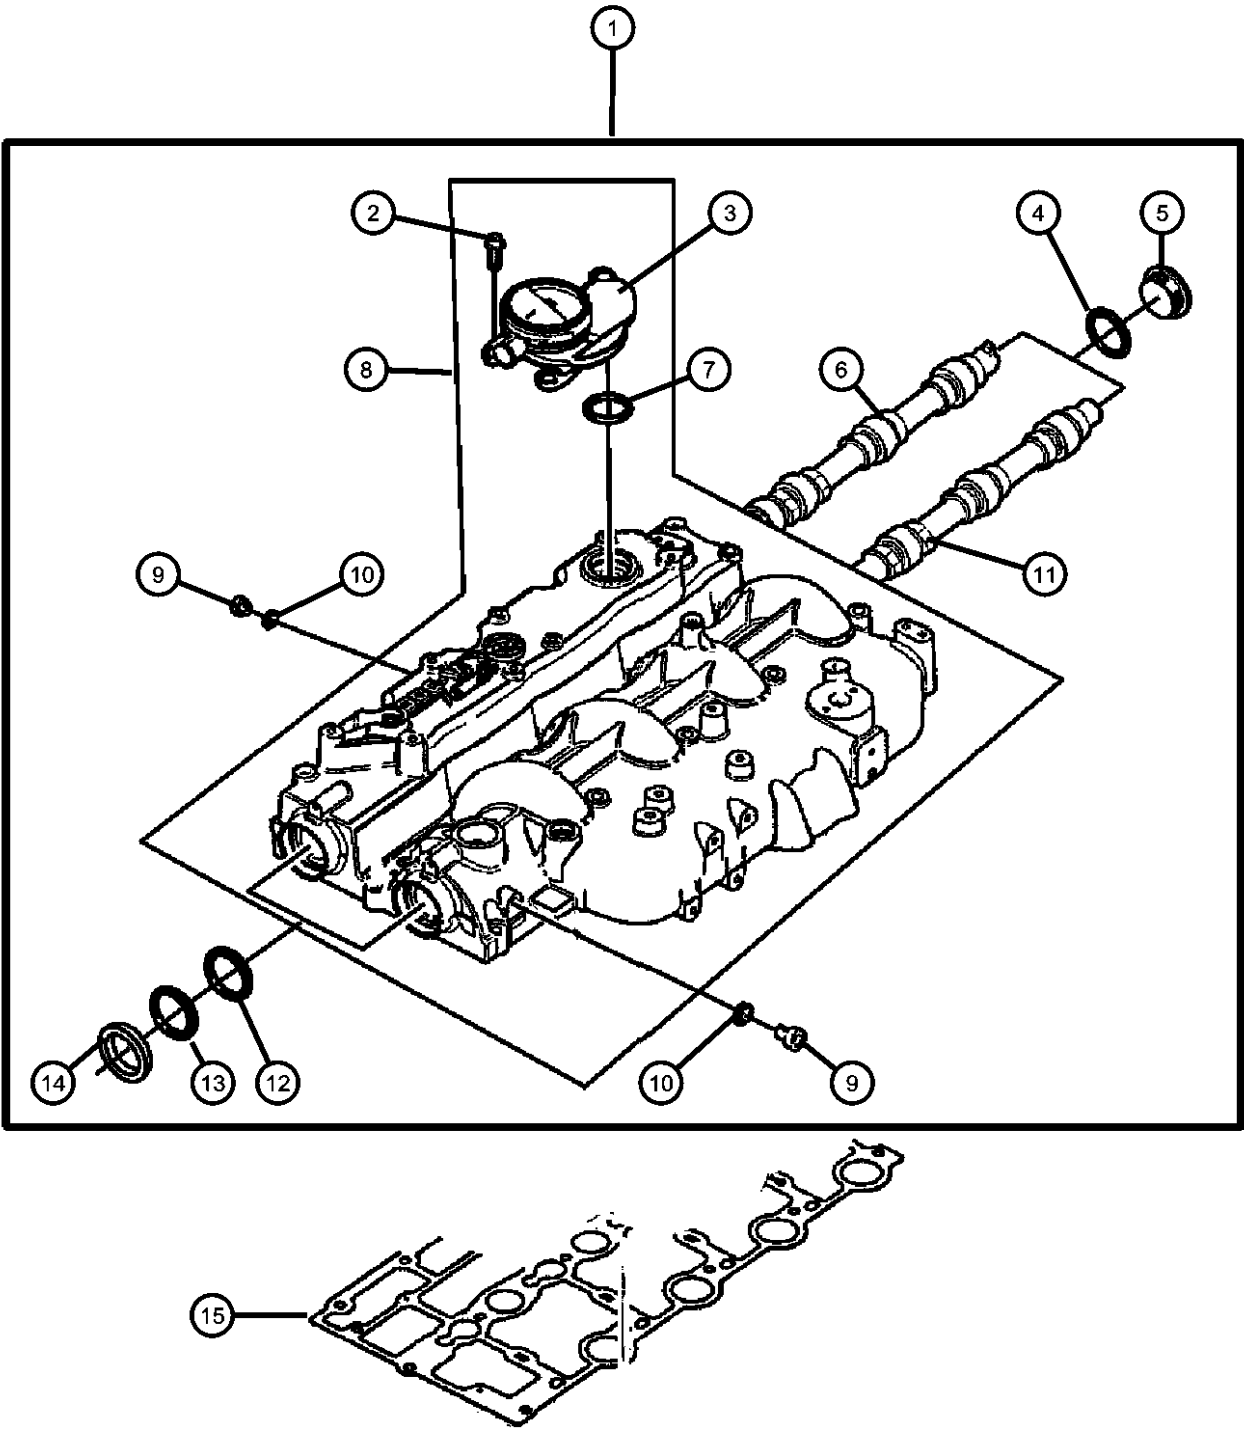

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:Sales Codes: [ENJ] = 2.5L 4 Cylinder 16V Turbo Diesel									
1	05139867AA	1				EN0	DBB		COVER, Cylinder Head
2	05003553AA	3				EN0	DBB		SCREW
3	05114348AB	1				EN0	DBB		VALVE, Pressure Control
4	05066811AA	1				EN0	DBB		WASHER, Plain, 16.2x19.9x1.5
5	05066855AA	2				EN0	DBB		PLUG, Camshaft
6	05066850AB	1				EN0	DBB		CAMSHAFT, Exhaust
7	05114347AA	2				EN0	DBB		O RING, Pressure Relief Valve
8	05093897AB	1				EN0	DBB		COVER, Cylinder Head
9	05066787AA	2				EN0	DBB		PLUG, Cylinder Block
10	04720713	2				EN0	DBB		WASHER, Implement Attaching
11	05066847AB	1				EN0	DBB		CAMSHAFT, Intake
12	05066844AA	2				EN0	DBB		SPACER
13	05066841AA	2				EN0	DBB		SNAP RING
14	05066958AA	2				EN0	DBB		SEAL
15	05066786AA	1				EN0	DBB		GASKET, Valve Cover


LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Cylinder Block 2.5L [ENJ]  
Figure 2.5LD-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DBB] = All Manual Transmissions  
[EN0] = All 4 Cylinder Turbo Diesel Engines

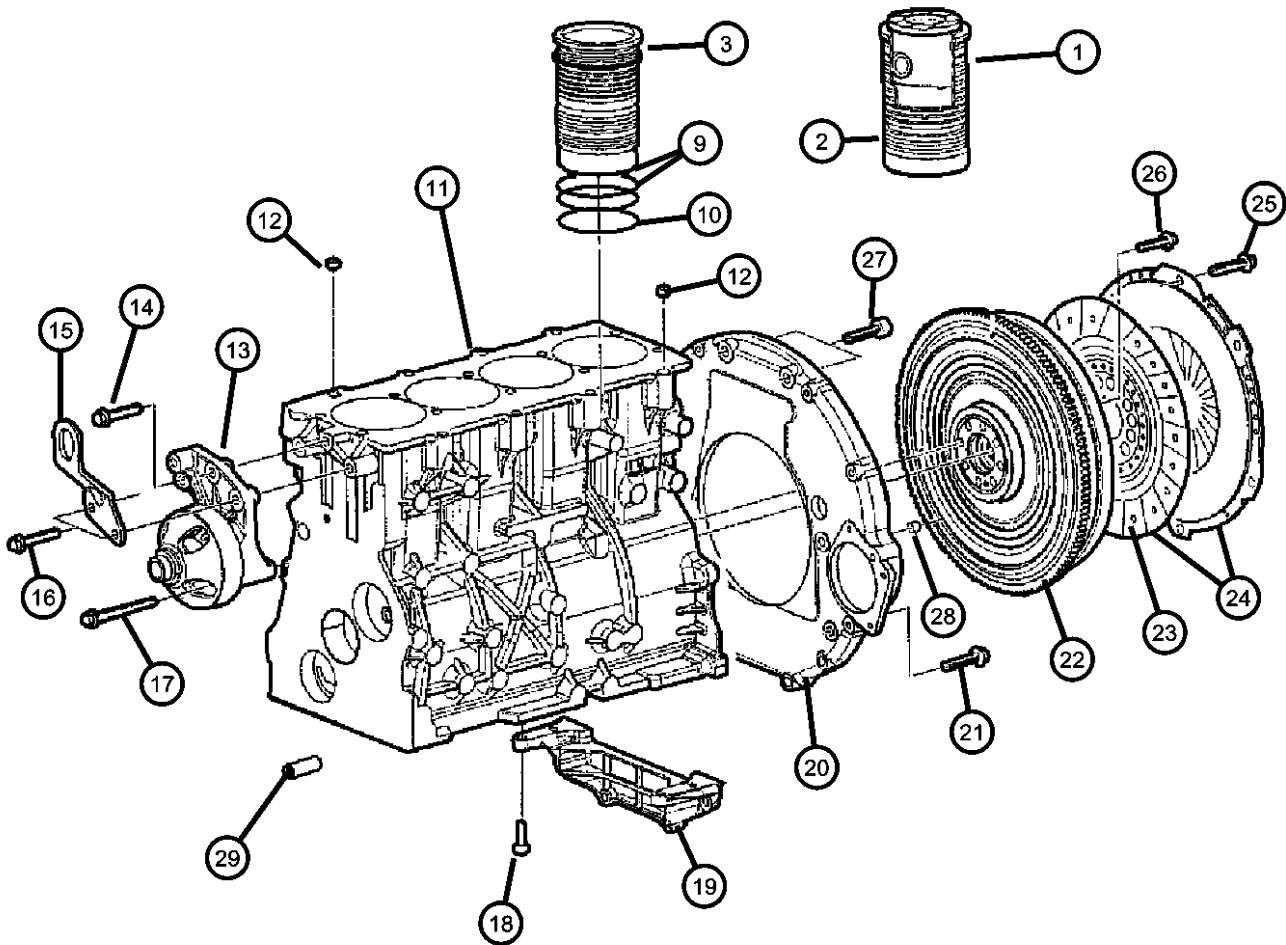


1	05093877AA	4				EN0	DBB		LINER AND PISTON, Cylinder, Complete Assembly
2	05093878AA	4				EN0	DBB		LINER, Cylinder
3	04720620	4				EN0	DBB		SHIM, Cylinder Liner, 0.15mm
-4	05066747AA	4				EN0	DBB		SHIM KIT, Cylinder LinerStandard
-5	04720624	4				EN0	DBB		SHIM, Cylinder Liner, 0.17mm
-6	04720621	4				EN0	DBB		SHIM, Cylinder Liner, 0.20mm
-7	04720623	4				EN0	DBB		SHIM, Cylinder Liner, 0.23mm
-8	04720622	4				EN0	DBB		SHIM, Cylinder Liner, 0.25mm
9	04720627	8				EN0	DBB		O RING, Cylinder Liner
10	04720625	4				EN0	DBB		O RING, Cylinder Liner
11	05170772AA 04761840	1				EN0	DBB		ENGINE, 3/4 Tested, Diesel Mopar 10W-40 Engine Oil Quart
12	04720237	2				EN0	DBB		DOWEL, Transmission Adapter
13	05072447AA	1				EN0	DBB		BRACKET, Fan
14	05066939AA	3				EN0	DBB		SCREW
15	05072754AA	1				EN0	DBB		BRACKET, Engine Lift
16	05003533AA	2				EN0	DBB		BOLT, M10x45
17	05015067AA	1				EN0	DBB		BOLT, Hex Flange Head
18	04720684	4				EN0	DBB		BOLT
19	05072753AA	1				EN0	DBB		BRACKET
20	05093879AB	1				EN0	DBB		HOUSING, Flywheel
21	05003532AA	4				EN0	DBB		BOLT, Adaptor Plate
22	52104420AB	1				EN0	DBB		FLYWHEEL
23	52104303AB	1				EN0	DBB		DISC, Clutch
24	05066191AA	1				EN0	DBB		CLUTCH PACKAGE
25	05072396AA	6				EN0	DBB		BOLT
26	05072664AA	8				EN0	DBB		BOLT

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Cylinder Block 2.5L [ENJ]  
Figure 2.5LD-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
27	04864757	2				EN0	DBB		BOLT
28	05015045AA	2				EN0	DBB		DOWEL, Transmission Adapter
29	04720304	1				EN0	DBB		DOWEL, Front Cover
-30	05093909AA	1				EN0	DBB		PLUG

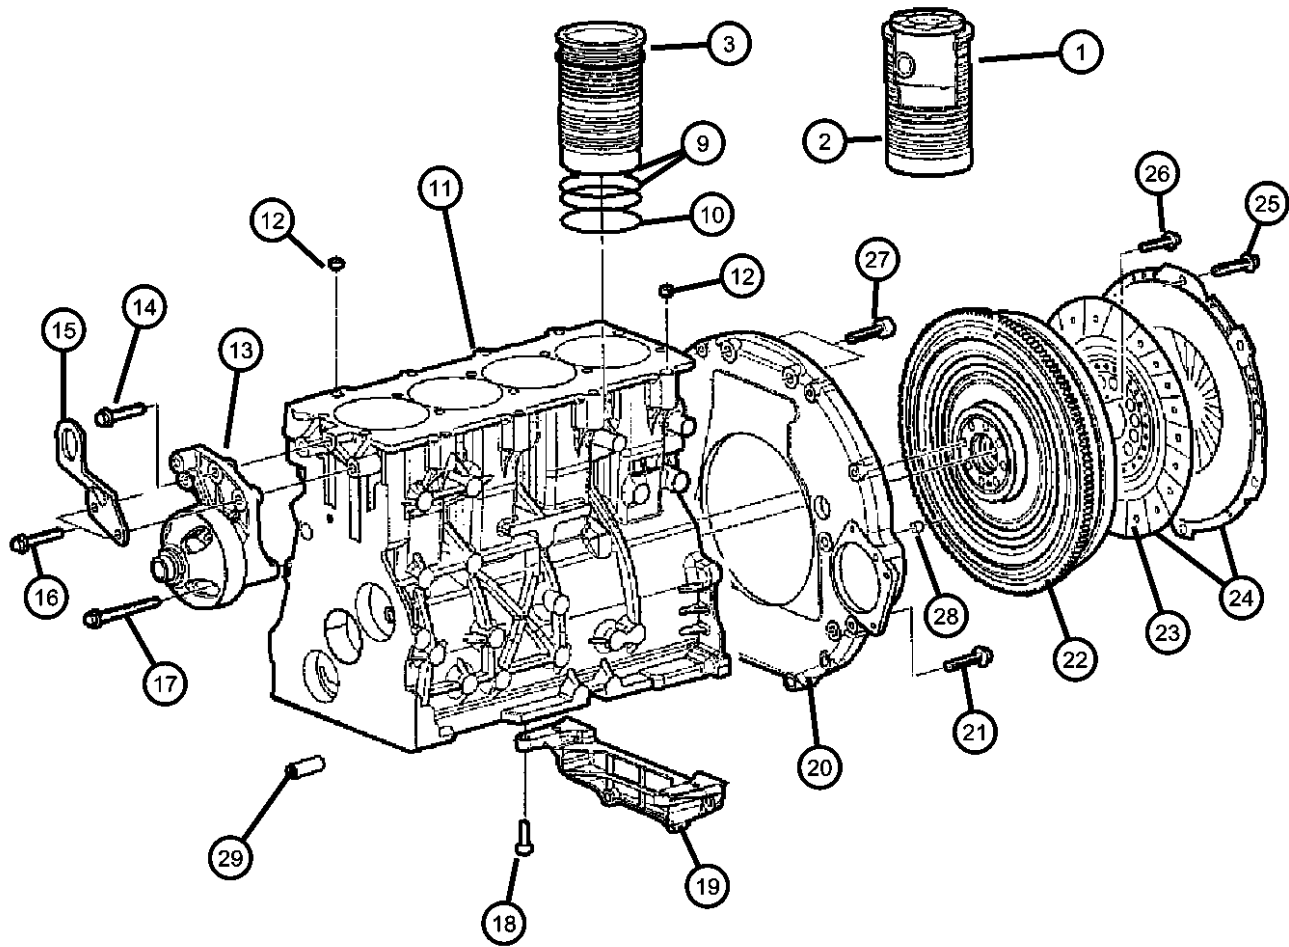

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Crankshaft,Pistons and Related Parts 2.5L [ENJ]  
Figure 2.5LD-410

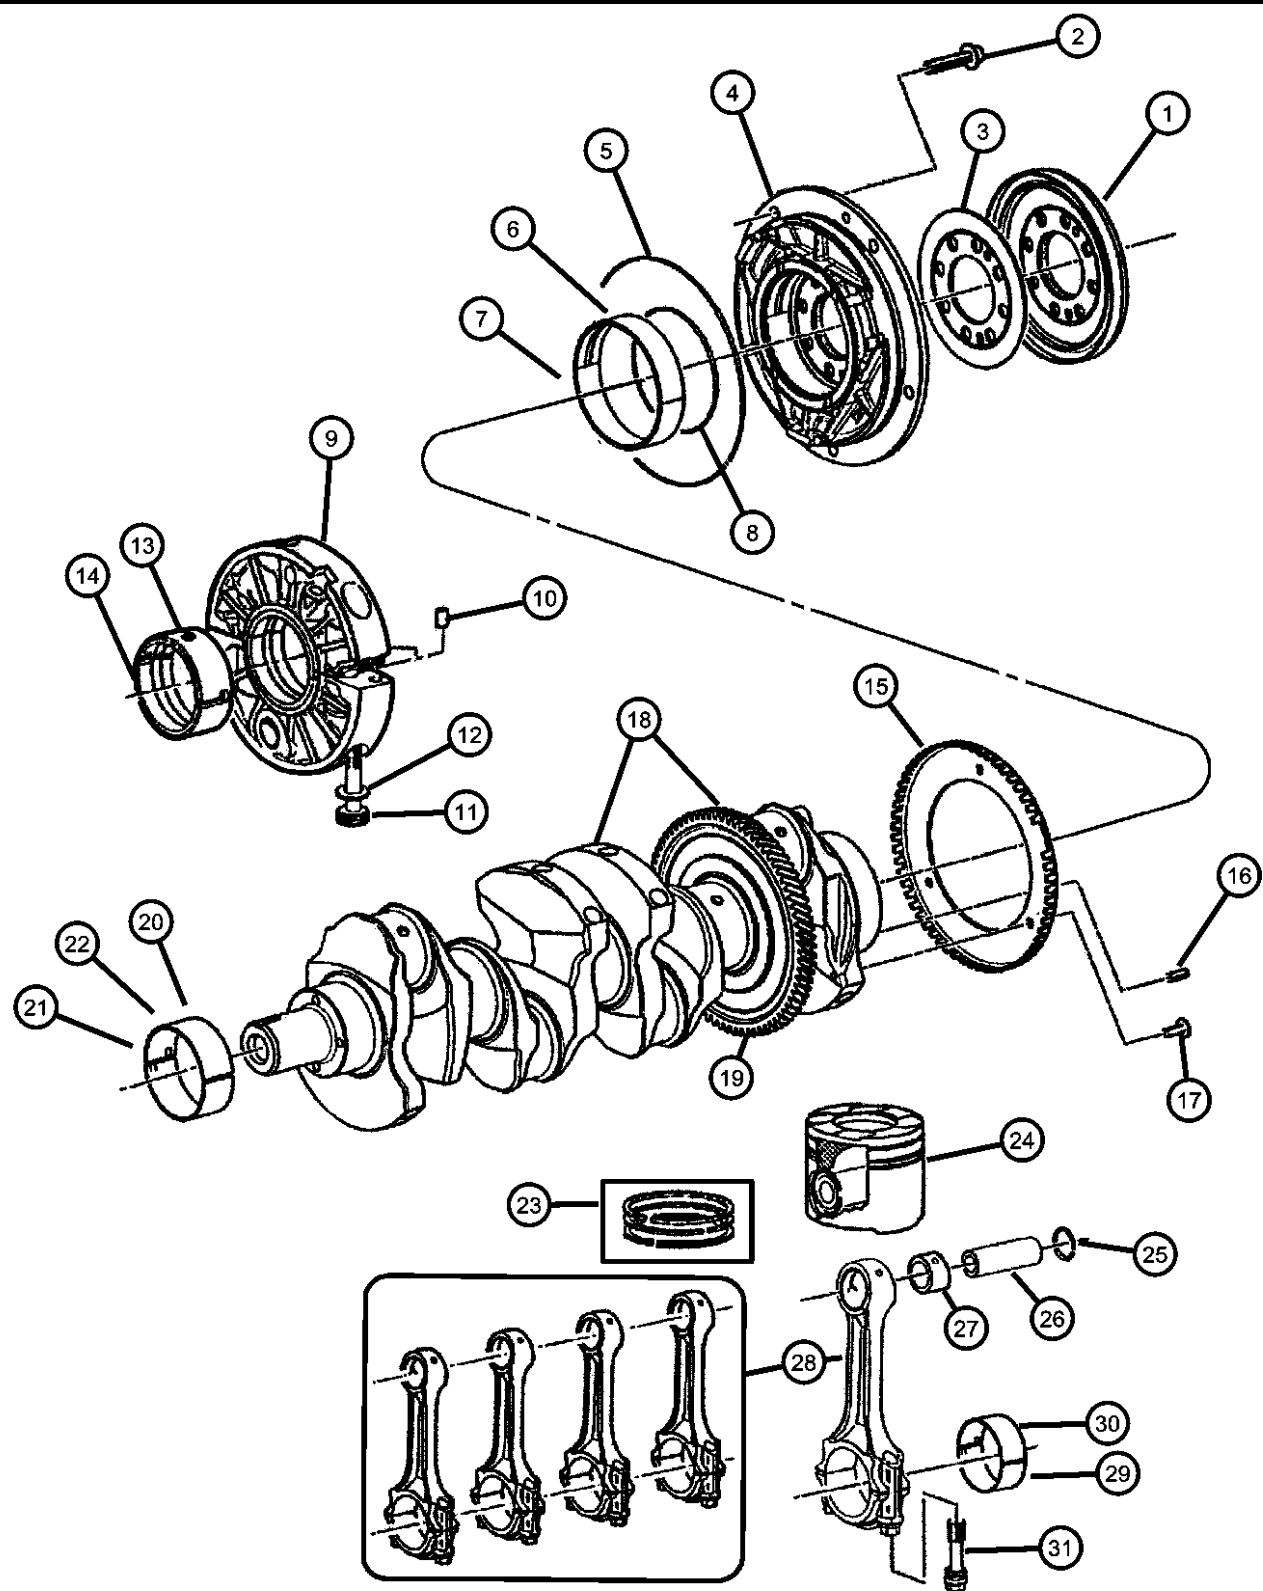


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DBB] = All Manual Transmissions [EN0] = All 4 Cylinder Turbo Diesel Engines									
1	05066756AA	1				EN0	DBB		SEAL, Crankshaft Oil, Rear
2	04864537	5				EN0	DBB		BOLT, 8Mx20
3	05093882AA	1				EN0	DBB		WASHER, Thrust
4	05101924AA	1				EN0	DBB		HOUSING, Rear Bearing
5	04720277	1				EN0	DBB		O RING, Crankshaft Rear Support
6	05066761AA	1				EN0	DBB		BEARING, Crankshaft
7	05066762AA	1				EN0	DBB		BEARING, Crankshaft
8	05066763AA	1				EN0	DBB		O RING, Crankshaft Rear Support
9	05066757AA	3				EN0	DBB		HOUSING, Crankshaft Bearing
10	04720241	6				EN0	DBB		DOWEL, Center Bearing Housing
11	04720242	6				EN0	DBB		SCREW
12	04720243	6				EN0	DBB		WASHER, Lock, M10
13	05069079AA	3				EN0	DBB		BEARING, Crankshaft, STD.
14	05069080AA	3				EN0	DBB		BEARING, Crankshaft, .250mm U/S
15	05066882AA	1				EN0	DBB		SENSOR, Crankshaft
16	05093885AA	1				EN0	DBB		PIN, Spring
17	05069137AA	3				EN0	DBB		SCREW
18	05093880AB	1				EN0	DBB		CRANKSHAFT
19	05066977AA	1				EN0	DBB		GEAR, Ring
20	05069077AA	1				EN0	DBB		BEARING, Crankshaft, STD.
21	05018726AA	8				EN0	DBB		BEARING, Crankshaft
22	05069078AA	1				EN0	DBB		BEARING, Crankshaft, .250mm U/S
23	05066759AA	4				EN0	DBB		RING KIT, Piston, Standard
24	05093884AA	4				EN0	DBB		PISTON
25	05096230AA	8				EN0	DBB		RING, Piston Pin
26	05096230AA	8							PIN, Piston, Serviced with Piston, (NOT SERVICED)

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel EN0 = 4Cyl Turbo Diesel EKO = All 3.7L ED0 = All 2.4L	DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions
H = Sport	U = RHD (4WD)			
M = Renegade	T = LHD (2WD)			

AR = use ase required - = Non illustrated part

Crankshaft,Pistons and Related Parts 2.5L [ENJ]  
Figure 2.5LD-410

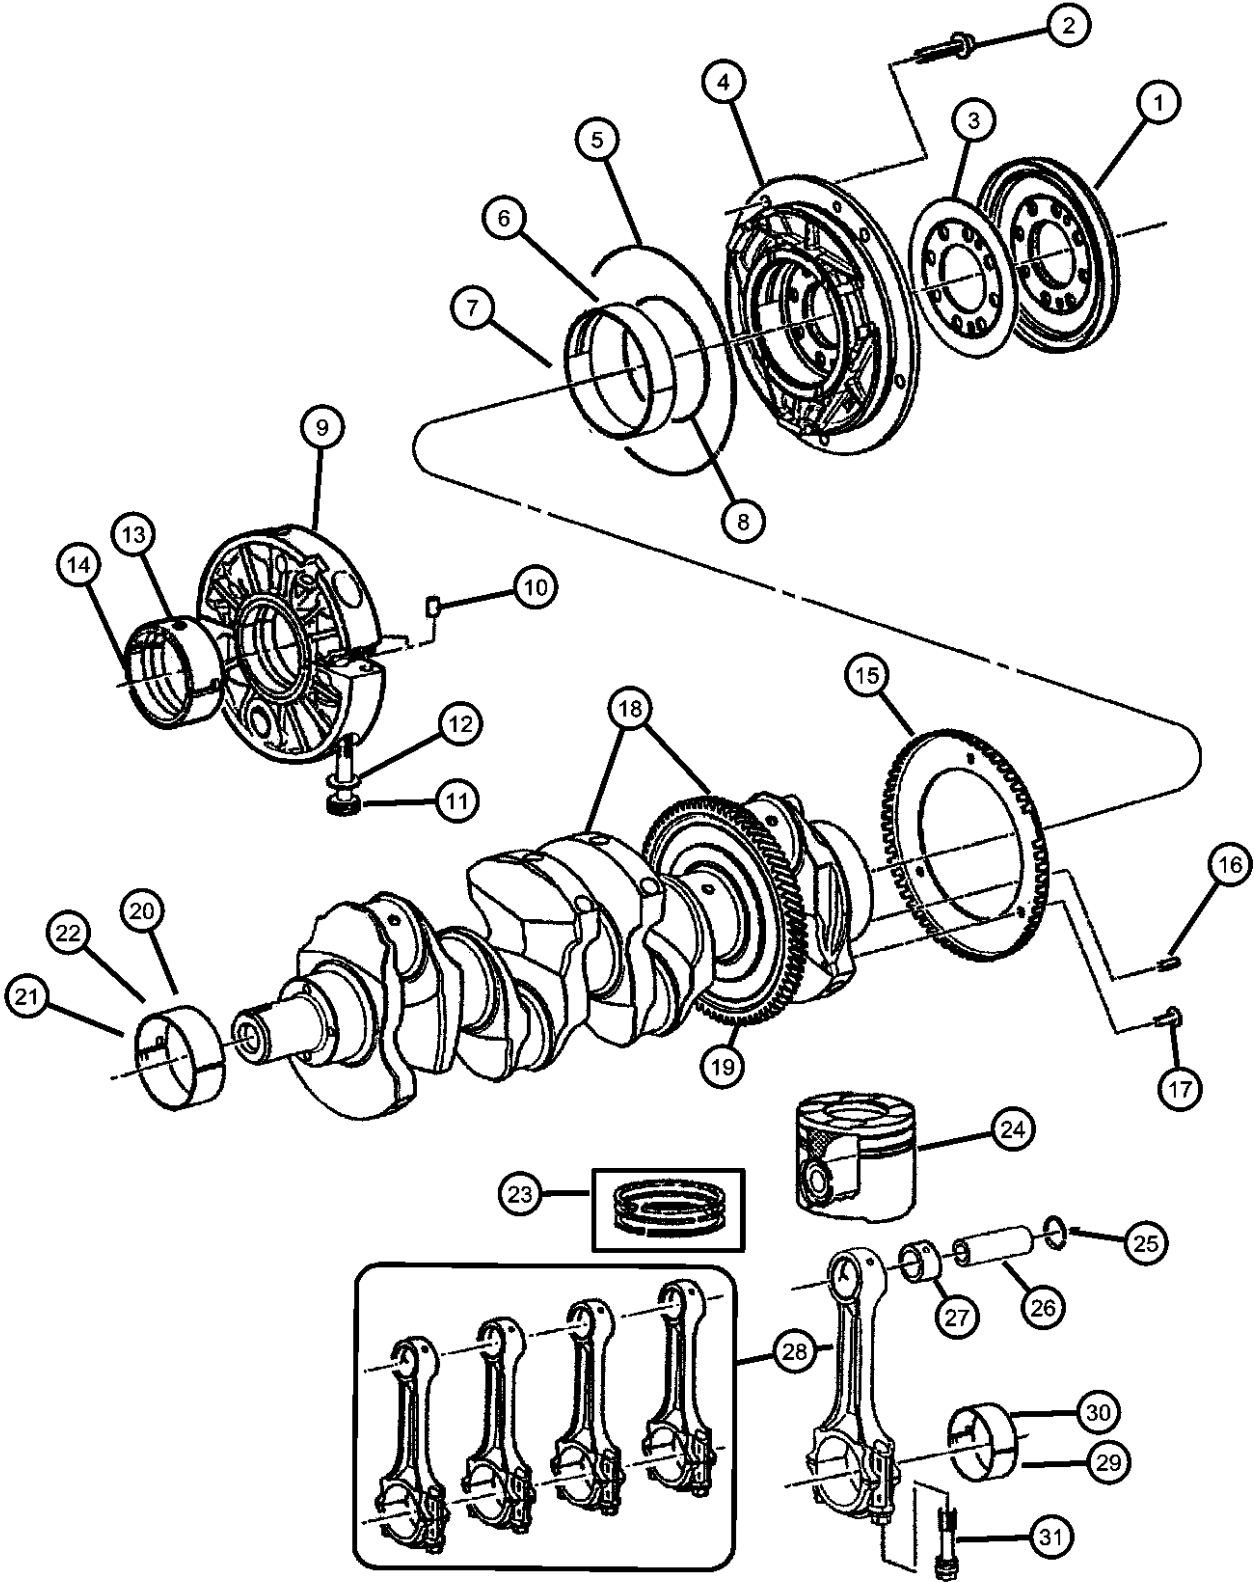


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
27	05093887AA	4				EN0	DBB		BUSHING, Connecting Rod
28	05093883AA	1				EN0	DBB		ROD, Connecting
29	04720877	4				EN0	DBB		BEARING, Connecting Rod, STD.
30	04720883	4				EN0	DBB		BEARING, Connecting Rod, .25 mm U/S
31	05093889AA	8				EN0	DBB		BOLT, Connecting Rod

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Camshaft and Valves 2.5L [ENJ]  
Figure 2.5LD-510

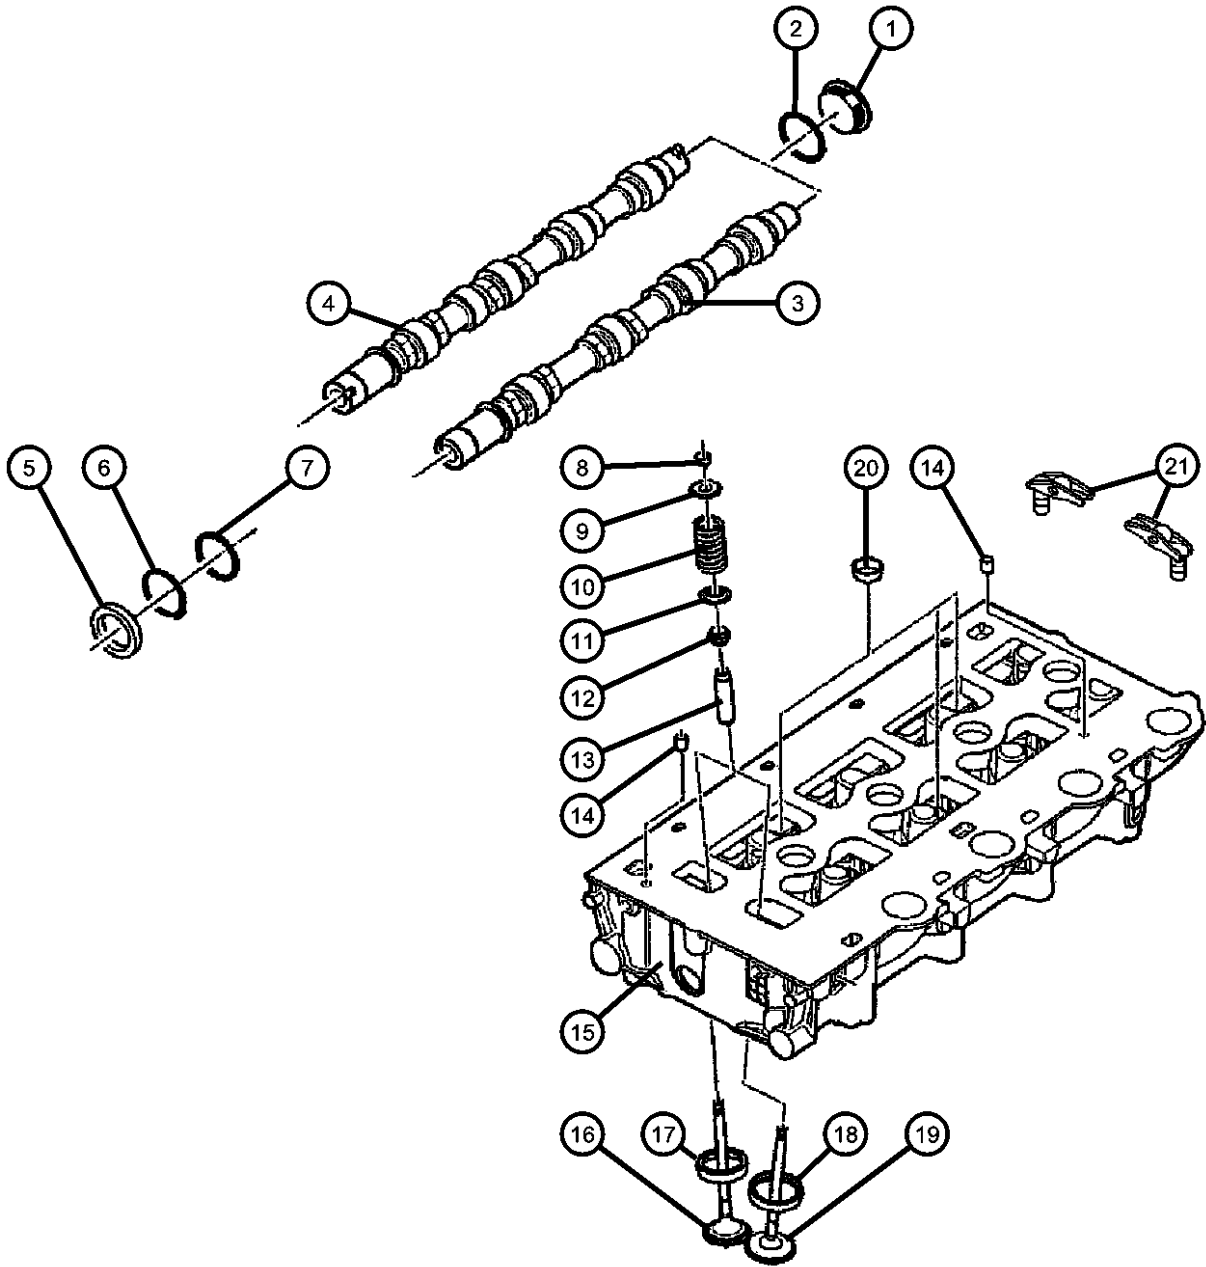


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Cover Assembly Includes: Cylinder Head Cover; Camshafts with Seals, Snap Rings, Spacers and Cover Plugs with their Gaskets Sales Codes: [DBB] = All Manual Transmissions [EN0] = All 4 Cylinder Turbo Diesel Engines									
1	05066855AA	2				EN0	DBB		PLUG, Camshaft
2	05066811AA	2				EN0	DBB		WASHER, Plain, 16.2x19.9x1.5
3	05066850AB	1				EN0	DBB		CAMSHAFT, Exhaust
4	05066847AB	1				EN0	DBB		CAMSHAFT, Intake
5	05066958AA	2				EN0	DBB		SEAL
6	05066841AA	2				EN0	DBB		SNAP RING
7	05066844AA	2				EN0	DBB		SPACER
8	05066778AA	32				EN0	DBB		LOCK, Valve Spring Retainer
9	05093892AA	16				EN0	DBB		RETAINER, Valve Spring
10	05066776AA	16				EN0	DBB		SPRING, Valve
11	05066775AA	16				EN0	DBB		SEAL, Valve Guide
12	05093891AA	16				EN0	DBB		SEAL, Valve Guide
13	05066773AA	16				EN0	DBB		GUIDE, Intake/Exhaust Valve, Standard Size
14	04720165	1				EN0	DBB		DOWEL, Rocker
15	05093893AB	1				EN0	DBB		HEAD, Cylinder
16	05066769AA	1				EN0	DBB		VALVE, Exhaust, Standard
17	05066771AA	8				EN0	DBB		SEAT, Exhaust Valve, 0.30mm Oversize
18	05066772AA	8				EN0	DBB		SEAT, Intake Valve
19	05066770AA	8				EN0	DBB		VALVE, Intake, Standard
20	04723211	2				EN0	DBB		PLUG, Cylinder Block Oil Hole
21	05066780AA	16				EN0	DBB		ROCKER ARM, Inlet and Exhaust Valve

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Timing Cover and Related Parts 2.5L [ENJ]  
Figure 2.5LD-610

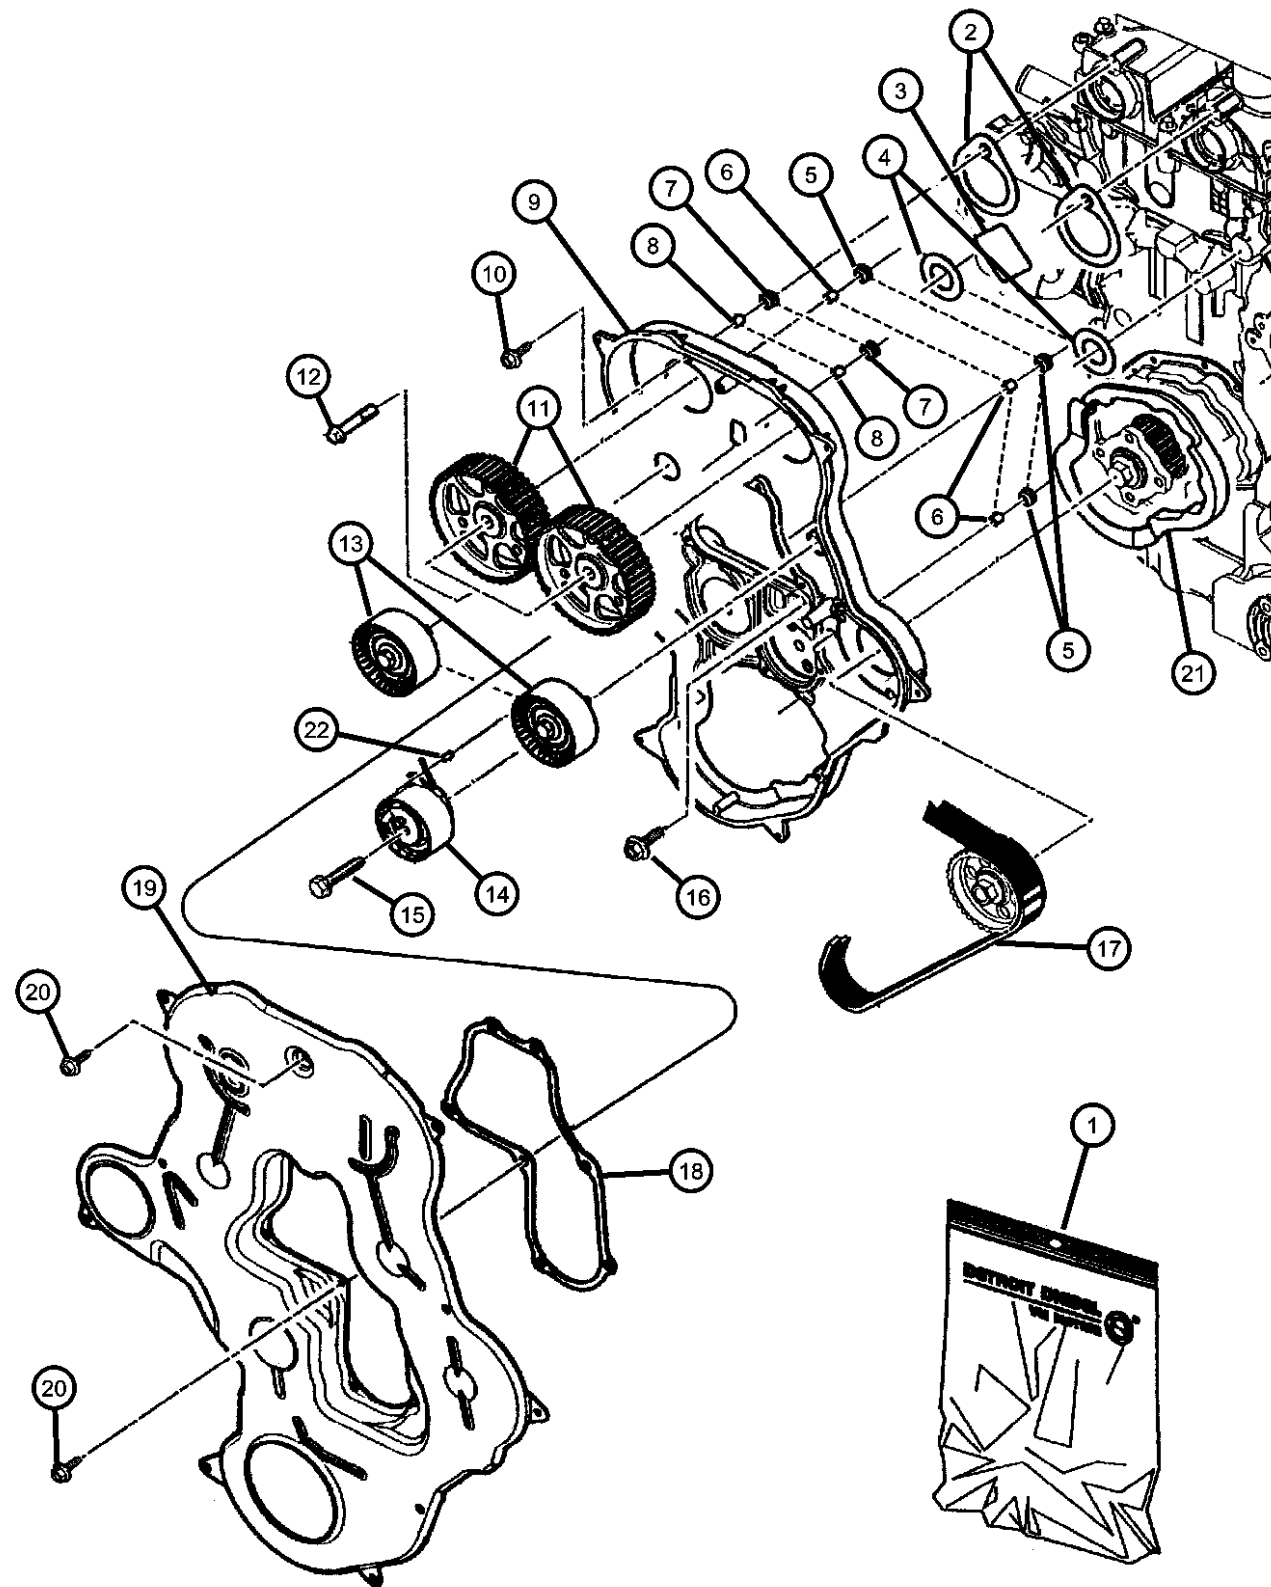

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DBB] = All Manual Transmissions [EN0] = All 4 Cylinder Turbo Diesel Engines									
1	05019861AA	1				EN0	DBB		GASKET KIT, Timing Cover
2	05019861AA	1							GASKET, Serviced In # 1, (NOT SERVICED)
3	05019861AA	1							GASKET, Serviced In # 1, (NOT SERVICED)
4	05019861AA	1							GASKET, Serviced In # 1, (NOT SERVICED)
5	05019861AA	1							DAMPER, Vibration, Serviced In # 1, (NOT SERVICED)
6	05019861AA	1							BUSHING, Balance Shaft, Serviced In # 1, (NOT SERVICED)
7	05019861AA	1							DAMPER, Vibration, Serviced In # 1, (NOT SERVICED)
8	05019861AA	1							BUSHING, Balance Shaft, Serviced In # 1, (NOT SERVICED)
9	05073446AB	1				EN0	DBB		COVER, Timing Case
10	05069114AA	5				EN0	DBB		SCREW
11	05066926AA	2				EN0	DBB		GEAR, Balance Shaft
12	04897825AA	2				EN0	DBB		SCREW
13	05093931AA	2				EN0	DBB		PULLEY, Idler
14	05066826AA	1				EN0	DBB		TENSIONER, Belt
15	05015031AA	1				EN0	DBB		SCREW
16	05003532AA	4				EN0	DBB		BOLT, Adaptor Plate
17	05066928AA	1				EN0	DBB		BELT, Timing
18	05066921AA	1				EN0	DBB		GASKET, Timing Cover
19	05066919AB	1				EN0	DBB		COVER, Timing Case
20	05069112AA	17				EN0	DBB		SCREW
21	04863779	1				EN0	DBB		GASKET, Vacuum Pump, Mounting
22	04720304	1				EN0	DBB		DOWEL, Front Cover
-23									BELT KIT, Timing

LIBERTY (KJ)

SERIES

P = Limited  
H = Sport  
M = Renegade

LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EKO = All 3.7L  
ED0 = All 2.4L


TRANSMISSION

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

**Figure 2.5LD-610**

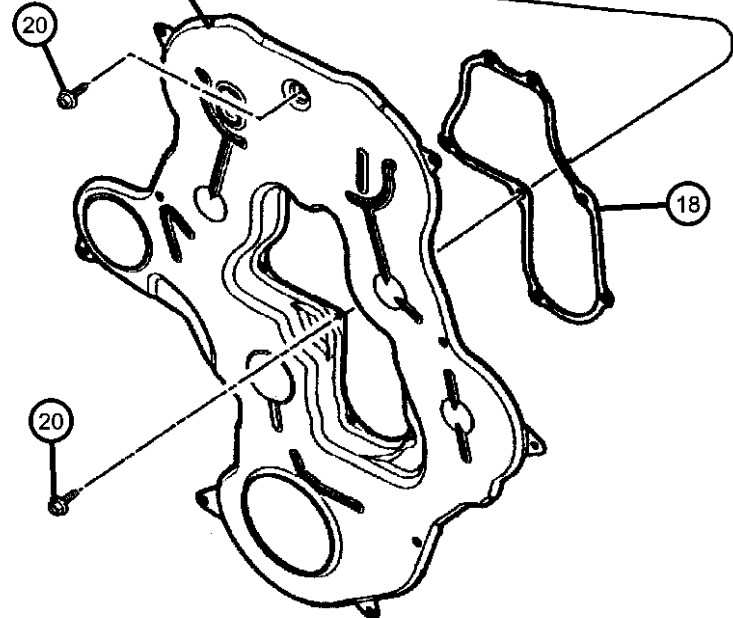

05139028AA	1	EN0	DG0
	1	EN0	DBB

SERIES

P = Limited  
H = Sport  
M = Renegade

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

74 = 4 Door (104.3 WB)


ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EK0 = All 3.7L  
ED0 = All 2.4L

DDD = Transmission - 5-Speed HD  
 Manual  
 V DDK = Transmission - 5-Speed HD  
 Manual  
 DG4 = Transmission-Multi-Speed  
 Auto, 45RFE  
 DG6 = Transmission-4-Spd.  
 Automatic, 42RLE  
 DGQ = Transmission-5-Spd Automatic  
 5-45RFE  
 DBB = All Manual Transmissions  
 DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrrated part

2004 KJ

Engine Oiling and Balance Shafts 2.5L [ENJ]  
Figure 2.5LD-710

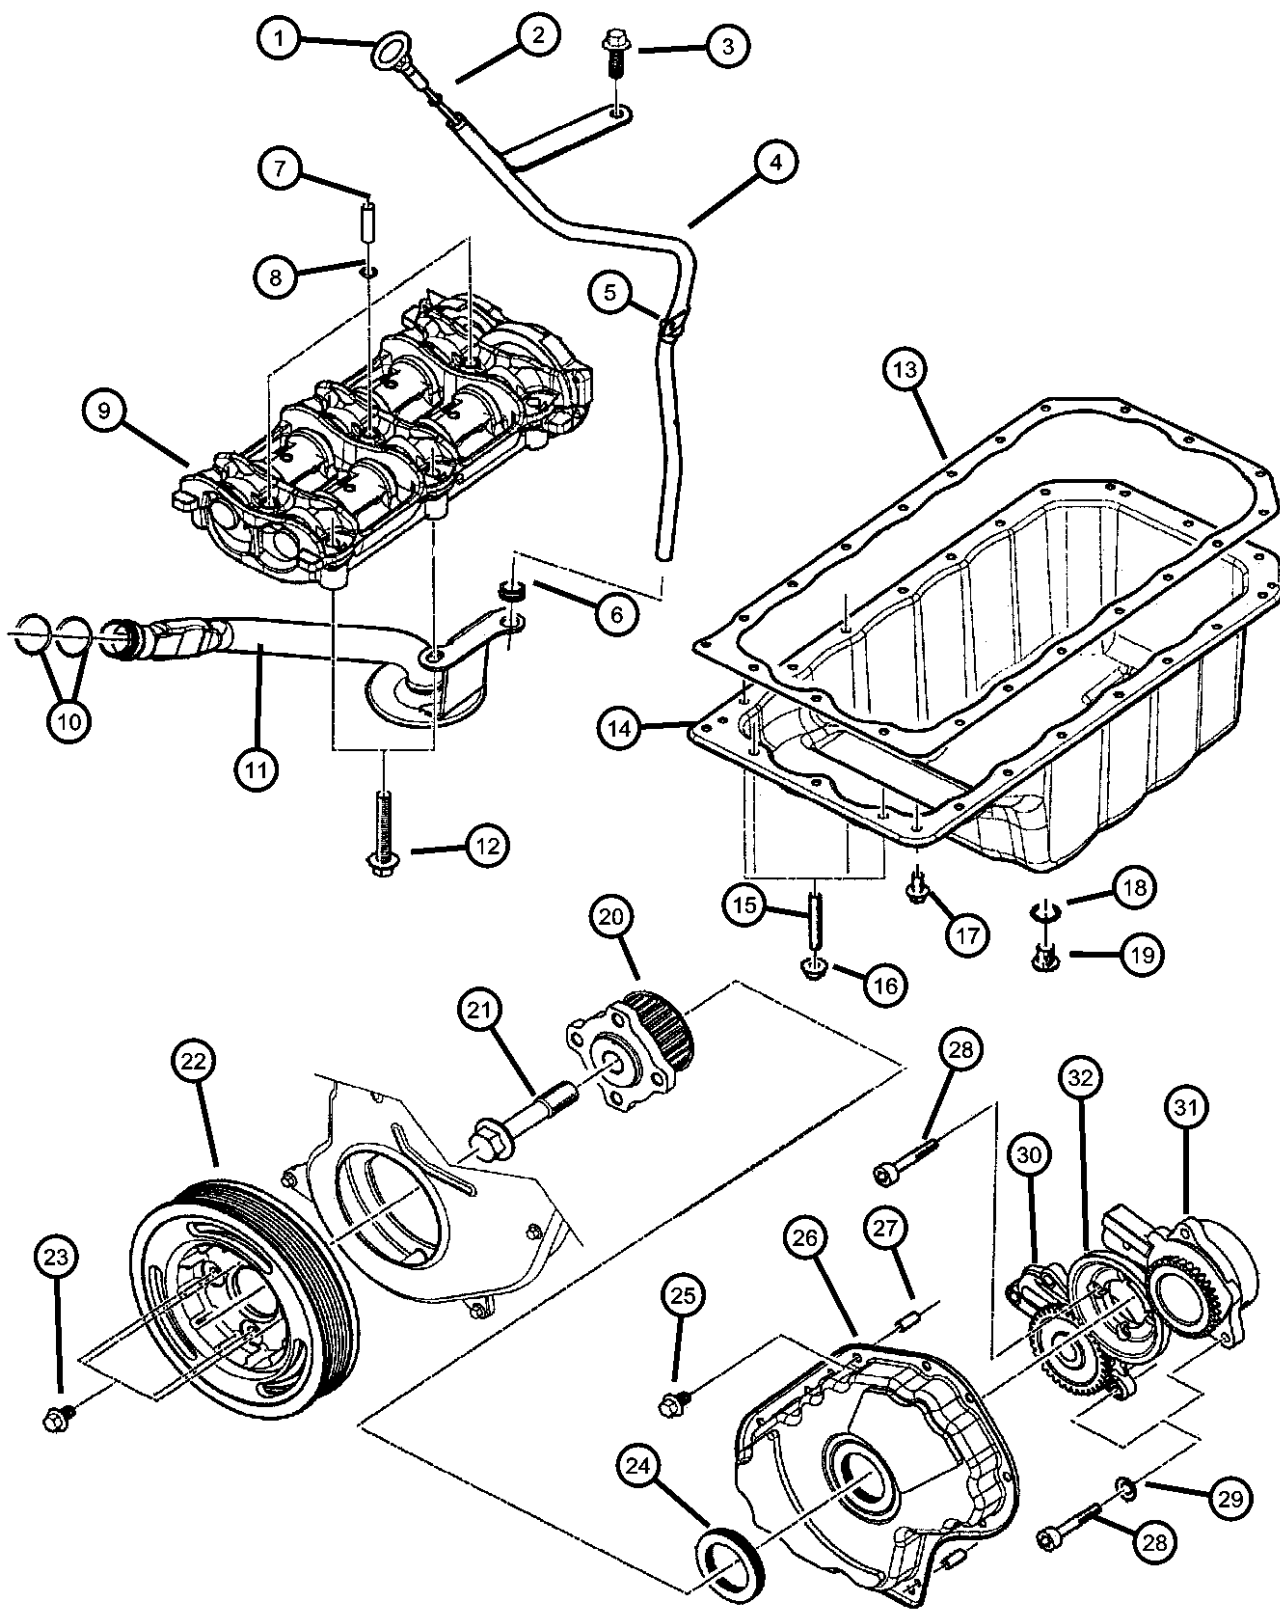

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DBB] = All Manual Transmissions [EN0] = All 4 Cylinder Turbo Diesel Engines									
1	05072682AB	1				EN0	DBB		INDICATOR, Engine Oil Level
2	04720373	1				EN0	DBB		O RING, Engine Oil Indicator
3	05003554AA	3				EN0	DBB		SCREW
4	05072681AC	1				EN0	DBB		TUBE, Oil Gauge
5	05083157AA	1				EN0	DBB		O RING
6	04720362	2				EN0	DBB		GASKET, Engine Oil Indicator Pipe
7	05093899AA	3				EN0	DBB		PIN
8	05066899AA	3				EN0	DBB		O RING
9	05066890AA	1				EN0	DBB		SHAFT, Balance
10	05066789AB	2				EN0	DBB		O RING, Oil Suction Tube
11	05072680AB	1				EN0	DBB		PICKUP, Engine Oil
12	05066962AA	6				EN0	DBB		SCREW
13	05066901AA	1				EN0	DBB		GASKET, Oil Pan
14	05072683AA	1				EN0	DBB		PAN, Engine Oil
15	04864745	1				EN0	DBB		BOLT
16	04778936	1				EN0	DBB		NUT, Suction Pipe Attaching
17	04864748	20				EN0	DBB		BOLT
18	04720353	1				EN0	DBB		WASHER, Plain
19	04720352	1				EN0	DBB		PLUG, Oil Drain
20	05066978AA	1				EN0	DBB		PULLEY, Crankshaft
21	05066832AA	1				EN0	DBB		SCREW
22	05072669AA	1				EN0	DBB		PULLEY, Crankshaft
23	05069138AA	4				EN0	DBB		SCREW, Damper Mounting
24	05072670AA	1				EN0	DBB		SEAL, Front Main Crankshaft
25	04864748	12				EN0	DBB		BOLT
26	05066955AA	1				EN0	DBB		COVER, Timing Belt
27	05066834AA	2				EN0	DBB		PIN

LIBERTY (KJ)

SERIES

P = Limited  
H = Sport  
M = Renegade

LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EKO = All 3.7L  
ED0 = All 2.4L


TRANSMISSION

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Engine Oiling and Balance Shafts 2.5L [ENJ]  
Figure 2.5LD-710

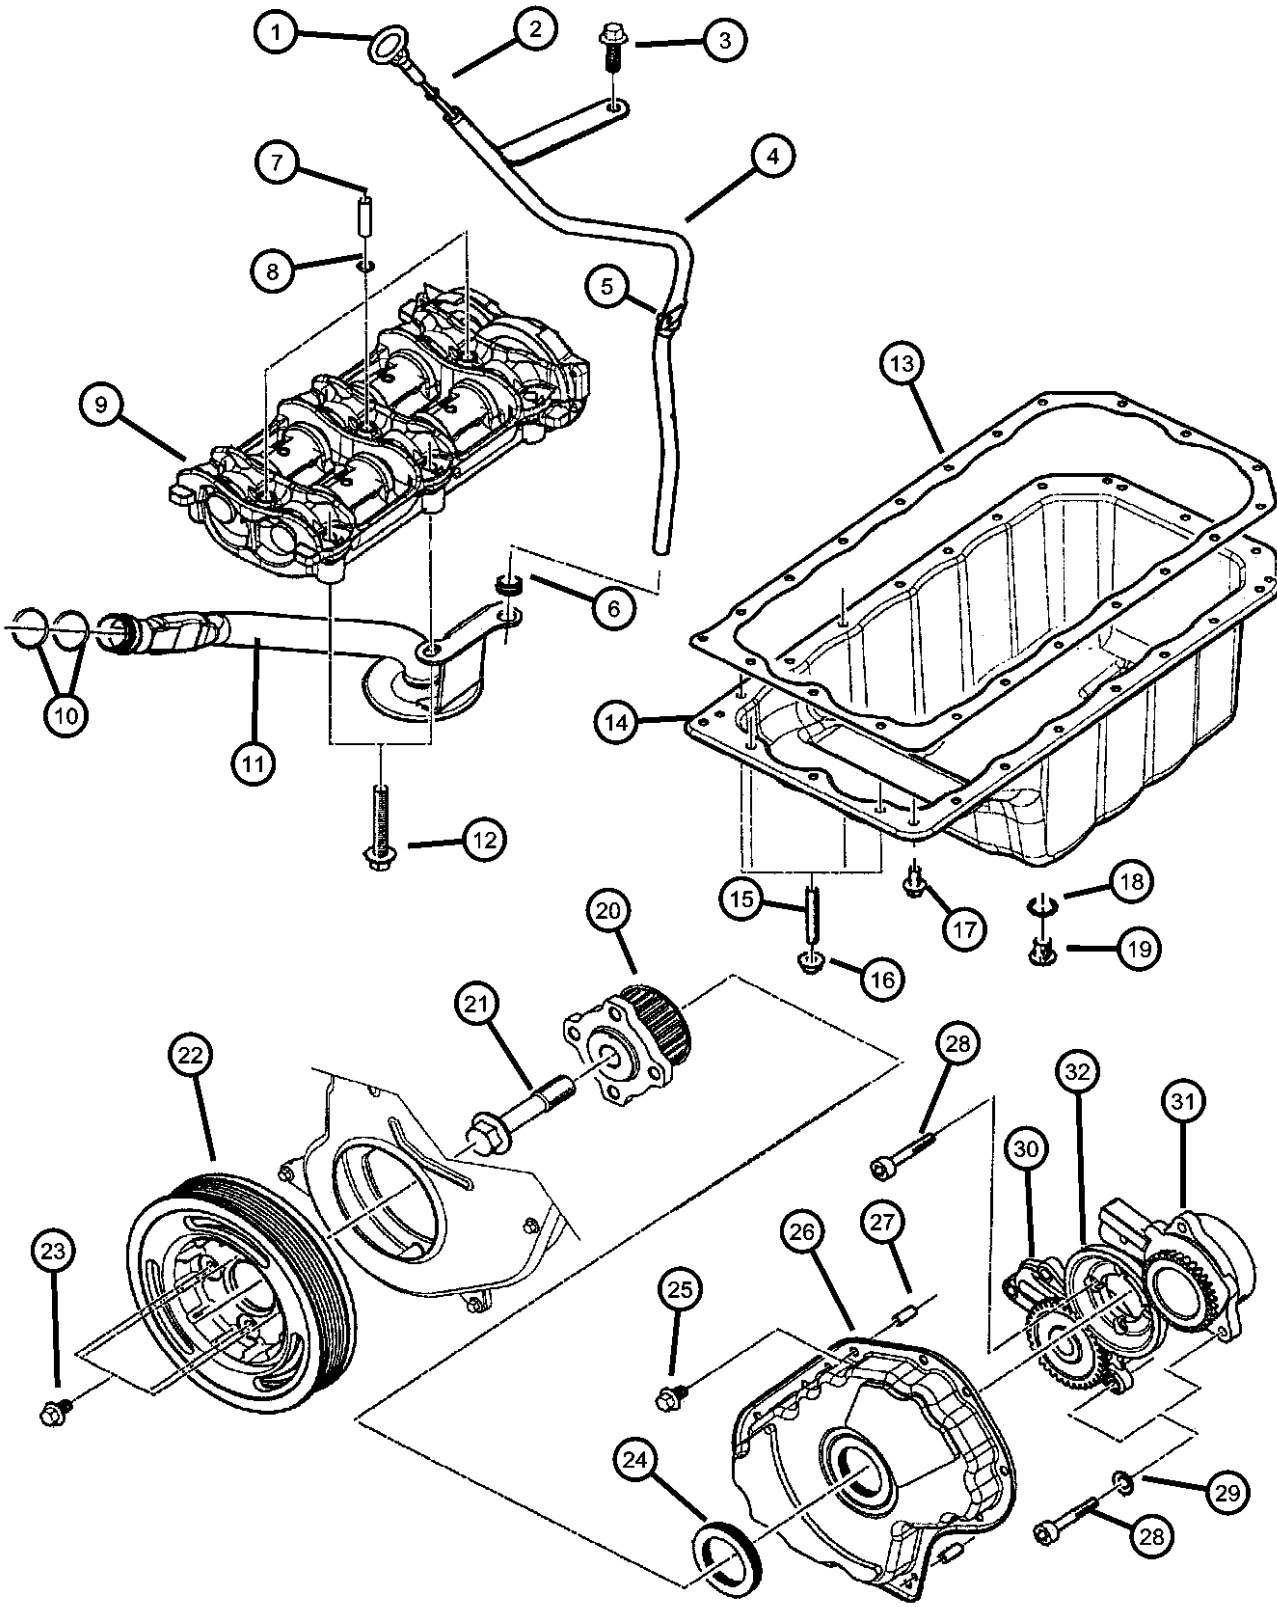


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
28	04720658	10				EN0	DBB		SCREW, Intake Manifold Elbow
29	04723204	5				EN0	DBB		WASHER, Implement Attaching
30	05093890AA	1				EN0	DBB		PUMP, Engine Oil
31	05072673AA	1				EN0	DBB		PUMP, Vacuum
32	05066835AA	1				EN0	DBB		GEAR, Ring

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Oil Cooler 2.5L [ENJ]  
Figure 2.5LD-720

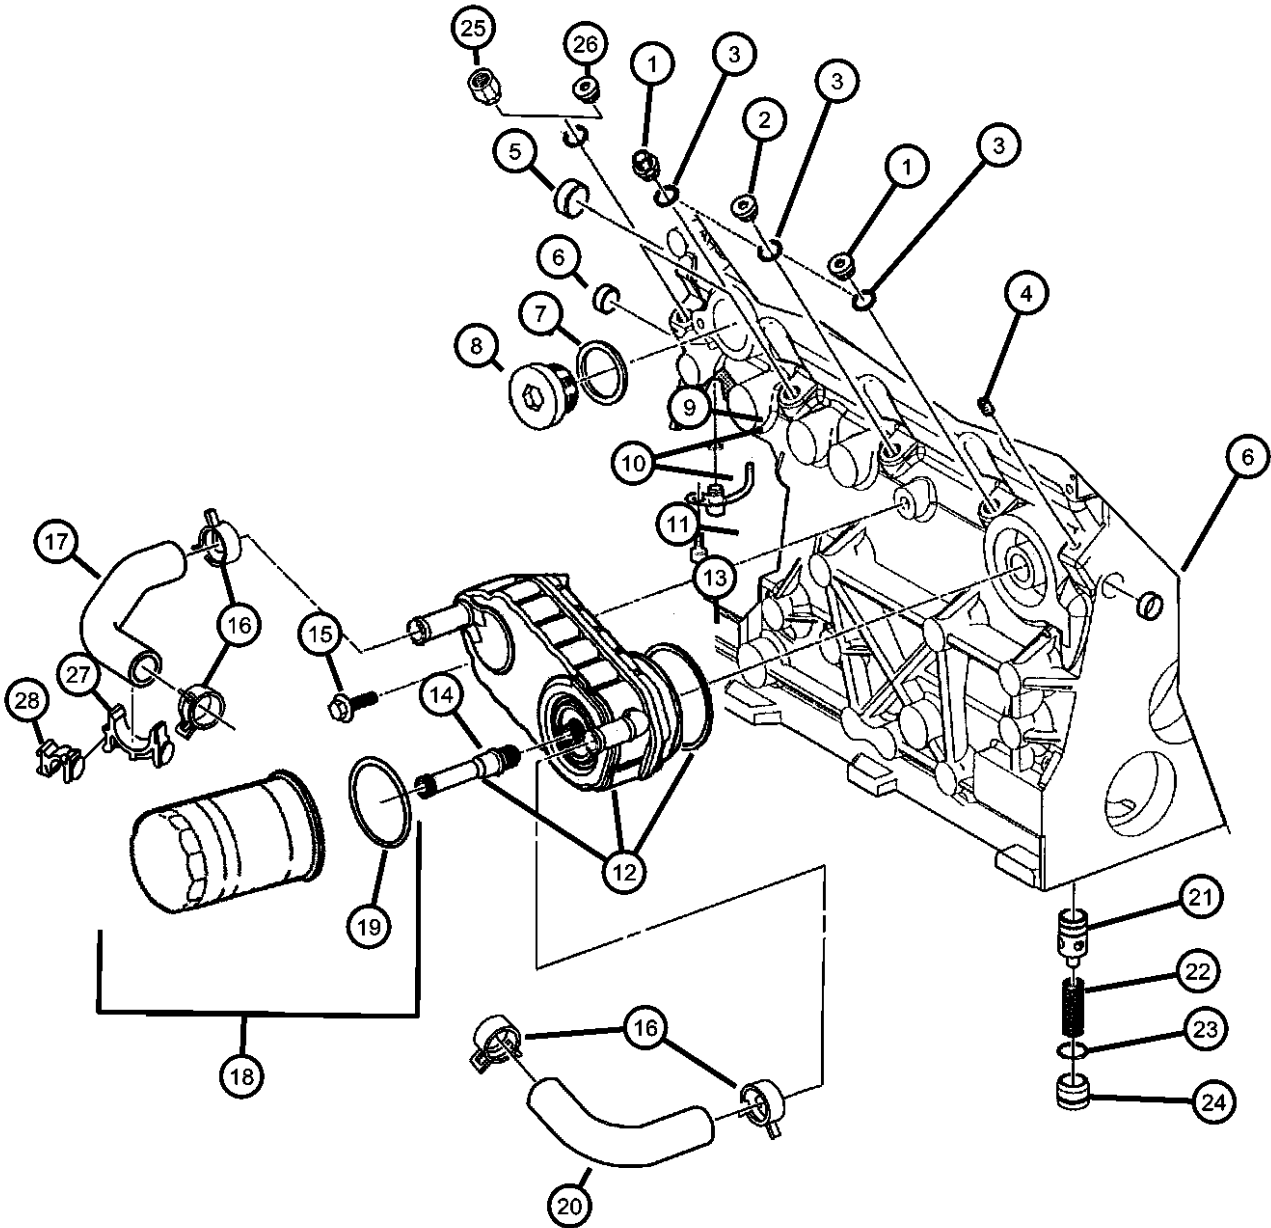


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DBB]=All Manual Transmissions [EN0]=All 4 Cylinder Turbo Diesel Engines									
1	05066889AA	2				EN0	DBB		BOLT, Oil Feed To Turbo Adapter
2	05066814AA	1				EN0	DBB		BOLT, Turbo Oil Feed Adapter
3	04720704	4				EN0	DBB		WASHER, Oil Pressure Transducer
4	04883424AA	1				EN0	DBB		PLUG, Cylinder Block
5	04778887	1				EN0	DBB		PLUG, Cylinder Block Oil Hole
6	04723211	2				EN0	DBB		PLUG, Cylinder Block Oil Hole
7	05066811AA	1				EN0	DBB		WASHER, Plain, 16.2x19.9x1.5
8	05066855AA	1				EN0	DBB		PLUG, Camshaft
9	04864689	4				EN0	DBB		O RING
10	05066812AB	4				EN0	DBB		JET, Valve Body
11	04882620	1				EN0	DBB		SCREW
12	05093913AA	1				EN0	DBB		COOLER, Engine Oil
13	04723217	1				EN0	DBB		O RING, Oil Cooler
14	05015178AA	1				EN0	DBB		FITTING, Engine Oil Cooler
15	05003724AA	1				EN0	DBB		SCREW
16	04883924AA	4				EN0	DBB		CLAMP, Heater Hose
17	05072710AA	1				EN0	DBB		HOSE, Engine Oil Cooler
18	05003558AA	1				EN0	DBB		FILTER, Engine Oil
19	05066946AA	1				EN0	DBB		GASKET
20	05072709AA	1				EN0	DBB		HOSE, Engine Oil Cooler
21	05066816AA	1				EN0	DBB		VALVE, Oil Pressure Relief
22	05093915AA	1				EN0	DBB		SPRING, Oil Pressure Relief Valve
23	05066887AA	1				EN0	DBB		O RING
24	05066886AA	1				EN0	DBB		PLUG
25	05093916AA	1				EN0	DBB		ADAPTER
26	05066889AA	2				EN0	DBB		BOLT, Oil Feed To Turbo Adapter

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Oil Cooler 2.5L [ENJ]  
Figure 2.5LD-720


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
27	05093906AA	1				EN0	DBB		CLAMP
28	05093914AA	1				EN0	DBB		CLAMP

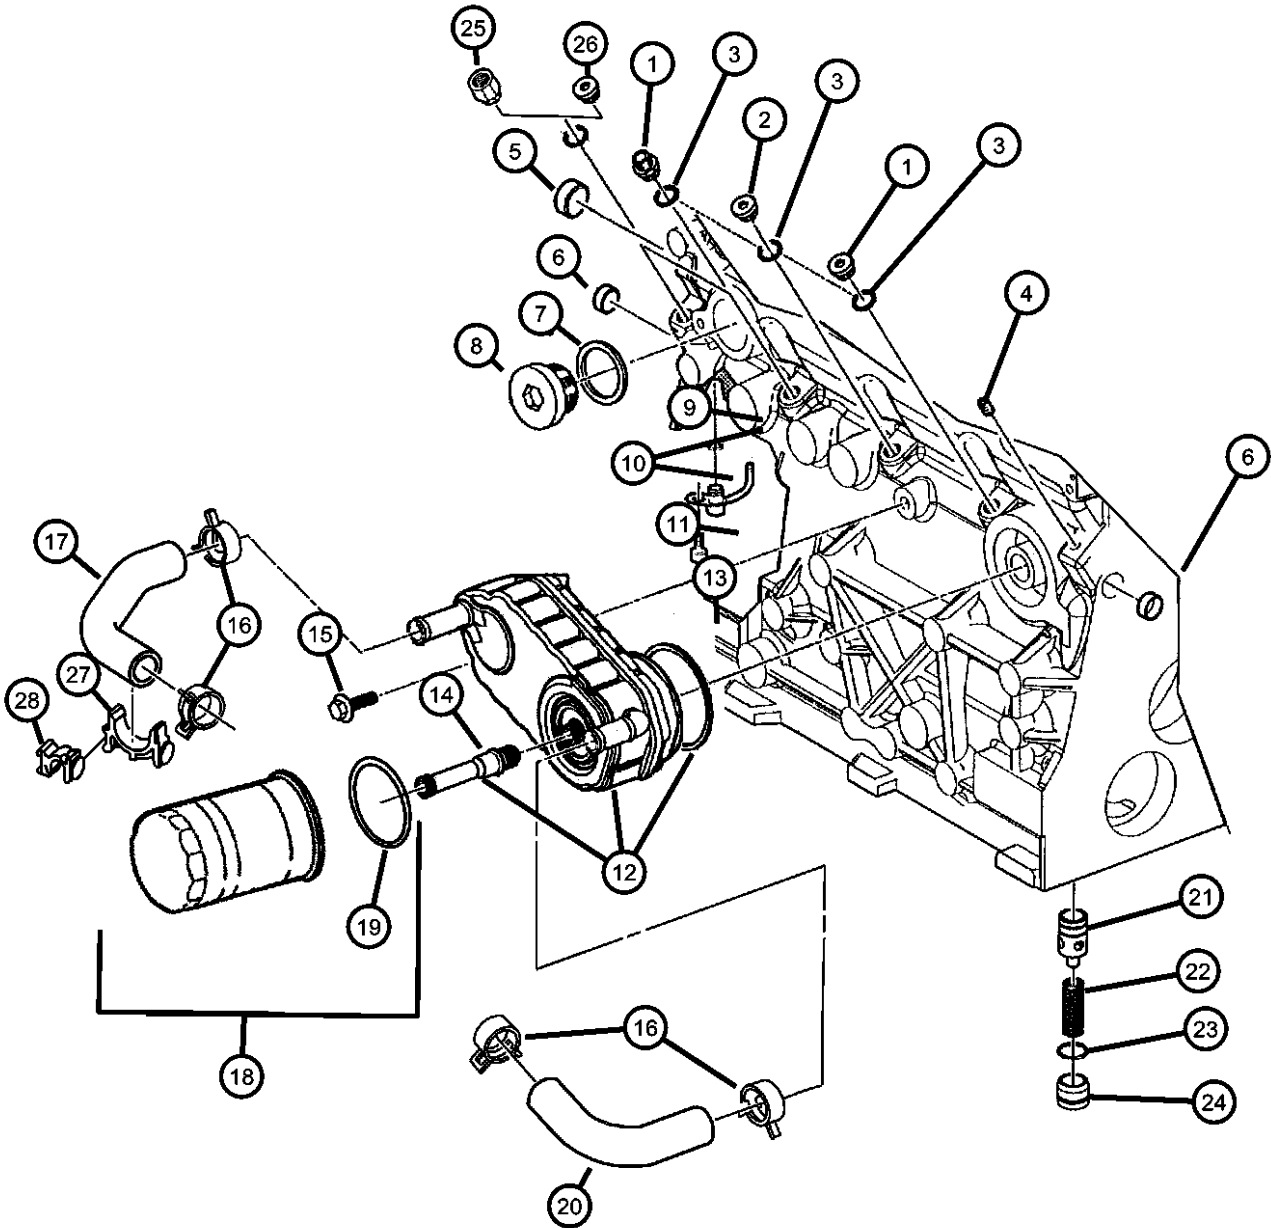

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Engine Oil Filter Adapter And Lines 2.5L Diesel [ENJ]  
Figure 2.5LD-730

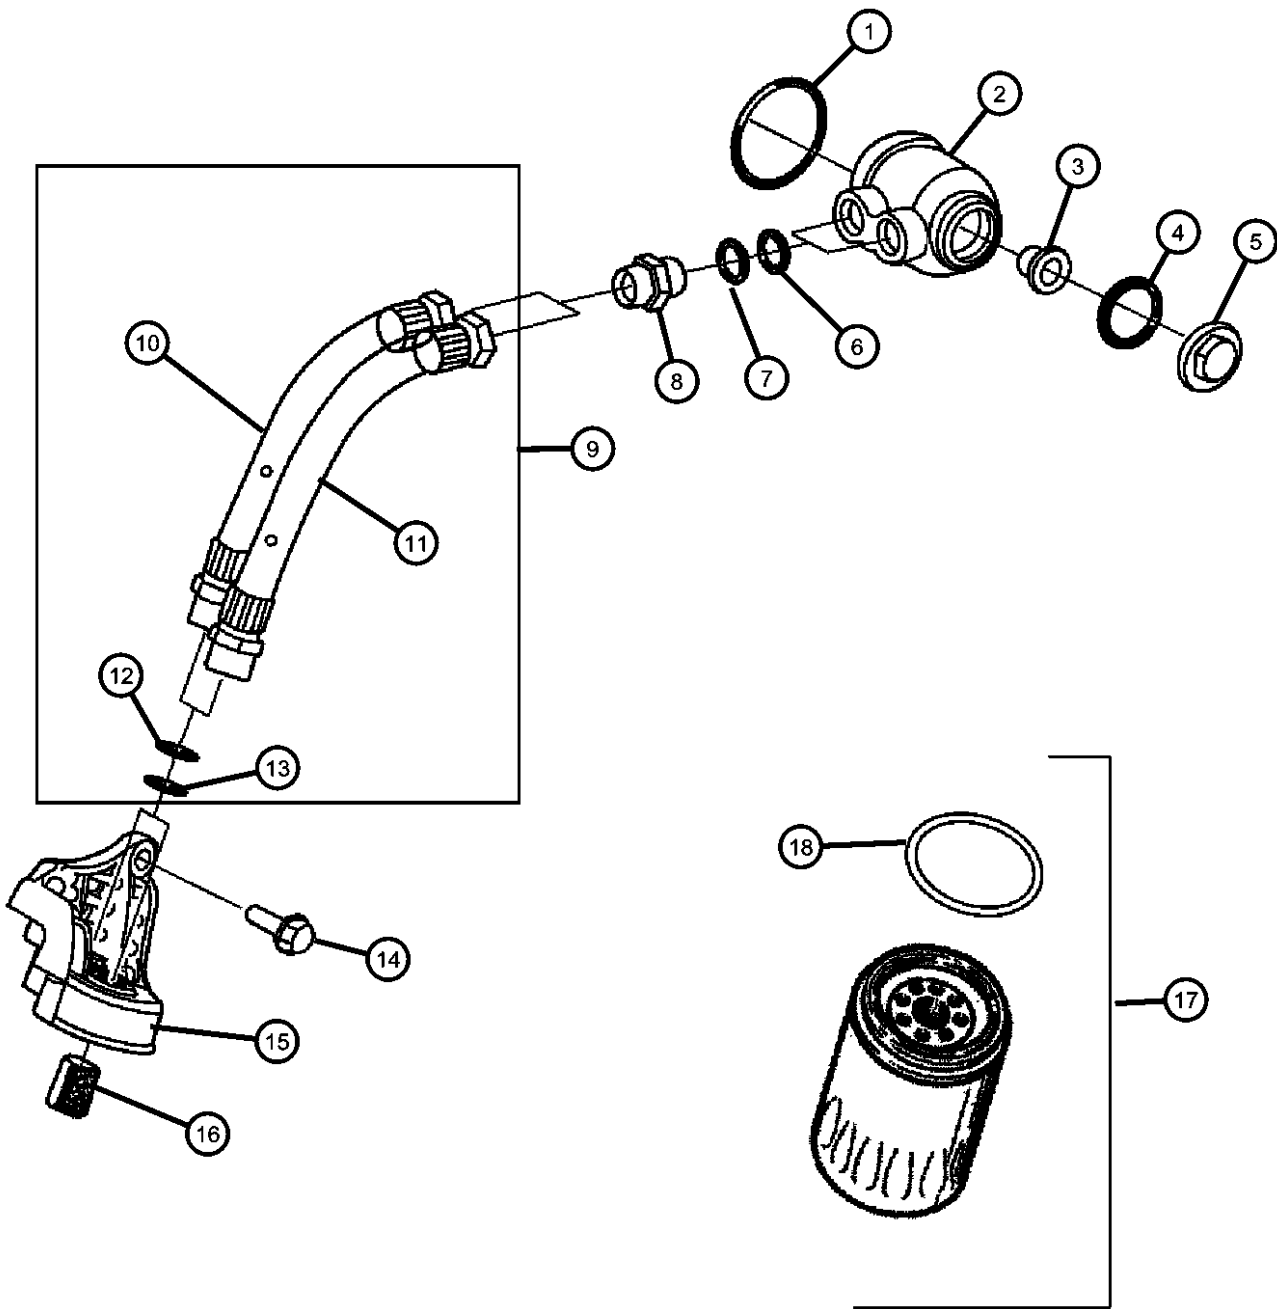


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DBB]=All Manual Transmissions [DG0]=All Automatic Transmissions [EN0]=All 4 Cylinder Turbo Diesel Engines									
1	04720375	1				EN0	DG0		O RING, Oil Filter Base
		1				EN0	DBB		
2	05072716AA	1				EN0	DG0		ADAPTER, Oil Filter
		1				EN0	DBB		
3	04723334	1				EN0	DG0		GASKET, Valve
		1				EN0	DBB		
4	04886305AA	1				EN0	DG0		O RING, Oil Filter Adapter
		1				EN0	DBB		
5	05072718AB	1				EN0	DG0		NUT
		1				EN0	DBB		
6	05159122AA	4				EN0	DG0		WASHER
		4				EN0	DBB		
7	05159213AA	4				EN0	DG0		WASHER
		4				EN0	DBB		
8	05093920AA	2				EN0	DBB		UNION
		2				EN0	DG0		
9	05183851AA	1				EN0	DBB		PIPE, Kit Includes 10,11,12,13

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part



Engine Oil Filter Adapter And Lines 2.5L Diesel [ENJ]  
Figure 2.5LD-730

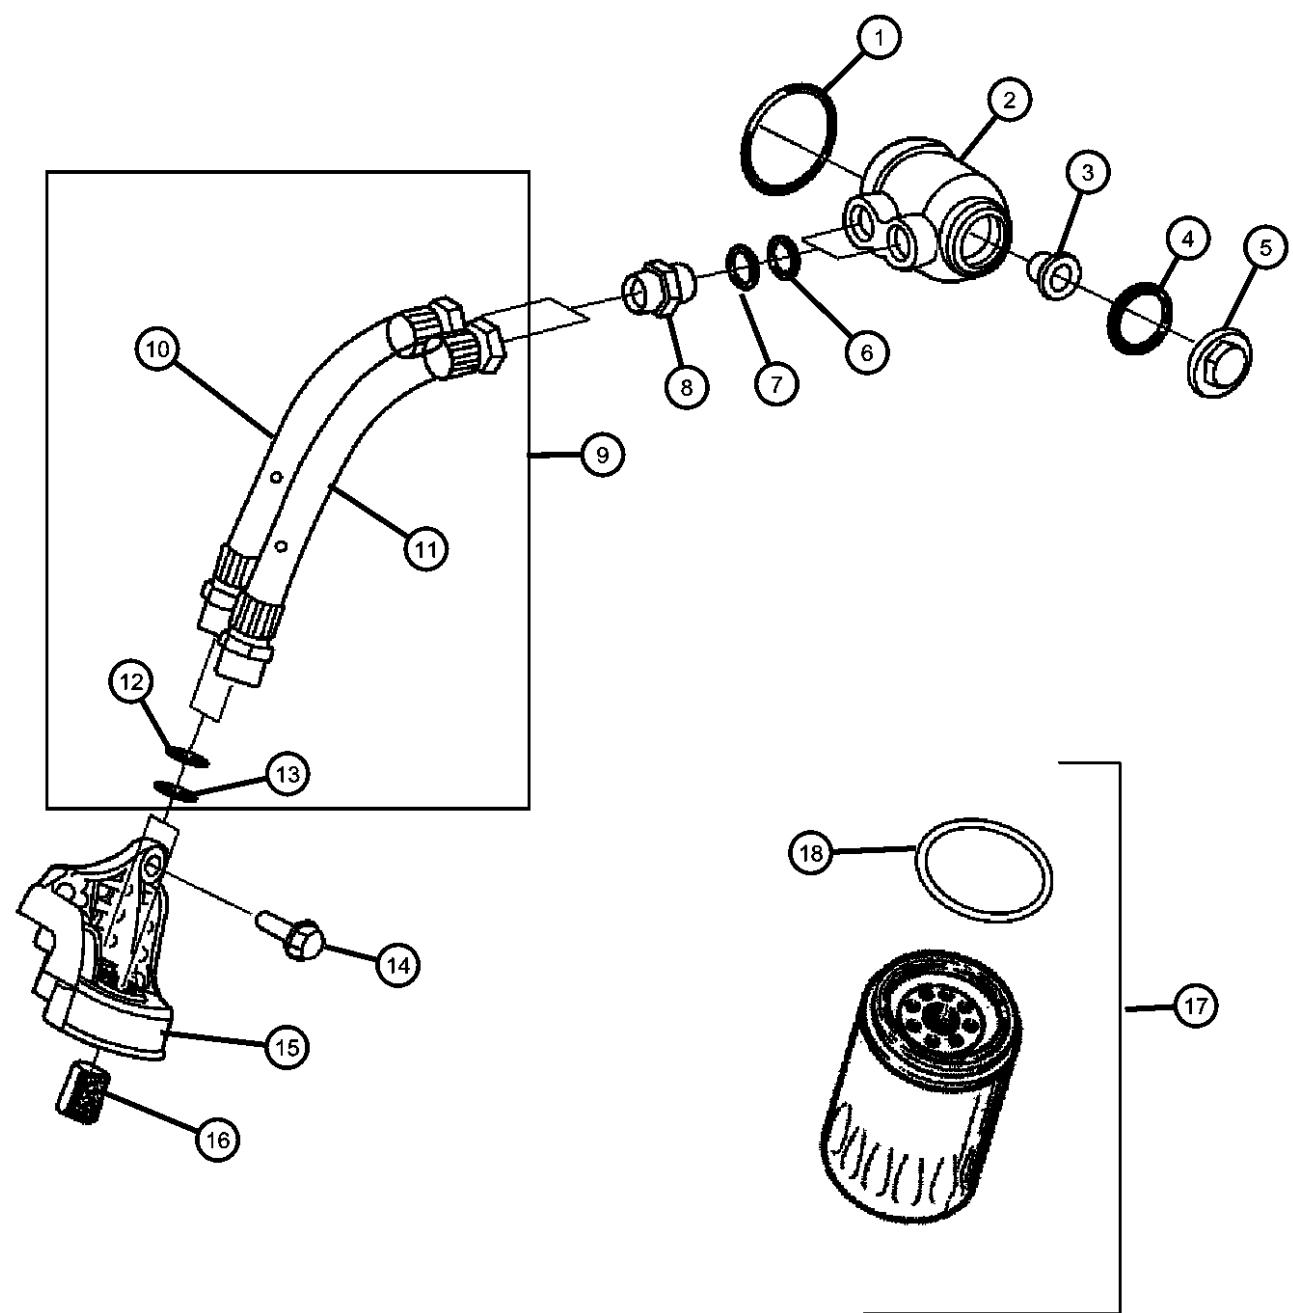

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10	05183852AA	1				EN0	DG0		PIPE
		1				EN0	DBB		
11	05183853AA	1				EN0	DG0		PIPE
		1				EN0	DBB		
12	05093918AA	4				EN0	DG0		O RING
		4				EN0	DBB		
13	05159122AA	4				EN0	DG0		WASHER
		4				EN0	DBB		
14	05003532AA	1				EN0	DG0		BOLT, Adaptor Plate
		1				EN0	DBB		
15	05072711AB	1				EN0	DG0		BRACKET, Oil Filter Housing
		1				EN0	DBB		
16	04897252AA	1				EN0	DG0		UNION, Oil Filter Base
		1				EN0	DBB		
17	05003558AA	1				EN0	DG0		FILTER, Engine Oil
		1				EN0	DBB		
18	05066946AA	1				EN0	DG0		GASKET
		1				EN0	DBB		


LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Manifolds 2.5L [ENJ]  
Figure 2.5LD-810

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DBB]=All Manual Transmissions  
[EN0]=All 4 Cylinder Turbo Diesel Engines

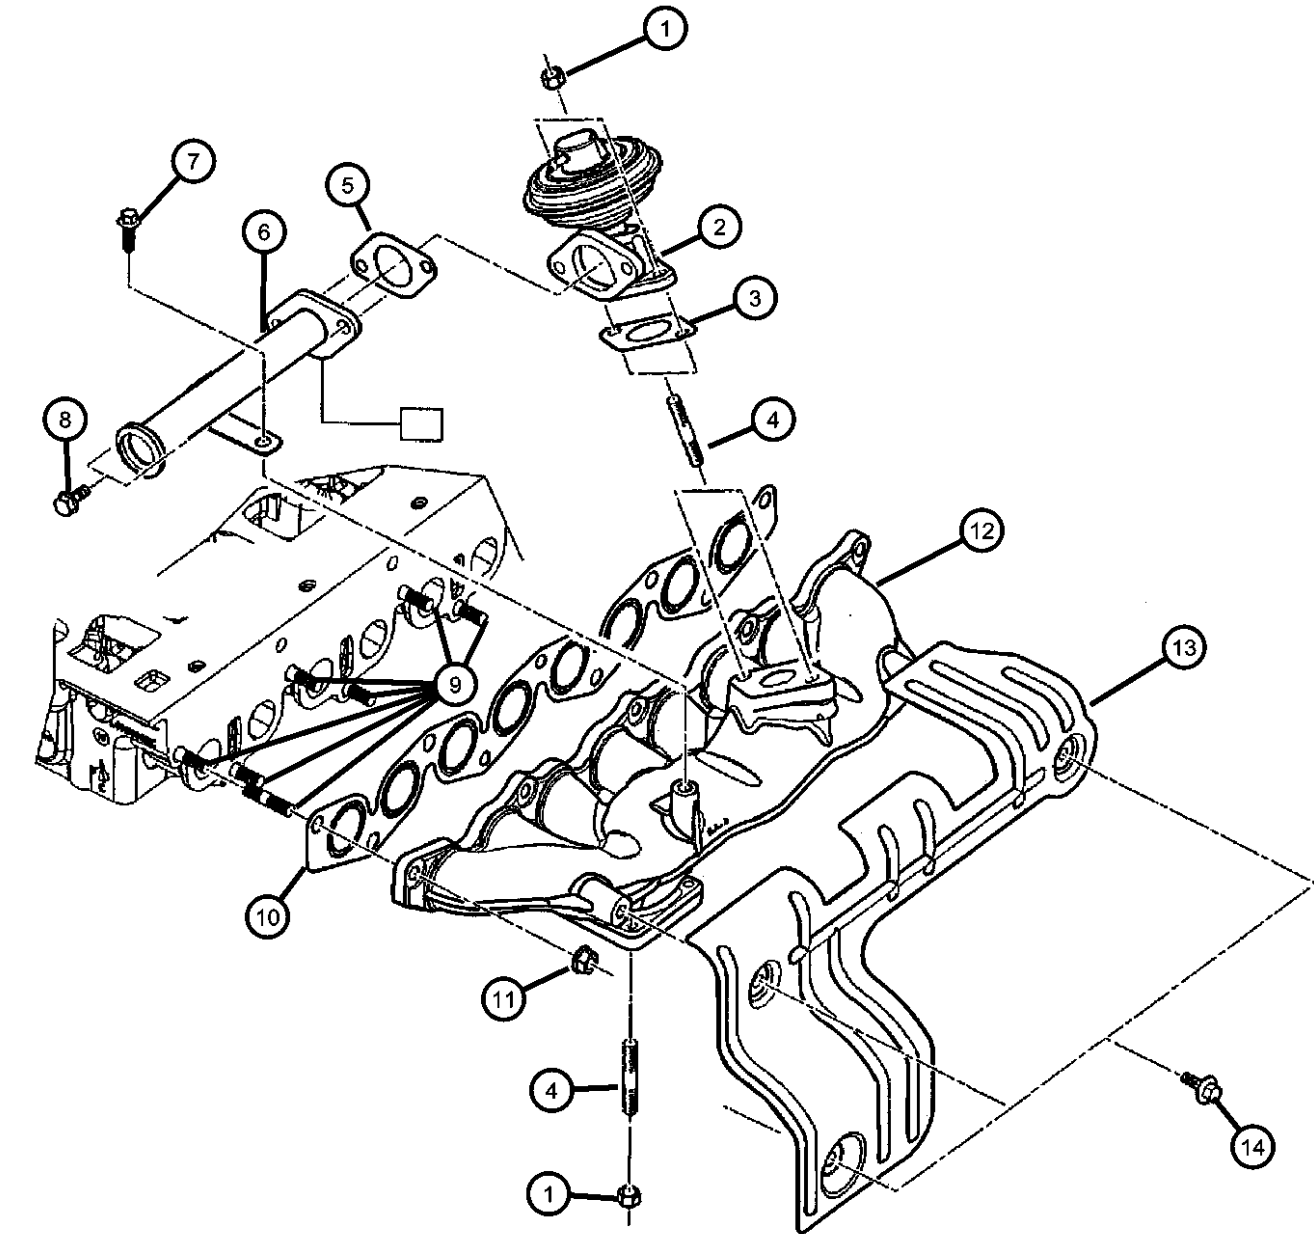

1	04882610	6				EN0	DBB		NUT, Lock
2	05066800AB	1				EN0	DBB		VALVE, EGR
3	05083261AA	1				EN0	DBB		GASKET, EGR Tube Flange
4	04882606	6				EN0	DBB		STUD, Turbo Elbow
5	05083261AA	1				EN0	DBB		GASKET, EGR Tube Flange
6	05103249AA	1				EN0	DBB		TUBE
7	05072688AA	4				EN0	DBB		SCREW
8	05066986AA	2				EN0	DBB		SCREW
9	05066796AA	9				EN0	DBB		STUD, Turbo Elbow
10	05093904AA	1				EN0	DBB		GASKET, Intake/Exhaust Manifold
11	05093903AA	9				EN0	DBB		NUT, Lock
12	05072686AA	1				EN0	DBB		MANIFOLD, Exhaust
13	05072691AA	1				EN0	DBB		SHIELD, Exhaust Manifold
14	05072688AA	4				EN0	DBB		SCREW

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part

Crankcase Ventilation 2.5L [ENJ]  
Figure 2.5LD-910

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DBB] = All Manual Transmissions  
[EN0] = All 4 Cylinder Turbo Diesel Engines

1	53013094AC	1				EN0			HOSE, Oil Separator
2	53013104AB	1				EN0			HOSE, Clean Air
3	53013103AA	1				EK0, EN0			INLET, Fresh Air
4	53013107AB	1				EN0			AIR CLEANER
5	53013357AA	3				EK0, EN0			GROMMET, Air Cleaner

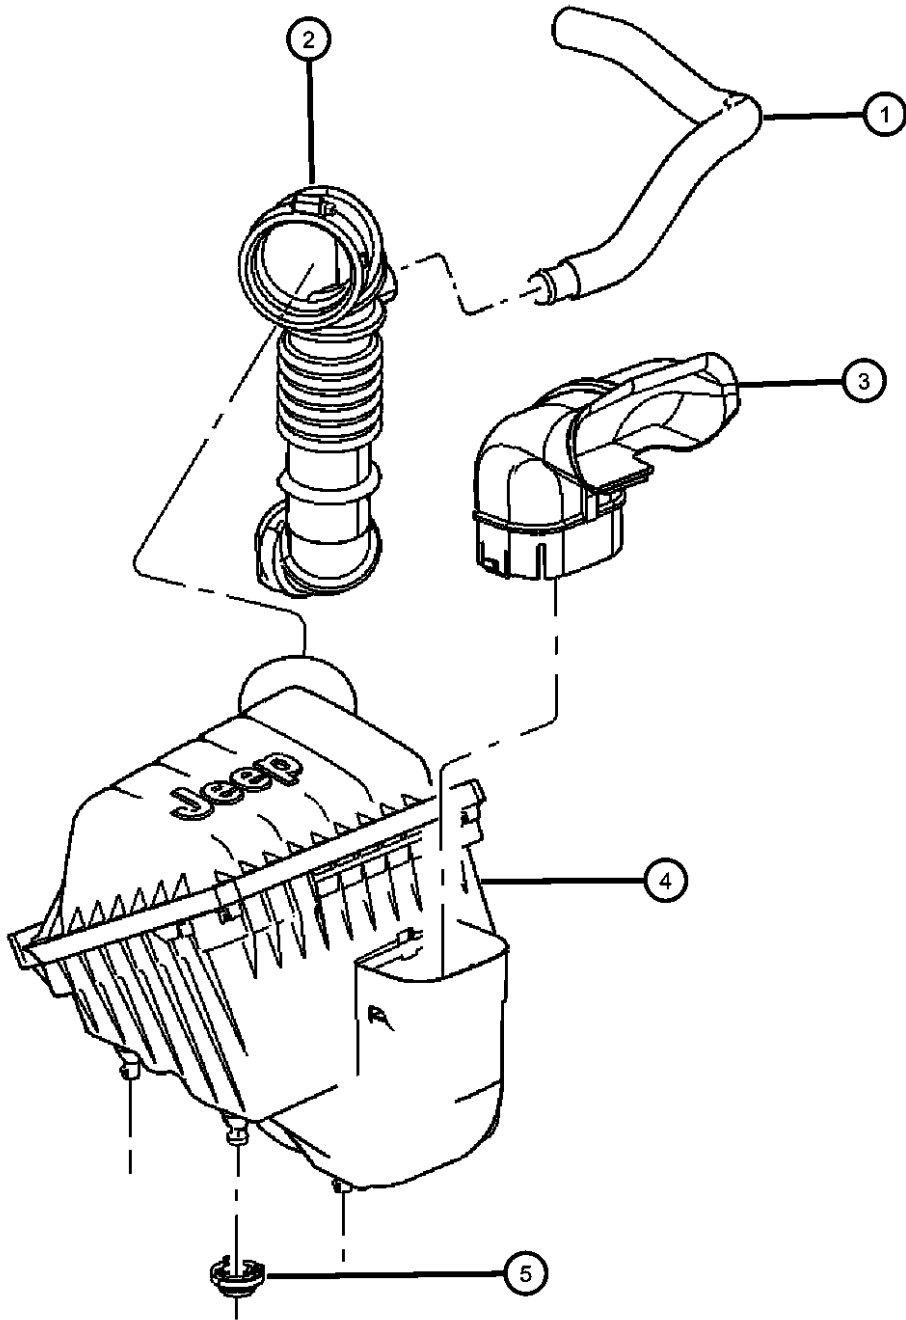


LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

# Group - 2.8L

## Engine 2.8L Four Cylinder (Turbo Diesel)

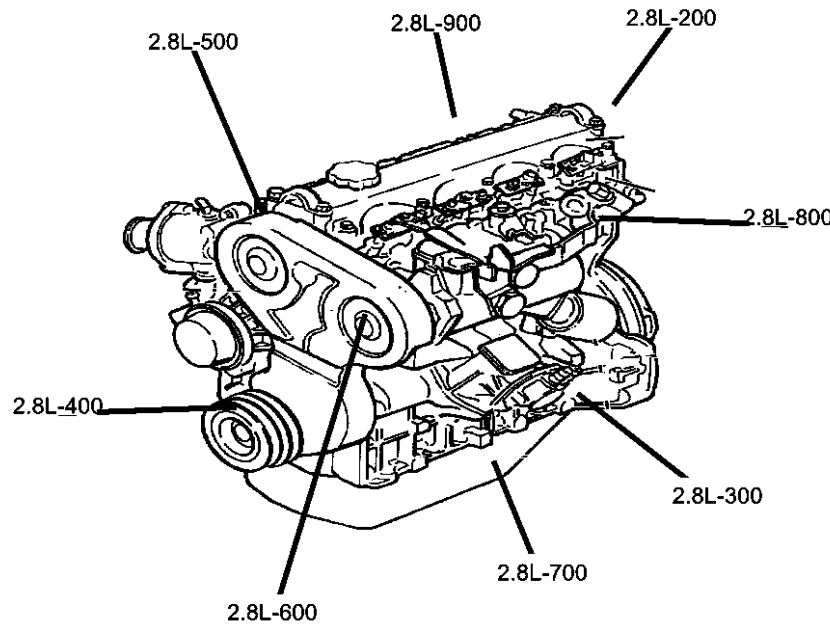


### Group - 2.8L Engine 2.8L Four Cylinder (Turbo Diesel)

Illustration Title	Group-Fig. No.
<b>Cylinder Head</b>	
Cylinder Head 2.8 Diesel [ENR].....	Fig. 2.8L - 210
Rocker Cover and Rocker Cover Assembly 2.8L Diesel [ENR] .....	Fig. 2.8L - 220
<b>Cylinder Block</b>	
Cylinder Block 2.8 Diesel [ENR] .....	Fig. 2.8L - 310
<b>Crankshaft, Piston and Drive Plate</b>	
Crankshaft,Pistons and Related, 2.8L Diesel [ENR].....	Fig. 2.8L - 410
<b>Camshafts &amp; Valves</b>	
Camshaft and Valves,2.8L Diesel [ENR] .....	Fig. 2.8L - 510
<b>Timing Belt and Cover</b>	
Timing Cover And Related 2.8 Diesel [ENR].....	Fig. 2.8L - 610
<b>Engine Oiling</b>	
Engine Oiling 2.8 Diesel [ENR].....	Fig. 2.8L - 710
Oil Line 2.8 Diesel [ENR] .....	Fig. 2.8L - 720
Engine Oil Filter Adapter And Lines 2.8L Diesel [ENR] .....	Fig. 2.8L - 730
<b>Manifolds</b>	
Manifolds, 2.8L Diesel [ENR].....	Fig. 2.8L - 810
<b>Crankcase Ventilation</b>	
Crankcase Ventilation 2.8 Diesel [ENR] .....	Fig. 2.8L - 910

<div>2.8L-200 Cylinder Head</div>	<div>2.8L-300 Cylinder Block</div>	<div>2.8L-400 Crankshaft, Piston and Drive Plate</div>	<div>2.8L-500 Camshafts &amp; Valves</div>
<div>2.8L-600 Timing Belt and Cover</div>	<div>2.8L-700 Engine Oiling</div>	<div>2.8L-800 Manifolds</div>	<div>2.8L-900 Crankcase Ventilation</div>

**Cylinder Head 2.8 Diesel [ENR]  
Figure 2.8L-210**

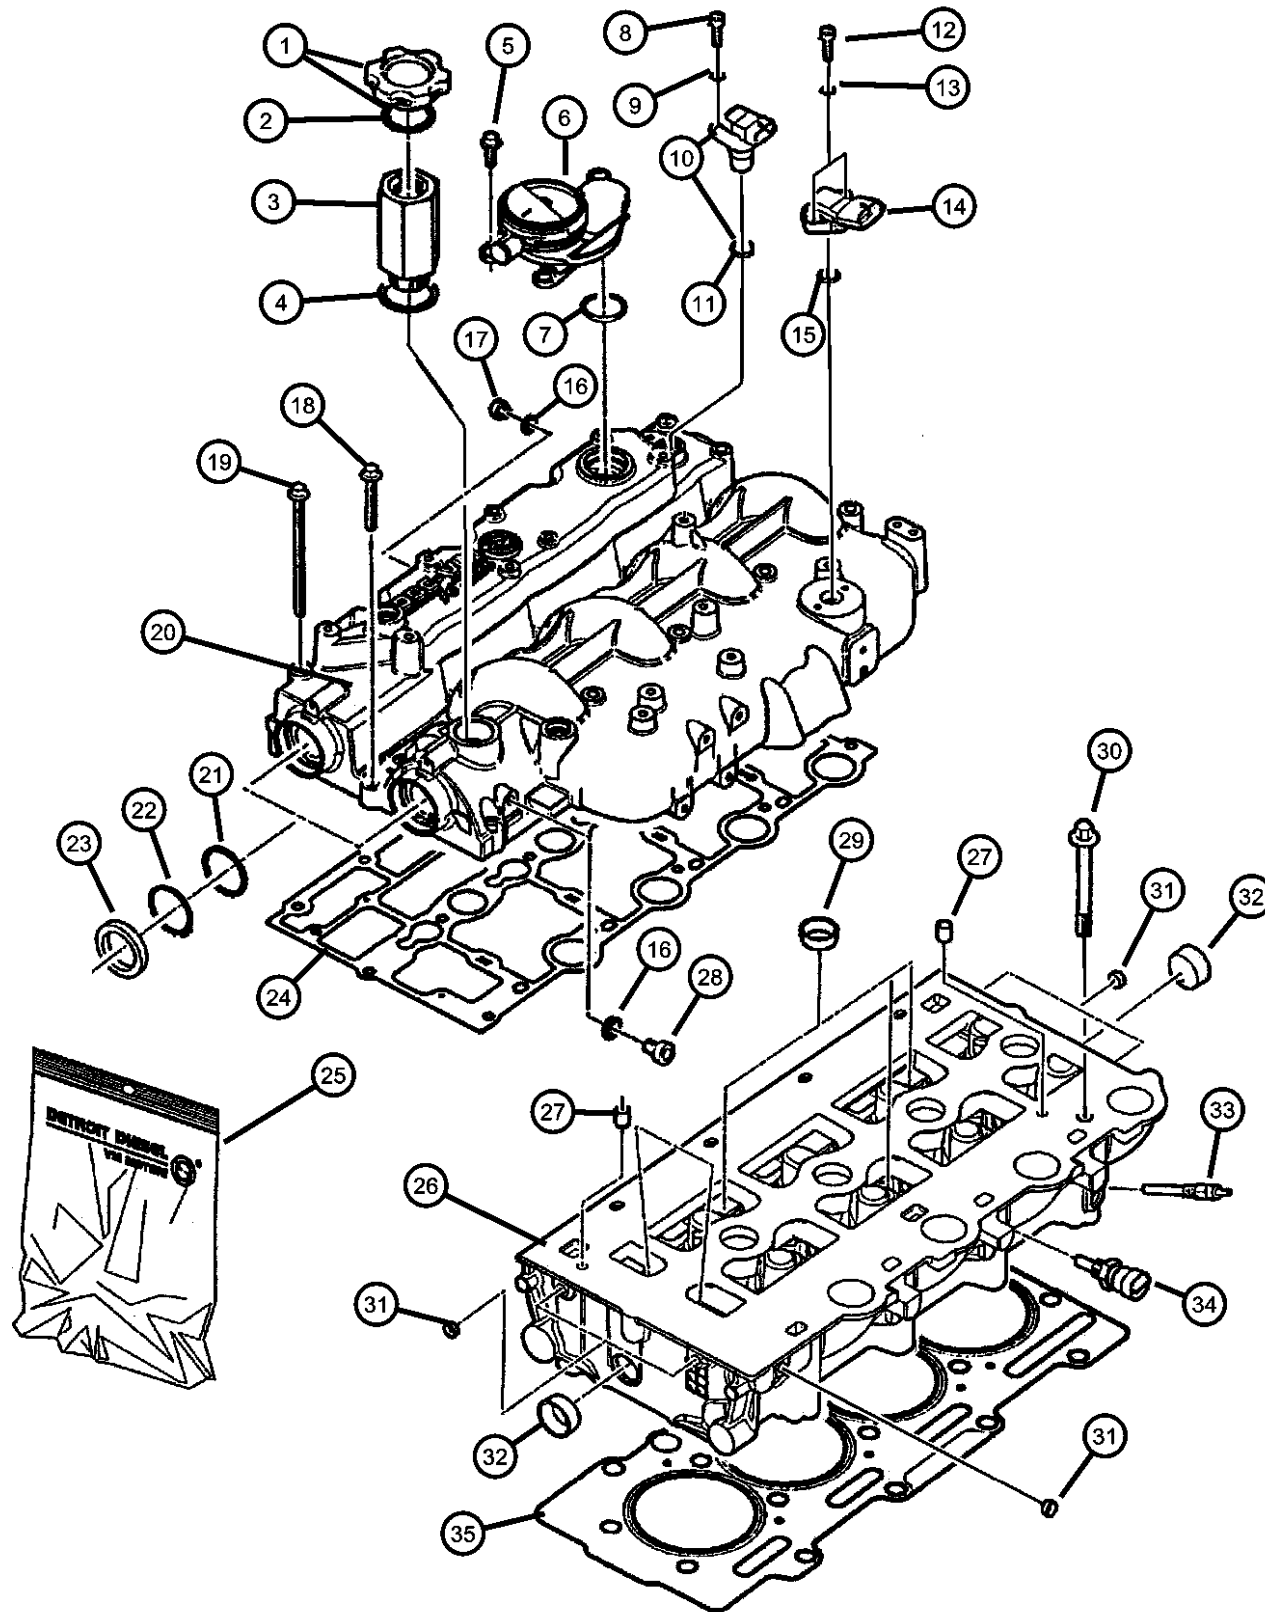

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes [DG0] = All Automatic Transmissions [EN0] = All 4/5 Cylinder Turbo Diesels									
1	04863741	1				EN0	DG0		CAP, Oil Filler
2	04720300	1				EN0	DG0		GASKET, Oil Filler Cap
3	05072678AA	1				EN0	DG0		SPACER, Oil Filler
4	05066853AA	1				EN0	DG0		GASKET, Oil Filler Connector
5	05003553AA	3				EN0	DG0		SCREW
6	05114348AA	1				EN0	DG0		VALVE, Pressure Control
7	05114347AA	2				EN0	DG0		O RING, Pressure Relief Valve
8	05003551AA	1				EN0	DG0		BOLT, M6x10
9	04723204	1				EN0	DG0		WASHER, Implement Attaching
10	05066856AB	1				EN0	DG0		SENSOR, Camshaft
11	05066860AA	1				EN0	DG0		O RING
12	05010858AA	1				EN0	DG0		SCREW
13	04723168	1				EN0	DG0		WASHER, Fuel Solenoid Wire
14	05093898AA	1				EN0	DG0		SENSOR, Air Temperature
15	05093898AA	1							O RING, (NOT REQUIRED)
16	04720713	1				EN0	DG0		WASHER, Implement Attaching
17	05066787AA	2				EN0	DG0		PLUG, Cylinder Block
18	05066960AA	6				EN0	DG0		SCREW
19	05066959AA	10				EN0	DG0		SCREW
20	05093897AA	1				EN0	DG0		COVER, Cylinder Head
21	05066844AA	2				EN0	DG0		SPACER
22	05066841AA	2				EN0	DG0		SNAP RING
23	05066958AA	2				EN0	DG0		SEAL
24	05066786AA	1				EN0	DG0		GASKET, Valve Cover
25	05103146AA	1				EN0	DG0		GASKET KIT, Cylinder Head Overhall
26	05093894AA	1				EN0	DG0		HEAD, Cylinder
27	04720165	2				EN0	DG0		DOWEL, Rocker

**LIBERTY (KJ)**

**SERIES**

P = Limited  
H = Sport  
M = Renegade

**LINE**

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

**BODY**

74 = 4 Door (104.3 WB)

**ENGINE**

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L


**TRANSMISSION**

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Cylinder Head 2.8 Diesel [ENR]  
Figure 2.8L-210

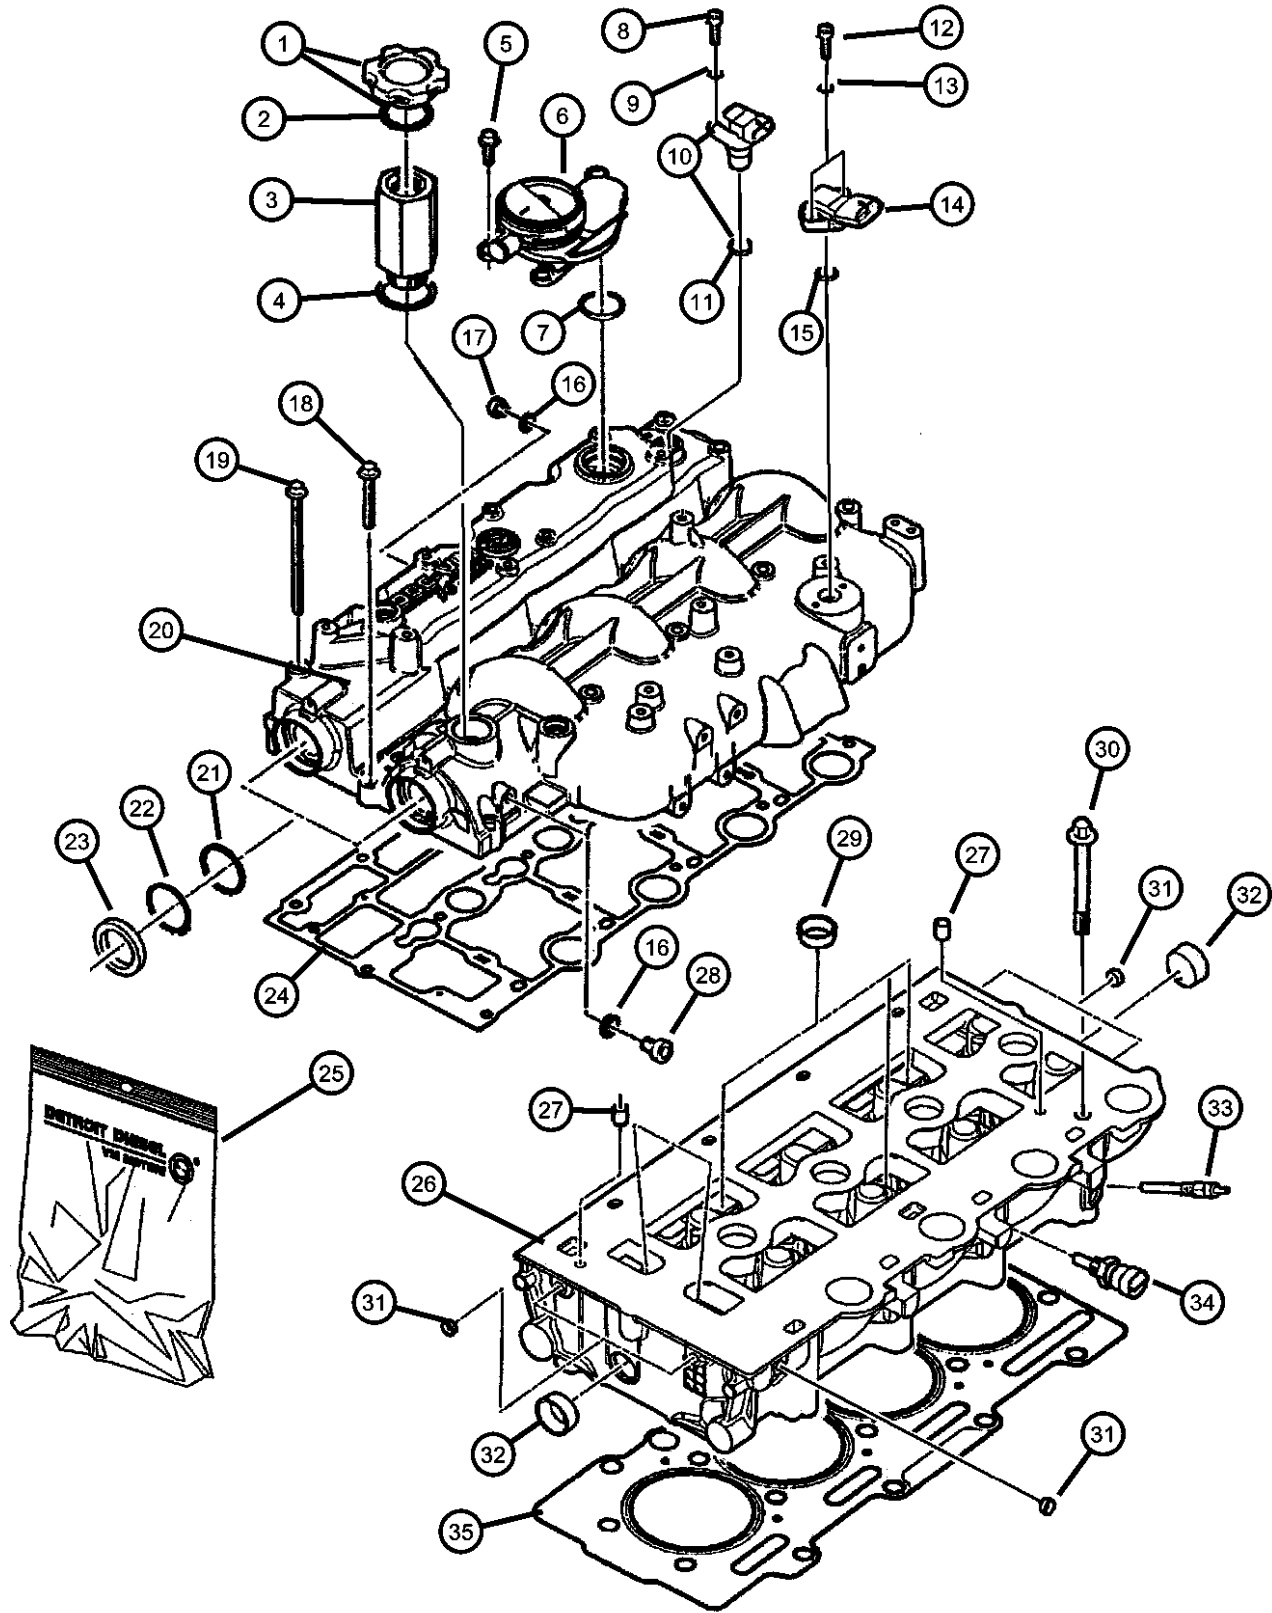


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
28	05066787AA	2				EN0	DG0		PLUG, Cylinder Block
29	04723228	3				EN0	DG0		PLUG, Cylinder Block Oil Hole
30	05066957AB	18				EN0	DG0		BOLT, Cylinder Head
31	05066837AA	5				EN0	DG0		PLUG, Cylinder Block
32	05066836AA	2				EN0	DG0		PLUG, Cylinder Block
33	05066840AA	1				EN0	DG0		GLOW PLUG
34	05066779AA	1				EN0	DG0		SENSOR, Temperature Sending Unit
35									GASKET, Cylinder Head
	05072675AA	1				EN0	DG0		1.32mm Thickness
	05072676AA	1				EN0	DG0		1.42mm Thickness
	05072677AA	1				EN0	DG0		1.52mm Thickness
-36	53014000AE	1				EN0			COVER, Engine
-37	53013567AA	1				EN0			BRACKET, Engine Cover
-38	06501474	3				EN0			BOLT, Hex Head, M8x1.25x16, Engine Cover Bracket, Mounting

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rocker Cover and Rocker Cover Assembly 2.8L Diesel [ENR]  
Figure 2.8L-220

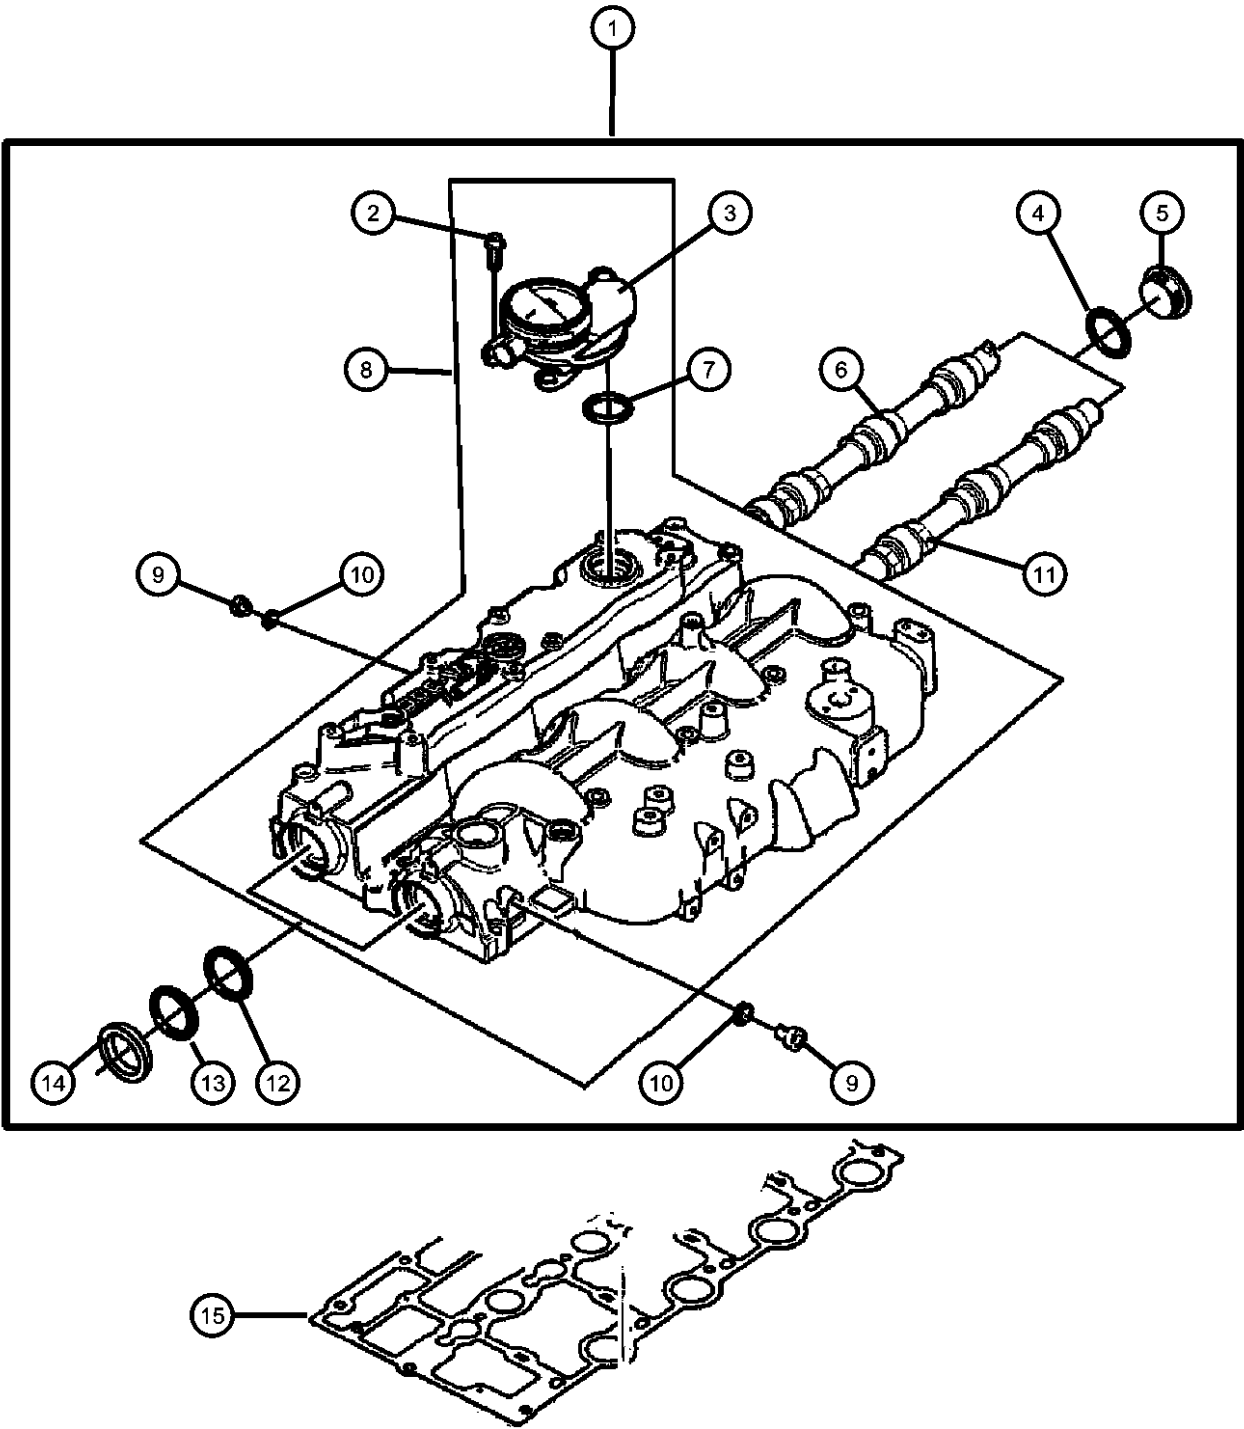


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:Sales Codes: [ENJ] = 2.5L 4 Cylinder 16V Turbo Diesel									
1	05139867AA	1				EN0	DBB		COVER, Cylinder Head
2	05003553AA	3				EN0	DBB		SCREW
3	05114348AB	1				EN0	DBB		VALVE, Pressure Control
4	05066811AA	1				EN0	DBB		WASHER, Plain, 16.2x19.9x1.5
5	05066855AA	2				EN0	DBB		PLUG, Camshaft
6	05066850AB	1				EN0	DBB		CAMSHAFT, Exhaust
7	05114347AA	2				EN0	DBB		O RING, Pressure Relief Valve
8	05093897AB	1				EN0	DBB		COVER, Cylinder Head
9	05066787AA	2				EN0	DBB		PLUG, Cylinder Block
10	04720713	2				EN0	DBB		WASHER, Implement Attaching
11	05066847AB	1				EN0	DBB		CAMSHAFT, Intake
12	05066844AA	2				EN0	DBB		SPACER
13	05066841AA	2				EN0	DBB		SNAP RING
14	05066958AA	2				EN0	DBB		SEAL
15	05066786AA	1				EN0	DBB		GASKET, Valve Cover

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Cylinder Block 2.8 Diesel [ENR]  
Figure 2.8L-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes [DG0] = All Automatic Transmissions [EN0] = All 4/5 Cylinder Turbo Diesels									
1	05103159AA	4				EN0	DG0		LINER AND PISTON, Cylinder
2	05103155AA	4				EN0	DG0		LINER, Cylinder
3	04720620	4				EN0	DG0		SHIM, Cylinder Liner, 0.15mm
-4	05103154AA	4				EN0	DG0		SHIM KIT, Cylinder Liner
-5	04720624	4				EN0	DG0		SHIM, Cylinder Liner, 0.17mm
-6	04720621	4				EN0	DG0		SHIM, Cylinder Liner, 0.20mm
-7	04720623	4				EN0	DG0		SHIM, Cylinder Liner, 0.23mm
-8	04720622	4				EN0	DG0		SHIM, Cylinder Liner, 0.25mm
9	05093955AA	8				EN0	DG0		O RING, Cylinder Liner
10	04720626	4				EN0	DG0		O RING, Cylinder Liner
11	05170771AA	1				EN0	DG0		ENGINE, 3/4 Tested, Diesel
	05127394AA								Mopar 0W-40 Mobil 1 Engine Oil
12	04720237	2				EN0	DG0		DOWEL, Transmission Adapter
13	04720165	1				EN0	DG0		DOWEL, Rocker
14	05072447AB	1				EN0	DG0		BRACKET, Fan
15	05066939AA	1				EN0	DG0		SCREW
16	05072754AA	1				EN0	DG0		BRACKET, Engine Lift
17	05003533AA	2				EN0	DG0		BOLT, M10x45
18	05015067AA	1				EN0	DG0		BOLT, Hex Flange Head
19	04720684	4				EN0	DG0		BOLT
20	05072753AA	1				EN0	DG0		BRACKET
21	05093957AA	1				EN0	DG0		HOUSING, Flywheel
22	05003532AA	4				EN0	DG0		BOLT, Adaptor Plate
23	05015045AA	2				EN0	DG0		DOWEL, Transmission Adapter
24	05093959AA	1				EN0	DG0		DOWEL, Transmission
25	05014969AA	8				EN0	DG0		BOLT, Flexplate
26	52104369AA	1				EN0	DG0		PLATE, Torque Converter Drive

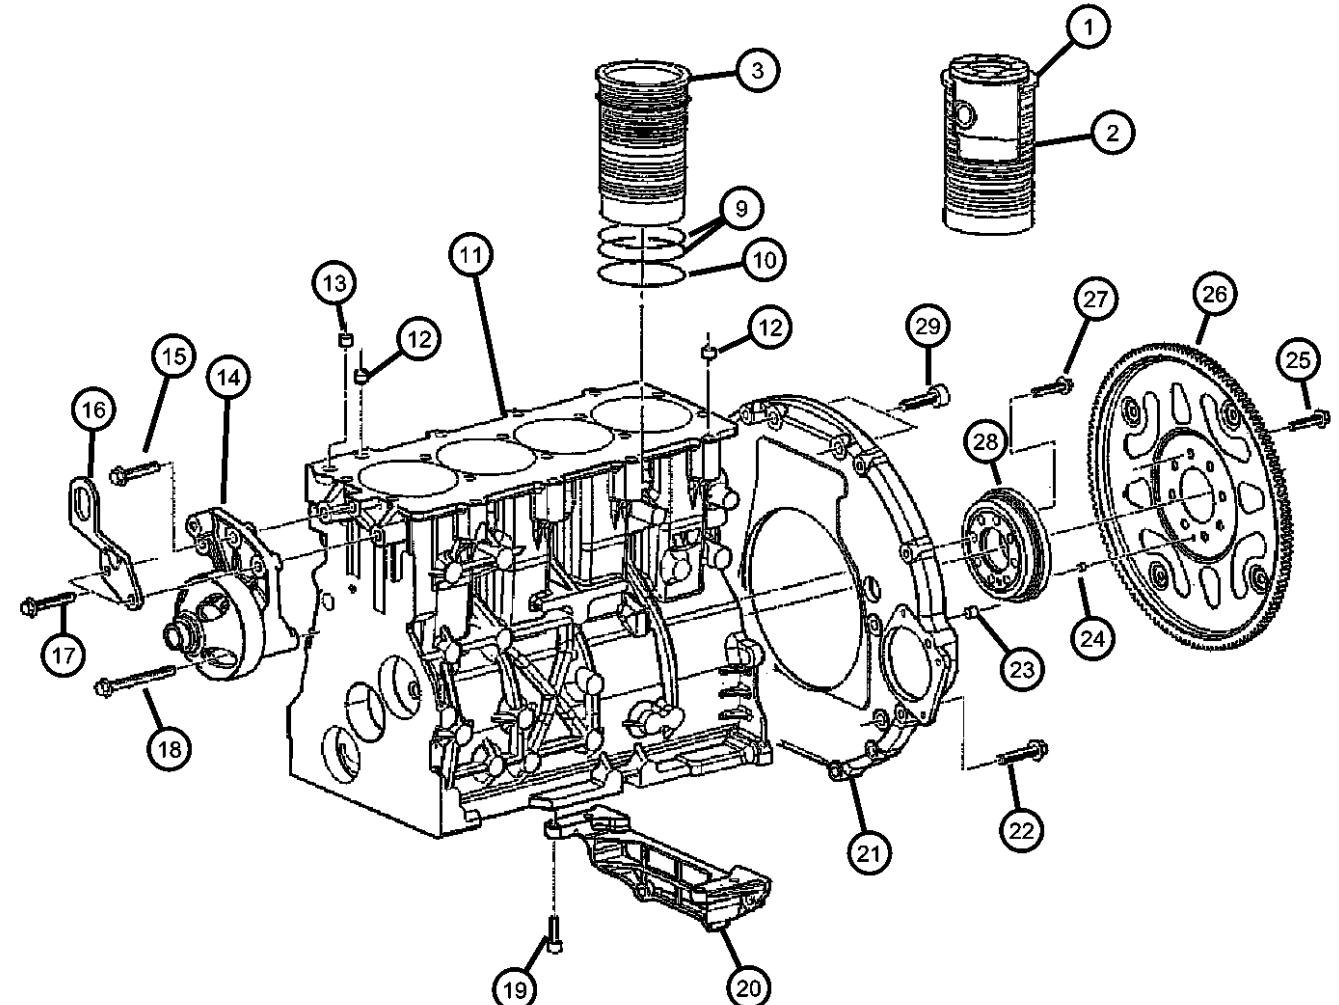

LIBERTY (KJ)  
SERIES  
P = Limited  
H = Sport  
M = Renegade

LINE  
J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

BODY  
74 = 4 Door (104.3 WB)

ENGINE  
ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L


TRANSMISSION  
DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Cylinder Block 2.8 Diesel [ENR]  
Figure 2.8L-310


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
27	05066753AA	1				EN0	DG0		BOLT, Flywheel
28	05093956AA	1				EN0	DG0		HUB
29	04864757	2				EN0	DG0		BOLT
-30	04736582	1	J, U			EN0	DGQ		TORQUE CONVERTER
-31	05093909AA	1				EN0	DG0		PLUG

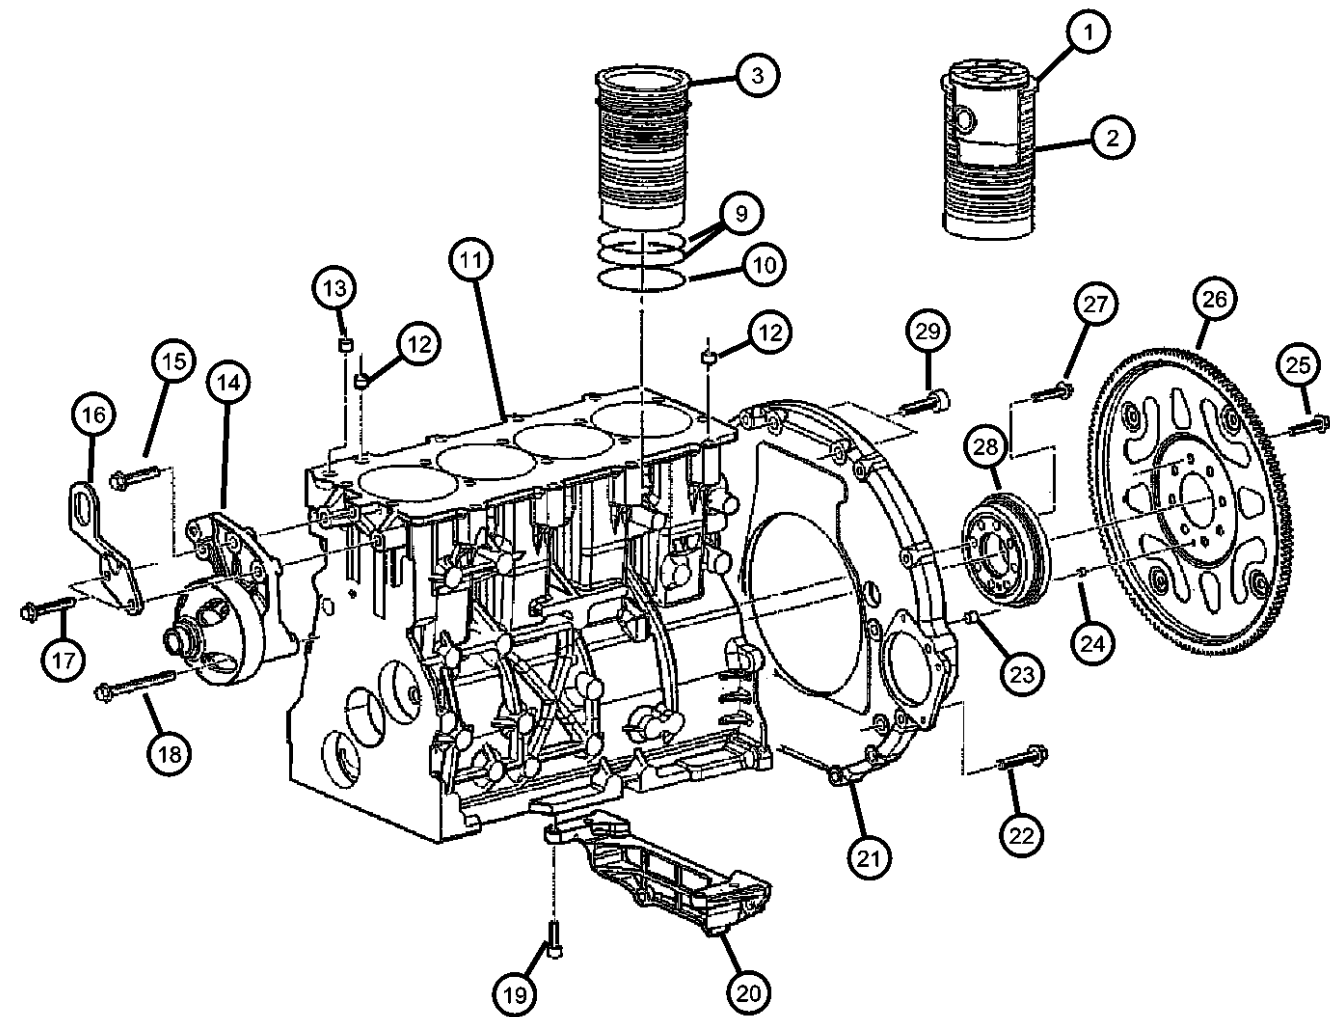

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Crankshaft,Pistons and Related, 2.8L Diesel [ENR]  
Figure 2.8L-410

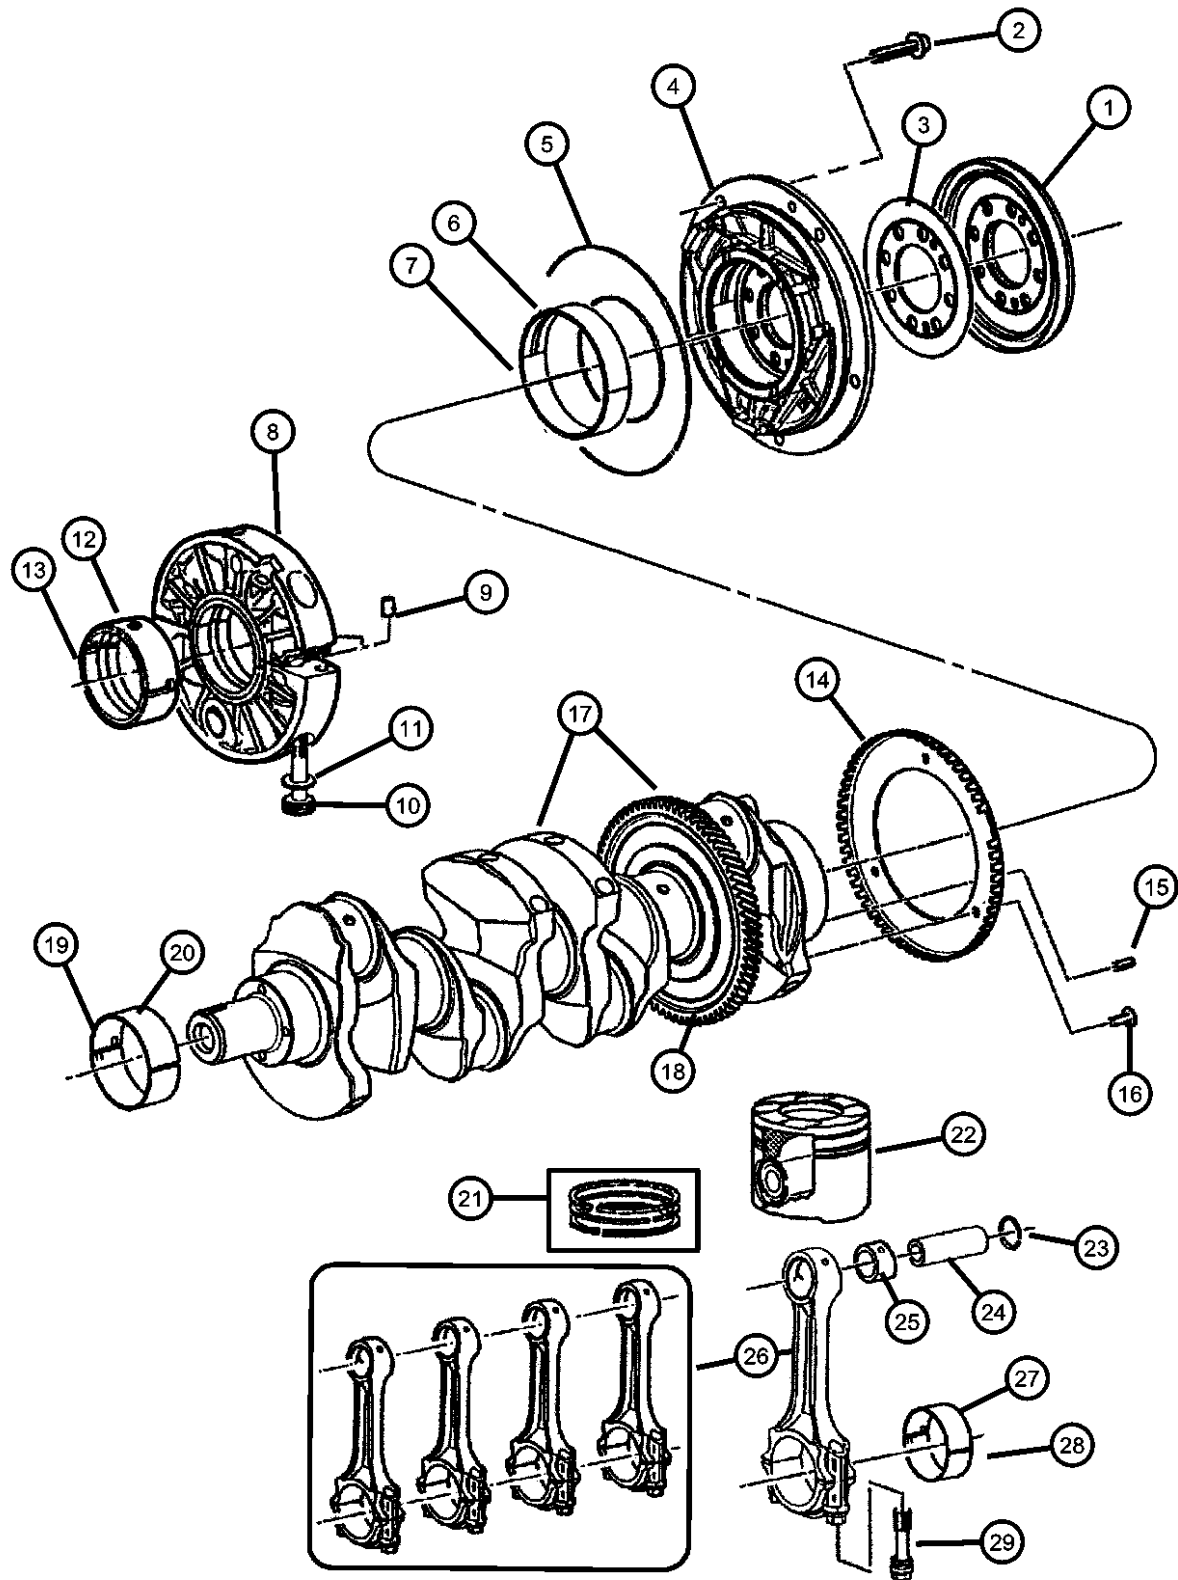


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes [DG0] = All Automatic Transmissions [EN0] = All 4/5 Cylinder Turbo Diesels									
1	05066756AA	1				EN0	DG0		SEAL, Crankshaft Oil, Rear
2	04864537	5				EN0	DG0		BOLT, 8Mx20
3	05093882AA	1				EN0	DG0		WASHER, Thrust
4	05101924AA	1				EN0	DG0		HOUSING, Rear Bearing
5	04720277	1				EN0	DG0		O RING, Crankshaft Rear Support
6	05066761AA	1				EN0	DG0		BEARING, Crankshaft
7	05066762AA	1				EN0	DG0		BEARING, Crankshaft
8	05066757AA	3				EN0	DG0		HOUSING, Crankshaft Bearing
9	04720241	1				EN0	DG0		DOWEL, Center Bearing Housing
10	04720242	6				EN0	DG0		SCREW
11	04720243	6				EN0	DG0		WASHER, Lock, M10
12	05069079AA	1				EN0	DG0		BEARING, Crankshaft, STD.
13	05069080AA	1				EN0	DG0		BEARING, Crankshaft, .250mm U/S
14	05066882AA	1				EN0	DG0		SENSOR, Crankshaft
15	05093885AA	1				EN0	DG0		PIN, Spring
16	05069137AA	3				EN0	DG0		SCREW
17	05093881AB	1				EN0	DG0		CRANKSHAFT
18	05066977AA	1				EN0	DG0		GEAR, Ring
19	05069077AA	1				EN0	DG0		BEARING, Crankshaft, STD.
20	05069078AA	1				EN0	DG0		BEARING, Crankshaft, .250mm U/S
21	05103144AA	4				EN0	DG0		RING KIT, Piston, Standard
22	05103145AA	4				EN0	DG0		PISTON
23	05096230AA	8				EN0	DG0		RING, Piston Pin
24	05096230AA	8							PIN, Piston, Serviced With Item 22, (NOT SERVICED)
25	05093887AA	4				EN0	DG0		BUSHING, Connecting Rod
26	05093883AA	1				EN0	DG0		ROD, Connecting

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel EN0 = 4Cyl Turbo Diesel EKO = All 3.7L ED0 = All 2.4L	DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions
H = Sport	U = RHD (4WD)			
M = Renegade	T = LHD (2WD)			

AR = use ase required - = Non illustrated part

Crankshaft,Pistons and Related, 2.8L Diesel [ENR]  
Figure 2.8L-410

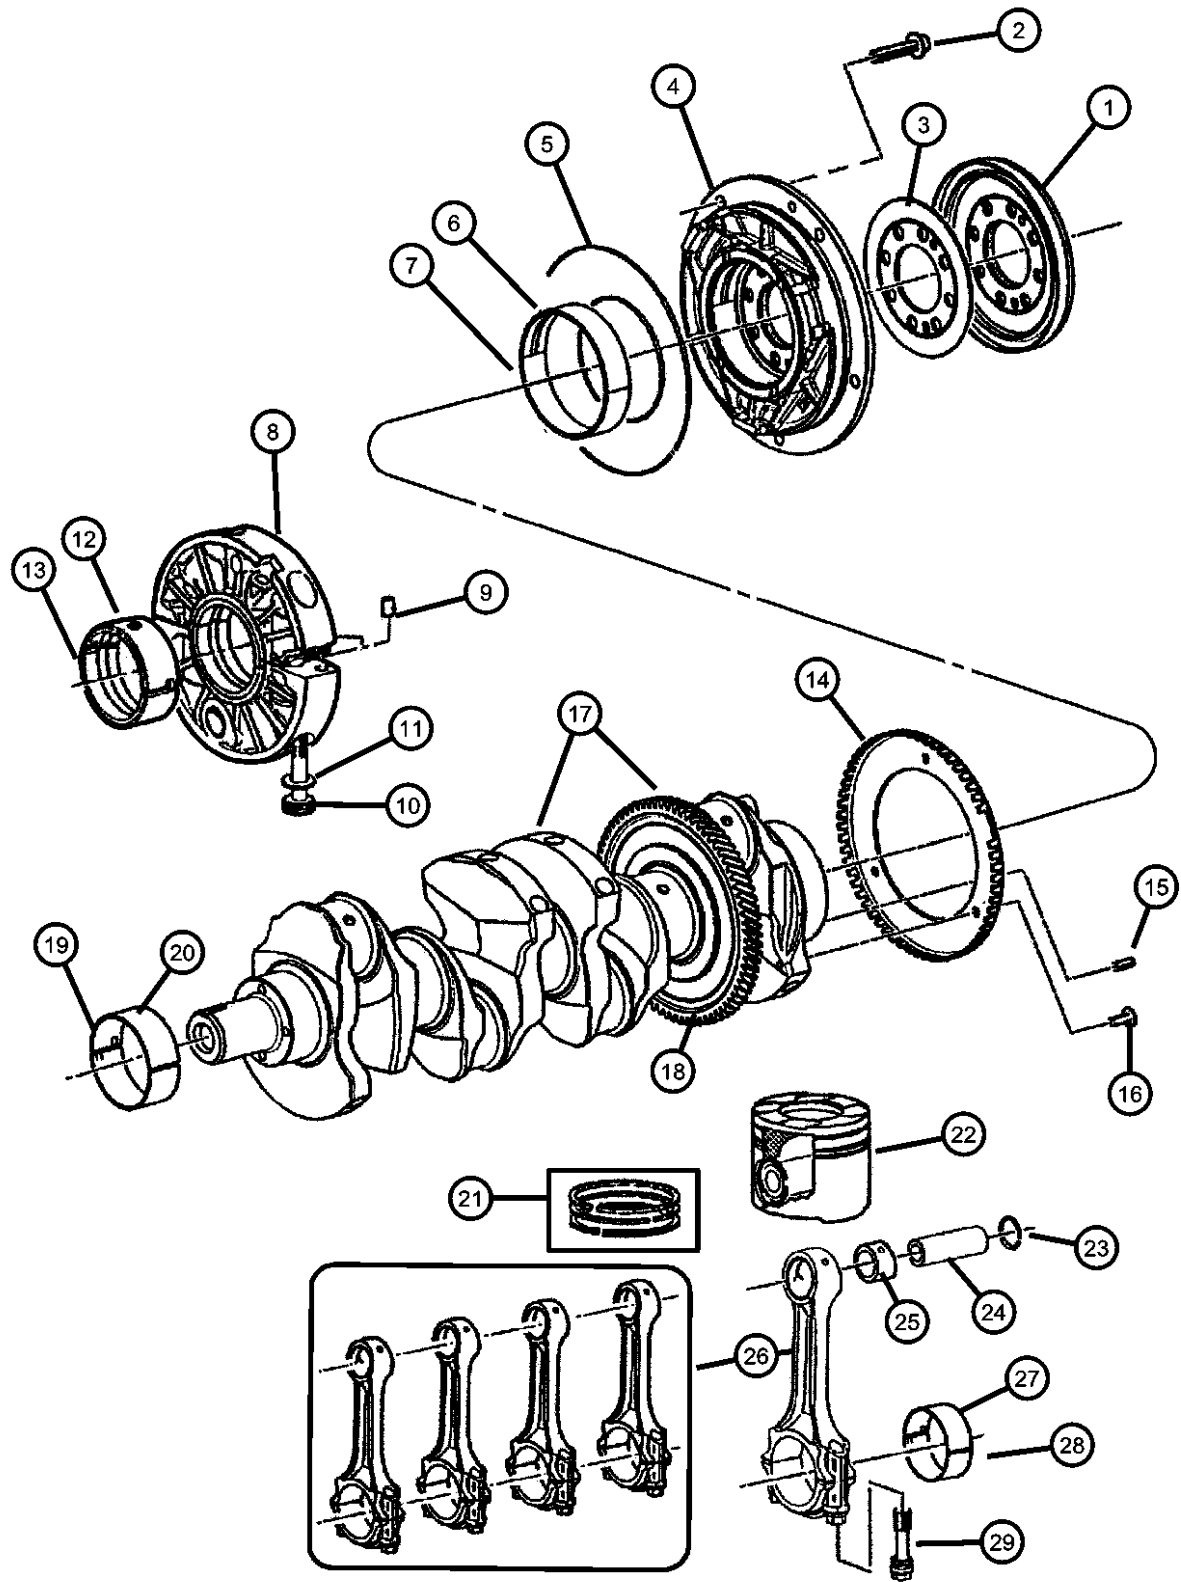


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
27	04720877	4				EN0	DG0		BEARING, Connecting Rod, STD.
28	04720883	4				EN0	DG0		BEARING, Connecting Rod, .25 mm U/S
29	05093889AA	8				EN0	DG0		BOLT, Connecting Rod
-30	05072673AA	1				EN0	DG0		PUMP, Vacuum

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Camshaft and Valves,2.8L Diesel [ENR]  
Figure 2.8L-510

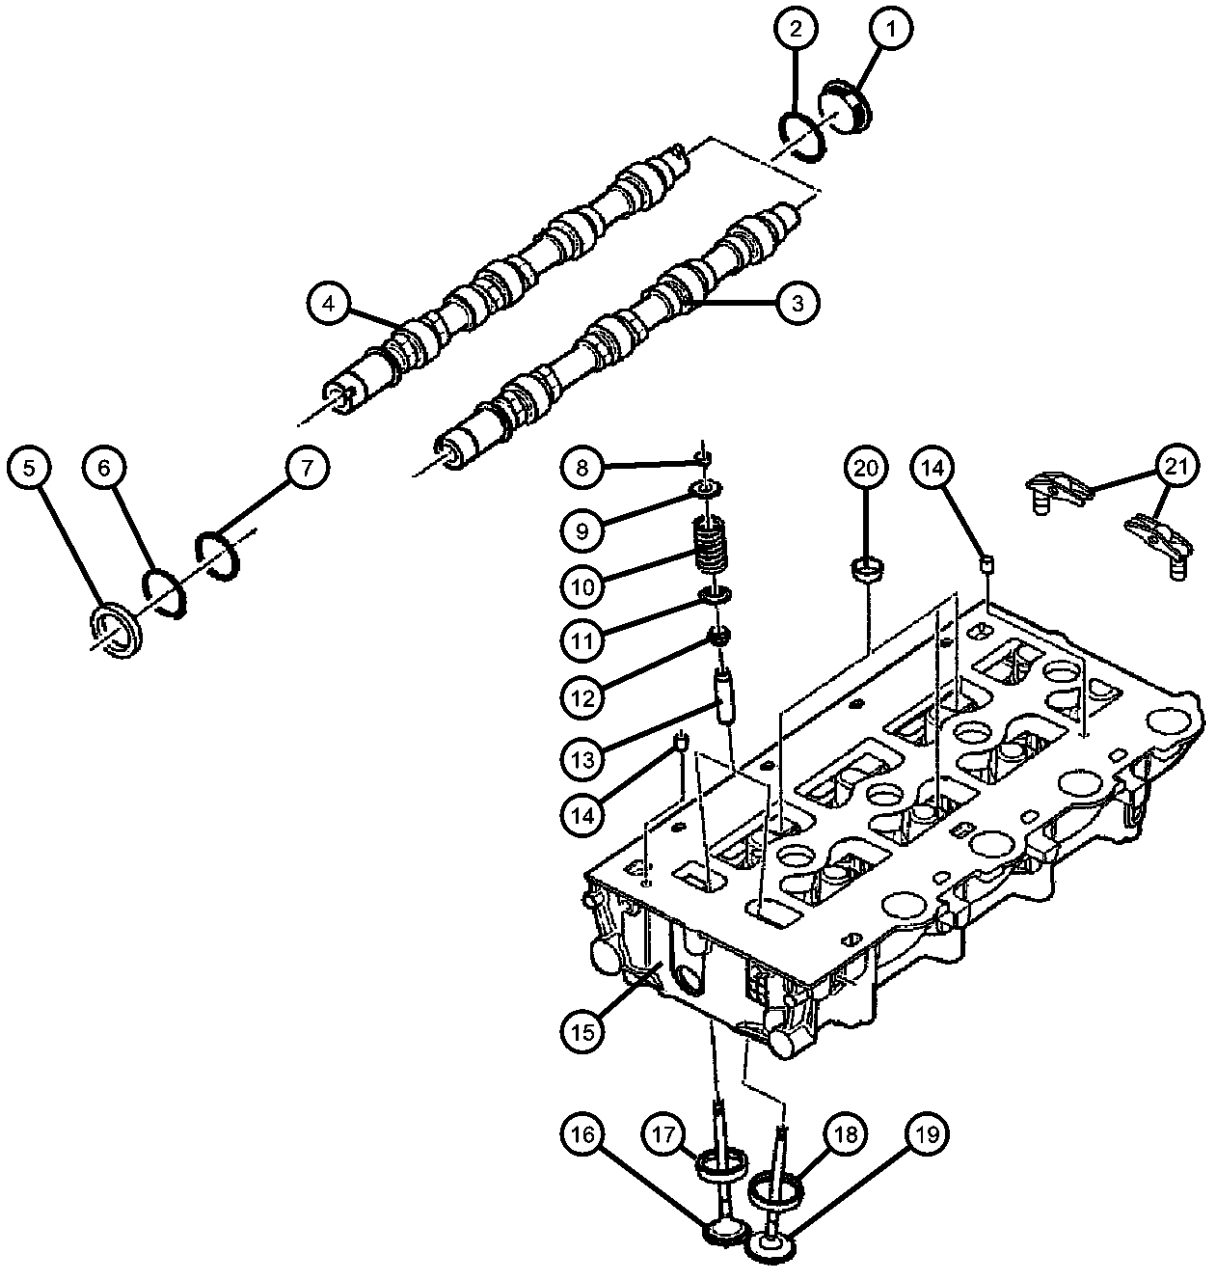


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DBB] = All Manual Transmissions [EN0] = All 4 Cylinder Turbo Diesel Engines									
1	05066855AA	2				EN0	DBB		PLUG, Camshaft
2	05066811AA	2				EN0	DBB		WASHER, Plain, 16.2x19.9x1.5
3	05066850AB	1				EN0	DBB		CAMSHAFT, Exhaust
4	05066847AB	1				EN0	DBB		CAMSHAFT, Intake
5	05066958AA	2				EN0	DBB		SEAL
6	05066841AA	2				EN0	DBB		SNAP RING
7	05066844AA	2				EN0	DBB		SPACER
8	05066778AA	32				EN0	DBB		LOCK, Valve Spring Retainer
9	05093892AA	16				EN0	DBB		RETAINER, Valve Spring
10	05066776AA	16				EN0	DBB		SPRING, Valve
11	05066775AA	16				EN0	DBB		SEAL, Valve Guide
12	05093891AA	16				EN0	DBB		SEAL, Valve Guide
13	05066773AA	16				EN0	DBB		GUIDE, Intake/Exhaust Valve, Standard Size
14	04720165	1				EN0	DBB		DOWEL, Rocker
15	05093893AB	1				EN0	DBB		HEAD, Cylinder
16	05066769AA	1				EN0	DBB		VALVE, Exhaust, Standard
17	05066771AA	8				EN0	DBB		SEAT, Exhaust Valve, 0.30mm Oversize
18	05066772AA	8				EN0	DBB		SEAT, Intake Valve
19	05066770AA	8				EN0	DBB		VALVE, Intake, Standard
20	04723211	2				EN0	DBB		PLUG, Cylinder Block Oil Hole
21	05066780AA	16				EN0	DBB		ROCKER ARM, Inlet and Exhaust Valve

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

# Timing Cover And Related 2.8 Diesel [ENR] Figure 2.8L-610

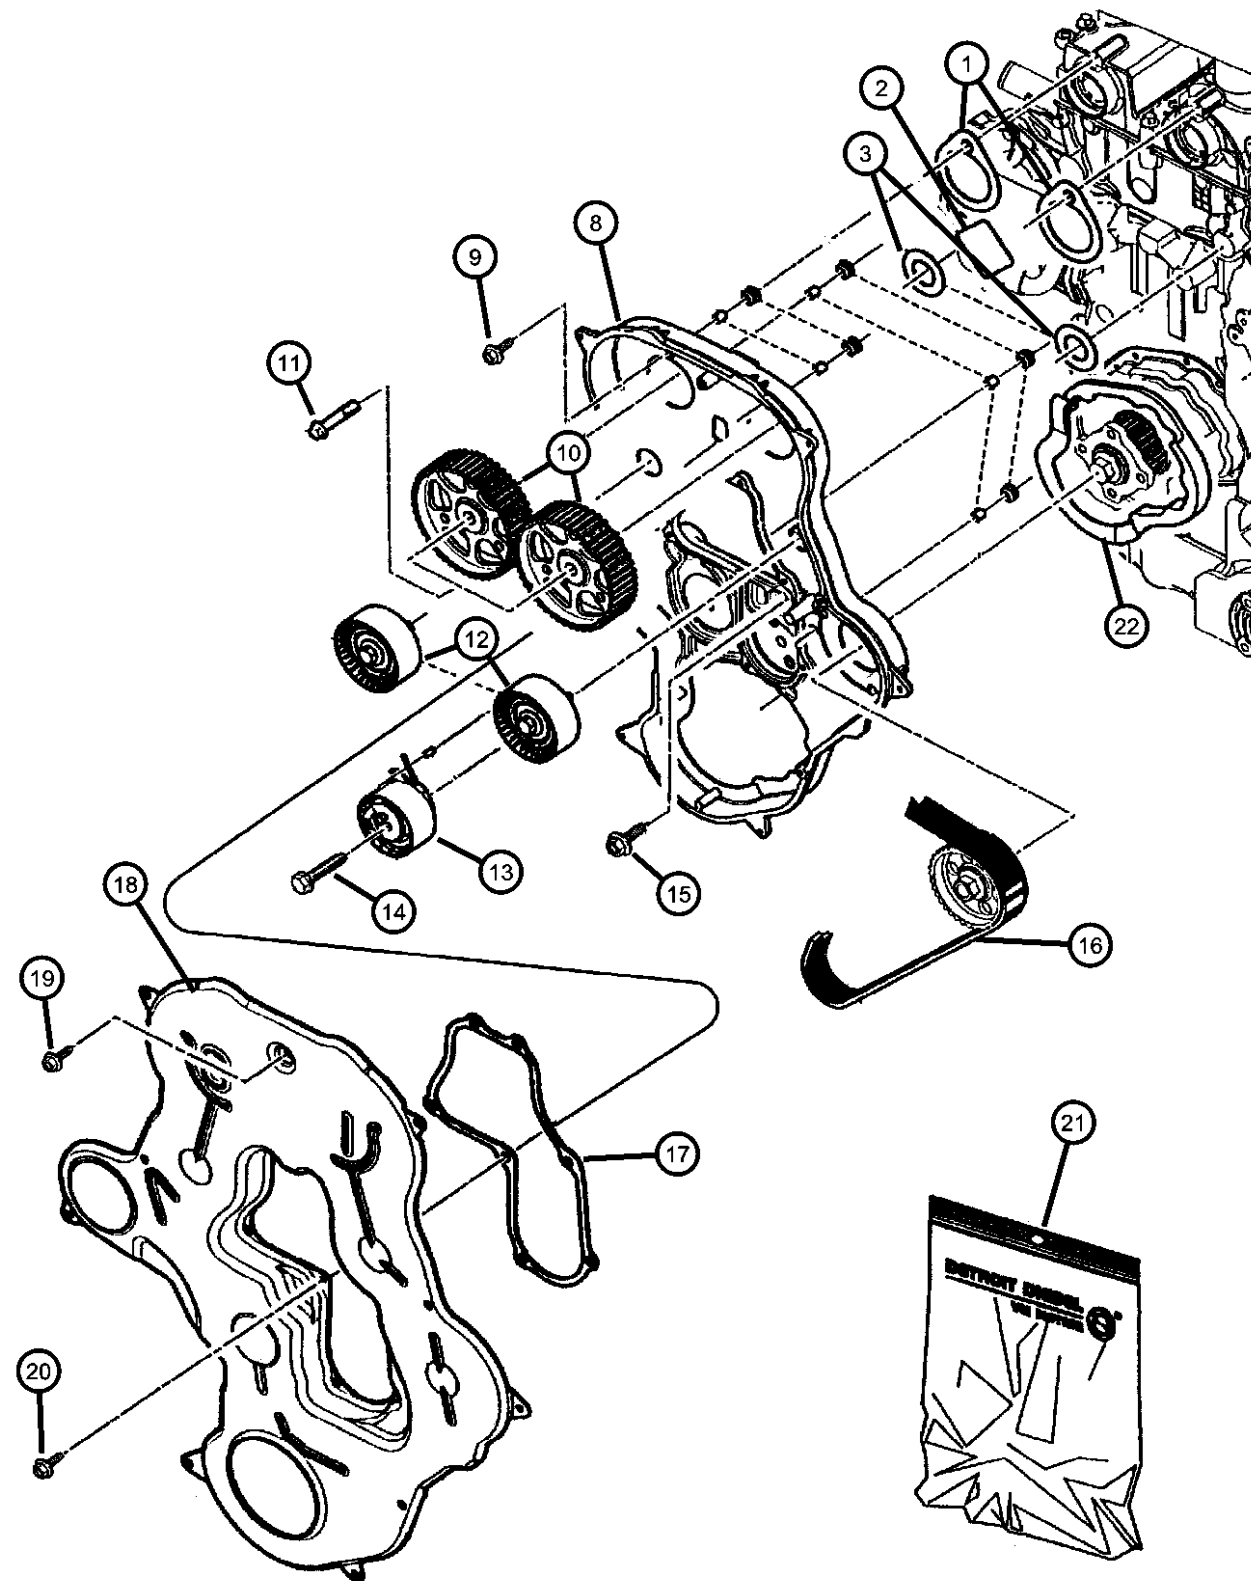

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [DG0]= All Automatic Transmissions [EN0]= All 4/5 Cylinder Turbo Diesels									
1	05066946AA	1				EN0	DG0		GASKET
2	05066946AA	1				EN0	DG0		GASKET
3	05066946AA	1				EN0	DG0		GASKET
-4	05066946AA	1							DAMPER, Vibration, [Service in Item #21], (NOT SERVICED)
-5	05066946AA	1							BUSHING, Balance Shaft, [Service in Item #21], (NOT SERVICED)
-6	05066946AA	1							DAMPER, Vibration, [Service in Item#21 ], (NOT SERVICED)
-7	05066946AA	1							BUSHING, Balance Shaft, [Service in Item #21], (NOT SERVICED)
8	05073446AB	1				EN0	DG0		COVER, Timing Case
9	05069114AA	5				EN0	DG0		SCREW
10	05066926AA	2				EN0	DG0		GEAR, Balance Shaft
11	04897825AA	2				EN0	DG0		SCREW
12	05093931AA	2				EN0	DG0		PULLEY, Idler
13	05066826AA	1				EN0	DG0		TENSIONER, Belt
14	05015031AA	1				EN0	DG0		SCREW
15	05003532AA	3				EN0	DG0		BOLT, Adaptor Plate
16	05066928AA	1				EN0	DG0		BELT, Timing
17	05066921AA	1				EN0	DG0		GASKET, Timing Cover
18	05066919AB	1				EN0	DG0		COVER, Timing Case
19	04864745	1				EN0	DG0		BOLT
20	05069112AA	17				EN0	DG0		SCREW
21	05019861AA	1				EN0	DG0		GASKET KIT, Timing Cover
22	04863779	1				EN0	DG0		GASKET, Vacuum Pump, Mounting

## LIBERTY (KJ)

### SERIES

P = Limited  
H = Sport  
M = Renegade

### LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

### BODY

74 = 4 Door (104.3 WB)

### ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16v  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L


### TRANSMISSION

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Engine Oiling 2.8 Diesel [ENR]  
Figure 2.8L-710

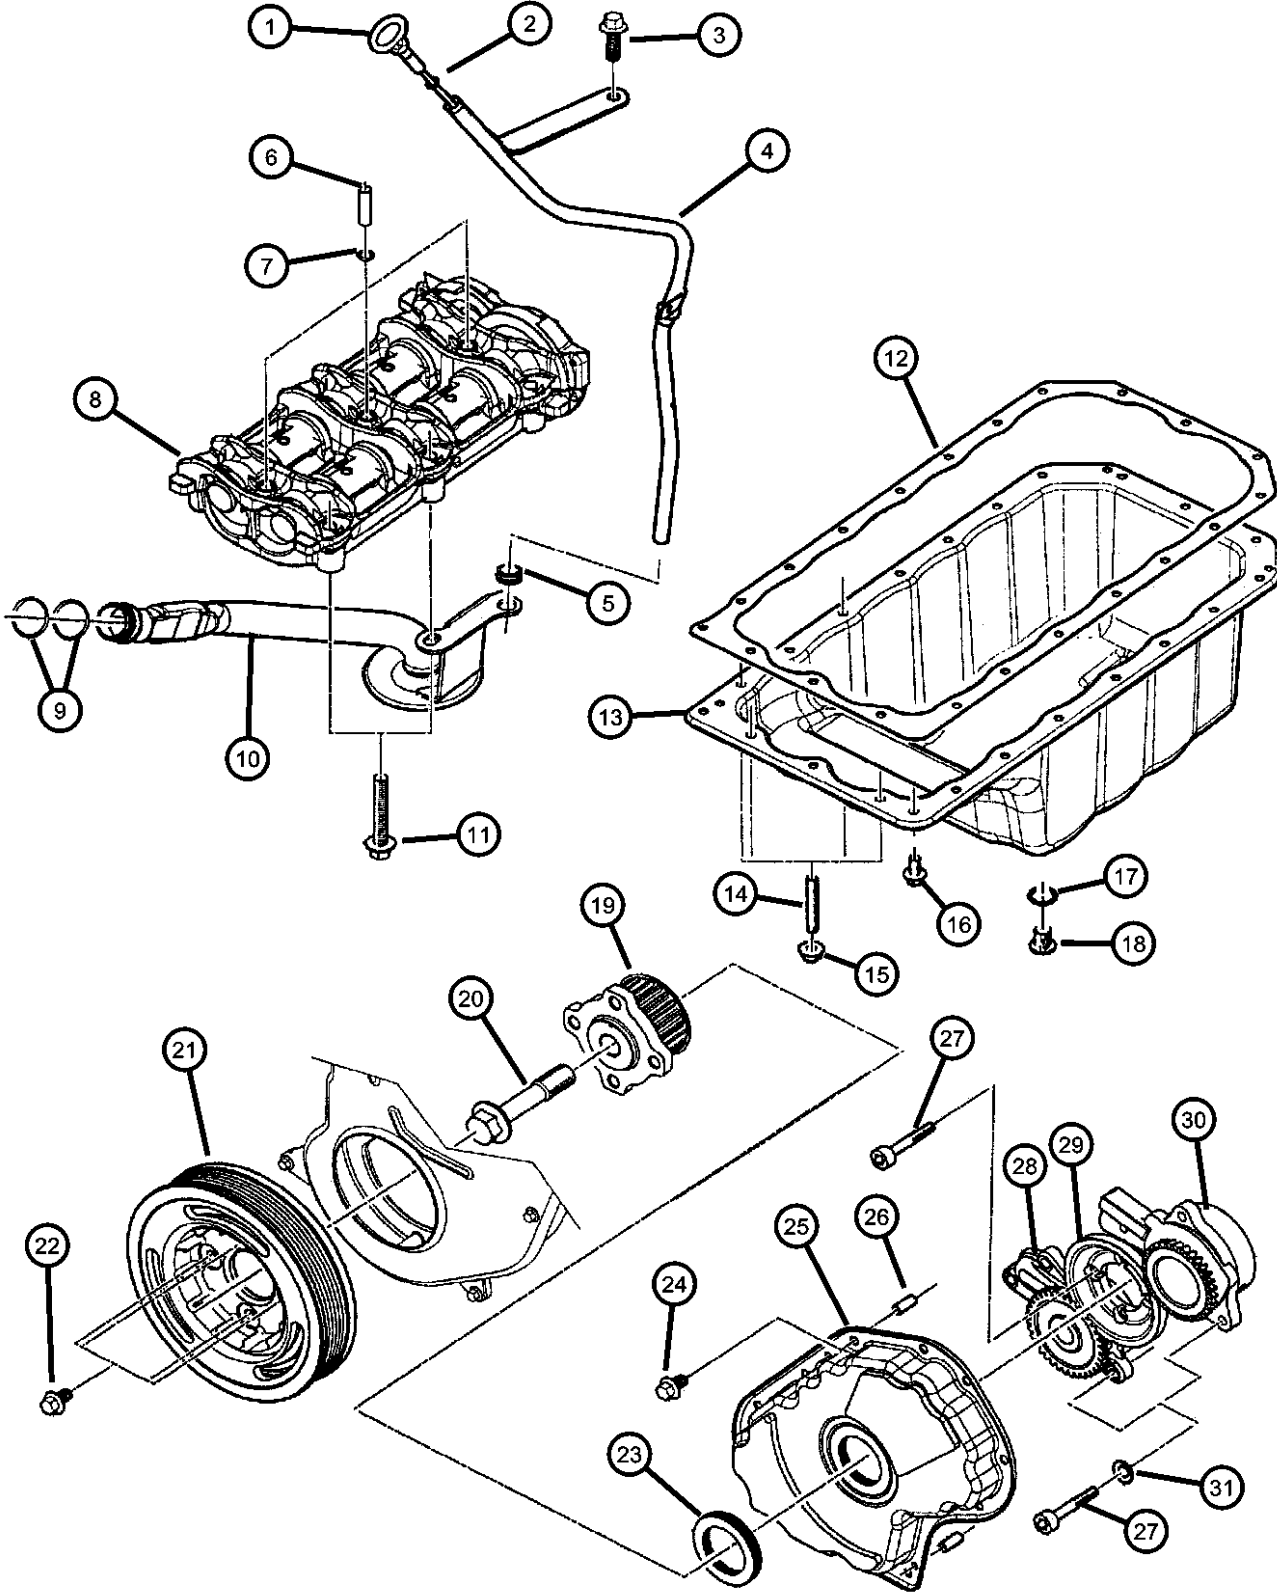


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes									
[DG0]= All Automatic Transmissions									
[EN0]= All 4/5 Cylinder Turbo Diesels									
1	05072682AB	1				EN0	DG0		INDICATOR, Engine Oil Level
2	04720373	1				EN0	DG0		O RING, Engine Oil Indicator
3	05003554AA	1				EN0	DG0		SCREW
4	05072681AC	1				EN0	DG0		TUBE, Oil Gauge
5	04720362	1				EN0	DG0		GASKET, Engine Oil Indicator Pipe
6	05093899AA	1				EN0	DG0		PIN
7	05066899AA	3				EN0	DG0		O RING
8	05066890AA	1				EN0	DG0		SHAFT, Balance
9	05066789AB	2				EN0	DG0		O RING, Oil Suction Tube
10	05072680AB	1				EN0	DG0		PICKUP, Engine Oil
11	05066962AA	4				EN0	DG0		SCREW
12	05066901AA	1				EN0	DG0		GASKET, Oil Pan
13	05072683AA	1				EN0	DG0		PAN, Engine Oil
14	04864745	1				EN0	DG0		BOLT
15	04778936	1				EN0	DG0		NUT, Suction Pipe Attaching
16	04864748	20				EN0	DG0		BOLT
17	04720353	1				EN0	DG0		WASHER, Plain
18	04720352	1				EN0	DG0		PLUG, Oil Drain
19	05066978AA	1				EN0	DG0		PULLEY, Crankshaft
20	05066832AA	1				EN0	DG0		SCREW
21	05072669AA	1				EN0	DG0		PULLEY, Crankshaft
22	05069138AA	4				EN0	DG0		SCREW, Damper Mounting
23	05072670AA	1				EN0	DG0		SEAL, Front Main Crankshaft
24	04864748	12				EN0	DG0		BOLT
25	05066955AA	1				EN0	DG0		COVER, Timing Belt
26	05066834AA	2				EN0	DG0		PIN
27	04720658	10				EN0	DG0		SCREW
28	05093890AA	1				EN0	DG0		PUMP, Engine Oil

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Engine Oiling 2.8 Diesel [ENR]  
Figure 2.8L-710

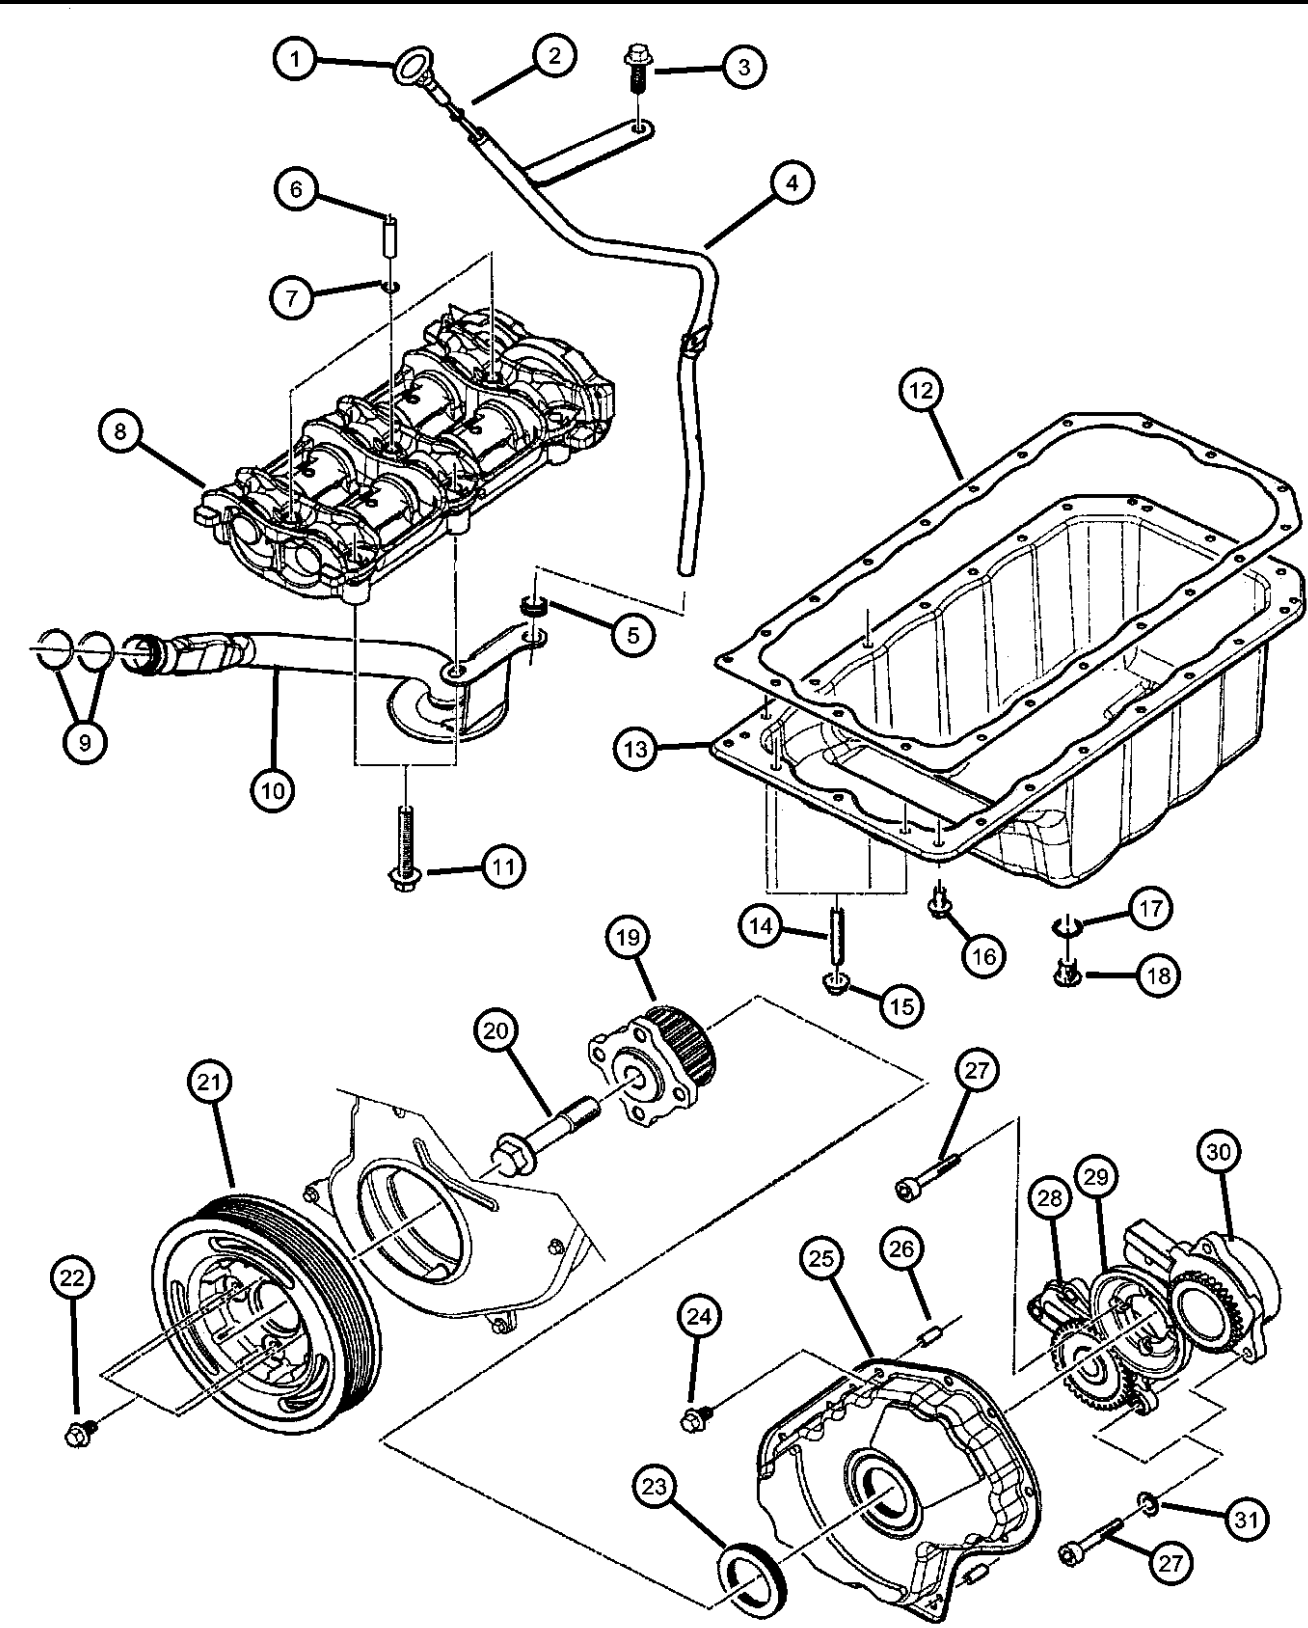


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
29	05072672AA	1				EN0	DG0		GEAR, Ring
30	05072673AA	1				EN0	DG0		PUMP, Vacuum
31	04723204	5				EN0	DG0		WASHER, Implement Attaching

LIBERTY (KJ) SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited H = Sport M = Renegade	J = LHD (4WD) U = RHD (4WD) T = LHD (2WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel EN0 = 4Cyl Turbo Diesel EKO = All 3.7L EDO = All 2.4L	DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Oil Line 2.8 Diesel [ENR]  
Figure 2.8L-720

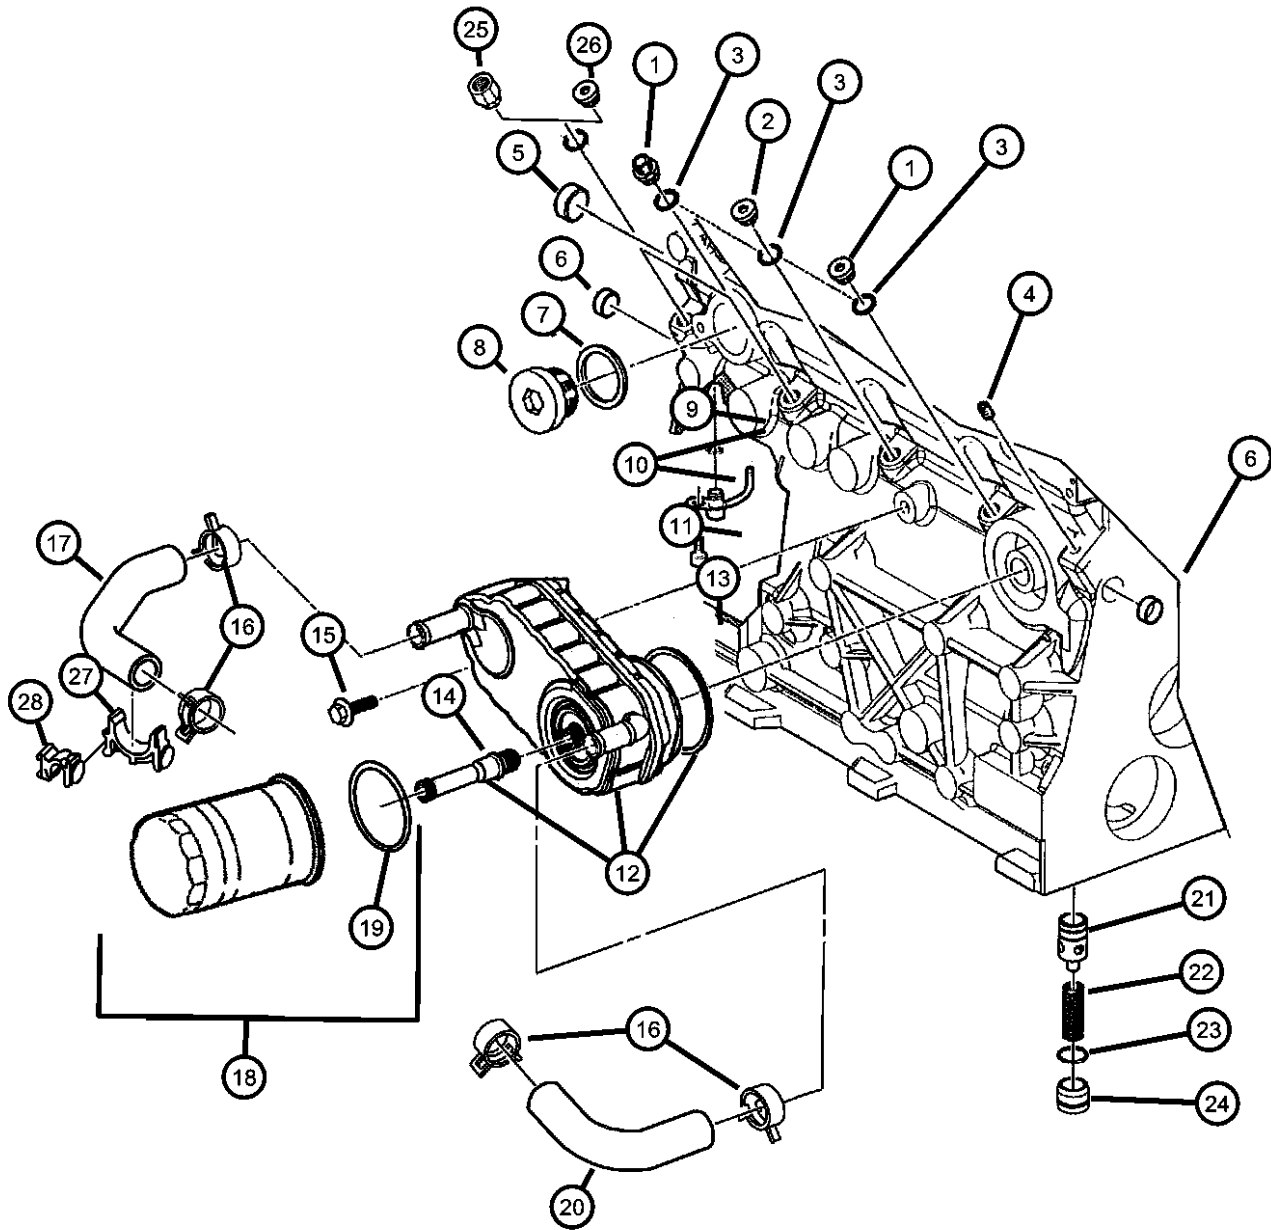

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DG0]=All Automatic Transmissions [EN0]=All 4 Cylinder Turbo Diesel Engines									
1	05066889AA	2				EN0	DG0		BOLT, Oil Feed To Turbo Adapter
2	05066814AA	1				EN0	DG0		BOLT, Turbo Oil Feed Adapter
3	04720704	4				EN0	DG0		WASHER, Oil Pressure Transducer
4	04883424AA	1				EN0	DG0		PLUG, Cylinder Block
5	04778887	1				EN0	DG0		PLUG, Cylinder Block Oil Hole
6	04723211	2				EN0	DG0		PLUG, Cylinder Block Oil Hole
7	05066811AA	2				EN0	DG0		WASHER, Plain, 16.2x19.9x1.5
8	05066855AA	2				EN0	DG0		PLUG, Camshaft
9	04864689	4				EN0	DG0		O RING
10	05066812AB	4				EN0	DG0		JET, Valve Body
11	04882620	4				EN0	DG0		SCREW
12	05093913AA	1				EN0	DG0		COOLER, Engine Oil
13	04723217	1				EN0	DG0		O RING, Oil Cooler
14	05015178AA	4				EN0	DG0		FITTING, Engine Oil Cooler
15	05003724AA	1				EN0	DG0		SCREW
16	04883924AA	4				EN0	DG0		CLAMP, Heater Hose
17	05072710AA	1				EN0	DG0		HOSE, Engine Oil Cooler
18	05003558AA	1				EN0	DG0		FILTER, Engine Oil
19	05066946AA	1				EN0	DG0		GASKET
20	05072709AA	1				EN0	DG0		HOSE, Engine Oil Cooler
21	05066816AA	1				EN0	DG0		VALVE, Oil Pressure Relief
22	05093915AA	1				EN0	DG0		SPRING, Oil Pressure Relief Valve
		1				EN0	DBB		
23	05066887AA	1				EN0	DG0		O RING
24	05066886AA	1				EN0	DG0		PLUG
25	05093916AA	1				EN0	DG0		ADAPTER


LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Oil Line 2.8 Diesel [ENR]  
Figure 2.8L-720


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
26	05066889AA	2				EN0	DG0		BOLT, Oil Feed To Turbo Adapter
27	05093906AA	1				EN0	DG0		CLAMP
28	05093914AA	1				EN0	DG0		CLAMP

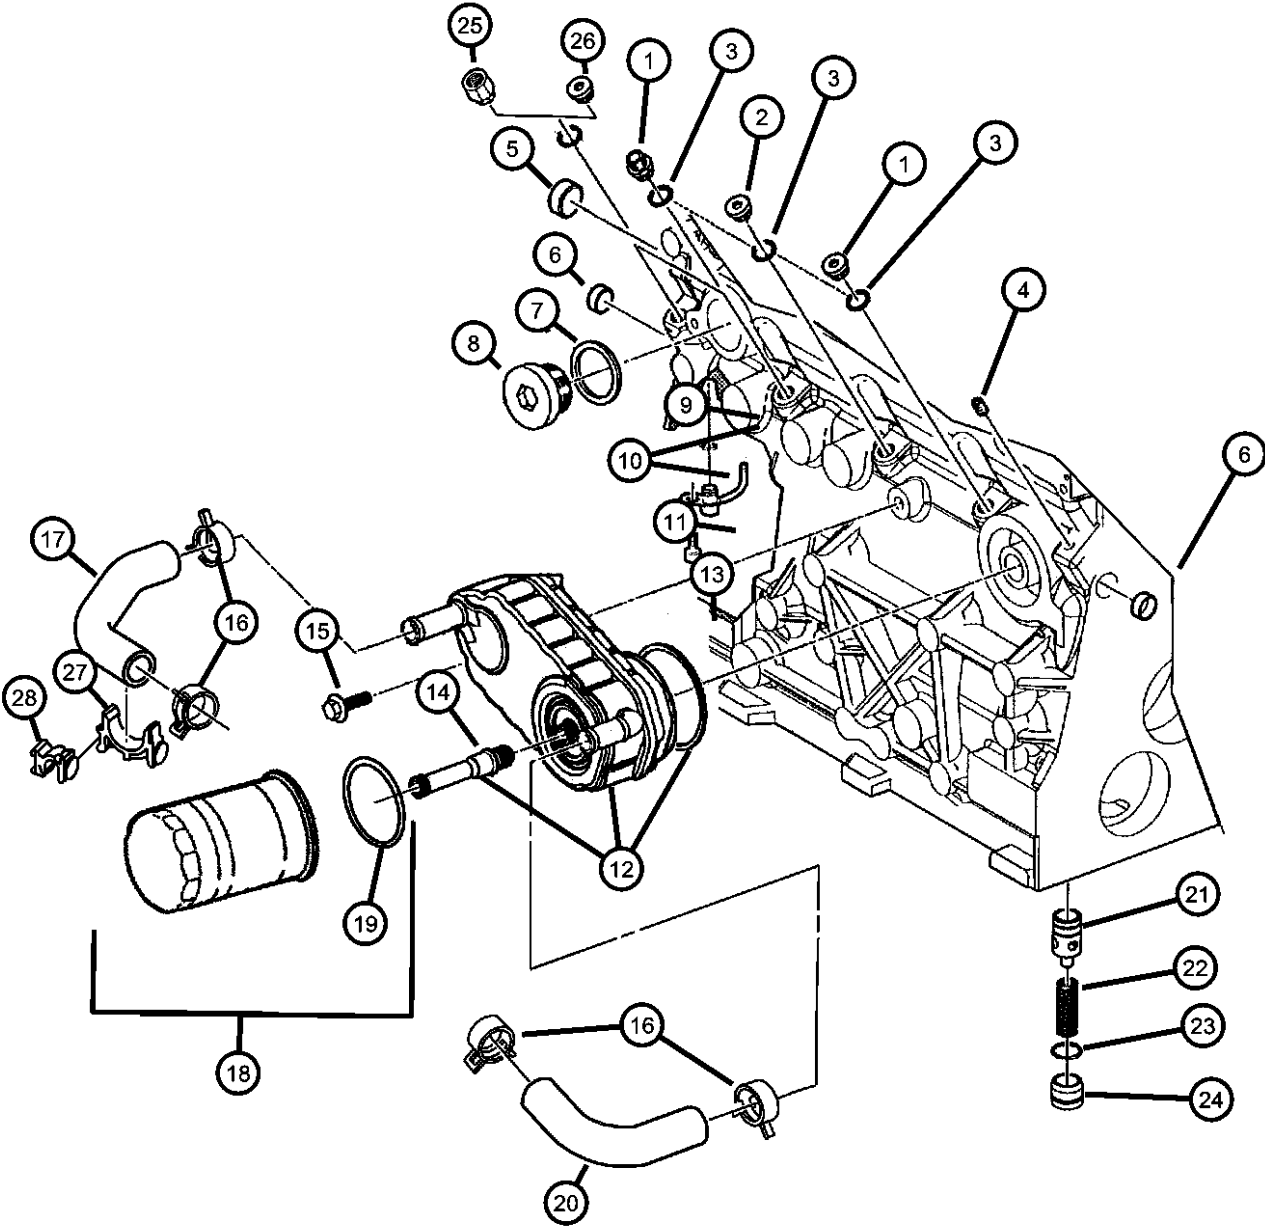

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Engine Oil Filter Adapter And Lines 2.8L Diesel [ENR]  
Figure 2.8L-730

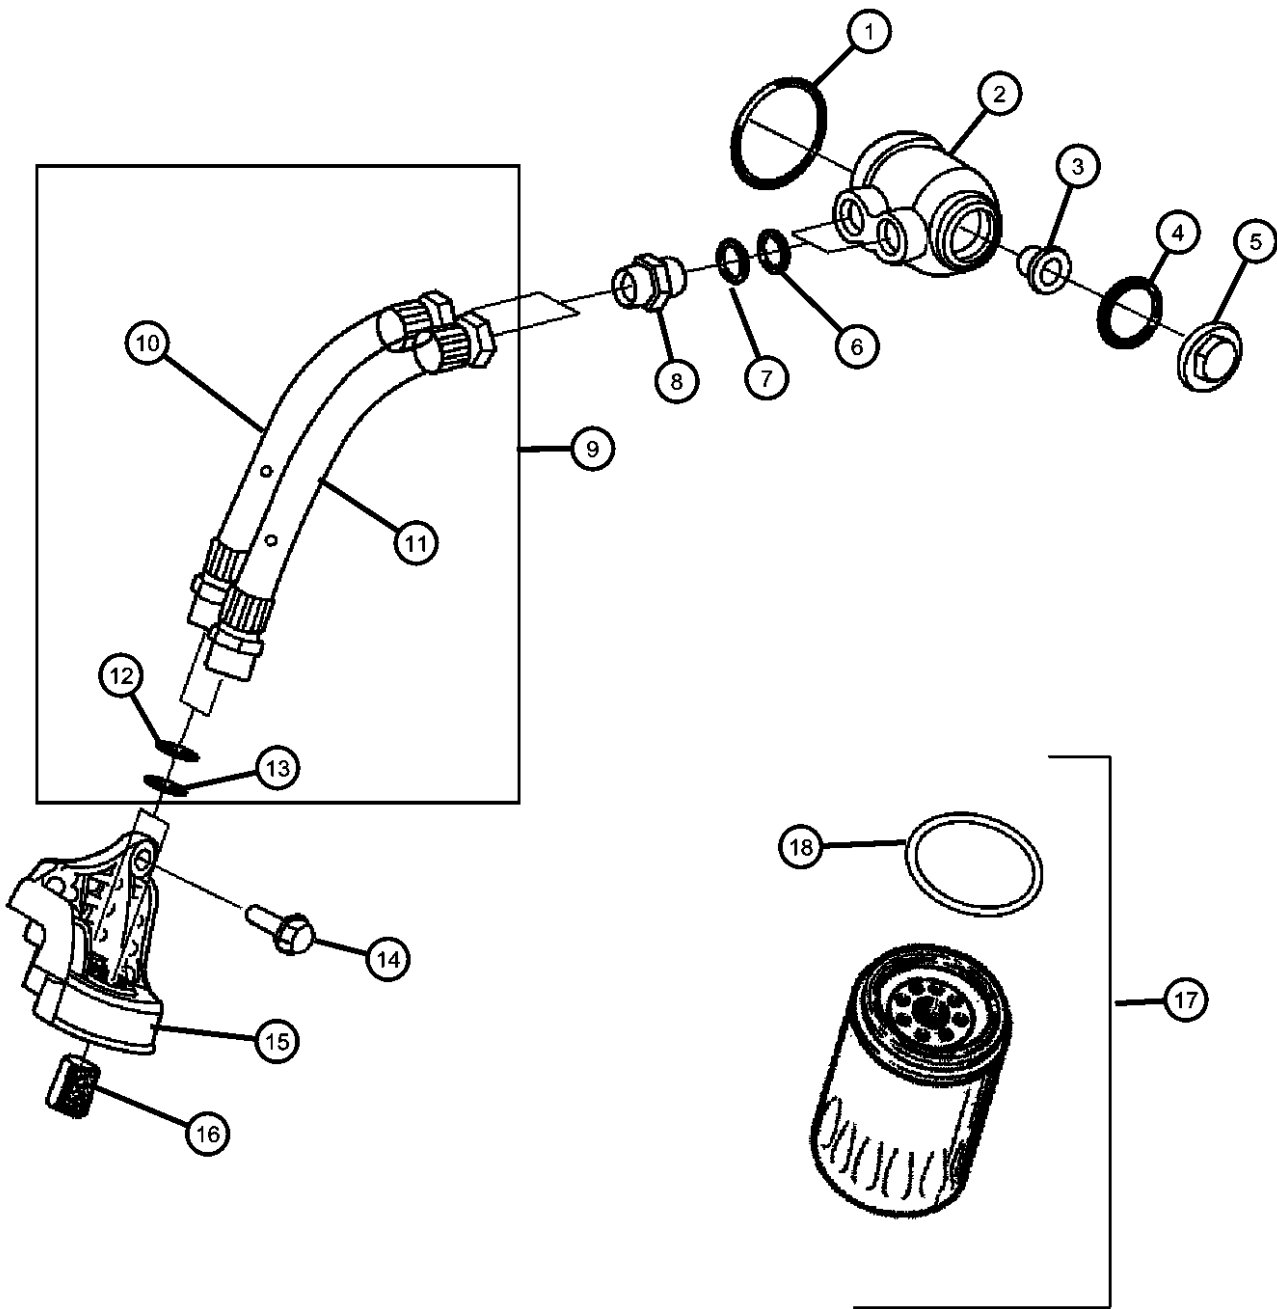


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DBB]=All Manual Transmissions [DG0]=All Automatic Transmissions [EN0]=All 4 Cylinder Turbo Diesel Engines									
1	04720375	1				EN0	DG0		O RING, Oil Filter Base
		1				EN0	DBB		
2	05072716AA	1				EN0	DG0		ADAPTER, Oil Filter
		1				EN0	DBB		
3	04723334	1				EN0	DG0		GASKET, Valve
		1				EN0	DBB		
4	04886305AA	1				EN0	DG0		O RING, Oil Filter Adapter
		1				EN0	DBB		
5	05072718AB	1				EN0	DG0		NUT
		1				EN0	DBB		
6	05159122AA	4				EN0	DG0		WASHER
		4				EN0	DBB		
7	05159213AA	4				EN0	DG0		WASHER
		4				EN0	DBB		
8	05093920AA	2				EN0	DBB		UNION
		2				EN0	DG0		
9	05183851AA	1				EN0	DBB		PIPE, Kit Includes 10,11,12,13

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Engine Oil Filter Adapter And Lines 2.8L Diesel [ENR]  
Figure 2.8L-730

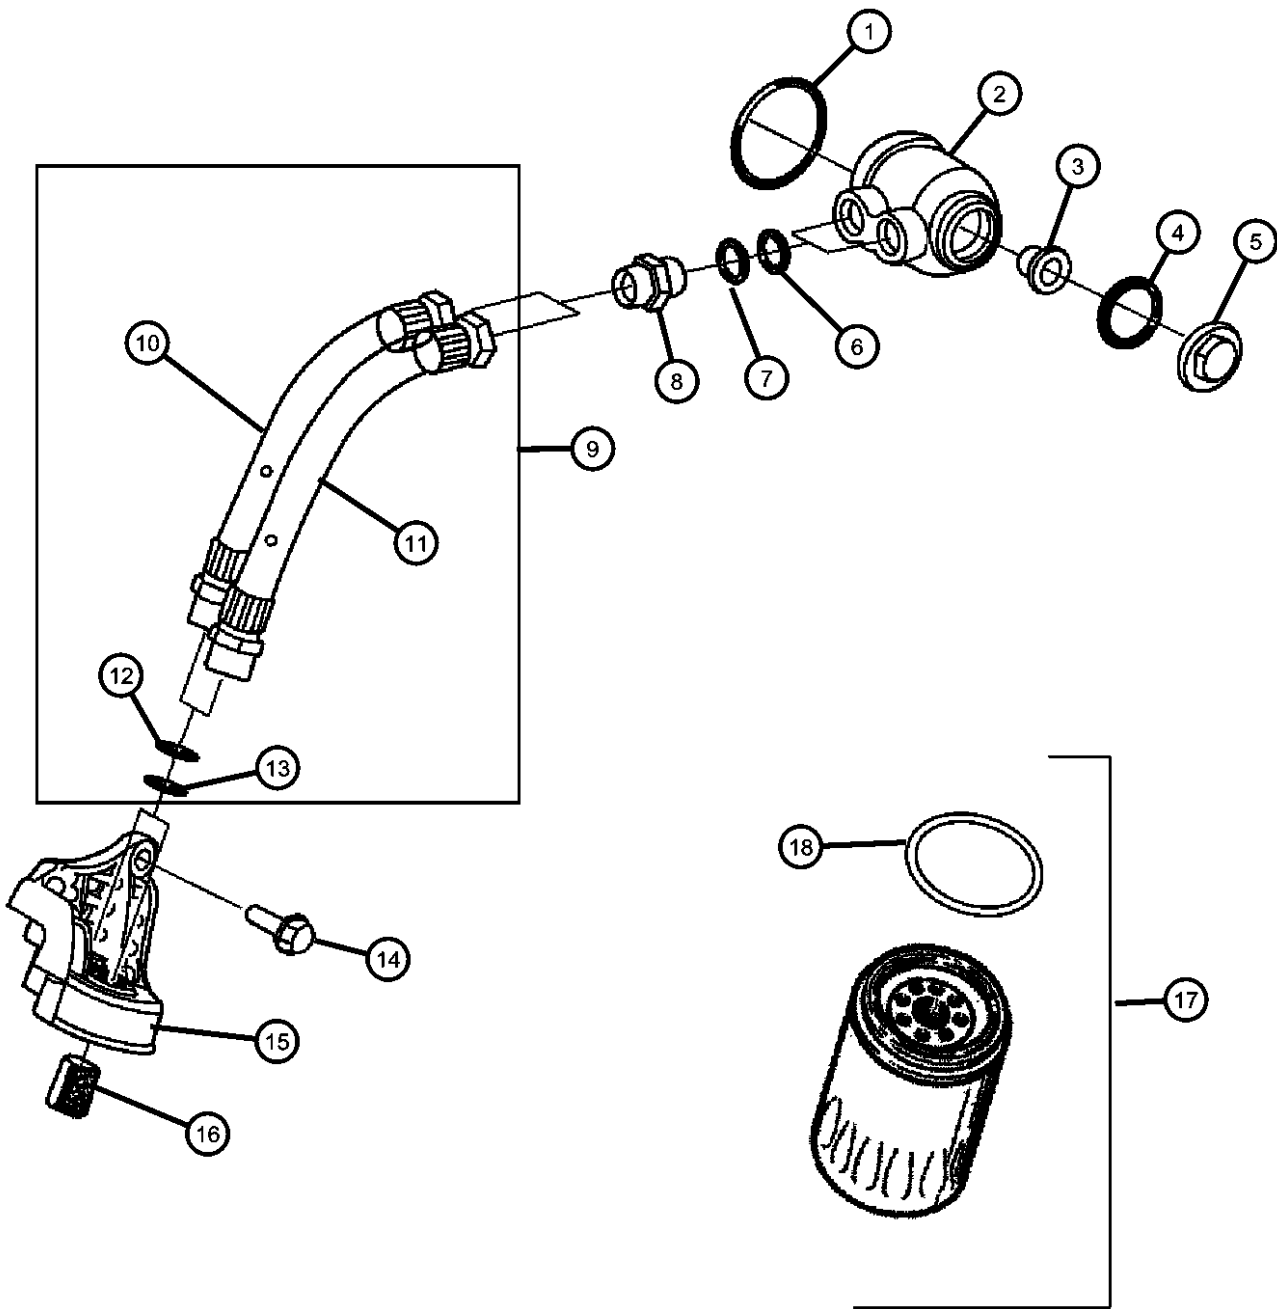

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10		1				EN0	DG0		PIPE
	05183852AA	1				EN0	DBB		
		1				EN0	DG0		
11									PIPE
	05183853AA	1				EN0	DBB		
		1				EN0	DG0		
12									O RING
	05093918AA	4				EN0	DBB		
		4				EN0	DG0		
13									WASHER
	05159122AA	4				EN0	DG0		
		4				EN0	DBB		
14									BOLT, Adaptor Plate
	05003532AA	1				EN0	DBB		
		1				EN0	DG0		
15									BRACKET, Oil Filter Housing
	05072711AB	1				EN0	DG0		
		1				EN0	DBB		
16									UNION, Oil Filter Base
	04897252AA	1				EN0	DG0		
		1				EN0	DBB		
17									FILTER, Engine Oil
	05003558AA	1				EN0	DG0		
		1				EN0	DBB		
18									GASKET
	05066946AA	1				EN0	DG0		
		1				EN0	DBB		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Manifolds, 2.8L Diesel [ENR]  
Figure 2.8L-810

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	05072689AA	1				EN0	DG0		PIPE, EGR to Manifold
2	04883924AA	4				EN0	DG0		CLAMP, Heater Hose
3	04883924AA	4							SHIELD, Exhaust Manifold, (NOT SERVICED)
4	04882610	6				EN0	DG0		NUT, Lock
5	05096234AA	1				EN0	DG0		VALVE, EGR
6	05083261AA	1				EN0	DG0		GASKET, EGR Tube Flange
7	04882606	6				EN0	DG0		STUD, Turbo Elbow
8	05083261AA	1				EN0	DG0		GASKET, EGR Tube Flange
9	05072687AB	1				EN0	DG0		COOLER, EGR
10	05072688AA	4				EN0	DG0		SCREW
11	05066986AA	2				EN0	DG0		SCREW
12	05066796AA	9				EN0	DG0		STUD, Turbo Elbow
13	05093904AA	1				EN0	DG0		GASKET, Intake/Exhaust Manifold
14	05093903AA	9				EN0	DG0		NUT, Lock
15	05072686AA	1				EN0	DG0		MANIFOLD, Exhaust
16	05072691AA	1				EN0	DG0		SHIELD, Exhaust Manifold
17	05072688AA	4				EN0	DG0		SCREW

**LIBERTY (KJ)**  
SERIES      LINE  
P = Limited      J = LHD (4WD)  
H = Sport      U = RHD (4WD)  
M = Renegade      T = LHD (2WD)

**BODY**  
74 = 4 Door (104.3 WB)

**ENGINE**  
ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EK0 = All 3.7L  
ED0 = All 2.4L

**TRANSMISSION**  
DDD = Transmission - 5-Speed HD Manual  
DDK = Transmission - 5-Speed HD Manual  
DG4 = Transmission-Multi-Speed Auto, 45RFE  
DG6 = Transmission-4-Spd. Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic 5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part

<< RETURN TO GROUP INDEX


2004 KJ

Crankcase Ventilation 2.8 Diesel [ENR]  
Figure 2.8L-910

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES:  
Sales Codes  
[EN0]= All 4/5 Cylinder Turbo Diesels

1	53013107AB	1				EN0			AIR CLEANER
2	53013107AB	1							SENSOR PACKAGE, Air Flow Meter, (NOT SERVICED)
3	53013104AB	1				EN0			HOSE, Clean Air
4	53013094AC	1				EN0			HOSE, Oil Separator

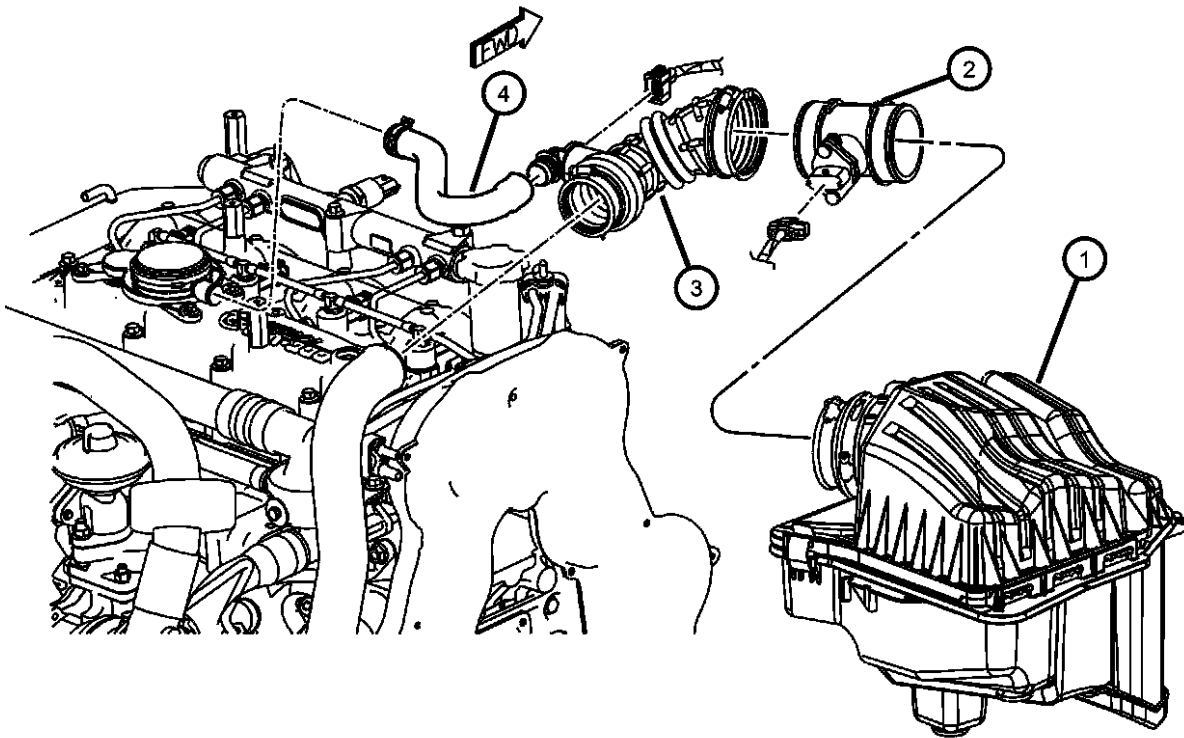

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

# Group - 11

## Exhaust

### Group - 11 Exhaust

Illustration Title


Group-Fig. No.



#### Exhaust System

Exhaust System, 2.8L [EN0]	Fig. 11 - 110
Exhaust System 2.4L [ED1]	Fig. 11 - 120
Exhaust System 3.7L [EKG]	Fig. 11 - 130


#### Heat Shields

Heat Shields	Fig. 11 - 210
--------------	---------------

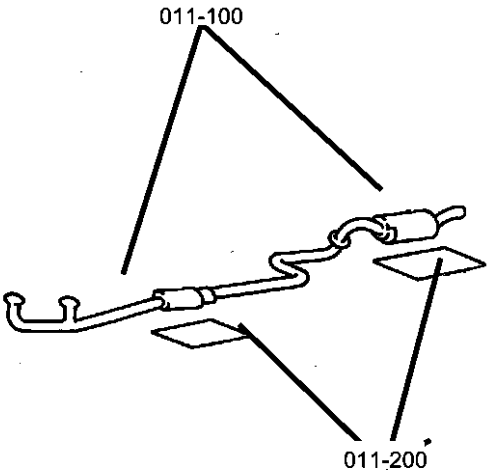
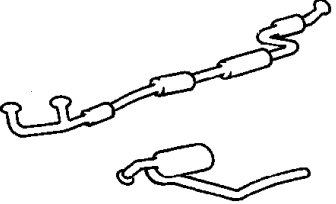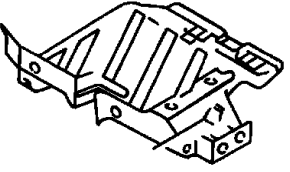
<div>011-100 Exhaust System</div> 	<div>011-200 Heat Shields</div> 		
--	---	--	--

Exhaust System, 2.8L [EN0]  
Figure 11-110

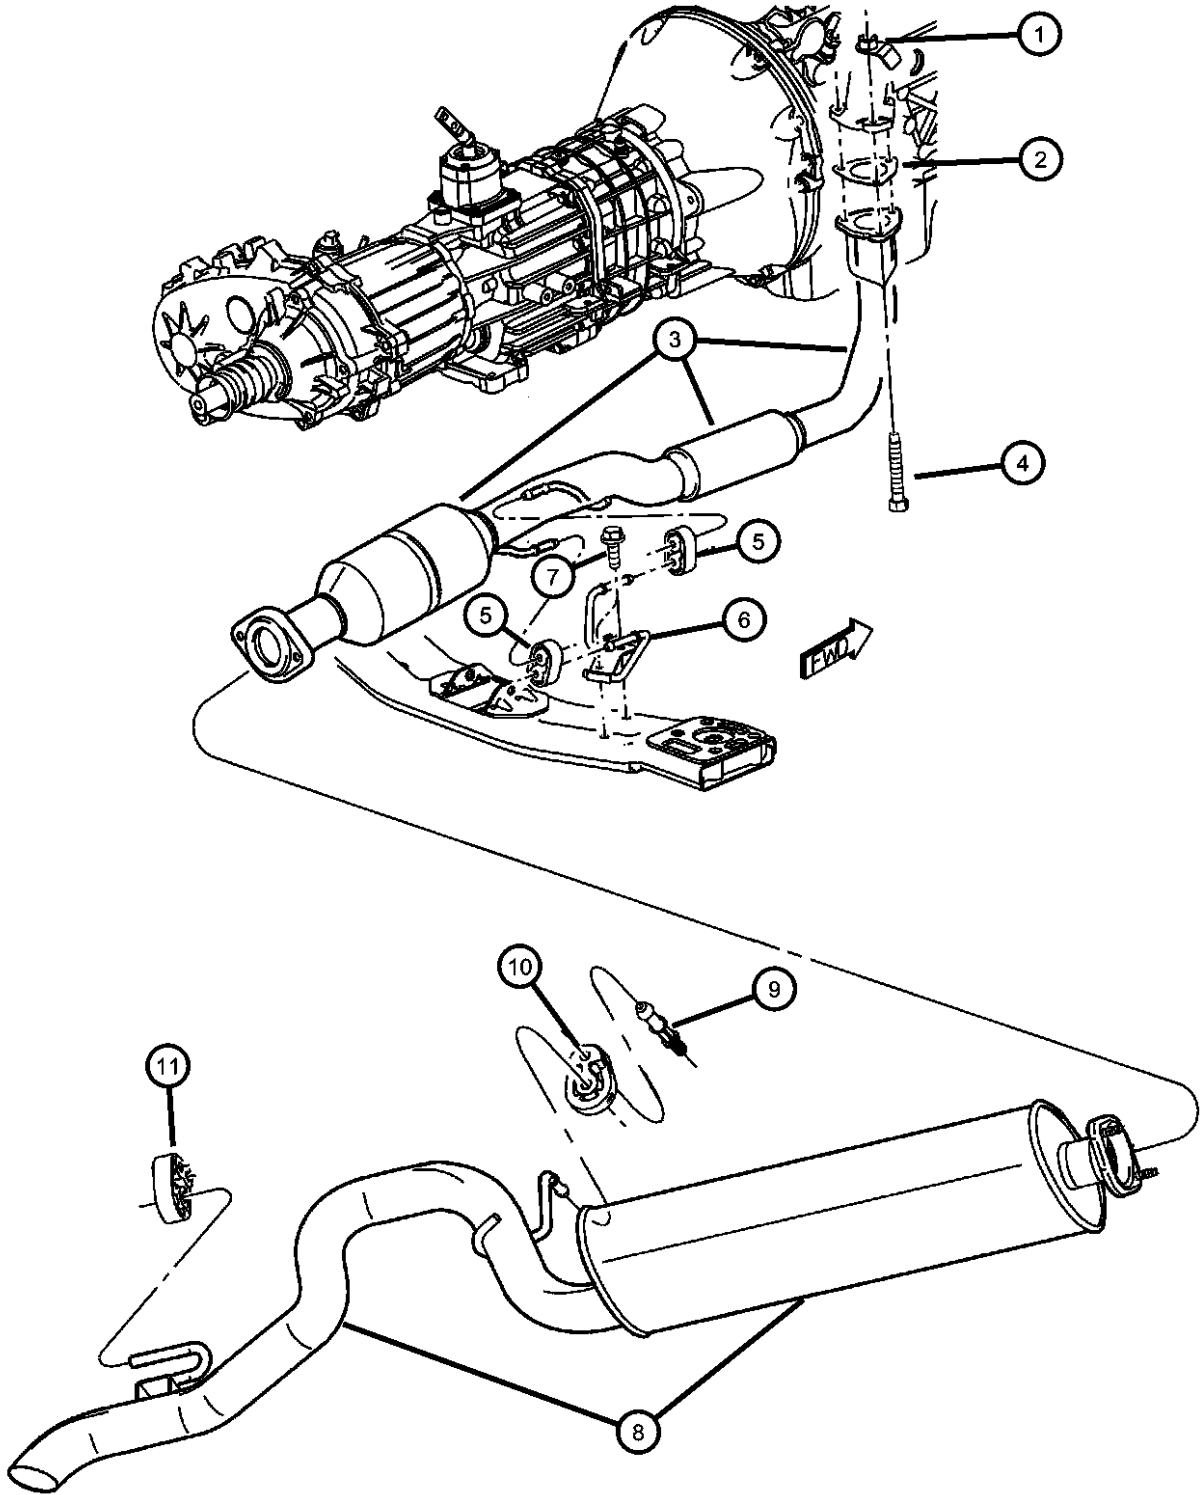


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [EN0]= All 2.8L 4 Cylinder Turbo Diesels									
1	04682810AB	4				ED0			NUT, Hex Flange, M8x1.25
2	52101165AA	1				EN0			GASKET, Manifold To Pipe
3	52128687AB	1				EN0			PIPE AND CONVERTER, Exhaust, To Manifold
4	52128687AB	1							BOLT AND WASHER, Self Taping Flange Head, M8x1.25x40.00, (NOT SERVICED)
5	52101035	2				EN0			INSULATOR, Exhaust
6	52128686AB	1				EN0			HANGER, Exhaust
7	06101611	2				EN0			SCREW AND WASHER, Hex Head, M8x1.25x25
8	52101120AD	1							MUFFLER AND TAILPIPE, Exhaust
9	52128502AB	1							HANGER, Exhaust
10	52128501AA	1							ISOLATOR, Exhaust
11	52101126AA	1							ISOLATOR, Exhaust

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6 Turbo Diesel	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Exhaust System 2.4L [ED1]  
Figure 11-120

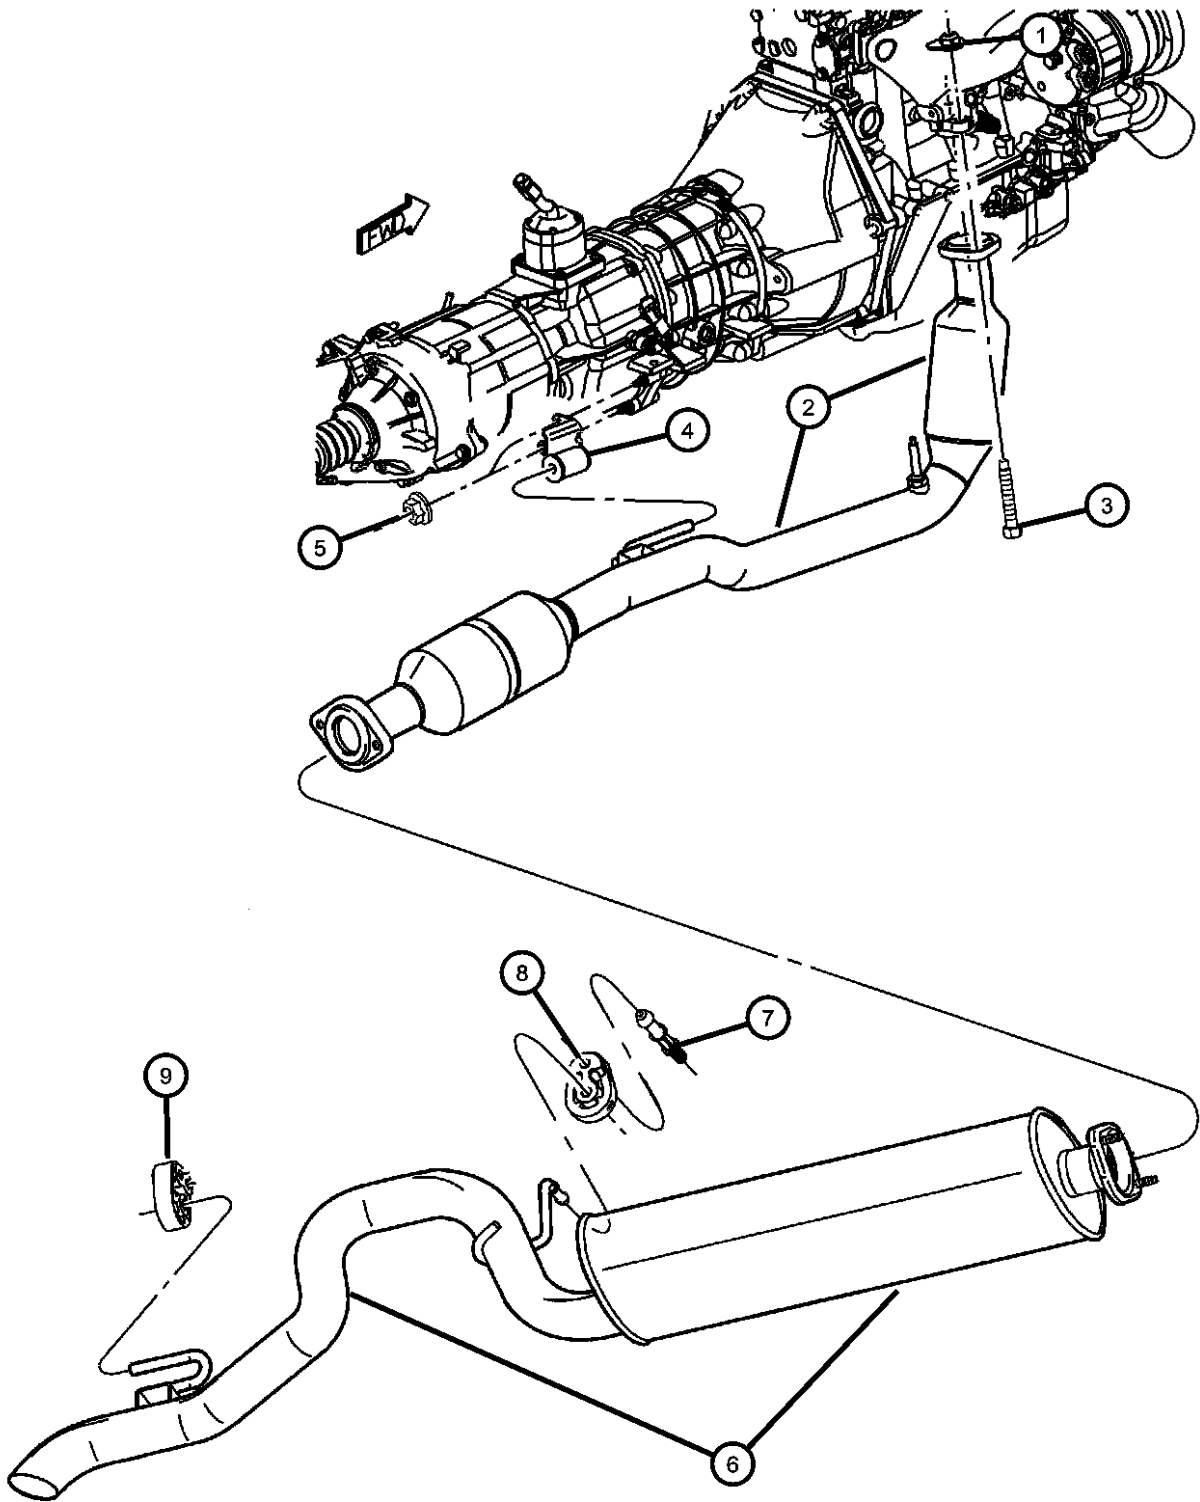

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[DD0]= All 5 Speed Manual Transmissions  
[ED0]= All 2.2L,2.5L,2.4L, 4 Cylinder Gas Engines

1	04682810AB	4				ED0			NUT, Hex Flange, M8x1.25
2	52128684AC	1				ED0			PIPE AND CONVERTER, Exhaust, To Manifold
3	06505954AA	2				ED0			SCREW, Hex Head Pilot Point, M8x1.25x65.00
4	52101150AB	1				ED0	DD0		HANGER, Exhaust
5	06101695	2				ED0			NUT, Hex Flange Lock
6	52101120AD	1							MUFFLER AND TAILPIPE, Exhaust
7	52128502AB	1							HANGER, Exhaust
8	52128501AA	1							ISOLATOR, Exhaust
9	52101126AA	1							ISOLATOR, Exhaust

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part




Exhaust System 3.7L [EKG]  
Figure 11-130

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[DD0]=All 5 Speed Manual Transmissions  
[DG0]= All Automatic Transmissions  
[EK0]= All 3.7L 6 Cylinder Gas Engines

1	04581014AB	2				EK0			CLAMP, Exhaust Manifold
2	52128599AG	1				EK0			PIPE AND CONVERTER, Exhaust
3									HANGER, Exhaust
	52128668AA	1				EK0	DDQ		Right
	52128669AA	1				EK0	DDQ		Left
	52128720AA	1				EK0	DBB		Right
	52128721AA	1				EK0	DBB		Left
4									BUSHING, Exhaust Hanger
	52085085	1				EK0	DG6		
		1				EK0	DD0		
5		1							NUT, Hex Flange Lock, M8x1.25, (NOT SERVICED)
6	52101120AD	1							MUFFLER AND TAILPIPE, Exhaust
7	52128502AB	1							HANGER, Exhaust
8	52128501AA	1							ISOLATOR, Exhaust
9	52101126AA	1							ISOLATOR, Exhaust
-10	06502058	2				EK0	DD0		SCREW AND WASHER, Hex Head Special Point, M8x1.25x17, Front Hanger to Trans

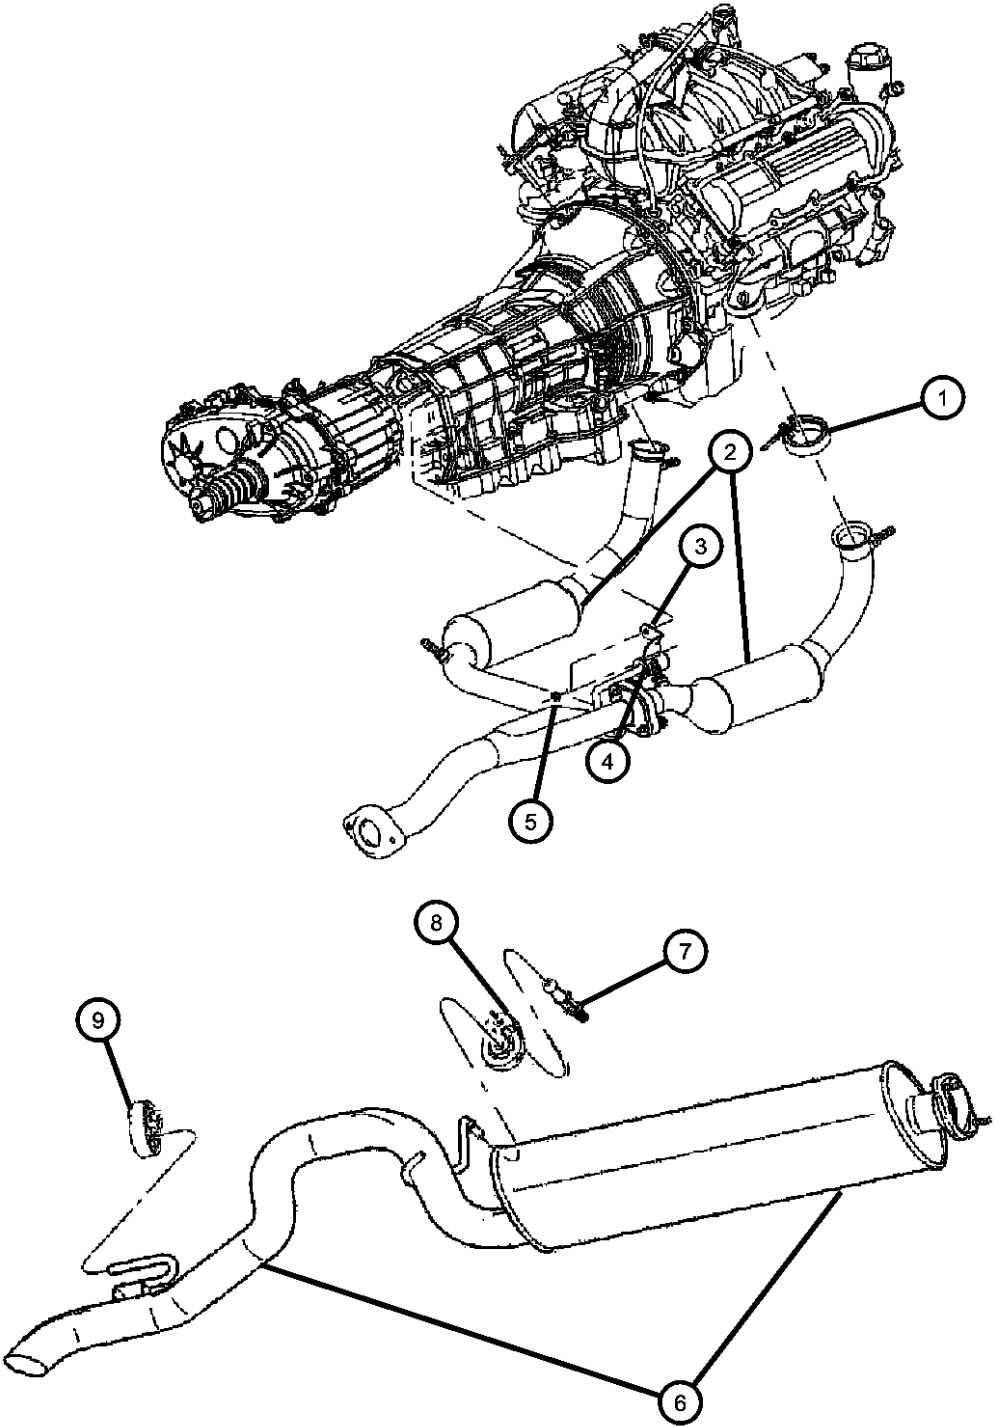


LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Heat Shields  
Figure 11-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55176791AA	1							SHIELD, Floor Pan
2	55176792AC	1							SHIELD, Floor Pan
3	55176792AC	1							NUT, Heat Shield Attach, M5x1.60, (NOT SERVICED)

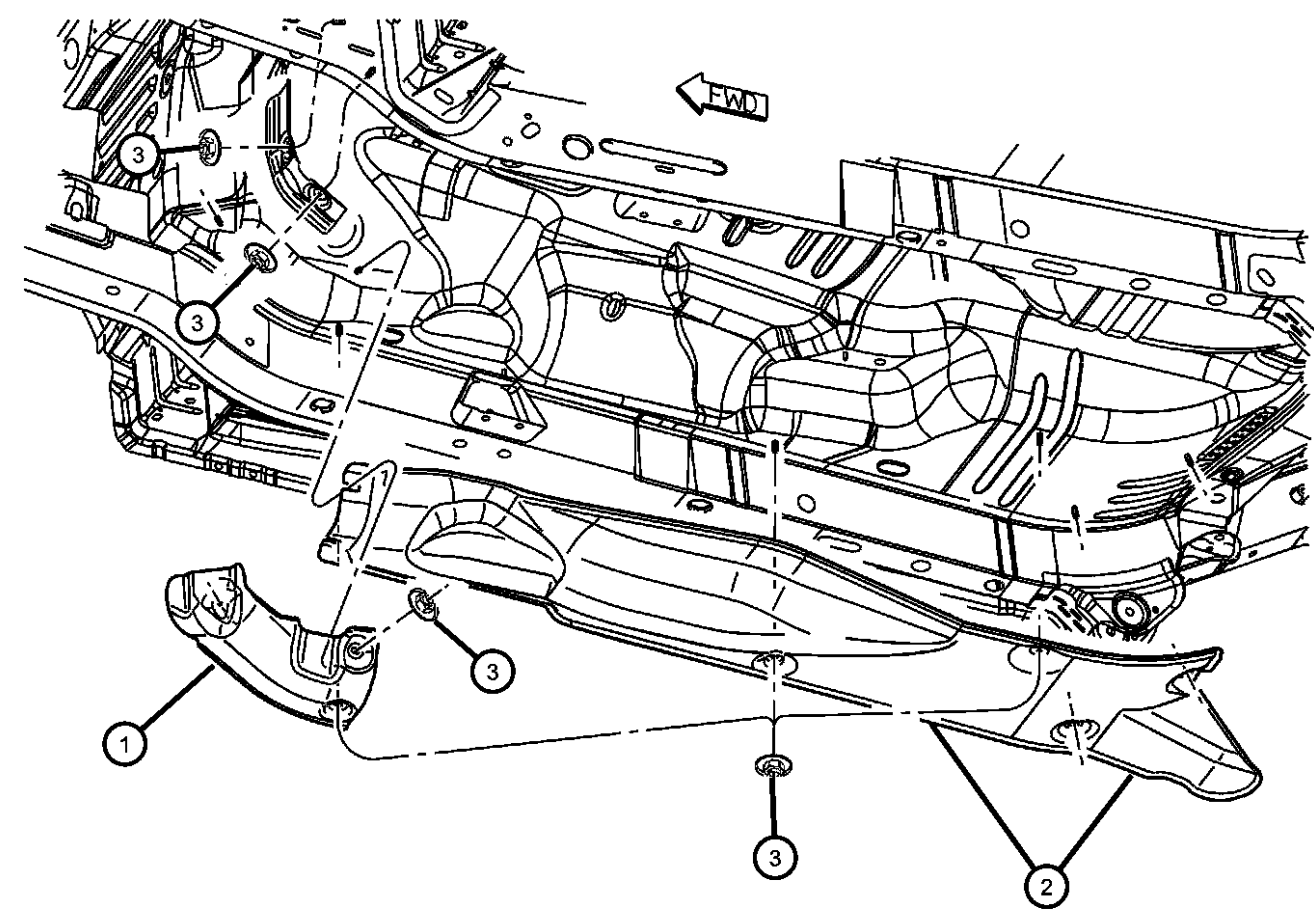

<b>LIBERTY (KJ)</b>				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

# Group - 13

## Frames and Bumpers

### Group - 13 Frames and Bumpers

Illustration Title Group-Fig. No.

#### Frames

Frame Cradle .....Fig. 13 - 110

#### Front Bumper and Fascia

Bumper, Front .....Fig. 13 - 210


#### Rear Bumper and Fascia

Bumper, Rear .....Fig. 13 - 310

#### Trailer Tow


Tow Hooks - Front.....Fig. 13 - 610

Tow Hooks - Rear .....Fig. 13 - 620

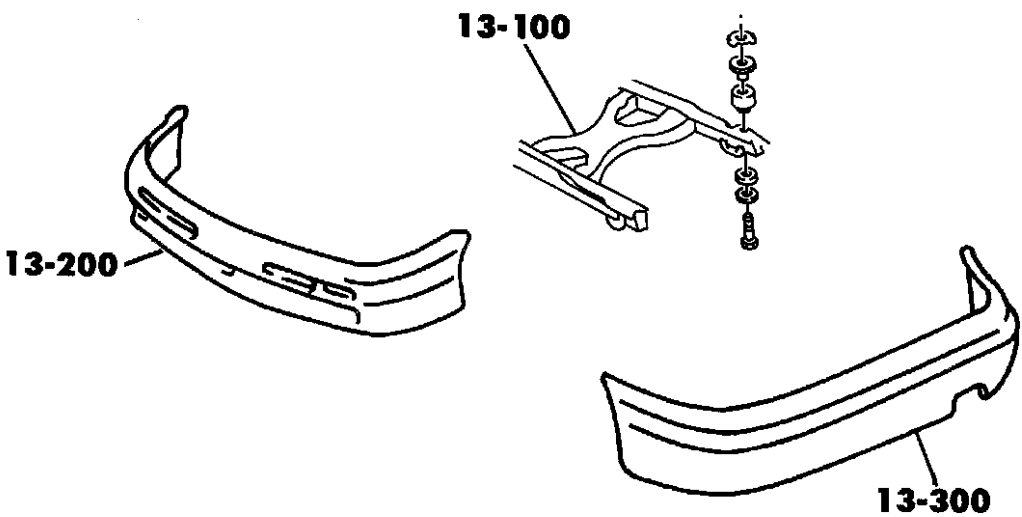

<div>013-100 Frames</div> <div></div>	<div>013-200 Front Bumper and Fascia</div> <div></div>	<div>013-300 Rear Bumper and Fascia</div> <div></div>	<div>013-600 Trailer Tow</div> <div></div>
---	--	---	--

Frame Cradle  
Figure 13-110

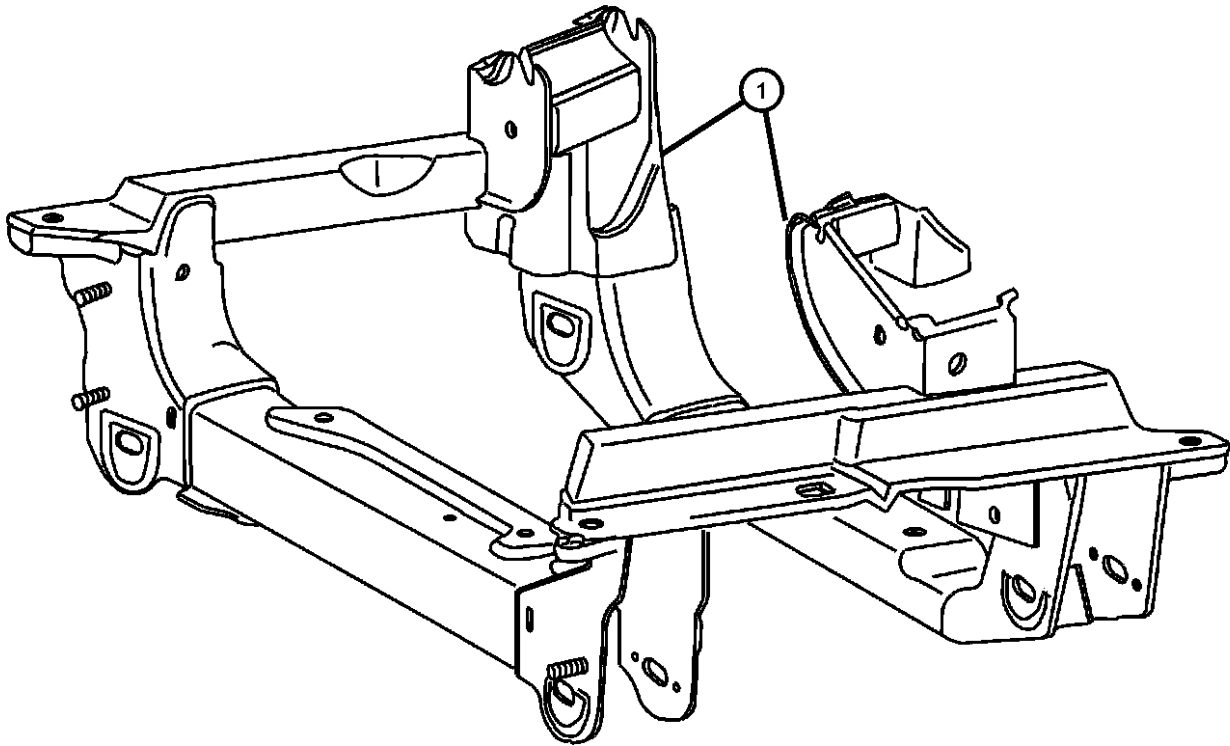

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note: When replacing Crossmember Cradle it is recommended to relace mounting screws.

1									CRADLE, Front Suspension
	52059462AG	1	U						[EK0] All V-6 Engines
		1	T						[EK0] All V-6 Engines
		1	J						[EK0] All V-6 Engines
	52059463AG	1	J						[EN0] All Diesel Engines or [ED0] All 4 Cylinder Engies
		1	U						[EN0] All Diesel Engines or [ED0] All 4 Cylinder Engies
		1	T						[EN0] All Diesel Engines or [ED0] All 4 Cylinder Engies
-2	06506672AA	2							SCREW AND WASHER, Hex, M14X2.0X135.0, Cradle Bolt
-3	06507135AA	2							SCREW, M12X1.75X135, Cradle Bolt
-4	52128539AC	1	J, U						SKID PLATE, Front
-5	06507371AA	AR							SCREW AND WASHER, Hex Head, M7 x 1.25 x 20.00, Front Structure to Crossmember

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Bumper, Front  
Figure 13-210

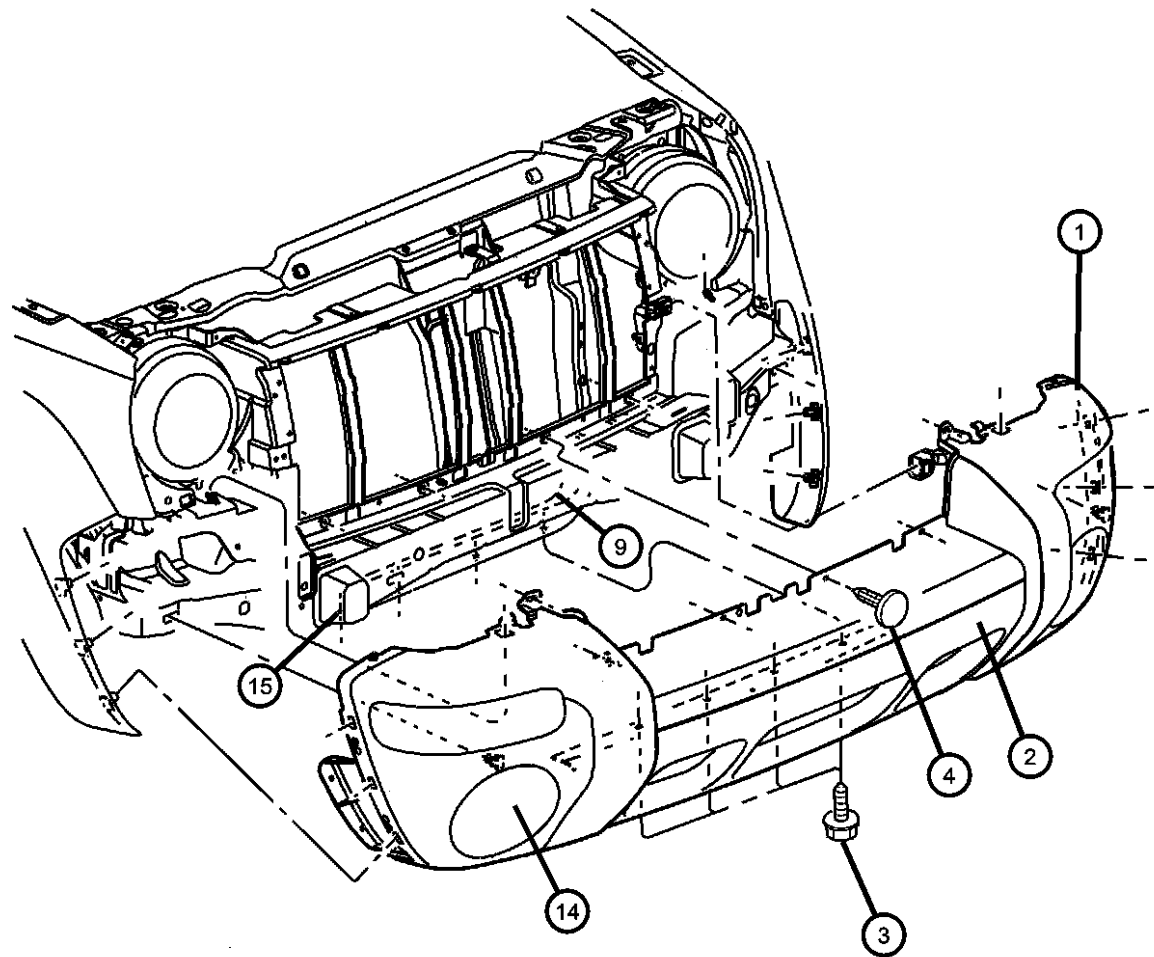


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes [LNJ]=Fog Lamps [MLA]=Fascia - Body Color [MLC]=Fascia - Gray									
1									FASCIA, Front, Primed
	05066606AC	1							[MLA,MCU]
	05073488AC	1							[ML3] With Renegade Package
	5GJ63HS5AC	1							[MLC]
2	5HX12WS2AB	1							BUMPER, Center Bezel
3	5HX12WS2AB	1							SCREW AND WASHER, Self Tapping, M6x1x22, (NOT SERVICED)
4	06506008AA	6							RETAINER, Fascia
-5	55156042AD	1							ABSORBER, Front Energy
-6	55155963AC	1							AIR DAM
-7	55155963AC	1							SCREW AND WASHER, Self Tapping, M6x1x22, (NOT SERVICED)
-8	55255994AC	1	J, T						BRACKET, License Plate, Package
9	55360190AE	1							CROSSMEMBER, Front Support
-10	06035201	3							RIVET
-11	06036148AA	4							RIVET, Blind, Three Leg
-12	06036148AA	4							NUT, M5, (NOT SERVICED)
-13									BRACKET, License Plate
	55155966AB	1	J, U						Export
	55255992AC	1	J, T						
14									COVER, Lamp Opening
	55156018AB	1							Right
	55156019AB	1							Left
15	55360410AA	2							SPACER, Jounce Bumper

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EKO = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Bumper, Rear  
Figure 13-310

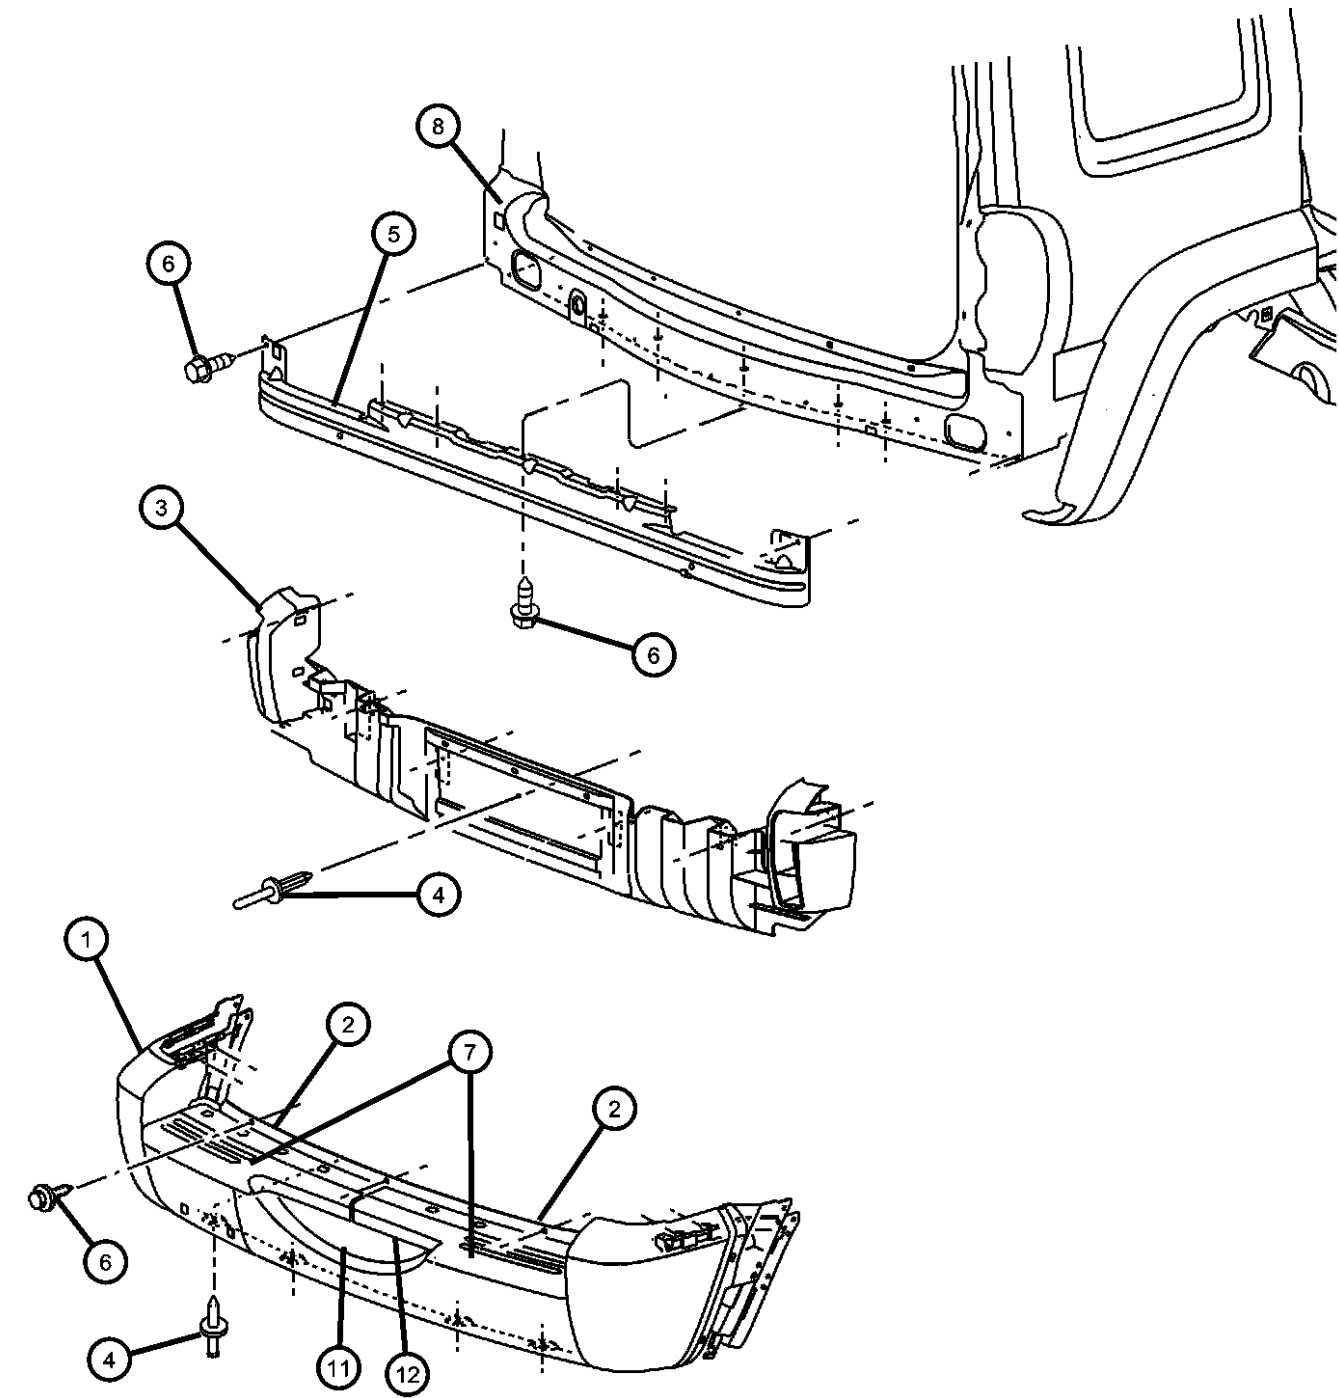

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE : Sales Codes  
[ABE] = Export Equipment Group  
[MLA] = Fascias - Body Color  
[MLC] = Fascias - Silverstone


1									FASCIA, Rear
	05066317AF	1							[ML3,MCU,MLA] Without [ABE]
	05066328AD	1							[MLA,MCU], With [ABE]
	5GE72HS5AD	1							[MLC], With [ABE]
	5GJ58HS5AE	1							[MLC], Without [ABE]
2	06506008AA	6							RETAINER, Fascia
3									SUPPORT, Rear Fascia, Attaches directly to 55360227AB for Domestic vehicles
	55360678AA	1							Right
	55360679AA	1							Left
4	55360679AA	1							RIVET, (NOT SERVICED)
5	55155820AA	1			J, U				CROSSMEMBER, Bumper, Rear, Export only
6	06505900AA	7			J, U				SCREW, Tapping Hex Flange Head, M6.3 x 1.81 x 19.00, Export only
7									STEP PAD, Rear Bumper
	55155996AC	1							Right
	55155997AC	1							Left
8	55360227AD	1							PANEL, Liftgate Opening
-9	04399791	2							REFLECTOR, Fascia
-10	55255994AC	1			J, T				BRACKET, License Plate
11	55156801AA	1							TROUGH, Drip, Diverter
12	34201631	3							RIVET, M6.25x28 Black

LIBERTY (KJ)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Tow Hooks - Front  
Figure 13-610

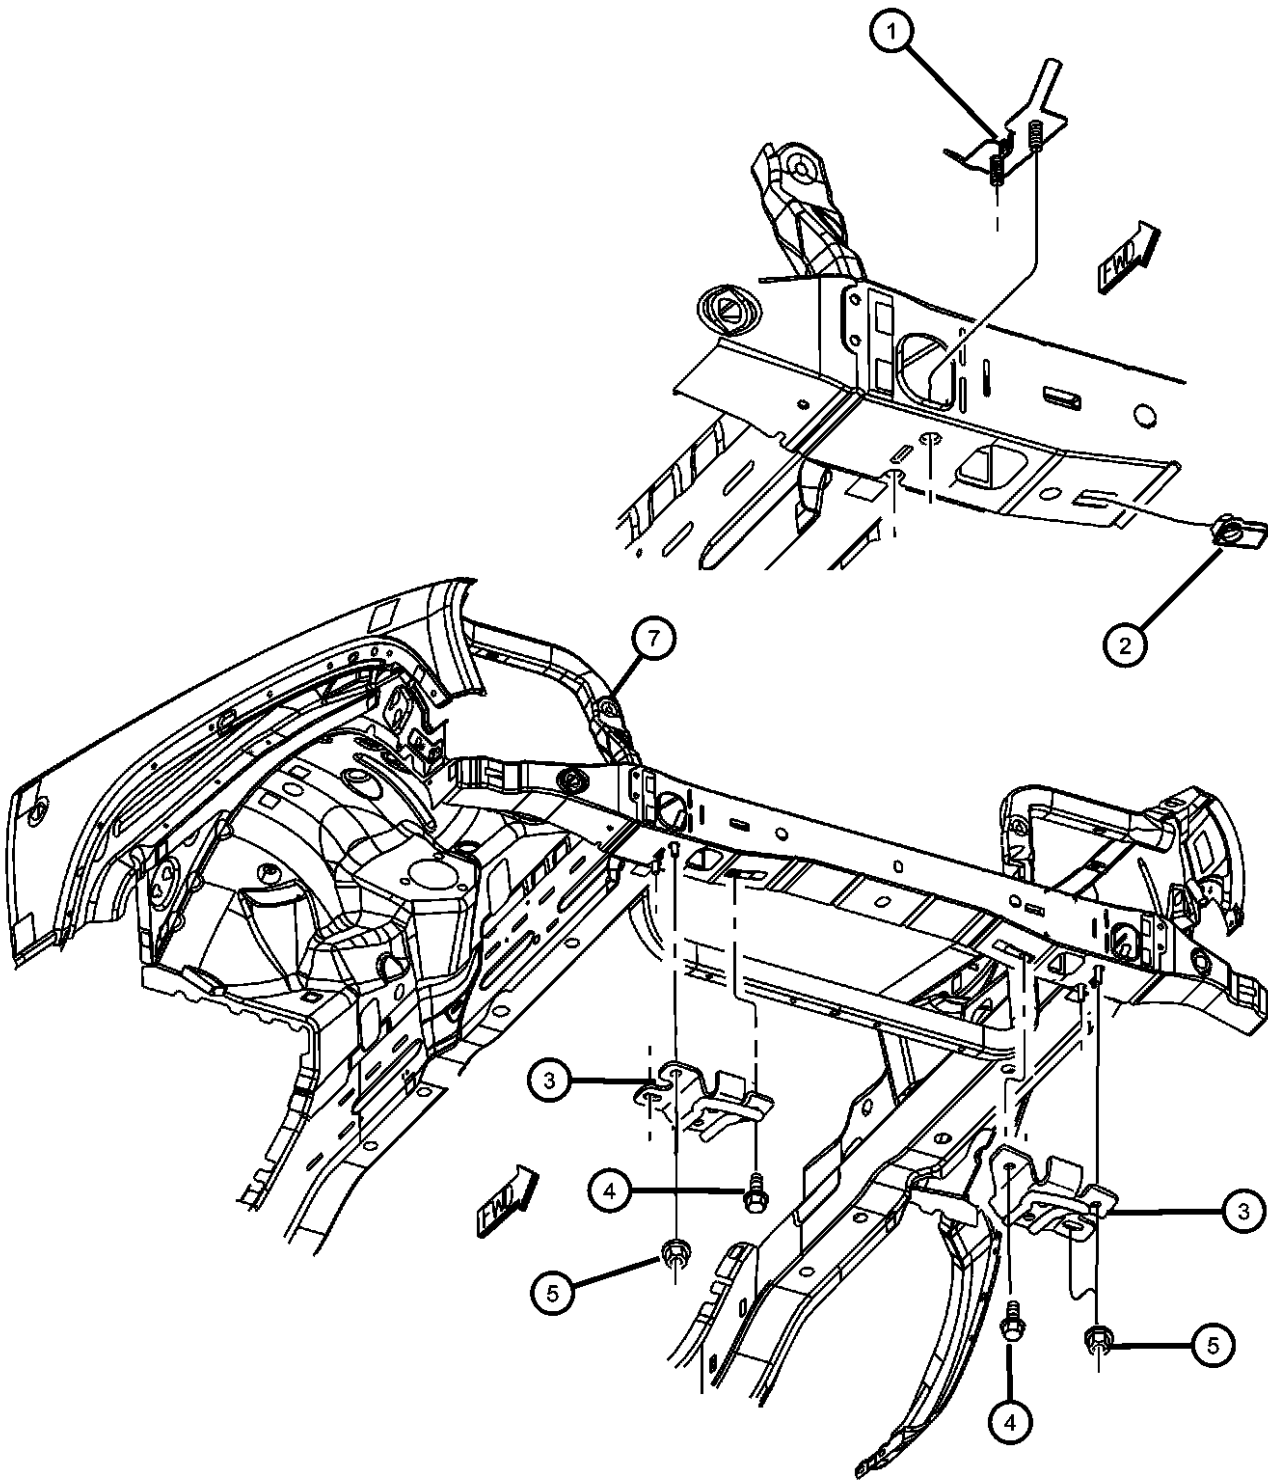


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	52059352AA	1							STUD PLATE
2	06504818AA	1							NUT, M10x1.50
3	52059353AA	1							EYE, Tow
4	06503699	8							SCREW AND WASHER, Hex Head, M10x1.5x28
5	06504818AA	1							NUT, M10x1.50
-6									HOOK, Tow
	52059236AB	1							Right
	52059237AB	1							Left
7	55176756AD	1							SUPPORT, Radiator

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Tow Hooks - Rear  
Figure 13-620

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									HOOK, Tow
	52059233AB	1							Hook
	52059360AA	1							Eye
2	06502557	6							BOLT, Hex Flange Head, M12x1.75x40
3	06504565	1							NUT, U Multi Thread
-4	52059224AC	1							HITCH, Trailer

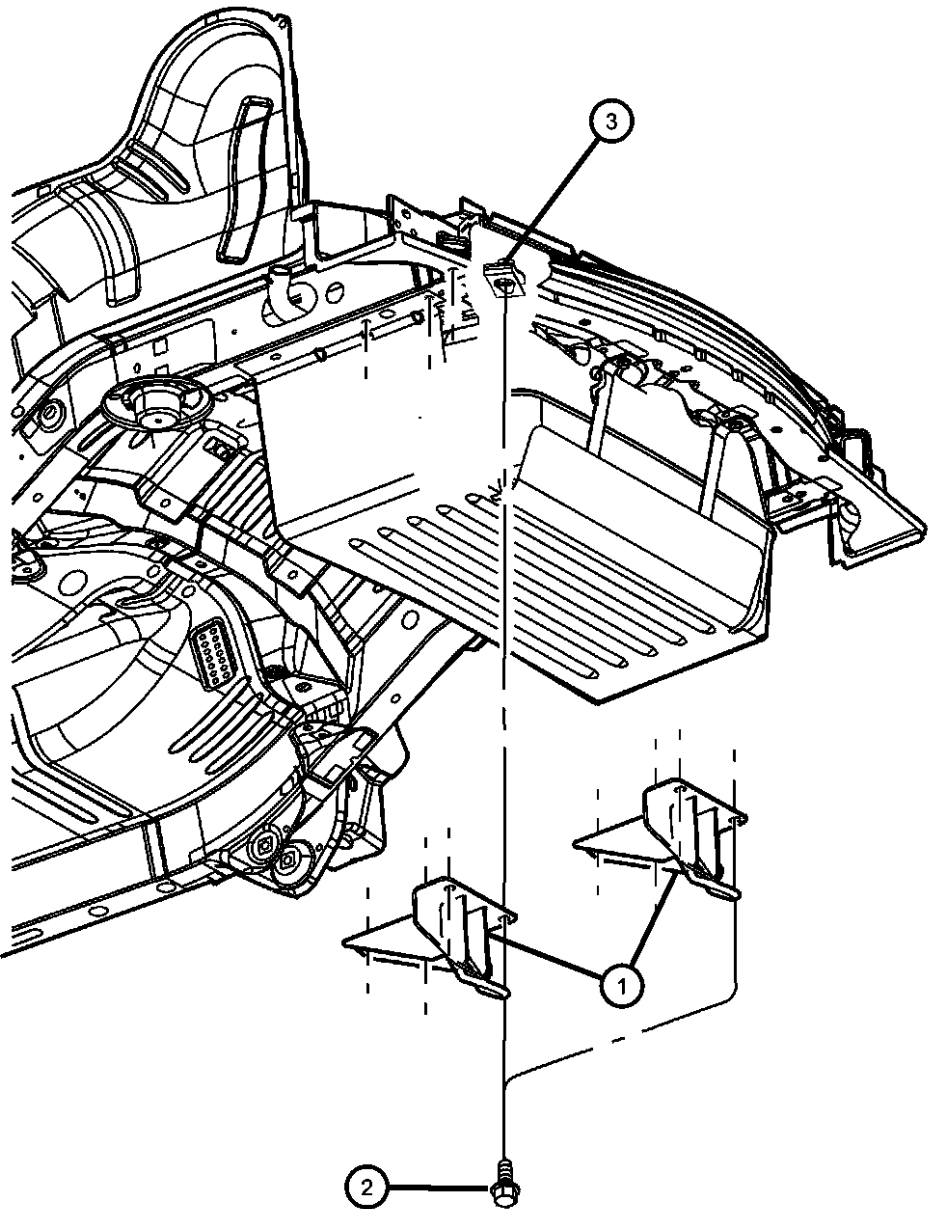


LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions


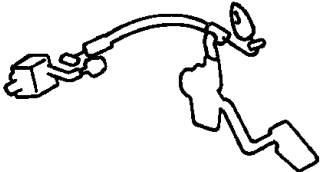
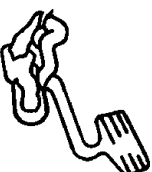
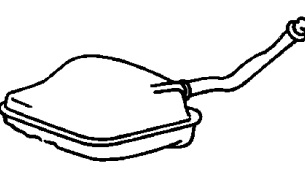
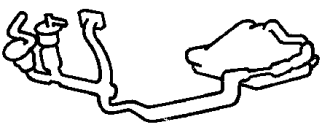
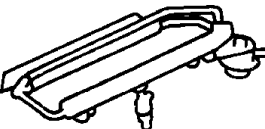


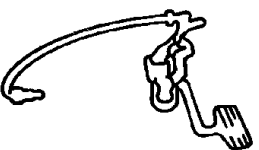
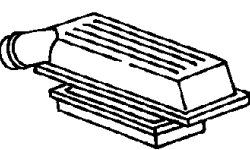
AR = use ase required - = Non illustrated part



# Group - 14

## Fuel

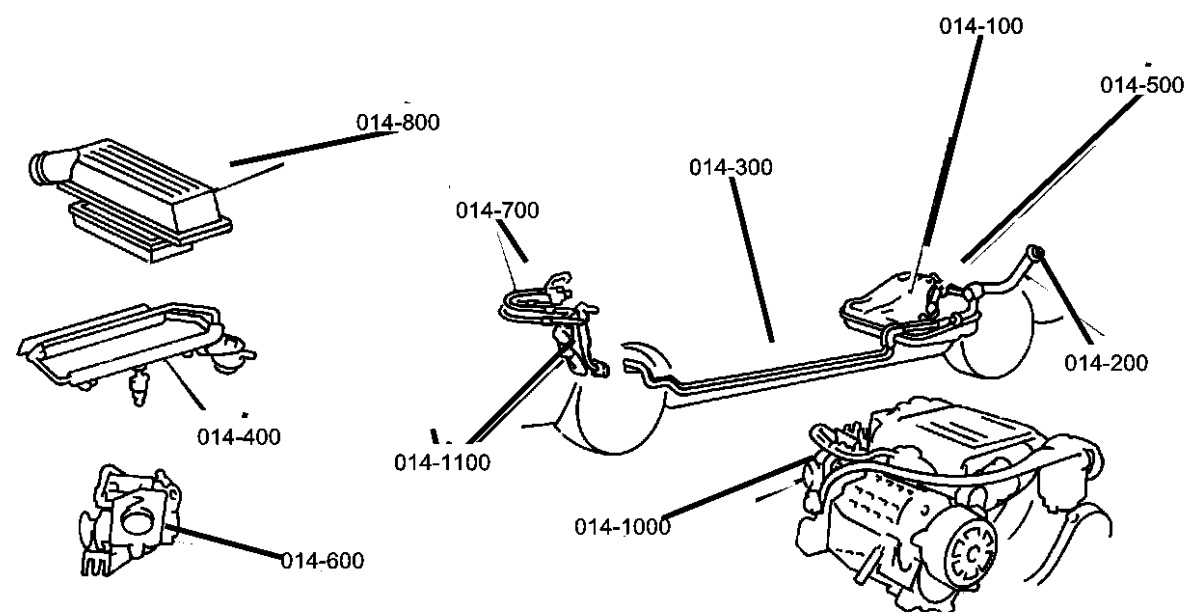

<b>014-100</b> Tank, Fuel	<b>014-1000</b> Speed Control	<b>014-1100</b> Accelerator Pedal	<b>014-200</b> Fuel Tank Filler Tube
			
<b>014-300</b> Fuel Lines	<b>014-400</b> Fuel Rail	<b>014-500</b> Fuel Pump and Sending Unit	<b>014-600</b> Throttle Body
			
<b>014-700</b> Throttle Controls	<b>014-800</b> Air Cleaner		
			

Group - 14 Fuel	
Illustration Title	Group-Fig. No.
<b>Tank, Fuel</b>	
Tank, Fuel, All Engines .....	Fig. 14 - 110
<b>Fuel Tank Filler Tube</b>	
Fuel Tank Filler Tube, All Engines .....	Fig. 14 - 210
<b>Fuel Lines</b>	
Fuel Lines Front, 2.4L [ED1] .....	Fig. 14 - 310
Fuel Lines Rear, 2.4L [ED1] .....	Fig. 14 - 315
Fuel Lines Front, 3.7L [EKG] .....	Fig. 14 - 320
Fuel Lines Rear, 3.7L [EKG] .....	Fig. 14 - 325
Fuel Lines Front 2.8L [EN0] .....	Fig. 14 - 330
Fuel Lines Chassis 2.8L [EN0] .....	Fig. 14 - 335
Fuel Filter And Water Separator, 2.8L [EN0] .....	Fig. 14 - 340
<b>Fuel Rail</b>	
Fuel Rail 2.8L [EN0] .....	Fig. 14 - 405
Fuel Rail, 2.4L [ED0] .....	Fig. 14 - 410
Fuel Rail, 3.7L [EK0] .....	Fig. 14 - 415
Fuel Injection System 2.8L [EN0] .....	Fig. 14 - 420
Fuel Injection Pump 2.8L [EN0] .....	Fig. 14 - 430
Fuel Injection Pump Mounting .....	Fig. 14 - 435
<b>Fuel Pump and Sending Unit</b>	
Fuel Pump and Sending Unit, 2.4L [ED0], 3.7L [EK0], 2.8L [EN0] .....	Fig. 14 - 510
<b>Throttle Body</b>	
Throttle Body, [2.4L ED0, 3.7L EK0] .....	Fig. 14 - 610
Turbocharger 2.8L [EN0] .....	Fig. 14 - 620
<b>Throttle Controls</b>	
Throttle Controls, 2.4L [ED0] .....	Fig. 14 - 710
Throttle Controls, 3.7L [EKG] .....	Fig. 14 - 720
Throttle Controls, 2.8L [EN0] .....	Fig. 14 - 730
<b>Air Cleaner</b>	
Air Cleaner, 2.4L [ED1] .....	Fig. 14 - 810
Air Cleaner, 3.7L [EKG] .....	Fig. 14 - 820
Air Cleaner, 2.8L [EN0] .....	Fig. 14 - 830
<b>Speed Control</b>	
Speed Control .....	Fig. 14 - 1010
<b>Accelerator Pedal</b>	
Accelerator Pedal .....	Fig. 14 - 1110

Tank, Fuel, All Engines  
Figure 14-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note; Sales Codes  
[ED0]= All 2.2L,2.5L,2.4L, 4 Cylinder Gas Engines  
[EK0]= All 3.7L 6 Cylinder Gas Engines  
[EN0]= All 4/5 Cylinder Turbo Diesels  
[XEE]=Skid Plate Shield, Fuel Tank

1									TANK, Fuel
	52128620AD	1				ED0, EK0			
	52128621AB	1				EN0			
2	52100334AE	2							STRAP, Fuel Tank
3	06503183	4							SCREW, Hex Head, M10x1.5x30
-4									SHIELD, Heat
	05072731AA	1				EN0	DG0		
	55360343AA	1				ED0, EK0			
-5	52100525AA	4				ED0, EK0			NUT, Heat Shield Attach
6	52100332AF	1							PLATE, Skid, [XEE]
7	06502557	6							BOLT, Hex Flange Head, M12x1.75x40
-8	52128698AA	1				EN0			FILTER, Fuel
-9	06505775AA	2				EN0			CLAMP, Hose
-10	52100469AD	1				EN0			HOSE, Fuel Vapor

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Fuel Tank Filler Tube, All Engines  
Figure 14-210

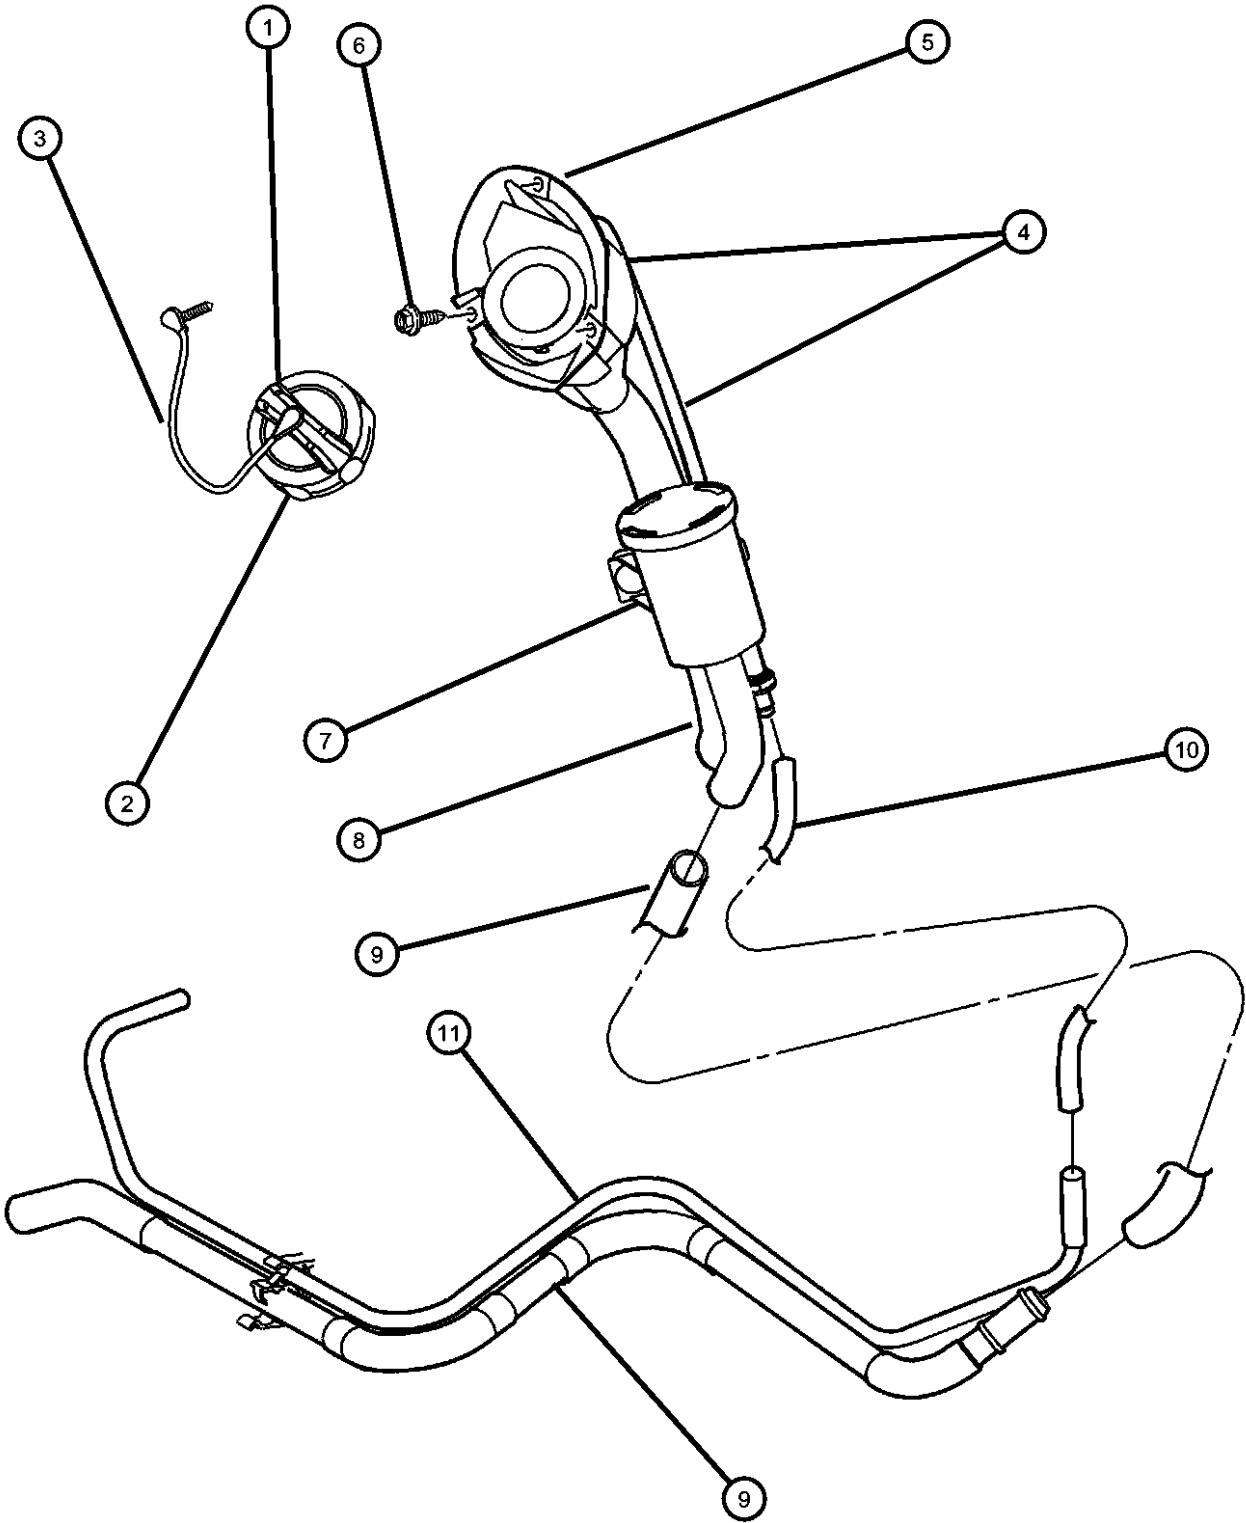

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes									
[ED0]= All 2.4L, 4 Cylinder Gas Engines									
[EK0]= All 3.7L 6 Cylinder Gas Engines									
[EN0]= All 2.5L Turbo Diesels									
1	52102464AB	1							CAP, Fuel Filler
2	05015636AB	1							CAP KIT, Fuel Tank Locking
3	04682676	1							TETHER, Fuel Filler Cap
4									TUBE, Fuel Filler
	52128640AB	1				ED0, EK0			
	52128641AC	1				EN0			
5	55360619AB	1							SLEEVE, Fuel Filler
6	06035204	3							SCREW, Tapping, .19-16x.75
7	04612901	1				ED0, EK0			FILTER, Fuel Vapor Vent
8									HOSE, Fuel Filler
	52128753AA	1				ED0, EK0			
		1				EN0			
9		1							TUBE, Fuel, Serviced With Fuel Flow Valve, (NOT SERVICED)
10	52128631AC	1				ED0, EK0			TUBE, Vapor
11	52128699AC	1				ED0, EK0			TUBE, Fuel Vapor Recirculation
-12	52128645AA	1	J, T, U		74	ED0, EK0			TUBE, Clean Air

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	


AR = use ase required - = Non illustrated part

Fuel Lines Front, 2.4L [ED1]  
Figure 14-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[ED0]= All 2.2L,2.5L,2.4L, 4 Cylinder Gas Engines

1	52100352AB	1				ED0			BUNDLE, Fuel Line
2	52127788	2				ED0			CLIP, Fuel Line
3	52127788	2							TUBE, Fuel, Serviced In Chassis Bundle, (NOT SERVICED)

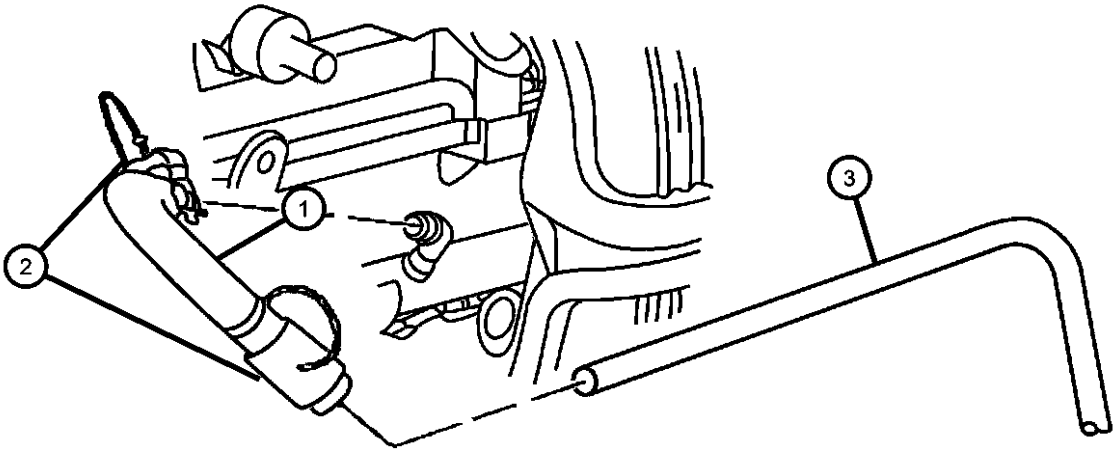


LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Fuel Lines Rear, 2.4L [ED1]  
Figure 14-315

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[ED0]= All 2.2 I,2.5L, 2.4L, 4 Cylinde Gas Engines  
[EK0]= All 3.7L 6 Cylinder Gas Engines

1									TUBE, Fuel Supply
	05103500AA	1				ED0, EK0			
	52128701AC	1				ED0, EK0			For fuel tank
2	52128637AB	1				ED0, EK0			TUBE, Fuel Vapor
3	52128637AB	1							TUBE, Brake, See Brake Group, (NOT SERVICED)
-4									CLIP, 4 Way, Fuel Bundle
	05103501AA	3				ED0, EK0			
	05103502AA	2				ED0, EK0			
	05103503AA	1				ED0, EK0			
-5	05103504AA	1				ED0, EK0			CLIP, 2 Way, Fuel Bundle

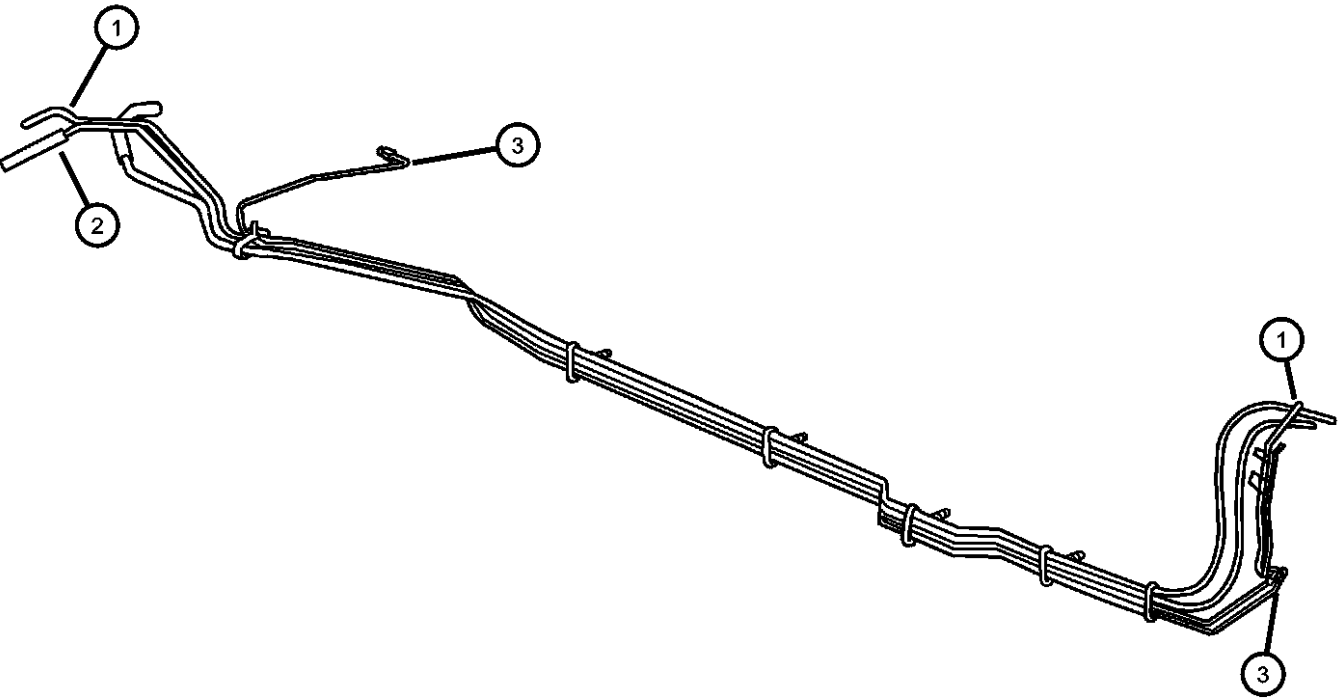


LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


Fuel Lines Front, 3.7L [EKG]  
Figure 14-320

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [EK0]= All 3.7L 6 Cylinder Gas Engines									
1	52100320AB	1				EK0			BUNDLE, Fuel Line
2	52127788	2				EK0			CLIP, Fuel Line
3	52127788	2							BUNDLE, Fuel Line, Reference, See Rear Fuel Lines, (NOT SERVICED)
-4	52128701AB	1				ED0, EK0			TUBE, Fuel Supply

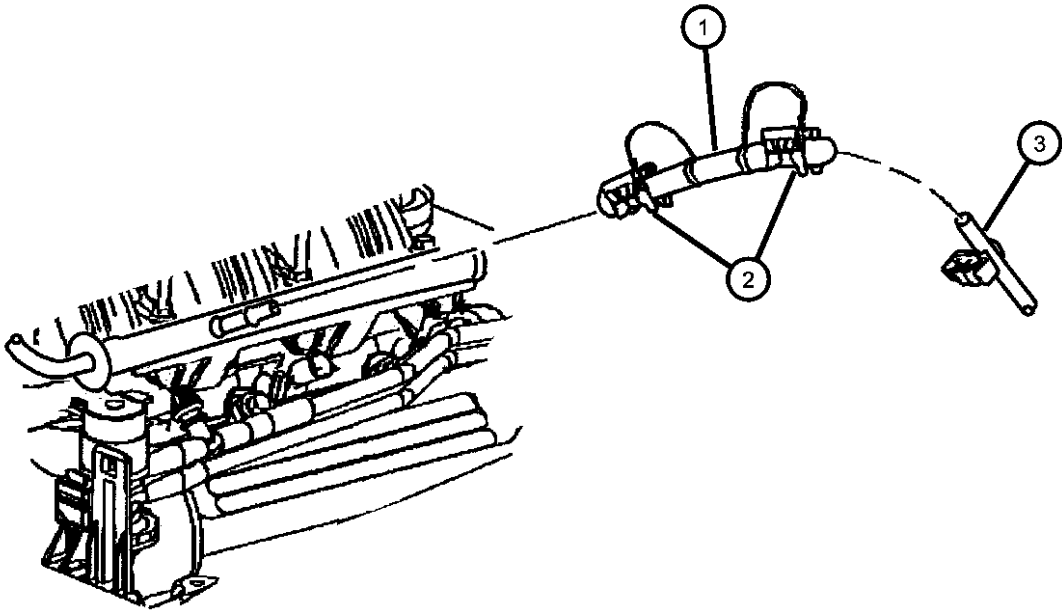

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Fuel Lines Rear, 3.7L [EKG]  
Figure 14-325

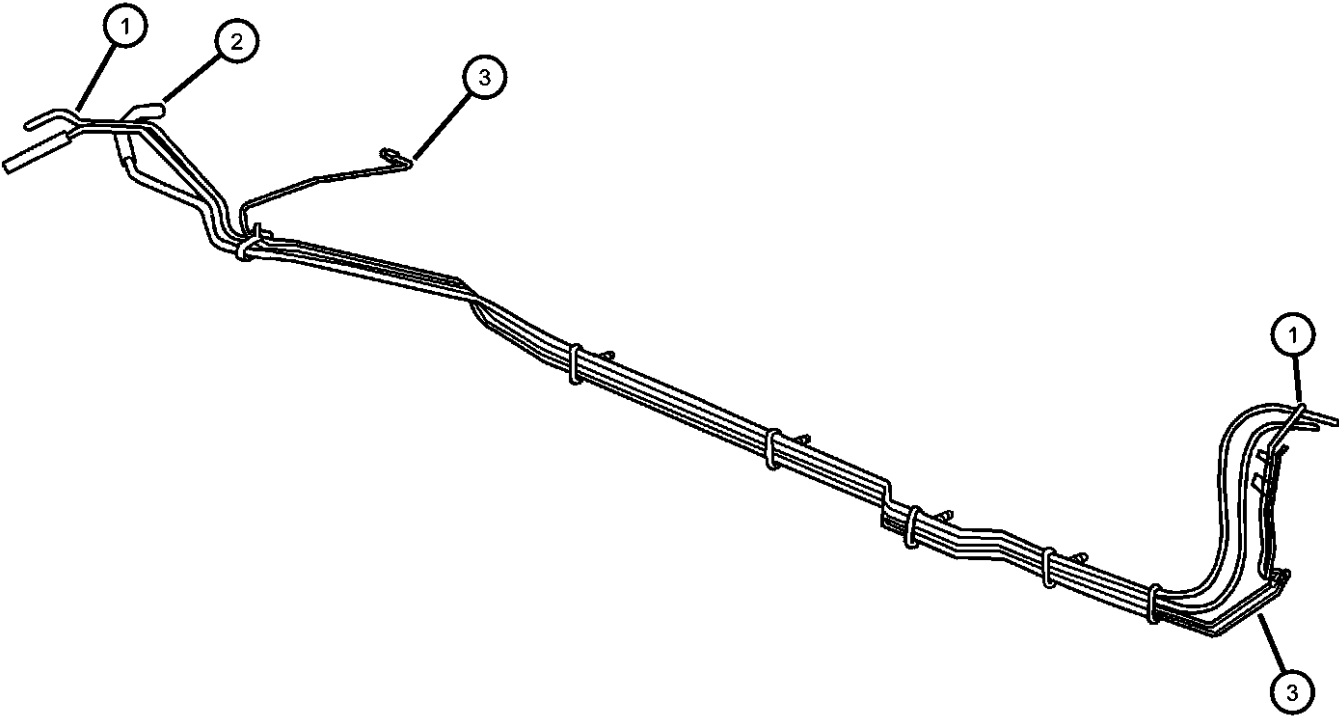

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note; Sales Codes  
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines  
[EK0]= All 3.7L 6 Cylinder Gas Engines

1									TUBE, Fuel Supply
	05103500AA	1				ED0, EK0			Chassis Gas
	52128701AC	1				ED0, EK0			For Fuel Tank
2									TUBE, Fuel Vapor
	52128637AB	1				ED0, EK0			Chassis Gas
	52128700AB	1				ED0, EK0			Fuel Tank
3	52128700AB	1							TUBE, Brake, See Brake Group, (NOT SERVICED), CLIP, 4 Way, Fuel Bundle
-4									
	05103501AA	3				ED0, EK0			
	05103502AA	2				ED0, EK0			
	05103503AA	1				ED0, EK0			
-5	05103504AA	1				ED0, EK0			CLIP, 2 Way, Fuel Bundle
-6	52128699AC	1				ED0, EK0			TUBE, Fuel Vapor Recirculation

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions



Fuel Lines Front 2.8L [EN0]  
Figure 14-330

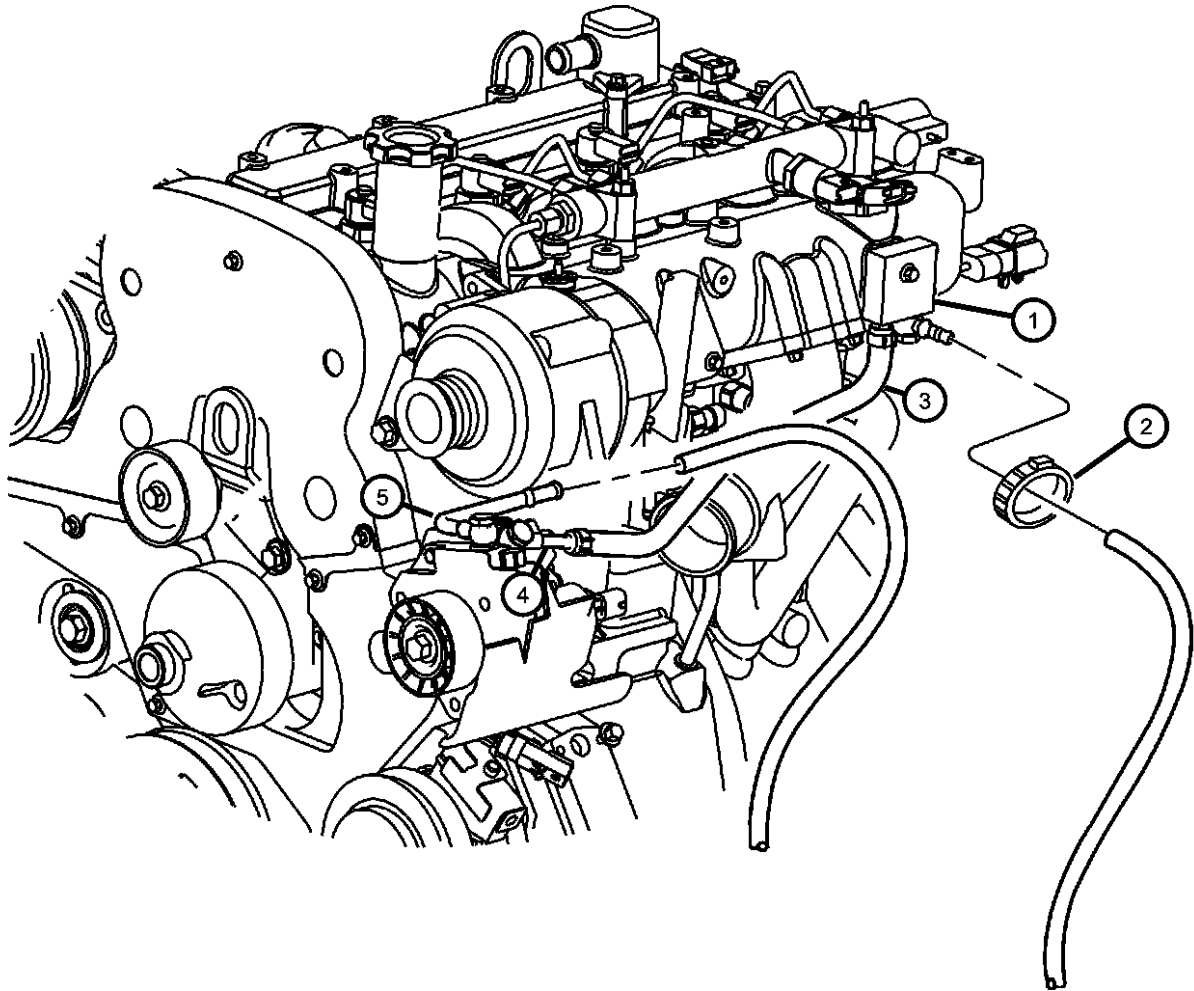

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [DBB]= All Manual Transmissions [EN0]= All 2.8L 4 Cylinder Turbo Diesels									
1	05072743AA	1				EN0	DG0		BLOCK, Fuel Return
		1				EN0	DBB		
2	06505775AA	1				EN0			CLAMP, Hose
3	05072725AB	1				EN0	DG0		HOSE, Fuel
		1				EN0	DBB		
4	05072723AB	1				EN0	DG0		BANJO, Fuel
		1				EN0	DBB		
5	05072721AA	1				EN0	DG0		BANJO, Fuel
		1				EN0	DBB		
-6	05103506AB	1				EN0			TUBE, Fuel Return
-7	05103505AA	1				EN0			TUBE, Fuel Supply

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	


AR = use ase required - = Non illustrated part

Fuel Lines Chassis 2.8L [EN0]  
Figure 14-335

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[EN0]= All 2.8L 4 Cylinder Turbo Diesels


1	52128636AC	1				EN0			TUBE, Brake
2	52100323AC	1				EN0			TUBE, Fuel Supply, Tank
3	52100324AC	1				EN0			TUBE, Fuel Supply
4	52100469AD	1				EN0			HOSE, Fuel Vapor
5	52100469AD	1							TUBE, Brake, Serviced In Item 1, (NOT SERVICED)
6	52100469AD	1							HOSE, Brake, See Catalog Group 5, (NOT SERVICED)

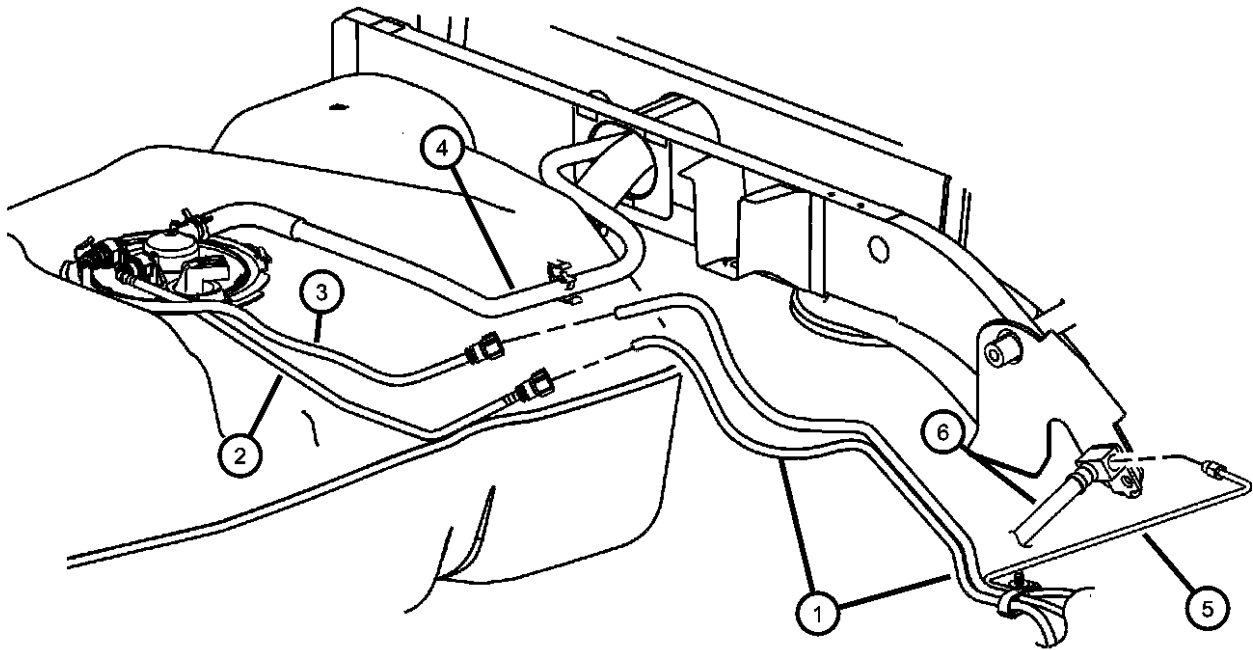

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Fuel Filter And Water Separator, 2.8L [EN0]  
Figure 14-340

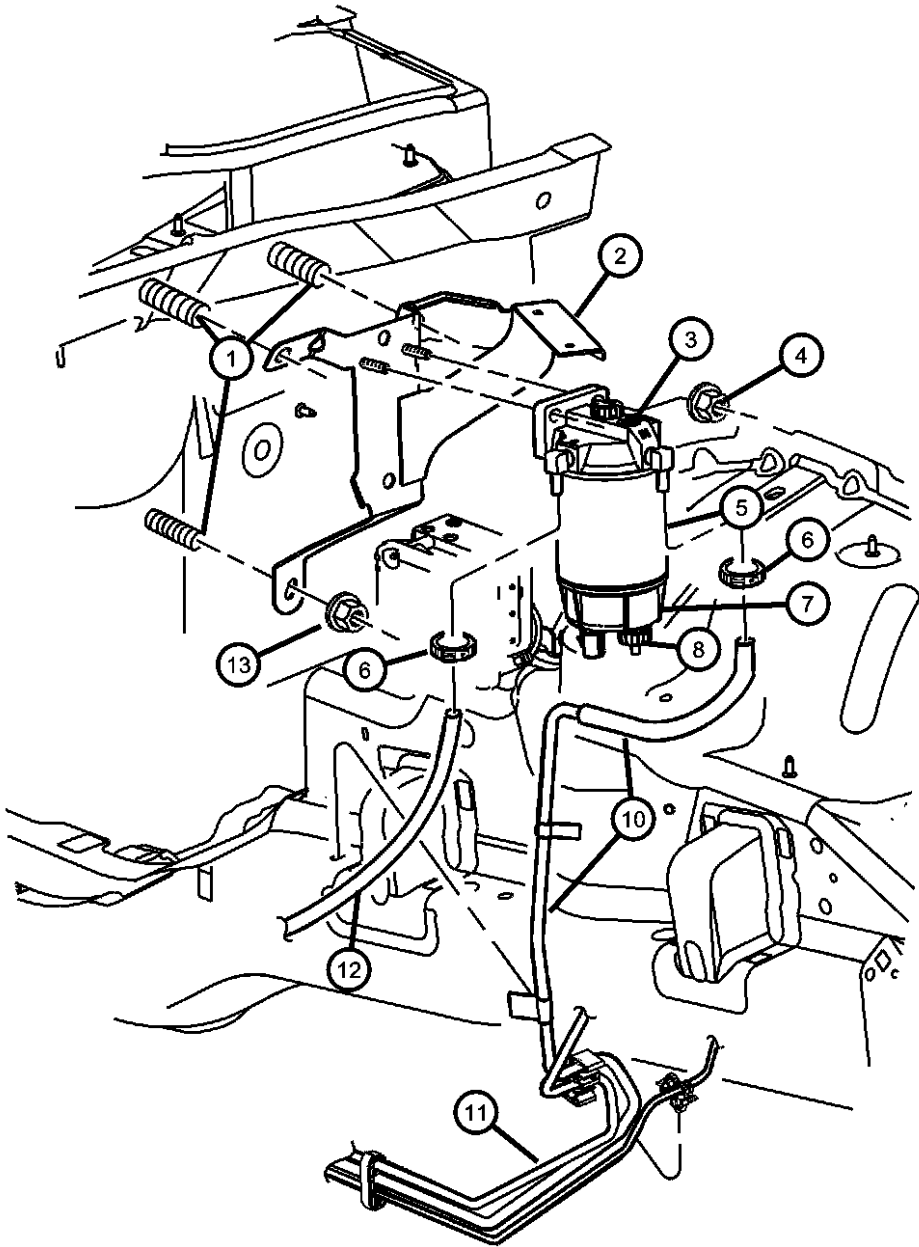

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note; Sales Codes  
[EN0]= All 2.8L 4 Cylinder Turbo Diesels

1	52100469AD	1							STUD, (NOT SERVICED)
2	53013304AC	1				EN0			BRACKET, Fuel Filter
3	05069072AA	1				EN0			HEAD, Fuel Filter
4	06502756	2				EN0			NUT, Hex Lock, M8x1.25
5	52128698AA	1				EN0			FILTER, Fuel
6	06505775AA	2				EN0			CLAMP, Hose
7	05014018AA	1				EN0			BOWL, Fuel Filter
8	04723907	1				EN0			DRAIN, Fuel Filter Bowl
-9	04723901	1				EN0			VALVE KIT, Fuel Filter Check
10	05103505AB	1				EN0			TUBE, Fuel Supply
11	05103506AB	1				EN0			TUBE, Fuel Return
12	52100325AC	1				EN0			HOSE, Fuel
13	52100325AC	1							NUT, (NOT SERVICED)
-14									HEATER
	05066555AA	1	U						
		1	J, T						

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Fuel Rail 2.8L [EN0]  
Figure 14-405

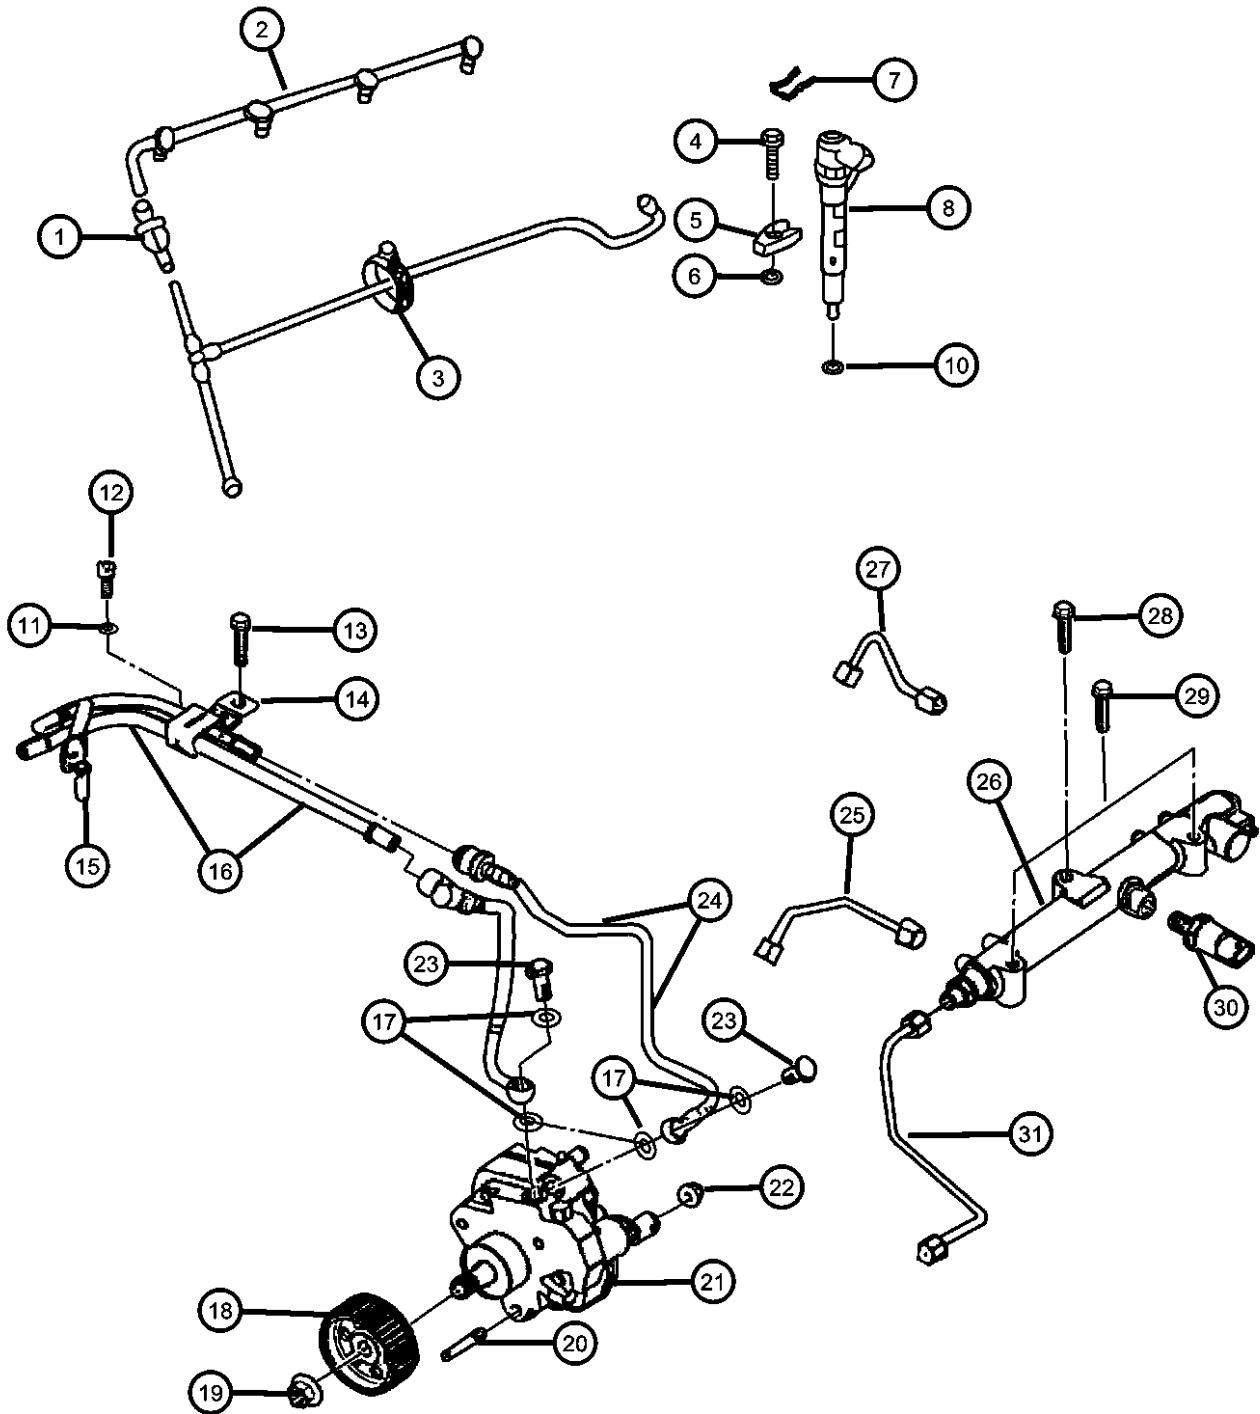


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Code [EN0] = All Turbo Diesel Engines									
1	05083711AA	1				EN0	DBB		VALVE
		1				EN0	DG0		
2	05083707AB	1	J, T, U		74	EN0	DBB		PIPE
3	04728184	1				EN0	DBB		CLIP, Spill Return Pipe
		1				EN0	DG0		
4	05066962AA	1				EN0	DBB		SCREW
		1				EN0	DG0		
5	05066904AA	1				EN0	DG0		CONNECTOR, Injector
		4				EN0	DBB		
6	05093922AA	1				EN0	DBB		PLATE
		1				EN0	DG0		
7	05083712AA	4				EN0	DBB		CLIP, Fuel Injector
		4				EN0	DG0		
8	05066820AA	1				EN0	DG0		INJECTOR, Fuel
		1				EN0	DBB		
-9	05072722AA	1				EN0	DBB		O RING, Fuel Injector
		1				EN0	DG0		
10	05066946AA	1				EN0	DBB		GASKET
		1				EN0	DG0		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Fuel Rail 2.8L [EN0]  
Figure 14-405

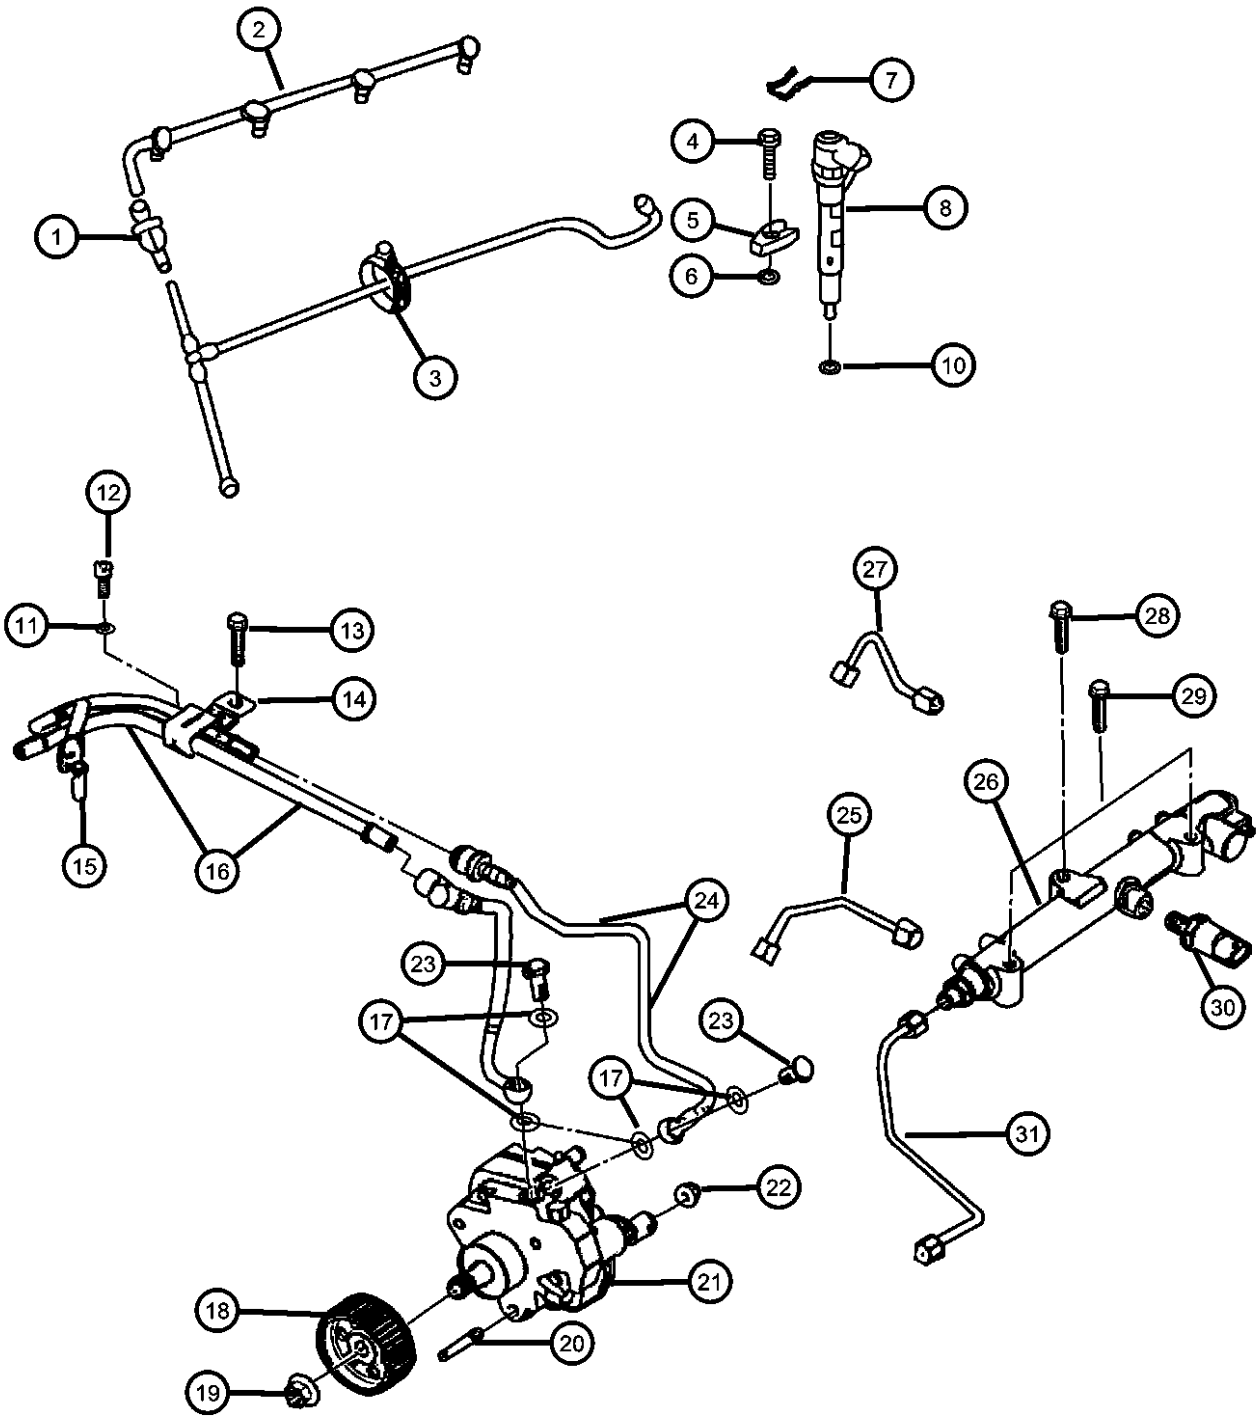


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
11									WASHER, Implement Attaching
	04723204	1				EN0	DBB		
		1				EN0	DG0		
12									BOLT, M6x10
	05003551AA	8				EN0	DBB		
		2				EN0	DG0		
13									BOLT, 8Mx20
	04864537	1				EN0	DBB		
		1				EN0	DG0		
14	05069102AB	1	J, T, U		74	EN0	DG0		BRACKET, Damper
15	05083704AA	1	J, T, U		74	EN0	DBB		BRACKET
16	05072255AB	1	J, T, U		74	EN0	DG0		TUBE, Fuel Delivery
17									WASHER, Plain
	04720703	6				EN0	DBB		
		6				EN0	DG0		
18									GEAR, Injection Pump
	05066903AA	1				EN0	DBB		
		1				EN0	DG0		
19									NUT
	05066817AA	1				EN0	DBB		
		1				EN0	DG0		
20									STUD, Injection Pump
	05066908AA	3				EN0	DBB		
		3				EN0	DG0		
21									PUMP, Fuel Injection
	05066819AB	1				EN0	DBB		
		1				EN0	DG0		
22									NUT
	04778961	4				EN0	DG0		
		4				EN0	DBB		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Fuel Rail 2.8L [EN0]  
Figure 14-405

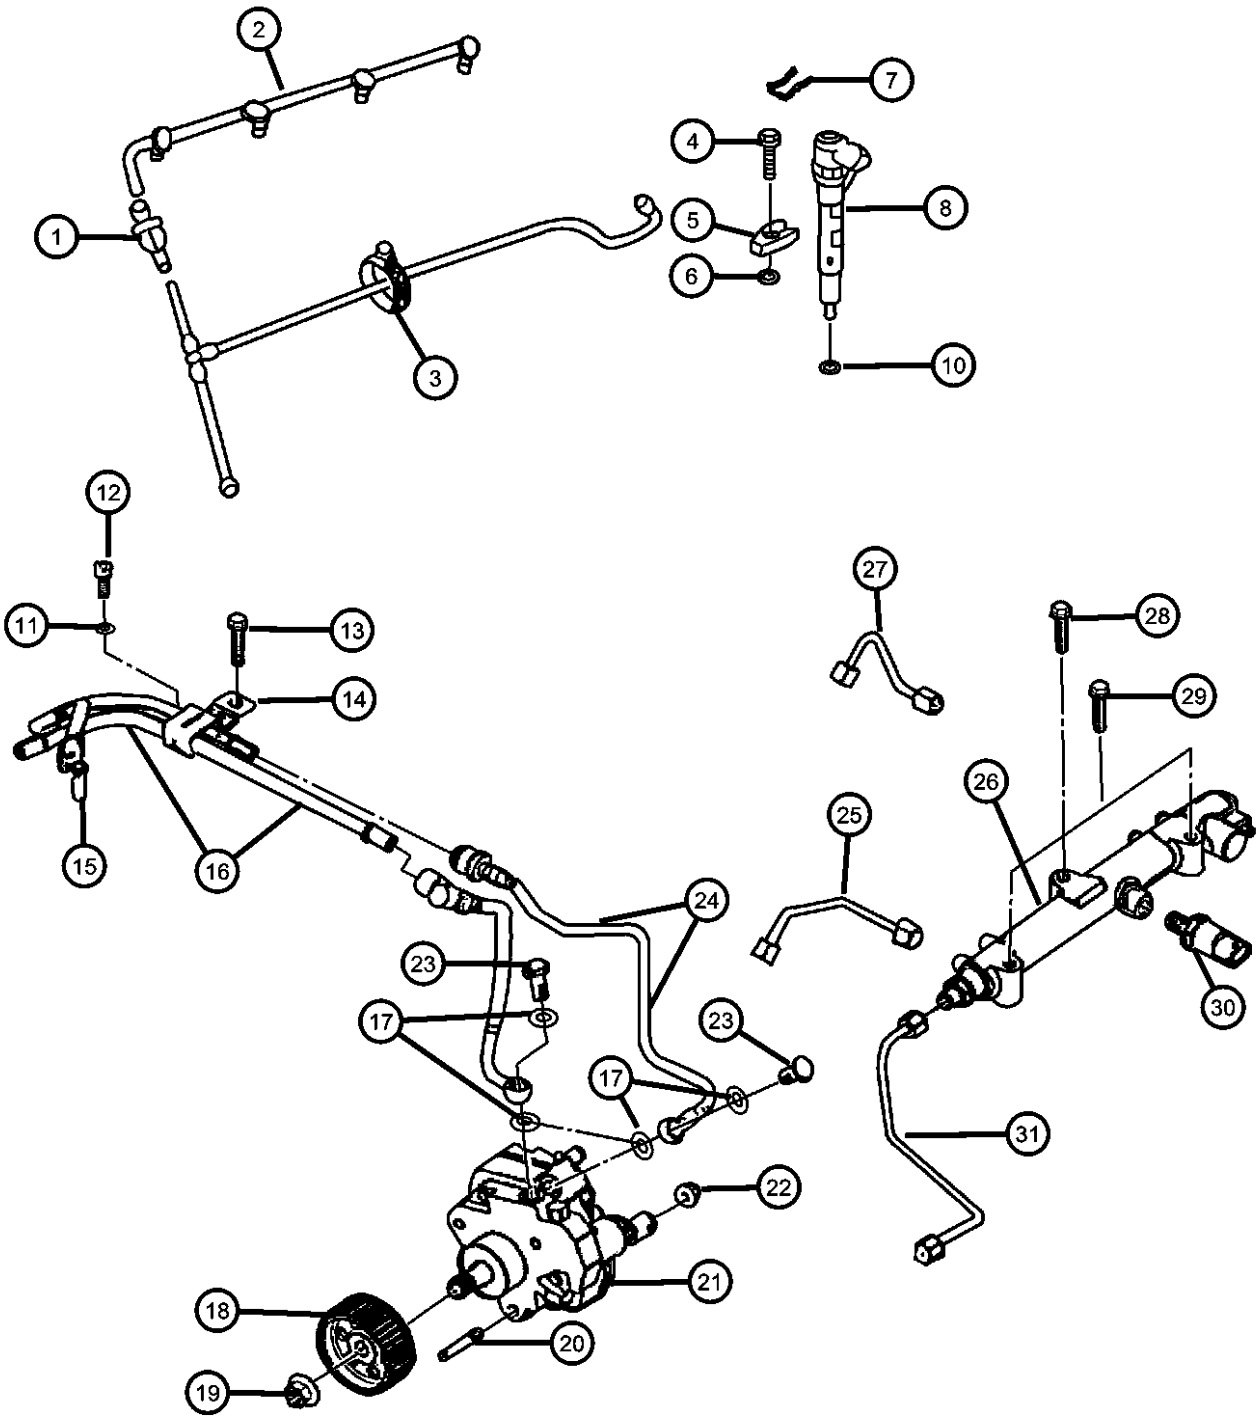


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
23	04720367	3				EN0	DBB		BOLT, Banjo
		3				EN0	DG0		
24	05072257AB	1	J, T, U		74	EN0	DG0		TUBE, Fuel Return
25	05066910AB	1				EN0	DBB		TUBE, Fuel Injector Supply
		1				EN0	DG0		
26	05093924AA	1				EN0	DBB		RAIL, Fuel
		1				EN0	DG0		
27	05066909AB	1				EN0	DBB		TUBE, Fuel Injector Supply
		1				EN0	DG0		
28	05015113AA	1				EN0	DG0		BOLT
		1				EN0	DBB		
29	05066913AA	1				EN0	DBB		STUD
		1				EN0	DG0		
30	05072726AA	1				EN0	DBB		SENSOR, Fuel Pressure
		1				EN0	DG0		
31	05066911AA	1				EN0	DBB		TUBE, Fuel Supply from Pump
		1				EN0	DG0		
-32	05083671AA	1				EN0	DBB		VALVE, Flow Control
		1				EN0	DG0		
-33	05086653AA	1	J, T, U		74	EN0	DBB		VALVE, Pressure Regulator

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Fuel Rail, 2.4L [ED0]  
Figure 14-410

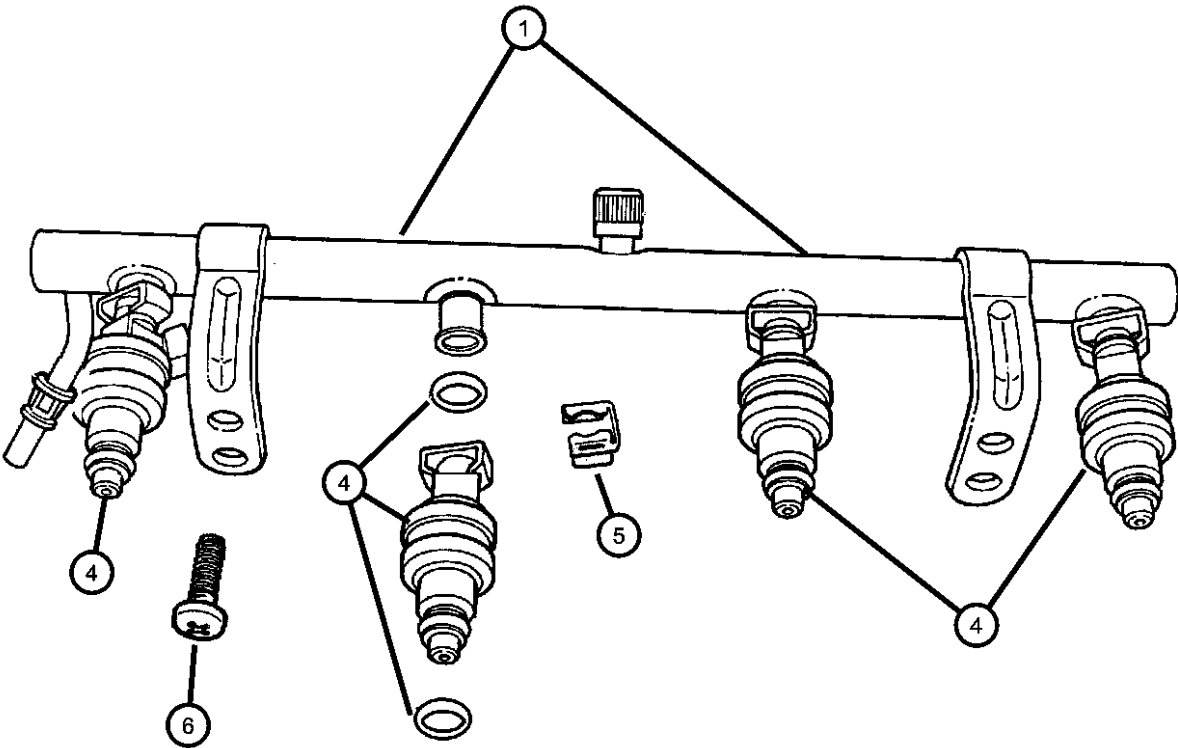

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note; Sales Codes  
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines

1	05135582AA	1				ED0			RAIL, Fuel
-2	05135582AA	1							REGULATOR, Fuel Pressure, Serviced With Fuel Rail, (NOT SERVICED)
-3	05135582AA	1							FASTENER, Serviced With Fuel Rail, (NOT SERVICED)
4	53013656AA	4				ED0			INJECTOR, Fuel
5	53013504AB	4				ED0			CLIP, Fuel Injector
6	06101506	2				ED0			BOLT AND CONED WASHER, M8x1.25x18

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

Fuel Rail, 3.7L [EK0]  
Figure 14-415


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [EK0]= All 3.7L 6 Cylinder Gas Engines									
1	53031102	1				EK0			RAIL, Fuel
2	53032701AA 68000881AA	6				EK0			INJECTOR, Fuel Wholesale Bulk Injector Package - 70 pieces of 53032701AA
3	04418257AB	6				EK0			CLIP, Fuel Injector
4	06505504AA	4				EK0			SCREW
-5	05083745AA	6				EK0			O RING KIT, Fuel Injector

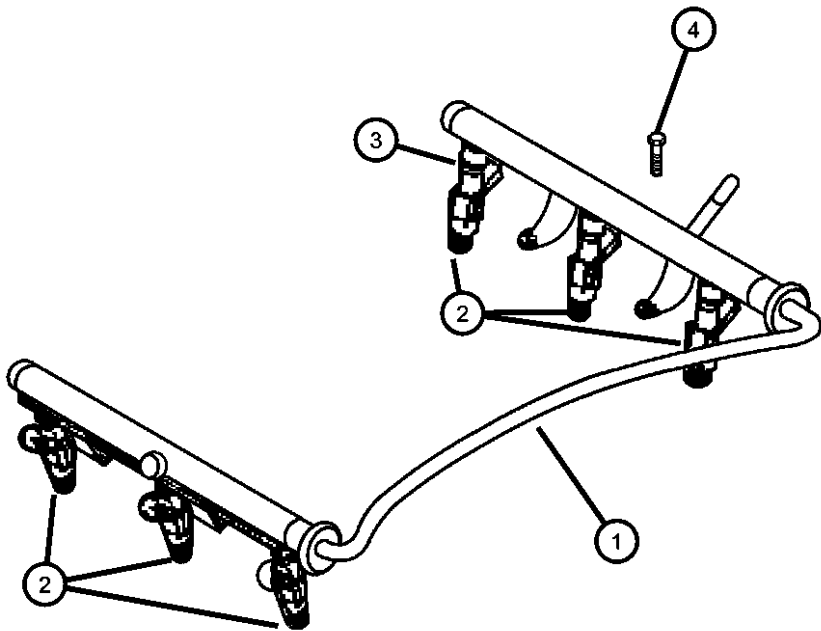

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions



Fuel Injection System 2.8L [EN0]  
Figure 14-420

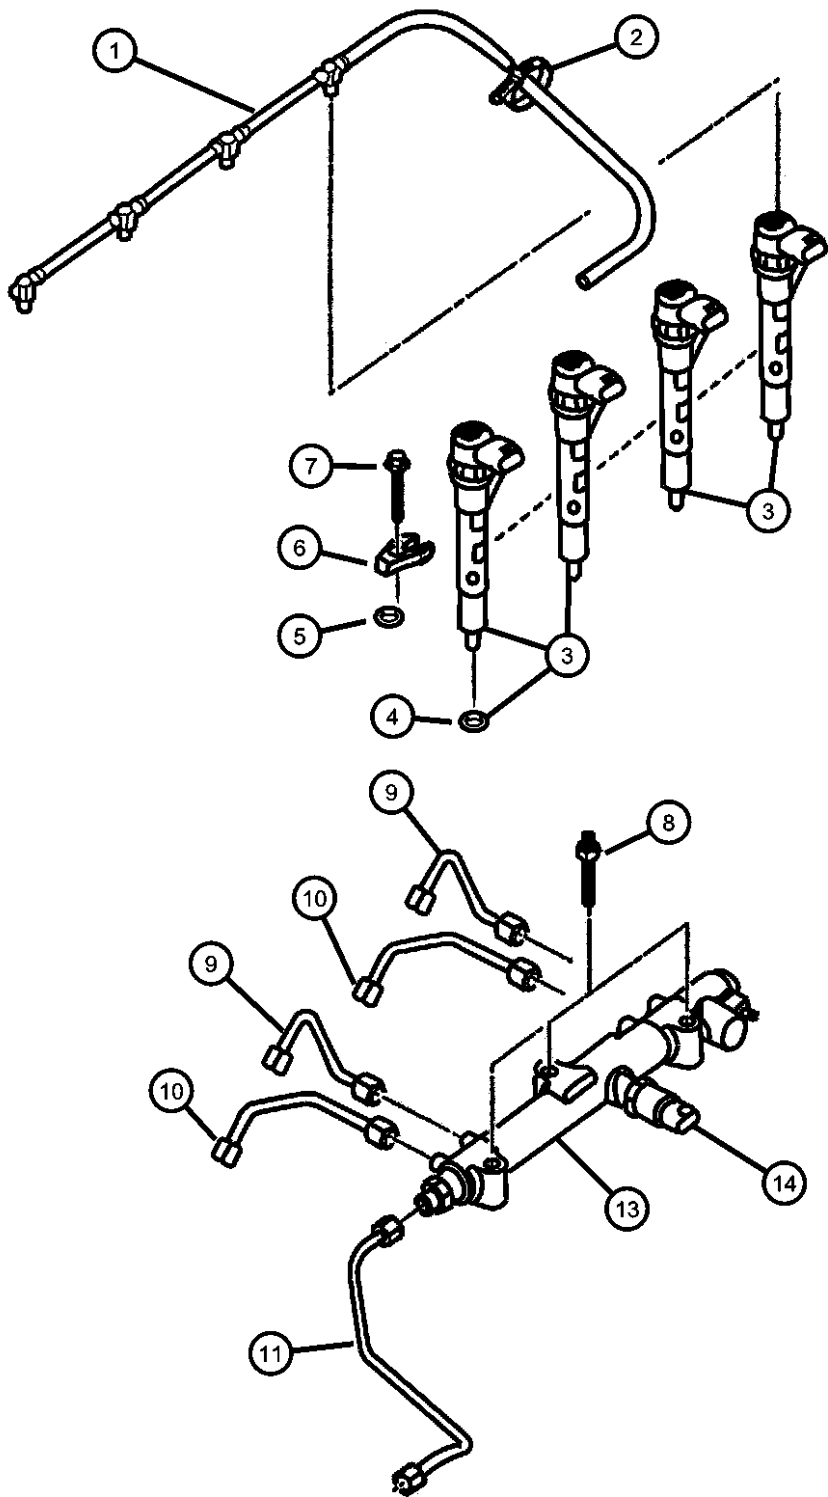


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [DBB]= All Manual Transmissions [EN0]= All 2.8L 4 Cylinder Turbo Diesels									
1	05093923AA	1				EN0	DBB		PIPE, Fuel Spill Return
		1				EN0	DG0		
2	04728184	1				EN0	DBB		CLIP, Spill Return Pipe
		1				EN0	DG0		
3	05066820AA	4				EN0	DBB		INJECTOR, Fuel
		4				EN0	DG0		
4	05072722AA	1				EN0	DBB		O RING, Fuel Injector
		1				EN0	DG0		
5	05093922AA	1				EN0	DBB		PLATE
		1				EN0	DG0		
6	05066904AA	1				EN0	DG0		CONNECTOR, Injector
		1				EN0	DBB		
7	05066962AA	4				EN0	DG0		SCREW STUD
8	05066913AA	1				EN0	DG0		
		1				EN0	DBB		
9	05066909AB	1				EN0	DBB		TUBE, Fuel Injector Supply
		1				EN0	DG0		
10	05066910AB	1				EN0	DBB		TUBE, Fuel Injector Supply
		1				EN0	DG0		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Fuel Injection System 2.8L [EN0]  
Figure 14-420

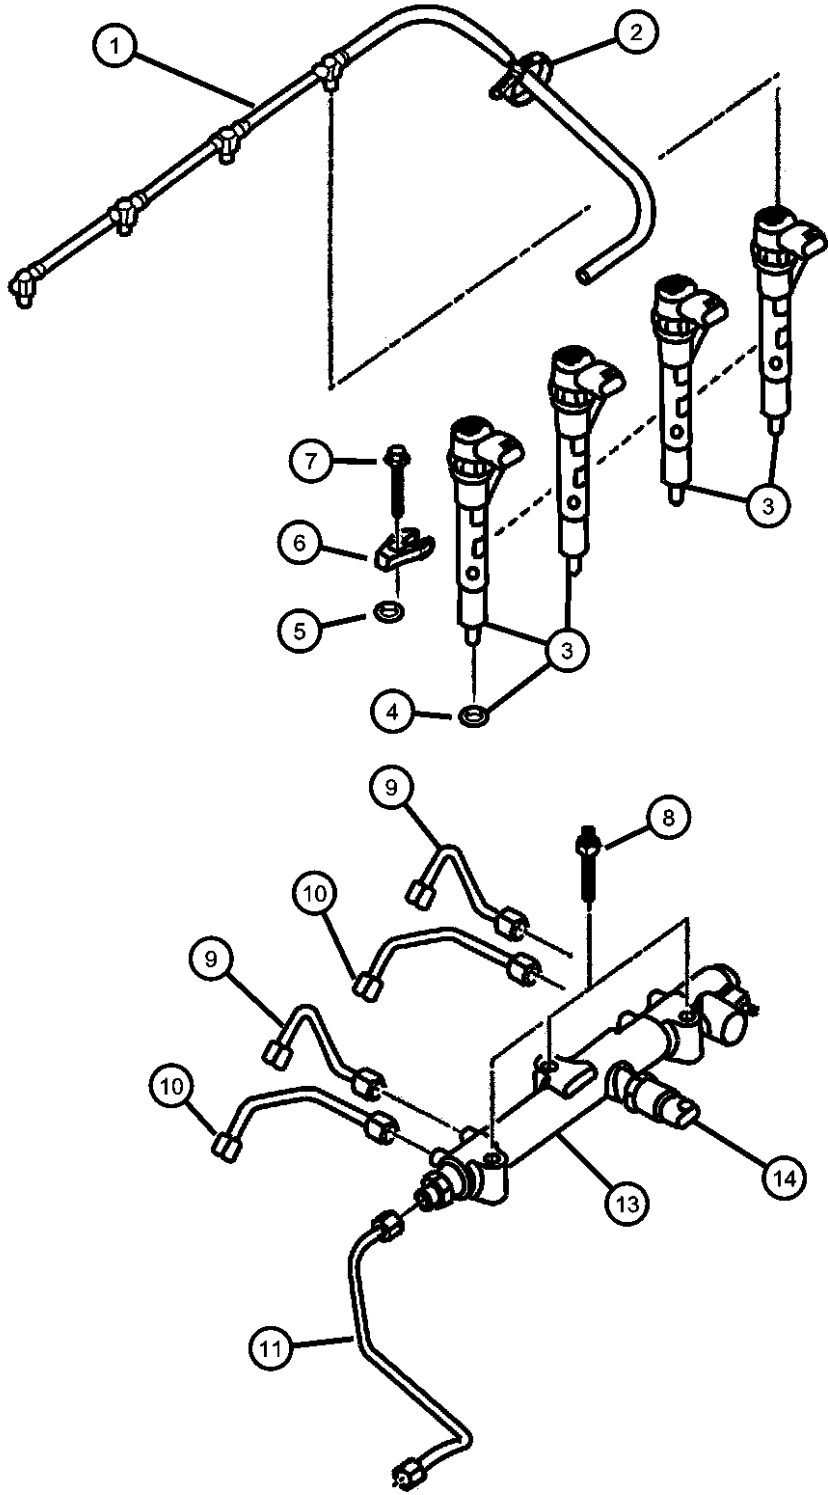


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
11	05066911AA	1				EN0	DG0		TUBE, Fuel Supply from Pump
		1				EN0	DBB		
-12	05093925AA	1				EN0	DBB		CLAMP, Item 11 Attach
		1				EN0	DG0		
13	05093924AA	1				EN0	DG0		RAIL, Fuel
		1				EN0	DBB		
14	05072726AA	1				EN0	DG0		SENSOR, Fuel Pressure
		1				EN0	DBB		

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Fuel Injection Pump 2.8L [EN0]  
Figure 14-430

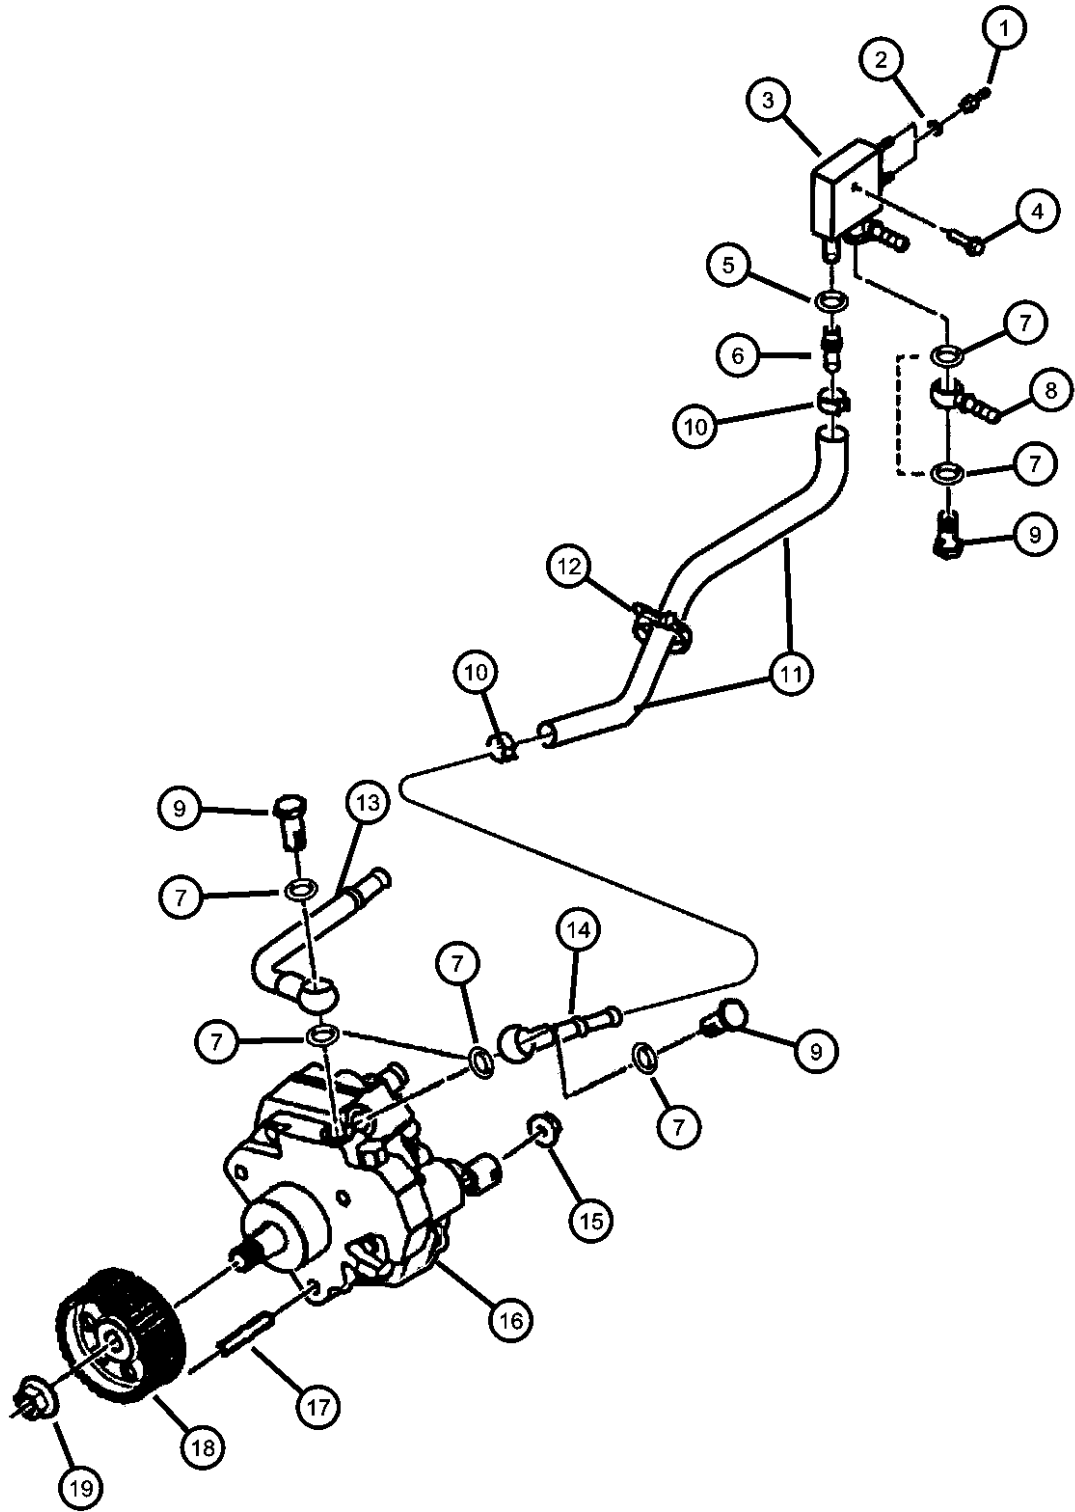


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [DBB] = All Manual Transmissions [EN0]= All 2.8L 4 Cylinder Turbo Diesels									
1									UNION
	05072727AA	1				EN0	DG0		
		2				EN0	DBB		
2									O RING
	05072728AA	2				EN0	DG0		
		2				EN0	DBB		
3	05072743AA	1				EN0	DG0		BLOCK, Fuel Return
4	05072729AA	1				EN0	DG0		SCREW
5	04720713	1				EN0	DG0		WASHER, Implement Attaching
6	05072724AA	1				EN0	DG0		UNION
7									WASHER, Plain
	04720703	6				EN0	DBB		
		6				EN0	DG0		
8	04728185	1				EN0	DG0		CONNECTOR
9	04720367	1				EN0	DG0		BOLT, Banjo
10									CLAMP, Heater Hose
	04886051AA	2				EN0	DBB		
		2				EN0	DG0		
11	05072725AB	1				EN0	DG0		HOSE, Fuel
12	04728184	1				EN0	DG0		CLIP, Spill Return Pipe
13	05072721AA	1				EN0	DG0		BANJO, Fuel
14	05072723AB	1				EN0	DG0		BANJO, Fuel
15	04778961	3				EN0	DG0		NUT
16									PUMP, Fuel Injection
	05066819AB	1				EN0	DG0		
		1				EN0	DBB		
17	05066908AA	1				EN0	DG0		STUD, Injection Pump
18	05066903AA	1				EN0	DG0		GEAR, Injection Pump

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Fuel Injection Pump 2.8L [EN0]  
Figure 14-430

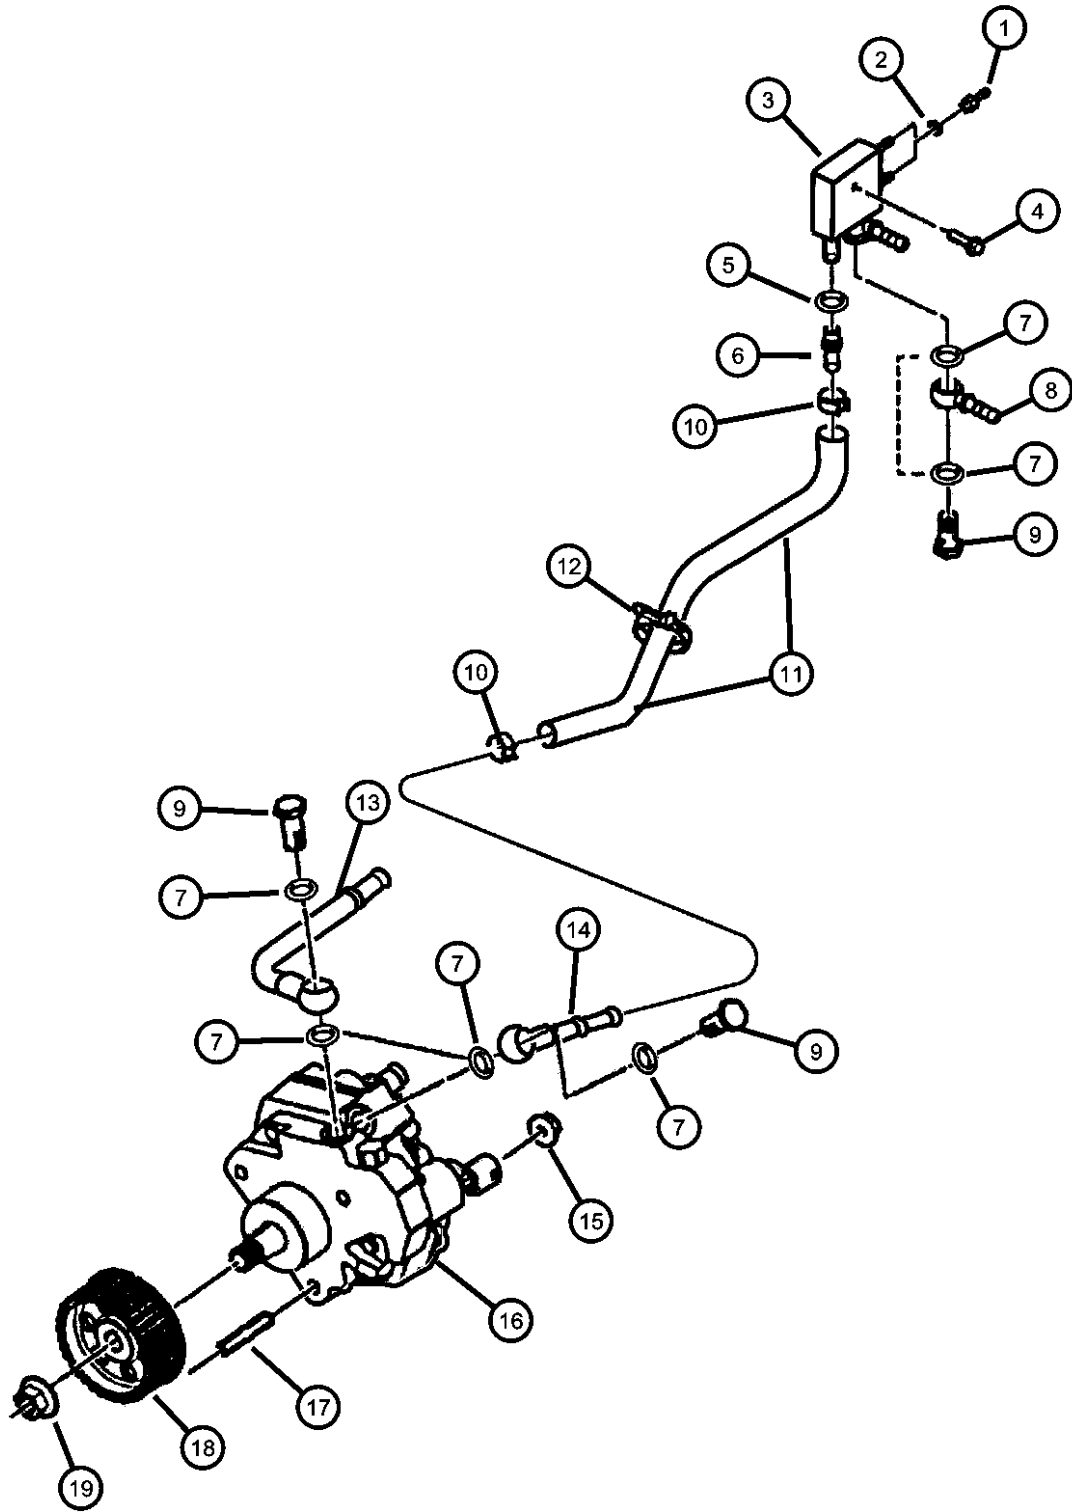


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
19	05066817AA	1				EN0	DG0		NUT
-20	05015037AA	1				EN0	DG0		VALVE, Vacuum Pump
-21	05083712AA	1				EN0	DG0		CLIP, Fuel Injector
		4				EN0	DBB		
-22	05015037AA	1				EN0	DBB		VALVE, Vacuum Pump
		1				EN0	DG0		Regulate The Flow of Fuel Into The High Pressure Pump
									Regulate The Flow of Fuel Into The High Pressure Pump

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Fuel Injection Pump Mounting  
Figure 14-435

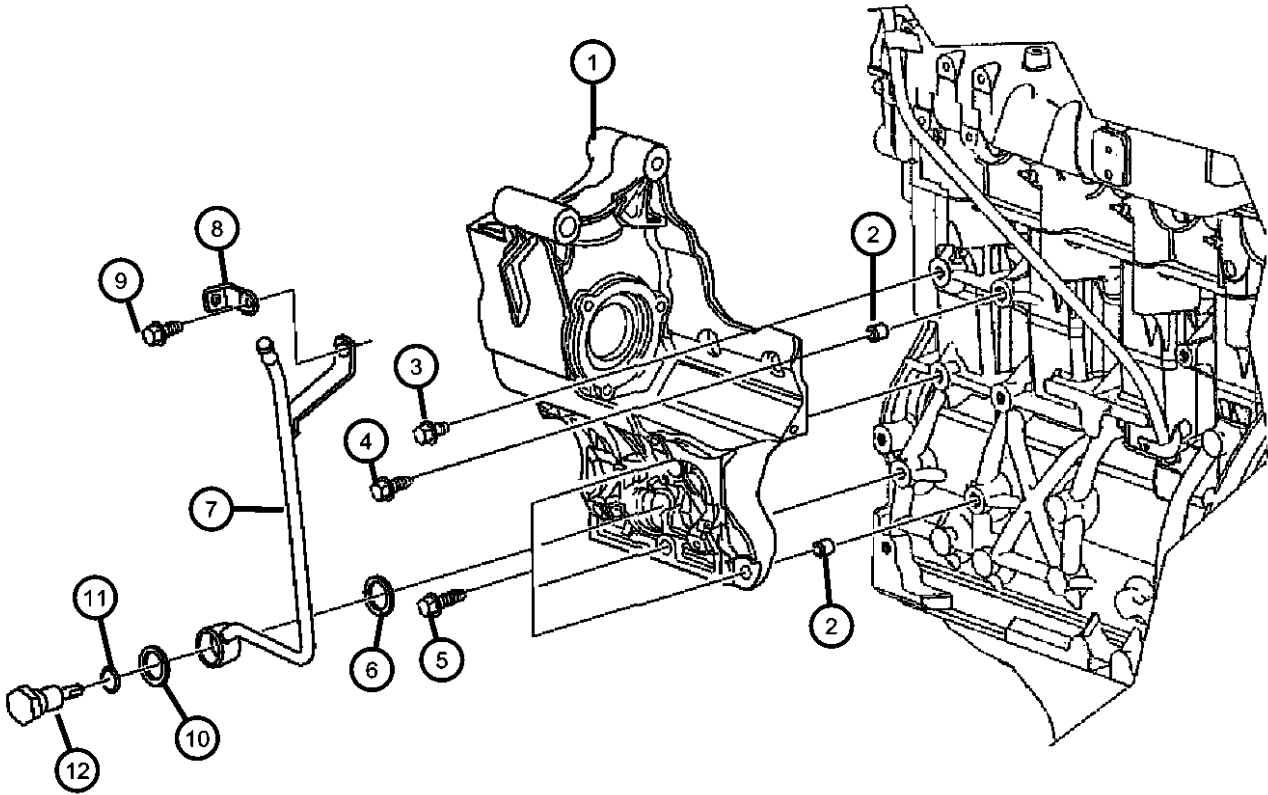


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes;									
[DBB] = All Manual Transmissions									
[DG0] = All Automatic Transmissions									
[EN0] = All 4/5 Cylinder Turbo Diesel Engines									
1									BRACKET
	05093901AA	1				EN0	DG0		
		1				EN0	DBB		
2									PIN
	05066862AA	1				EN0	DG0		
		1				EN0	DBB		
3									SCREW
	05093900AA	1				EN0	DG0		
		1				EN0	DBB		
4									BOLT, Adaptor Plate
	05003532AA	1				EN0	DBB		
		1				EN0	DG0		
5									SCREW
	05066939AA	1				EN0	DG0		
		1				EN0	DBB		
6									GASKET, Vacuum Pump, Mounting
	04863779	1				EN0	DG0		
		1				EN0	DBB		
7									TUBE, Vacuum
	05072684AB	1				EN0	DG0		
		1				EN0	DBB		
8									BRACKET
	05093902AA	1				EN0	DG0		
		1				EN0	DBB		
9									SCREW
	05003557AA	1				EN0	DBB		
		1				EN0	DG0		

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions


Fuel Injection Pump Mounting  
Figure 14-435

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10	05015040AA	1				EN0	DBB		WASHER, Plain
		1				EN0	DG0		
11	05066860AA	1				EN0	DBB		O RING
		1				EN0	DG0		
12	05015037AA	1				EN0	DBB		VALVE, Vacuum Pump
		1				EN0	DG0		

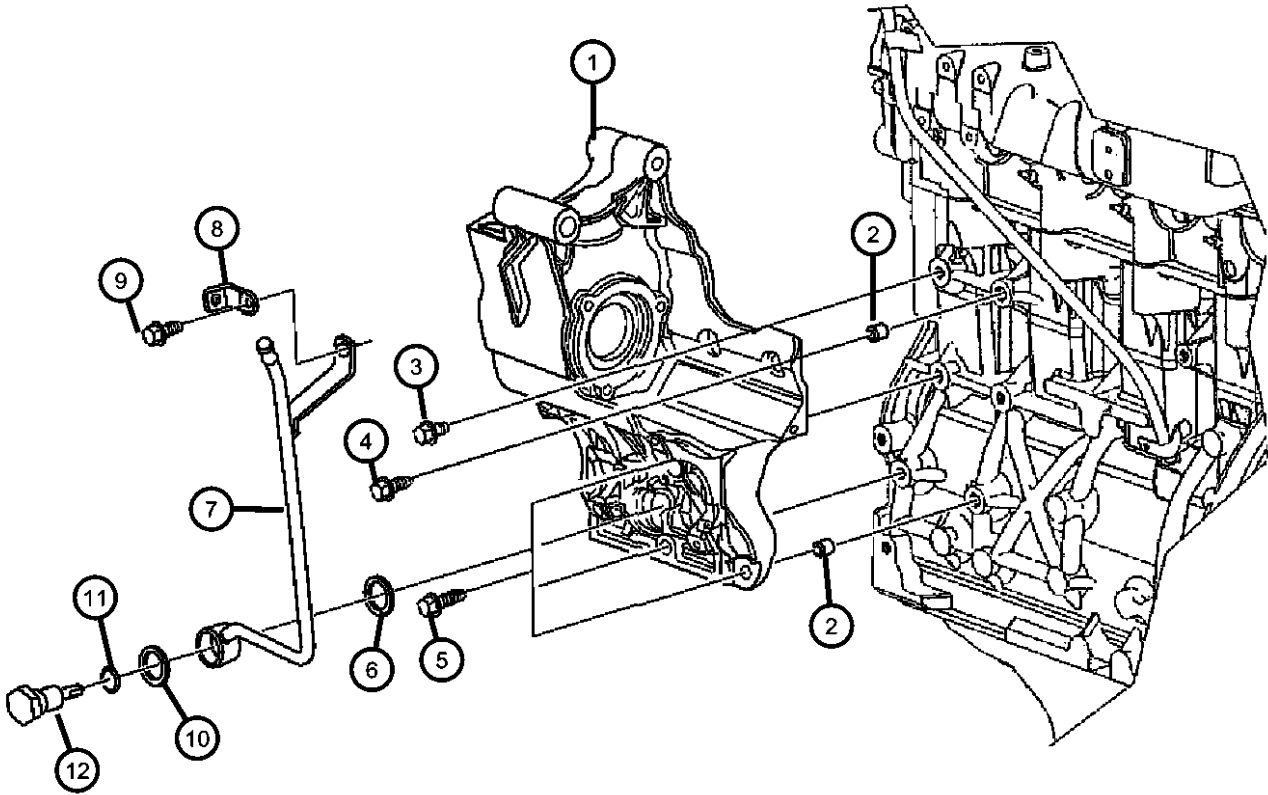

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Fuel Pump and Sending Unit, 2.4L [ED0], 3.7L [EK0], 2.8L [EN0]  
Figure 14-510

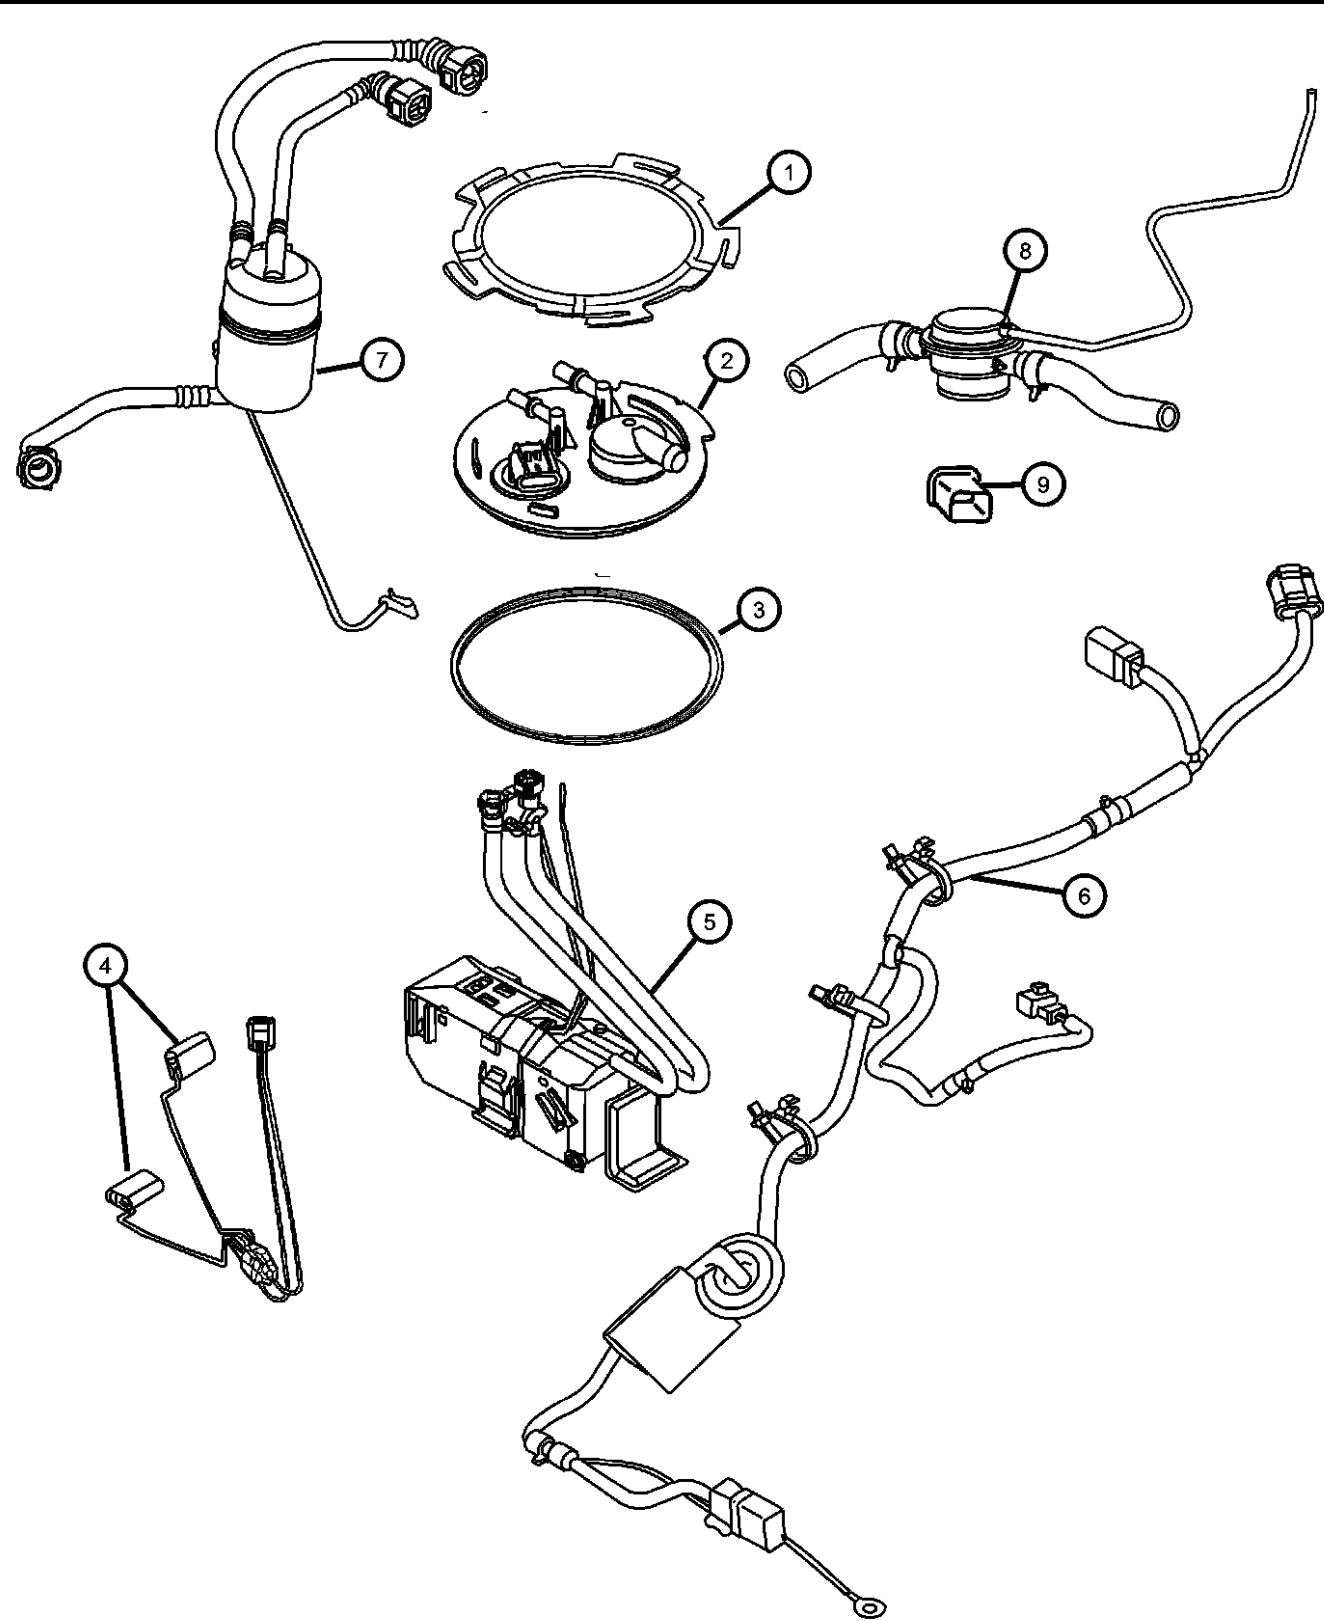

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines [EK0]= All 3.7L, 6 Cylinder Gas Engines [EN0]= All 2.8L 4 Cylinder Turb Diesels									
1	52100409AB	1				ED0, EK0			NUT, Fuel Pump Module
		1				EN0			
2	05072755AA	1				EN0			FLANGE PACKAGE, Fuel
	05103115AC	1				ED0, EK0			Fuel Pump Flange and Seal Only
3	52100410AA	1				ED0, EK0			SEAL, Fuel Pump and Level Unit
		1				EN0			
4	05103113AB	1				ED0, EK0			LEVEL UNIT PACKAGE, Fuel,
	05103116AA	1				EN0			Includes Pump Wires
5	05066999AB	1				EN0			RESERVOIR PACKAGE, Fuel,
	05103114AB	1				ED0, EK0			Fuel Pump Included with Package
6	56010598AC	1				ED0, EK0			WIRING, Fuel Module
	56010599AA	1				EN0			
7	52128698AA	1				EN0			FILTER, Fuel
8	52128698AA	1							VALVE, Flow, (NOT SERVICED)
9	52100556AA	1				ED0, EK0			SLEEVE, Insert

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	


AR = use ase required - = Non illustrated part

Throttle Body, [2.4L ED0, 3.7L EK0]  
Figure 14-610

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines  
[EK0]= All 3.7L, 6 Cylinder Gas Engines


1									THROTTLE BODY
	05114401AA	1				EK0			
	53013547AA	1				ED0			
2									GASKET, Throttle Body To Intake
	53013292AB	1				EK0			
	53013533AA	1				ED0			
3	53013533AA	1							SCREW, Hex Head, M6 x 1.00 x 40.00, (NOT SERVICED)
4									SENSOR KIT, Throttle Position
	05019411AB	1				ED0			
		1				EK0			
5									SOLENOID, Linear IACV
	04861325AC	1				ED0			
	04861552AB	1				EK0			
-6									O RING KIT, Linear Solenoid
	05114356AA	1				EK0			
		1				ED0			

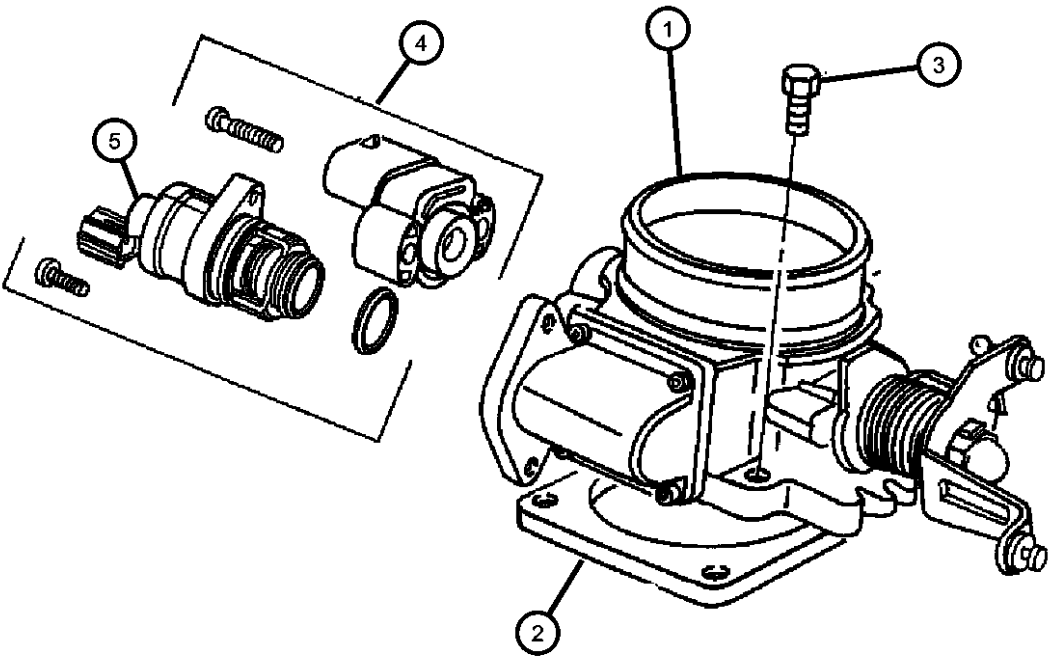

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions



Turbocharger 2.8L [EN0]  
Figure 14-620

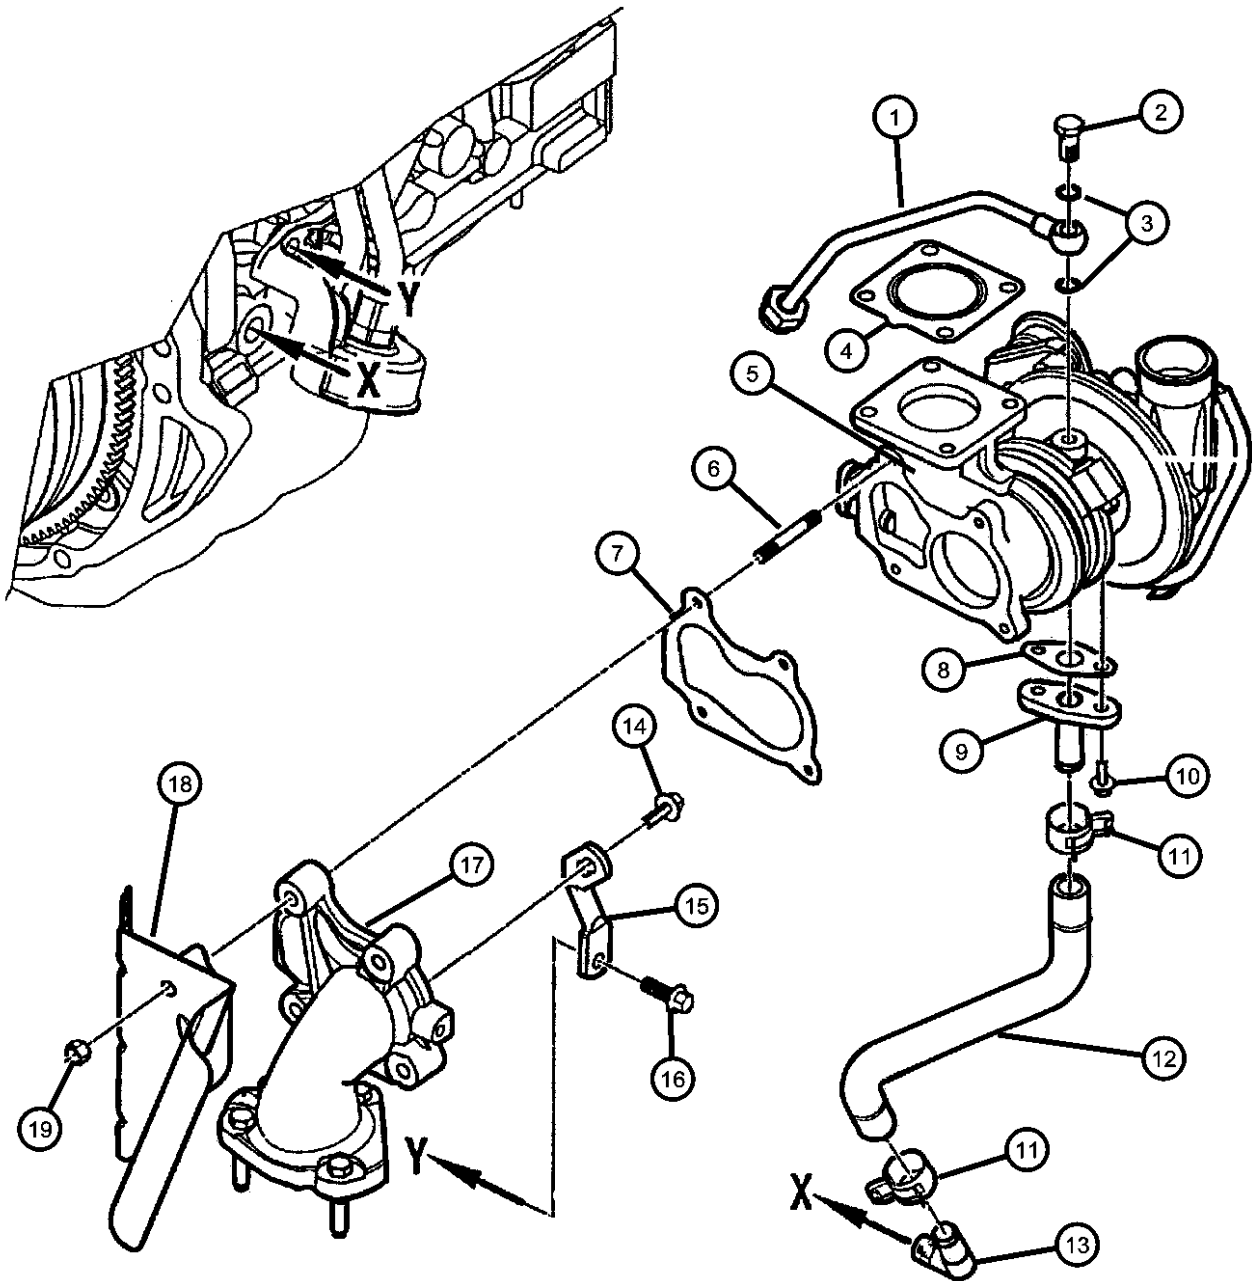


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes									
[DBB]= All Manual Transmissions									
[EN0]= All 2.8L 4 Cylinder Turbo Diesels									
1	05093927AA	1				EN0	DG0		PIPE, Oil Supply
2	05066824AA	1				EN0	DG0		BOLT, Banjo
3	04720713	2				EN0	DG0		WASHER, Implement Attaching
4	05066822AA	1				EN0	DG0		GASKET, Turbocharger To Manifold
5									TURBOCHARGER
	05093928AA	1				EN0	DBB		
	05134235AA	1				EN0	DG0		
6	05066796AA	1				EN0	DG0		STUD, Turbo Elbow
7	05066915AA	1				EN0	DG0		GASKET, Turbocharger To Manifold
8	04796007AB	1				EN0	DG0		GASKET, Turbo Oil Return Pipe
9	05093929AA	1				EN0	DG0		TUBE, Oil Drain
10									SCREW
	05003553AA	3				EN0	DBB		
		3				EN0	DG0		
11	05019342AB	1				EN0	DG0		CLAMP, Heater Hose
12	05093930AA	1				EN0	DG0		PIPE, Oil Drain
13	04773709	1				EN0	DG0		ADAPTER, Oil Drain Pipe
14	05003554AA	1				EN0	DG0		SCREW
15	05072733AA	1				EN0	DG0		BRACKET, Turbo Charger
16	05003532AA	1				EN0	DG0		BOLT, Adaptor Plate
17	05072732AB	1				EN0	DG0		ELBOW, Turbo Exhaust Outlet
18	05072731AA	1				EN0	DG0		SHIELD, Heat
19	04882610	4				EN0	DG0		NUT, Lock
-20	05083711AA	1				EN0	DG0		VALVE
-21	05093932AA	1				EN0	DG0		PIPE, EGR, Manifold Vacuum
-22	05072739AA	1				EN0	DG0		ELBOW, Intake Manifold Vacuum
-23	05066944AA	1				EN0	DG0		SCREW, Elbow Mounting


LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16v	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Throttle Controls, 2.4L [ED0]  
Figure 14-710

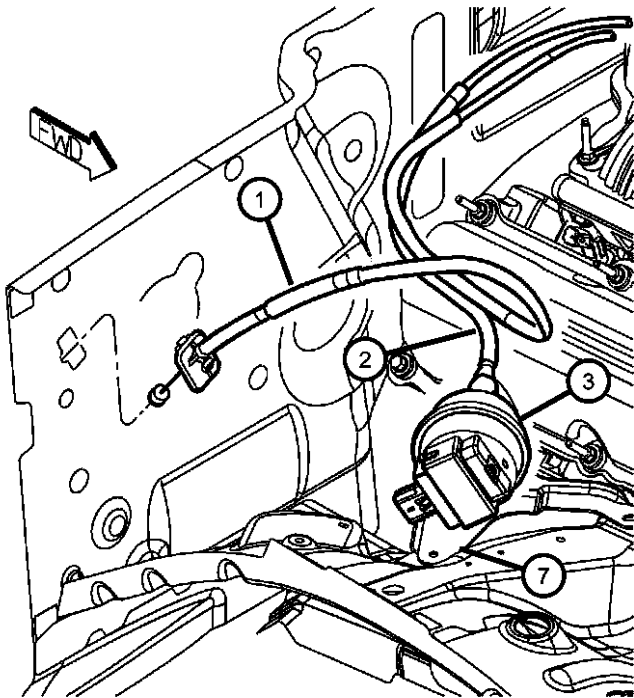


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines									
1									CABLE, Accelerator
	53013137AB	1	J, T			ED0			
	53013239AB	1	U			ED0			
2	53013346AB	1				ED0			CABLE, Speed Control
3	04669979	1				ED0			SERVO, Speed Control
-4	06025867	1				ED0			CLIP, Cable to Servo Attach
-5	06502493	2				ED0			NUT, Hex Flange Serration, M6x1
-6	06025867	1				ED0			CLIP, Cable to Servo Attach
7	53013348AA	1				ED0			BRACKET, Speed Control Servo

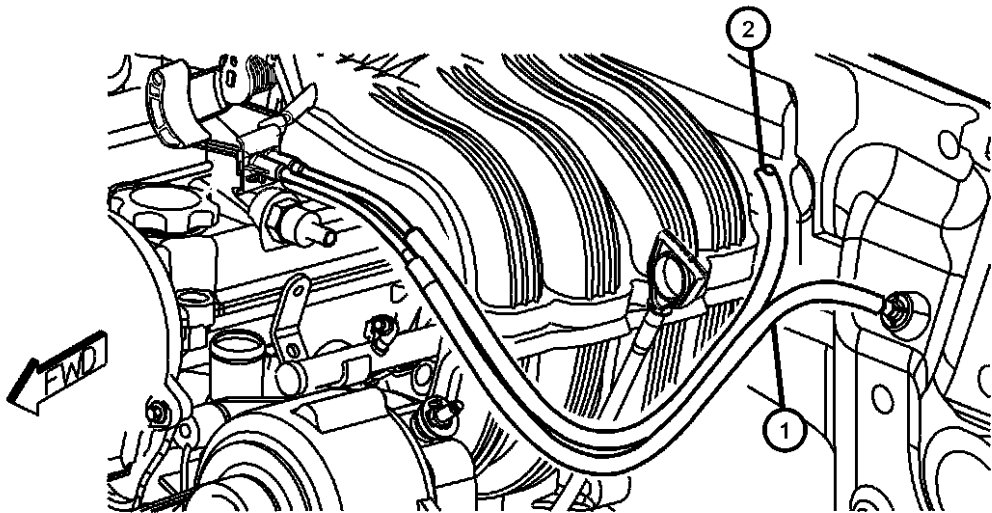

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions


Throttle Controls, 3.7L [EKG]  
Figure 14-720

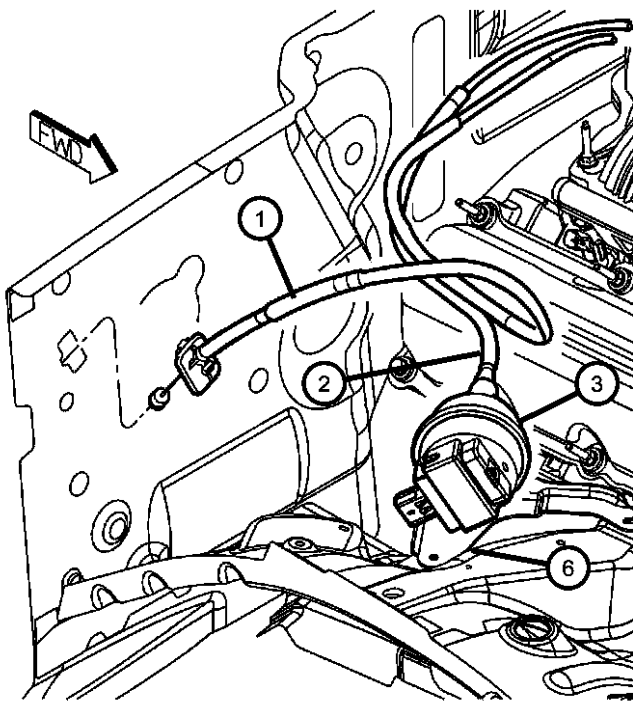

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[EKG]= 3.7L Magnum V-6  
[EK0]= All 3.7L V-6 Gas Engines

1									CABLE, Accelerator
	53013136AD	1	J, T			EKG			
	53013138AC	1	U			EKG			
2	53013367AD	1				EK0			CABLE, Speed Control
3	04669979	1				EK0			SERVO, Speed Control
-4	06502493	2				ED0			NUT, Hex Flange Serration, M6x1
-5	06025867	1				EK0			CLIP, Cable to Servo Attach
6	53013348AA	1				EK0			BRACKET, Speed Control Servo
-7	05214613	1	J, T						CLIP, Cable, Accelerator Cable to Pedal

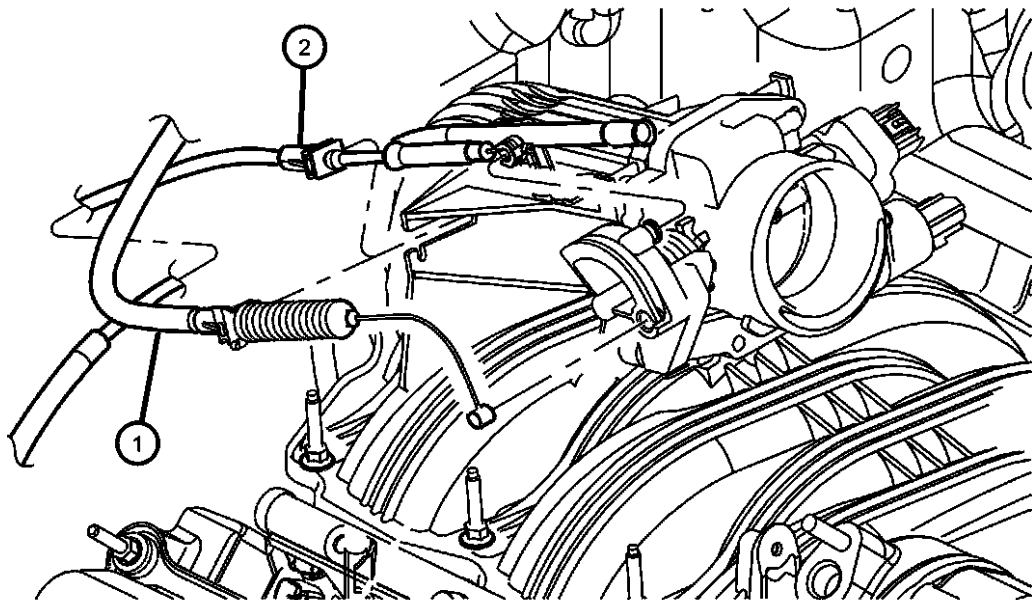

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


2004 KJ

Throttle Controls, 2.8L [EN0]  
Figure 14-730

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[EN0]= All 2.8L 4 Cylinder Turbo Diesels


1	52850616AE	1				EN0			BELLCRANK, Accelerator and Cruise
2									CABLE, Accelerator
	52851243AC	1	J, T			EN0			
	52851244AC	1	U			EN0			
-3	06501957	2				EN0			SCREW, Bell Crank to Bracket attaching

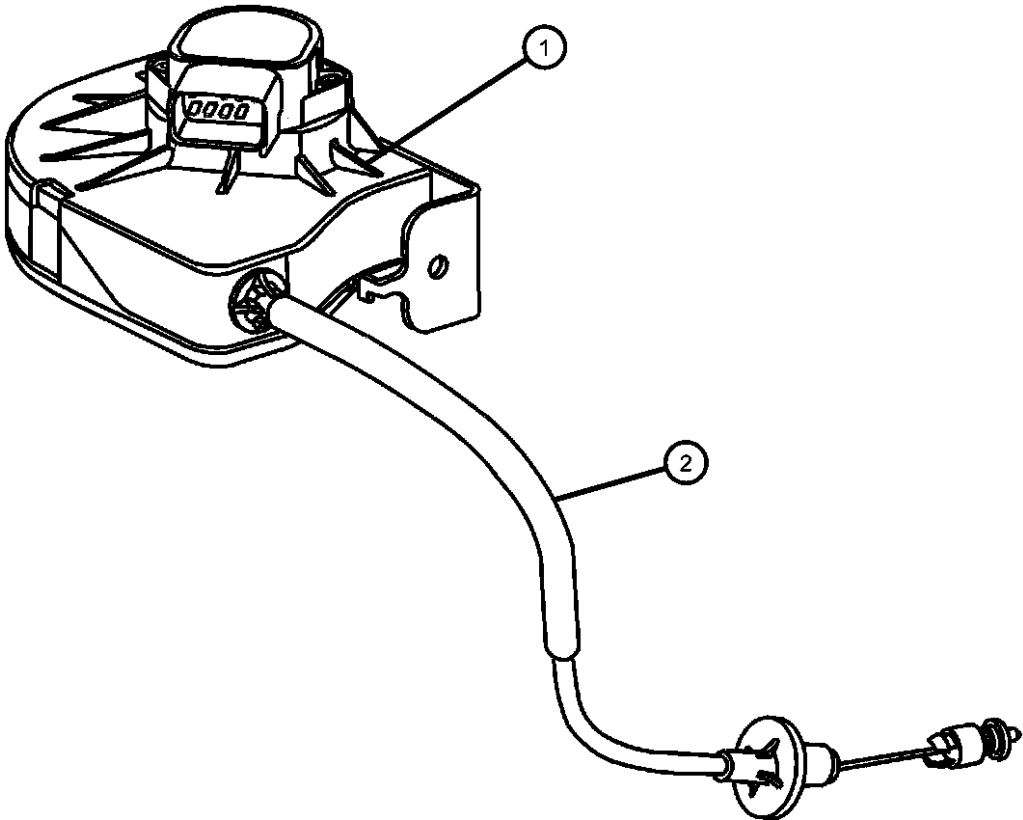

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Air Cleaner, 2.4L [ED1]  
Figure 14-810

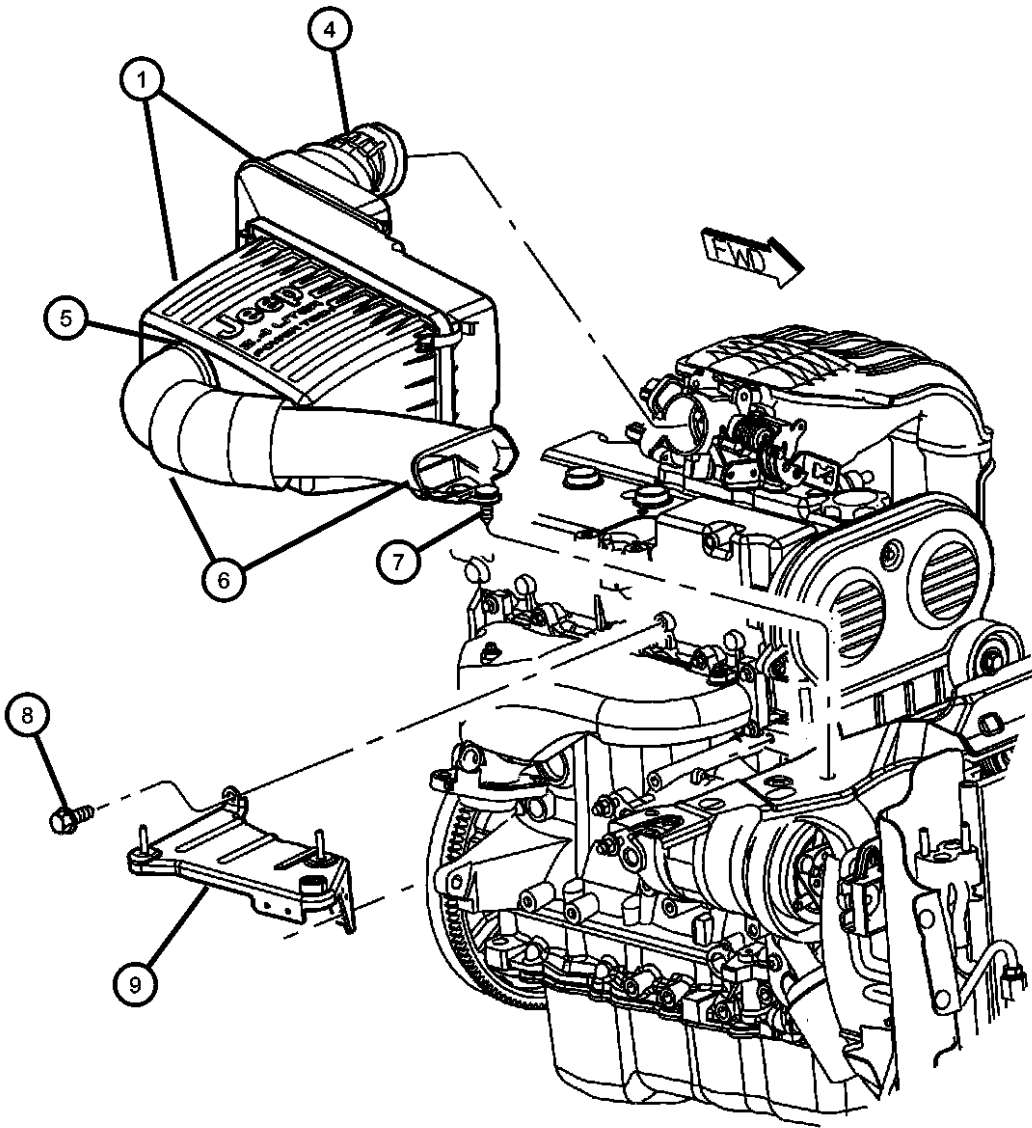

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes									
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines									
1	53013671AA	1				ED0			BODY, Air Cleaner
-2	05019443AA	1				ED0			FILTER, Air
-3	53013093AA	1				ED0			TUBE, Crankcase Vent To Air Cleaner
4	53013475AA	1				ED0			CLAMP, Hose to Throttle Body
5	53013476AA	1				ED0			CLAMP, Hose to Air Cleaner
6	53013101AB	1				ED0			INLET, Fresh Air
7	06036456AA	1				ED0			RIVET
8	06503692	2				ED0			SCREW, M8-1.25
9	53013473AA	1				ED0			BRACKET, Air Cleaner
-10	53013357AA	1				ED0			GROMMET, Air Cleaner
-11	04669177	2				ED0, EK0			GROMMET, Air Cleaner Bracket

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	


AR = use ase required - = Non illustrated part

Air Cleaner, 3.7L [EKG]  
Figure 14-820

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[EK0]= All 3.7L, 6 Cylinder Gas Engines  
[EN0]= All 4/5 Cylinder Turbo Diesels

1	53013724AA	1				EK0			HOSE, Air Cleaner
2	53013103AA	1				EK0, EN0			INLET, Fresh Air
3	53013727AA	1				EK0			AIR CLEANER
4	53013509AA	1				EK0, EN0			BAFFLE, Air Inlet
5	05018777AA	1				EK0			FILTER, Air
6	53013357AA	3				EK0, EN0			GROMMET, Air Cleaner
-7	06036456AA	1				EK0, EN0			RIVET
8	53013726AA	1				EK0			CLAMP, Hose to Air Cleaner

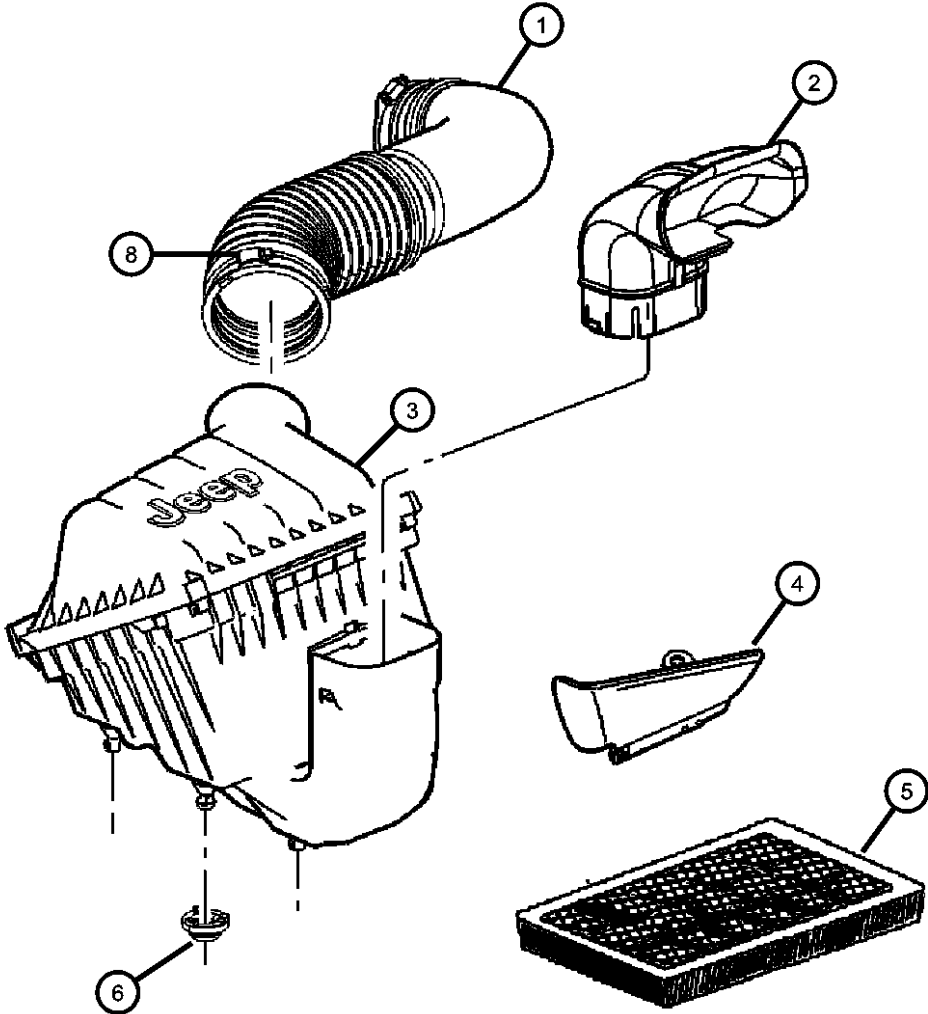

3.7L

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part

Air Cleaner, 2.8L [EN0]  
Figure 14-830

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[EK0]= All 3.7L, 6 Cylinder Gas Engines  
[EN0]= All 2.8L 4 Cylinder Turbo Diesels

1	53013107AB	1				EN0			AIR CLEANER
-2	05018777AA	1				EN0			FILTER, Air
-3	53013103AA	1				EK0, EN0			INLET, Fresh Air
4	53013103AA	1							SENSOR PACKAGE, Air Flow Meter, (NOT SERVICED)
5	53013104AB	1				EN0			HOSE, Clean Air
6	53013094AC	1				EN0			HOSE, Separator To Air Cleaner
7	53013094AC	1							WIRING, Engine, See Group 8, (NOT SERVICED)

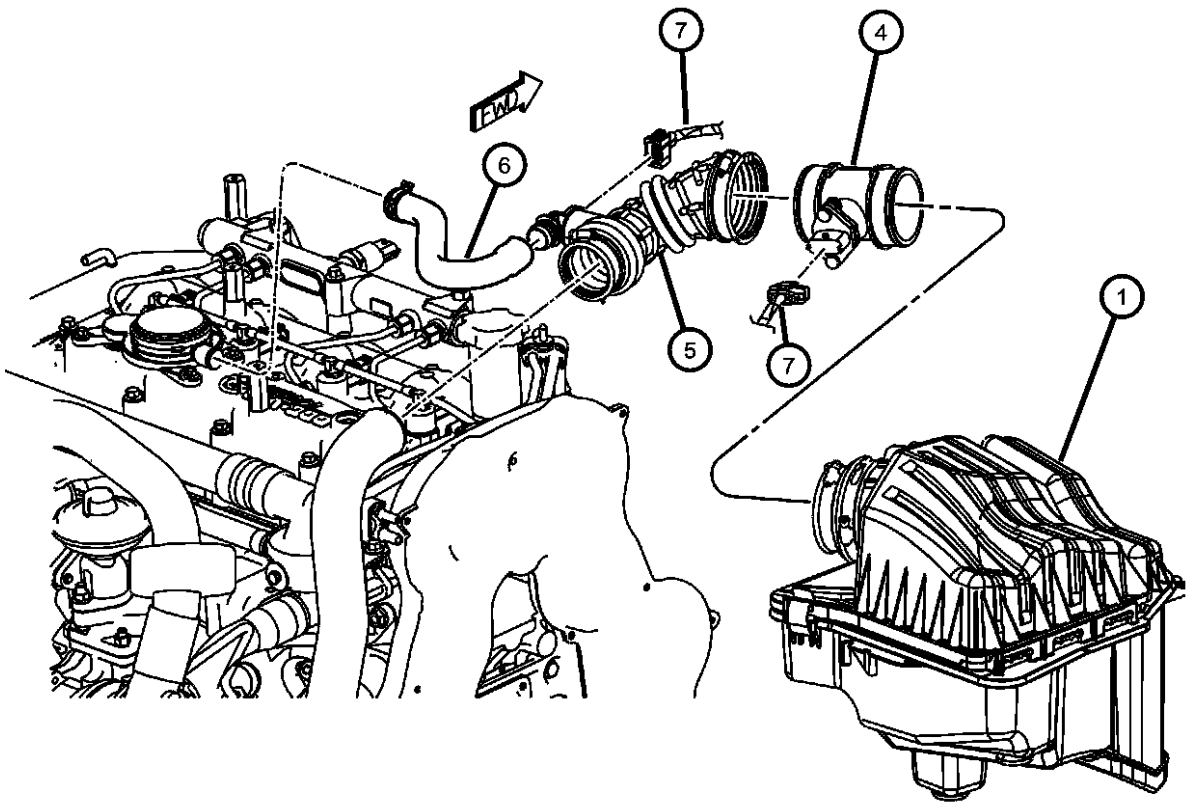


LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Speed Control  
Figure 14-1010


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes									
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines									
[EKG]= 3.7L Power Tech V-6									
[EK0]= All 3.7L 6 Cylinder Gas Engines									
1	04669979	1				ED0			SERVO, Speed Control
2	53013348AA	1				ED0			BRACKET, Speed Control Servo
3									CABLE, Speed Control
	53013346AB	1				ED0			
	53013367AD	1				EK0			
4									CABLE, Accelerator
	53013136AD	1	J, T			EKG			
	53013137AB	1	J, T			ED0			
	53013138AC	1	U			EKG			
-5	53013347AB	1				ED0			HARNESS, Speed Control Vacuum
-6	06502493	2				ED0			NUT, Hex Flange Serration, M6x1
-7	06025867	1				ED0			CLIP, Cable to Servo Attach
-8	55037536AB	1							RESERVOIR, Speed Control Vacuum

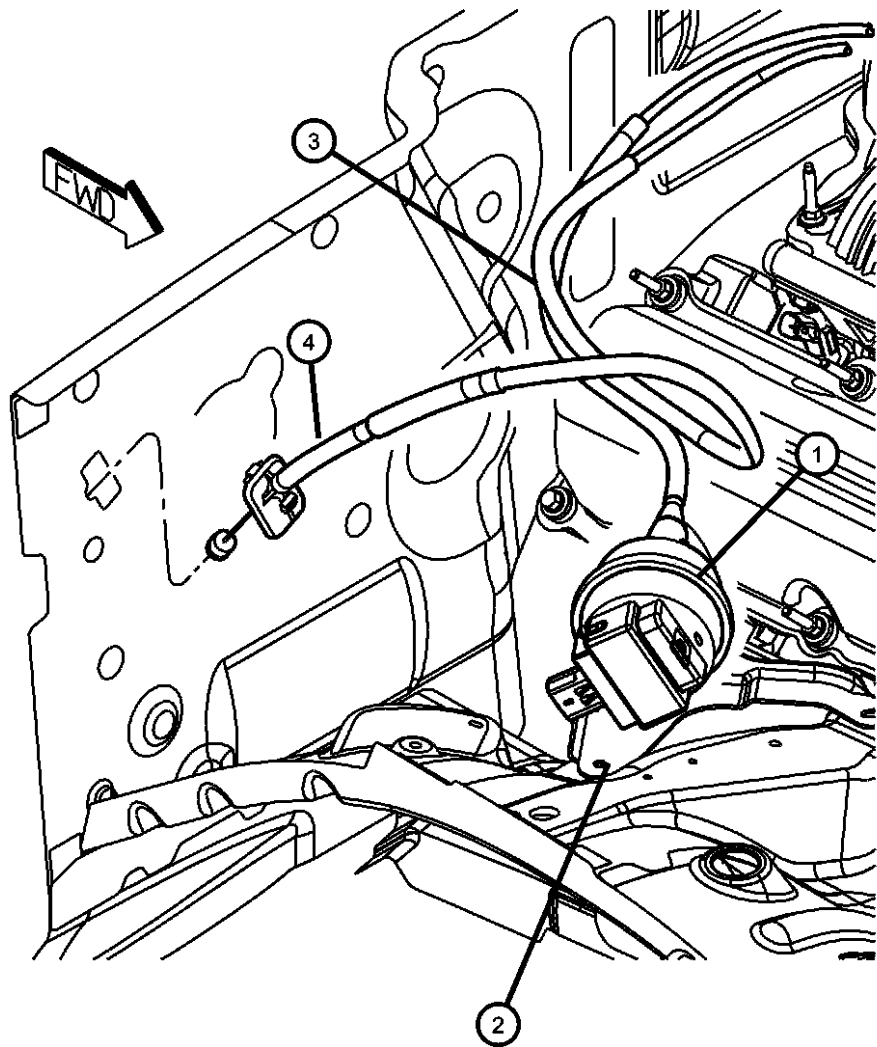

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions



Accelerator Pedal  
Figure 14-1110

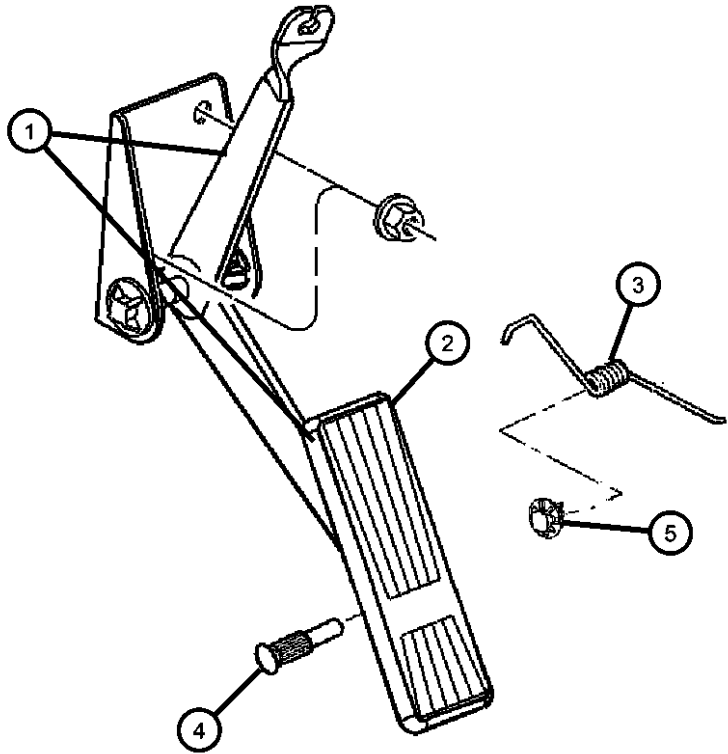

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines [EK0]= All 3.7L 6 Cylinder Gas Engines [EN0]= All 4/5 Cylinder Turbo Diesels									
1									PEDAL, Accelerator
	53013527AA	1	J, T			ED0, EK0, EN0			
	53013528AA	1	U			ED0, EK0, EN0			
2									PAD, Accelerator Pedal, Also Serviced In Item 1
	53003932AB	1	J, T			ED0, EK0, EN0			
		1	U			ED0, EK0, EN0			
3									SPRING, Accelerator Pedal Return, Also Serviced In Item 1
	52078168	1	J, T			ED0, EK0, EN0			
		1	U			ED0, EK0, EN0			
4									PIN, Accelerator Pedal Mtg., Also Serviced In Item 1
	J3220231	1	J, T			ED0, EK0, EN0			
		1	U			ED0, EK0, EN0			
5									BUSHING, Accelerator Pedal, Also Serviced In Item 1
	52078653	2	J, T			ED0, EK0, EN0			
		2	U			ED0, EK0, EN0			
-6		2							NUT, (NOT SERVICED)


LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

# Group - 16

## Propeller Shafts and U-Joints


Group - 16 Propeller Shafts and U-Joints

Illustration Title	Group-Fig. No.
<b>Propeller Shaft</b>	
Propeller Shaft,2 Wheel Drive.....	Fig. 16 - 110
Propeller Shaft,4 Wheel Drive.....	Fig. 16 - 120

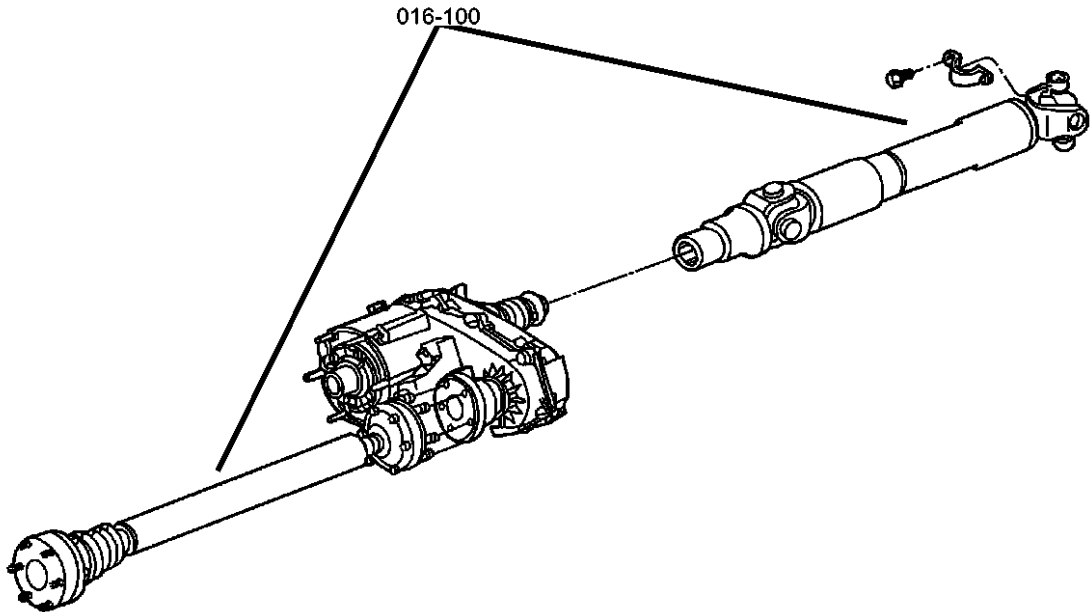

<div><div>016-100</div><div>Propeller Shaft</div><div></div></div>			
--	--	--	--


Propeller Shaft,2 Wheel Drive  
 Figure 16-110

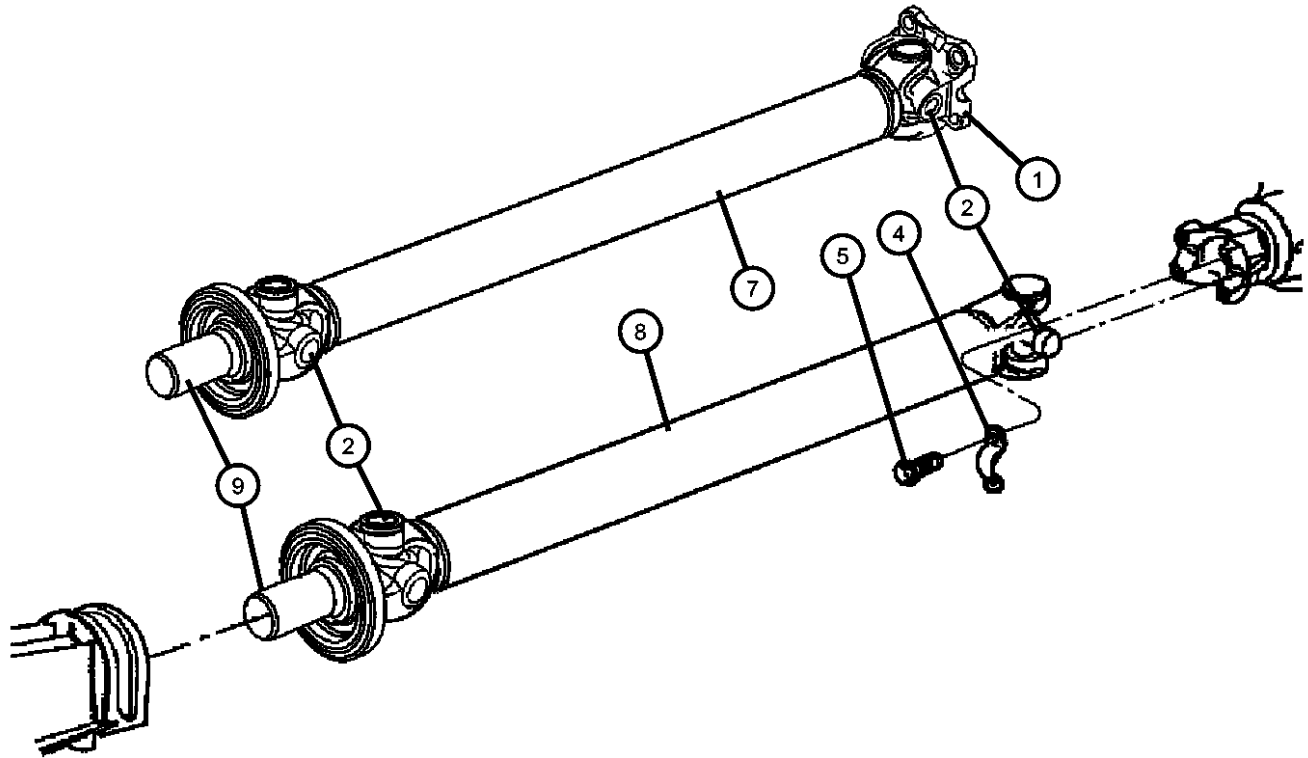	ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	Note:Sales Codes [DBB]=Transmissions - All Manual [DG0]=Transmissions - All Automatic [DG6]=Transmission - 4-Speed Automatic, 42RL [ED0]=Engines - All 2.2, 2.5, 2.4L 4 Cylinder Gas [EK0]=Engines - All 3.7L 6 Cylinder Gas									
	1									FLANGE, Drive Shaft
		05103372AA	1	T			EK0	DBB		Rear
			1	T			ED0	DBB		Rear
	2									U-JOINT
		05015694AA	2	T			ED0	DBB		Front or Rear
			2	T			EK0	DBB		Front or Rear
			2	T			EK0	DG6		Front or Rear
	-3									RING, U Joint
		J3207886	4	T			ED0	DBB		Front or Rear
			4	T			EK0	DG6		Front or Rear
			4	T			EK0	DBB		Front or Rear
	4	J3240553	2					DD0, DGQ		STRAP, Prop ShaftMounting
	5	J4006928	4					DD0, DGQ		BOLT, Prop Shaft, Mounting
	-6	06506497AA	4					DG6		BOLT, Hex Head, M12, Prop Shaft, Mounting
	7									SHAFT, Drive, Rear 1-Piece
		52853126AA	1	T			ED0	DBB		
		52853127AA	1	T			EK0	DBB		
	8	52853118AB	1	T			EK0	DG6		SHAFT, Drive, Rear 1-Piece
	9									YOKE, Drive Shaft
		05073280AA	1	T			ED0	DBB		
		05093963AA	1	T			EK0	DBB		
		05103210AA	1	T			EK0	DG6		

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
		ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
		Turbo Diesel	DG6 = Transmission-4-Spd.	
		ENO = 4Cyl Turbo Diesel	Automatic, 42RLE	
		EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
		ED0 = All 2.4L	5-45RFE	
			DBB = All Manual Transmissions	
			DG0 = All Automatic Transmissions	

AR = use ase required    - = Non illustrated part

Propeller Shaft,4 Wheel Drive  
 Figure 16-120

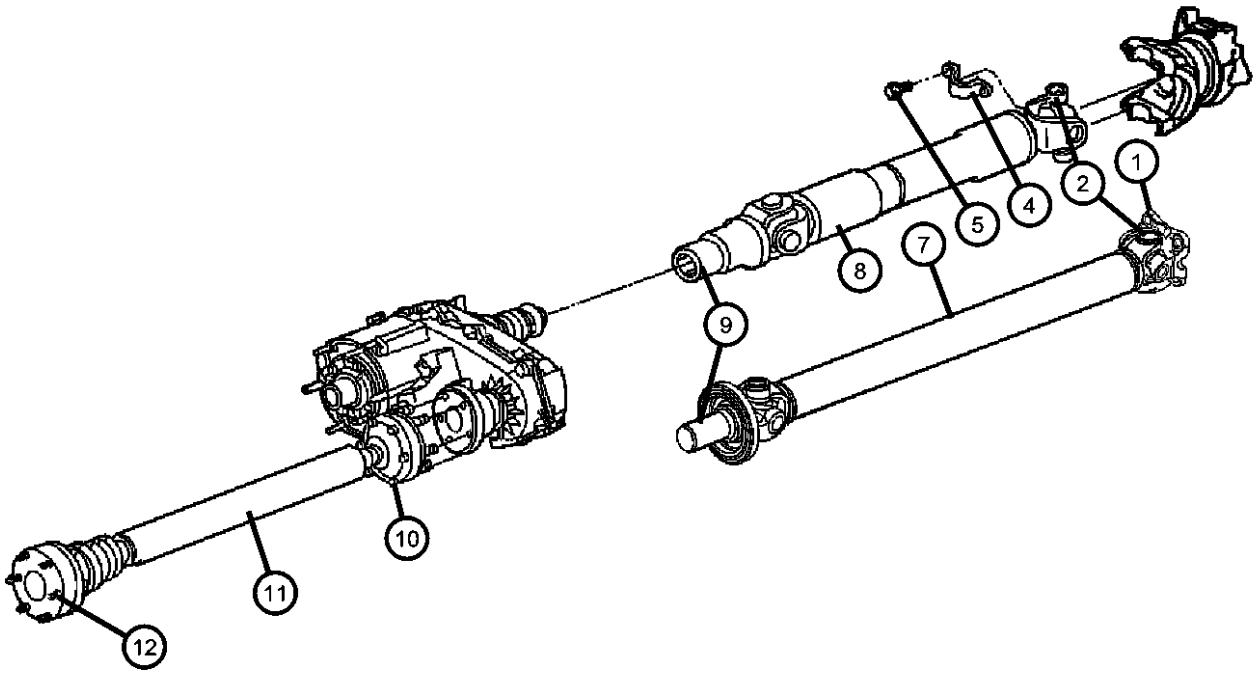

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:Sales Codes Note:Items 10,12 that one part number consists of 2 bolts and 1 strap [DBB]=Transmissions - All Manual [DG0]= Transmissions - All Automatic [DG6]=Transmission - 4-Speed Automatic, 42RL [ED0]=Engines - All 2.2L,2.5L,2.4L 4 CYL GA [EK0]=Engines - All 3.7L 6 Cylinder Gas [EN0]=Engines - All 4/5 Cylinder Turbo Diesel									
1									FLANGE, Drive Shaft
	05103372AA	1	J, U			EN0	DG0		Rear
		1	J, U			EN0	DBB		Rear
		1	J, U			EK0	DBB		Rear
		1	J, U			ED0	DBB		Rear
2									U-JOINT
	05015694AA	2	J, U			ED0	DBB		Front or Rear
		2	J, U			EK0	DBB		Front or Rear
		2	J, U			EN0	DBB		Front or Rear
		1	J, U			EN0	DG0		Front or Rear
		2	J, U			EK0	DG6		Front or Rear
-3									RING, U Joint
	J3207886	4	J, U			ED0	DBB		
		4	J, U			EK0	DBB		
		4	J, U			EN0	DBB		
		4	J, U			EN0	DG0		
		8	J, U			EK0	DG6		
4	J3240553	2					DD0, DGQ		STRAP, Prop Shaft
5	J4006928	4					DD0, DGQ		BOLT, Prop Shaft, Mounting
-6	06506497AA	4					DG6		BOLT, Hex Head, M12, Prop Shaft Rear, Mounting
7									SHAFT, Drive, Rear 1-Piece
	52853125AA	1	J, U			ED0	DBB		
	52853128AA	1	J, U			EK0	DBB		
	52853129AA	1	J, U			EN0	DBB		

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE	74 = 4 Door (104.3 WB)			
P = Limited	J = LHD (4WD)			ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

Propeller Shaft,4 Wheel Drive  
 Figure 16-120

	ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		52853130AA	1	J, U			EN0	DG0		
	8	52853119AB	1	J, U			EK0	DG6		SHAFT, Drive, Rear 1-Piece
	9									YOKE, Drive Shaft
		05073275AA	1	J, U			ED0	DBB		
			1	J, U			EN0	DBB		
		05093960AA	1	J, U			EK0	DBB		
		05093961AB	1	J, U			EK0	DG6		
		05103373AA	1	J, U			EN0	DG0		
	10									BOLT AND WASHER, Part Number Has 1 strap and 2 Bolts
		05015109AA	3	J, U			EN0	DBB		To Transfer Case, Rear
			3	J, U			EN0	DG0		To Transfer Case, Rear
			3	J, U			ED0	DBB		To Transfer Case, Rear
			3	J, U			EK0	DBB, DG6		To Transfer Case, Rear
	11									SHAFT, Drive, Front
		52111591AA	1	J, U			EN0	DBB		
		52111593AA	1	J, U			EN0	DG0		
		52111594AA	1	J, U			ED0	DBB		
		52111596AA	1	J, U			EK0	DBB, DG6		
	12									BOLT AND WASHER, Part Number Has 1 strap and 2 Bolts
		05015996AA	3	J, U			EN0	DBB		To Front Axle, Front
			3	J, U			EN0	DG0		To Front Axle, Front
			3	J, U			ED0	DBB		To Front Axle, Front
			3	J, U			EK0	DBB, DG6		To Front Axle, Front

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

# Group - 17

## Rear Suspension

### Group - 17 Rear Suspension

Illustration Title


Group-Fig. No.



Rear Suspension

Suspension,Rear and Shock .....Fig. 17 - 110


Rear Stabilizer

Stabilizer Bar,Rear .....Fig. 17 - 210

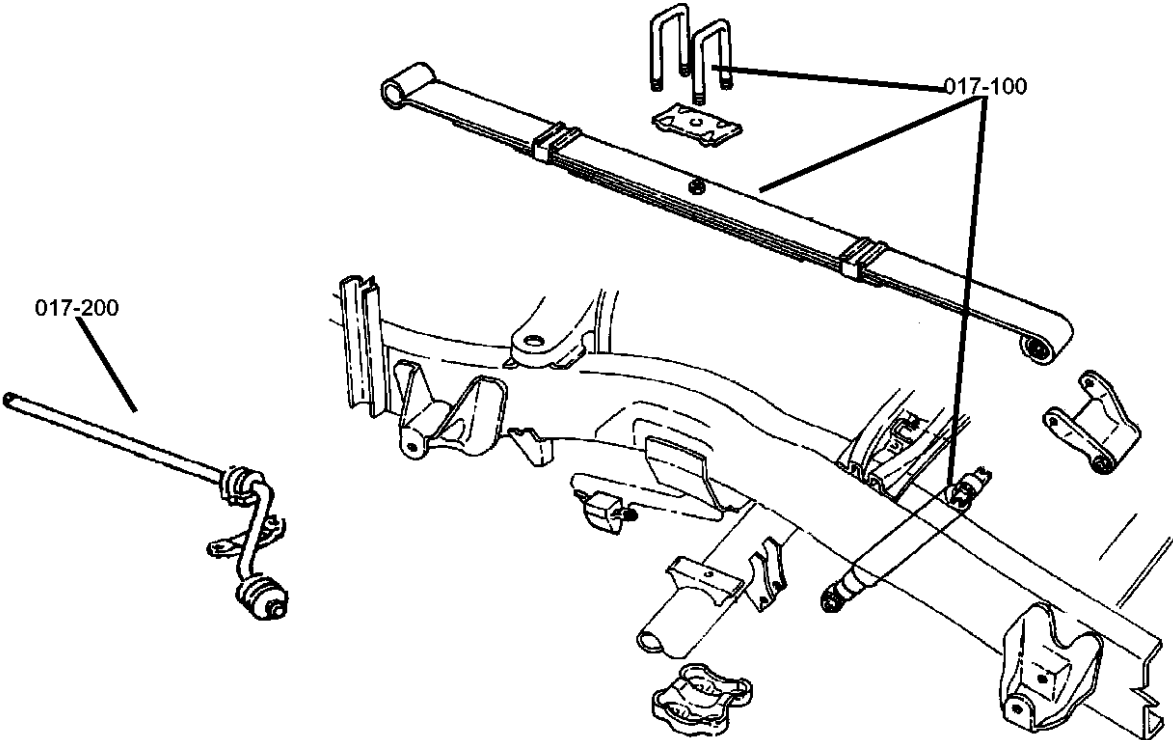
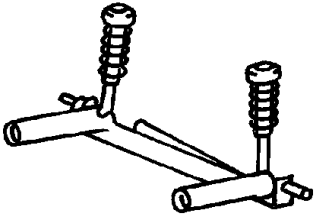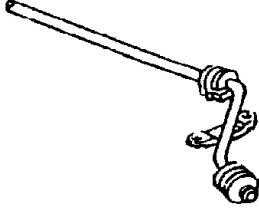
<div>017-100</div> <div>Rear Suspension</div> <div></div>	<div>017-200</div> <div>Rear Stabilizer</div> <div></div>		
---	--	--	--

Suspension,Rear and Shock  
Figure 17-110

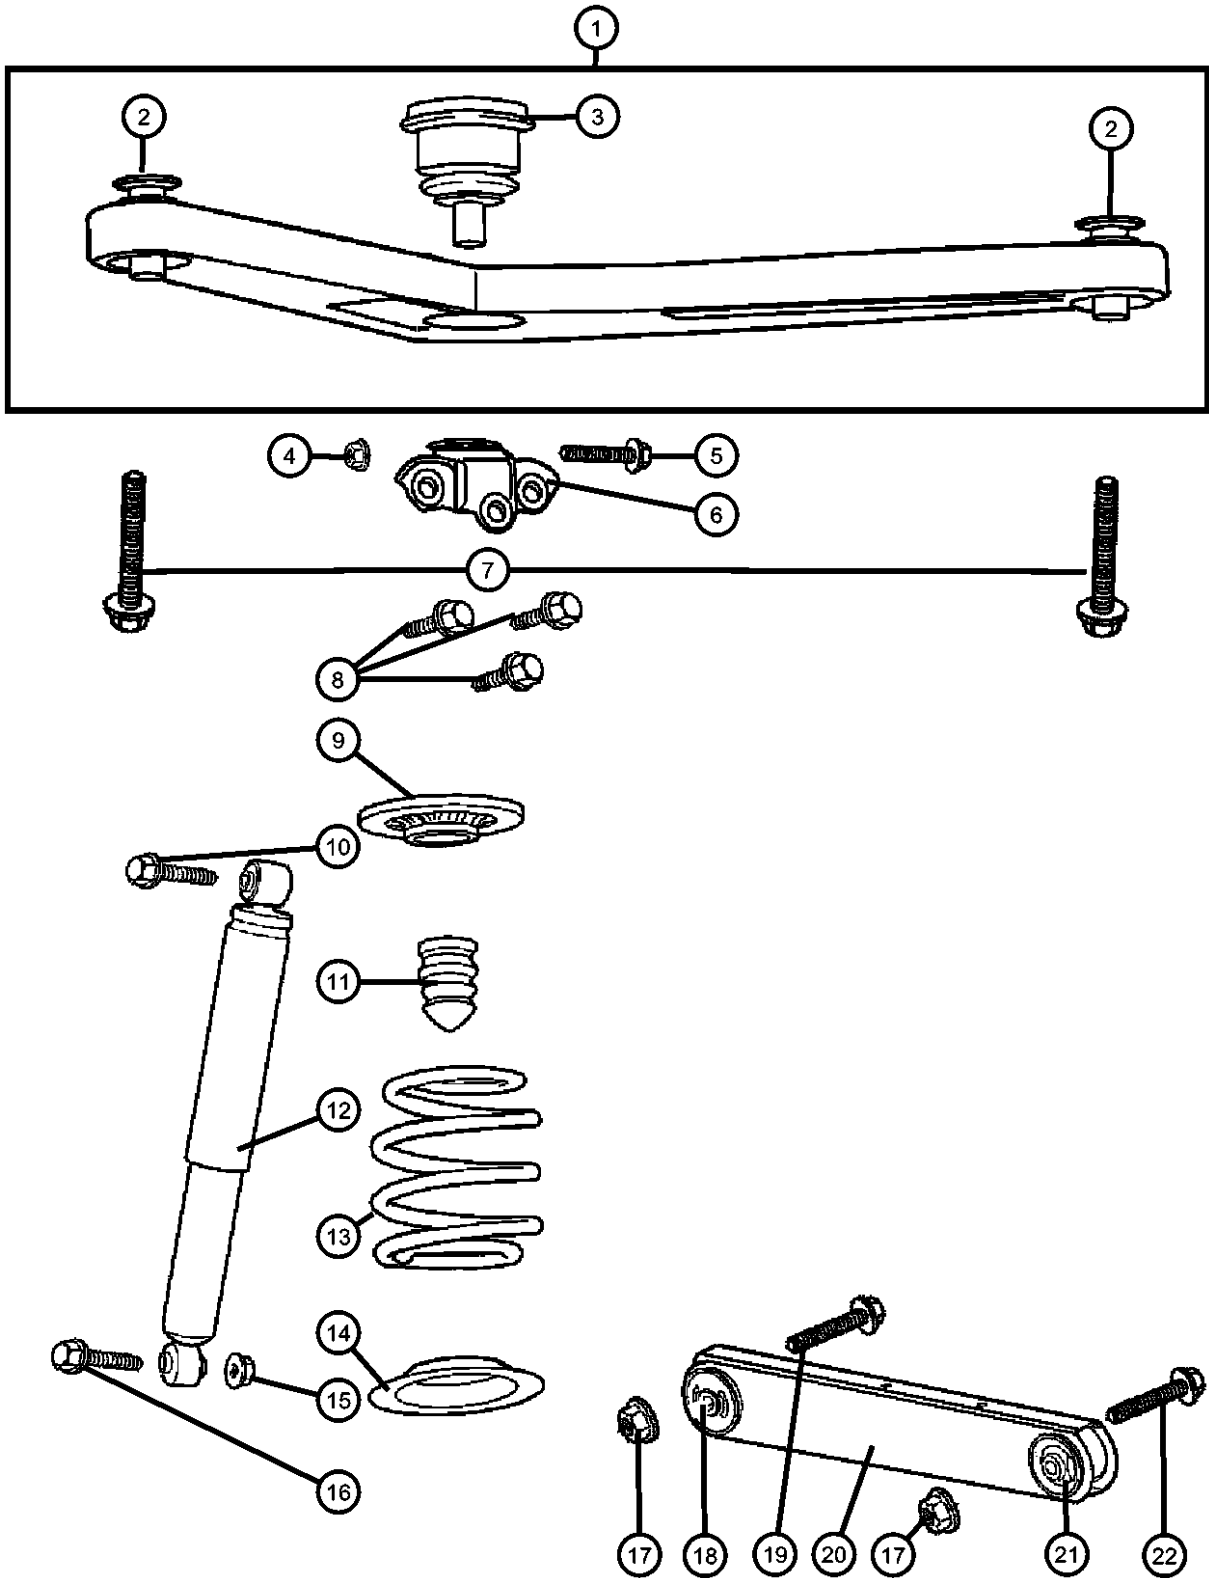


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:Sales Codes; [ZCT] Through [ZRV] = Spring Sales Codes will be found on Vehicle Identification Number [VIN] Sales Code Listing									
1	52088901AD	1							ARM, Upper Control, Rear, Includes Item 2
2	52088425	2							BUSHING, Control Arm
3	52088647AB	1							BALL JOINT, Upper Control Arm
4	06503711	1							NUT, Hex Flange, M12x1.75, Ball Joint Bracket, Mounting
5	06503610	1							BOLT, Hex Flange Head, M12-1.75x62.0, UCA to Axle Bracket, Mounting
6									BRACKET, Ballstud
	52088875AB	1							[DRJ]
	52128586AA	1							[DRA]
7	06504748	2							SCREW, Hex Flange Head, M12x1.75x117, UCA to Body, Mounting
8	06505445AA	3							BOLT
9	52088707AA	2							ISOLATOR, SpringUpper
10	06506147AA	2							SCREW, Hex Flange Head, M12x1.75x80, Shock Mounting, Upper
11	52088705AC	2							BUMPER, JounceUpper
12	52088673AD	2							SHOCK ABSORBER, Suspension, Rear
	0SGR5284								Rancho Shock
	0SG23161								Mopar V-Line Alternative Part
13									SPRING, Suspension, Rear
	52128869AA	1							[ZCT,ZRT]
	52128870AA	1							[ZCU,ZRU]
	52128871AA	1							[ZCV,ZRV]
	52128872AA	1							[ZCW,ZRW]
14	52128524AA	2							ISOLATOR, SpringLower
15	06502697	2							NUT, Hex Flange Lock, M12x1.75, Shock Mounting, Lower

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				EDO = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Suspension,Rear and Shock  
Figure 17-110

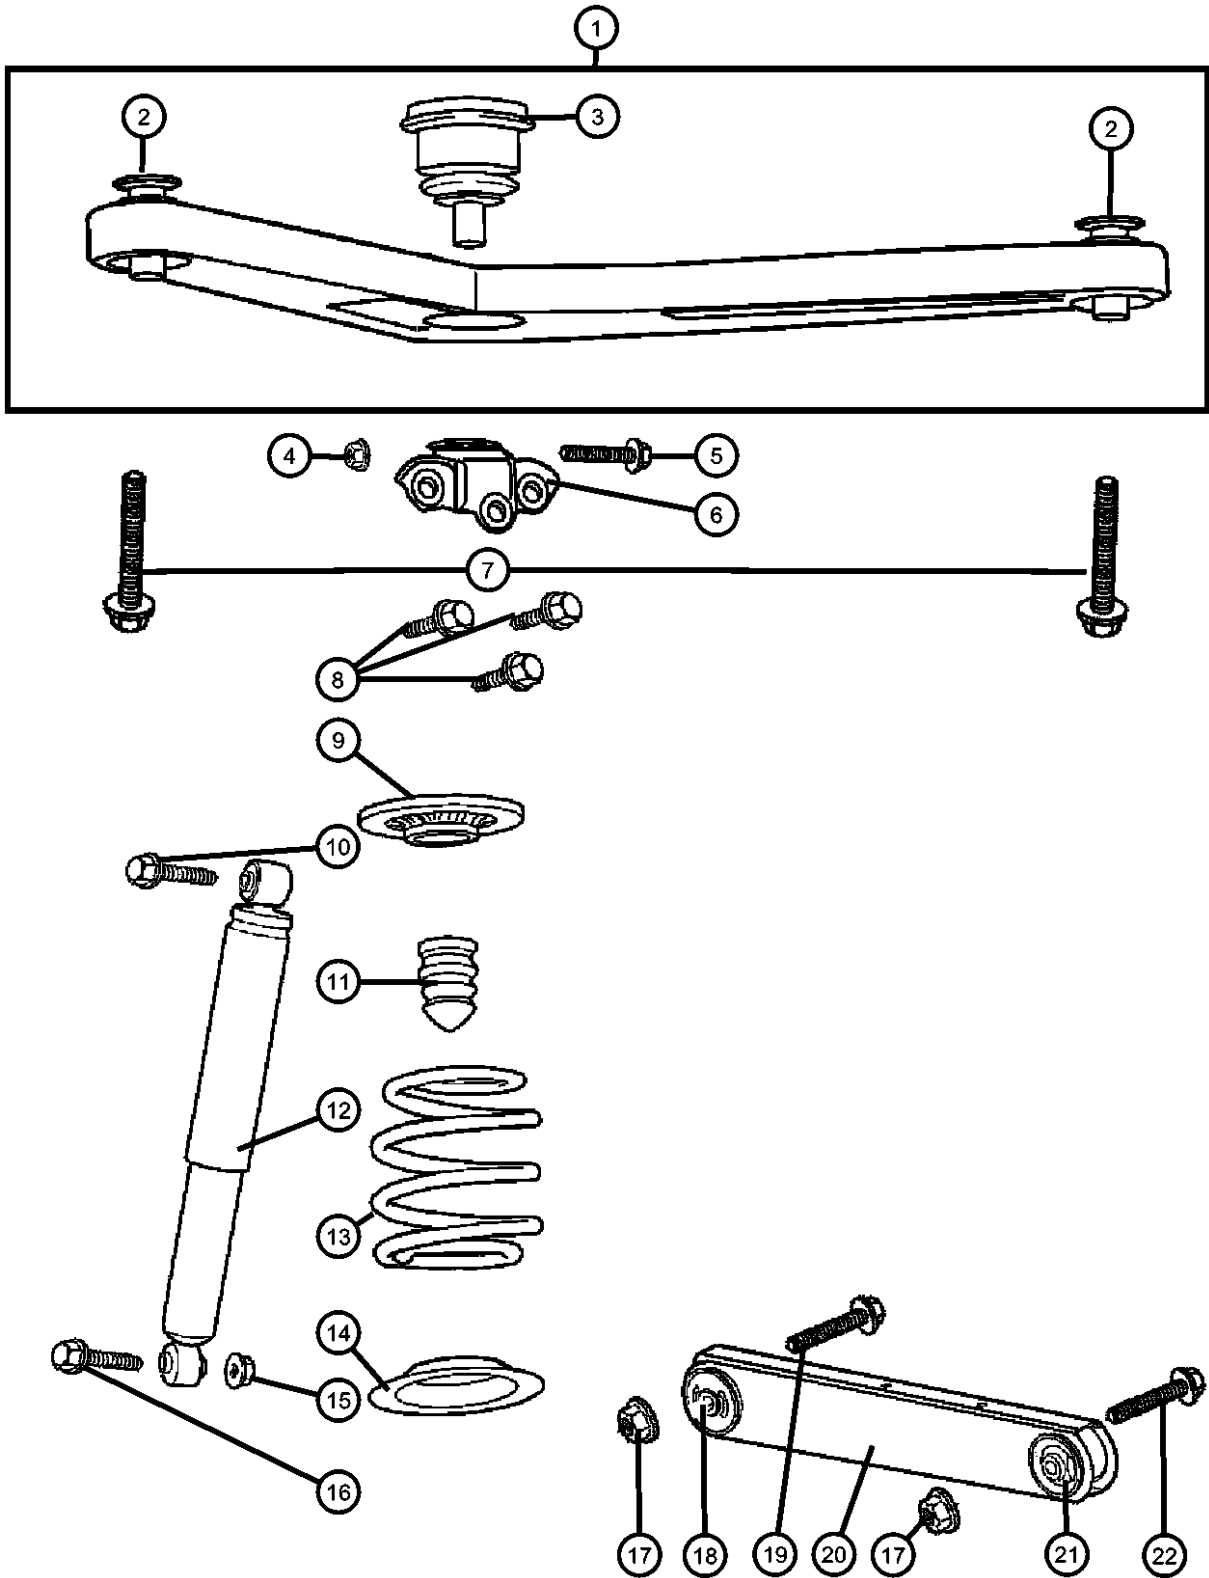

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
16	06505935AA	2							SCREW, Shock Mounting, Lower
17									NUT, M14X2
	06102251AA	2							LCA to Body
		2							LCA to Axle
18	52129094AA	2							BUSHING, Control Arm
19	06504408	2							BOLT, LCA to Axle, Mounting
20	52128866AA	2							ARM, Lower Control, Rear, Includes Items 18,21
21	52128864AA	2							BUSHING, Control Arm, LCA to Body, Mounting
22	06506033AA	2							BOLT, Hex Flange Head, LCA to Body, Mounting


LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Stabilizer Bar,Rear  
Figure 17-210


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	52088677AA	1							STABILIZER BAR, Rear Suspension
2	06101844	4							SCREW AND WASHER, Hex Head, M12x1.75x50, Stabilizer Bar to LCA, Mounting

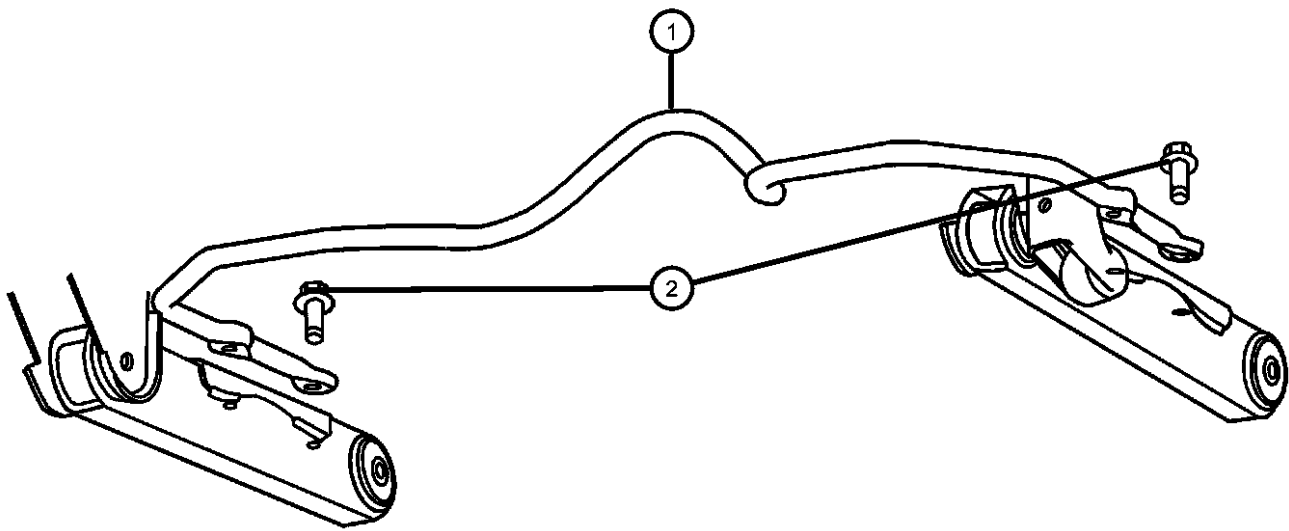

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions






# Group - 19

## Steering


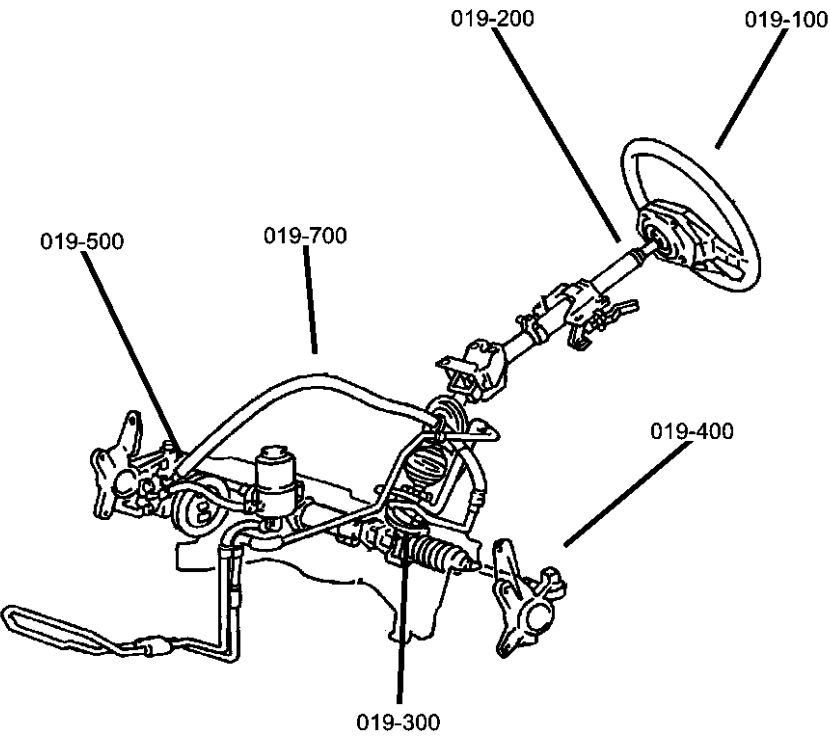


### Group - 19 Steering

Illustration Title	Group-Fig. No.
<b>Steering Wheel</b> Steering Wheel .....	Fig. 19 - 110
<b>Steering Column</b> Column,Steering .....	Fig. 19 - 210
<b>Steering Gear</b> Gear Assembly, Steering, Rack and Pinion .....	Fig. 19 - 310
<b>Power Steering Pump</b> Pump,Power Steering,2.4L [ED0] Gas Engine..... Pump,Power Steering,2.8L [EN0] Diesel Engine .....	Fig. 19 - 510 Fig. 19 - 520
<b>Power Steering Hoses</b> Hoses and Reservoir,LHD,2.4L [ED0] 2.8L [EN0] .....	Fig. 19 - 530 Fig. 19 - 710
Hoses and Reservior, RHD 2.4L [ED0] 2.8L [EN0] .....	Fig. 19 - 720
Hoses and Reservior, LHD, 3.7L [EK0] .....	Fig. 19 - 730
Hoses and Reservior, RHD, 3.7L [EK0] .....	Fig. 19 - 740
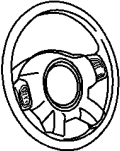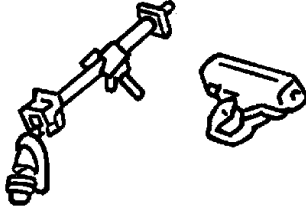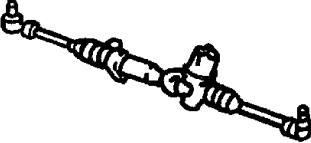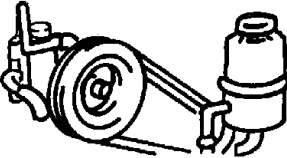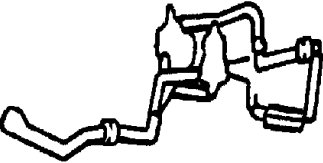
<b>019-100</b> Steering Wheel	<b>019-200</b> Steering Column	<b>019-300</b> Steering Gear	<b>019-500</b> Power Steering Pump
			
<b>019-700</b> Power Steering Hoses			
			

Steering Wheel  
Figure 19-110

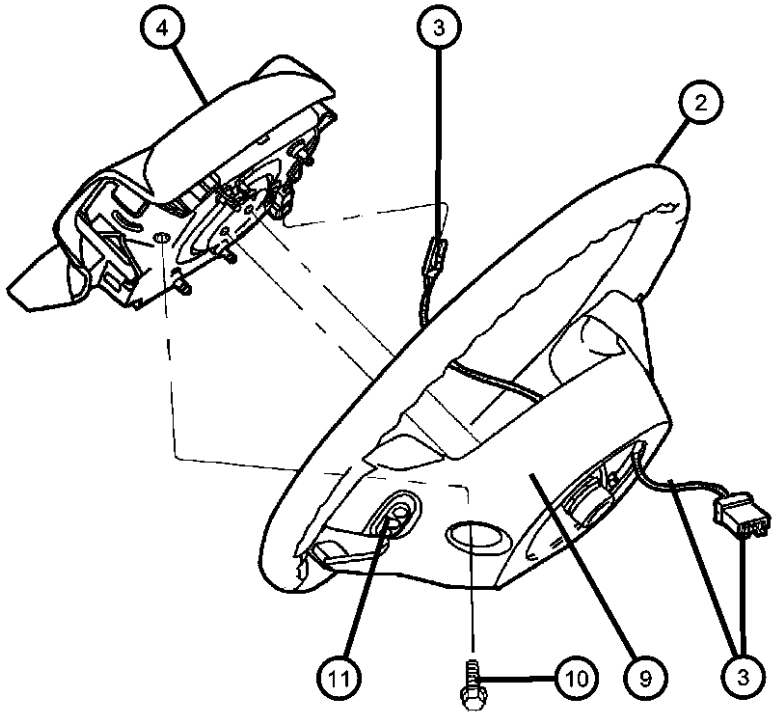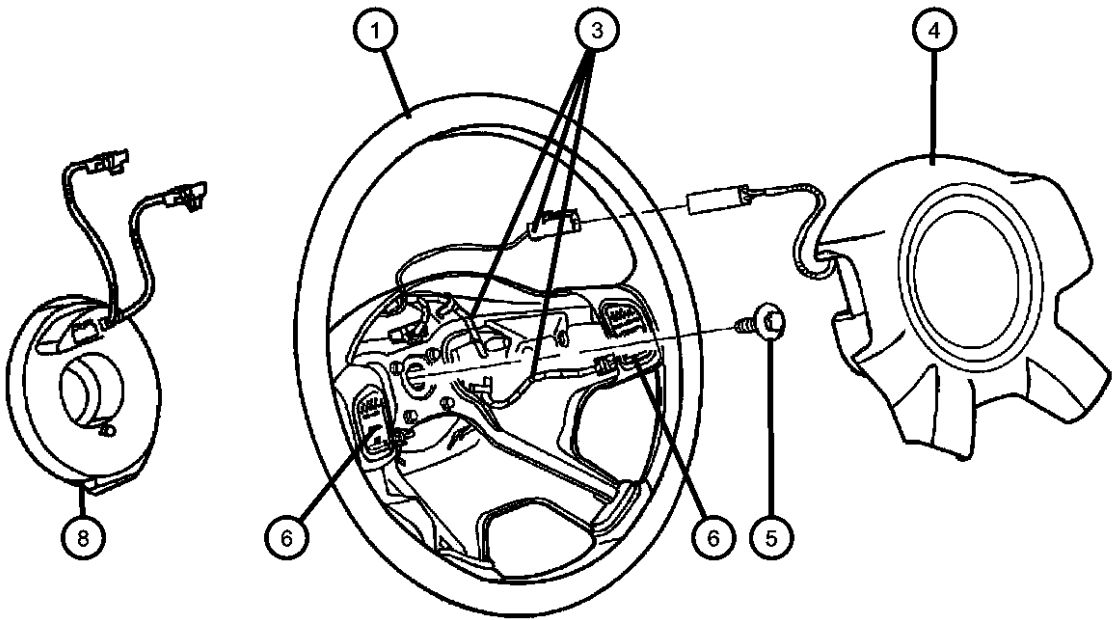

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note:Sales Codes  
[NHM]=Speed Control  
[RDZ]= Audio Controls - Steering Wheel Mounted  
[SCD]= Steering Wheel - Luxury  
[SCG]=Steering Wheel - Leather Wrapped

1	0UR71DX9AC	1							WHEEL, Steering, [SCD]
2	0UR671X9AD	1							WHEEL, Steering, Leather
3									WIRING, Steering Wheel
	56010170AC	1		H, M					[SCG NHM-RDZ]
		1		M, P					[[SCG+NHM+JA2-RDZ]
	56010171AC	1		H, M					[SCG+NHM+RDZ-JA2]
		1		M, P					[SCG+NHM+RDZ+JA2]
4									AIR BAG, Driver
	5JS05DX9AA	1		H, M					
	5JS061X9AB	1		H, M, P					
5	06505656AA	1							SCREW, Hex Flange Head, M10x1.5x35., Steering Wheel to Column, Mounting
6									SWITCH, Speed Control
	56010088AC	1		H, M					Right
	56010089AC	1		H, M					Left
	56010358AB	1		M, P					Right
-7	5GN02DX9AA	1							BEZEL, Steering Wheel, [SCD] Without [NHM], Right
8									CLOCKSPRING
	56010146AF	1							Without [RDZ]
	56010187AG	1							With [RDZ]
9									COVER, Steering Wheel Back
	05083981AA	1		H, M					[SCG+ NHM]
		1		P					
	05086215AA	1		H, M					
		1		P					[SCG+ NHM +RDZ]


LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Steering Wheel  
Figure 19-110

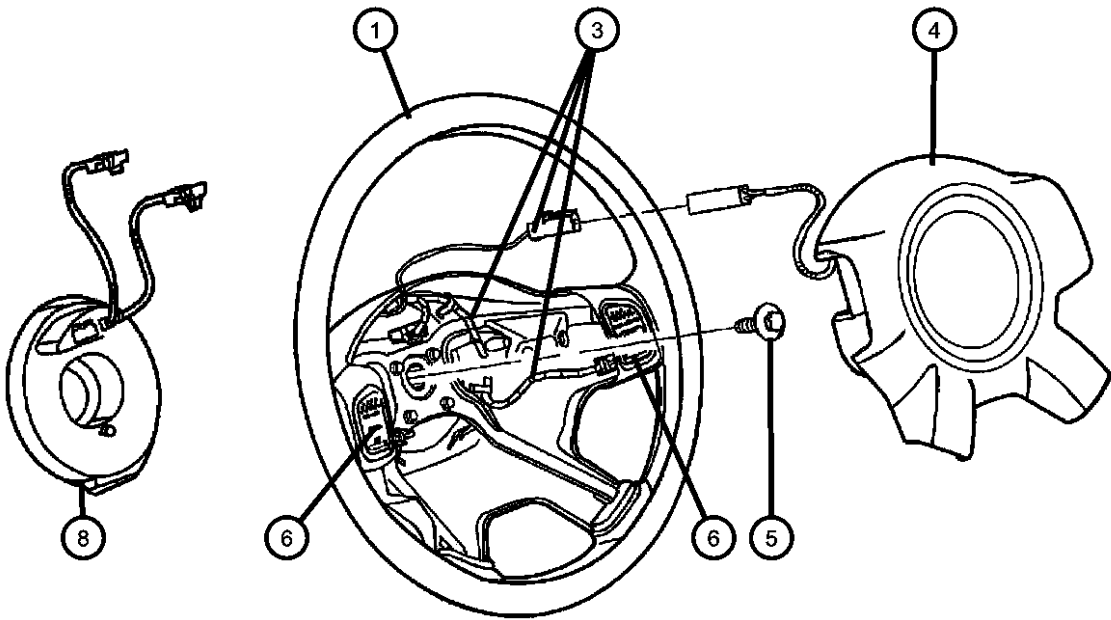


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10	06507854AA	2							SCREW, M6x1x25, Air Bag
11									Module, Mounting
	56042312AB	1		H, M					SWITCH, Remote Radio
		1		P					Radio Control Volume, Right
	56042313AB	1		H, M					Radio Control Volume, Right
		1		P					Radio Control Seek, Left
									Radio Control Seek, Left

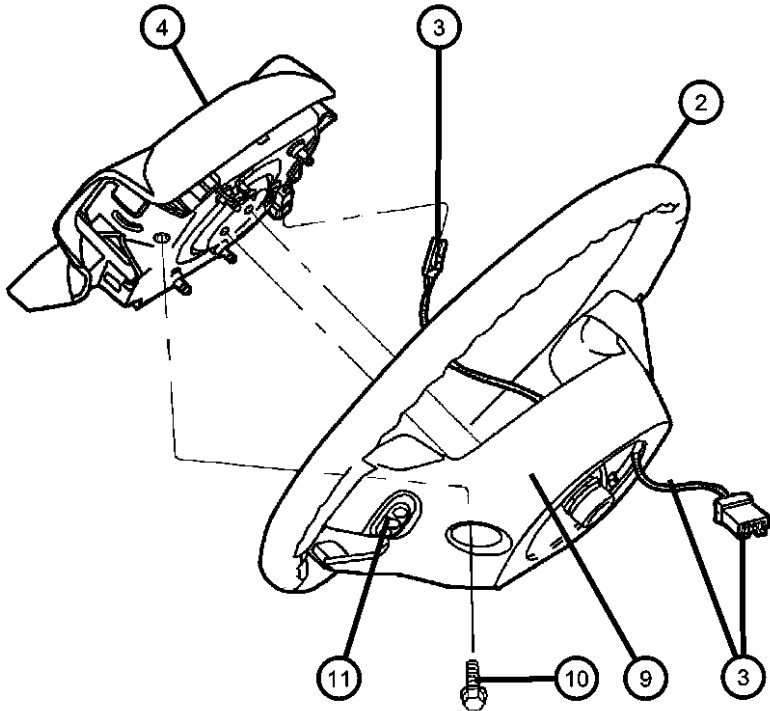


LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

Column,Steering  
Figure 19-210

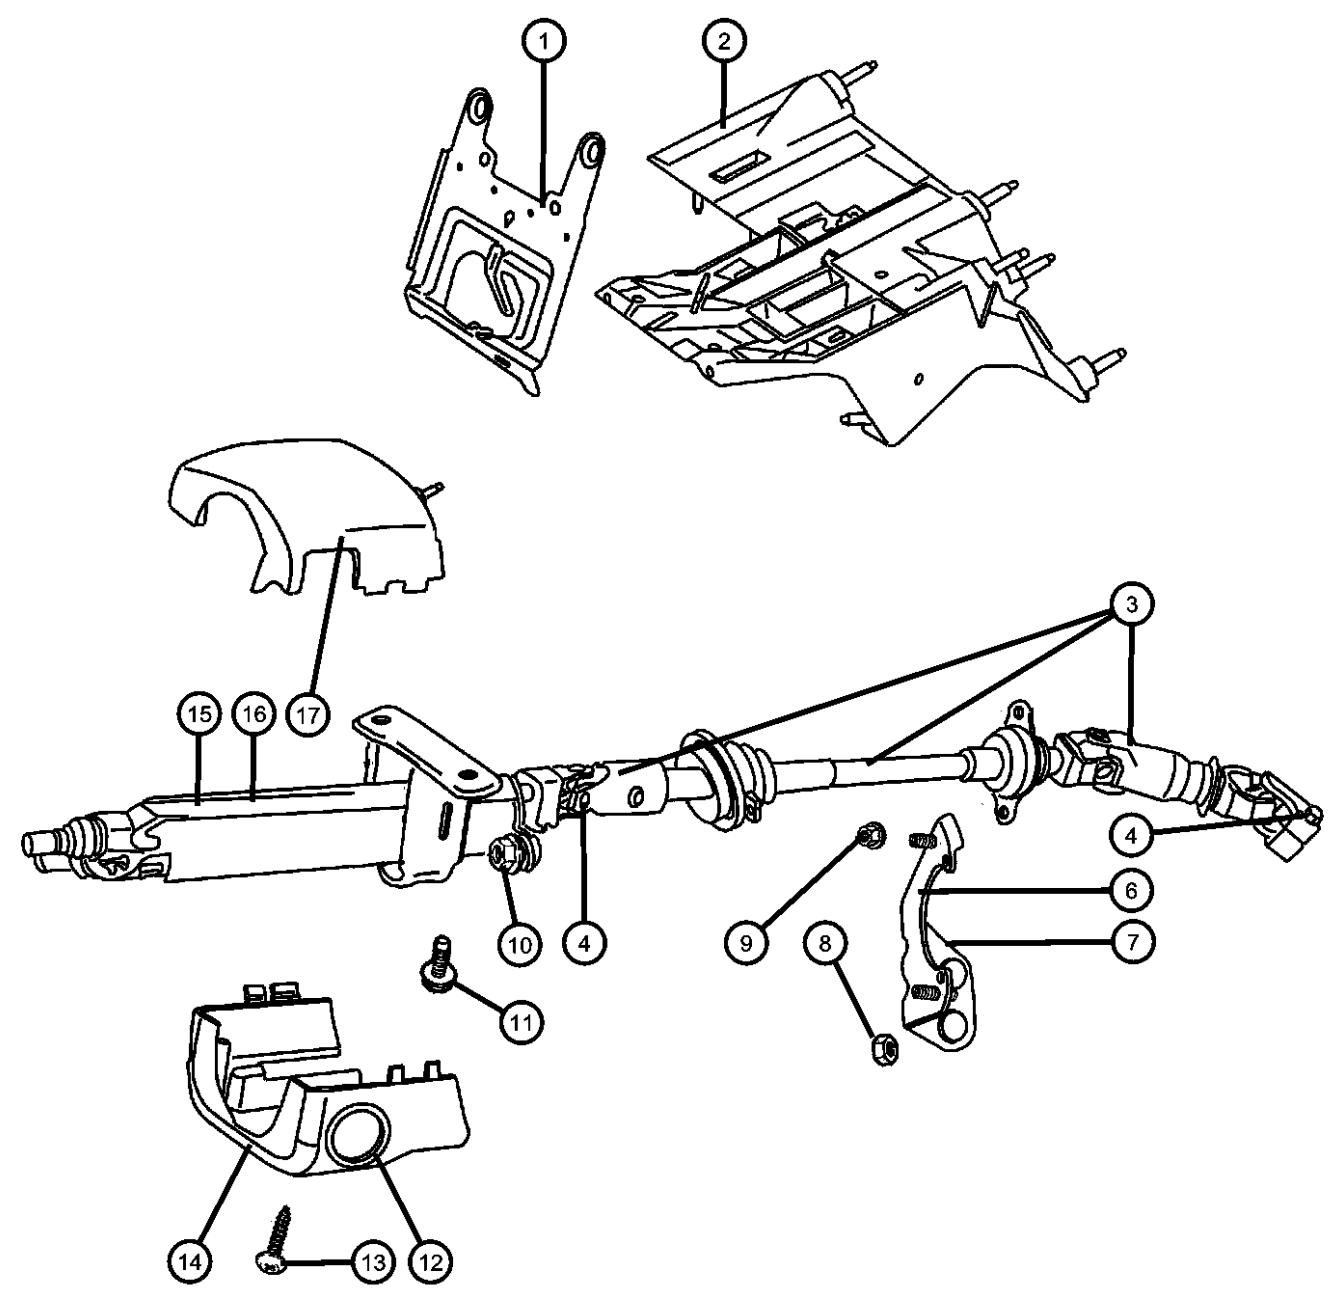ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:Sales Codes; [ABB]=European Equipment Group [DBB]=Transmissions - All Manual [DG0]=Transmissions - All Automatic [ED0]=Engines - All 2.2,2.5,2.4L 4 Cylinder Gas [EK0]= Engines - All 3.7L 6 Cylinder Gas [SUA]=Steering Column - Tilt									
1	55314992AA	1	J, T						BRACKET, Steering Column
	55315011AA	1	U						
2	55314987AA	1	J, T						BRACKET, Steering Column
	55314988AA	1	U						
3	55315022AD	1	J, T			ED0, EK0			SHAFT, Intermediate
	55315024AD	1	U						
	55315057AC	1	U			EN0			Upper
	55315058AA	1	U			EN0			Lower
4	06504926AA	2							SCREW, Hex Flange Head, M10x1.5x40
-5	06502808	2	U						SCREW, M6x1x25, Intermediate Shaft Bracket
6	55315003AB	1	J, T						BRACKET, Intermediate Shaft
7	55315009AA	1	U						BRACKET, Steering Column
8	06100048	2							NUT, Hex, M6x1.00
9	06100516	2							NUT, Hex Flange Lock, M6 Phosphate, Bearing to Bracket
10	06503182	2							NUT AND WASHER, Hex Lock Nut-Coned Teeth Washer, M8 x 1.25, Steering Column Lower, Mounting
11	06506128AA	2							SCREW AND WASHER, Hex Head, Steering Column Upper, Mounting
12	06506128AA	2							TRIM RING, Ignition Key Cylinder, (NOT REQUIRED)
									
<b>LIBERTY (KJ)</b> SERIES LINE BODY ENGINE TRANSMISSION P = Limited J = LHD (4WD) 74 = 4 Door (104.3 WB) ED1 = Engine - 2.4L 4 Cyl DDD = Transmission - 5-Speed HD H = Sport U = RHD (4WD) DOHC 16v SMPI Manual M = Renegade T = LHD (2WD) EKG = Engine - 3.7L V6 DDK = Transmission - 5-Speed HD ENJ = Engine -2.5L 4 Cyl 16v Manual Turbo Diesel DG4 = Transmission-Multi-Speed ENR = Engine - 2.8L 4 Cyl Auto, 45RFE Turbo Diesel DG6 = Transmission-4-Spd. EN0 = 4Cyl Turbo Diesel Automatic, 42RLE EK0 = All 3.7L DGQ = Transmission-5-Spd Automatic ED0 = All 2.4L 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions									


Column,Steering  
Figure 19-210

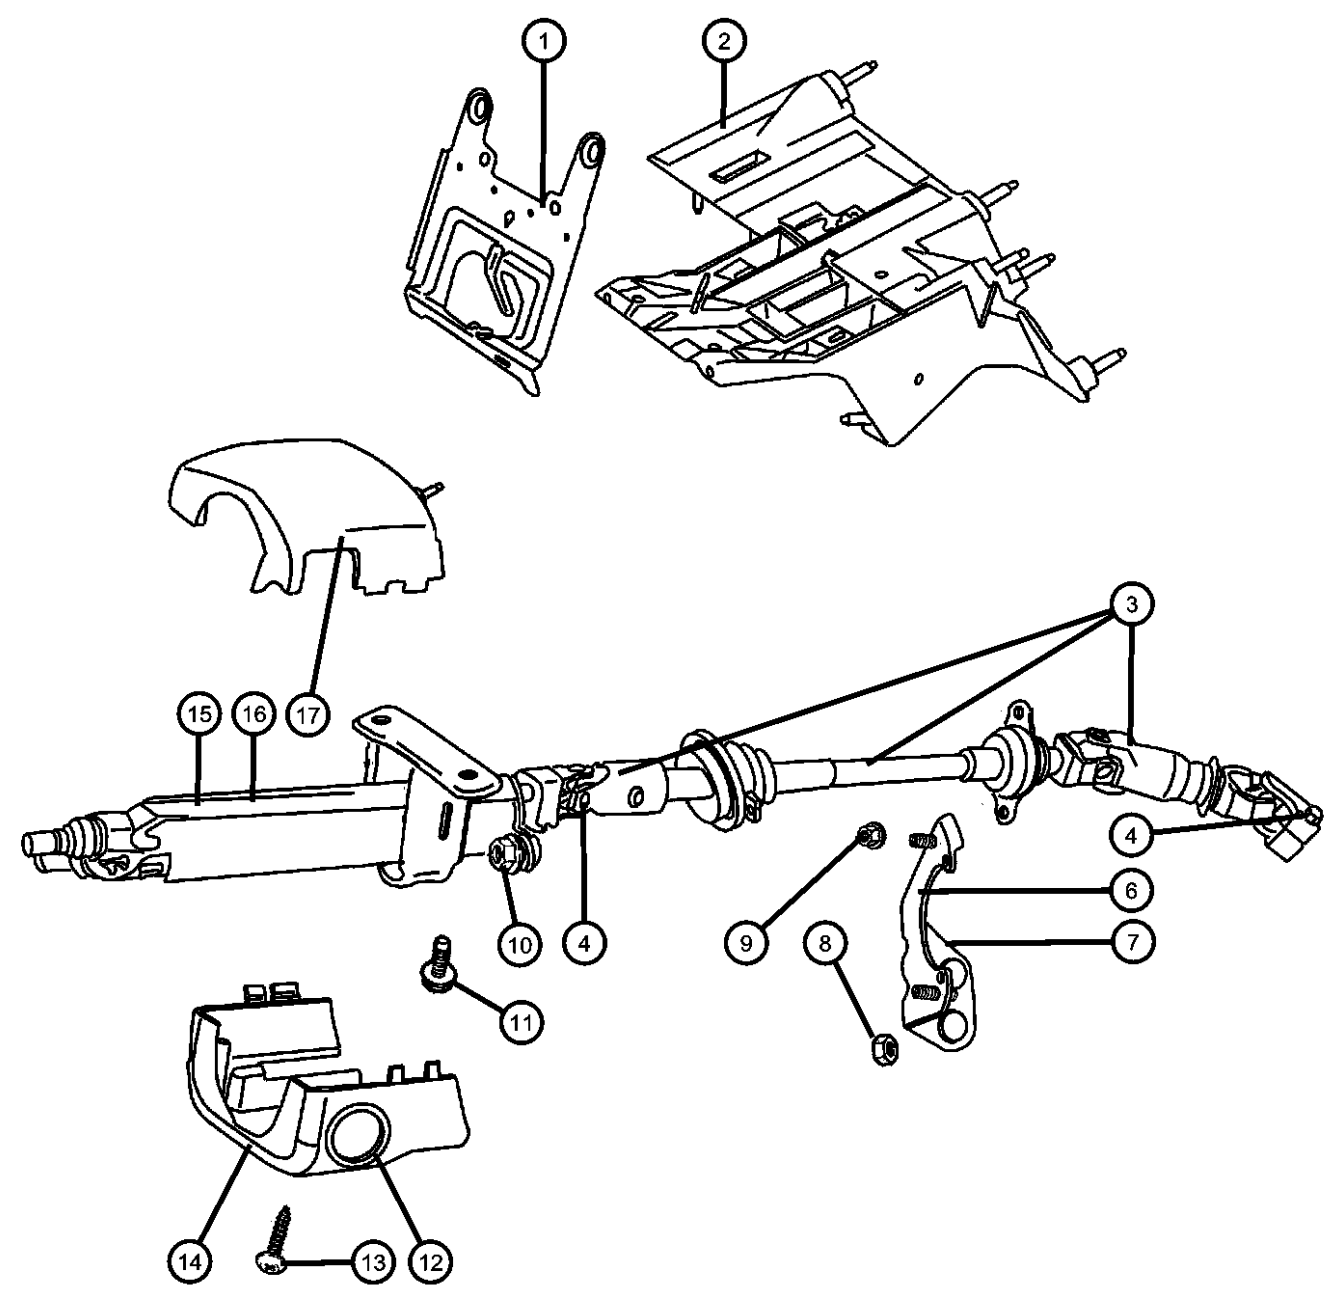	ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	13									SCREW AND WASHER, Pan Head
		06036381AA	2	U						
			2	J, T						
	14									SHROUD, Steering Column
		5GE00DX9AB	1					DBB		Without [SUA] & [DBB]
		5GE04DX9AB	1					DBB		With [SUA] & [DBB]
		5GE06DX9AB	1					DG0		Without [SUA] & [DGO]
		5GE08DX9AB	1					DG0		With [SUA] & [DGO]
	15									COLUMN, Steering, Non tilt
		05057077AA	1					DBB		[DBB]
		05057078AA	1					DG0		[DGO]
	16									COLUMN, Steering, Tilt
		05057079AA	1					DG0		Without [ABB] & [DG0]
		05057080AA	1					DBB		Without [ABB] & [DBB]
		05057081AA	1					DG0		With [ABB] & [DG0]
		05057082AA	1					DBB		With [ABB] & [DBB]
	17									SHROUD, Steering Column
		5GK59DX9AD	1					DBB		[DBB]
			1					DG0		[DGO]

**LIBERTY (KJ)**

SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Gear Assembly, Steering, Rack and Pinion  
Figure 19-310

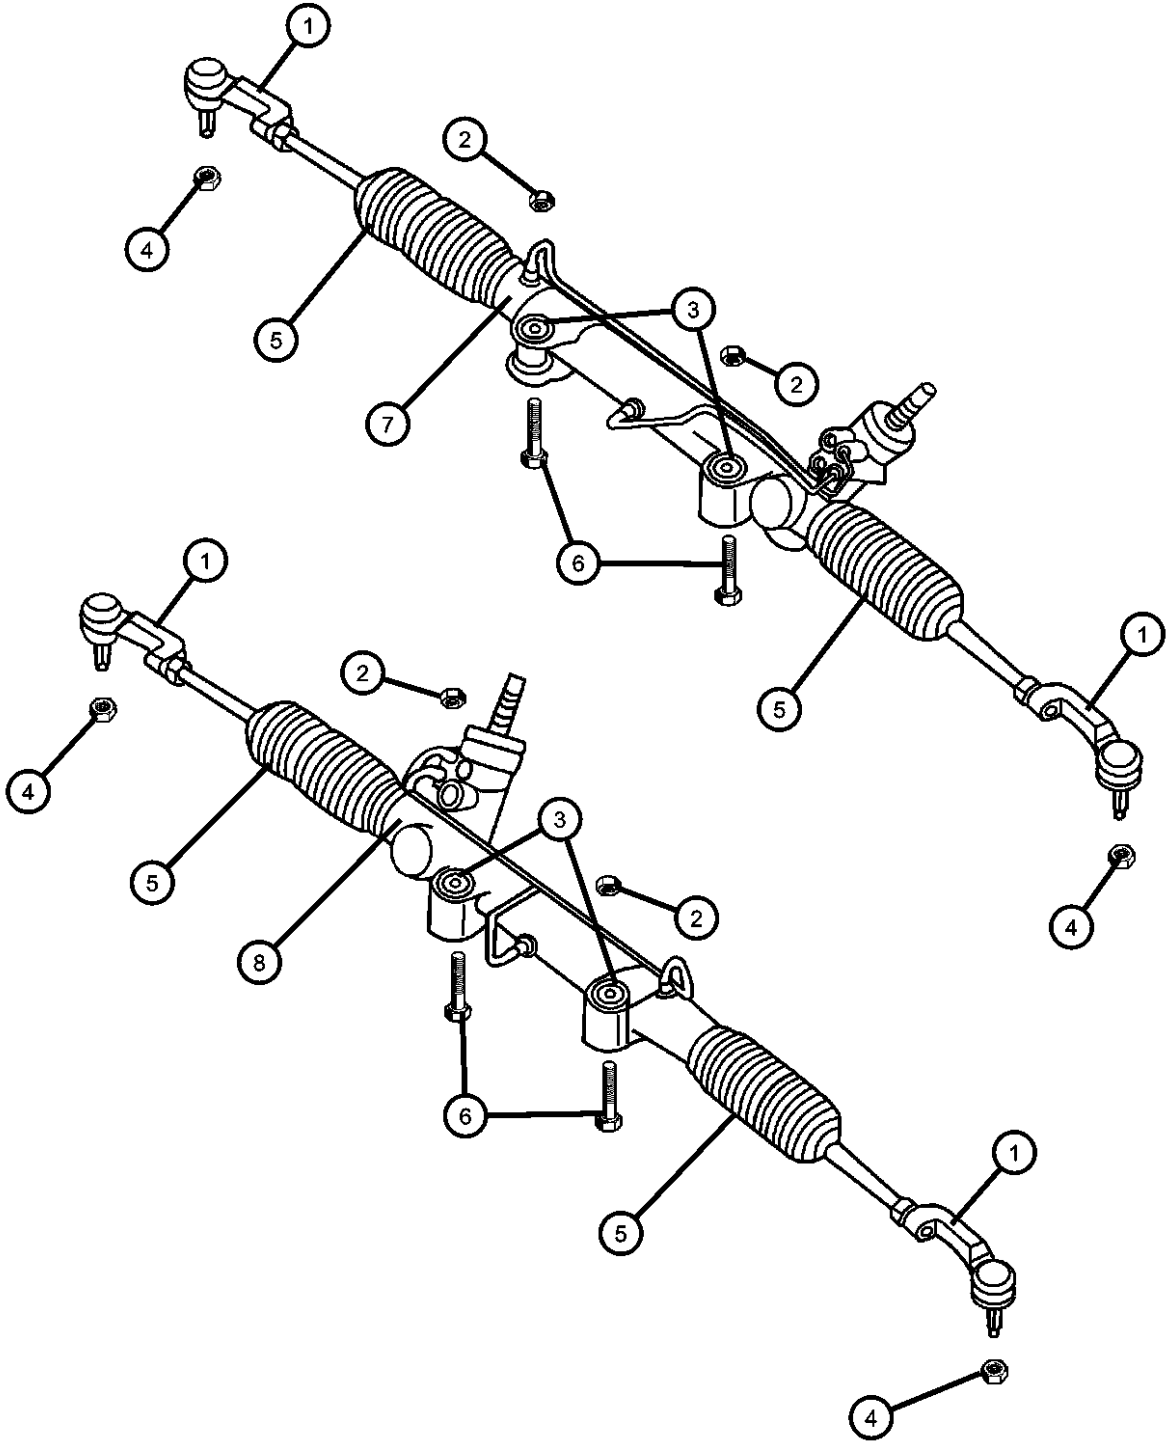

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note:Sales Codes  
[ED0]=Engines - All 2.2, 2.5, 2.4L 4 Cylinder Gas  
[EK0]=Engines - All 3.7L 6 Cylinder Gas  
[EN0]=Engines - All 4/5 Cylinder Turbo Diesel

1									SOCKET PACKAGE, Tie Rod End, Outer
	05072444AA	1	J			EK0			Right
		1	J			ED0			Right
		1	U			EK0			Right
		1	T			EK0			Right
		1	U			ED0			Right
		1	T			ED0			Right
		1	J			EN0			Right
		1	U			EN0			Right
	05072445AA	1	T			EK0			[-NHF], Right
		1	J			EK0			Left
		1	J			ED0			Left
		1	U			EK0			Left
		1	T			EK0			NHF, Left
		1	U			ED0			Left
		1	T			ED0			Left
		1	J			EN0			Left
		1	U			EN0			Left
		1	T			EK0			Left
2									NUT
	06504707	2	J			EK0			Gear to Cradle, Mounting
		2	J			ED0			Gear to Cradle, Mounting
		2	U			EK0			Gear to Cradle, Mounting
		2	T			EK0			Gear to Cradle, Mounting
		2	U			ED0			Gear to Cradle, Mounting
		2	T			ED0			Gear to Cradle, Mounting
		2	J			EN0			Gear to Cradle, Mounting

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Gear Assembly, Steering, Rack and Pinion  
Figure 19-310

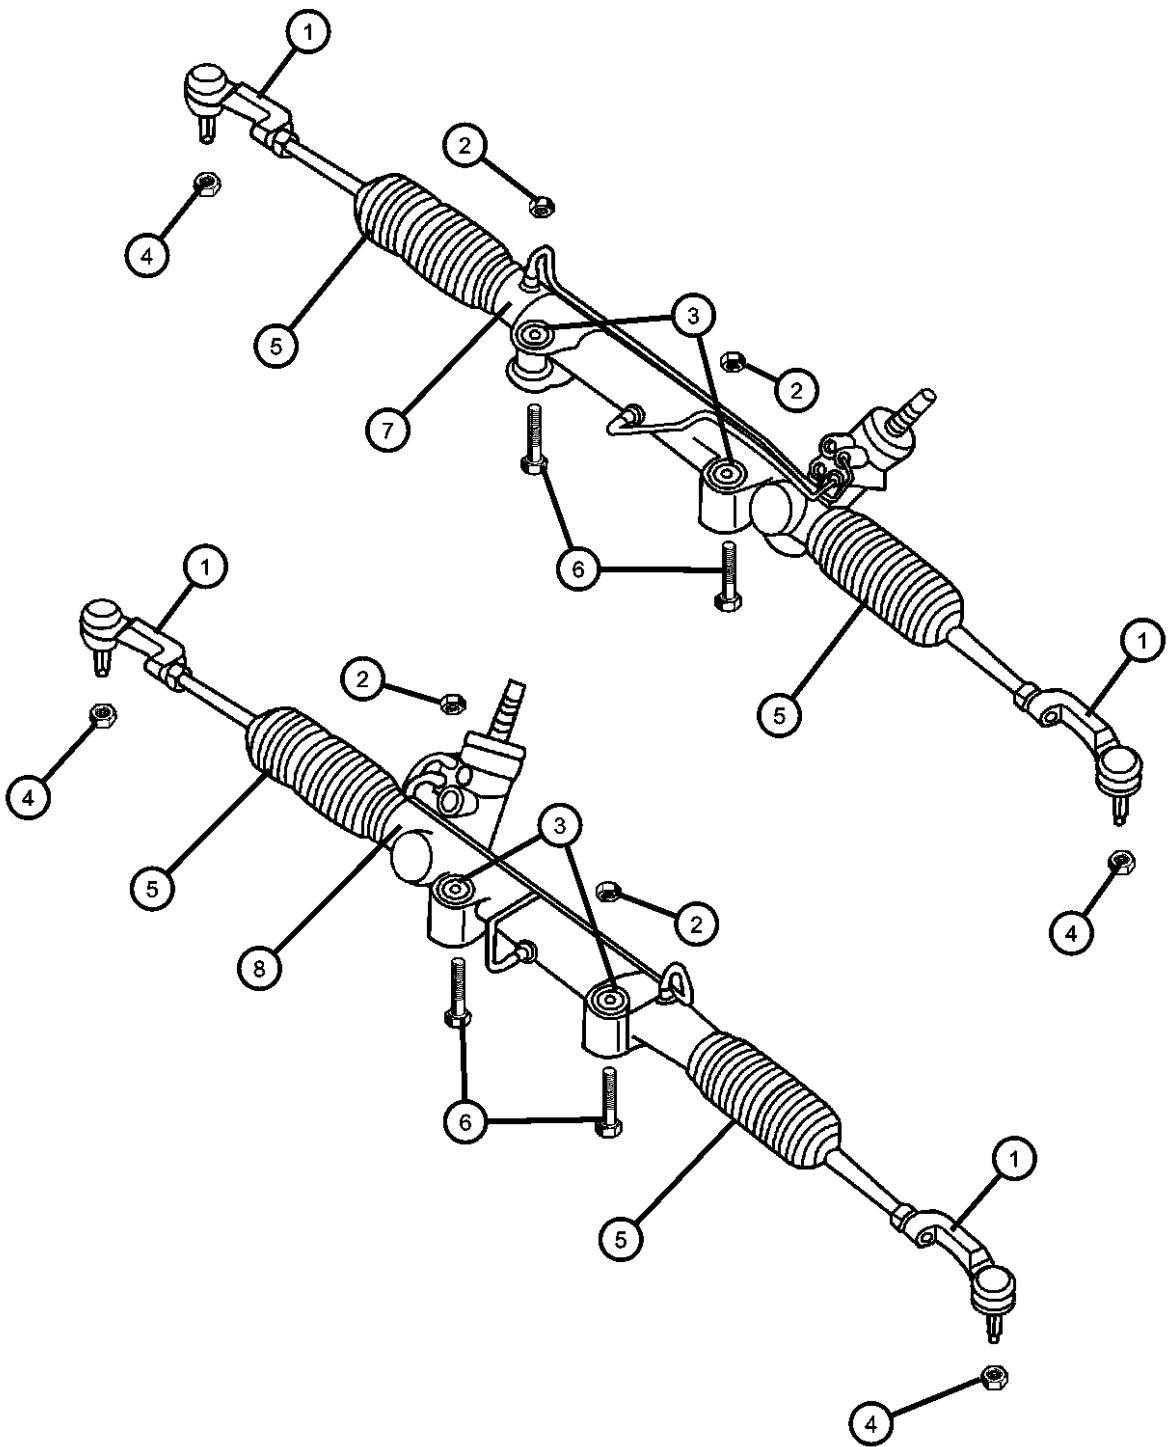


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
3	52038783AB	2	U			EN0			Gear to Cradle, Mounting
									BUSHING, Steering Gear
		2	J			EK0			Gear to Cradle, Mounting
		2	J			ED0			Gear to Cradle, Mounting
		2	U			EK0			Gear to Cradle, Mounting
		2	T			EK0			Gear to Cradle, Mounting
		2	U			ED0			Gear to Cradle, Mounting
		2	T			ED0			Gear to Cradle, Mounting
		2	J			EN0			Gear to Cradle, Mounting
		2	U			EN0			Gear to Cradle, Mounting
4	06505623AA	2							NUT AND WASHER, Tie Rod, Mounting
5	06505623AA	2							BOOT KIT, Repair, (NOT SERVICED)
6	06506517AA								BOLT AND WASHER
		2	J			EK0			Gear to Cradle, Mounting
		2	J			ED0			Gear to Cradle, Mounting
		2	U			EK0			Gear to Cradle, Mounting
		2	T			EK0			Gear to Cradle, Mounting
		2	U			ED0			Gear to Cradle, Mounting
		2	T			ED0			Gear to Cradle, Mounting
		2	J			EN0			Gear to Cradle, Mounting
		2	U			EN0			Gear to Cradle, Mounting
									RACK, Steering Gear
7	52128517AC	1	J			EK0			
		1	T			EK0			
		1	J			ED0			
		1	T			ED0			
		1	J			EN0	DG0		
		1	J			EN0	DBB		
8									RACK, Steering Gear

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions



Gear Assembly, Steering, Rack and Pinion  
Figure 19-310

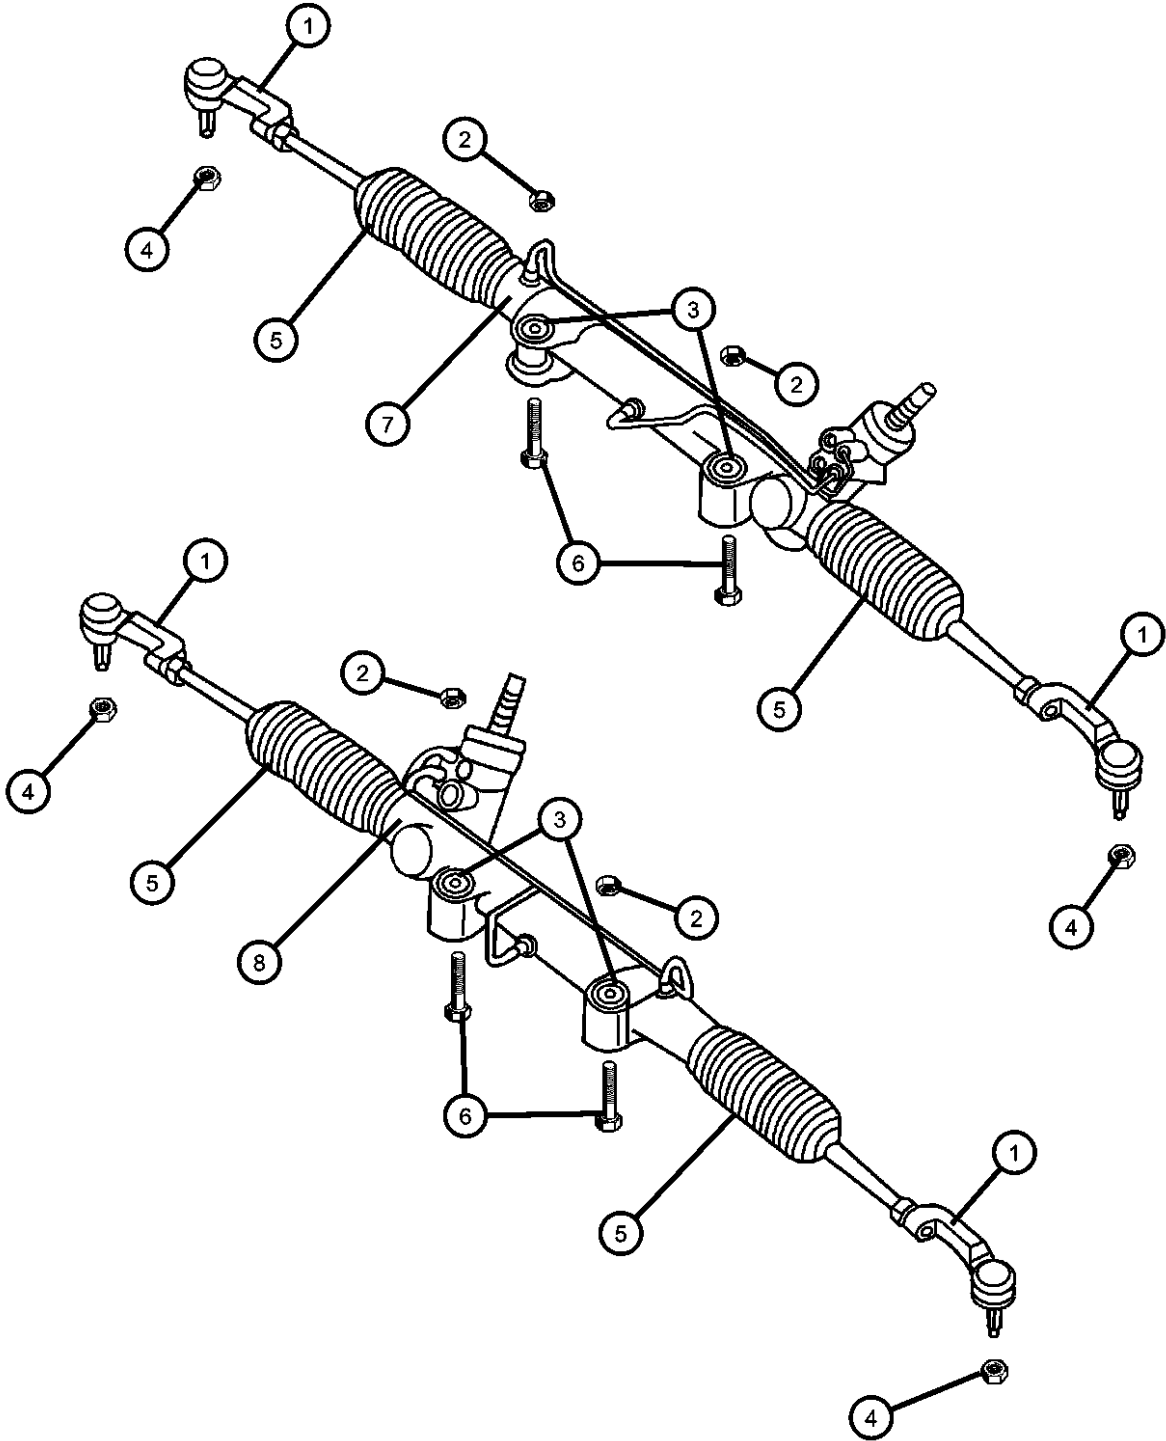


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	52128518AC	1	U			EK0			
	52128588AC	1	U			ED0			
		1	U			EN0	DG0		
		1	U			EN0	DBB		
-9	52128548AA	1	U			ED0, EN0			FITTING, Quick Connect

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


Pump,Power Steering,2.4L [ED0] Gas Engine  
Figure 19-510

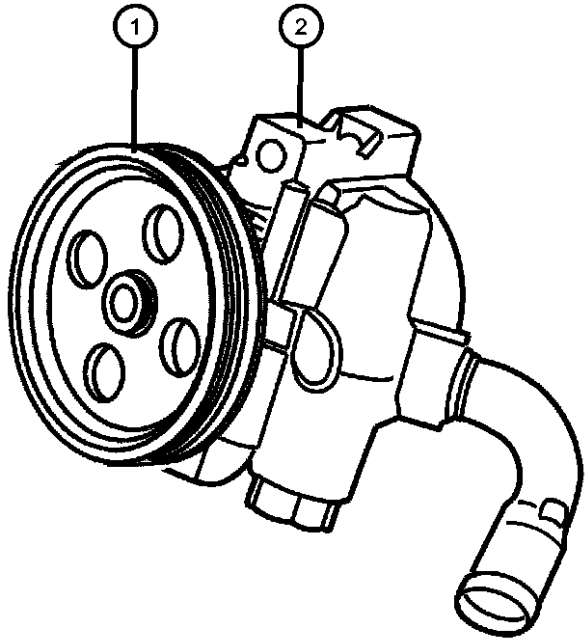

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: Sales Codes; [ED0]=Engines - All 2.2, 2.5, 2.4L 4 Cylinder Gas									
1	53031722AA	1				ED0			PULLEY, Power Steering Pump
2	52088711AC	1				ED0			PUMP, Power Steering
	05166226AA								Mopar Power Steering Fluid Pint
-3	06102097AA	3				ED0			BOLT
-4									BRACKET, Power Steering
	52089289AA	1	J			ED0			
		1	T			ED0			
-5									BRACKET, Power Steering
	52128516AB	2	J			ED0			
		2	T			ED0			

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

Pump,Power Steering,2.8L [EN0] Diesel Engine  
Figure 19-520

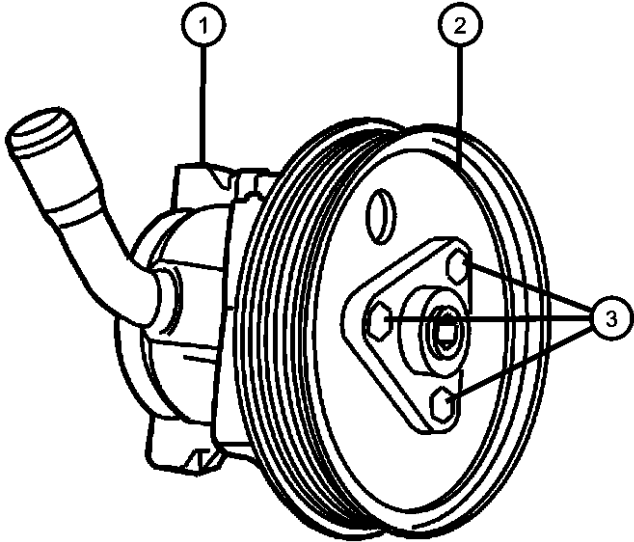

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:Sales Codes; [DBB]=Transmissions - All Manual [EN0]=Engines - All 2.8L 4 Cylinder Turbo Diesel									
1	52088712AC	1				EN0	DG0		PUMP, Power Steering, High Temperature Mopar Power Steering Fluid Pint
	05166226AA								
2	05072441AA	1				EN0	DG0		PULLEY, Power Steering Pump
3									SCREW
	06506245AA	1	T				DG6		Pump to pulley
		1	J, U				DG6		Pump to pulley
-4	05093935AA	1				EN0	DG0		BRACKET, Tensioner
-5	04864537	3				EN0	DG0		BOLT, 8Mx20, Pump to Bracket
-6									BRACKET, Power Steering
	52089289AA	2	J			EN0			
		1	U			EN0			


LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Pump,Power Steering,3.7L [EK0] Gas Engine  
Figure 19-530

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:Sales Codes:  
[EK0]=Engines - All 3.7L 6 Cylinder Gas


1	52088710AC 05166226AA	1				EK0			PUMP, Power Steering Mopar Power Steering Fluid Pint
2	52128513AA	1				EK0			CAP, Power Steering Reservoir
3	53010258AC	1				EK0			PULLEY, Power Steering Pump
-4	06102045AA	3				EK0			SCREW AND WASHER, Hex Head, Power Steering Pump Mounting

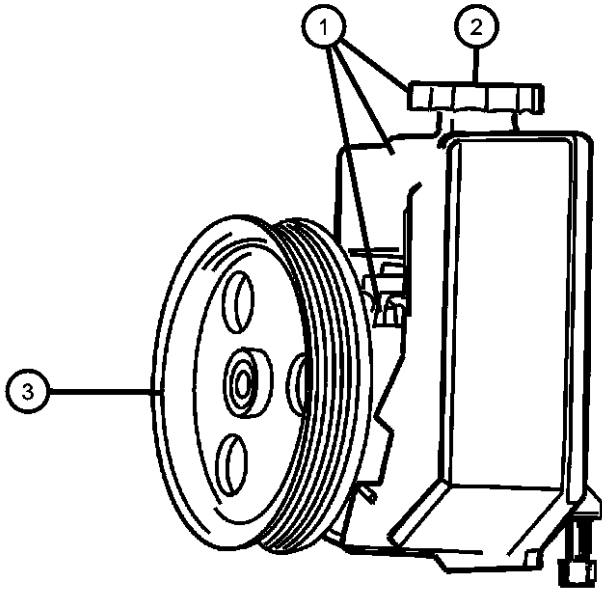

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Hoses and Reservoir,LHD,2.4L [ED0] 2.8L [EN0]  
Figure 19-710

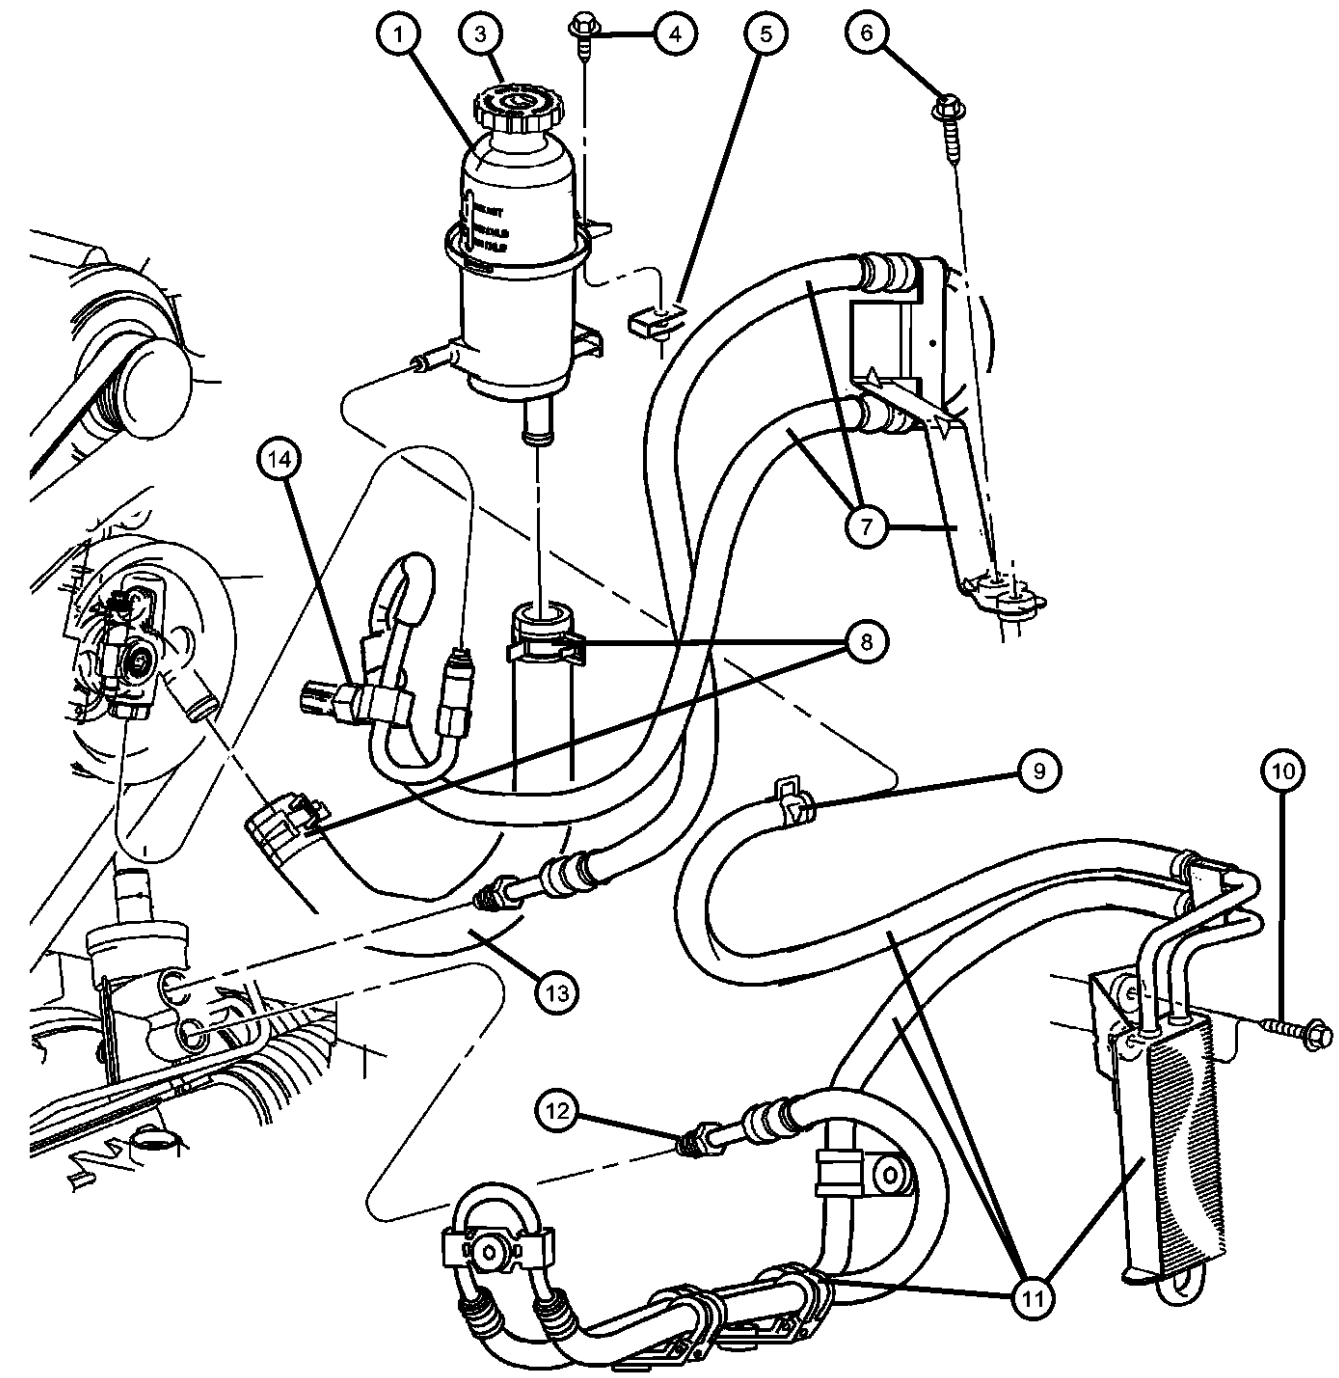


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Codes;  
[ED0]=Engines - All 2.2, 2.5, 2.4L 4 Cylinder Gas  
[EN0]=Engines - All 2.8L 4 Cylinder Turbo Diesel

1									RESERVOIR, Power Steering Pump
	52088713AA	1				ED0			Includes Item 3
		1				EN0			Includes Item 3
-2	52088874AD	1				EN0			BRACKET, Power Steering Reservoir
3									CAP, Power Steering Reservoir
	52128513AA	1				ED0			
		1				EN0			
4	06102132AA	1				ED0, EN0			SCREW, Hex Head, M6x1x20 Reservoir To Bracket
5	06101712	2							NUT, U, M6x1.00
6	06101712	2							SCREW, Hex Head, M6x1x35, Pressure Hose Mounting (Qty 2), (NOT SERVICED)
7									HOSE, Power Steering Pressure
	52088716AE	1	U			EN0			
	52088726AE	1	J			EN0			Includes Item 12
	52128786AA	1	J, T			ED0			
	52128787AA	2	U			ED0			
8									CLAMP, Hose, M28.9 x 1.60
	06502018	2				ED0			
		2				EN0			
9	06504217	1	J			EN0			CLAMP, Hose, M18.5
10	06504217	1							SCREW, Hex Head, M6x1x35, Cooler Mounting (Qty 2), (NOT SERVICED)
11									COOLER, Power Steering With Hose
	52088931AE	1	J			EN0			Includes Items 9,12
	52128561AB	1	J			ED0			Includes Items 9,12
		1	T			ED0			Includes Items 9,12


LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

Hoses and Reservoir,LHD,2.4L [ED0] 2.8L [EN0]  
Figure 19-710

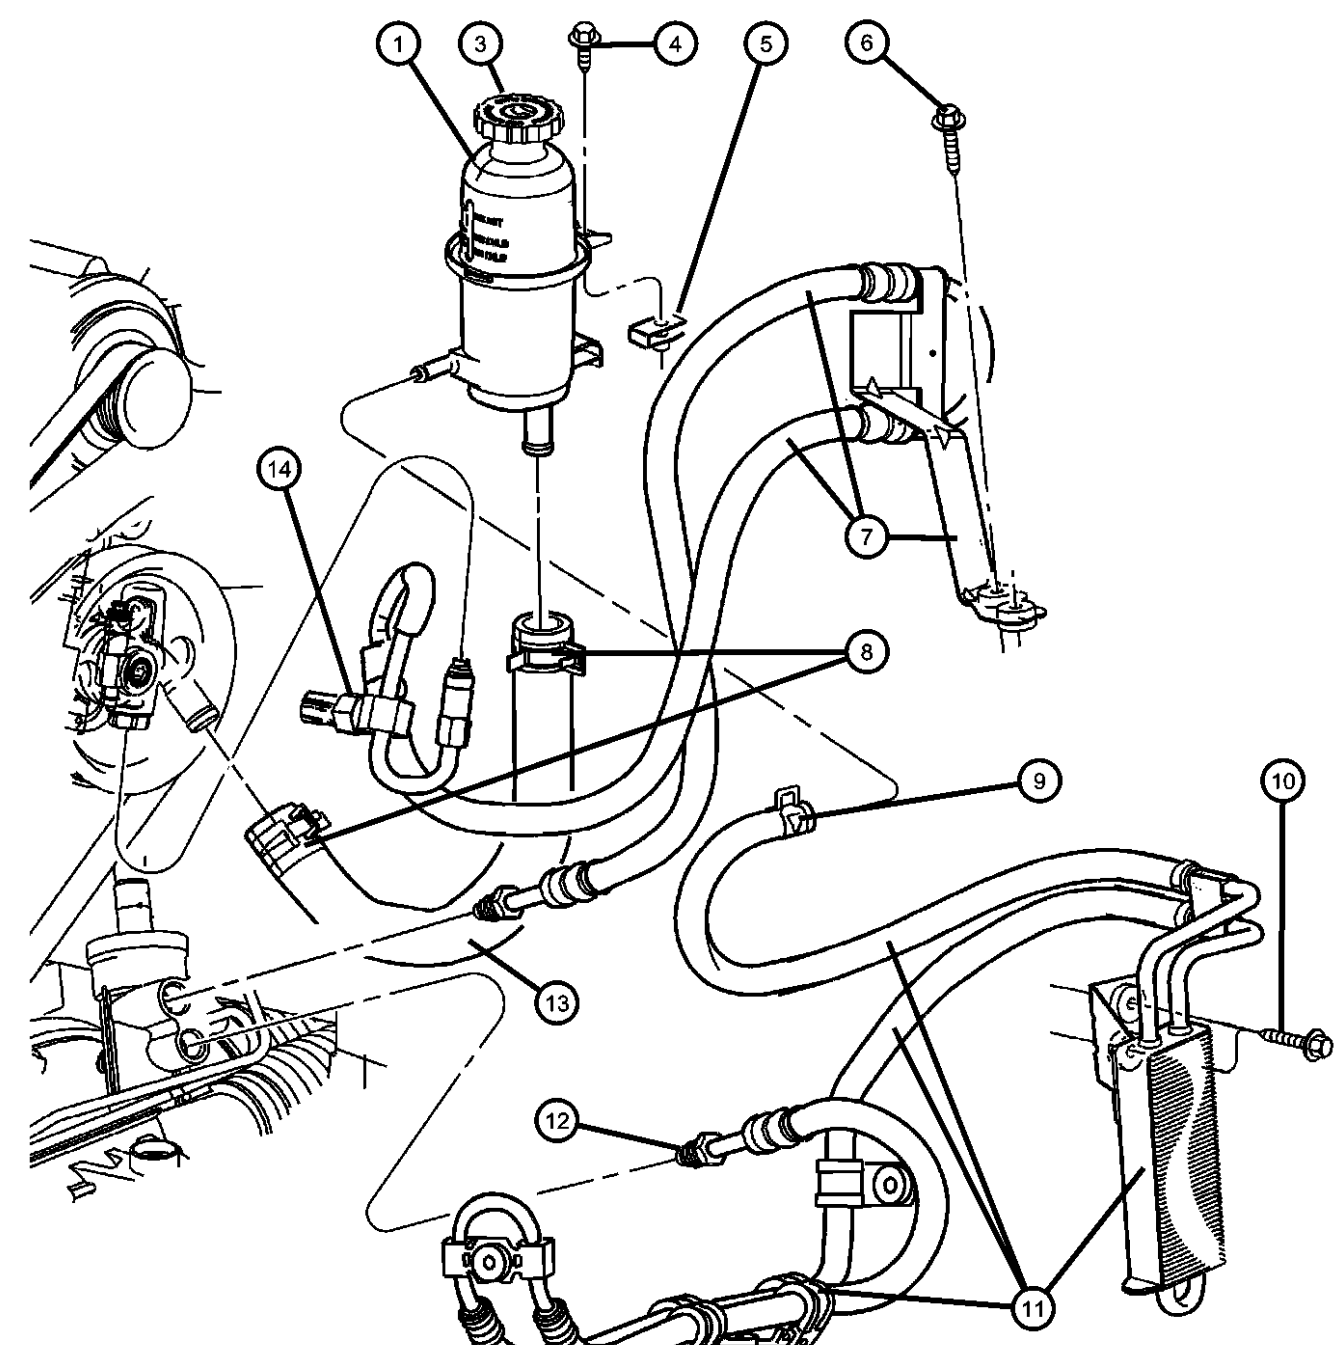										ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
										12	05205254	1	J			EK0			O RING, Power Steering Hose
												1	T			EK0			As Required
												1	U			EN0			As Required
										13	52088718AD	1				ED0			HOSE, Power Steering Reservoir
											52088719AE	1				EN0			Includes Item 8, Reservoir To Pump
																			Includes Item 8, Reservoir To Pump
										14	56044169AA	1	J, T			ED0			SWITCH, Power Steering
										<div>LIBERTY (KJ)</div> <div><div>SERIES</div><div>P = Limited</div><div>H = Sport</div><div>M = Renegade</div></div> <div><div>LINE</div><div>J = LHD (4WD)</div><div>U = RHD (4WD)</div><div>T = LHD (2WD)</div></div> <div><div>BODY</div><div>74 = 4 Door (104.3 WB)</div></div> <div><div>ENGINE</div><div>ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI</div><div>EKG = Engine - 3.7L V6</div><div>ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel</div><div>ENR = Engine - 2.8L 4 Cyl Turbo Diesel</div><div>EN0 = 4Cyl Turbo Diesel</div><div>EK0 = All 3.7L</div><div>ED0 = All 2.4L</div></div> <div><div>TRANSMISSION</div><div>DDD = Transmission - 5-Speed HD Manual</div><div>DDK = Transmission - 5-Speed HD Manual</div><div>DG4 = Transmission-Multi-Speed Auto, 45RFE</div><div>DG6 = Transmission-4-Spd. Automatic, 42RLE</div><div>DGQ = Transmission-5-Spd Automatic 5-45RFE</div><div>DBB = All Manual Transmissions</div><div>DG0 = All Automatic Transmissions</div></div>									

AR = use ase required - = Non illustrated part

Hoses and Reservoir, RHD 2.4L [ED0] 2.8L [EN0]  
Figure 19-720

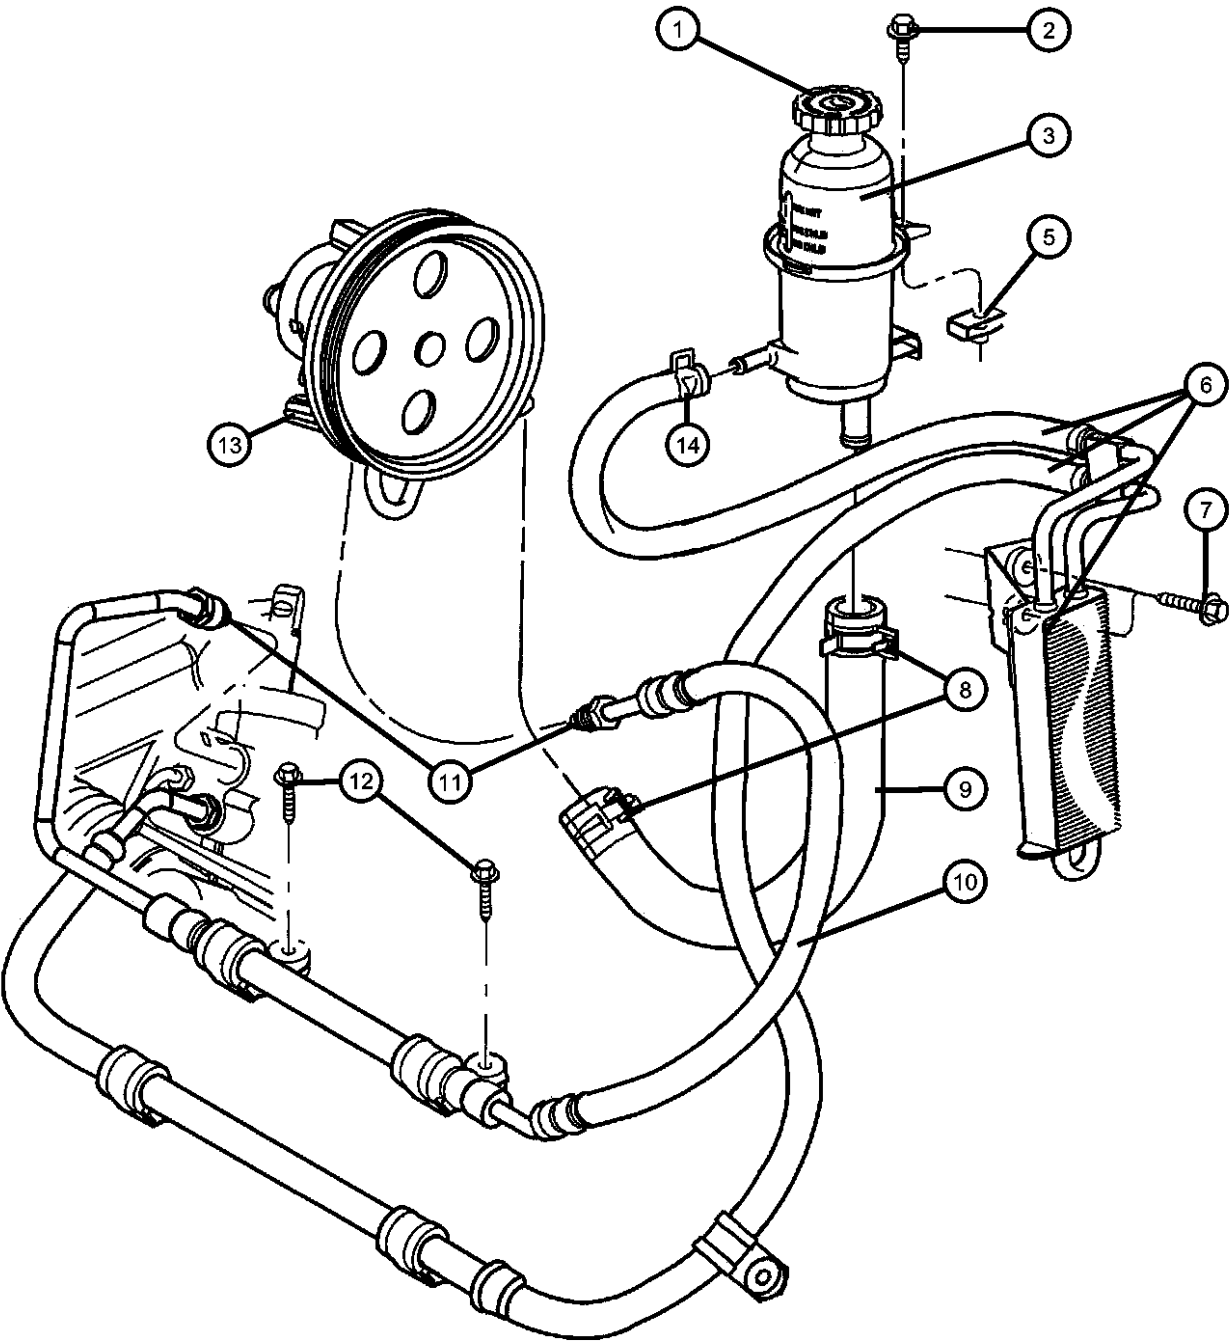

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: Sales Codes; [ED0]=Engines - All 2.2, 2.5, 2.4L 4 Cylinder Gas [EK0]=Engines - All 3.7L 6 Cylinder Gas [EN0]=Engines - All 2.8L 4 Cylinder Turbo Diesel									
1	52128513AA	1				ED0			CAP, Power Steering Reservoir
		1				EN0			
2	06102132AA	1				ED0, EN0			SCREW, Hex Head, M6x1x20
3	52088713AA	1				ED0			RESERVOIR, Power Steering Pump
		1				EN0			Includes Item 4
-4	52088874AD	1				EN0			BRACKET, Power Steering Reservoir
5	06101712	2							NUT, U, M6x1.00
6	52088928AE	1	U			EN0			COOLER, Power Steering With Hose, Includes Items 1,12
7	52088928AE	1							SCREW, Hex Flange Head, M6x1.00x35.00, (NOT SERVICED)
8	06502018	2				ED0			CLAMP, Hose, M28.9 x 1.60
		2				EN0			
9	52088718AD	1				ED0			HOSE, Power Steering Reservoir
	52088719AE	1				EN0			Includes Item 9
10	52088716AE	1	U			EN0			HOSE, Power Steering Pressure
	52128787AA	1	U			ED0			Includes Items 12,14
11	05205254	1	U			EN0			O RING, Power Steering Hose
		1	U			ED0			
12		1							SCREW, Hex Flange Head, M6x1.00x35.00, (NOT SERVICED)
13	56044169AA	1	U			ED0			SWITCH, Power Steering


LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION
SERIES	LINE					
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L		DBB = All Manual Transmissions
				ED0 = All 2.4L		DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Hoses and Reservoir, RHD 2.4L [ED0] 2.8L [EN0]  
Figure 19-720

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


14									CLAMP, Hose, M18.5
	06504217	2	U			ED0			
		1	U			EN0			

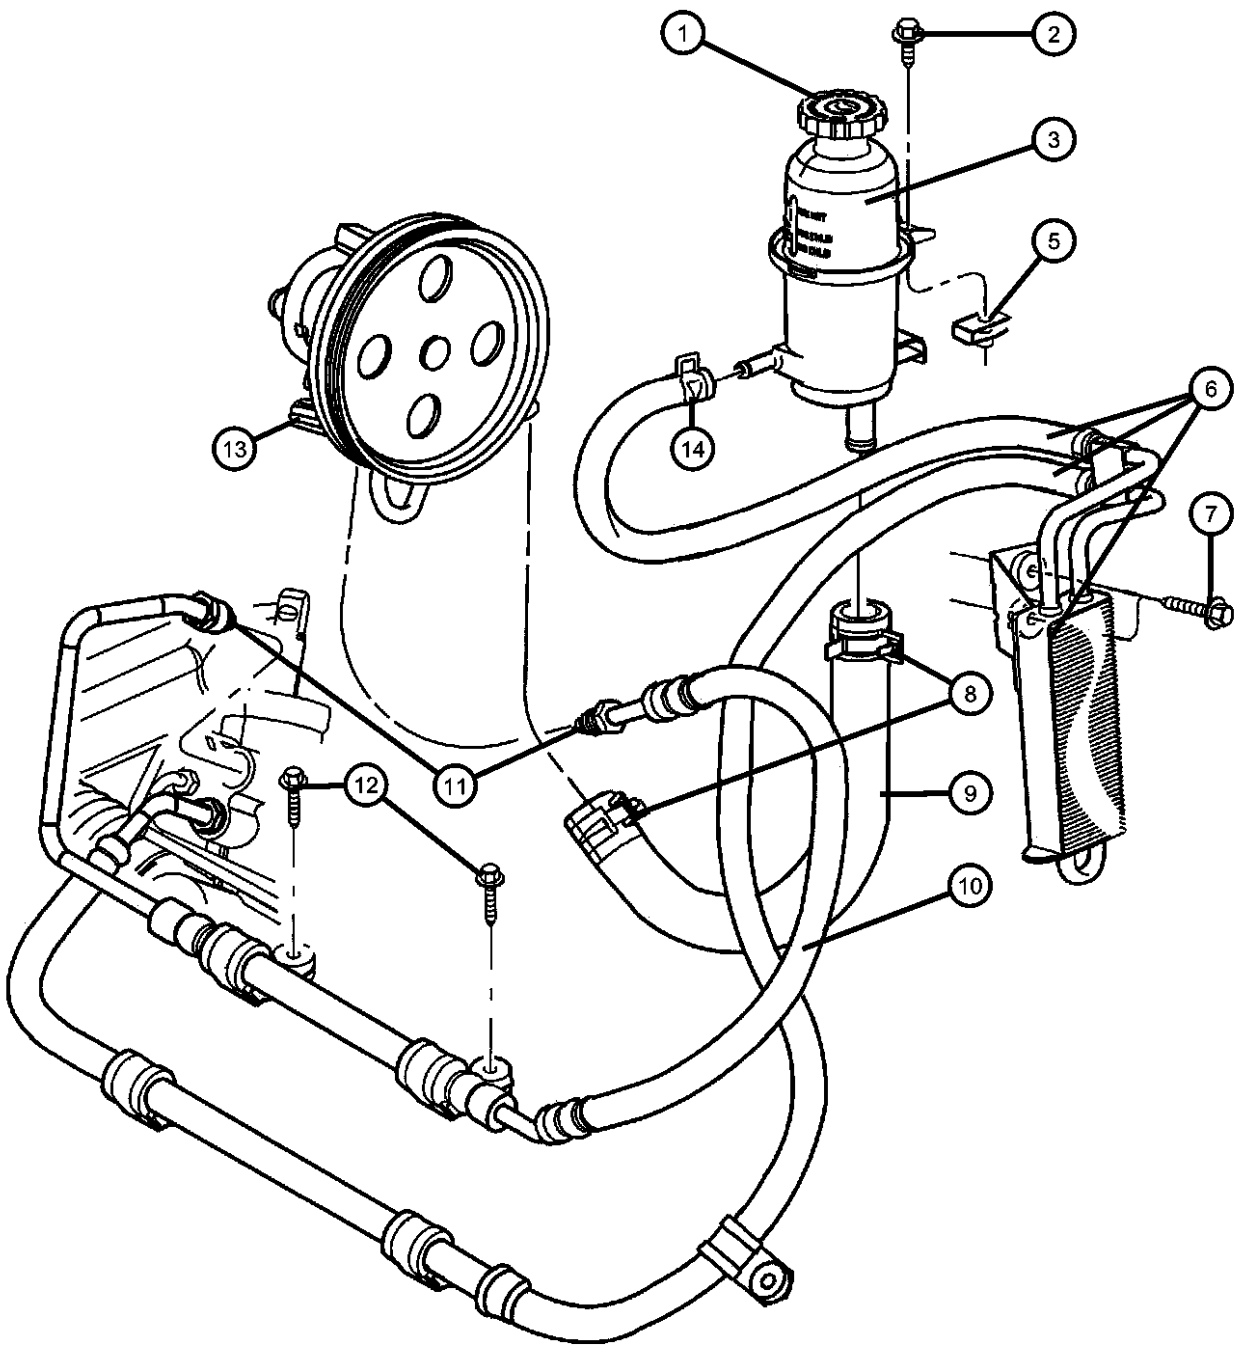

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	



Hoses and Reservoir, LHD, 3.7L [EK0]  
Figure 19-730

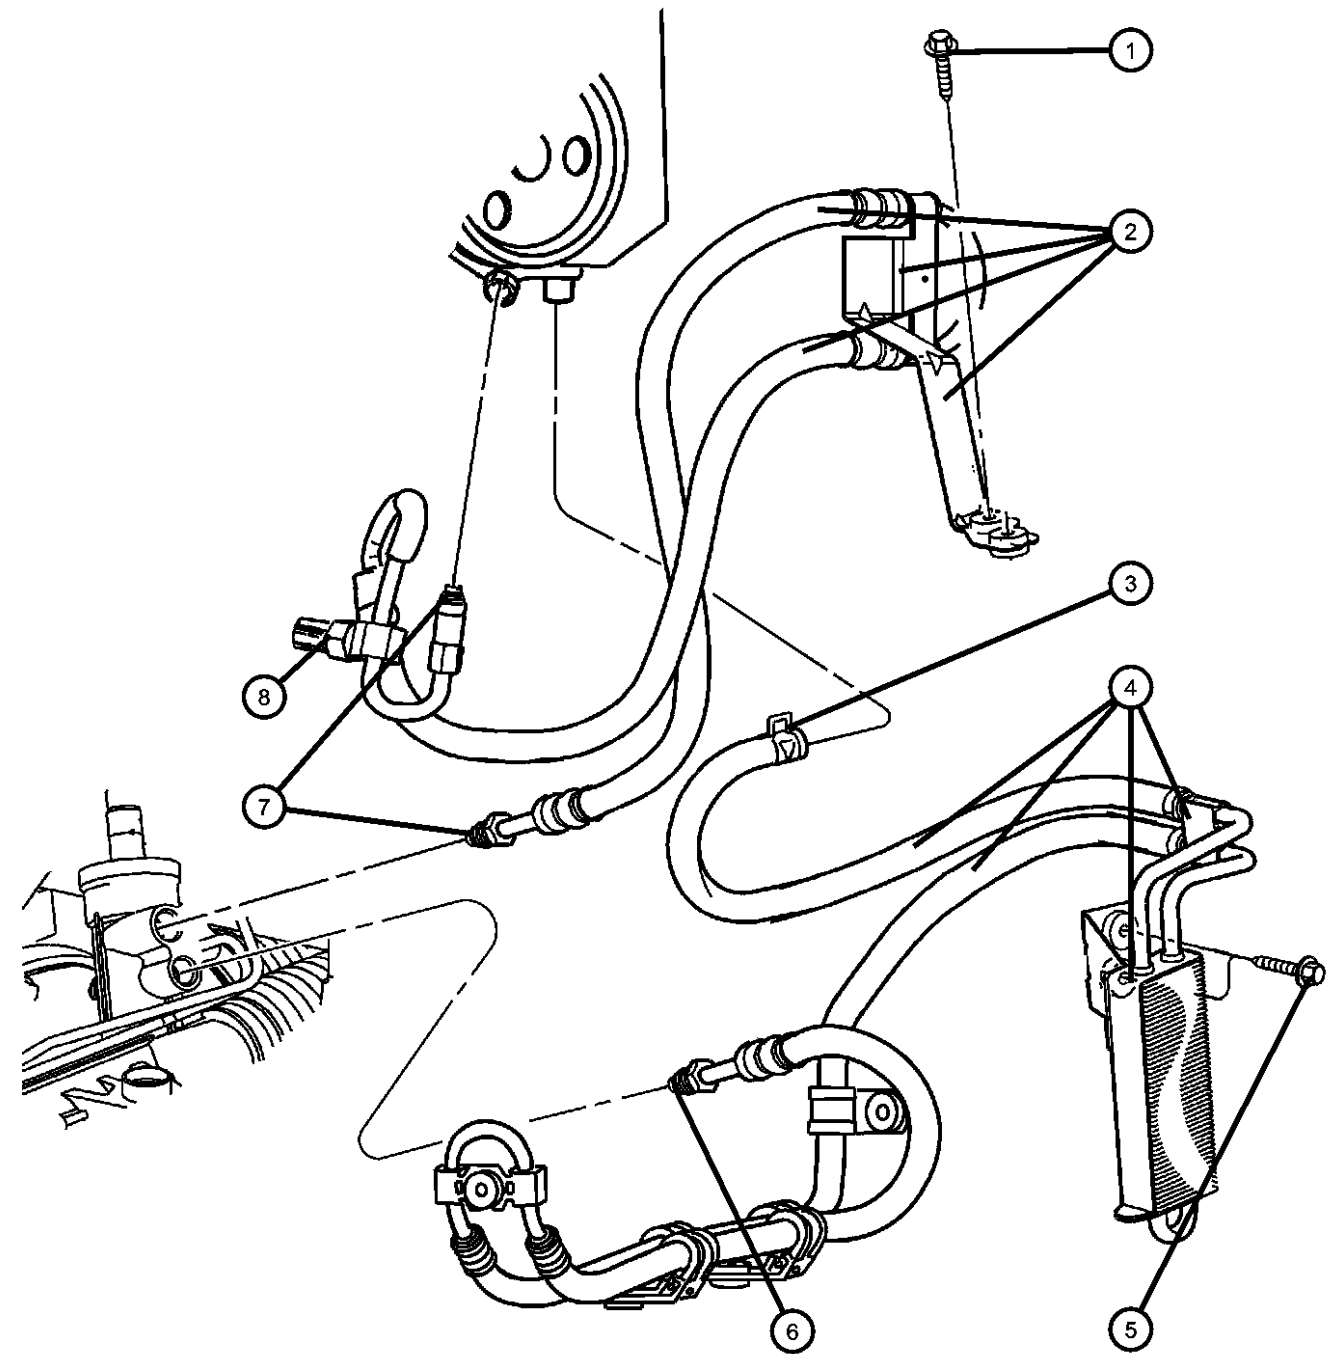

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note:Sales Codes;  
[EK0]=Engines - All 3.7L 6 Cylinder Gas

1		1							SCREW, Hex Flange Head, M6x1.00x35.00, (NOT SERVICED)
2	52128940AA	1	J, T			EK0			HOSE, Power Steering Pressure
3									CLAMP, Hose, M18.5
	06504217	1	J			EK0			
		1	T			EK0			
4									COOLER, Power Steering With Hose
	52128561AB	1	J			EK0			
		1	T			EK0			
5		1							SCREW, Hex Flange Head, M6x1.00x35.00, (NOT SERVICED)
6									O RING, Power Steering Hose
	05205254	1	J			EK0			
		1	T			EK0			
7									O RING, Power Steering Hose
	05205254	1	J			EK0			
		1	T			EK0			
8	56044169AA	1	J, T			EK0			SWITCH, Power Steering
-9	53013506AA	1	J			EK0			GUARD, SplashOil
-10	06100267	1	J			EK0			BOLT AND CONED WASHER, Hex Head, M6x25x12.5, Splash guard to left front axle
-11									NUT AND WASHER, Hex, M8x1.25
	06100050	1	J			EK0			Oil Splash Guard to Axle
		1	U			EK0			Oil Splash Guard to Axle
-12									HOSE, Power Steering Return
	52129073AA	1	J			EK0			
		1	T			EK0			

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Hoses and Reservoir, RHD, 3.7L [EK0]  
Figure 19-740

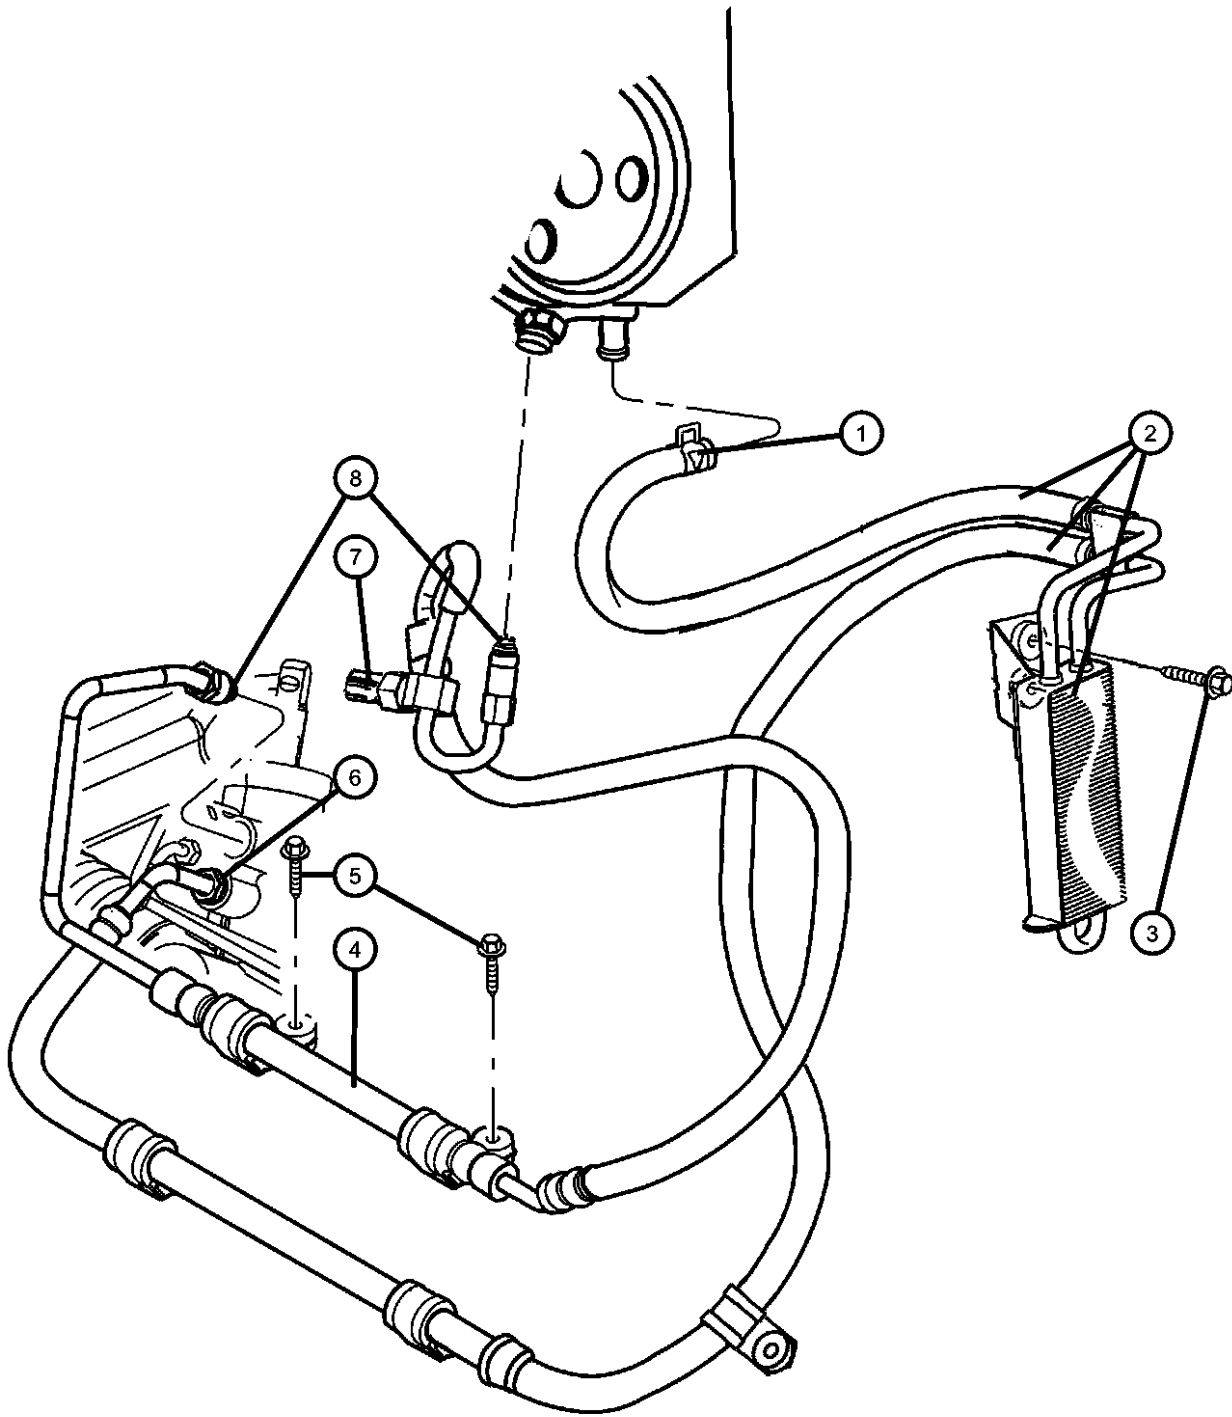


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:Sales Codes; [EKG]=Engine -3.7L Power Tech V6 [EK0]=Engines - All 3.7L 6 Cylinder Gas									
1	06504217	2	U			EK0			CLAMP, Hose, M18.5, Includes Items 1-6
2	52088927AE	2	U			EK0			COOLER, Power Steering With Hose
3	52088927AE	2							SCREW, Hex Flange Head, M6x1.00x35.00, (NOT SERVICED)
4	52128789AA	1	U			EK0			HOSE, Power Steering Pressure
5	52128789AA	1							SCREW, Hex Flange Head, M6x1.00x35.00, (NOT SERVICED)
6	05205254	4	U			EK0			O RING, Power Steering Hose
7	56044169AA	1	U			EK0			SWITCH, Power Steering
8	05205254	4	U			EK0			O RING, Power Steering Hose
-9	53013506AA	1	U			EK0			GUARD, Splash, Splash Guard to Left Front Axle, Oil
-10	06100267	1	U			EK0			BOLT AND CONED WASHER, Hex Head, M6x25x12.5
-11									NUT AND WASHER, Hex, M8x1.25
	06100050	1	J			EK0			Oil Splash Guard to Axle
		1	U			EK0			Oil Splash Guard to Axle

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part





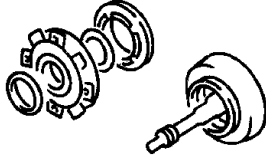
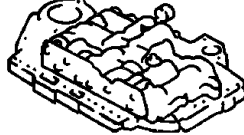
# Group - 42RLE
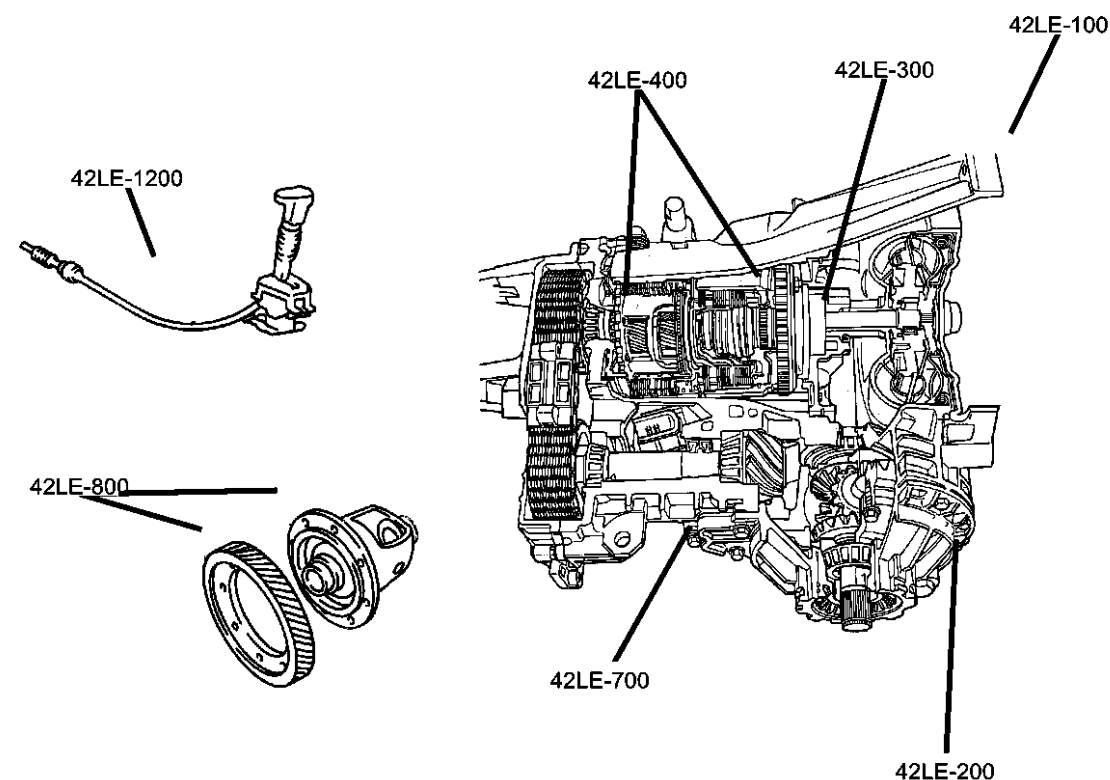
## Automatic Transaxle 4 Speed



### Group - 42RLE Automatic Transaxle 4 Speed

Illustration Title	Group-Fig. No.
<b>Transaxle Assembly</b>	
Tranmission Assembly .....	Fig. 42RLE - 110
Overhaul Seal & Gasket Package .....	Fig. 42RLE - 120
<b>Case and Extension</b>	
Case, Transmission .....	Fig. 42RLE - 210
Adapter & Extension .....	Fig. 42RLE - 220
Mounting, Transmission .....	Fig. 42RLE - 230
Collar, Structural.....	Fig. 42RLE - 240
<b>Oil Pump</b>	
Oil Pump & Reaction Shaft .....	Fig. 42RLE - 310
<b>Gear Train</b>	
Clutch, Input Shaft .....	Fig. 42RLE - 410
Gear Train .....	Fig. 42RLE - 420
<b>Valve Body</b>	
Valve Body.....	Fig. 42RLE - 710
Accumulator Pistons & Springs .....	Fig. 42RLE - 720
Parking Sprag .....	Fig. 42RLE - 730
<b>Gearshift Controls</b>	
Gearshift Control .....	Fig. 42RLE - 1210

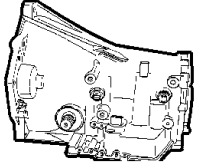
<b>42RLE-100</b> Transaxle Assembly	<b>42RLE-1200</b> Gearshift Controls	<b>42RLE-200</b> Case and Extension	<b>42RLE-300</b> Oil Pump
			
<b>42RLE-400</b> Gear Train	<b>42RLE-700</b> Valve Body		
			

Tranmission Asembly  
Figure 42RLE-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DG6]=4 Speed Automatic Transmission - [42RLE]

1									TRANSMISSION KIT, Automatic
	05101883AB	1	T				DG6		
	05013457AA								Mopar Automatic Transmission Fluid Quart
	05013458AA								Mopar Automatic Transmission Fluid Gallon
	05101884AB	1	J, U				DG6		
	05013457AA								Mopar Automatic Transmission Fluid Quart
	05013458AA								Mopar Automatic Transmission Fluid Gallon
2									CONVERTER PACKAGE, Torque
	05093944AA	1	T				DG6		
		1	J, U				DG6		

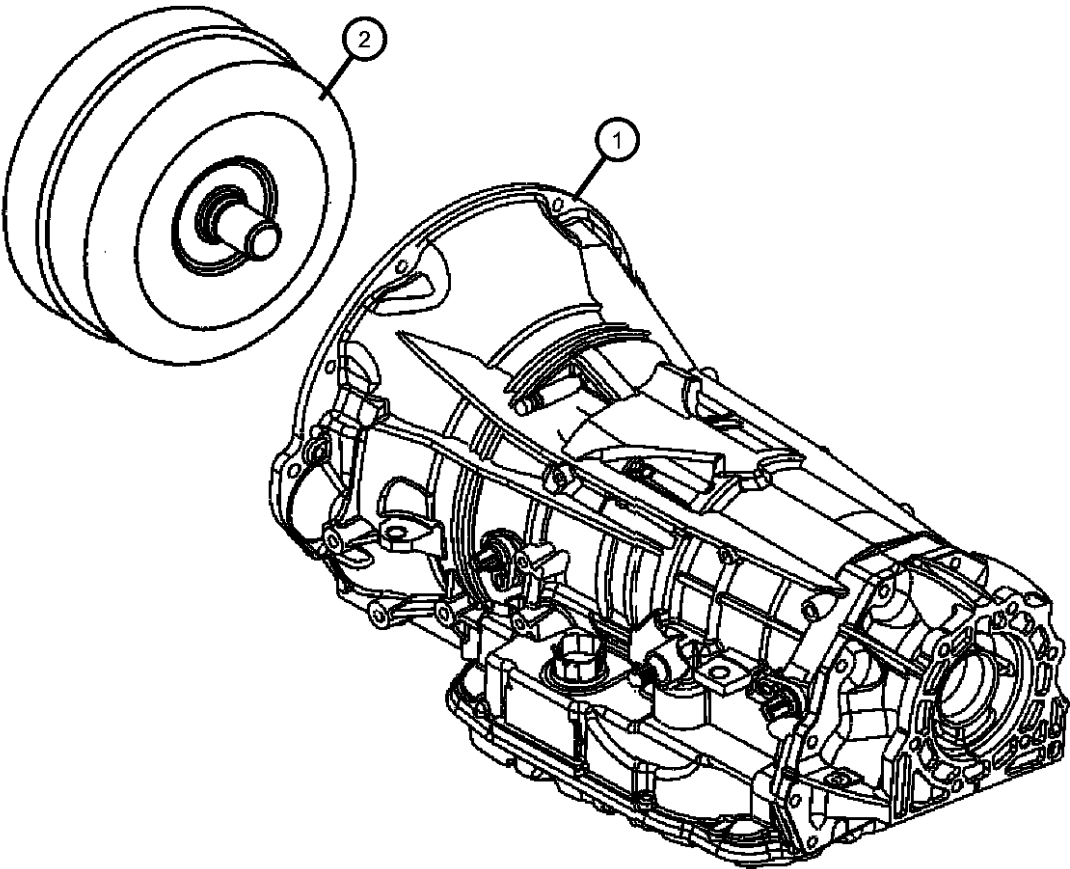

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Overhaul Seal & Gasket Package  
Figure 42RLE-120

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	05103073AA	1	T				DG6		GASKET PACKAGE, Transmission
		1	J, U				DG6		

1


- 4883260 Seal and Gasket Package, Transmission Oil Pump
- 4883240AB Seal and Gasket Package, Transmission Front Clutch
- 5101917AB Gasket and Seal Package, Valve Body
- 4800253AA Gasket, Clutch Retainer
- K4659374 Seal,Transmission 2nd & 4th Clutch Piston (D-Ring) Outer
- K4659376 Seal,Transmission 2nd & 4th Clutch Piston (D-Ring) Inner
- K4659855 Seal, Reverse Clutch inner
- K4659856 Seal, Reverse Clutch outer
- 4431612 Retainer and Seal, Transmission U/Drive Spring
- 4431610 Piston, Underdrive
- 4446612 Cup, Parking Brake Sprag
- 4659946AB Valve, Cooler Bypass
- 6501702 Snap Ring, Transmission Input Shaft
- 4799062 Oring, Speed Sensor
- 4659980 Snap Ring, Underdrive Clutch
- 4799858AA Snap Ring
- 6504383 Bolt, Flex Plate to Torque Converter

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Case, Transmission  
Figure 42RLE-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DG6]=4 Speed Automatic Transmission - [42RLE]

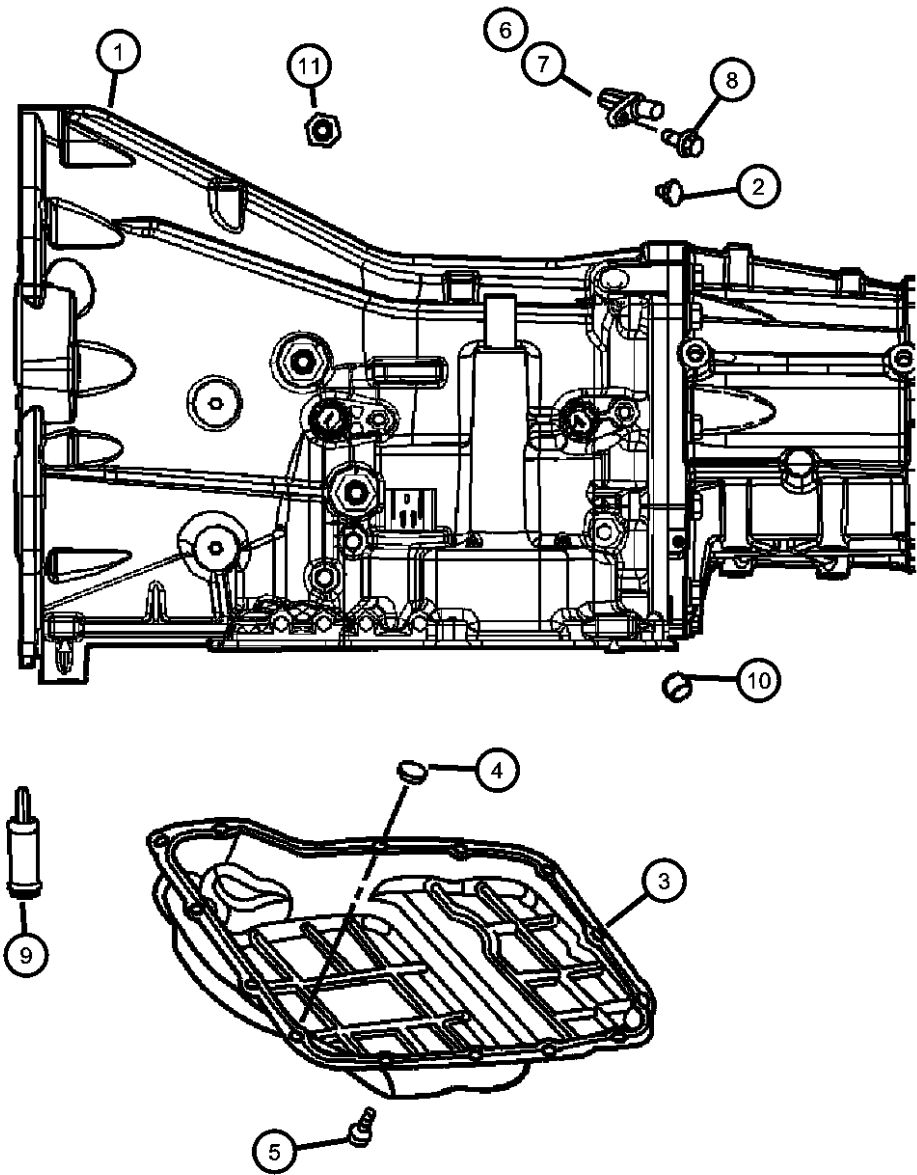


1	05101881AA	1	T				DG6		CASE, Transmission
		1	J, U				DG6		
2	04567312	1	J, U				DG6		PLUG, Transaxle Case
		1	T				DG6		
3	52852912AB	1	T				DG6		PAN, Transmission Oil
		1	J, U				DG6		
4	03681601	1	T				DG6		MAGNET, Transmission
		1	J, U				DG6		
5	06501474	15	T				DG6		BOLT, Hex Head, M8x1.25x16
		15	J, U				DG6		
6	04799061AB	1	J, U				DG6		SENSOR, Transmission Input Speed
		1	T				DG6		
7	52854001AA	1	T				DG6		SENSOR, Transmission Output Speed
		1	J, U				DG6		
8	06101331	2	T				DG6		BOLT, M6x1.00x20
		2	J, U				DG6		
9	04659946AB	1	J, U				DG6		VALVE, Cooler Bypass
		1	T				DG6		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				EDO = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Case, Transmission  
Figure 42RLE-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10	04531412	1	T				DG6		BUSHING, Dowel
		1	J, U				DG6		
11	04799433AB	2	T				DG6		NUT, Transmission Case
		2	J, U				DG6		

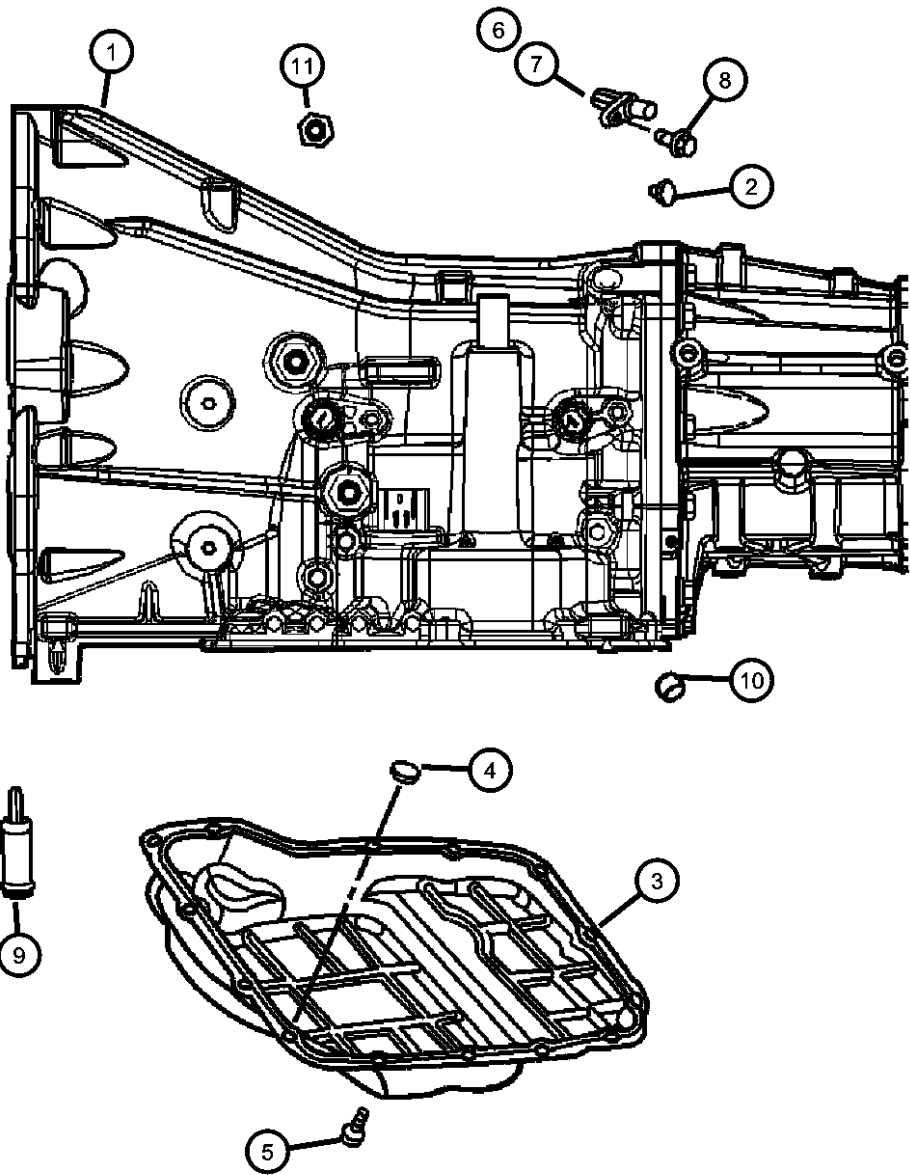

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

**Adapter & Extension**  
**Figure 42RLE-220**

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


NOTE:  
 Sales Codes:  
 [DG6]=4 Speed Automatic Transmission - [42RLE]

1	52852986AB	1	J, U				DG6		ADAPTER, Transfer Case
2	52854177AA	1	J, U				DG6		TUBE
3	52852998AA	1	J, U				DG6		SEAL, Transmission, Lube Tube Grommet
4	04269956AB	1	J, U				DG6		SEAL, Adapter
5	06504774	7	J, U				DG6		SCREW AND WASHER, Hex Head, M10x1.5x37
6	52852987AA	1	T				DG6		HOUSING, Transmission Rear Extension
7	04531216AB	1	T				DG6		SEAL, Output Shaft
8	52854166AA	1	T				DG6		TUBE
9	52852998AA	1	T				DG6		SEAL, Transmission, Lube Tube Grommet
10	52852998AA	1							BUSHING, (NOT SERVICED)

LIBERTY (KJ)									
SERIES	LINE								
P = Limited	J = LHD (4WD)								
H = Sport	U = RHD (4WD)								
M = Renegade	T = LHD (2WD)								
		BODY				ENGINE			TRANSMISSION
		74 = 4 Door (104.3 WB)				ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI			DDD = Transmission - 5-Speed HD Manual
						EKG = Engine - 3.7L V6			DDK = Transmission - 5-Speed HD Manual
						ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel			DG4 = Transmission-Multi-Speed Auto, 45RFE
						ENR = Engine - 2.8L 4 Cyl Turbo Diesel			DG6 = Transmission-4-Spd. Automatic, 42RLE
						ENO = 4Cyl Turbo Diesel			DGQ = Transmission-5-Spd Automatic 5-45RFE
						EK0 = All 3.7L			DBB = All Manual Transmissions
						ED0 = All 2.4L			DG0 = All Automatic Transmissions



Mounting, Transmission  
Figure 42RLE-230

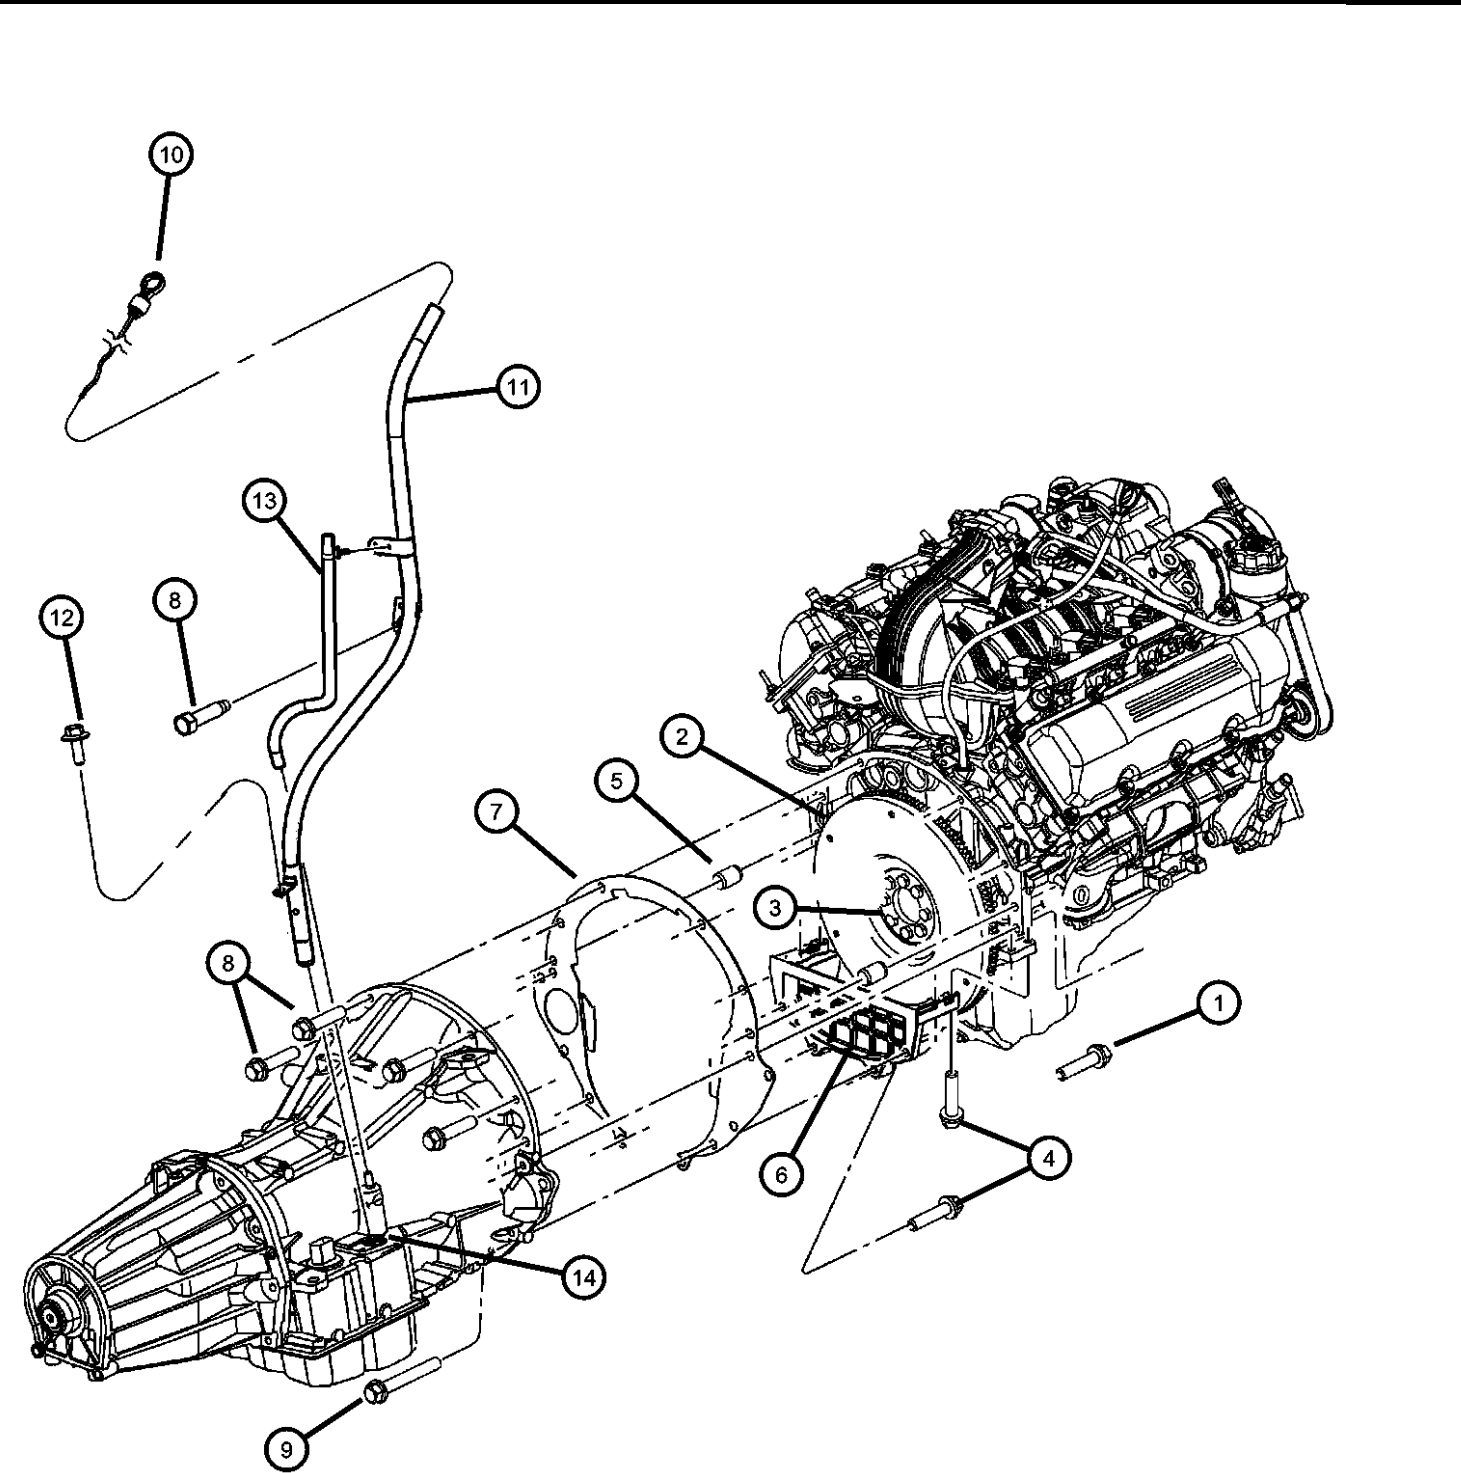

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DG6]=4 Speed Automatic Transmission - 42RLE  
[DG0]=All Automatic Transmissions  
[EK0]=All 3.7L V-6 Engines

1	06036385AA	2				EK0	DG0		SCREW AND WASHER, Hex Head, .437-14x2.00
2	04736253AA	1				EK0	DG6		PLATE, Torque Converter Drive
3	06503465	8				EK0	DG0		BOLT, Drive Plate and Flywheel
4	06101985	8				EK0			SCREW AND WASHER, M10x1.50x45.00
5	01122532	2				EK0			DOWEL, Block To Clutch Housing
6	53021282AA	1				EK0			COVER, Engine
7	52104344AA	1				EK0	DG0		COVER, Transmission Dust
8	06022266	4				EK0	DG0		SCREW, Hex Head, .375-16x1.5
9	06101985	8				EK0			SCREW AND WASHER, M10x1.50x45.00
10	53013592AB	1					DG6		INDICATOR, Transmission Fluid Level
11	53013591AB	1				EK0	DG6		TUBE, Transmission Oil Filler
12	06501979	1							SCREW AND WASHER, Hex Head, M6x1x17
13	53013593AA	1					DG6		TUBE, Vent
14									GROMMET
	04810021	1	T				DG6		
		1	J, U				DG6		
-15									SEAL, Torque Converter Hub
	05222629	1	T				DG6		
		1	J, U				DG6		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	


AR = use ase required - = Non illustrated part

Collar, Structural  
Figure 42RLE-240

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[EK0]=All 3.7L V-6 Engines

1	06101985	8				EK0			SCREW AND WASHER, M10x1.50x45.00
2	53021282AA	1				EK0			COVER, Engine

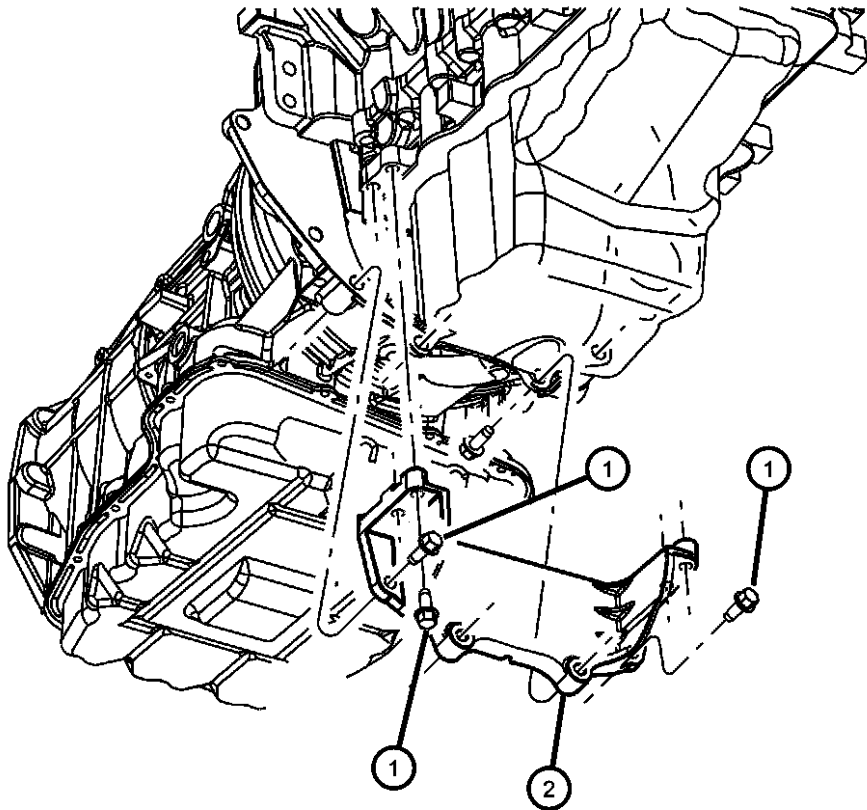

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Oil Pump & Reaction Shaft  
Figure 42RLE-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DG6]=4 Speed Automatic Transmission - [42RLE]


-1									SEAL AND GASKET PACKAGE, Transmission Oil Pump
	04883260	1	T				DG6		
		1	J, U				DG6		
2	05101872AA	1	T				DG6		PUMP, Transmission Oil
		1	J, U				DG6		
3									SEAL, Ring Reaction Support, 2 1/16 O.D.
	04471874	4	T				DG6		
		4	J, U				DG6		
4									BOLT, Hex Head, M8x1.25x19
	06500211	6	T				DG6		
		6	J, U				DG6		
5									BALL, Transmission Oil Pump
	00152127	6	T				DG6		
		6	J, U				DG6		
6									GASKET, Transmission Oil Pump
	04412844	1	T				DG6		
		1	J, U				DG6		
7									SCREW AND WASHER, Hex Flange Head, M8x1.25x25
	06506408AA	5	T				DG6		
		5	J, U				DG6		
8									SEAL, Oil Pump
	04659945	1	T				DG6		
		1	J, U				DG6		
9									BUSHING, Front Pump
	04659515	1	T				DG6		
		1	J, U				DG6		

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Oil Pump & Reaction Shaft  
Figure 42RLE-310


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10									SEAL, Impeller Hub, 57.25mm OD
	04412475	1	T				DG6		
		1	J, U				DG6		
-11									GASKET, Transmission Oil Pump
	04412844	1	T				DG6		
		1	J, U				DG6		
12									BALL, Check
	00147482	2	T				DG6		Transmission Reaction Shaft
		2	J, U				DG6		Transmission Reaction Shaft
	04446616	2	T				DG6		Support
		2	J, U				DG6		Support

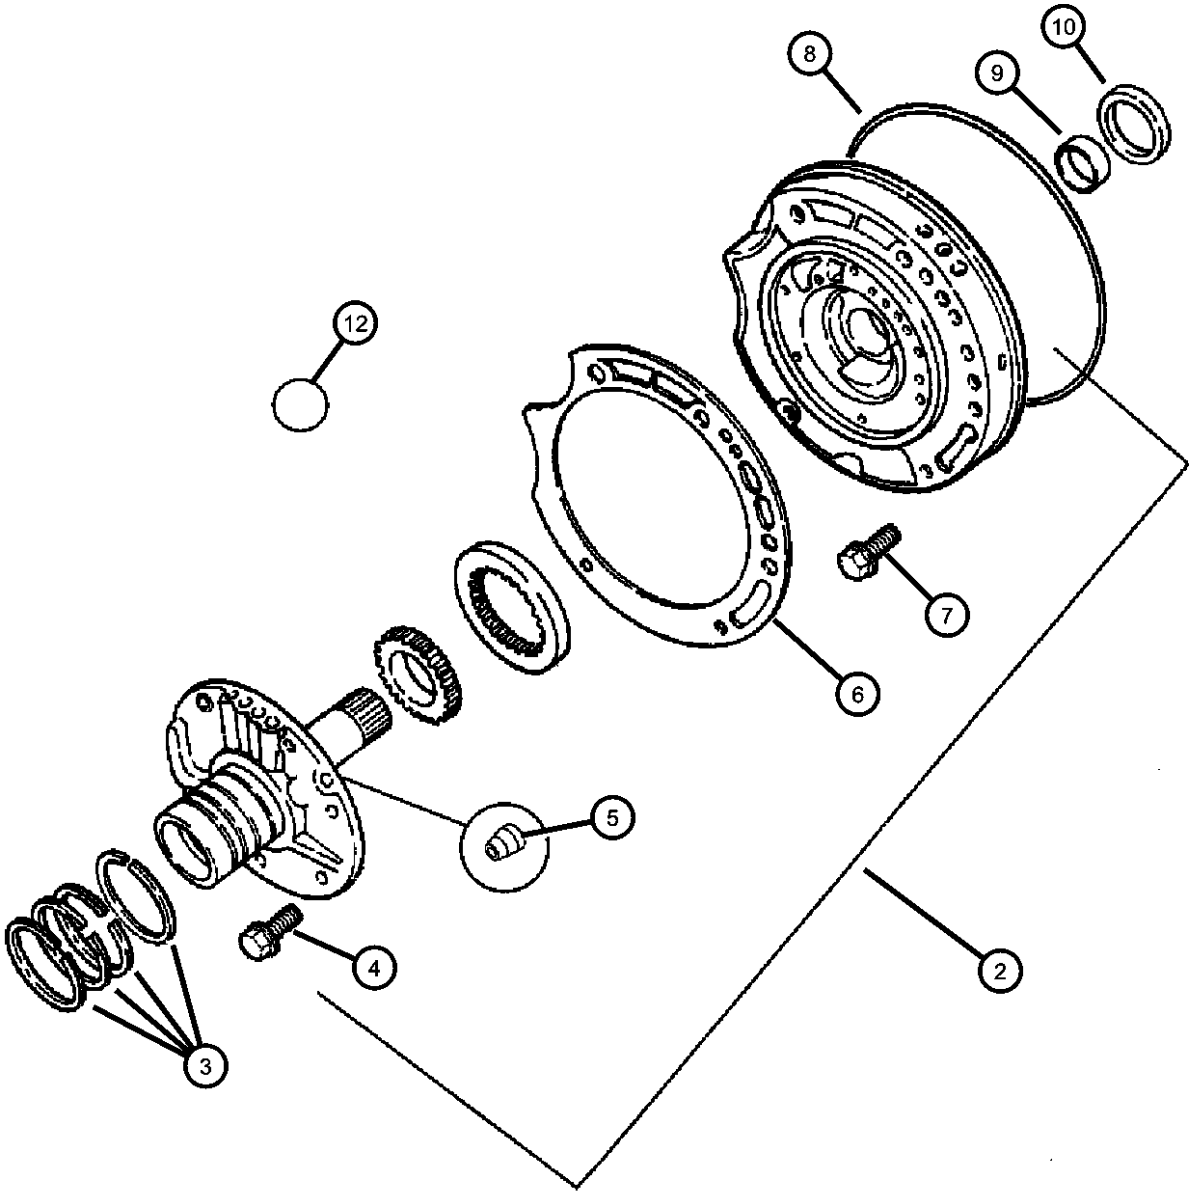

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Clutch, Input Shaft  
Figure 42RLE-410

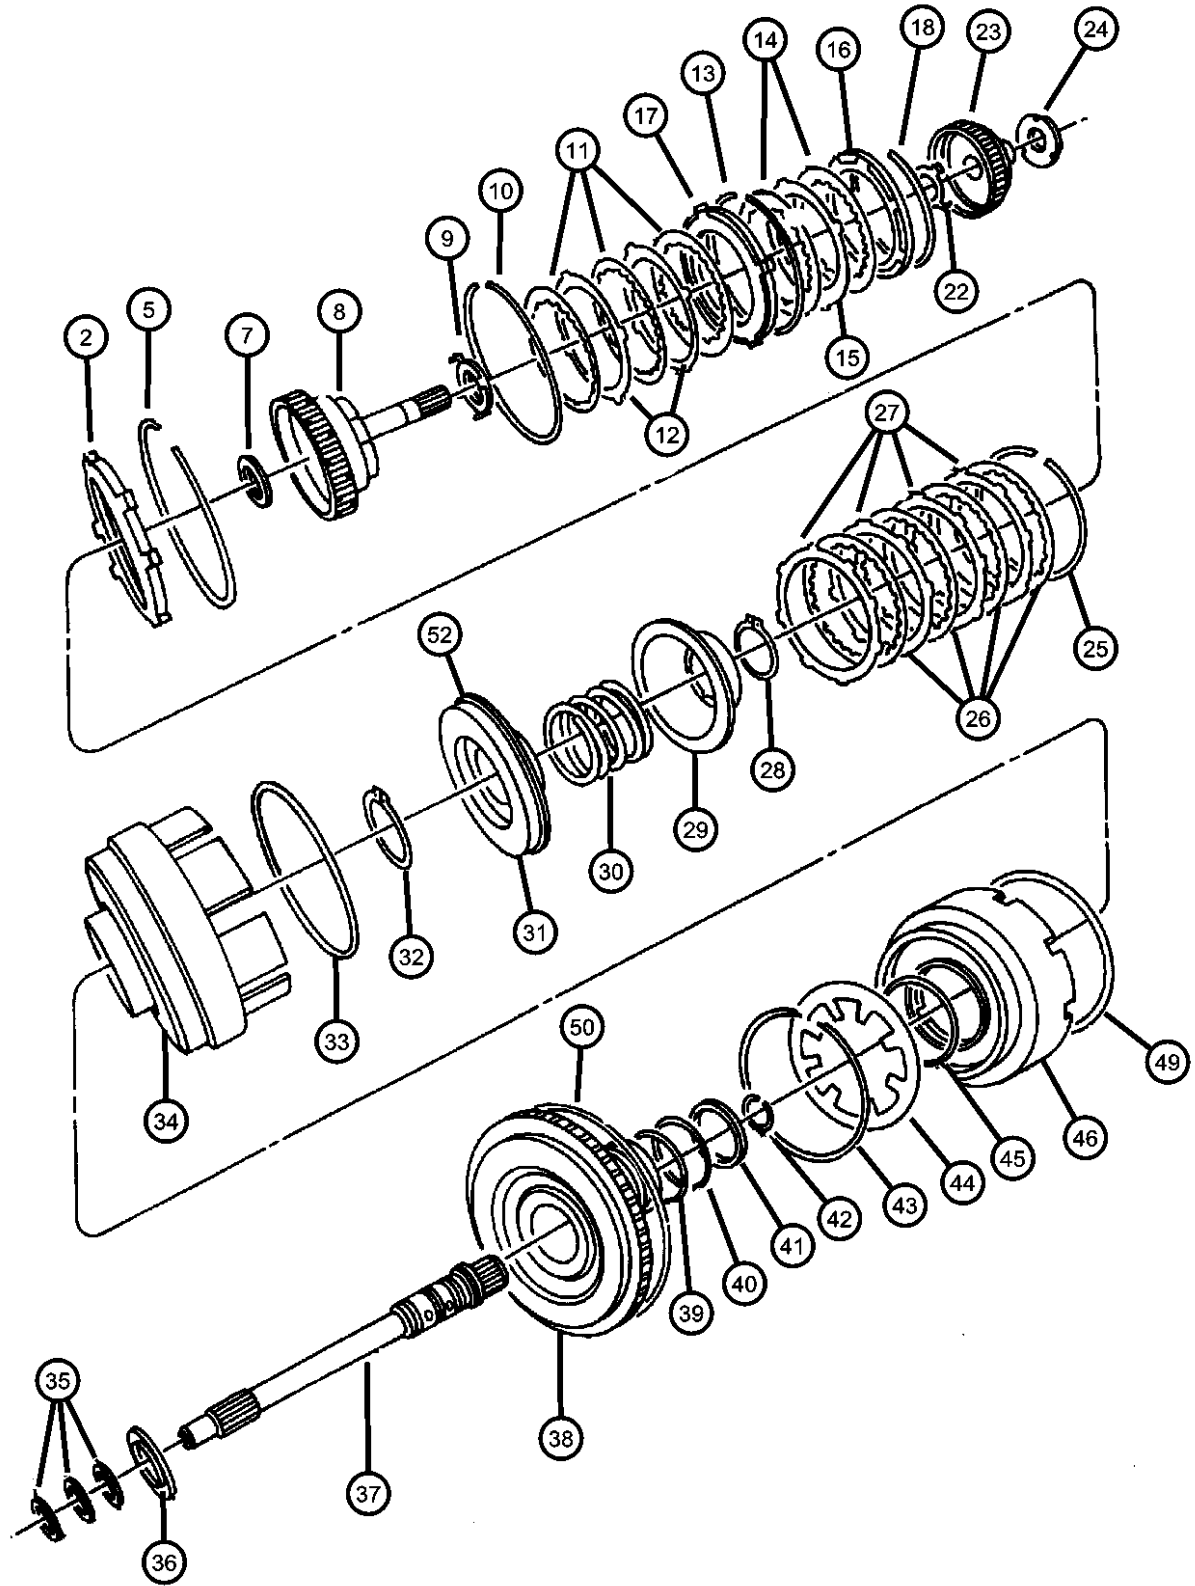


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DG6]=4 Speed Automatic Transmission - 42RLE									
-1									SEAL AND GASKET PACKAGE, Transmission Front Clutch
	04883240AB	1	T				DG6		
		1	J, U				DG6		
2									PLATE PACKAGE, Underdrive Reaction, 5.72/5.82
	04883013AB	1	T				DG6		
		1	J, U				DG6		
-3									PLATE PACKAGE, Underdrive Reaction, 6.21/6.31
	04883014AB	1	T				DG6		
		1	J, U				DG6		
-4									PLATE PACKAGE, Underdrive Reaction, 6.70/6.80
	04883015AB	1	T				DG6		
		1	J, U				DG6		
5									SNAP RING, Underdrive Clutch, Tapered
	04659934	1	T				DG6		
		1	J, U				DG6		
-6									SNAP RING, Underdrive Clutch, Flat
	04659980	1	T				DG6		
		1	J, U				DG6		
7									THRUST BEARING
	04567262	1	T				DG6		
		1	J, U				DG6		
8									HUB AND SHAFT PACKAGE, Underdrive Clutch
	04864936AC	1	T				DG6		
		1	J, U				DG6		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Clutch, Input Shaft  
Figure 42RLE-410

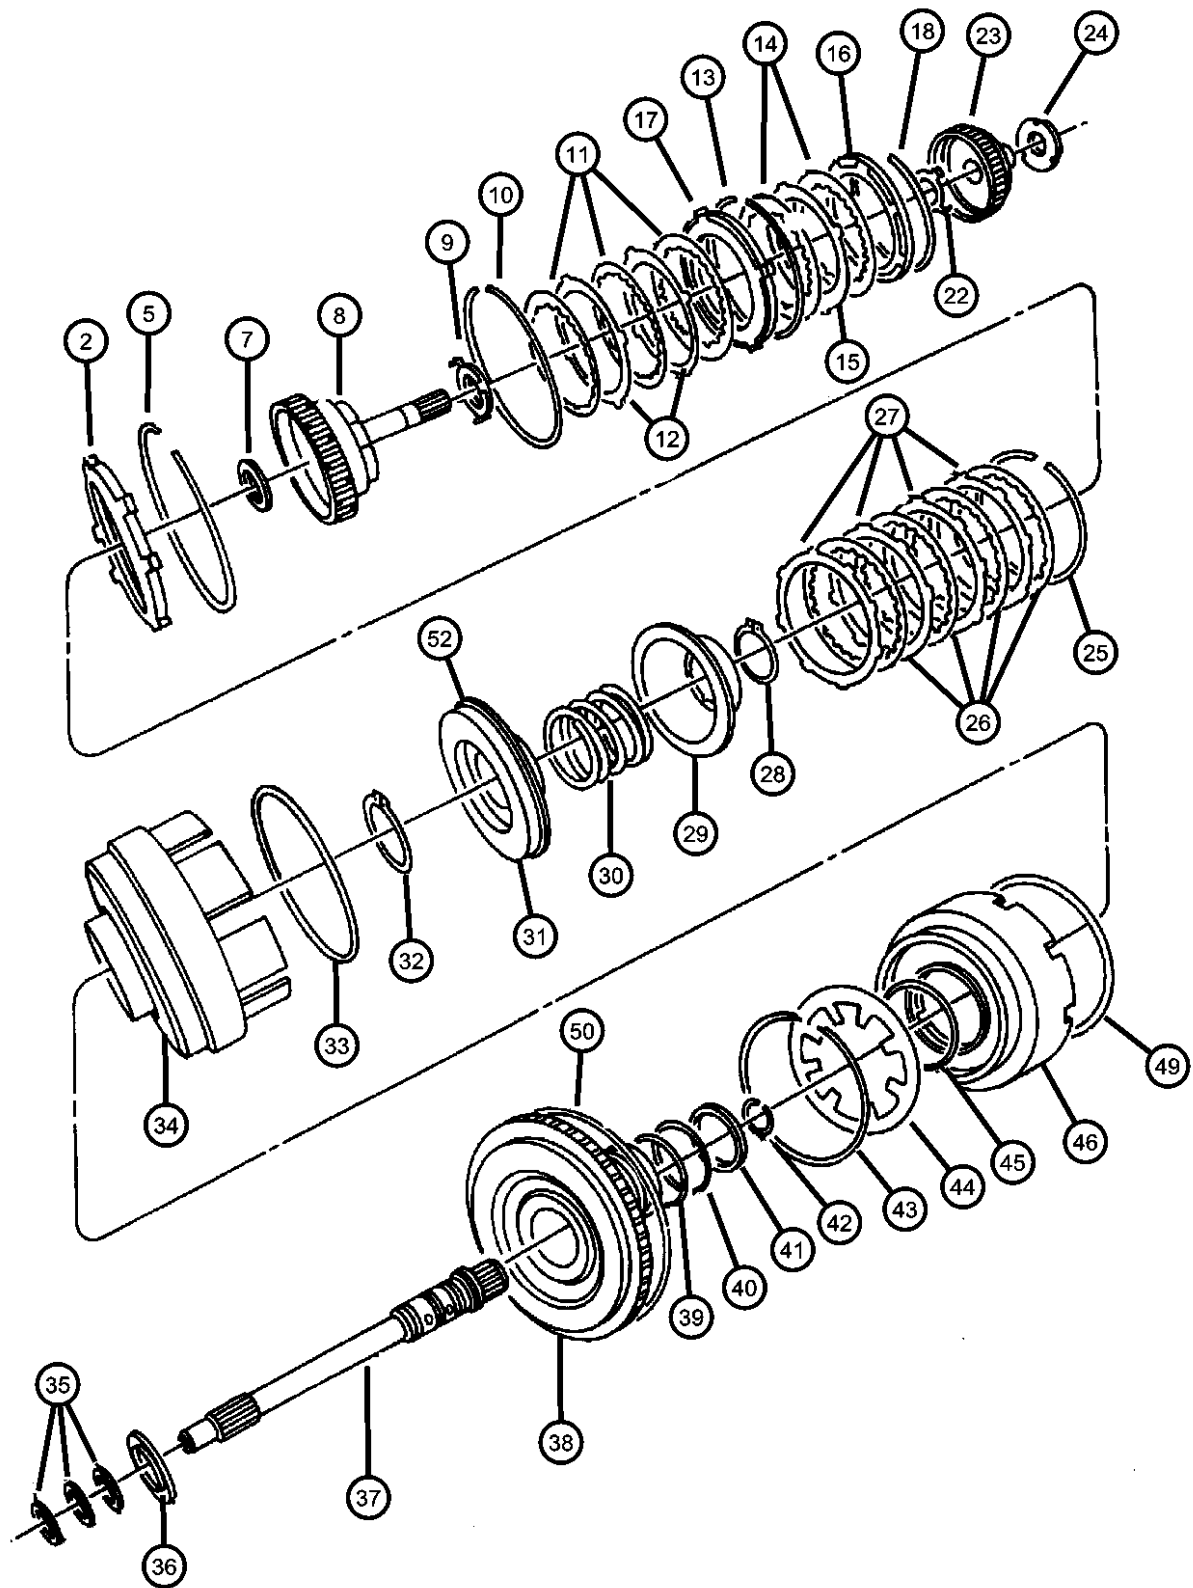


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
9	05018923AA	1	T				DG6		PLATE AND WASHER PACKAGE, Thrust
		1	J, U				DG6		
10	04505621	1	T				DG6		SNAP RING
		1	J, U				DG6		
11	04531678	4	T				DG6		DISC, Clutch
		4	J, U				DG6		
12	04659053	3	T				DG6		PLATE, Transmission O/Drive Clutch
		3	J, U				DG6		
13	04505622	1	T				DG6		SNAP RING
		1	J, U				DG6		
14	04531678	4	T				DG6		DISC, Clutch
		4	J, U				DG6		
15	04659053	3	T				DG6		PLATE, Transmission O/Drive Clutch
		3	J, U				DG6		
16	04377194	1	T				DG6		PLATE, Transmission Clutch Reaction
		1	J, U				DG6		
17	04531556AD	1	T				DG6		PLATE, Transmission O/Drive Clutch
		1	J, U				DG6		

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Clutch, Input Shaft  
Figure 42RLE-410

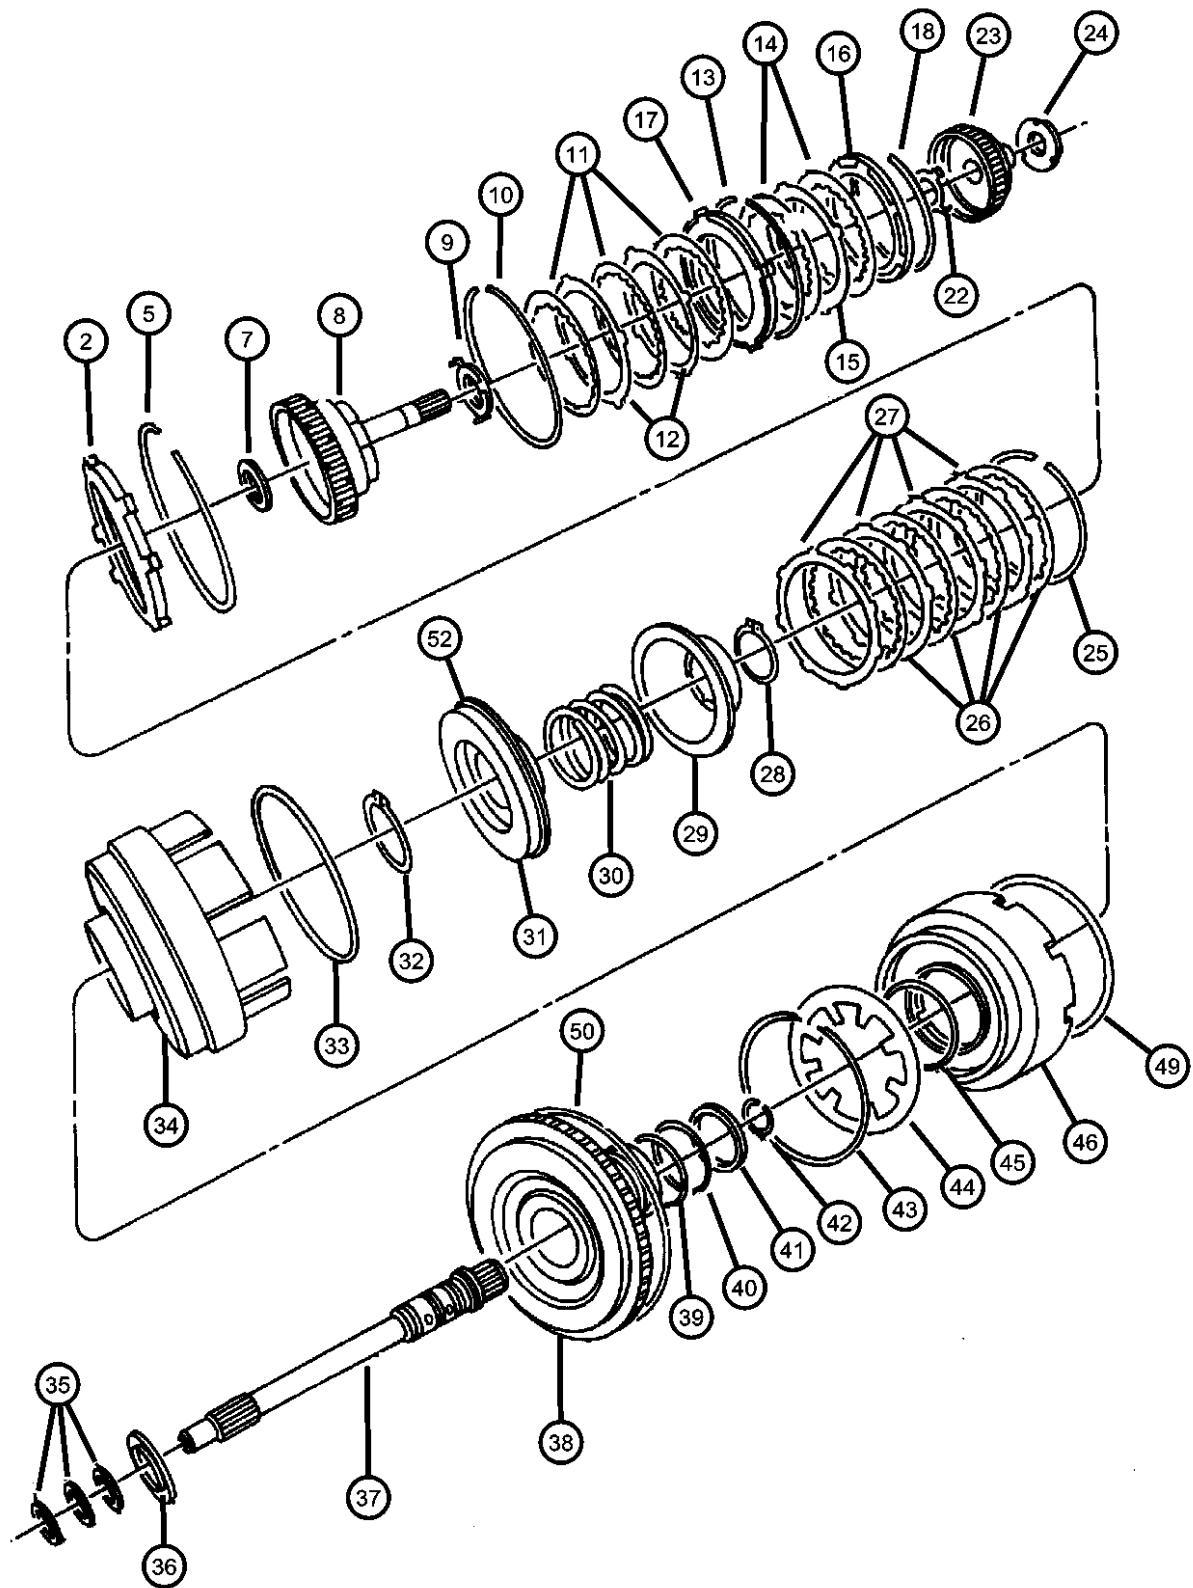


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
18	04377195	1	T				DG6		SNAP RING
		1	J, U				DG6		
-19	04412871	1	T				DG6		SNAP RING, Reverse Clutch, 1.77-1.83mm
		1	J, U				DG6		
-20	04412872	1	T				DG6		SNAP RING, Reverse Clutch, 2.02-2.07mm
		1	J, U				DG6		
-21	04412873	1	T				DG6		SNAP RING, Reverse Clutch, 2.27-2.32mm
		1	J, U				DG6		
22	05018923AA	1	T				DG6		PLATE AND WASHER PACKAGE, Thrust
		1	J, U				DG6		
23	04659993	1	T				DG6		HUB AND SHAFT, Overdrive Clutch
		1	J, U				DG6		
24	03836237AB	AR	T				DG6		PLATE, Transmission O/Drive Clutch [1.70 - 1.77MM]
		AR	J, U				DG6		[1.70 - 1.77MM]
	03836238AB	AR	T				DG6		[1.92 - 1.99MM]
		AR	J, U				DG6		[1.92 - 1.99MM]
	03836239AB	AR	T				DG6		[2.14 - 2.21MM]
		AR	J, U				DG6		[2.14 - 2.21MM]
	03836240AB	AR	T				DG6		[2.36 - 2.43MM]
		AR	J, U				DG6		[2.36 - 2.43MM]

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Clutch, Input Shaft  
Figure 42RLE-410

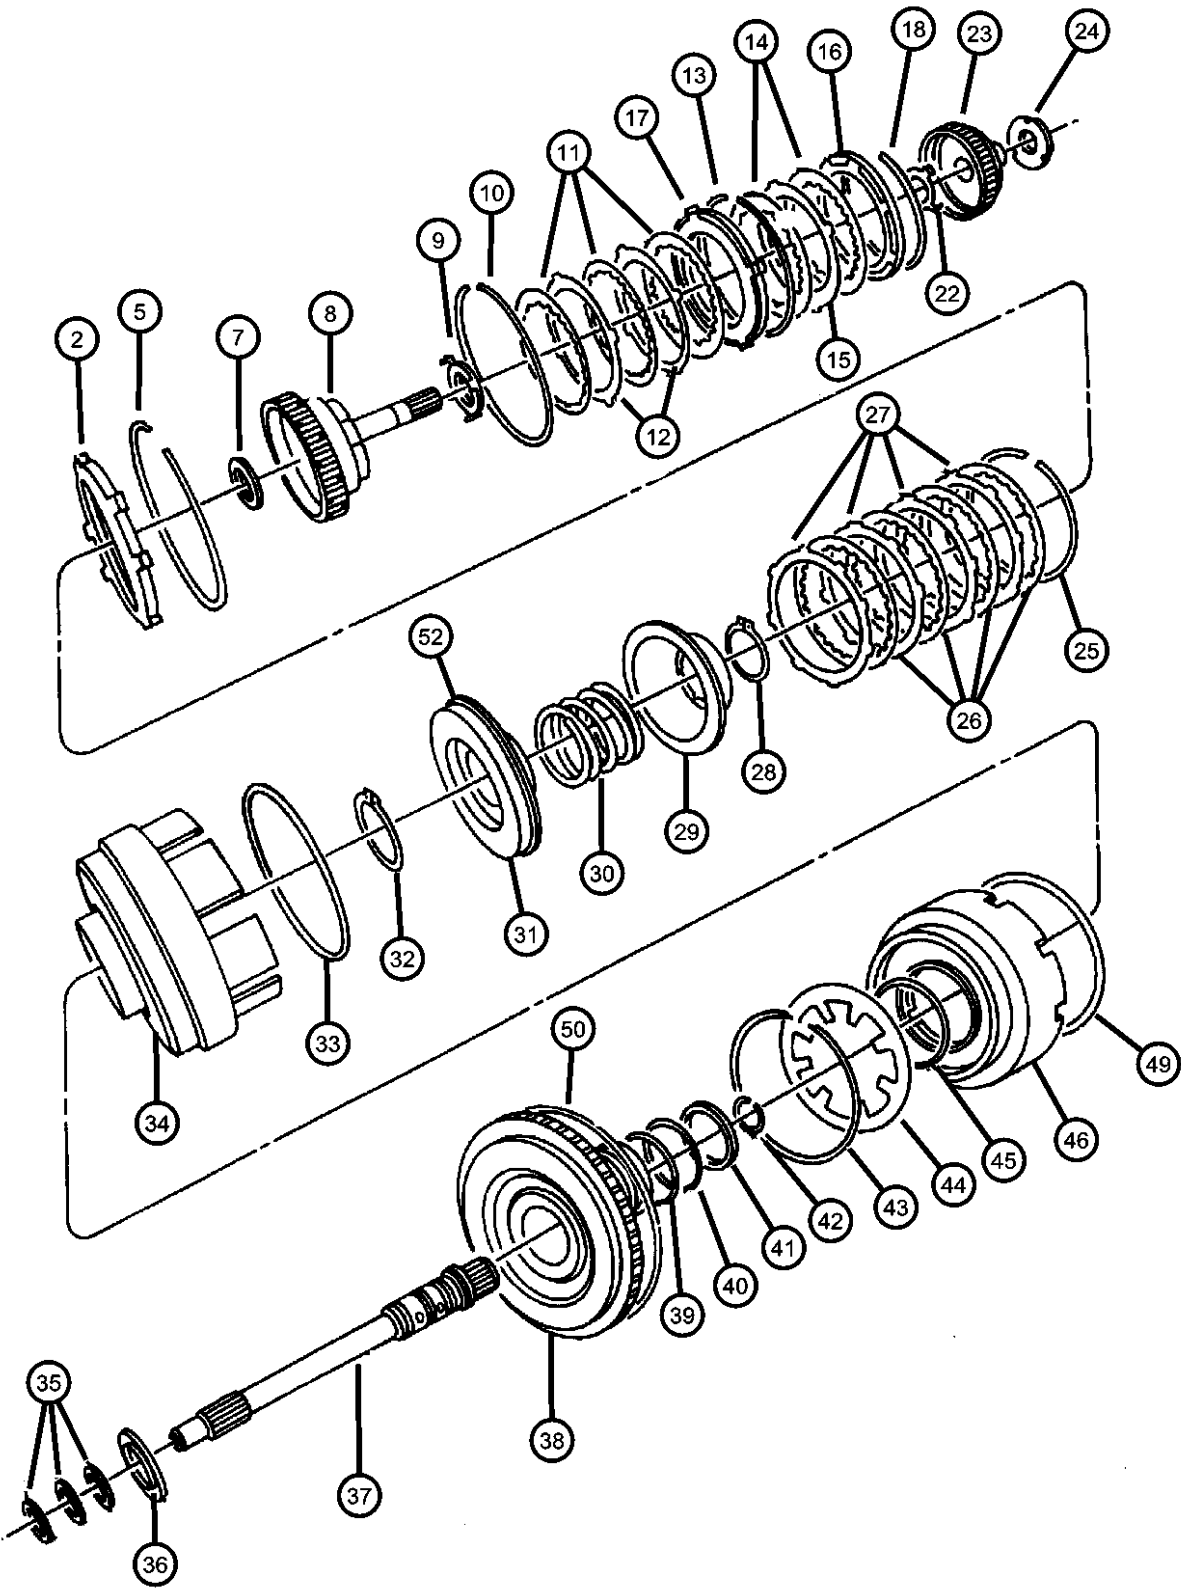


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	03836241AB	AR	T				DG6		[2.58 - 2.65MM]
		AR	J, U				DG6		[2.58 - 2.65MM]
	04431665AB	AR	T				DG6		[1.55 - 1.66MM]
		AR	J, U				DG6		[1.55 - 1.66MM]
	04431666AB	AR	T				DG6		[1.81 - 1.88MM]
		AR	J, U				DG6		[1.81 - 1.88MM]
	04431667AB	AR	T				DG6		[2.03 - 2.10MM]
		AR	J, U				DG6		[2.03 - 2.10MM]
	04431668AB	AR	T				DG6		[2.25 - 2.32MM]
		AR	J, U				DG6		[2.25 - 2.32MM]
	04431669AB	AR	T				DG6		[2.47 - 2.54MM]
		AR	J, U				DG6		[2.47 - 2.54MM]
	04446670AB	AR	T				DG6		[2.69 - 2.76MM]
		AR	J, U				DG6		[2.69 - 2.76MM]
	04446671AB	AR	T				DG6		[2.91 - 2.98MM]
		AR	J, U				DG6		[2.91 - 2.98MM]
25									SNAP RING, Underdrive Clutch, Flat
	04659980	1	T				DG6		[1.53 - 1.58MM]
		1	J, U				DG6		[1.53 - 1.58MM]
26									DISC, Clutch
	04531678	4	T				DG6		
		4	J, U				DG6		
27									PLATE, Transmission O/Drive Clutch
	04659053	4	T				DG6		
		4	J, U				DG6		
28									SNAP RING
	06501715	1	T				DG6		
		1	J, U				DG6		

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
				EDO = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Clutch, Input Shaft  
Figure 42RLE-410

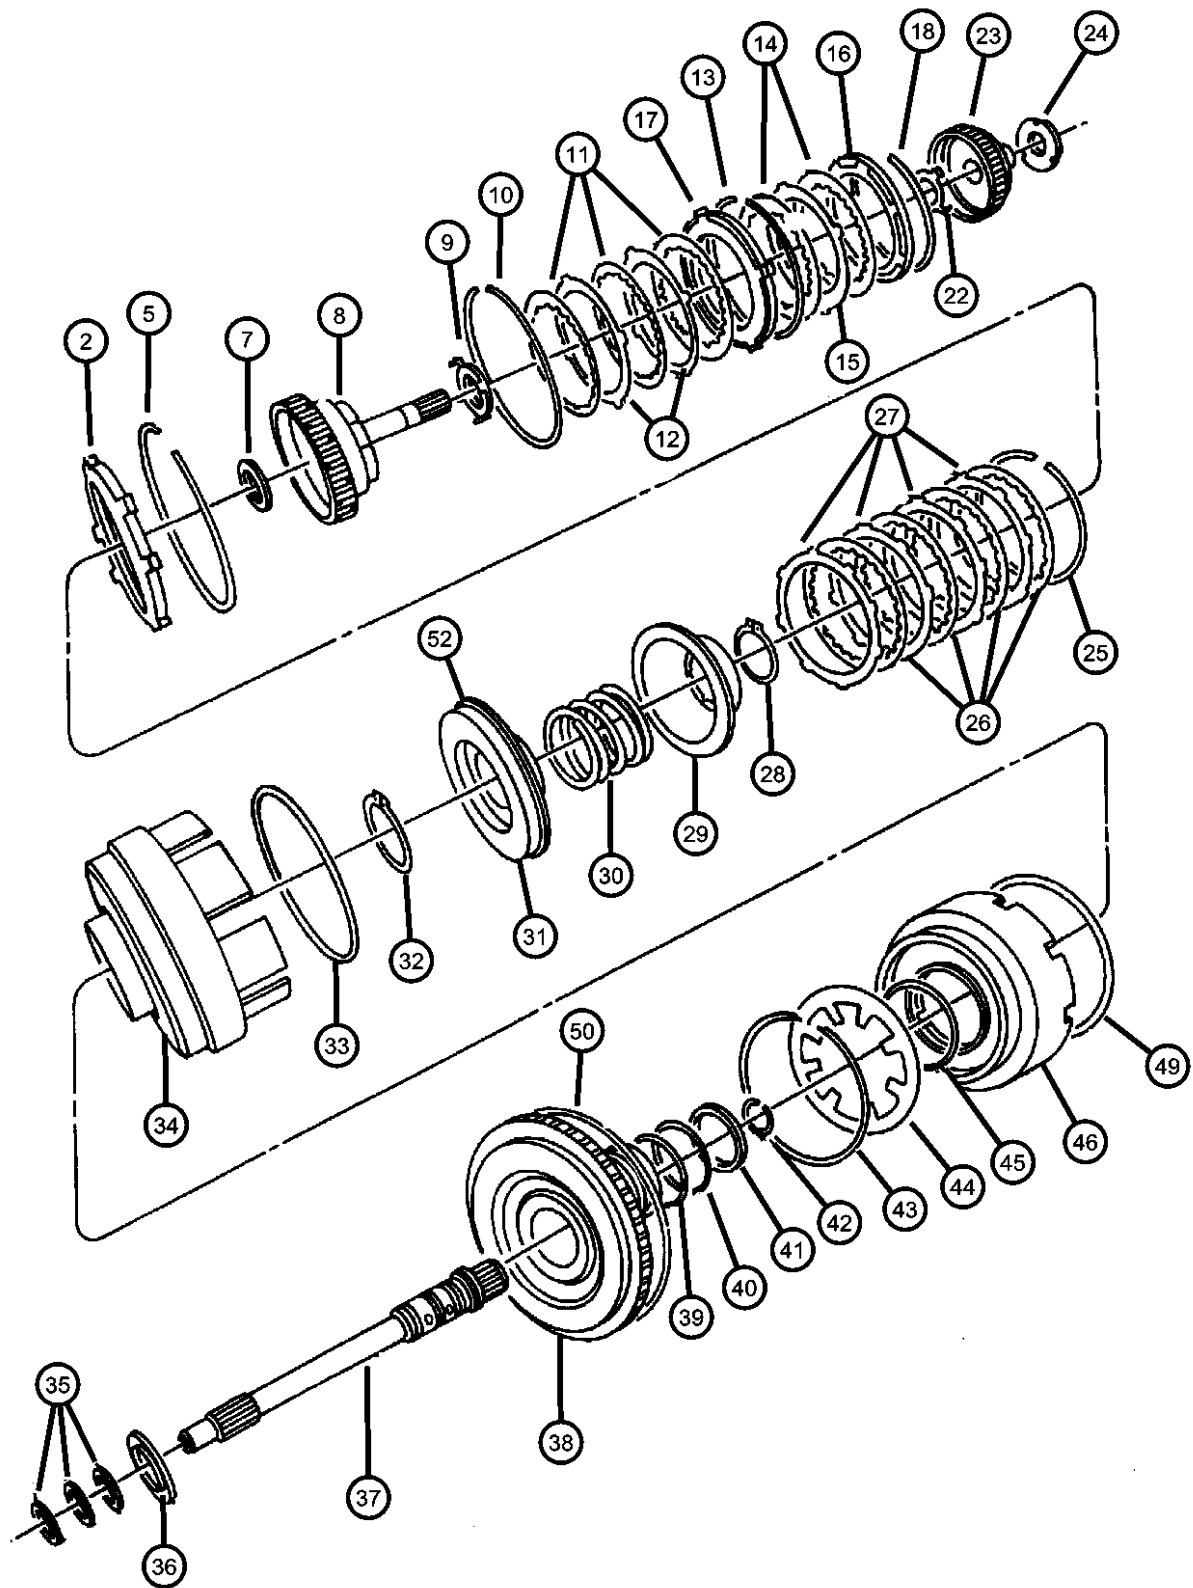


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
29	04431612	1	T				DG6		RETAINER AND SEAL, Transmission U/Drive Spring
		1	J, U				DG6		
30	04377177	1	T				DG6		SPRING, Drive Lower Case
		1	J, U				DG6		
31	05103073AA	1	T				DG6		GASKET PACKAGE, Transmission
		1	J, U				DG6		
32	06507226AA	1	T				DG6		SNAP RING
		1	J, U				DG6		
33	04659871	1	T				DG6		SEAL, Piston Outer, 140mm OD
		1	J, U				DG6		
34	04659935	1	T				DG6		RETAINER, Transmission Input Clutch
		1	J, U				DG6		
35	04446543	3	T				DG6		SEAL, Input Shaft
		3	J, U				DG6		
36	04412209	1	T				DG6		THRUST BEARING
		1	J, U				DG6		
37	04626452AB	1	T				DG6		INPUT SHAFT PACKAGE, Transaxle
		1	J, U				DG6		
38		1							HUB, Input Clutch, Serviced in Assembly, (NOT SERVICED)

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Clutch, Input Shaft  
Figure 42RLE-410

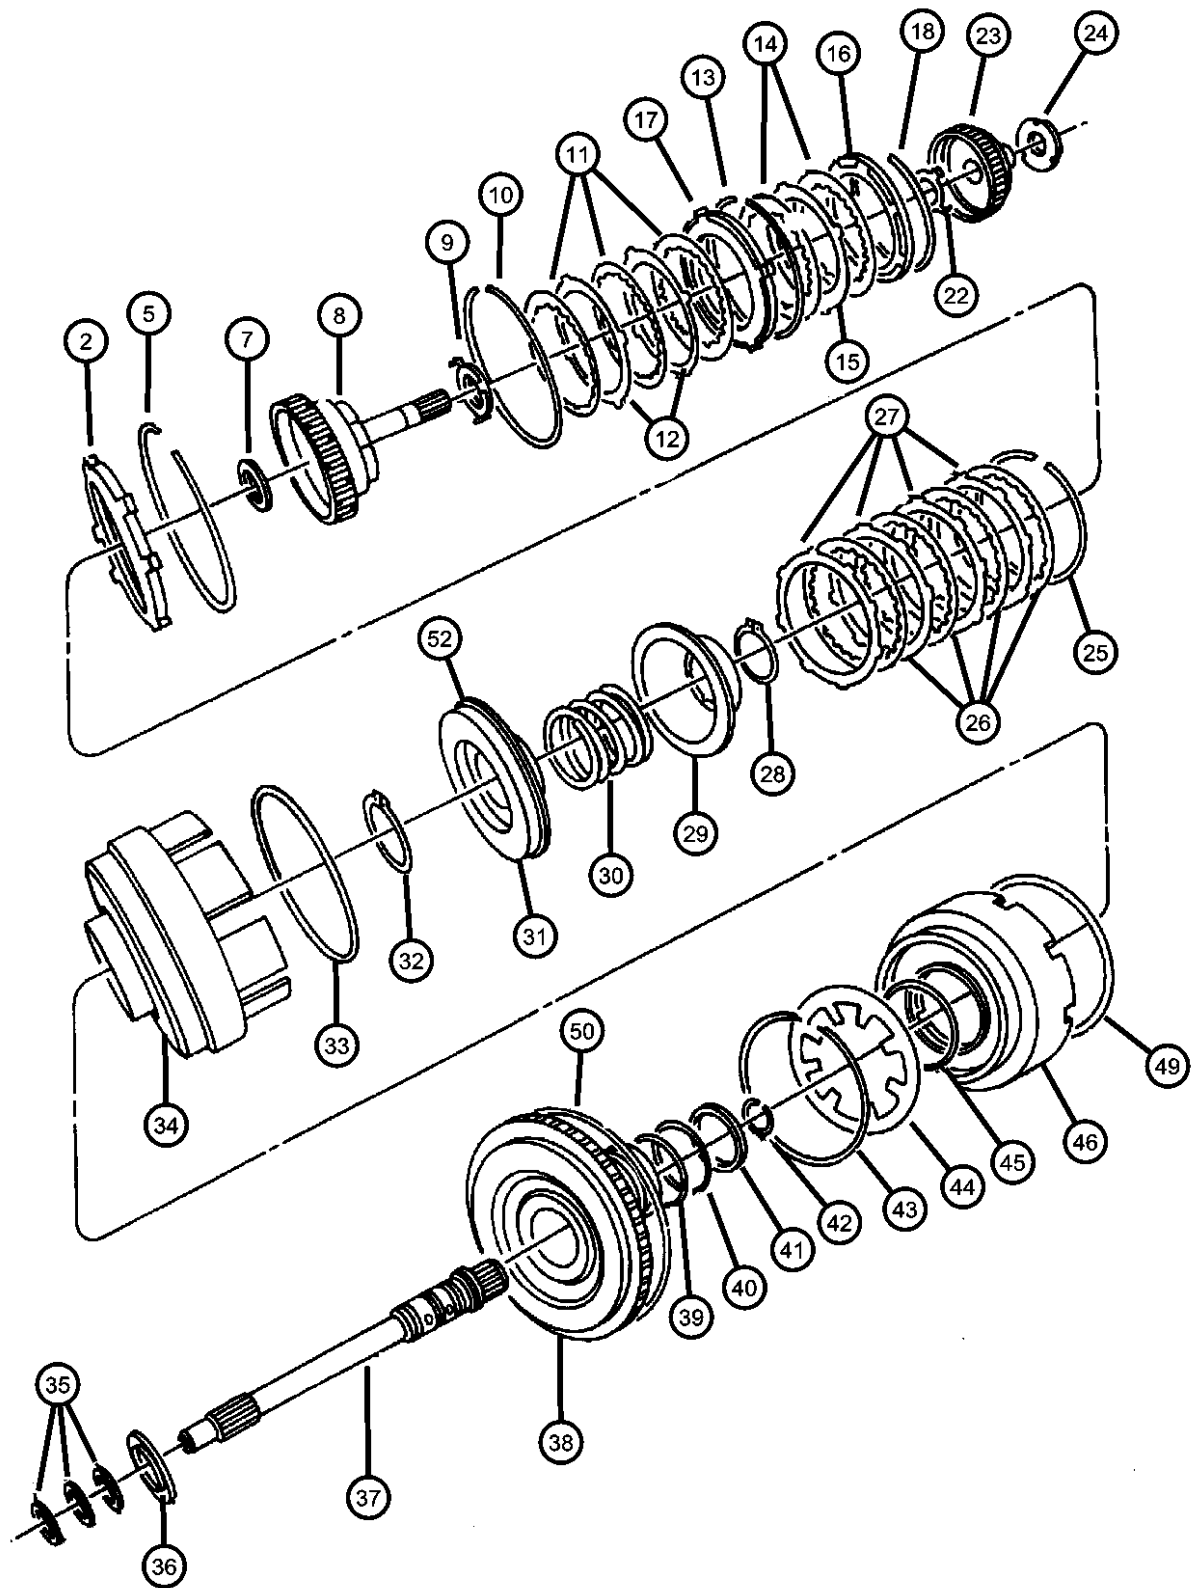


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
39	06502271	1	T				DG6		O RING, Transmission Clutch
		1	J, U				DG6		
40	06502269	1	T				DG6		O RING, Transmission Clutch
		1	J, U				DG6		
41	04659391AB	1	T				DG6		SEAL, Under Drive
		1	J, U				DG6		
42	06501702	1	T				DG6		SNAP RING
		1	J, U				DG6		
43	04412203	1	T				DG6		SNAP RING
		1	J, U				DG6		
44	04412202	1	T				DG6		SPRING, Overdrive Piston
		1	J, U				DG6		
45	06033158	1	T				DG6		O RING, Reverse & O/Drive Clutch Piston, Transmission
		1	J, U				DG6		
46	05017518AB	1	T				DG6		HUB PACKAGE, Input Clutch
		1	J, U				DG6		
-47		1							PISTON, Reverse and Overdrive, Serviced in Assembly, (NOT SERVICED)
-48	04531903	1	T				DG6		FILTER, Reverse And O/D Clutch
		1	J, U				DG6		

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Clutch, Input Shaft  
Figure 42RLE-410

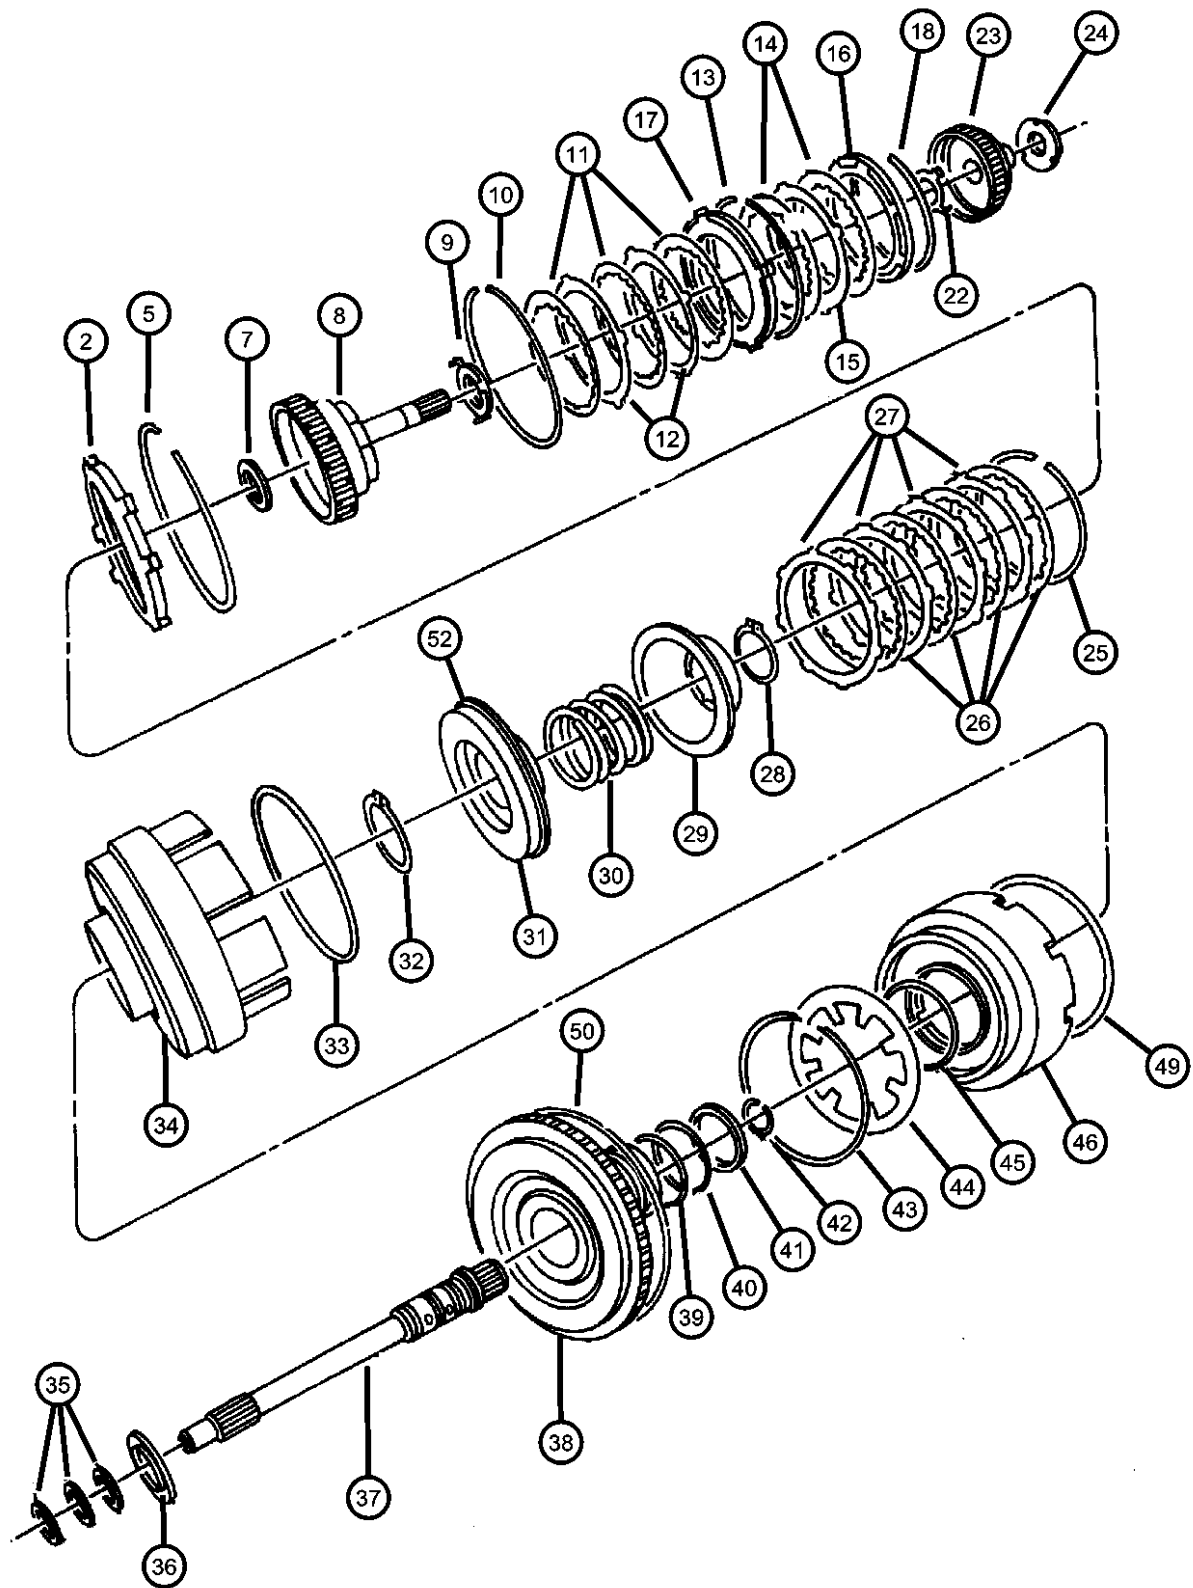


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
49	04659056	1	T				DG6		SEAL, Reverse Servo Piston
		1	J, U				DG6		
50	04659056	1	T				DG6		SEAL, Reverse Servo Piston
		1	J, U				DG6		
-51	04431647	1	T				DG6		PISTON, 2nd and 4th Clutch
		1	J, U				DG6		
52	04431610	1	T				DG6		PISTON, Underdrive
		1	J, U				DG6		Also Available In Overhaul Package Also Available In Overhaul Package

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Gear Train  
Figure 42RLE-420

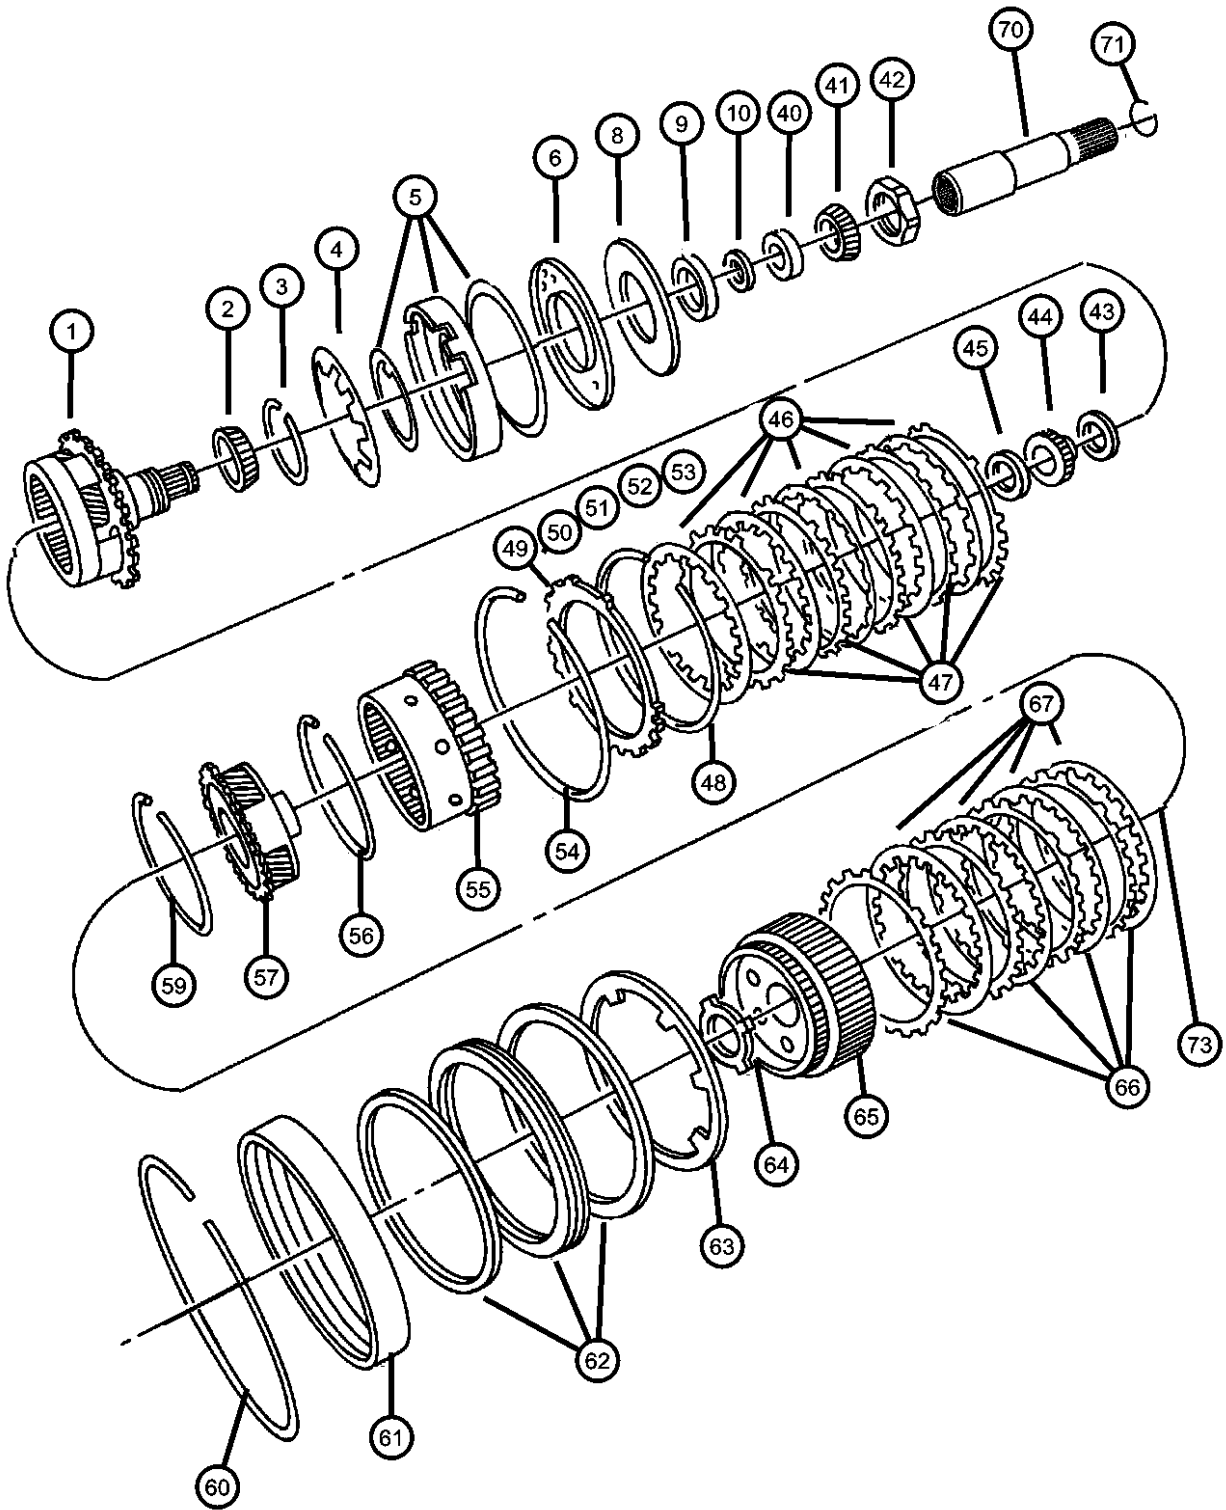


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DG6]=4 Speed Automatic Transmission - 42RLE									
1	05101874AA	1	T				DG6		CARRIER AND BEARING, Planet Pinion
		1	J, U				DG6		
2	04412235	1	T				DG6		BEARING CONE, Output Shaft
		1	J, U				DG6		
3	06501853	1	T				DG6		SNAP RING
		1	J, U				DG6		
4	04800236AA	1	T				DG6		SPRING, Low/Reverse Clutch Piston
		1	J, U				DG6		
5	04800261AA	1	T				DG6		PISTON, Low and Reverse Clutch
		1	J, U				DG6		
6	04800255AA	1	T				DG6		RETAINER, Transmission Low and Reverse Clutch Piston
		1	J, U				DG6		
-7	06501819	3	T				DG6		SCREW AND WASHER, Pan Head, M5x0.8x11.00
		3	J, U				DG6		
8	04800253AA	1	T				DG6		GASKET, Clutch Retainer
		1	J, U				DG6		
9	04412234	1	T				DG6		BEARING CUP, Output Shaft

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				EDO = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Gear Train  
Figure 42RLE-420

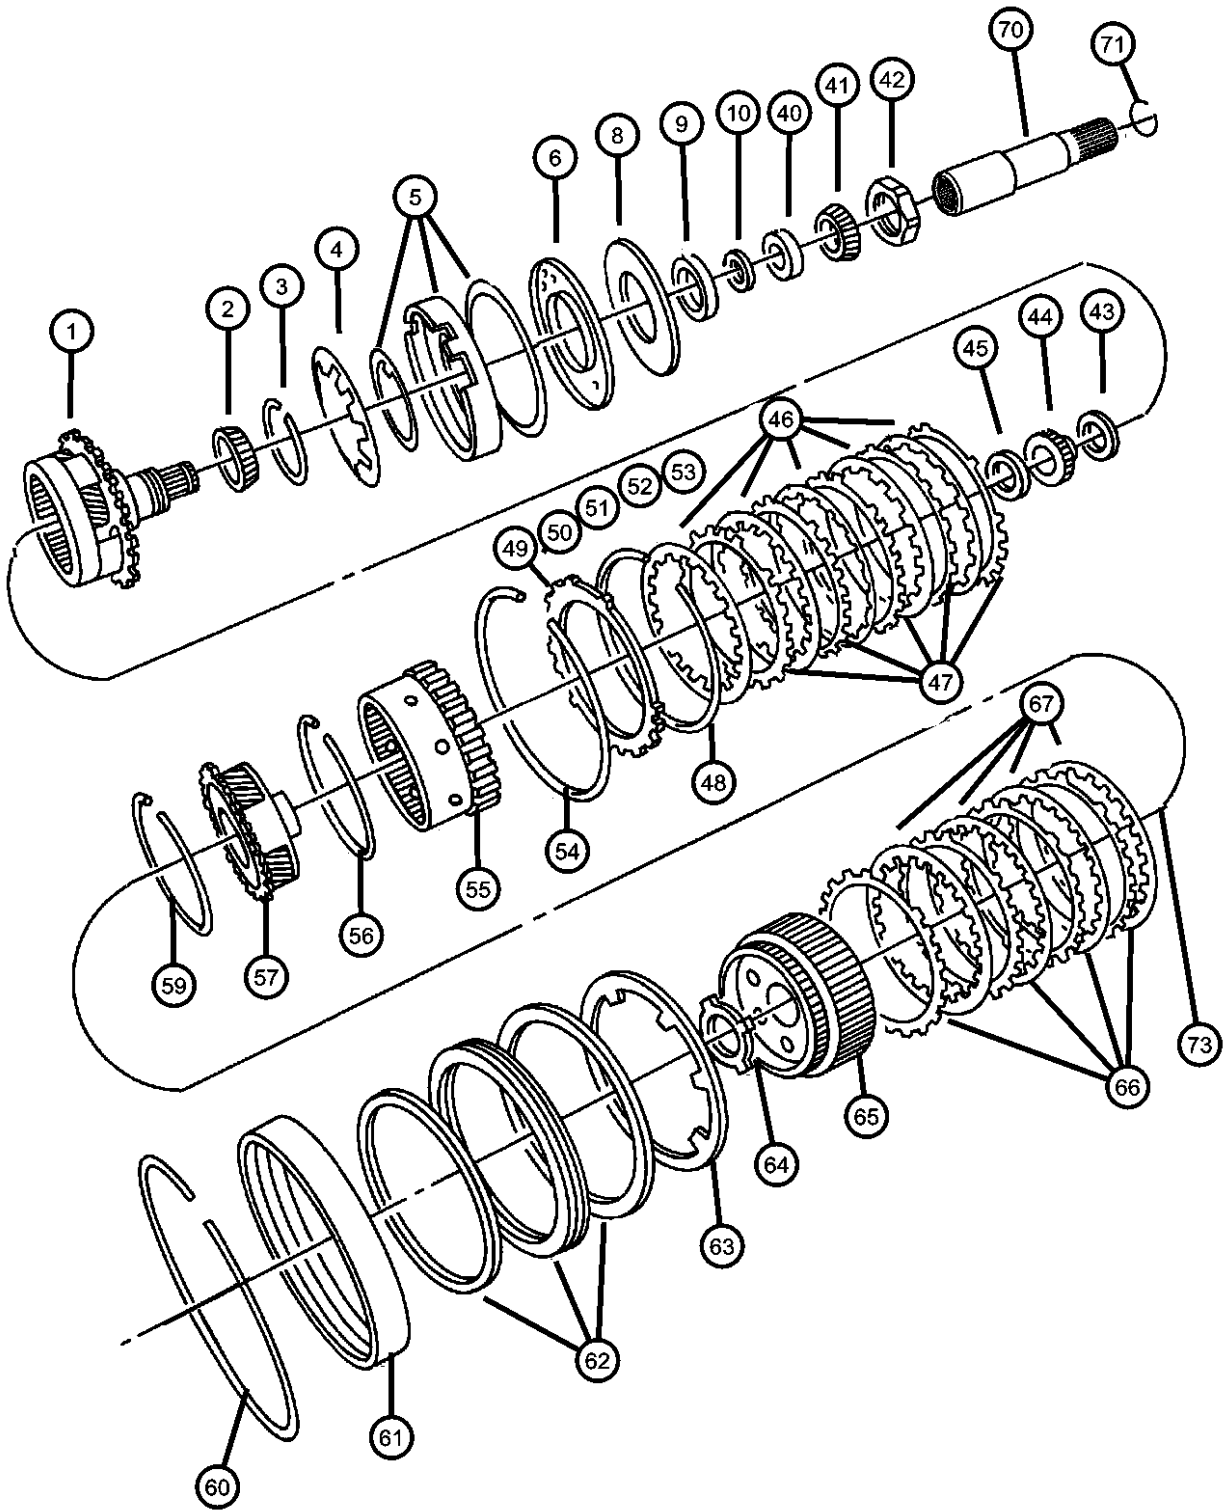


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10		1	J, U				DG6		SHIM, Carrier Bearing, 5.17 - 5.19mm
	05280020	AR	T				DG6		
		AR	J, U				DG6		
-11									SHIM, Carrier Bearing, 5.20 - 5.22mm
	05280021	AR	T				DG6		
		AR	J, U				DG6		
-12									SHIM, Carrier Bearing, 5.23 - 5.25mm
	05280022	AR	T				DG6		
		AR	J, U				DG6		
-13									SHIM, Carrier Bearing, 5.26 - 5.28mm
	05280023	AR	T				DG6		
		AR	J, U				DG6		
-14									SHIM, Carrier Bearing, 5.29 - 5.31mm
	05280024	AR	T				DG6		
		AR	J, U				DG6		
-15									SHIM, Carrier Bearing, 5.32 - 5.34mm
	05280025	AR	T				DG6		
		AR	J, U				DG6		
-16									SHIM, Carrier Bearing, 5.35 - 5.37mm
	05280026	AR	T				DG6		
		AR	J, U				DG6		
-17									SHIM, Carrier Bearing, 5.38 - 5.40mm
	05280027	AR	T				DG6		
		AR	J, U				DG6		
-18									SHIM, Carrier Bearing, 5.41 - 5.43mm

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Gear Train  
Figure 42RLE-420

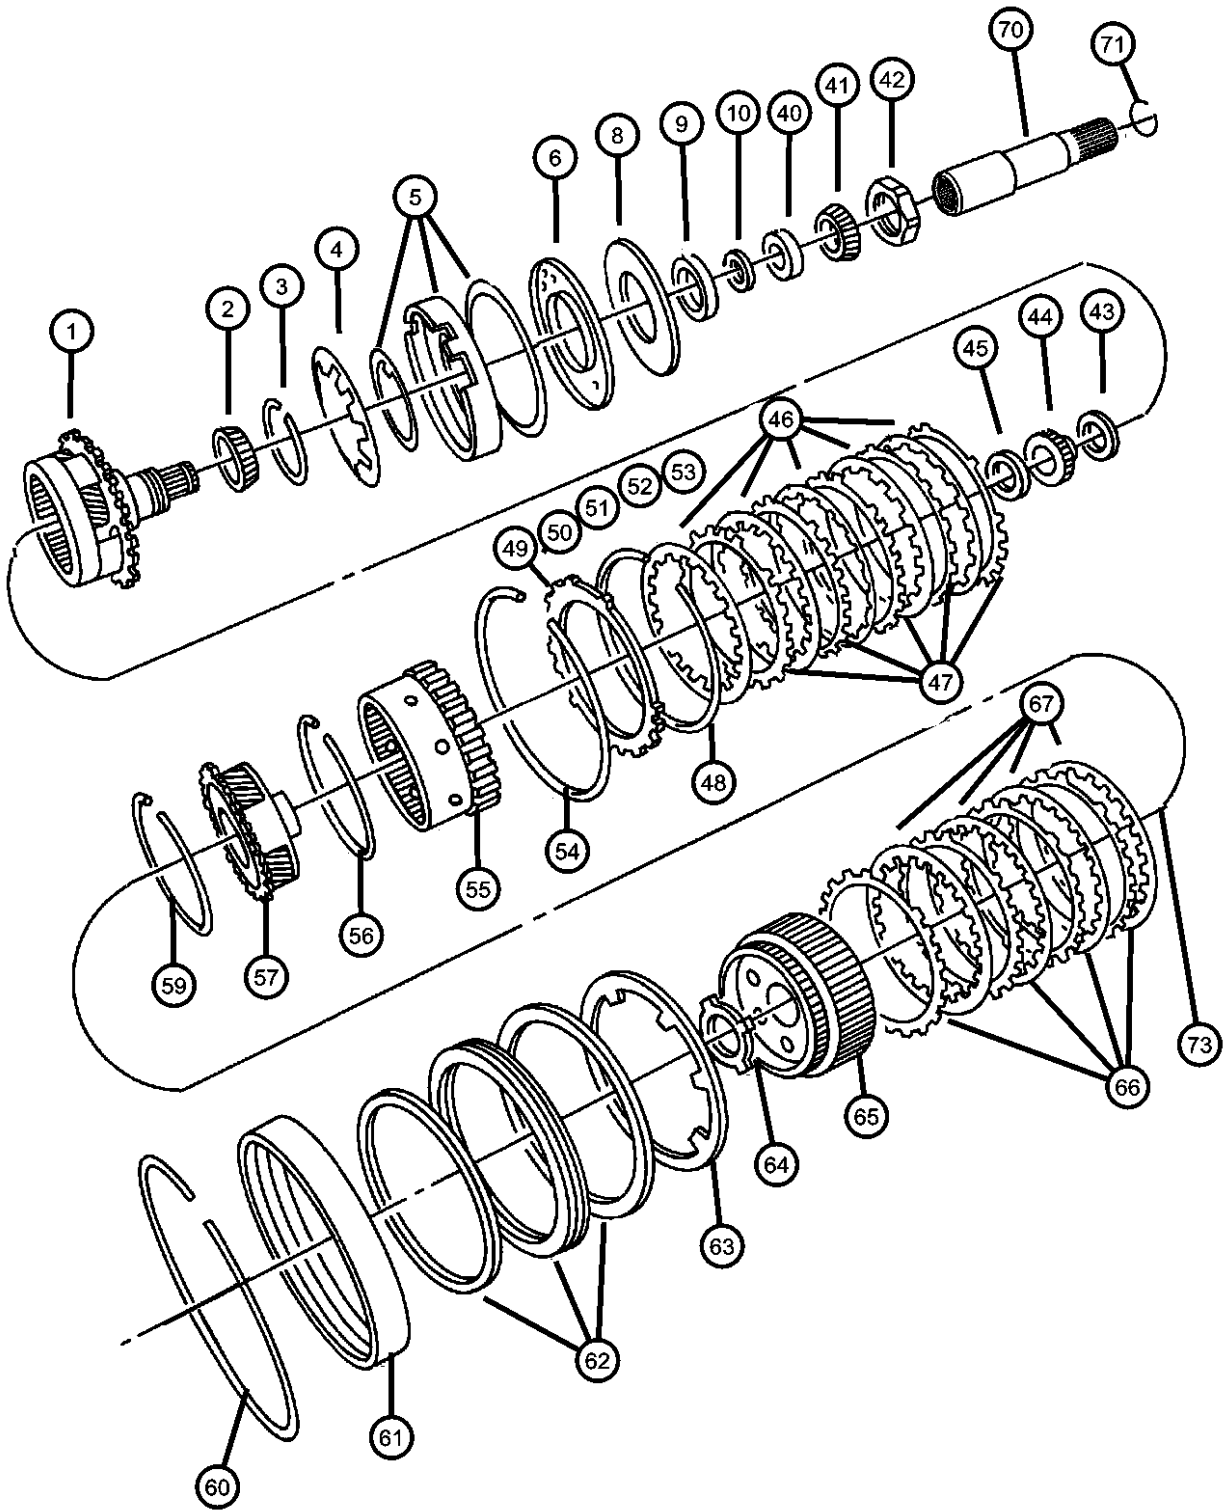

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	05280028	AR	T				DG6		
		AR	J, U				DG6		
-19	05280029	AR	T				DG6		SHIM, Carrier Bearing, 5.44 - 5.46mm
		AR	J, U				DG6		
-20	05280030	AR	T				DG6		SHIM, Carrier Bearing, 5.47 - 5.49mm
		AR	J, U				DG6		
-21	05280031	AR	T				DG6		SHIM, Carrier Bearing, 5.50 - 5.52mm
		AR	J, U				DG6		
-22	05280032	AR	T				DG6		SHIM, Carrier Bearing, 5.53 - 5.55mm
		AR	J, U				DG6		
-23	05280033	AR	T				DG6		SHIM, Carrier Bearing, 5.56 - 5.58mm
		AR	J, U				DG6		
-24	05280034	AR	T				DG6		SHIM, Carrier Bearing, 5.59 - 5.61mm
		AR	J, U				DG6		
-25	05280035	AR	T				DG6		SHIM, Carrier Bearing, 5.62 - 5.64mm
		AR	J, U				DG6		
-26	05280036	AR	T				DG6		SHIM, Carrier Bearing, 5.65 - 5.67mm
		AR	J, U				DG6		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				EDO = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	


Gear Train  
Figure 42RLE-420

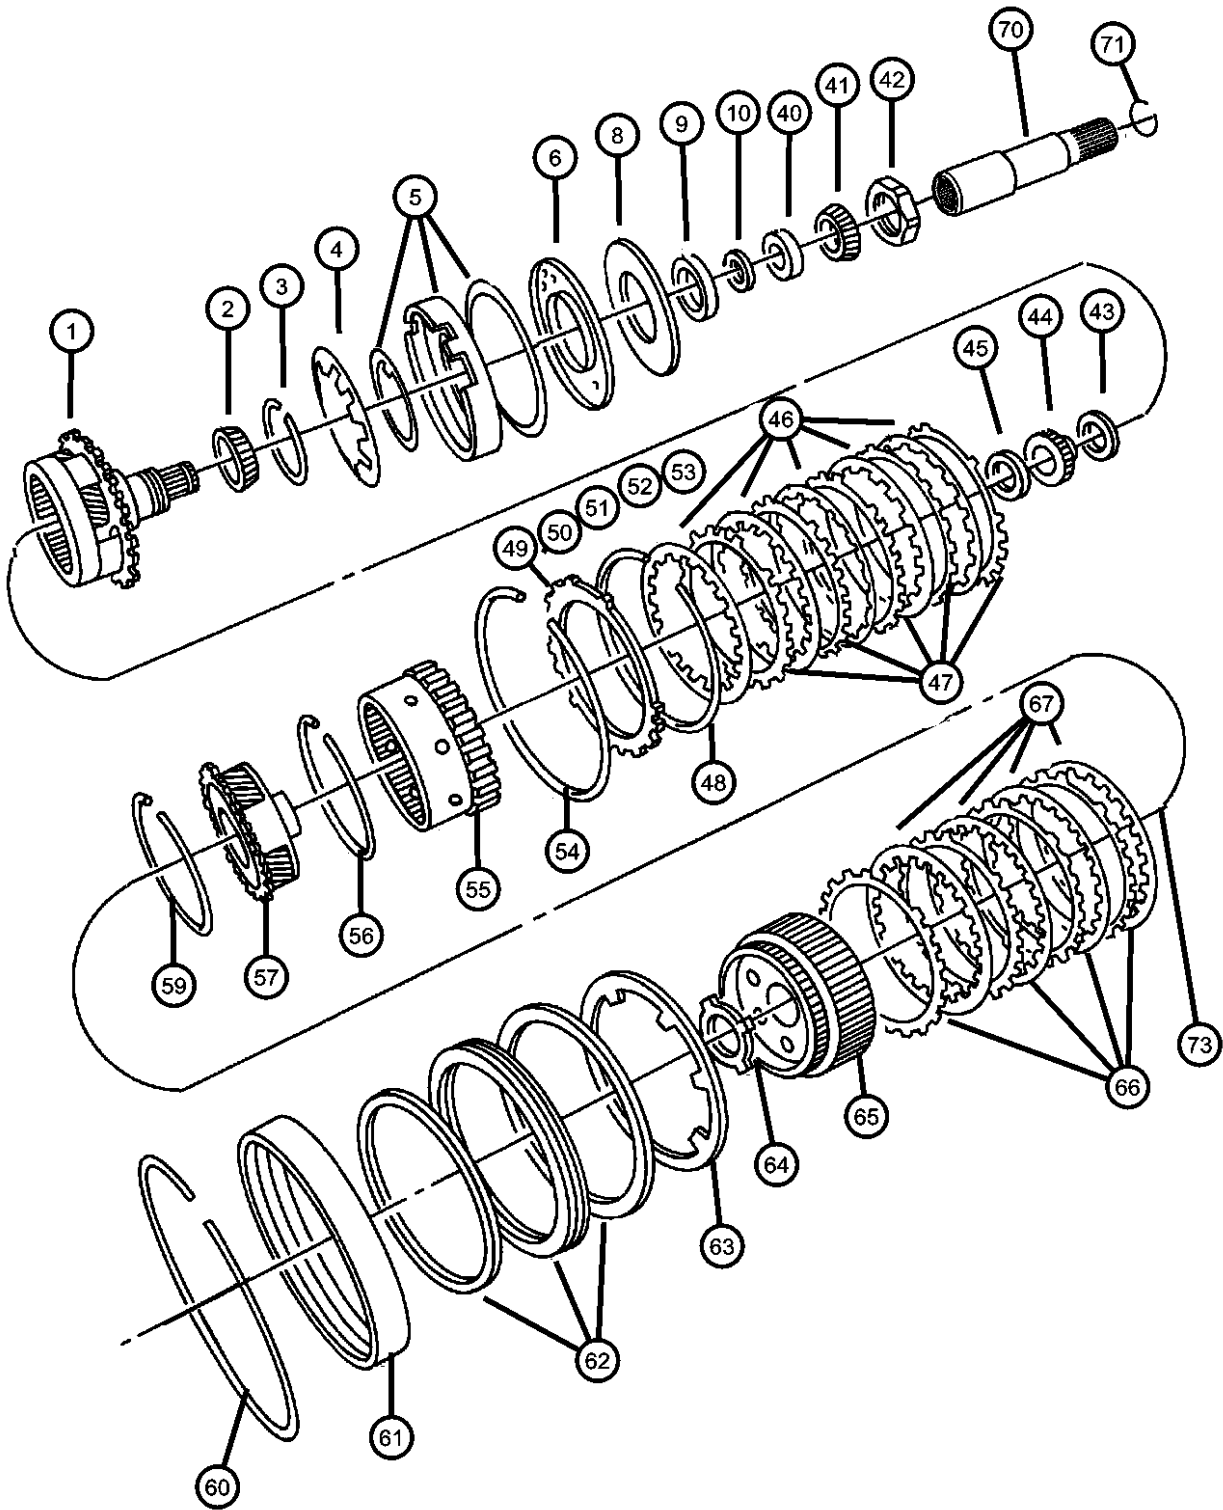

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-27	05280037	AR	T				DG6		SHIM, Carrier Bearing, 5.68 - 5.70mm
		AR	J, U				DG6		
-28	05280038	AR	T				DG6		SHIM, Carrier Bearing, 5.71 - 5.73mm
		AR	J, U				DG6		
-29	05280039	AR	T				DG6		SHIM, Carrier Bearing, 5.74 - 5.76mm
		AR	J, U				DG6		
-30	05280040	AR	T				DG6		SHIM, Carrier Bearing, 5.77 - 5.79mm
		AR	J, U				DG6		
-31	05280041	AR	T				DG6		SHIM, Carrier Bearing, 5.80 - 5.82mm
		AR	J, U				DG6		
-32	05280042	AR	T				DG6		SHIM, Carrier Bearing, 5.83 - 5.85mm
		AR	J, U				DG6		
-33	05280043	AR	T				DG6		SHIM, Carrier Bearing, 5.86 - 5.88mm
		AR	J, U				DG6		
-34	05280044	AR	T				DG6		SHIM, Carrier Bearing, 5.89 - 5.91mm
		AR	J, U				DG6		
-35	05280045	AR	T				DG6		SHIM, Carrier Bearing, 5.92 - 5.94mm

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Gear Train  
Figure 42RLE-420

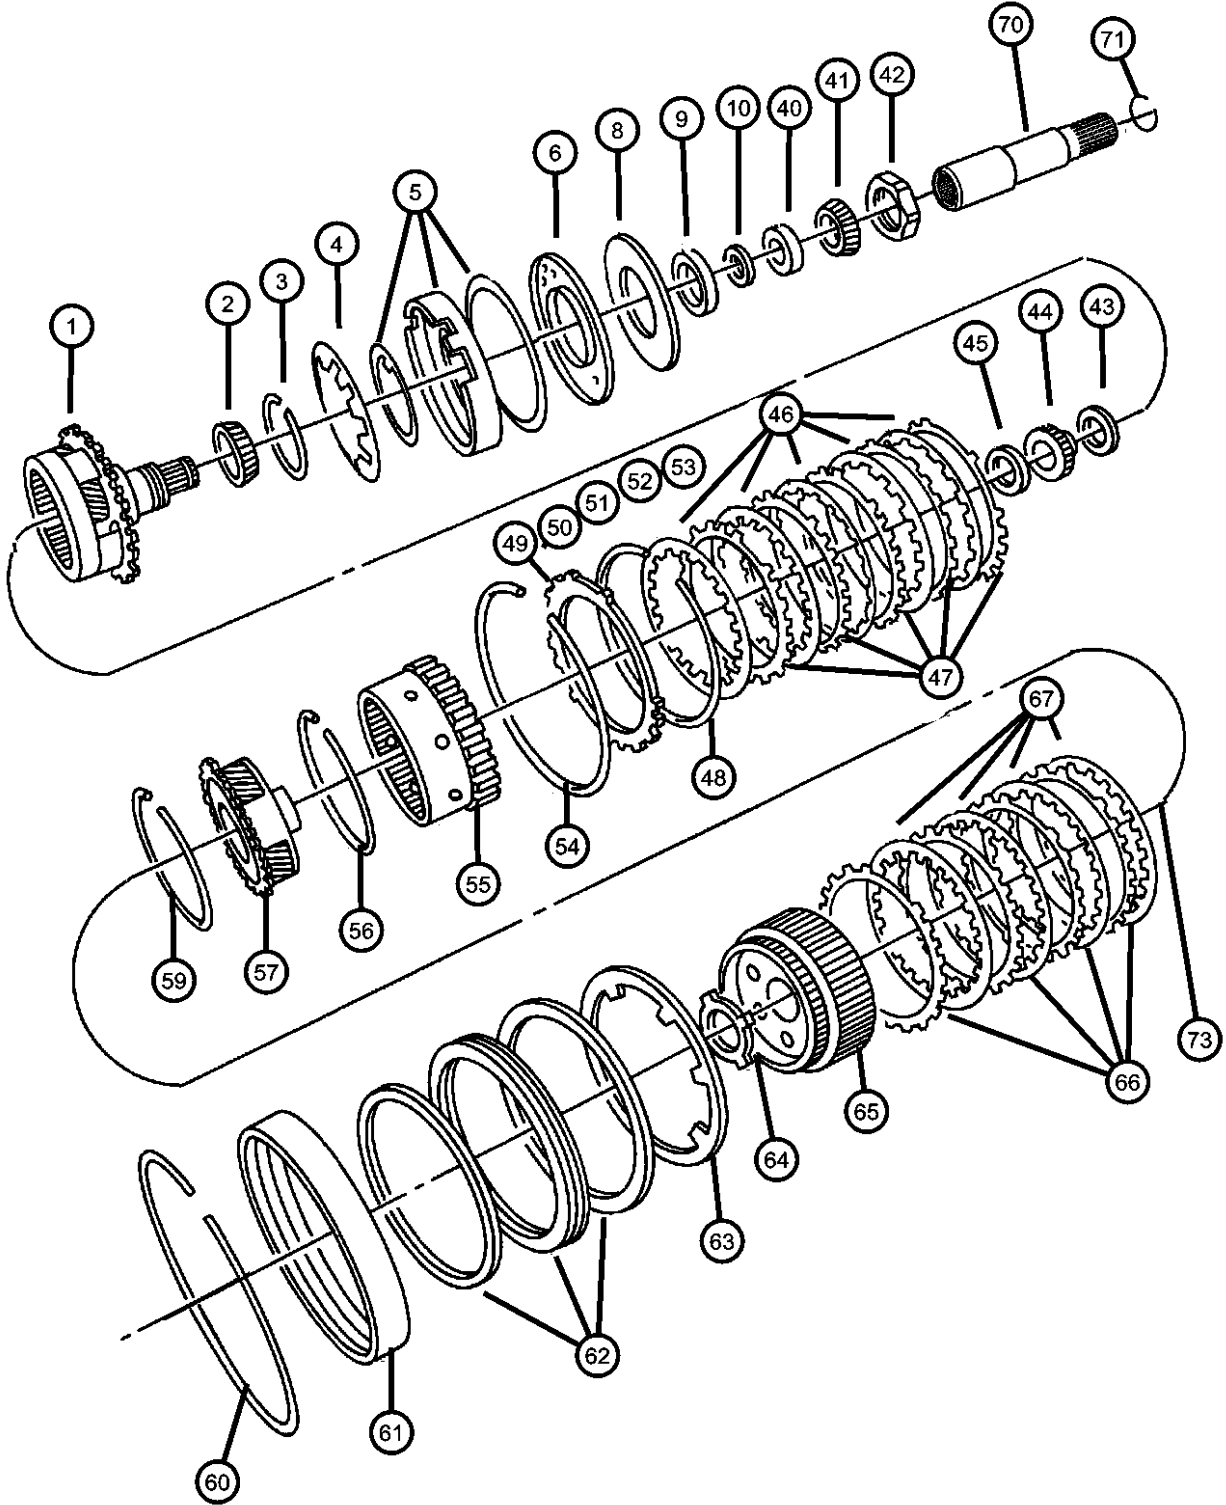


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-36		AR	J, U				DG6		SHIM, Carrier Bearing, 5.95 - 5.97mm
	05280046	AR	T				DG6		
		AR	J, U				DG6		
-37									SHIM, Carrier Bearing, 5.98 - 6.00mm
	05280047	AR	T				DG6		
		AR	J, U				DG6		
-38									SHIM, Carrier Bearing, 6.01 - 6.03mm
	05280048	AR	T				DG6		
		AR	J, U				DG6		
-39									SHIM, Carrier Bearing, 6.04 - 6.06mm
	05280049	AR	T				DG6		
		AR	J, U				DG6		
40									BEARING CUP, Differential
	04567022	1	T				DG6		
		1	J, U				DG6		
41									BEARING
	04567025AB	1	T				DG6		
		1	J, U				DG6		
42									NUT, Rear Carrier, M36 x 1.50
	06502476	1	T				DG6		
		1	J, U				DG6		
43									THRUST BEARING
	04412209	1	T				DG6		
		1	J, U				DG6		
44									GEAR, Sun
	04377080	1	T				DG6		
		1	J, U				DG6		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	




Gear Train  
Figure 42RLE-420

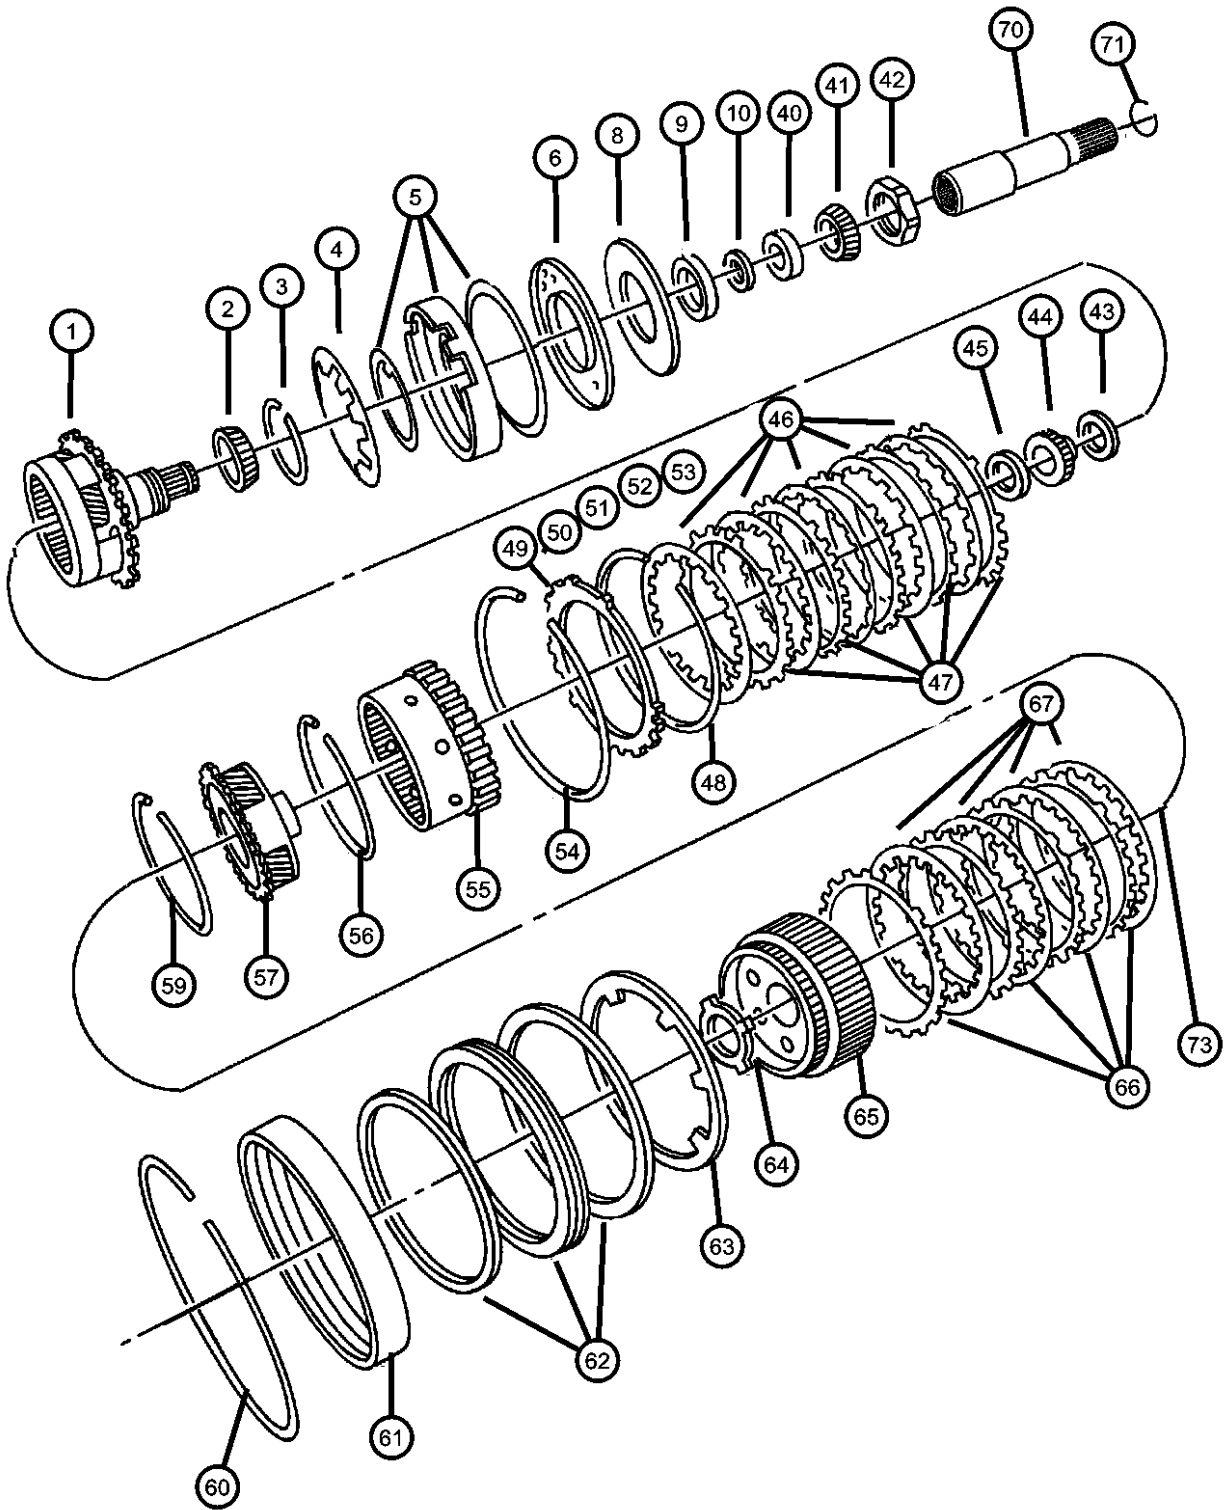

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
45	04412229AB	1	T				DG6		THRUST BEARING, Rear Sun Gear, Front
		1	J, U				DG6		
46	04531678	4	T				DG6		DISC, Clutch
	04567573AB	5	J, U				DG6		
47	04659055	5	T				DG6		PLATE, Transmission Clutch Reaction
		5	J, U				DG6		
48	04412395	1	T				DG6		SNAP RING
		1	J, U				DG6		
49	04897452AA	1	T				DG6		PLATE PACKAGE, Low/Reverse Clutch, 5.753/6.012
		1	J, U				DG6		
50	04897453AA	1	T				DG6		PLATE PACKAGE, Low/Reverse Clutch, 6.013/6.272
		1	J, U				DG6		
51	04897454AA	1	T				DG6		PLATE PACKAGE, Low/Reverse Clutch, 6.273/6.532
		1	J, U				DG6		
52	04897455AA	1	T				DG6		PLATE PACKAGE, Low/Reverse Clutch, 6.533/6.792
		1	J, U				DG6		
53	04897456AA	1	T				DG6		PLATE PACKAGE, Low/Reverse Clutch, 6.793/7.052
		1	J, U				DG6		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	


Gear Train  
Figure 42RLE-420

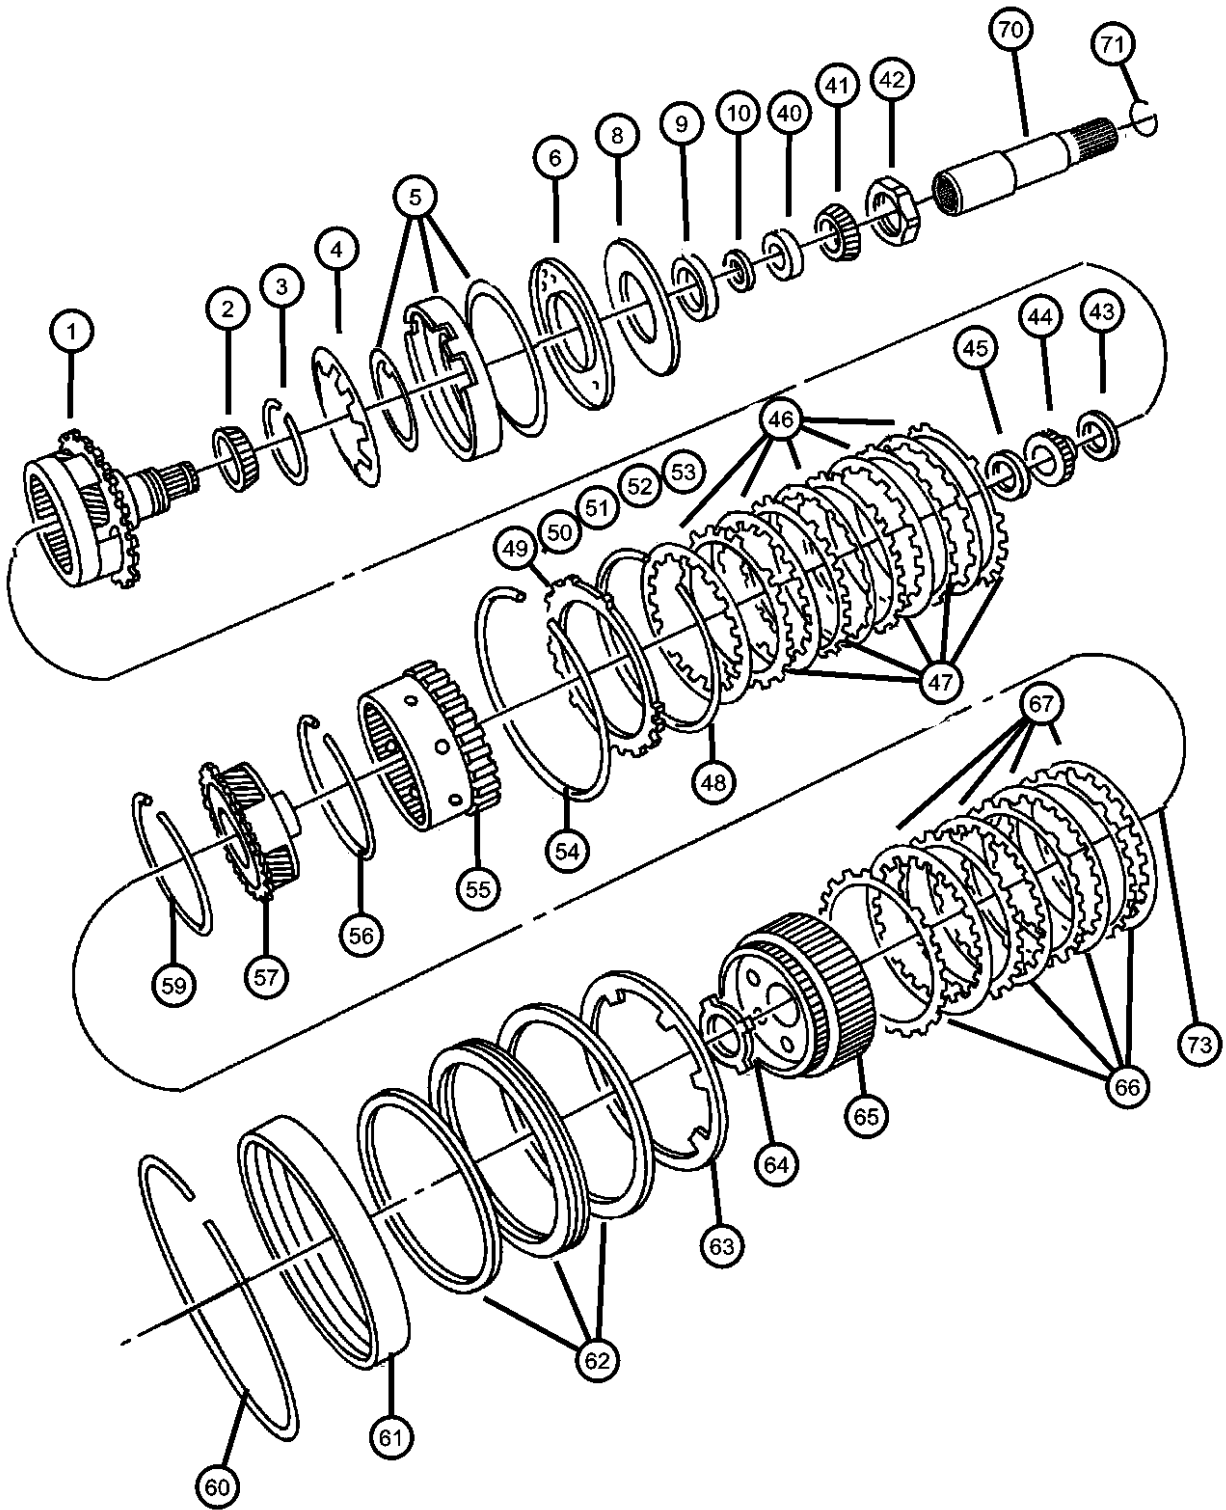

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
54	04799858AA	1	T				DG6		SNAP RING
		1	J, U				DG6		
55	04799794	1	T				DG6		GEAR, Annulus
		1	J, U				DG6		
56	06035238	2	T				DG6		SNAP RING
		2	J, U				DG6		
57	04567539AB	1	T				DG6		CARRIER, Planetary Pinion
		1	J, U				DG6		
-58	04412209	1	T				DG6		THRUST BEARING
		1	J, U				DG6		
59	06035238	2	T				DG6		SNAP RING
		2	J, U				DG6		
60	04505591	1	T				DG6		SNAP RING
		1	J, U				DG6		
61	05102880AA	1	T				DG6		RETAINER PACKAGE, 2nd & 4th Clutch Piston
		1	J, U				DG6		
62	05102880AA	1	T				DG6		RETAINER PACKAGE, 2nd & 4th Clutch Piston
		1	J, U				DG6		
63									SPRING, 2nd And 4th Clutch Piston

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16v	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
			EDO = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions


Gear Train  
Figure 42RLE-420

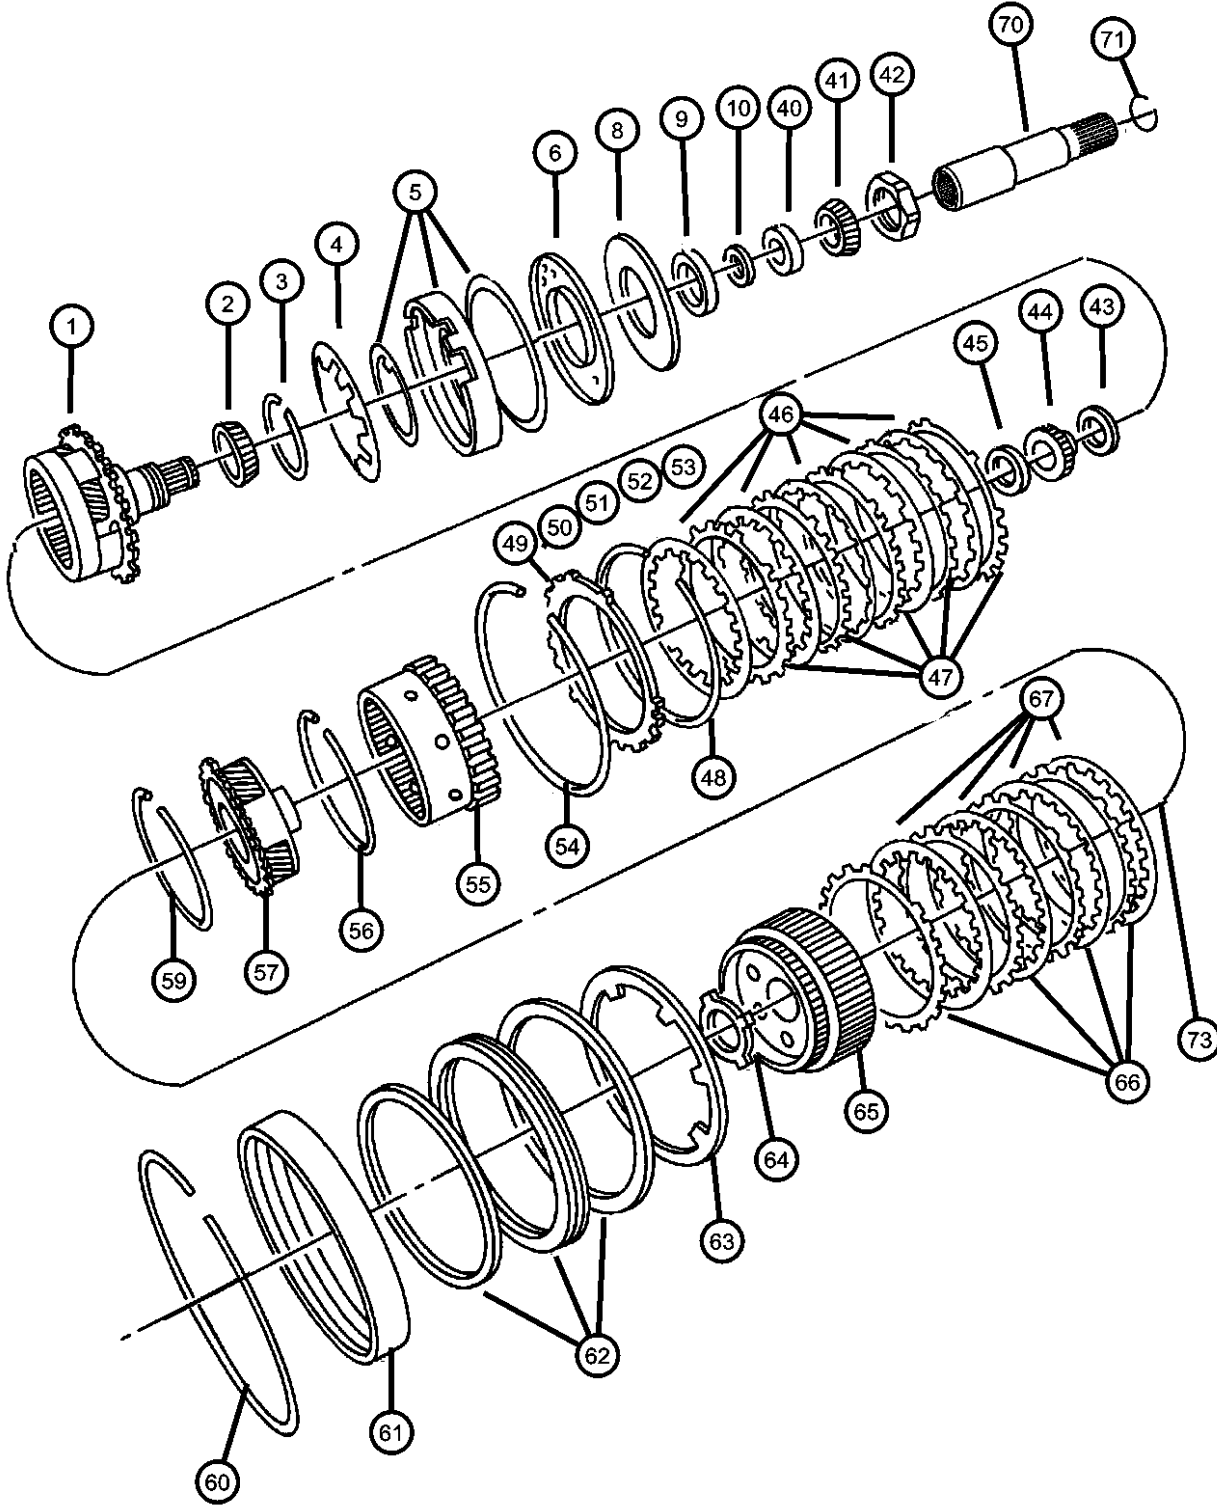

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
64	04412248	1	T				DG6		THRUST WASHER, Second and Fourth Clutch
		1	J, U				DG6		
65	04412216AB	1	T				DG6		HUB AND GEAR, Second And Fourth Clutch
		1	J, U				DG6		
66	04659618AB	1	T				DG6		PLATE, Transmission Clutch Reaction
		1	J, U				DG6		
67	04659054	4	T				DG6		DISC, Clutch
		4	J, U				DG6		
-68	04799860AB	4	T				DG6		THRUST WASHER, Planet Pinion
		4	J, U				DG6		
-69	03681949	10	T				DG6		ROLLER, Front and Rear Pinion
		10	J, U				DG6		
70	03743664	95	T				DG6		SHAFT, Intermediate
		95	J, U				DG6		
71	52852915AA	1	J, U				DG6		SNAP RING
-72	06501702	1	J, U				DG6		SHAFT, Output
73	52854168AA	1	T				DG6		BEARING, Output Shaft
	02466224	1	T				DG6		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DOHC 16v SMPI	DDD = Transmission - 5-Speed HD	Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V	Turbo Diesel	DG4 = Transmission-Multi-Speed	Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl	Turbo Diesel	DG6 = Transmission-4-Spd.	Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic	5-45RFE
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

Valve Body  
Figure 42RLE-710

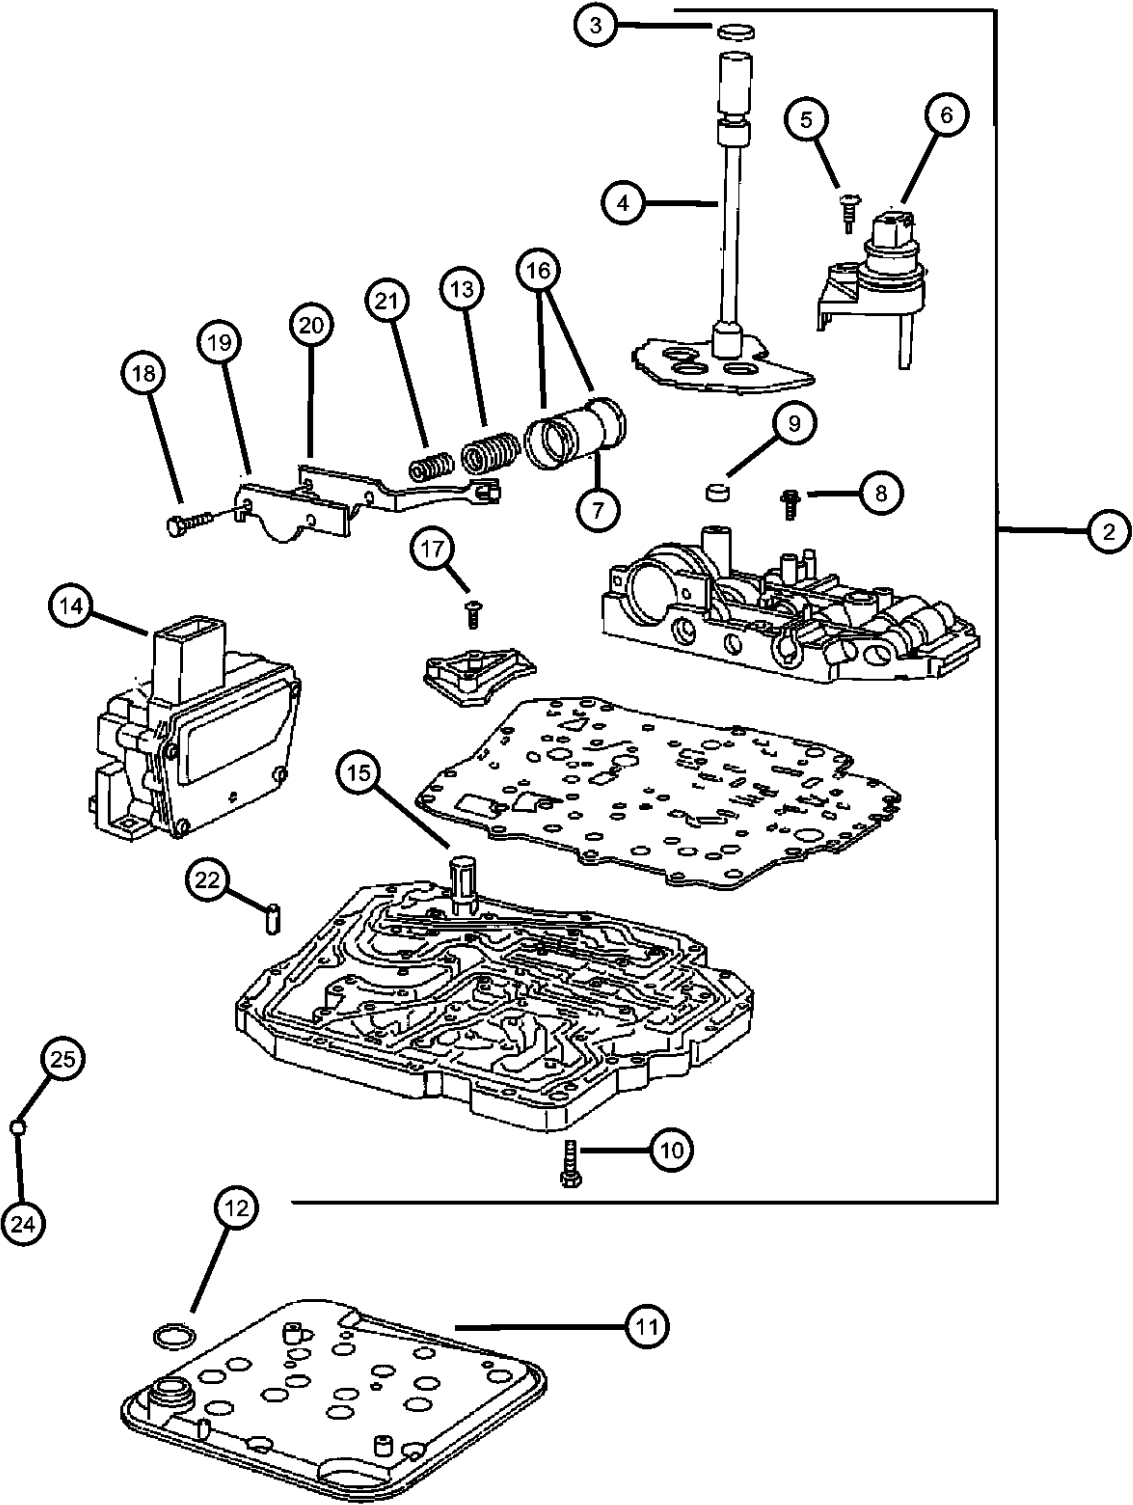


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Gasket and Seal Package includes all Valve Body Seals and Transmission Filter Sales Codes: [DG6]=4 Speed Automatic Transmission - [42RLE]									
-1									GASKET AND SEAL PACKAGE, Valve Body
	05101917AB	1	T				DG6		
		1	J, U				DG6		
2	52854169AA	1	J, U				DG6		VALVE BODY
		1	T				DG6		
3	04412836	1	T				DG6		SEAL, Manual Valve Lever
		1	J, U				DG6		
4	04539665	1	J, U				DG6		LEVER, Manual Valve
		1	T				DG6		
5	06506245AA	1	J, U				DG6		SCREW
		1	T				DG6		
6	04659677AC	1	T				DG6		SENSOR, Manual Valve Lever
		1	J, U				DG6		
7	04446620AC	1	J, U				DG6		PISTON, Accumulator
		1	T				DG6		
8	06500215	2	T				DG6		SCREW AND WASHER, Pan Head, M5x.8x25
		2	J, U				DG6		
9	04412291	1	T				DG6		SEAL, Clutch Feed

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Valve Body  
Figure 42RLE-710

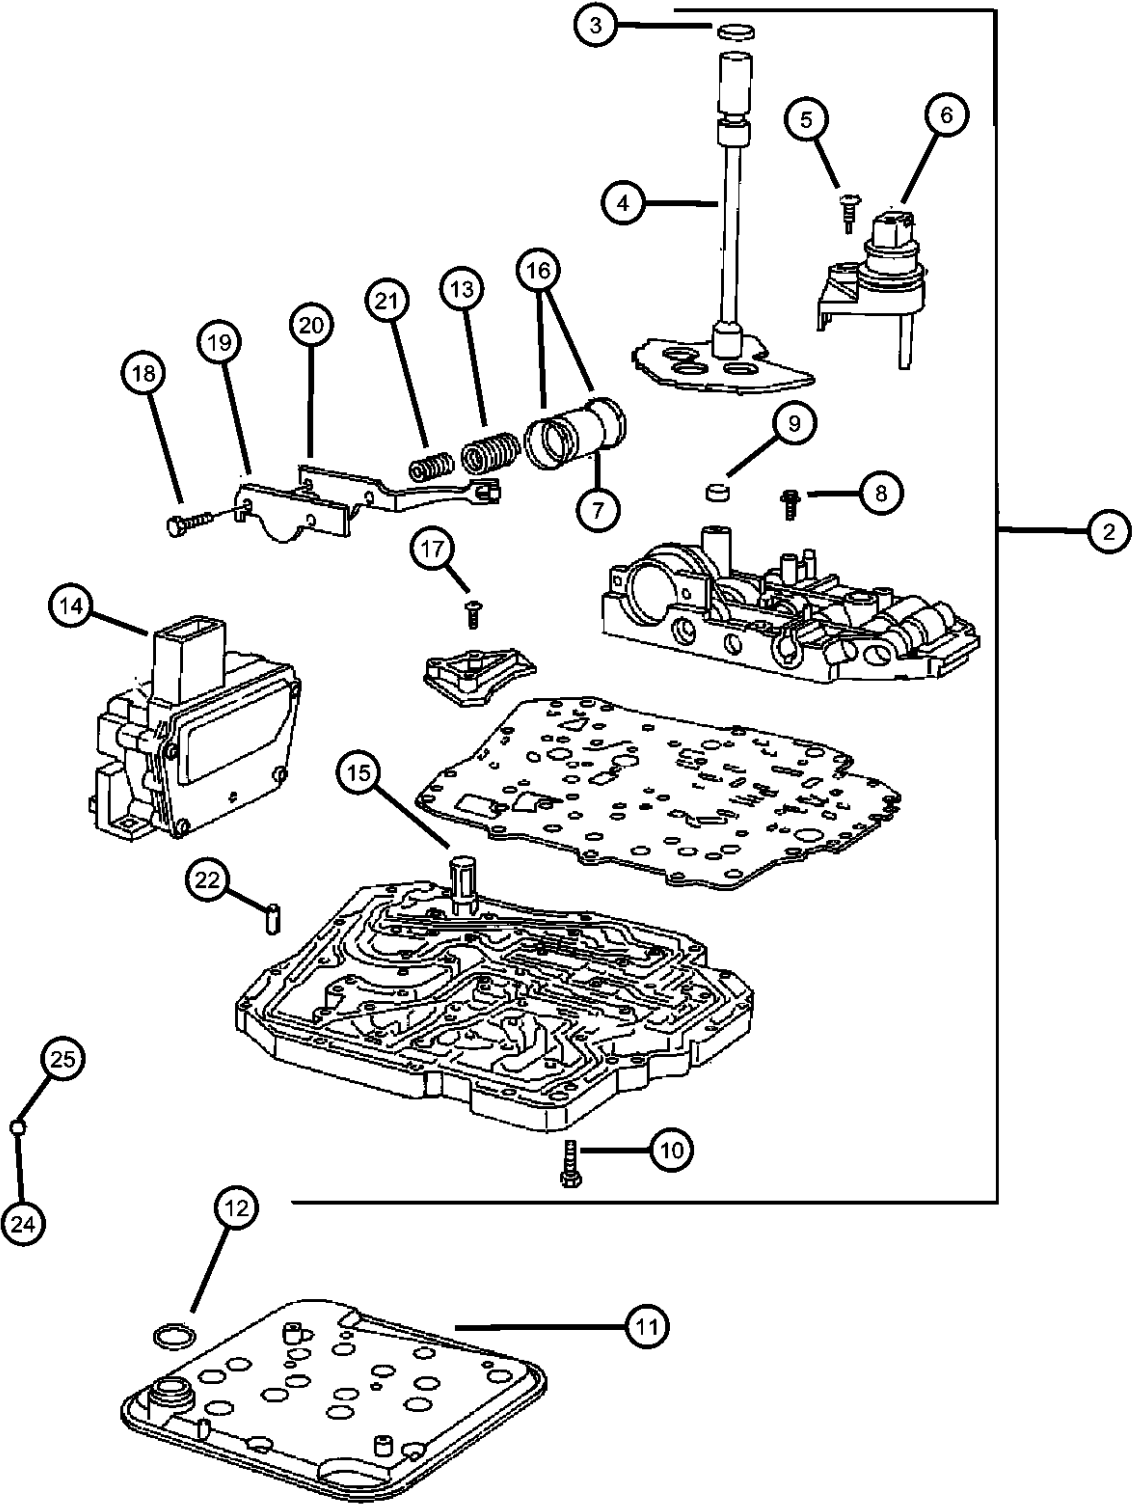


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10		1	J, U				DG6		SCREW AND WASHER, Pan Head, M5x.8x25
	06500215	2	T				DG6		
		2	J, U				DG6		
11	52852913AB	1	J, U				DG6		FILTER, Transmission Oil
		1	T				DG6		
12	06032780	1	T				DG6		O RING, Trans Oil Filter
		1	J, U				DG6		
13	04471880	1	T				DG6		SPRING, Accumulator
		1	J, U				DG6		
14	04800171AA	1	J, U				DG6		SOLENOID, Transmission
		1	T				DG6		
15	03878313	1	T				DG6		SCREEN, Transmission Regulator Valve
		1	J, U				DG6		
16		1							SEAL, Accumulator, Serviced with piston, Seal Is Bonded, (NOT SERVICED)
17	06500215	2	T				DG6		SCREW AND WASHER, Pan Head, M5x.8x25
		2	J, U				DG6		
18	06503232	7	T				DG6		SCREW, Pan Head, M5 x 0.8 x 12.60
		7	J, U				DG6		

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6 Turbo Diesel	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


Valve Body  
Figure 42RLE-710

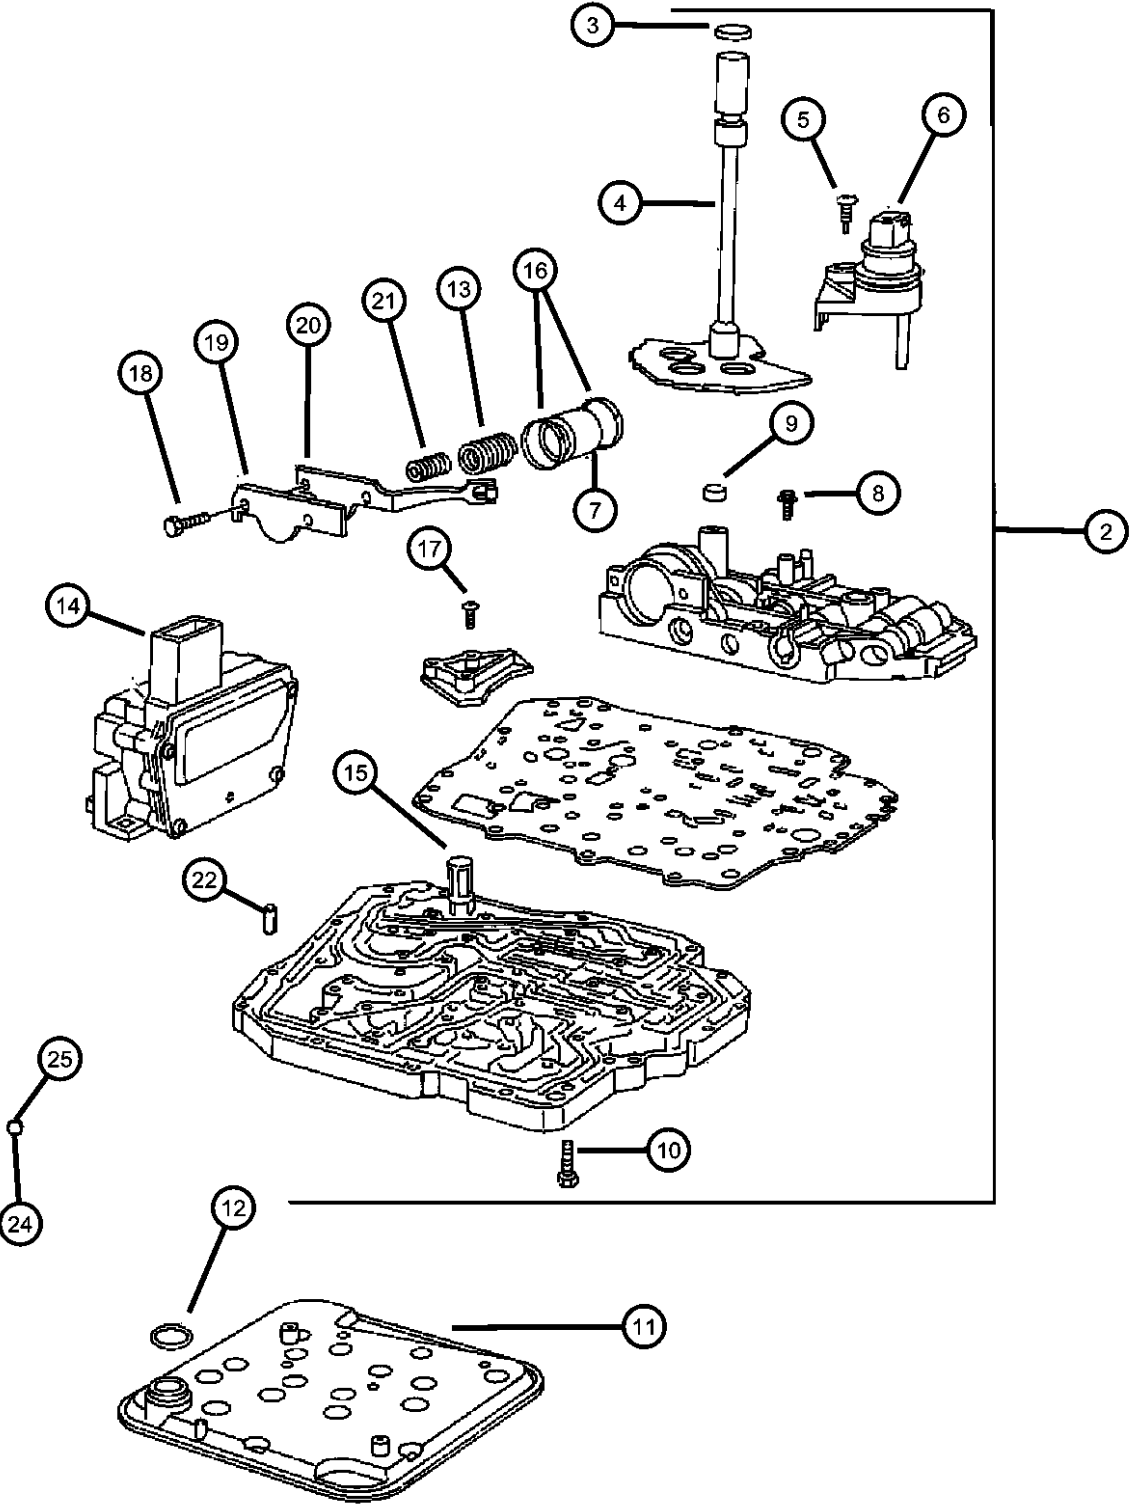

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
19									RETAINER, Transmission 2nd and 4th Accumulator Piston
	04431711	1	T				DG6		
		1	J, U				DG6		
20									DETENT, Valve Body
	04431710	1	T				DG6		
		1	J, U				DG6		
21									SPRING, Accumulator
	04471880	1	T				DG6		
		1	J, U				DG6		
22									DOWEL, M6x16
	06100994	1	T				DG6		
		1	J, U				DG6		
-23									VALVE, Transmission Regulator
	04659081	1	T				DG6		
		1	J, U				DG6		
24									BALL, Check
	52118261	4	T				DG6		
		4	J, U				DG6		
25									BALL, Valve Body Check
	00104918	1	T				DG6		
		1	J, U				DG6		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	



Accumulator Pistons & Springs  
Figure 42RLE-720

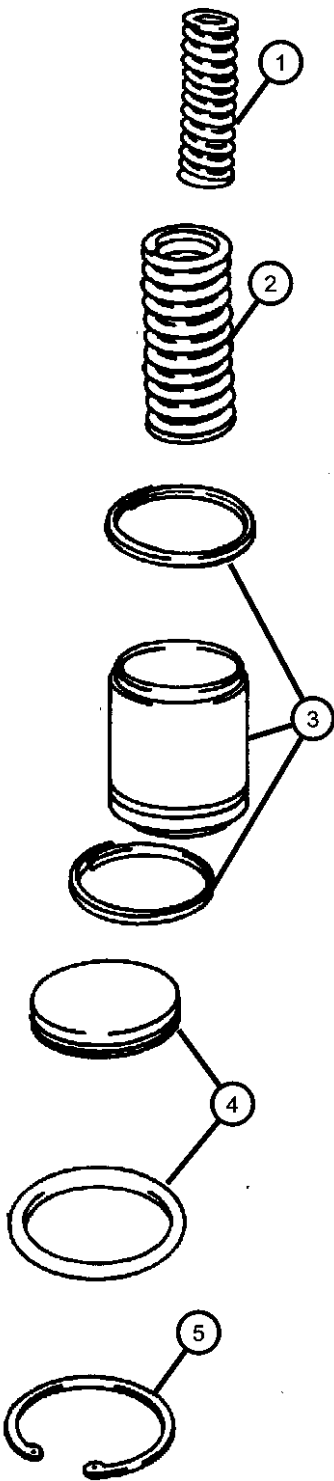

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DG6]=4 Speed Automatic Transmission - [42RLE]									
1	04567575	1	T				DG6		SPRING, Accumulator
		1	J, U				DG6		
2	04471880	1	T				DG6		SPRING, Accumulator
		1	J, U				DG6		
3	04446620AC	1	J, U				DG6		PISTON, Accumulator
		1	T				DG6		
4	04431617AB	1	T				DG6		COVER, Accumulator
		1	J, U				DG6		
5	06501695	1	T				DG6		SNAP RING
		1	J, U				DG6		
-6	04431617AB	1	T				DG6		COVER, Accumulator
		1	J, U				DG6		

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

Parking Sprag  
Figure 42RLE-730

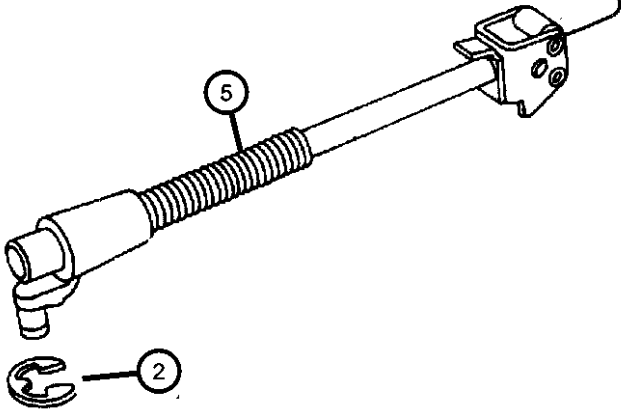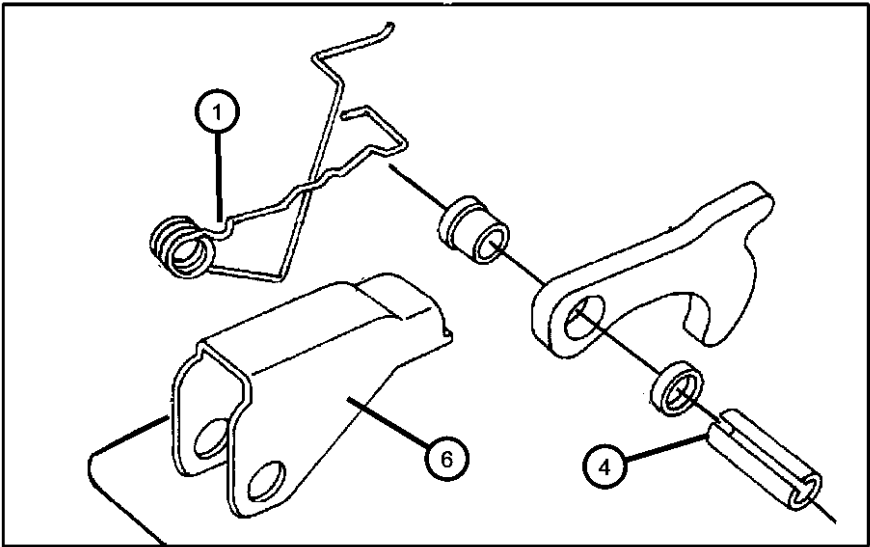

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes [DG6]= 4 Speed Automatic Transmission - [42RLE]									
1	52852949AA	1	J, U				DG6		SPRING, Parking Sprag Return
		1	T				DG6		
2	06035256	1	T				DG6		SNAP RING, Rod
		1	J, U				DG6		
-3	06503384	1	J, U				DG6		SCREW AND WASHER, Hex Head, M5x.8x12
		1	T				DG6		
4	04431999	1	J, U				DG6		SHAFT, Parking Sprag
		1	T				DG6		
5	52852956AA	1	J, U				DG6		ROD, Parking Sprag
		1	T				DG6		
6	52852948AA	1	J, U				DG6		BRACKET, Parking Sprag
		1	T				DG6		

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part



Gearshift Control  
Figure 42RLE-1210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTES:  
Sales Codes  
[DG0] = All Automatic Transmjssions

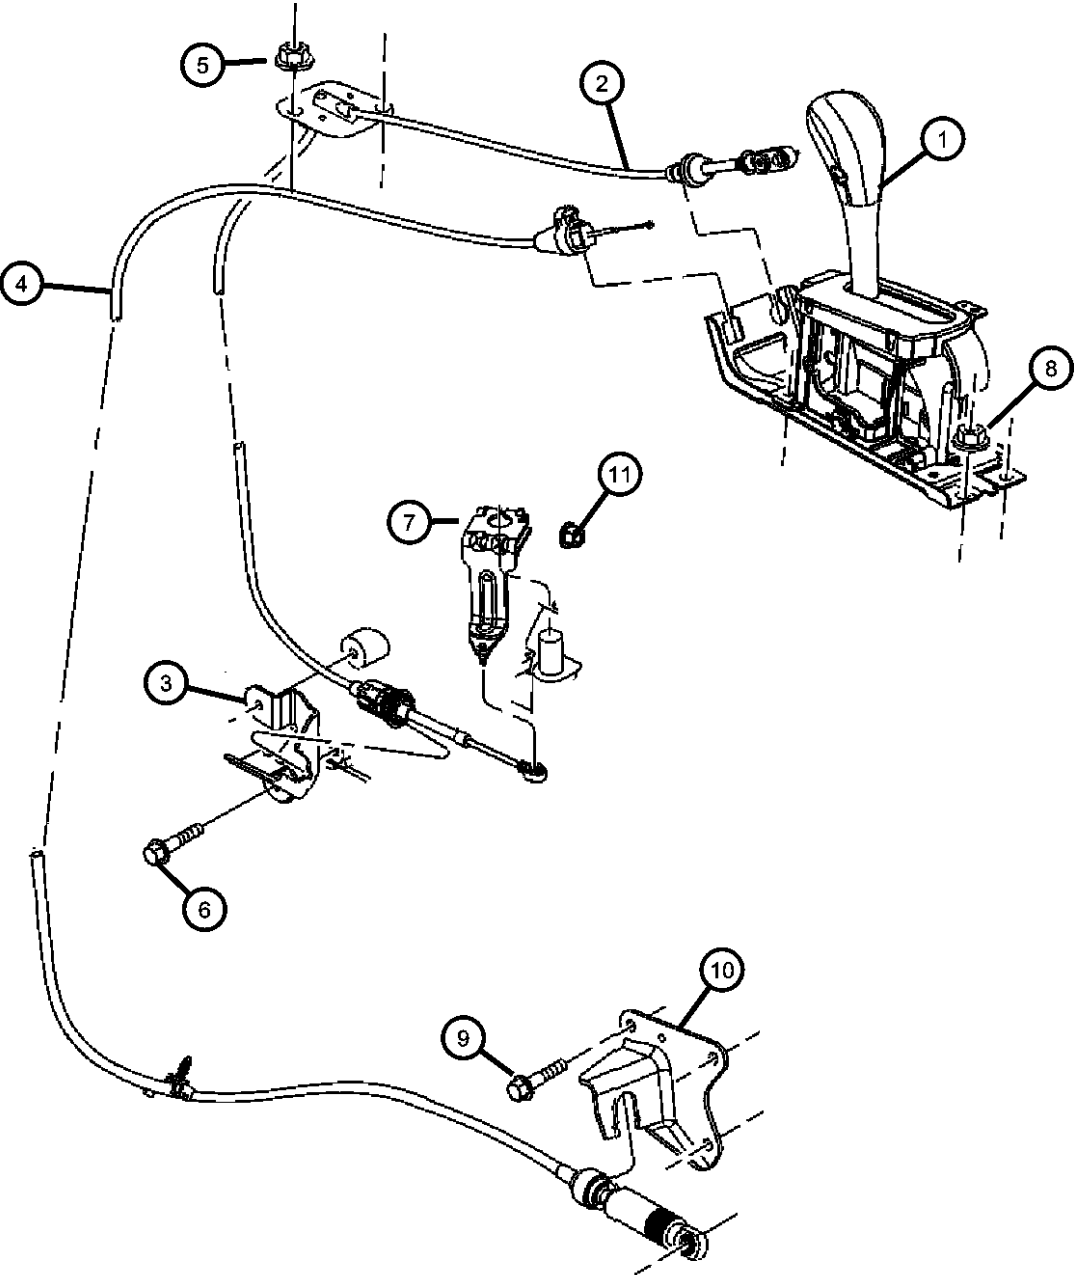


1									HOUSING AND LEVER, Shifter
	52104312AG	1	J, T				DG0		
	52104313AF	1	U				DG0		
2	52109748AA	1					DG6		CABLE, Gearshift Control
3	52128867AA	1					DG6		BRACKET, Shift Cable
4	52104319AC	1					DG0		CABLE, Gearshift Lock
5	06100047	2							NUT AND WASHER, Hex Nut-Coned Washer, M6 x 1.00
6	06101767	2					DG6		SCREW AND WASHER, M8x1.25x25
7	52109749AA	1				EK0	DG6		LEVER, Manual Control
8	34201358	4					DG0		NUT AND WASHER, Hex Nut-Sealing Washer, M6 x 1.00
9	06101752	3	J, U				DG0		SCREW AND WASHER, Hex Head, M10x1.5x28
10	52109747AB	1	J, U				DG6		BRACKET, Shifter
11	06506676AA	1				EK0	DG6		NUT & WASHER, M8x1.25








LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

# Group - 5-45RFE

## Automatic Transmission Multi-Speed

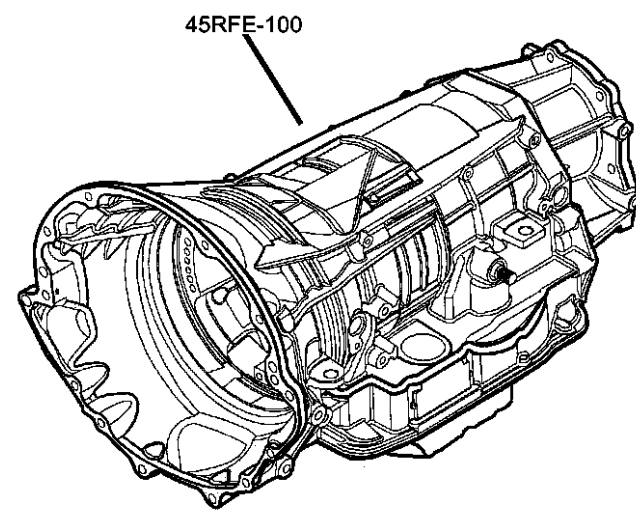
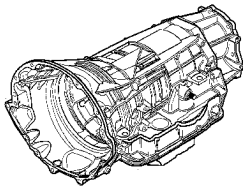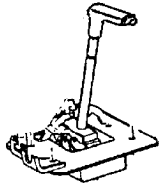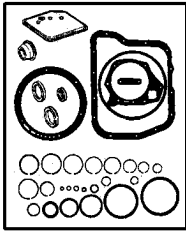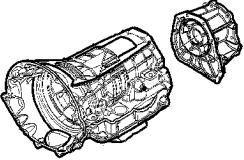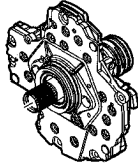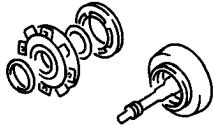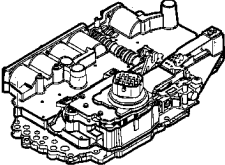
<b>5-45RFE-100</b> Transmission Assembly	<b>5-45RFE-1200</b> Gearshift Controls	<b>5-45RFE-1300</b> Seal and Shim Packages	<b>5-45RFE-200</b> Case and Extension
			
<b>5-45RFE-300</b> Oil Pump	<b>5-45RFE-400</b> Gear Train	<b>5-45RFE-700</b> Valve Body	
			

Group - 5-45RFE Automatic Transmission Multi-Speed

Illustration TitleGroup-Fig. No.

Transmission Assembly

Transmission Assembly [DGQ] ..... Fig. 5-45RFE - 110

Case and Extension

Transmission Mounting ..... Fig. 5-45RFE - 210  
Adapter..... Fig. 5-45RFE - 220  
Case & Related Parts..... Fig. 5-45RFE - 230  
Transmission Overhaul Package ..... Fig. 5-45RFE - 240

Oil Pump

Oil Pump ..... Fig. 5-45RFE - 310

Gear Train

Input Shaft ..... Fig. 5-45RFE - 410  
Underdrive ..... Fig. 5-45RFE - 420  
Overdrive ..... Fig. 5-45RFE - 430  
2 / 4 Clutch Retainer ..... Fig. 5-45RFE - 440  
Input / Reverse Planetary..... Fig. 5-45RFE - 450  
Reaction Annulus / Sun Gear ..... Fig. 5-45RFE - 460  
Low / Reverse Clutch ..... Fig. 5-45RFE - 470

Valve Body

Valve Body..... Fig. 5-45RFE - 710  
Parking Sprag ..... Fig. 5-45RFE - 730

Gearshift Controls


Gearshift Controls.....Fig. 5-45RFE - 1210

Seal and Shim Packages

L / R Clutch ..... Fig. 5-45RFE - 1310  
Input Clutch Plate ..... Fig. 5-45RFE - 1320  
O / H..... Fig. 5-45RFE - 1330  
Input Clutch..... Fig. 5-45RFE - 1340  
Planetary Plate ..... Fig. 5-45RFE - 1350  
2 & 4 Clutch..... Fig. 5-45RFE - 1360


Transmission Assembly [DGQ]  
Figure 5-45RFE-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4/5 Cyl. Turbo Diesel Engine									
1	05093121AA	1	J, U			EN0	DGQ		TRANSMISSION KIT, Automatic, [Includes Torque Converter] Mopar Automatic Transmission Fluid Quart Mopar Automatic Transmission Fluid Gallon
	05013457AA								
	05013458AA								
2	04736582	1	J, U			EN0	DGQ		TORQUE CONVERTER
3	01949765	4					DGQ		SCREW, Hex Head Header Point, .312-24x.44

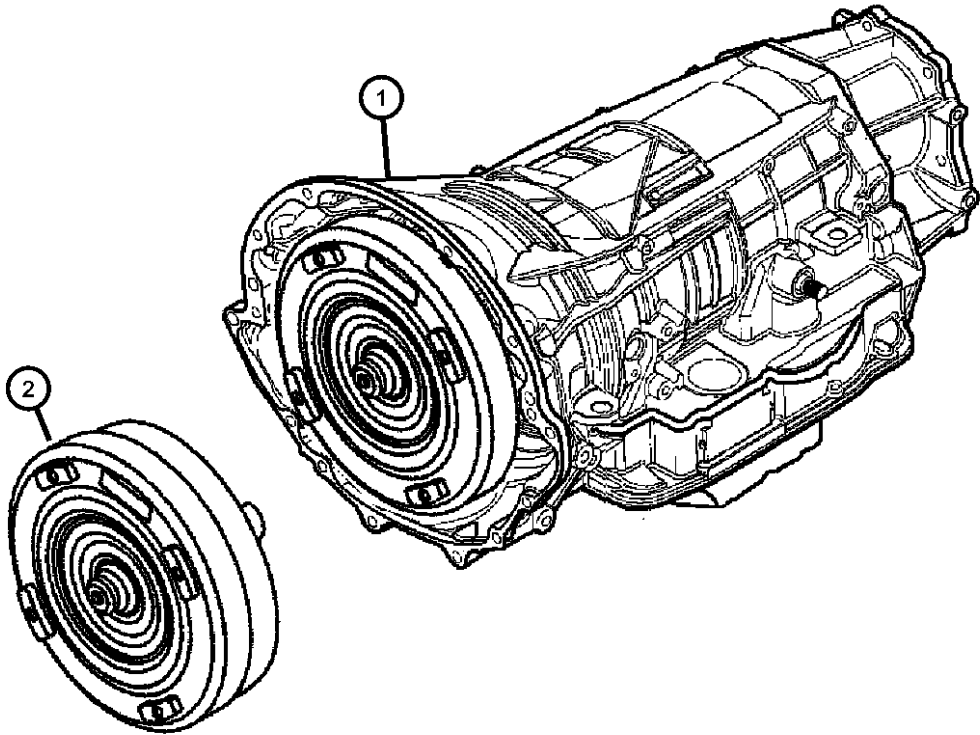

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

Transmission Mounting  
Figure 5-45RFE-210

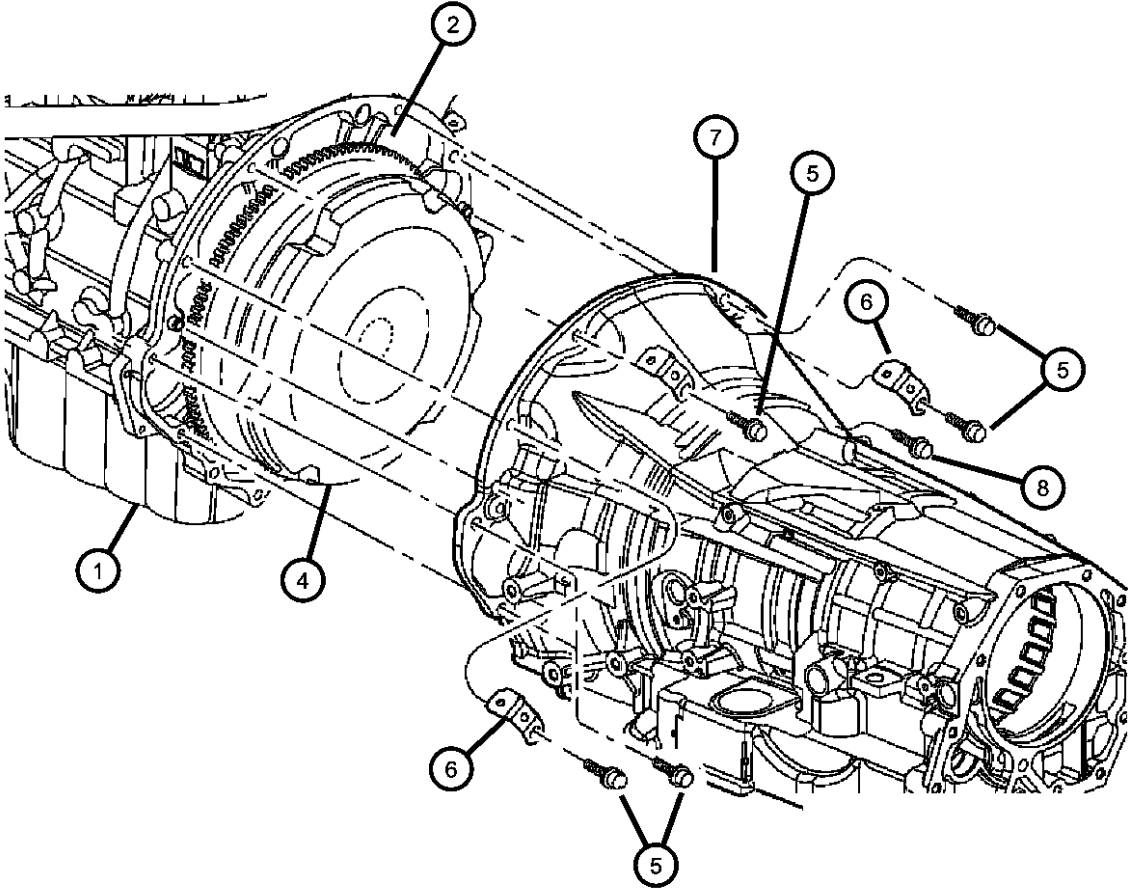


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4/5 Cyl. Turbo Diesel Engines									
1	01949765	4							ENGINE, (NOT SERVICED)
2	05093958AA	1				EN0	DG0		PLATE, Torque Converter Drive
-3	05014969AA	1				EN0	DG0		BOLT, Flexplate
4	04736582	1	J, U			EN0	DGQ		TORQUE CONVERTER
5	06022266	6				EN0	DGQ		SCREW, Hex Head, .375-16x1.5
6	56041379AA	1				EK0	DG6		CLIP, Housing
7	05093121AA	1	J, U			EN0	DGQ		TRANSMISSION KIT, Automatic, Includes Torque Converter
	05013457AA								Mopar Automatic Transmission Fluid Quart
	05013458AA								Mopar Automatic Transmission Fluid Gallon
8	06036385AA	1				EN0	DGQ		SCREW AND WASHER, Hex Head, .437-14x2.00

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Adapter  
Figure 5-45RFE-220


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4/5 Cyl. Turbo Diesel Engines									
1	52104357AA	1	J, U			EN0	DGQ		ADAPTER, Transfer Case
2	06505064AA	2	J, U			EN0	DGQ		STUD, M10x1.5x62
3	06504774	10	J, U			EN0	DGQ		SCREW AND WASHER, Hex Head, M10x1.5x37
4	04799090	1	J, U			EN0	DGQ		SEAL, Input
5	05019020AA	1	J, U			EN0	DGQ		SEAL, Input Gear

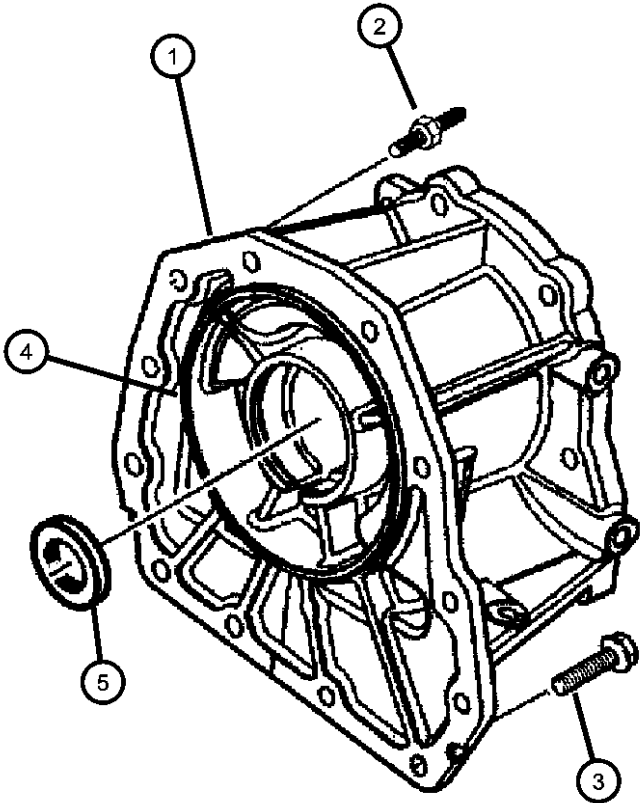

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Case & Related Parts  
Figure 5-45RFE-230

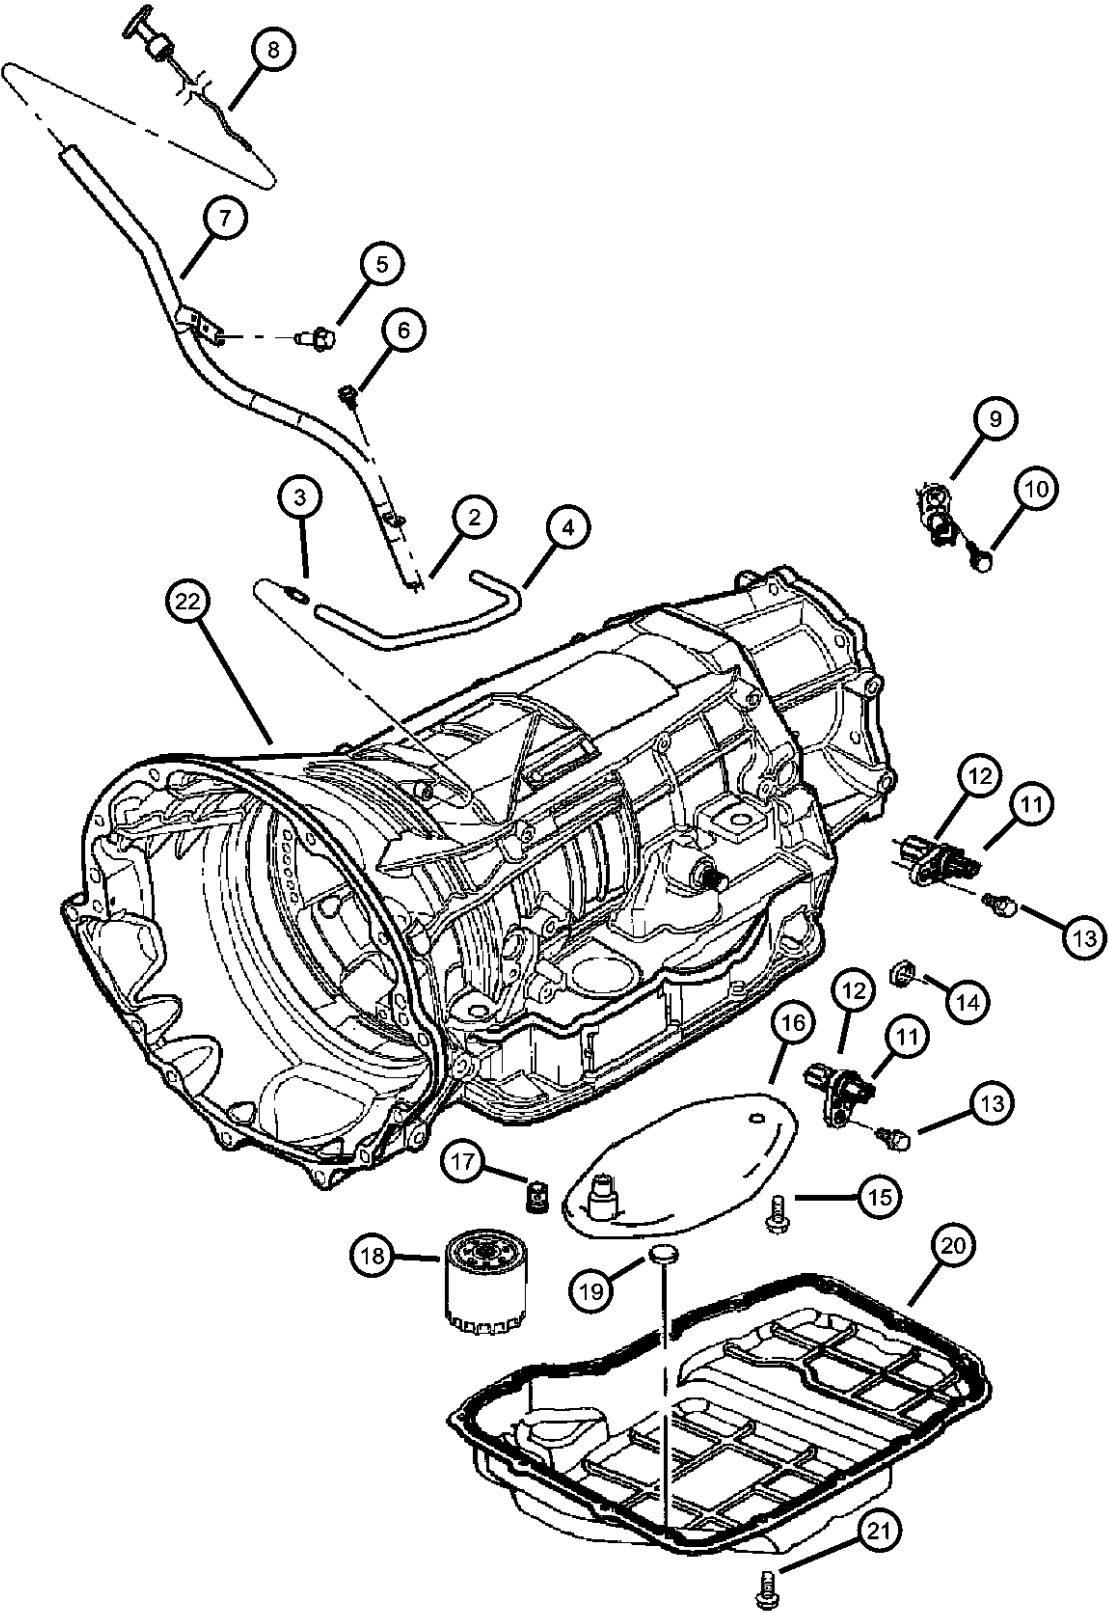

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4/5 Cyl. Turbo Diesel Engines									
-1	05014221AJ	1	J, U			EN0	DGQ		OVERHAUL PACKAGE, Transmission
2	04810021	1	J, U			EN0	DGQ		GROMMET
3	04799861AB	1	J, U			EN0	DGQ		VENT, Transmission
4	53032457AA	1					DG4		TUBE, Vent
5	06022266	1	J, U			EN0	DGQ		SCREW, Hex Head, .375-16x1.5
6	06501979	1							SCREW AND WASHER, Hex Head, M6x1x17
7	53013497AC	1				EN0	DG0		TUBE, Transmission Oil Filler
8	53013719AA	1					DGQ		INDICATOR, Transmission Fluid Level
9	04799758AC	1	J, U			EN0	DGQ		TRANSDUCER, Pressure Sensor, Line Pressure
10	06101221	1	J, U			EN0	DGQ		SCREW, Line Pressure Sensor
11	04799061	2	J, U			EN0	DGQ		SENSOR, Transmission Output Speed, Input & Output Sensor
12	04799062	2	J, U			EN0	DGQ		O RING
13	06101331	2	J, U			EN0	DGQ		BOLT, M6x1.00x20
14	04799346	1	J, U			EN0	DGQ		SEAL, Manual Lever Shaft
15	06503232	1	J, U			EN0	DGQ		SCREW, Pan Head, M5 x 0.8 x 12.60, Oil Filter To Transfer Plate
16	05013470AC	1	J, U			EN0	DGQ		FILTER PACKAGE, Transmission Oil
17	04799681	1	J, U			EN0	DGQ		VALVE, Flow Control
18	04799662	1	J, U			EN0	DGQ		FILTER, Transmission Oil
19	04446728	1	J, U			EN0	DGQ		MAGNET, Transmission
20	05013681AA	1	J, U			EN0	DGQ		PAN, Transmission Oil
21	06101221	15	J, U			EN0	DGQ		SCREW
22	04799613AB	1	J, U			EN0	DGQ		CASE, Transmission
-23	06505262AA	6	J, U			EN0	DGQ		SCREW, Pan Head Locking, M5x0.8x30.00, Solenoid To Cover Plate

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Transmission Overhaul Package  
Figure 5-45RFE-240

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DGQ]=5 Speed Automatic Transmission - [5-45RFE]  
[EN0]=All 4/5 Cylinder Turbo Diesel Engines  
1 05014221AJ 1 J, U EN0 DGQ OVERHAUL PACKAGE,  
Transmission


O/H seal/gasket package		05014221ac	1
	2&4 clutch package		
	Input clutch package		
	L/R clutch package		
	Sump filter & seal package		
	Cooler filter		
	fill tube sea		
	Frt pmp cover o-ring/seal assy		
	Rotating shaft seal,pmp hsg		
	Adapter seal, 4x4		
	Extension seal,4x2		
	Manual lever seal		
(2)	Speed sensor seal		
	Reaction supt ring seal		
	Rev O/D clutch filter		
(10)	Accumulator ring seal		
(3)	Valve body seal		
	Check valve o-ring		
	Solenoid insulator seal		
	T/C seal		

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Oil Pump  
Figure 5-45RFE-310

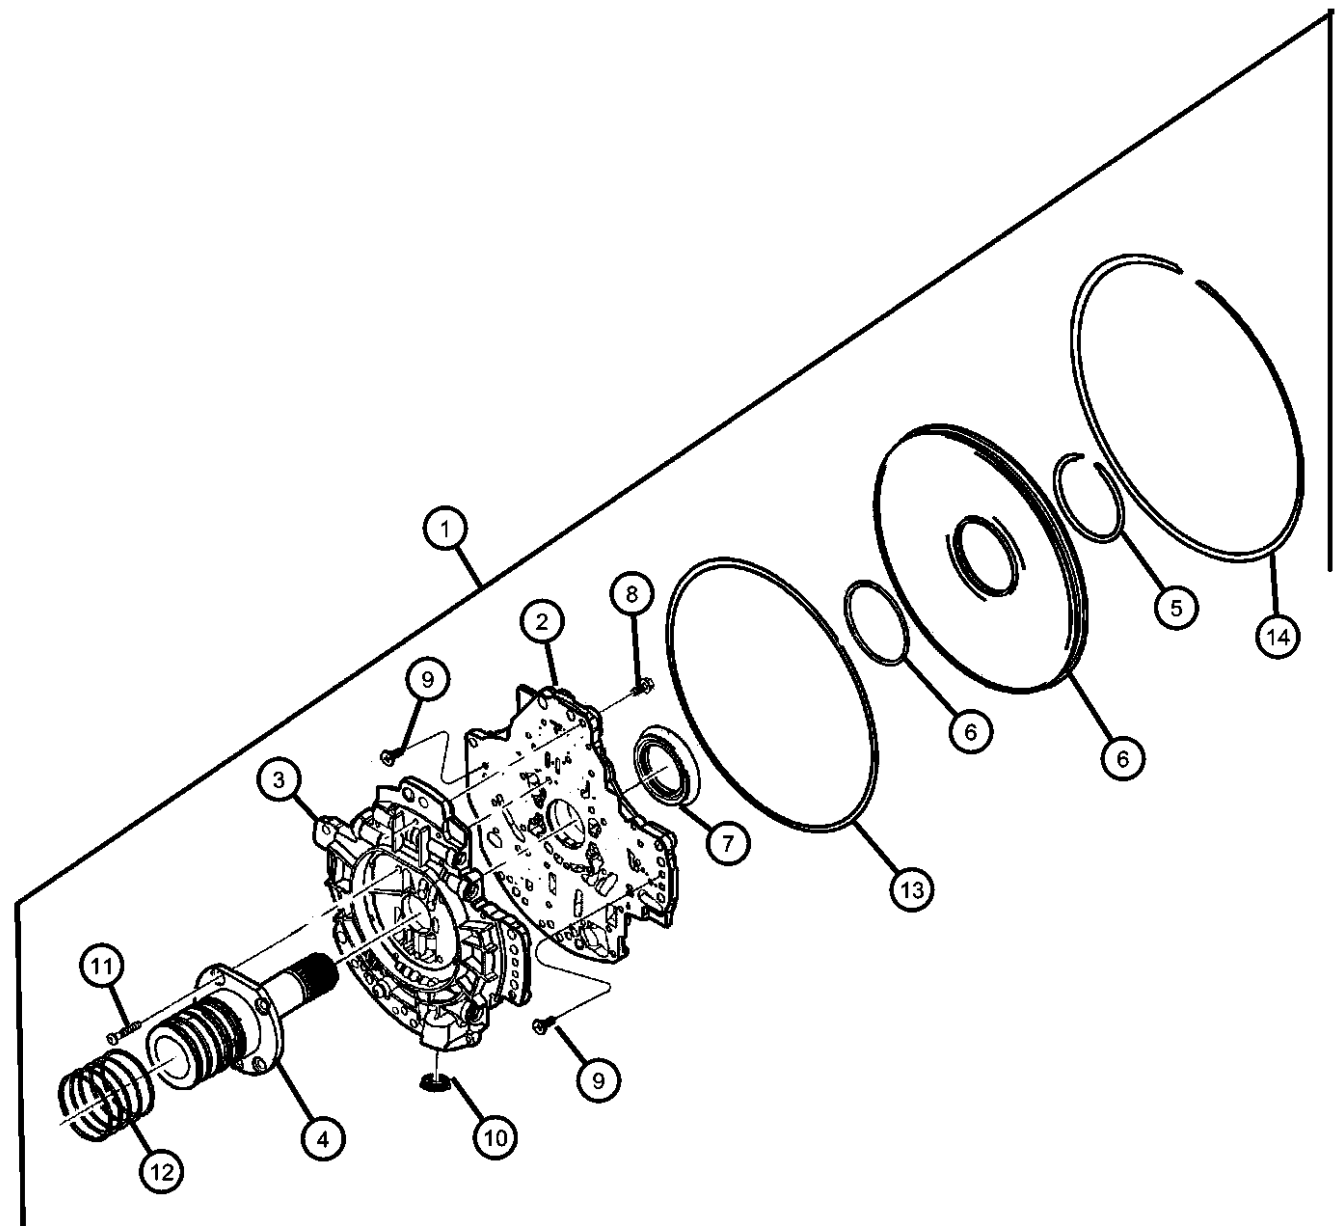


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4 Cylinder Turbo Diesel Engines									
1	05073004AB	1	J, U			EN0	DGQ		PUMP PACKAGE, Transmission
2	05073004AB	1							HOUSING, Pump, (NOT SERVICED)
3	05073004AB	1							BODY, Oil Pump Valve, (NOT SERVICED)
4	05073004AB	1							SUPPORT, Reaction Shaft, (NOT SERVICED)
5	04799082	1	J, U			EN0	DGQ		SNAP RING, Transmission
6	04799609	1	J, U			EN0	DGQ		COVER, Oil Pump
7	04617919	1	J, U			EN0	DGQ		SEAL, Transmission Oil Pump
8	06500215	24	J, U			EN0	DGQ		SCREW AND WASHER, Pan Head, M5x.8x25
9	06503232	2	J, U			EN0	DGQ		SCREW, Pan Head, M5 x 0.8 x 12.60
10	04799964AB	1	J, U			EN0	DGQ		SEAL, Oil Pump
11	06504661	5	J, U			EN0	DGQ		SCREW, Button Head
12	04799056	5	J, U			EN0	DGQ		RING, Transmission
13	04799003	1	J, U			EN0	DGQ		O RING, Oil Pump, .
14	04799005	1	J, U			EN0	DGQ		SNAP RING, Transmission
-15	04736547	1	J, U			EN0	DGQ		SEAL, Torque Converter Hub

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

**Input Shaft  
Figure 5-45RFE-410**

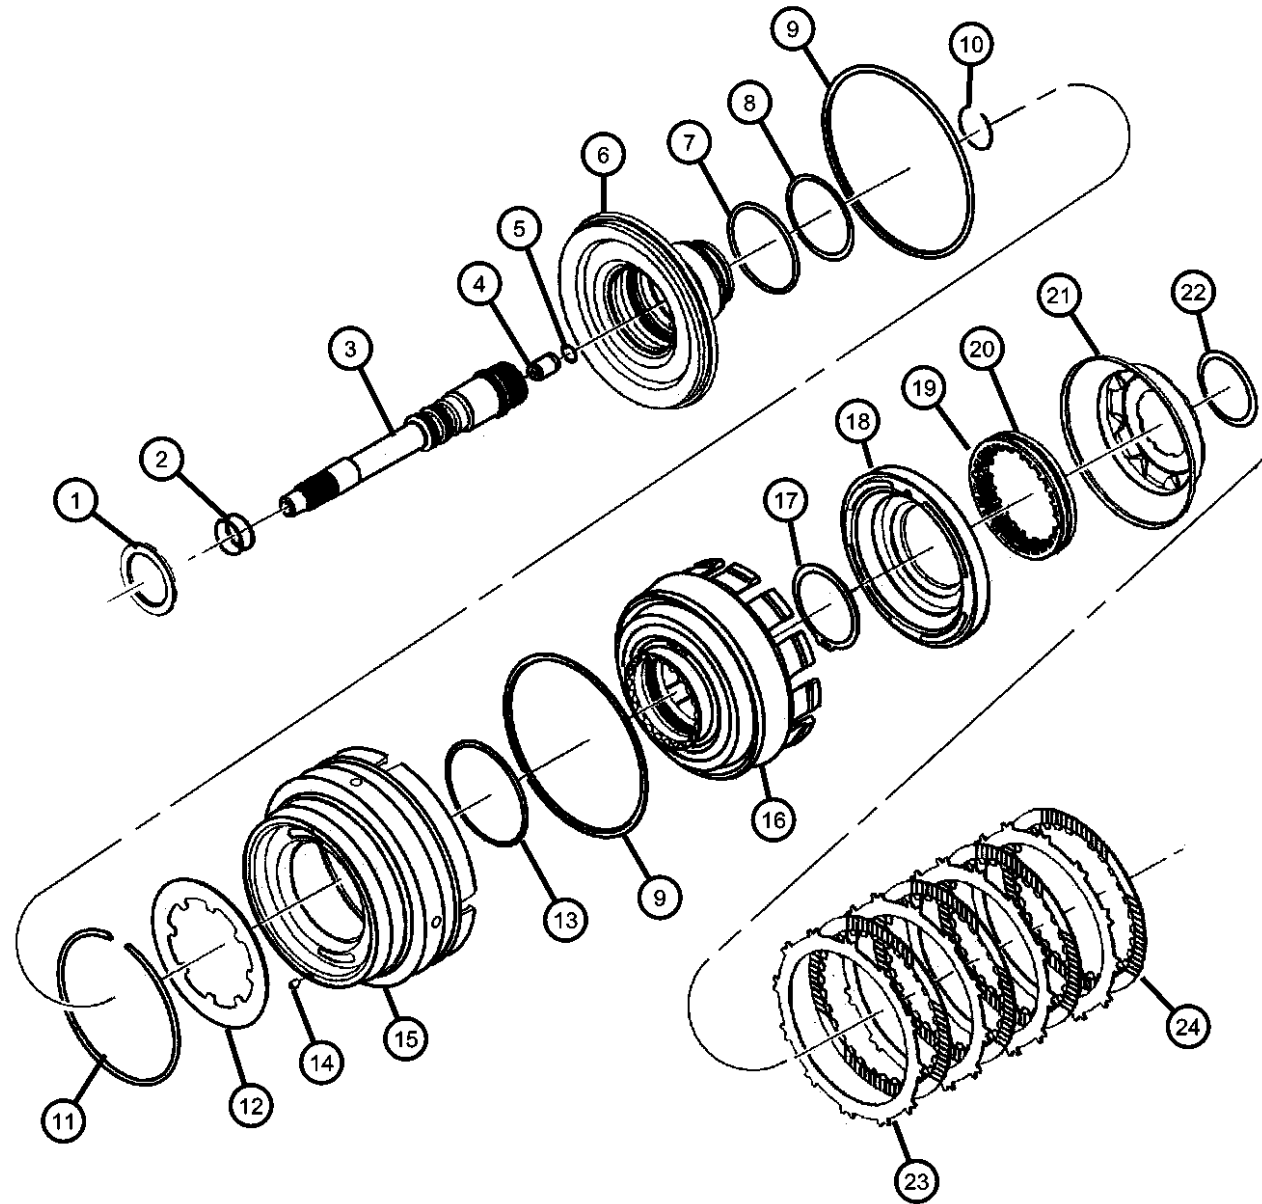

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4/5 Cylinder Turbo Diesel Engines									
1	04799469	1	J, U			EN0	DGQ		THRUST BEARING, Needle Roller
2	04799539	2	J, U			EN0	DGQ		SEAL, Input Shaft, PKG 05013090AA
3	04799537	1	J, U			EN0	DGQ		SHAFT, Input
4	04799974AA	1	J, U			EN0	DGQ		CHECK VALVE, Transmission
5	04799978AA	1	J, U			EN0	DGQ		SNAP RING
6	04799536AC	1	J, U			EN0	DGQ		HUB, Input Clutch
7	04799073	1	J, U			EN0	DGQ		O RING, Transmission Clutch, PKG 05013090AA
8									O RING, Transmission Clutch, PKG 05013090AA
	04799073	1	J, U			EN0	DGQ		Input Clutch Hub [LARGE]
	04799755	1	J, U			EN0	DGQ		Input Hub To Retainer [SMALL]
9	04799090	1	J, U			EN0	DGQ		SEAL, Input, PKG 05013090AA
10	04799538	1	J, U			EN0	DGQ		SNAP RING, Input Shaft
11	04799088	1	J, U			EN0	DGQ		SNAP RING, Transmission
12	04799087	1	J, U			EN0	DGQ		SPRING, Piston Return
13	04799089	1	J, U			EN0	DGQ		O RING, Reverse & O/Drive Clutch Piston, Transmission, PKG 05013090AA
14	04531903	1	J, U			EN0	DGQ		FILTER, Reverse And O/D Clutch
15	05073525AA	AR	J, U			EN0	DGQ		PISTON, Reverse and Overdrive
16	04799648	1	J, U			EN0	DGQ		RETAINER, Transmission Input Clutch
17	04799247	1	J, U			EN0	DGQ		SNAP RING
18	04799650	1	J, U			EN0	DGQ		PISTON, Underdrive
19	04746155	1	J, U			EN0			BEARING, Input Gear
20	04799101	1	J, U			EN0	DGQ		SPRING, Undredrive Piston, PKG 05013090AA
21	04799652	1	J, U			EN0	DGQ		PISTON, Underdrive

**LIBERTY (KJ)**

**SERIES**

P = Limited  
H = Sport  
M = Renegade

**LINE**

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

**BODY**

74 = 4 Door (104.3 WB)

**ENGINE**

ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EKO = All 3.7L  
ED0 = All 2.4L


**TRANSMISSION**

DDD = Transmission - 5-Speed HD Manual  
DDK = Transmission - 5-Speed HD Manual  
DG4 = Transmission-Multi-Speed Auto, 45RFE  
DG6 = Transmission-4-Spd. Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic 5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Input Shaft  
Figure 5-45RFE-410

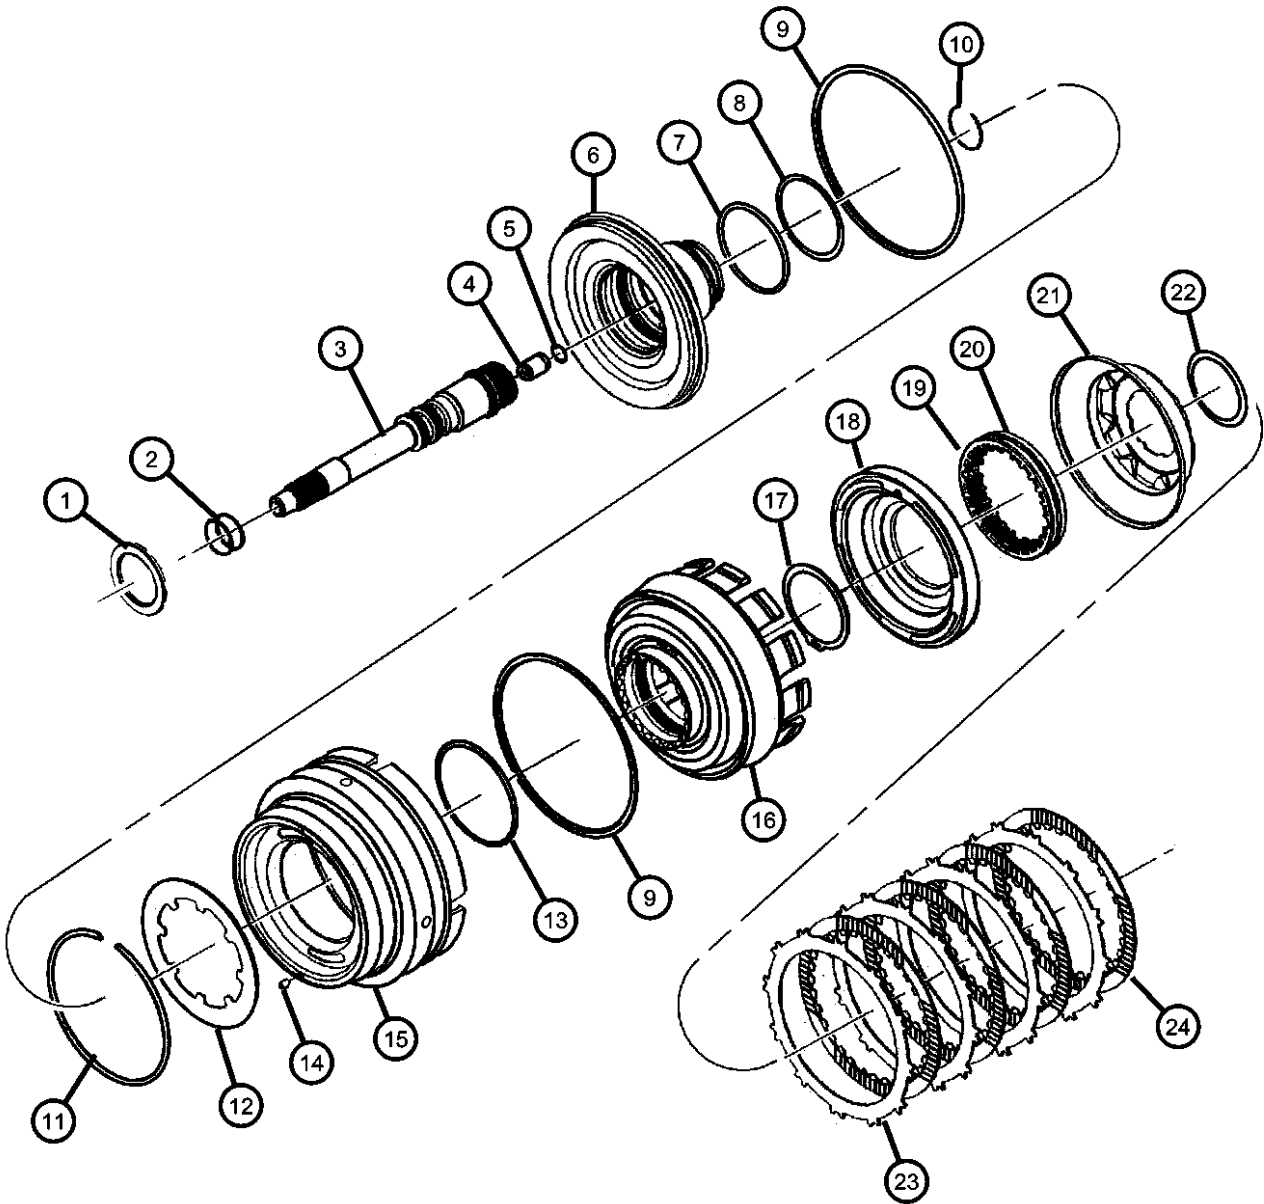

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
22	04799103	1	J, U			EN0	DGQ		SNAP RING, Transmission, PKG 05013090AA
23	04799103	1							PLATE, PKG 05013090AA, (NOT SERVICED)
24	04799103	1							DISC, Clutch, PKG 05013090AA, (NOT SERVICED)
-25									SNAP RING
	04799097	1	J, U			EN0	DGQ		Input Retainer To Hub
	05072304AA	1	J, U						


LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

Underdrive  
Figure 5-45RFE-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DGQ]=5 Speed Automatic Transmission - [5-45RFE]  
[EN0]=All 4/5 Cylinder Turbo Diesel Engines

1	04799469	AR	J, U			EN0	DGQ		THRUST BEARING, Needle Roller
2	04799546	1	J, U			EN0	DGQ		HUB AND SHAFT, Underdrive Clutch
3	04799760	1	J, U			EN0	DGQ		SNAP RING, Transmission
4	04799108AD	AR	J, U			EN0	DGQ		PLATE, Transmission Clutch Reaction
5	04799108AD	AR							SNAP RING, Serviced In Pkg. (05013090AA), (NOT SERVICED)
6	04799108AD	AR							DISC, Clutch, Serviced In Pkg. (05013090AA), (NOT SERVICED)
7	04799108AD	AR							PLATE, Serviced In Pkg. (05013090AA), (NOT SERVICED)

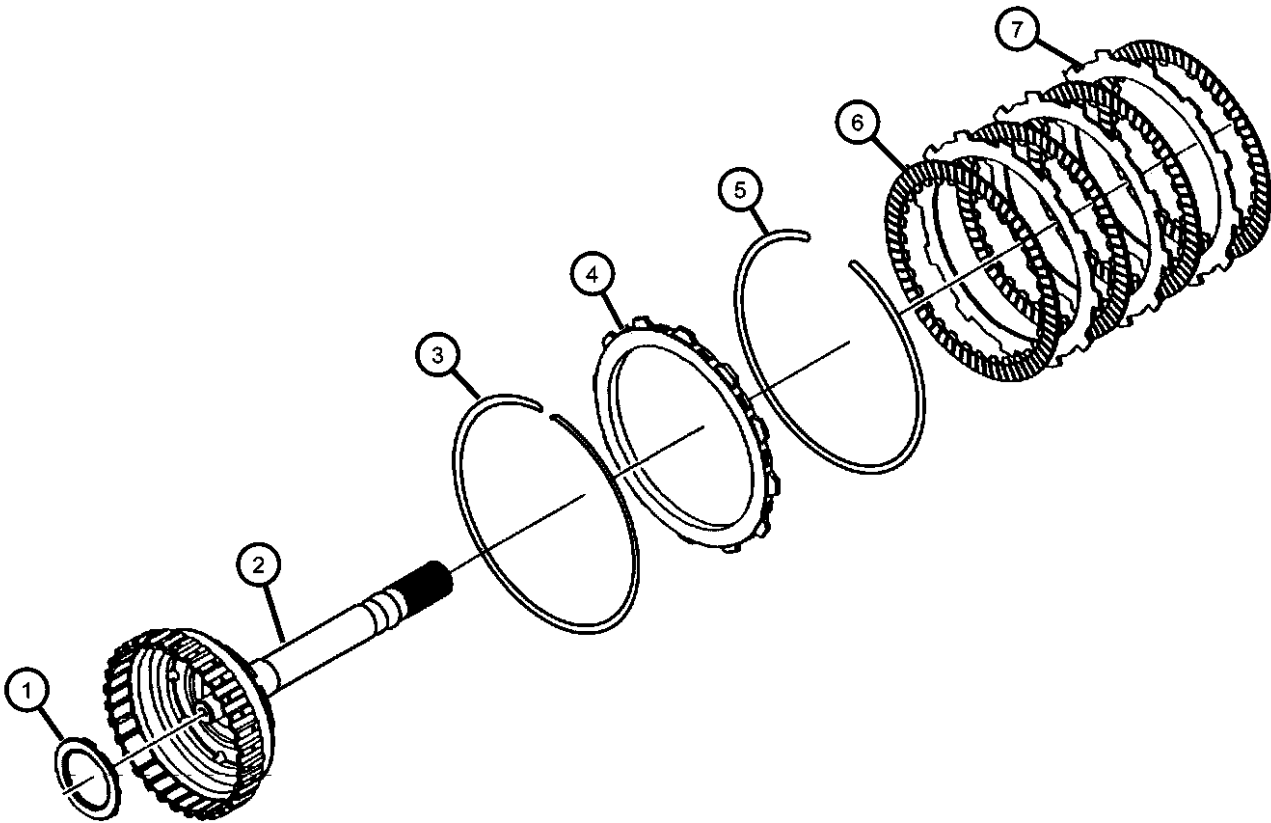

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part

Overdrive  
Figure 5-45RFE-430

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


NOTE:  
Sales Codes:  
[DGQ]=5 Speed Automatic Transmission - [5-45RFE]  
[EN0]=All 4/5 Cylinder Turbo Diesel Engines

1	04799469	AR	J, U			EN0	DGQ		THRUST BEARING, Needle Roller
2	04799550	1	J, U			EN0	DGQ		HUB AND SHAFT, Overdrive Clutch
3	04799118	1	J, U			EN0	DGQ		SNAP RING, Overdrive Clutch
4	04799116AB	1	J, U			EN0	DGQ		PLATE, Clutch Pressure
5	04799469	1	J, U			EN0	DGQ		THRUST BEARING, Needle Roller
6	04799117	1	J, U			EN0	DGQ		SNAP RING, Transmission
7	04799556	1	J, U			EN0	DGQ		HUB AND SHAFT, Reverse Clutch
8	04799556	1							PLATE, PKG 05013090AA, (NOT SERVICED)
9	04799556	1							DISC, Clutch, PKG 05013090AA, (NOT SERVICED)
10	04799121	1	J, U			EN0	DGQ		PLATE, Transmission Clutch Reaction
11	04799121	1							SNAP RING, PKG 05013090AA, (NOT SERVICED)

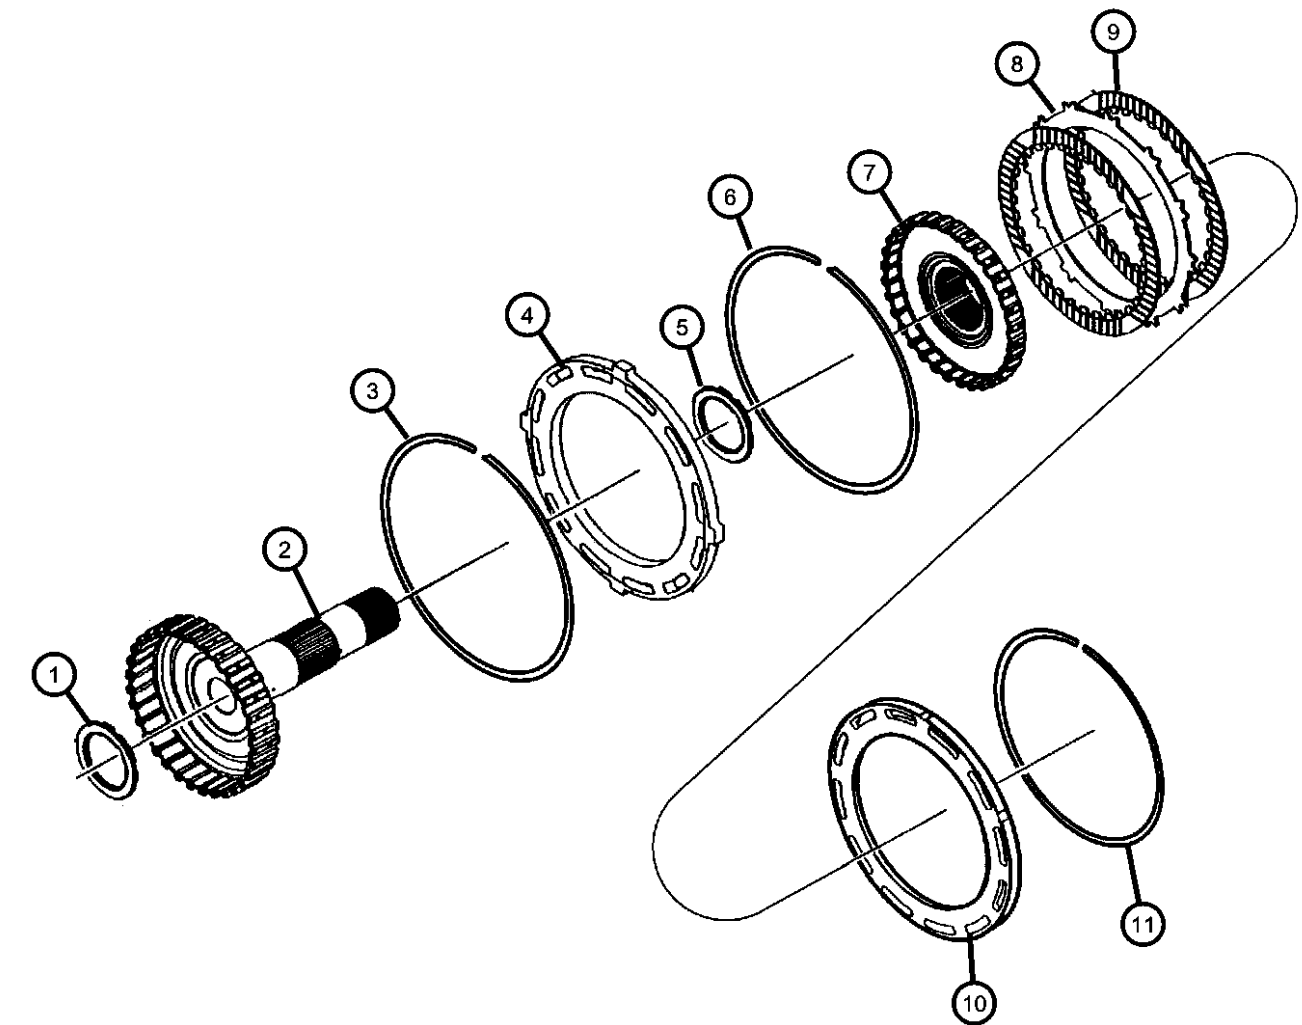

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	


2 / 4 Clutch Retainer  
Figure 5-45RFE-440

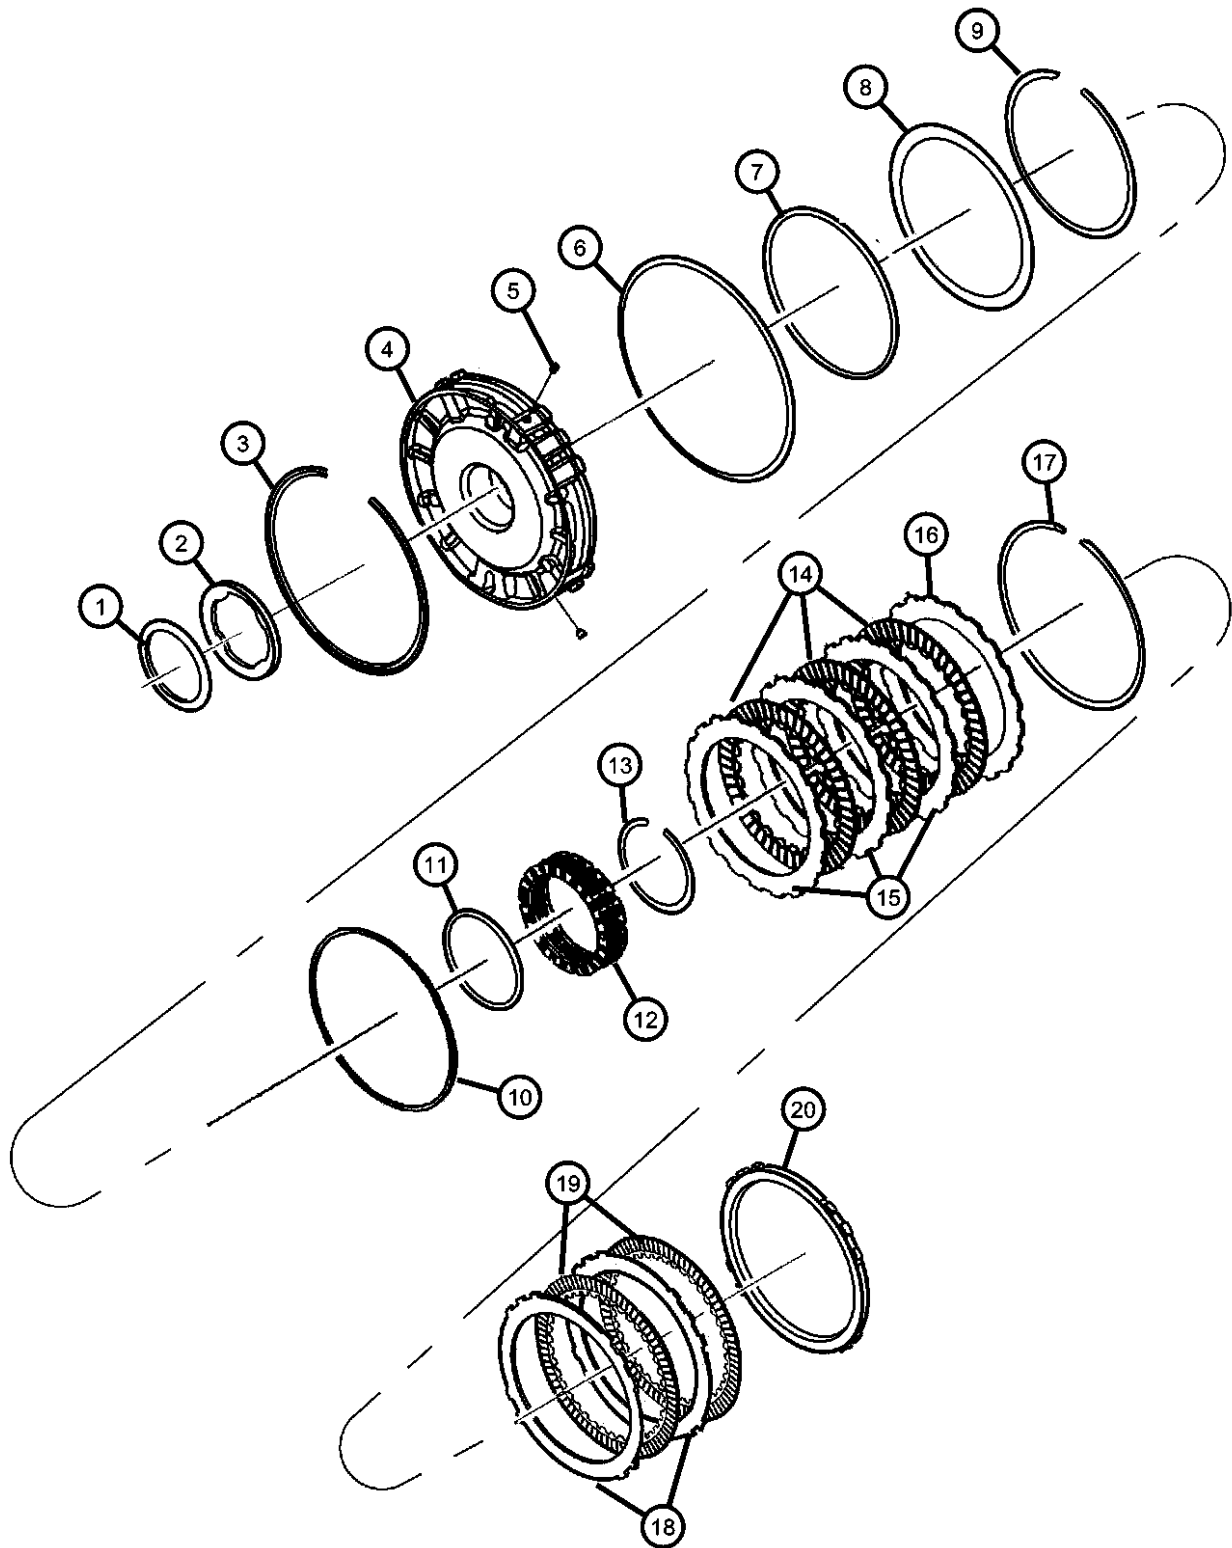

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4/5 Cylinder Turbo Diesel Engines									
1	04799936AB	1	J, U			EN0	DGQ		THRUST BEARING, Needle Roller
2	04799936AB	1							PLATE, Clutch Hub Thrust, PKG 05013093AB, (NOT SERVICED)
3	04799680AB	1	J, U			EN0	DGQ		SNAP RING, Transmission
4	04799498AB	1	J, U			EN0	DGQ		RETAINER, Transmission 2nd and 4th Clutch Piston
5	04799086	1	J, U			EN0	DGQ		BLEED ORIFICE, Transmission
6	04799174	1	J, U			EN0	DGQ		SNAP RING, Transmission
7	04799174	1							RING, PKG 05013093AB, (NOT SERVICED)
8	04799521	1	J, U			EN0	DGQ		SPRING, 2nd And 4th Clutch Piston
9	04799522AB	1	J, U			EN0	DGQ		SNAP RING, Transmission
10	04799522AB	1							RING, PKG 05013093AB, (NOT SERVICED)
11	04799522AB	1							RING, PKG 05013093AB, (NOT SERVICED)
12	04799527AB	1	J, U			EN0	DGQ		SPRING, 2nd And 4th Clutch Piston
13	04799680AB	1	J, U			EN0	DGQ		SNAP RING, Transmission
14	04799680AB	1							DISC, Clutch, PKG 05013087AA, (NOT SERVICED)
15	04799680AB	1							PLATE, Clutch Separator, PKG 05013087AA, (NOT SERVICED)
16	04799533	1	J, U			EN0	DGQ		PLATE, Transmission Clutch Reaction
17	04799533	1							SNAP RING, Transmission, PKG 05013087AA, (NOT SERVICED)
18	04799533	1							PLATE, PKG 05013087AA, (NOT SERVICED)
19	04799533	1							DISC, Clutch, PKG 05013087AA, (NOT SERVICED)
20	04799687AB	1	J, U			EN0	DGQ		PLATE, Transmission Clutch Reaction
-21	04799465	1	J, U			EN0	DGQ		CLUTCH, Overrunning

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

2 / 4 Clutch Retainer  
Figure 5-45RFE-440

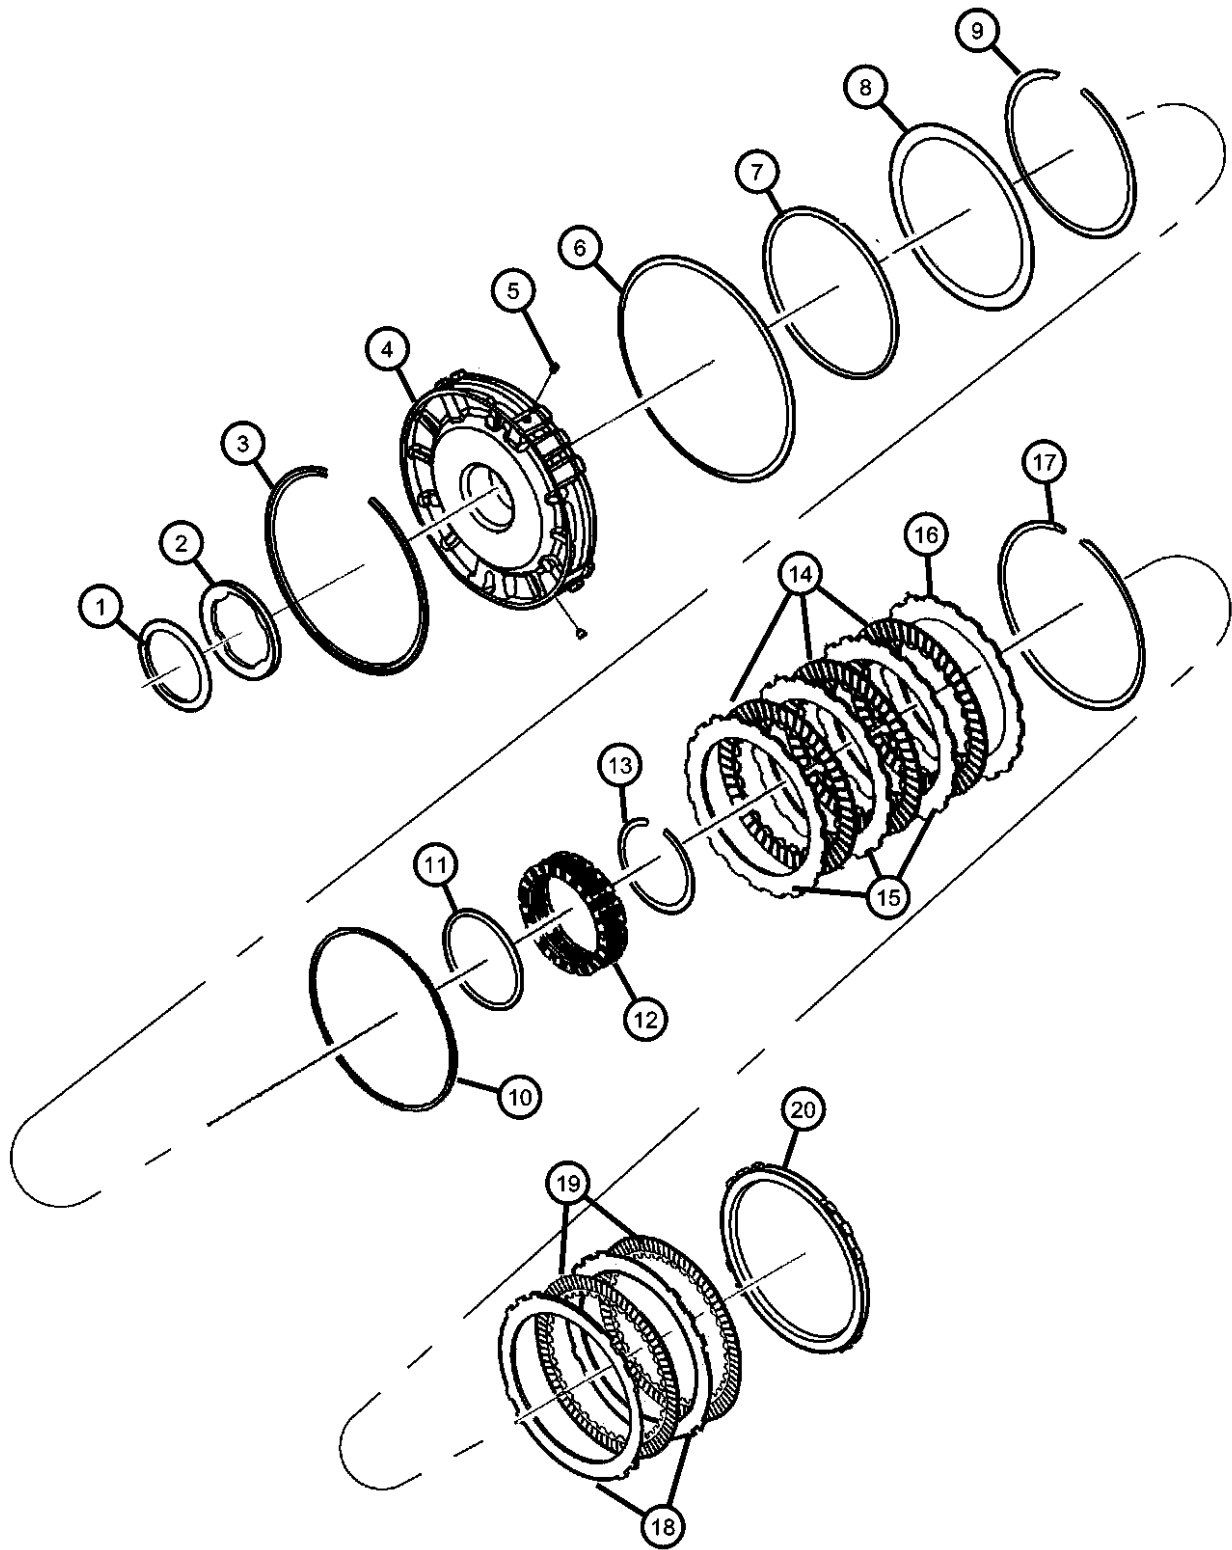

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-22	04799457AB	1	J, U			EN0	DGQ		CLUTCH, L/R Clutch
-23	05013087AC	1	J, U			EN0	DGQ		CLUTCH PACKAGE, Automatic Transmission, 2/4
-24	04799863AA	1	J, U			EN0	DGQ		SNAP RING
-25	04799528AB	1	J, U			EN0	DGQ		SNAP RING, Transmission
-26	04799640	1	J, U			EN0	DGQ		SPRING, Low/Reverse Clutch Piston


LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

Input / Reverse Planetary  
Figure 5-45RFE-450

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DGQ]=5 Speed Automatic Transmission - [5-45RFE]  
[EN0]=All 4/5 Cylinder Turbo Diesel Engines

1	04799469	AR	J, U			EN0	DGQ		THRUST BEARING, Needle Roller
2	04799247	1	J, U			EN0	DGQ		SNAP RING
3	04799503AD	1	J, U			EN0	DGQ		CARRIER, Reverse Complete
4	04799586AB	1	J, U			EN0	DGQ		GEAR, Input Sun
5	52119464AA	1	J, U			EN0	DGQ		THRUST BEARING, Needle Roller
6	04799500AE	1	J, U			EN0	DGQ		CARRIER, Input Complete
7	04799501	1	J, U			EN0	DGQ		GEAR, Annulus
8	04799459	1	J, U			EN0	DGQ		THRUST BEARING, Needle Roller

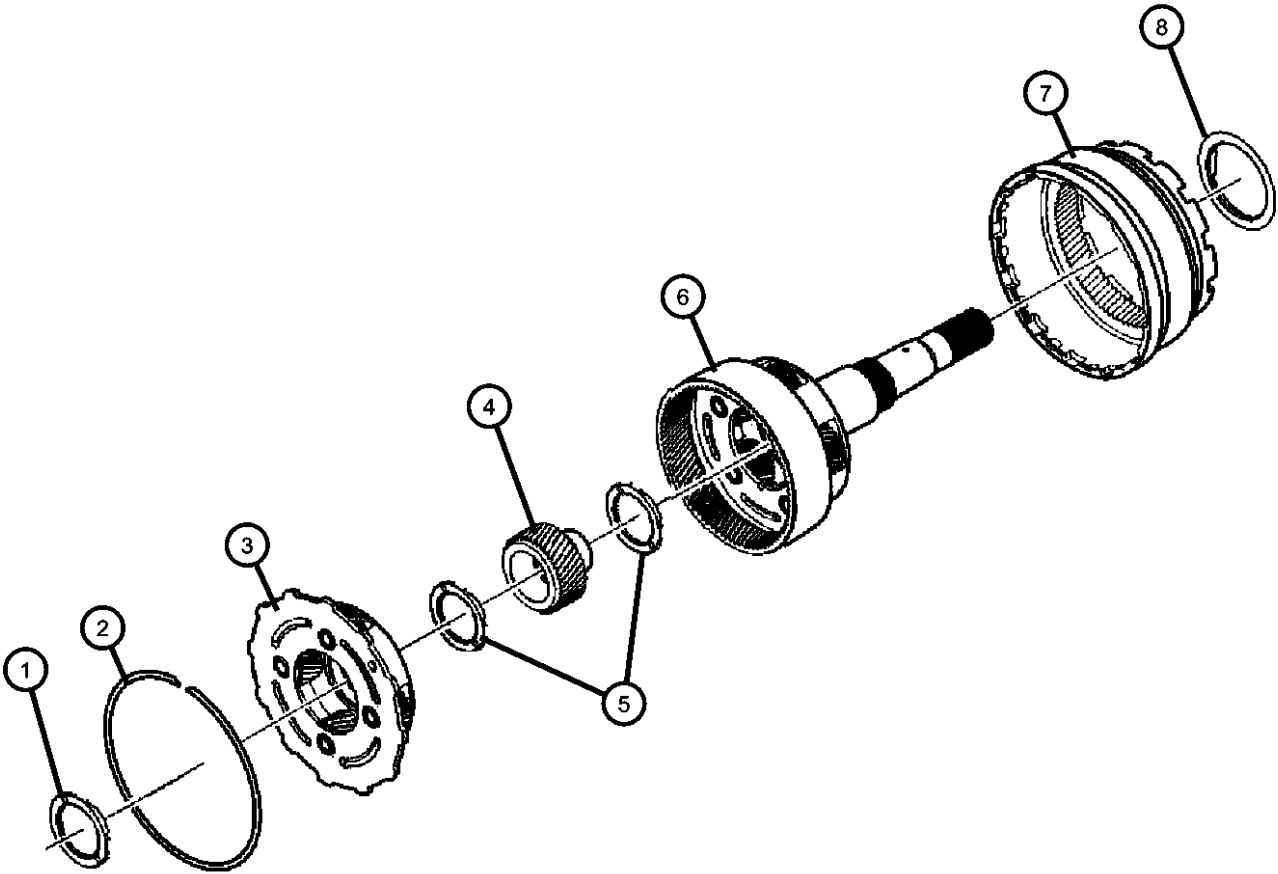

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part




Reaction Annulus / Sun Gear  
Figure 5-45RFE-460

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DGQ]=5 Speed Automatic Transmission - [5-45RFE]  
[EN0]=All 4/5 Cylinder Turbo Diesel Engines


1	04799459	1	J, U			EN0	DGQ		THRUST BEARING, Needle Roller, Retainer To I-Carrier, Right & Left
2	04799459	1							THRUST WASHER, Planetary Carrier, PKG 05013092AA, (NOT SERVICED)
3	04799604	1	J, U			EN0	DGQ		GEAR, Annulus
4	04799469	1	J, U			EN0	DGQ		THRUST BEARING, Needle Roller
5	04799602	1	J, U			EN0	DGQ		GEAR, Reaction Sun
6	04799619AB	1	J, U			EN0	DGQ		CARRIER, Reaction Complete

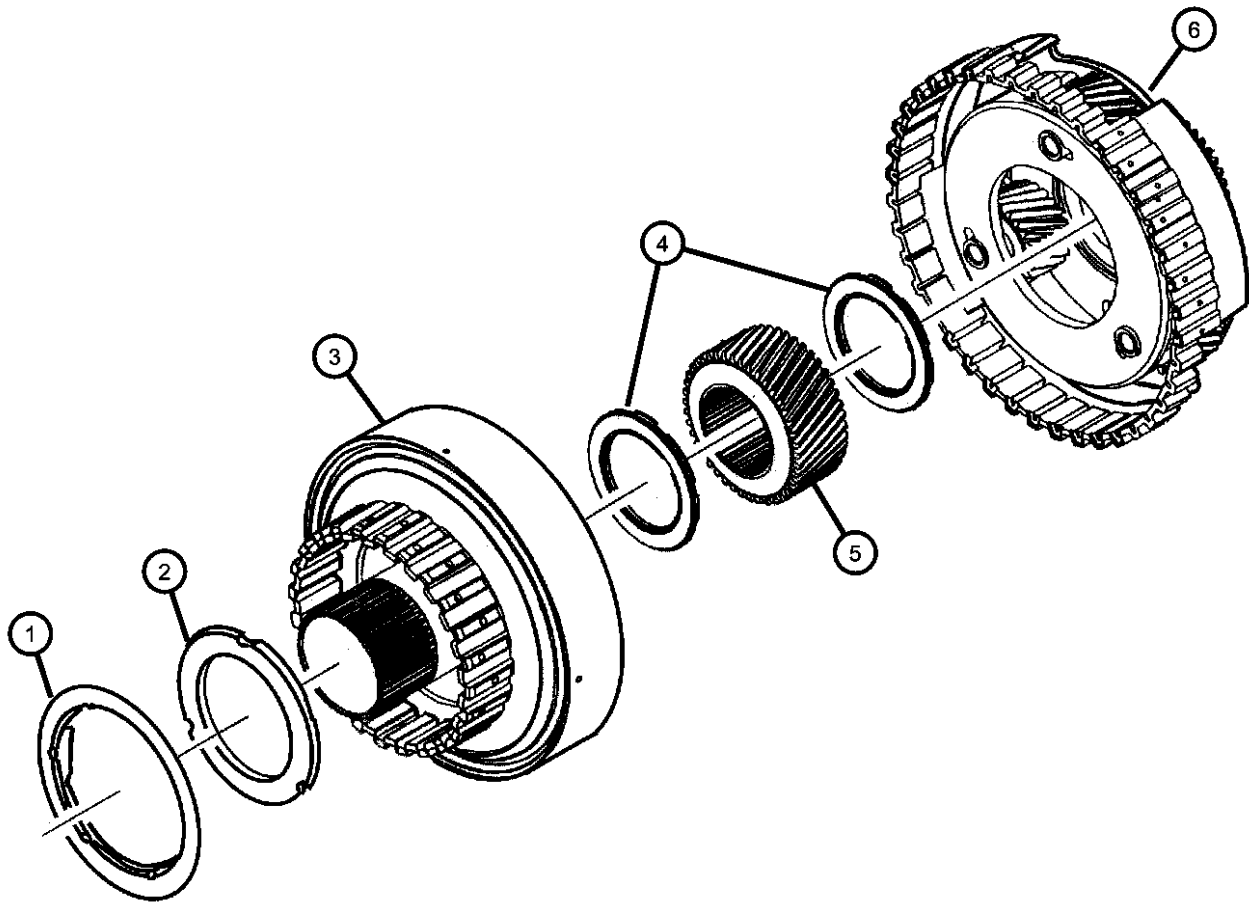

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Low / Reverse Clutch  
Figure 5-45RFE-470

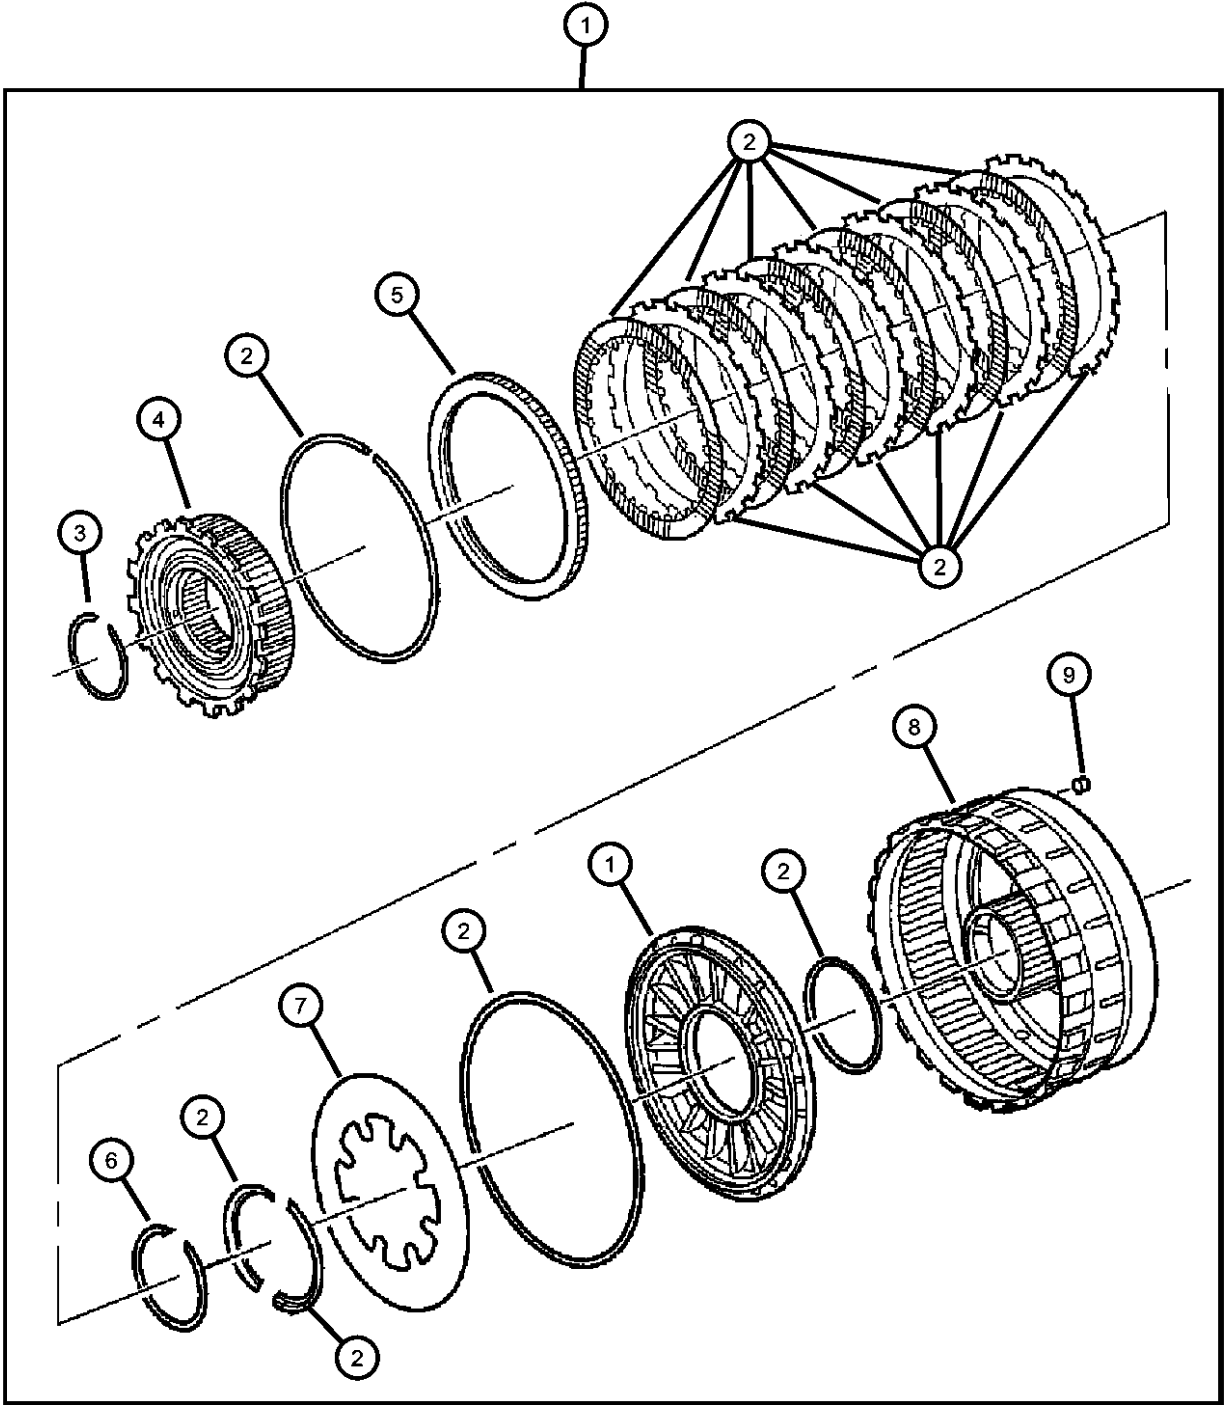


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4/5 Cylinder Turbo Diesel Engines									
1	04799457AB	1	J, U			EN0	DGQ		CLUTCH, L/R Clutch
2	05073003AA	1	J, U			EN0	DGQ		CLUTCH PACKAGE, Automatic Transmission, Low/Reverse SNAP RING
3	04799863AA	1	J, U			EN0	DGQ		CLUTCH, Overrunning
4	04799465	1	J, U			EN0	DGQ		PLATE, Transmission Clutch Reaction
5	04799667	1	J, U			EN0	DGQ		SNAP RING
6	04799863AA	1	J, U			EN0	DGQ		CLUTCH PACKAGE, Automatic Transmission, Low/Reverse
7	05179008AA	1	J, U			EN0	DGQ		RETAINER, Clutch
8	05013027AA	1	J, U			EN0	DGQ		BLEED ORIFICE, Transmission
9	04799086	1	J, U			EN0	DGQ		SNAP RING, Transmission, L / R Retainer To Case
-10	04799466	1	J, U			EN0	DGQ		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

Valve Body  
Figure 5-45RFE-710

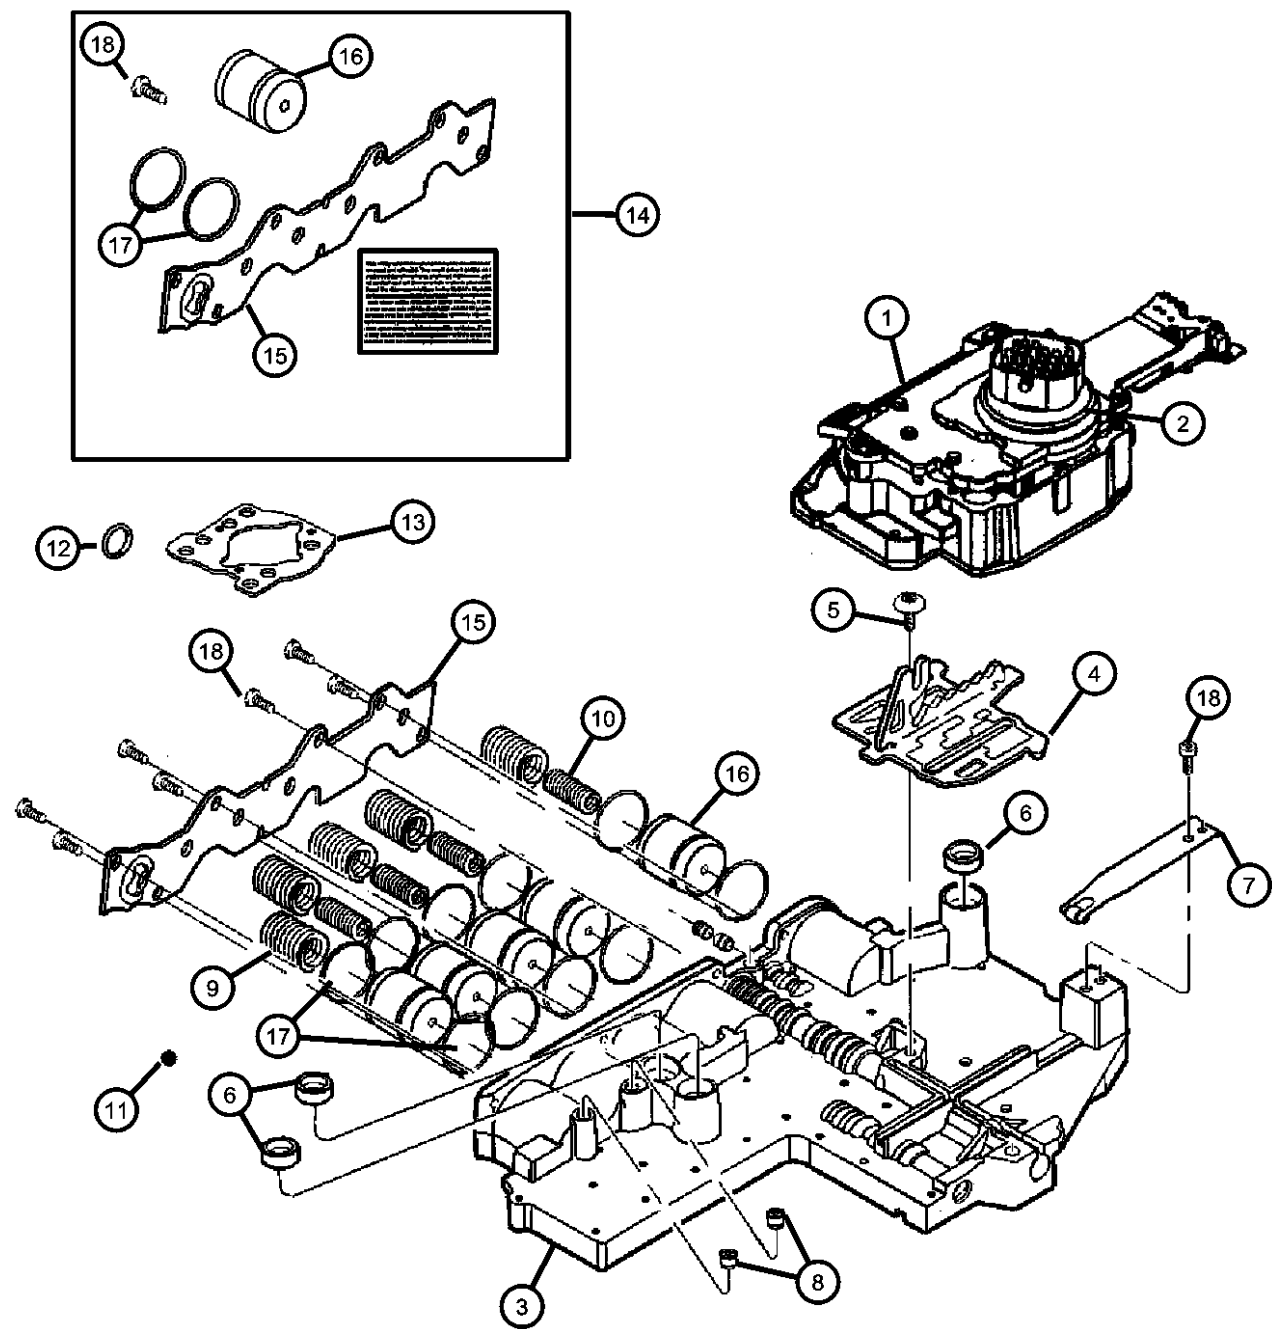


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4/5 Cylinder Turbo Diesel Engines									
1	04799934AD	1	J, U			EN0	DGQ		SOLENOID, Transmission
2	04799934AD	1							SEAL, Manual Valve Position Sensor, Serviced With # 1, (NOT SERVICED)
3	05080732AA	1	J, U			EN0	DGQ		VALVE BODY, Transfer Plate and Valve
4	04799654AC	1	J, U			EN0	DGQ		PLATE, Manual Valve Cam
5	06501710	1	J, U			EN0	DGQ		SCREW, Shoulder/Truss, M5x.8x12.5
6	04799778	3	J, U			EN0	DGQ		SEAL, Clutch Feed
7	52119501AA	1	J, U			EN0	DGQ		DETENT, Valve Body
8	04799086	1	J, U			EN0	DGQ		BLEED ORIFICE, Transmission
9	04471880	5	J, U			EN0	DGQ		SPRING, Accumulator
10	04567575	4	J, U			EN0	DGQ		SPRING, Accumulator
11	04446602	7	J, U			EN0	DGQ		BALL, Check
12	06505335AA	1	J, U			EN0	DGQ		O RING, Control Valve
13	04799986AA	1	J, U			EN0	DGQ		SEAL, Insulator
14	05174633AA	1	J, U			EN0	DGQ		ACCUMULATOR KIT, Accumulator Cover
15	04799598AB	1	J, U			EN0	DGQ		COVER, Accumulator
16	04446620AC	5	J, U			EN0	DGQ		PISTON, Accumulator
17	04446544	10	J, U			EN0	DGQ		SEAL, Accumulator
18	06503232	7	J, U			EN0	DGQ		SCREW, Pan Head, M5 x 0.8 x 12.60

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Parking Sprag  
Figure 5-45RFE-730

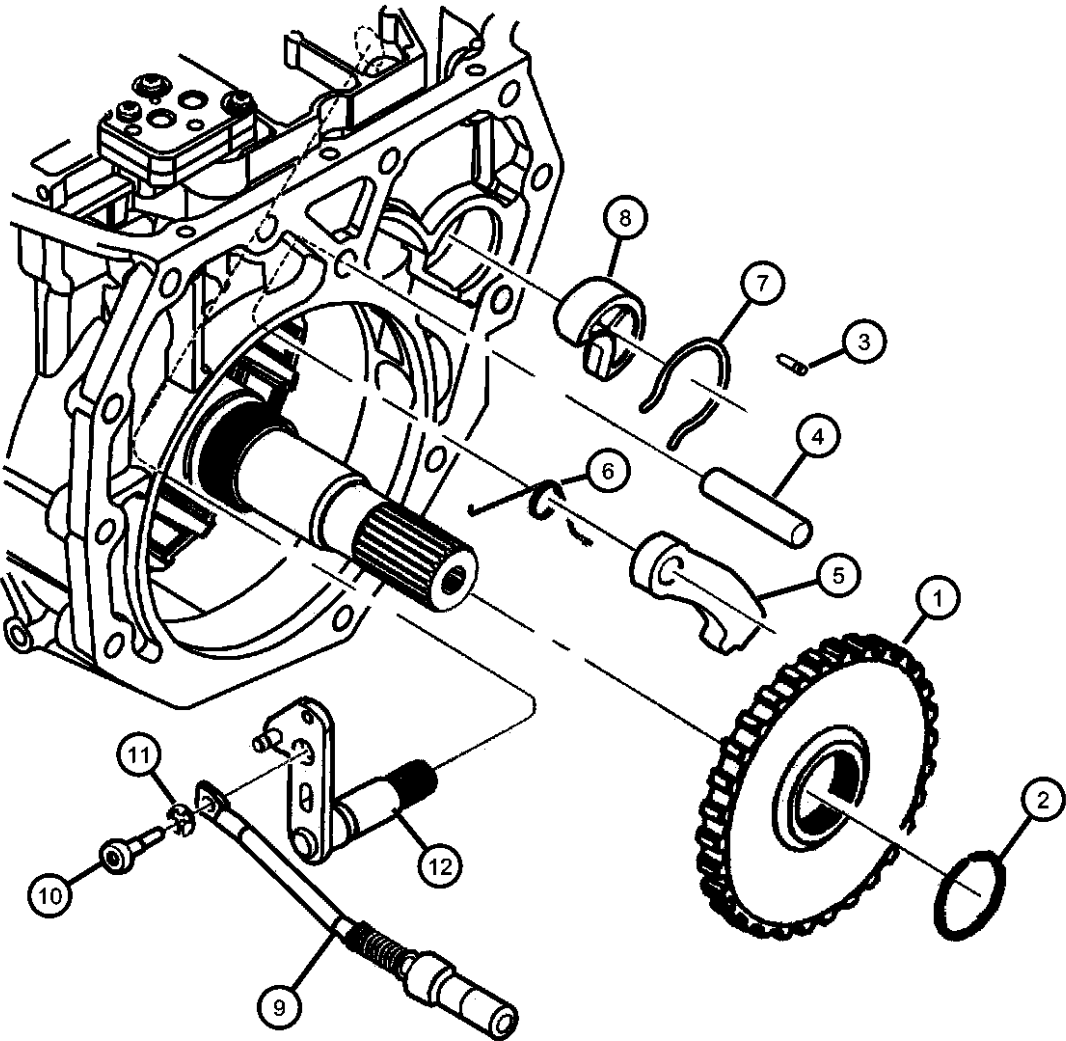

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4/5 Cylinder Turbo Diesel Engines									
1	04799493AB	1	J, U			EN0	DGQ		SPRAG, Transmission Parking
2	04799704	1	J, U			EN0	DGQ		SNAP RING, Transmission
3	00456636	1	J, U			EN0	DGQ		PIN
4	04799450	1	J, U			EN0	DGQ		SHAFT, Parking Pawl
5	04799744AD	1	J, U			EN0	DGQ		PAWL, Parking Sprag
6	04799451	1	J, U			EN0	DGQ		SPRING, Torsion
7	04799313	1	J, U			EN0	DGQ		SNAP RING
8	04799774	1	J, U			EN0	DGQ		GUIDE, Parking Sprag Pawl
9	04799611AB	1	J, U			EN0	DGQ		ROD, Parking Sprag
10	06504548	1	J, U			EN0	DGQ		SCREW, M6x1x30
11	06035256	1	J, U			EN0	DGQ		SNAP RING, Rod
12	04799453	1	J, U			EN0	DGQ		LEVER, Shift Shaft

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	


AR = use ase required - = Non illustrated part

Gearshift Controls  
Figure 5-45RFE-1210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE: Sales Codes  
[DG0] = All Automatic Transmissions  
[DG4]= Multi Speed Automatic Transmission 45RFE  
[DGQ]=5 Speed Automatic Transmission 45RFE  
[EK0] = All 3.7L 6 Cylinder Gas Engines

1	52104312AG	1	J, T				DG0		HOUSING AND LEVER, Shifter
2	52104320AA	1					DGQ		CABLE, Gearshift Control
3	52104319AC	1					DG0		CABLE, Gearshift Lock, [Park Interlock]
4	06100047	2							NUT AND WASHER, Hex Nut-Coned Washer, M6 x 1.00
5	52104321AA	1	T						COVER, Transfer Case Lever Hole
6	06101758	2					DGQ		SCREW, Hex Head, M8x1.25x20
7	52104371AC	1					DGQ		BRACKET, Shift Cable
8	52104177AB	1					DGQ		LEVER, Manual Control
9	34201358	4							NUT AND WASHER, Hex Nut-Sealing Washer, M6 x 1.00
10	52104389AB	1	J, U				DGQ		BRACKET, Shifter
11	06101752	3	J, U				DG0		SCREW AND WASHER, Hex Head, M10x1.5x28
12	06101978	1					DGQ		SCREW AND WASHER, Hex Head, M8-1.25x40

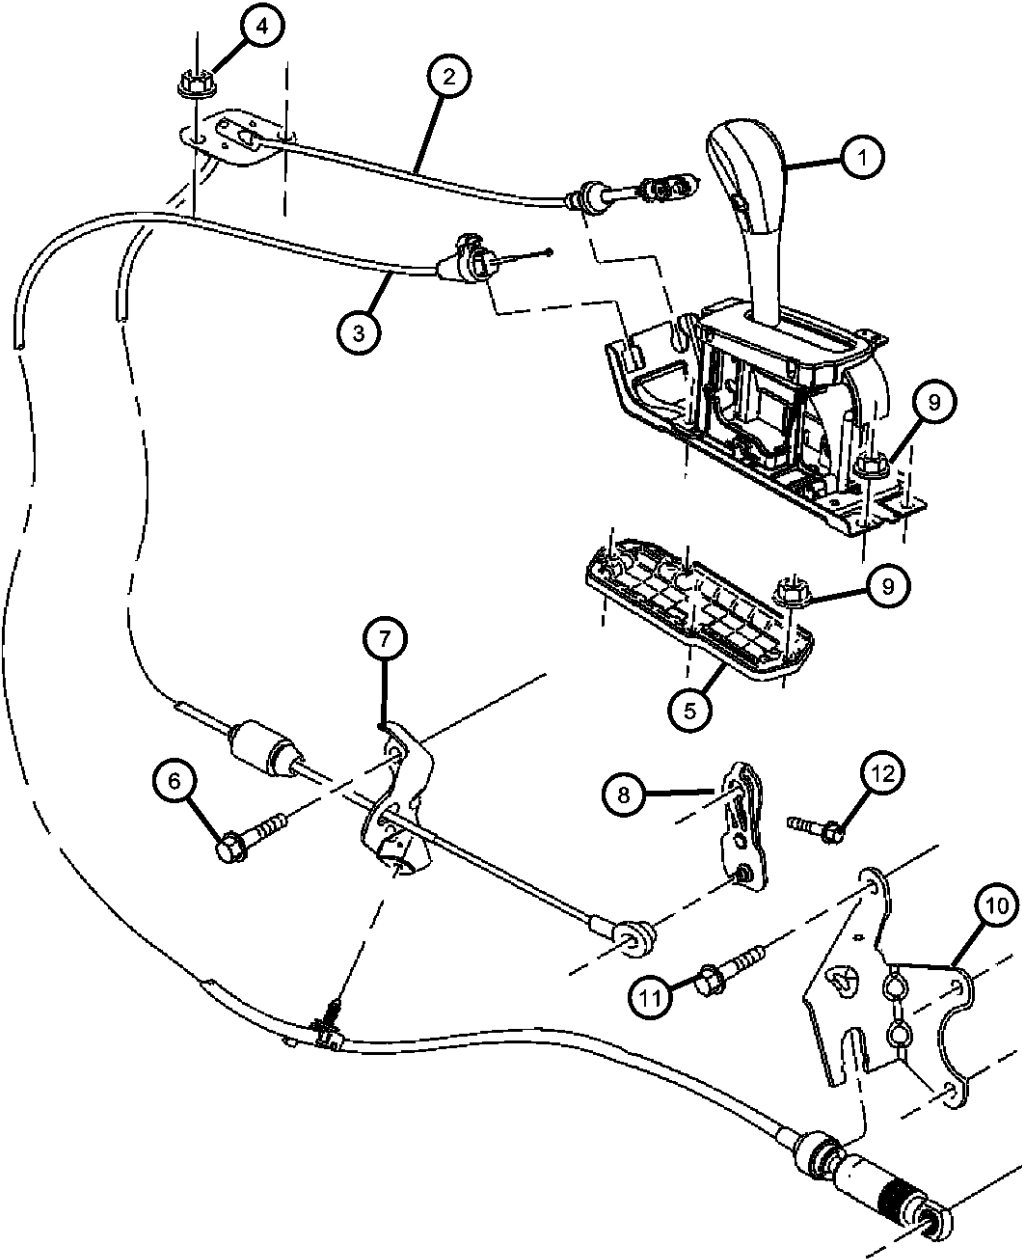

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

L / R Clutch  
Figure 5-45RFE-1310

LR CLUTCH PACKAGE 05013091aa

	D-ring, external (L/R piston outer)
	D-ring, internal (L/R piston inner)
(6)	Plate, clutch separator (1.74mm thk)
(6)	Disc assy, clutch (L/R)
	Snap ring, flat (1.5/1.6 thk)
	Snap ring, flat (2.03/2.13 thk)
	Snap ring, flat (2.54/2.68 thk)
(2)	Retainer, c-clip

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4/5 Cylinder Turbo Diesel Engines									
1	05073003AA	1	J, U			EN0	DGQ		CLUTCH PACKAGE, Automatic Transmission, Low/Reverse

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

Input Clutch Plate  
Figure 5-45RFE-1320

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DGQ]=5 Speed Automatic Transmission - [5-45RFE]  
[EN0]=All 4/5 Cylinder Turbo Diesel Engines

1	05013093AA	1	J, U			EN0	DGQ		PLATE PACKAGE, Input Clutch Thrust
---	------------	---	------	--	--	-----	-----	--	------------------------------------

SELECTIVE THRUST PLATES 05013093aa  
INPUT CLUTCH THRUST PLATE PKG

1

	Thrust plate, input clutc 1.52 / 1.61
	Thrust plate, input clutc 1.66 / 1.75
	Thrust plate, input clutc 1.80 / 1.89
	Thrust plate, input clutc 1.94 / 2.03
	Thrust plate, input clutc 2.08 / 2.17
	Thrust plate, input clutc 2.22 / 2.31
	Thrust plate, input clutc 2.36 / 2.45
	Thrust plate, input clutc 2.50 / 2.59
	Thrust plate, input clutc 2.64 / 2.73
	Thrust plate, input clutc 2.78 / 2.87
	Thrust plate, input clutc 2.92 / 3.01
	Thrust plate, input clutc 3.06 / 3.15
	Thrust plate, input clutc 3.20 / 3.29
	Thrust plate, input clutc 3.34 / 3.43
	Thrust plate, input clutc 3.62 / 3.71

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	Manual
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG4 = Transmission-Multi-Speed
			EN0 = 4Cyl Turbo Diesel	Auto, 45RFE
			EK0 = All 3.7L	DG6 = Transmission-4-Spd. Automatic, 42RLE
			ED0 = All 2.4L	DGQ = Transmission-5-Spd Automatic 5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

O / H  
Figure 5-45RFE-1330

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[DGQ]=5 Speed Automatic Transmission - [5-45RFE]  
[EN0]=All 4/5 Cylinder Turbo Diesel Engines  
1 05014221AJ 1 J, U EN0 DGQ OVERHAUL PACKAGE,  
Transmission

O/H seal/gasket package		05014221ac	1
	2&4 clutch package		
	Input clutch package		
	L/R clutch package		
	Sump filter & seal package		
	Cooler filter		
	fill tube sea		
	Frt pmp cover o-ring/seal assy		
	Rotating shaft seal,pmp hsg		
	Adapter seal, 4x4		
	Extension seal,4x2		
	Manual lever seal		
(2)	Speed sensor seal		
	Reaction supt ring seal		
	Rev O/D clutch filter		
(10)	Accumulator ring seal		
(3)	Valve body seal		
	Check valve o-ring		
	Solenoid insulator seal		
	T/C seal		

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Input Clutch  
Figure 5-45RFE-1340

INPUT CLUTCH PACKAGE 05013090aa

	O-ring, large (2.62mm x 79.84 ID,gm)
	O-ring, small (2.62mm x 70.56 ID,red)
(2)	Seal, internal lip
(2)	Ring seal, l-shaft
	O-ring, piston inner (2.62mm x 93.54 ID)
(5)	Plate, clutch separator (1.74mm thk)
(4)	Disc assy, clutch (u/d clutch)
(4)	Disc assy, clutch (o/d clutch)
(3)	PLate, clutch separator (2.21mm thk, O/D)
(2)	Disc assy, clutch (rev clutch)
	Snap ring,tapered, internal butterfly end
	Snap ring, flat (1.5/1.6 thk)
	Snap ring, flat (1.80/1.90 thk)
	Snap ring, flat (2.15/2.25 thk)
	Piston & seal, underdrive
	Piston & seal, underdrive balance

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4/5 Cylinder Turbo Diesel Engines									
1	05013090AC	1	J, U			EN0	DGQ		CLUTCH PACKAGE, Automatic Transmission, Input

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

Planetary Plate  
Figure 5-45RFE-1350

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:

Sales Codes:

[DGQ]=5 Speed Automatic Transmission - [5-45RFE]

[EN0]=All 4/5 Cylinder Turbo Diesel Engines

1	05013092AA	1	J, U			EN0	DGQ		PLATE PACKAGE, Planetary Thrust
-2									PLATE, Clutch Hub Thrust, Input Clutch Plate
	04799830AB	AR	J, U			EN0	DGQ		[1.94/2.03]
	04799831AB	AR	J, U			EN0	DGQ		[2.08/2.17]
	04799832AB	AR	J, U			EN0	DGQ		[2.22/2.31]
	04799833AB	AR	J, U			EN0	DGQ		[2.36/2.45]
	04799834AB	AR	J, U			EN0	DGQ		[2.50/2.59]
	04799835AB	AR	J, U			EN0	DGQ		[2.64/2.73]
	04799836AB	AR	J, U			EN0	DGQ		[2.78/2.87]
	04799837AB	AR	J, U			EN0	DGQ		[2.92/3.01]
-3									PLATE, Planetary, Thrust Plate
	04799810AC	AR	J, U			EN0	DGQ		[2.26/2.39]
	04799811AC	AR	J, U			EN0	DGQ		[2.41/2.54]
	04799812AC	AR	J, U			EN0	DGQ		[2.56/2.69]
	04799813AC	AR	J, U			EN0	DGQ		[2.71/2.84]
	04799814AC	AR	J, U			EN0	DGQ		[2.86/2.99]
	04799816AC	AR	J, U			EN0	DGQ		[3.16/3.29]
	04799817AC	AR	J, U			EN0	DGQ		[3.31/3.44]
	04799818AC	AR	J, U			EN0	DGQ		[3.46/3.59]
	04799819AC	AR	J, U			EN0	DGQ		[3.61/3.74]
	04799843AC	AR	J, U			EN0	DGQ		[3.01/3.14]

LIBERTY (KJ)

SERIES

P = Limited  
H = Sport  
M = Renegade

LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EKO = All 3.7L  
ED0 = All 2.4L

TRANSMISSION

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use as required - = Non illustrated part

2004 KJ

2 & 4 Clutch  
Figure 5-45RFE-1360

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE: Sales Codes: [DGQ]=5 Speed Automatic Transmission - [5-45RFE] [EN0]=All 4/5 Cylinder Turbo Diesel Engines									
1	05013087AC	1	J, U			EN0	DGQ		CLUTCH PACKAGE, Automatic Transmission, 2/4


2&4 CLUTCH PACKAGE 05013087aa

(2)	Disc assy, clutch (2nd clutch)
(2)	Plate, clutch separator
	D-ring, external (2nd outer)
	D-ring, internal (2nd inner)
	D-ring, internal (4th outer)
	D-ring, internal (4th inner)
(3)	Plate, clutch separator (4th clutch)
(3)	Disc assy, clutch (4th clutch)
	Snap ring (4th, 1.74/1.84 thk)
	Snap ring (4th, 2.15/2.25 thk)
	Snap ring (4th, 2.56/2.66 thk)

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

# Group - 3550

## Manual Transmission 5 Speed

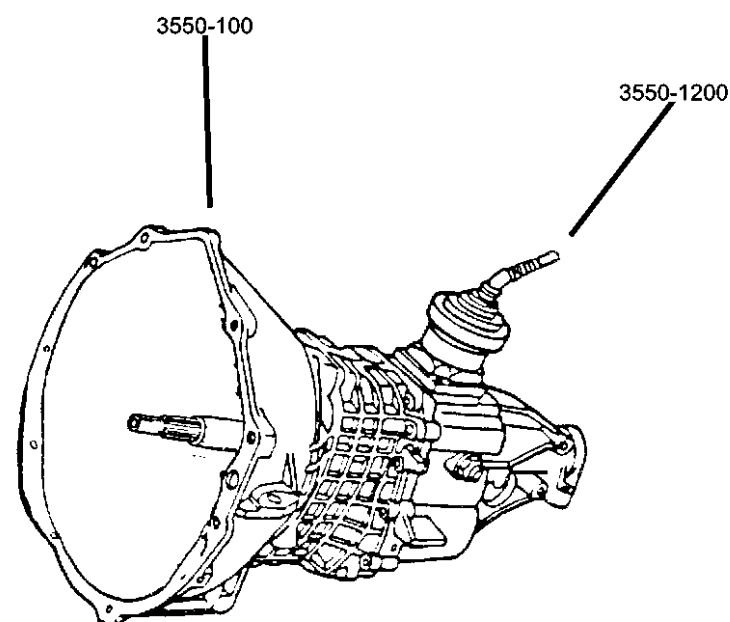

### Group - 3550 Manual Transmission 5 Speed

Illustration Title

Group-Fig. No.

#### Transmission Assembly

Transmission Assembly [DDD].....Fig. 3550 - 110

#### Case and Extension

Case and Extension [DDD].....Fig. 3550 - 210

#### Gear Train



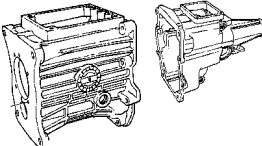
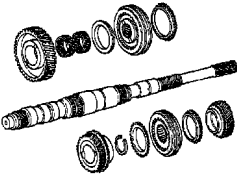
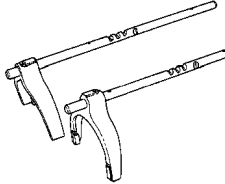
Gear Train [DDD].....Fig. 3550 - 410

#### Fork and Rails


Fork and Rails [DDD] .....Fig. 3550 - 910

#### Gearshift Controls

Gearshift Controls [DDD] ..... Fig. 3550 - 1210
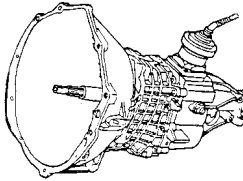
<b>3550-100</b> Transmission Assembly 	<b>3550-1200</b> Gearshift Controls 	<b>3550-200</b> Case and Extension 	<b>3550-400</b> Gear Train 
<b>3550-900</b> Fork and Rails 			

Transmission Assembly [DDD]  
Figure 3550-110

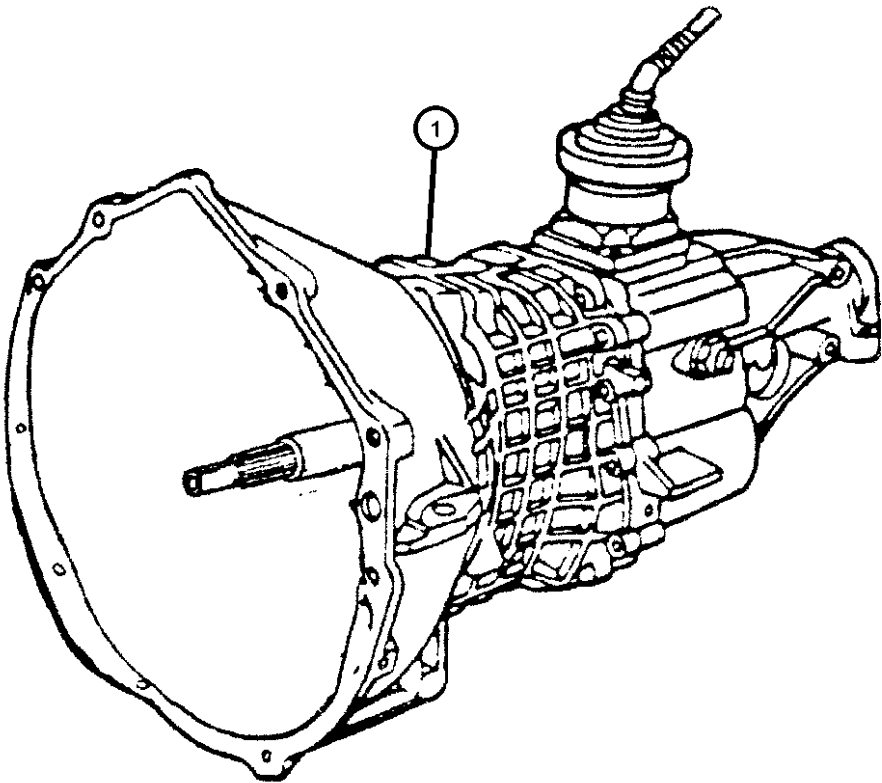


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE; Sales Codes  
[DDD] = 5 Speed Heavy Duty Manual Transmissions  
[EKG] = Magnum 3.7L V6 Engine  
[EN0] = All 4/5 Cylinder Turbo Diesel Engines

1									TRANSMISSION, 5 Speed
	52104817AE 04874464	1	J			EKG	DDD		Mopar Manual Transmission Fluid
	52104818AE 04874464	1	T			EKG	DDD		Mopar Manual Transmission Fluid
	52104820AE 04874464	1	J, U			EN0	DDD		Mopar Manual Transmission Fluid

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Case and Extension [DDD]  
Figure 3550-210

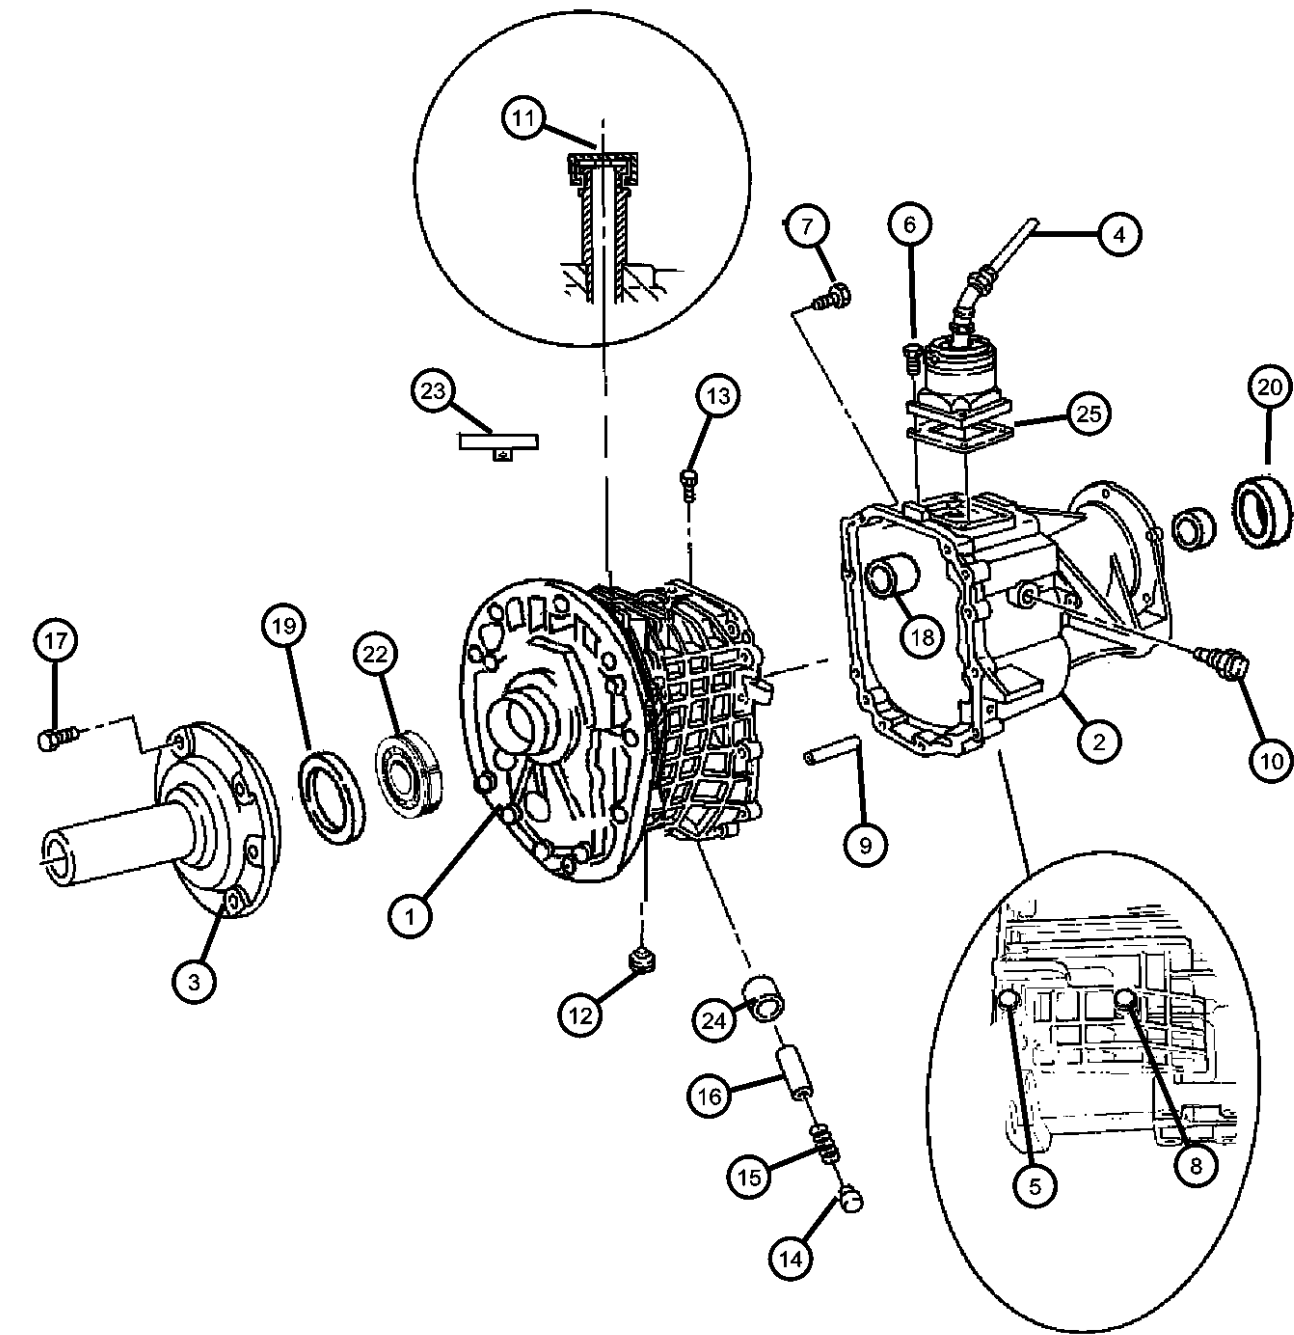

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE: Sales Codes  
[DDD] = 5 Speed Heavy Duty Manual Transmissions  
[EKG] = Magnum 3.7L V6 Engine

1									CASE, Transmission
	05096101AA	1	J, U			EN0	DDD		
	05096102AA	1	T			EKG	DDD		
		1	J			EKG	DDD		
2									CASE, Transmission Rear
	05069035AC	1	T			EKG	DDD		
	05069042AC	1	J, U			EN0	DDD		
		1	J			EKG	DDD		
3									RETAINER, Shaft
	05013306AA	1	J, U			EN0	DDD		
		1	T			EKG	DDD		
		1	J			EKG	DDD		
4									LEVER, Gearshift
	05101817AA	1	T			EKG	DDD		
		1	J			EKG	DDD		
	05101818AA	1	J, U			EN0	DDD		
5									BOLT, M8-1.25x70
	04741313	1	J, U			EN0	DDD		
		1	T			EKG	DDD		
		1	J			EKG	DDD		
6									BOLT, Hex Head
	04741144	4	T			EKG	DDD		
		4	J, U			EN0	DDD		
		4	J			EKG	DDD		
7									BOLT, Hex Head, M8x1.25x50
	04741123	9	T			EKG	DDD		
		11	J, U			EN0	DDD		
		9	J			EKG	DDD		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Case and Extension [DDD]  
Figure 3550-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
8	04741115	1	J, U			EN0	DDD		BOLT, Hex
9									PIN, Locating
	04741122	2	T			EKG	DDD		
		2	J, U			EN0	DDD		
		2	J			EKG	DDD		
10									SWITCH, Back Up Lamp
	05166264AA	1	T			EKG	DDD		
	56007163	1	J, U			EN0	DDD		
		1	J			EKG	DDD		
11									VENT, Transmission
	05015945AA	1	J, U			EN0	DDD		
		1	T			EKG	DDD		
		1	J			EKG	DDD		
12									PLUG, Oil Fill
	04882280	1	J, U			EN0	DDD		
		1	T			EKG	DDD		
		1	J			EKG	DDD		
13									PIN, Detent
	04740904	1	J, U			EN0	DDD		
		1	T			EKG	DDD		
		1	J			EKG	DDD		
14									CAP, Detent
	04741128	1	J, U			EN0	DDD		
		1	T			EKG	DDD		
		1	J			EKG	DDD		
15									SPRING, Shift Detent
	04773182	1	J, U			EN0	DDD		
	05093217AA	1	T			EKG	DDD		
		1	J			EKG	DDD		
16									PLUNGER

**LIBERTY (KJ)**

SERIES	LINE
P = Limited	J = LHD (4WD)
H = Sport	U = RHD (4WD)
M = Renegade	T = LHD (2WD)


**BODY**  
74 = 4 Door (104.3 WB)

**ENGINE**  
ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EK0 = All 3.7L  
ED0 = All 2.4L

**TRANSMISSION**  
DDD = Transmission - 5-Speed HD Manual  
DDK = Transmission - 5-Speed HD Manual  
DG4 = Transmission-Multi-Speed Auto, 45RFE  
DG6 = Transmission-4-Spd. Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic 5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

Case and Extension [DDD]  
Figure 3550-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	05015949AA	1	J, U			EN0	DDD		
		1	T			EKG	DDD		
		1	J			EKG	DDD		
17	04741300	6	T			EKG	DDD		BOLT, Hex Head, M6x1.00x25
		6	J, U			EN0	DDD		
		6	J			EKG	DDD		
18	04740899	1	J, U			EN0	DDD		BUSHING, Shift Rail
		1	T			EKG	DDD		
		1	J			EKG	DDD		
19	04741296	1	J, U			EN0	DDD		SEAL, Input Shaft
		1	T			EKG	DDD		
		1	J			EKG	DDD		
20	04531216AB	1	T			EKG	DDD		SEAL, Output Shaft
		1	J, U			EN0	DDD		
		1	J			EKG	DDD		
-21	04864409	1	T			EKG	DDD		SEAL, Extension
22	04874174AB	1	J, U			EN0	DDD		BEARING, Input Shaft
		1	T			EKG	DDD		
		1	J			EKG	DDD		
23	05015945AA	1	J, U			EN0	DDD		VENT, Transmission
		1	T			EKG	DDD		
		1	J			EKG	DDD		
24	05012337AA	1	J, U			EN0	DDD		BUSHING, Transmission
		1	J, U			EN0	DDD		

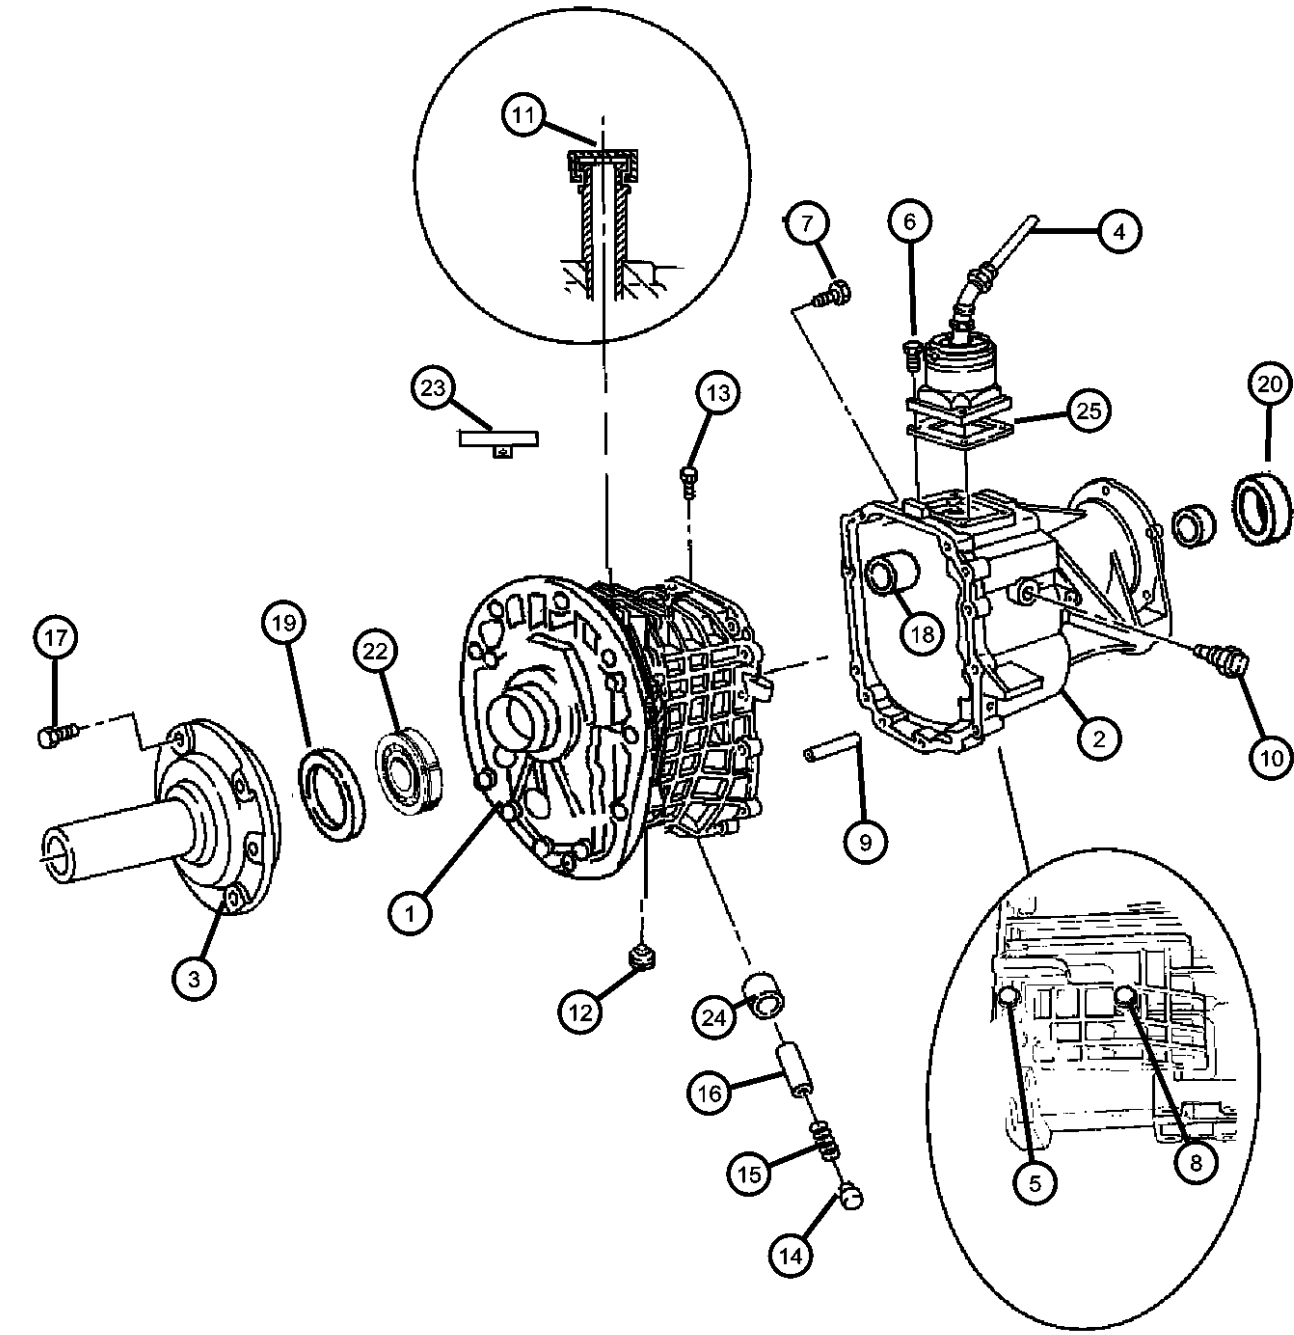

**LIBERTY (KJ)**  
SERIES      LINE  
P = Limited      J = LHD (4WD)  
H = Sport      U = RHD (4WD)  
M = Renegade      T = LHD (2WD)

**BODY**  
74 = 4 Door (104.3 WB)

**ENGINE**  
ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EK0 = All 3.7L  
ED0 = All 2.4L

**TRANSMISSION**  
DDD = Transmission - 5-Speed HD Manual  
DDK = Transmission - 5-Speed HD Manual  
DG4 = Transmission-Multi-Speed Auto, 45RFE  
DG6 = Transmission-4-Spd. Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic 5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions




Case and Extension [DDD]  
Figure 3550-210

										ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
												1	T			EKG	DDD		
												1	J			EKG	DDD		
										25	04886153AA	1	J, U			EN0	DDD		SEAL, Shift Lever
												1	T			EKG	DDD		
												1	J			EKG	DDD		
										-26	05012337AA	1	J, U			EN0	DDD		BUSHING, Transmission
												1	J			EKG	DDD		
											05019023AA	1	T			EKG	DDD		
										-27	05019683AA	2	T			EKG	DDD		CLIP
												2	J, U			EN0	DDD		
												2	J			EKG	DDD		
										-28	04740903	1	J, U			EN0	DDD		PLUG, Oil Drain
												1	T			EKG	DDD		
												1	J			EKG	DDD		
										<div><div>LIBERTY (KJ)</div><div><div>SERIES</div><div>P = Limited</div><div>H = Sport</div><div>M = Renegade</div></div><div><div>LINE</div><div>J = LHD (4WD)</div><div>U = RHD (4WD)</div><div>T = LHD (2WD)</div></div><div><div>BODY</div><div>74 = 4 Door (104.3 WB)</div></div><div><div>ENGINE</div><div>ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI</div><div>EKG = Engine - 3.7L V6</div><div>ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel</div><div>ENR = Engine - 2.8L 4 Cyl Turbo Diesel</div><div>EN0 = 4Cyl Turbo Diesel</div><div>EK0 = All 3.7L</div><div>ED0 = All 2.4L</div></div><div><div>TRANSMISSION</div><div>DDD = Transmission - 5-Speed HD Manual</div><div>DDK = Transmission - 5-Speed HD Manual</div><div>DG4 = Transmission-Multi-Speed Auto, 45RFE</div><div>DG6 = Transmission-4-Spd. Automatic, 42RLE</div><div>DGQ = Transmission-5-Spd Automatic 5-45RFE</div><div>DBB = All Manual Transmissions</div><div>DG0 = All Automatic Transmissions</div></div></div>									

AR = use ase required - = Non illustrated part

Gear Train [DDD]  
Figure 3550-410

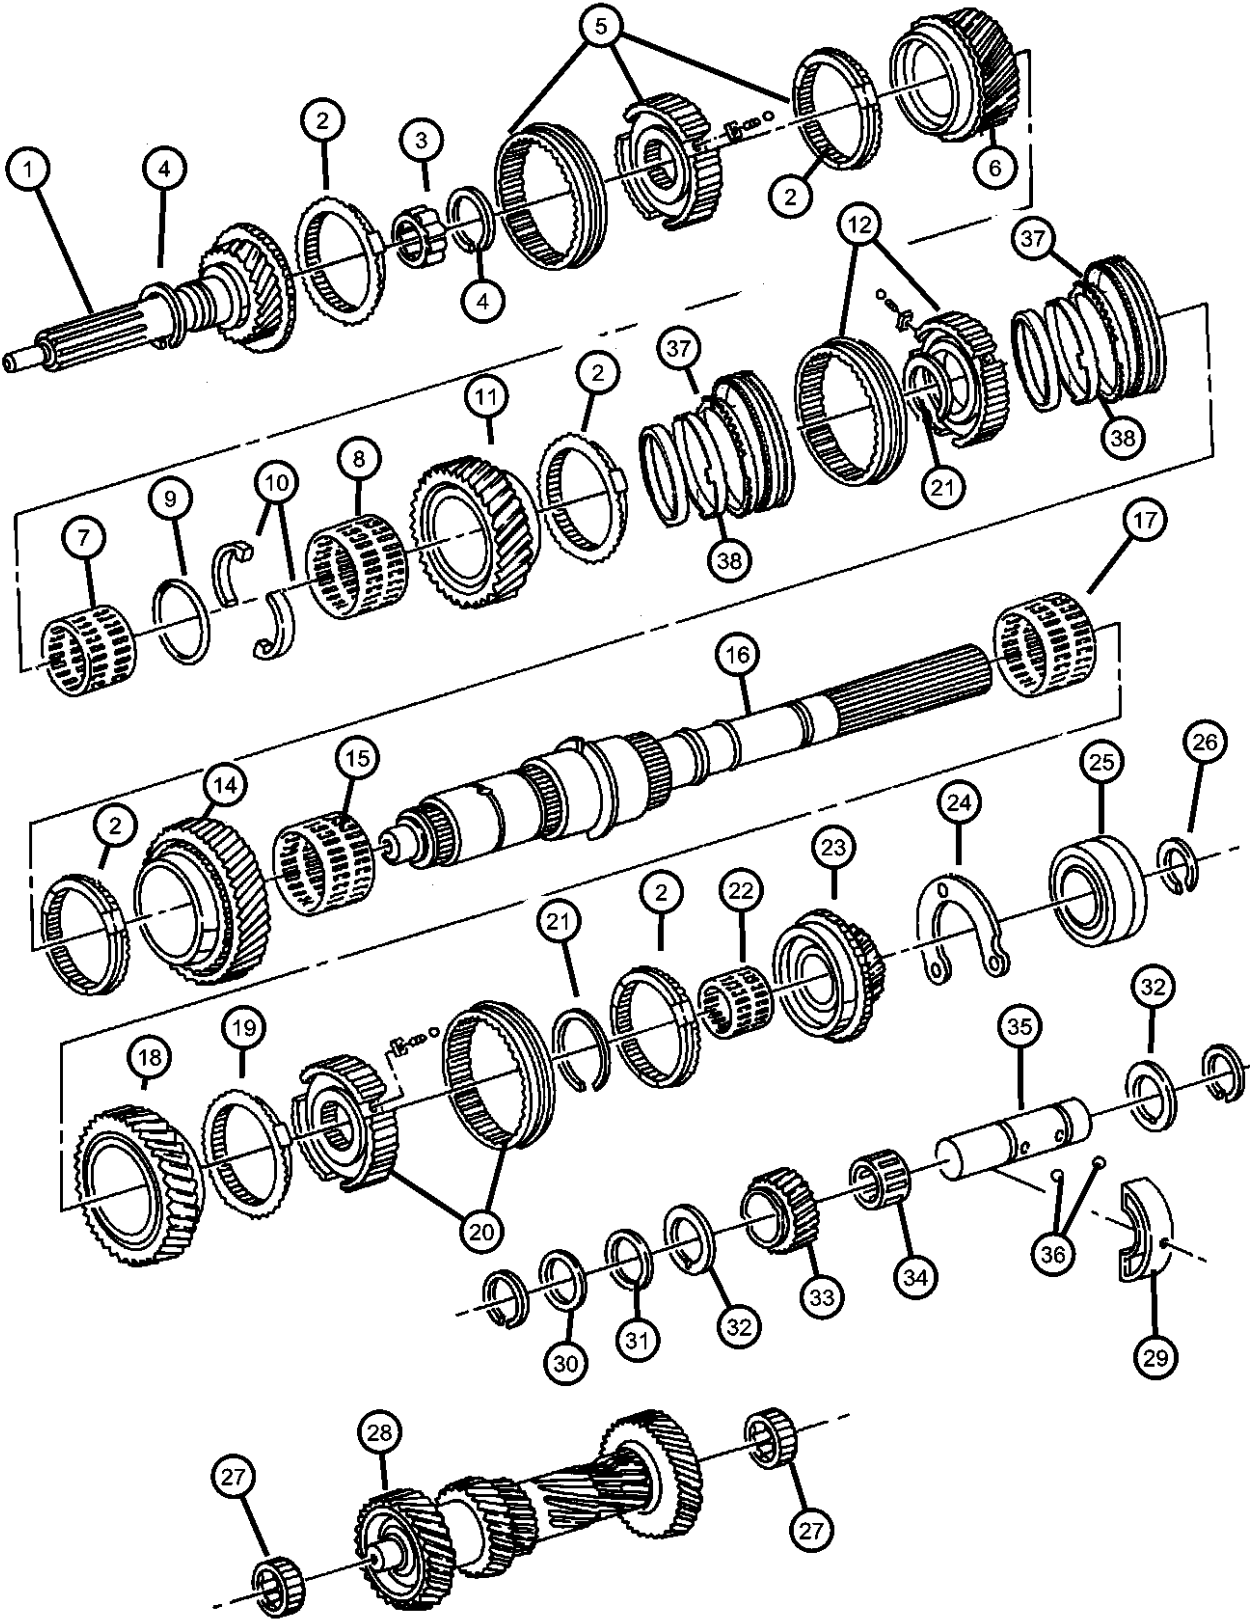

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


NOTE: Sales Codes  
[DDD] = 5 Speed Heavy Duty Manual Transmissions  
[EKG] = Magnum 3.7L V6 Engine  
[EN0] = All 4/5 Cylinder Turbo Diesel Engines

1	05019723AA	1	J, U			EN0	DDD		SHAFT, Input
		1	T			EKG	DDD		
		1	J			EKG	DDD		
2	04741277	2	T			EKG	DDD		STOP RING, Synchronizer
		2	J, U			EN0	DDD		
		2	J			EKG	DDD		
3	04741878	1	J, U			EN0	DDD		NEEDLE BEARING, Input Shaft
		1	T			EKG	DDD		
		1	J			EKG	DDD		
4	04741266	1	J, U			EN0	DDD		SNAP RING, Output Shaft Bearing
		1	T			EKG	DDD		
		1	J			EKG	DDD		
5	04741293AB	1	J, U			EN0	DDD		SYNCHRONIZER, Third and Fourth
		1	T			EKG	DDD		
		1	J			EKG	DDD		
6	04883718AB	1	J, U			EN0	DDD		GEAR, Third
		1	T			EKG	DDD		
		1	J			EKG	DDD		
7	04741874	1	J, U			EN0	DDD		NEEDLE BEARING, Third Gear
		1	T			EKG	DDD		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Gear Train [DDD]  
Figure 3550-410

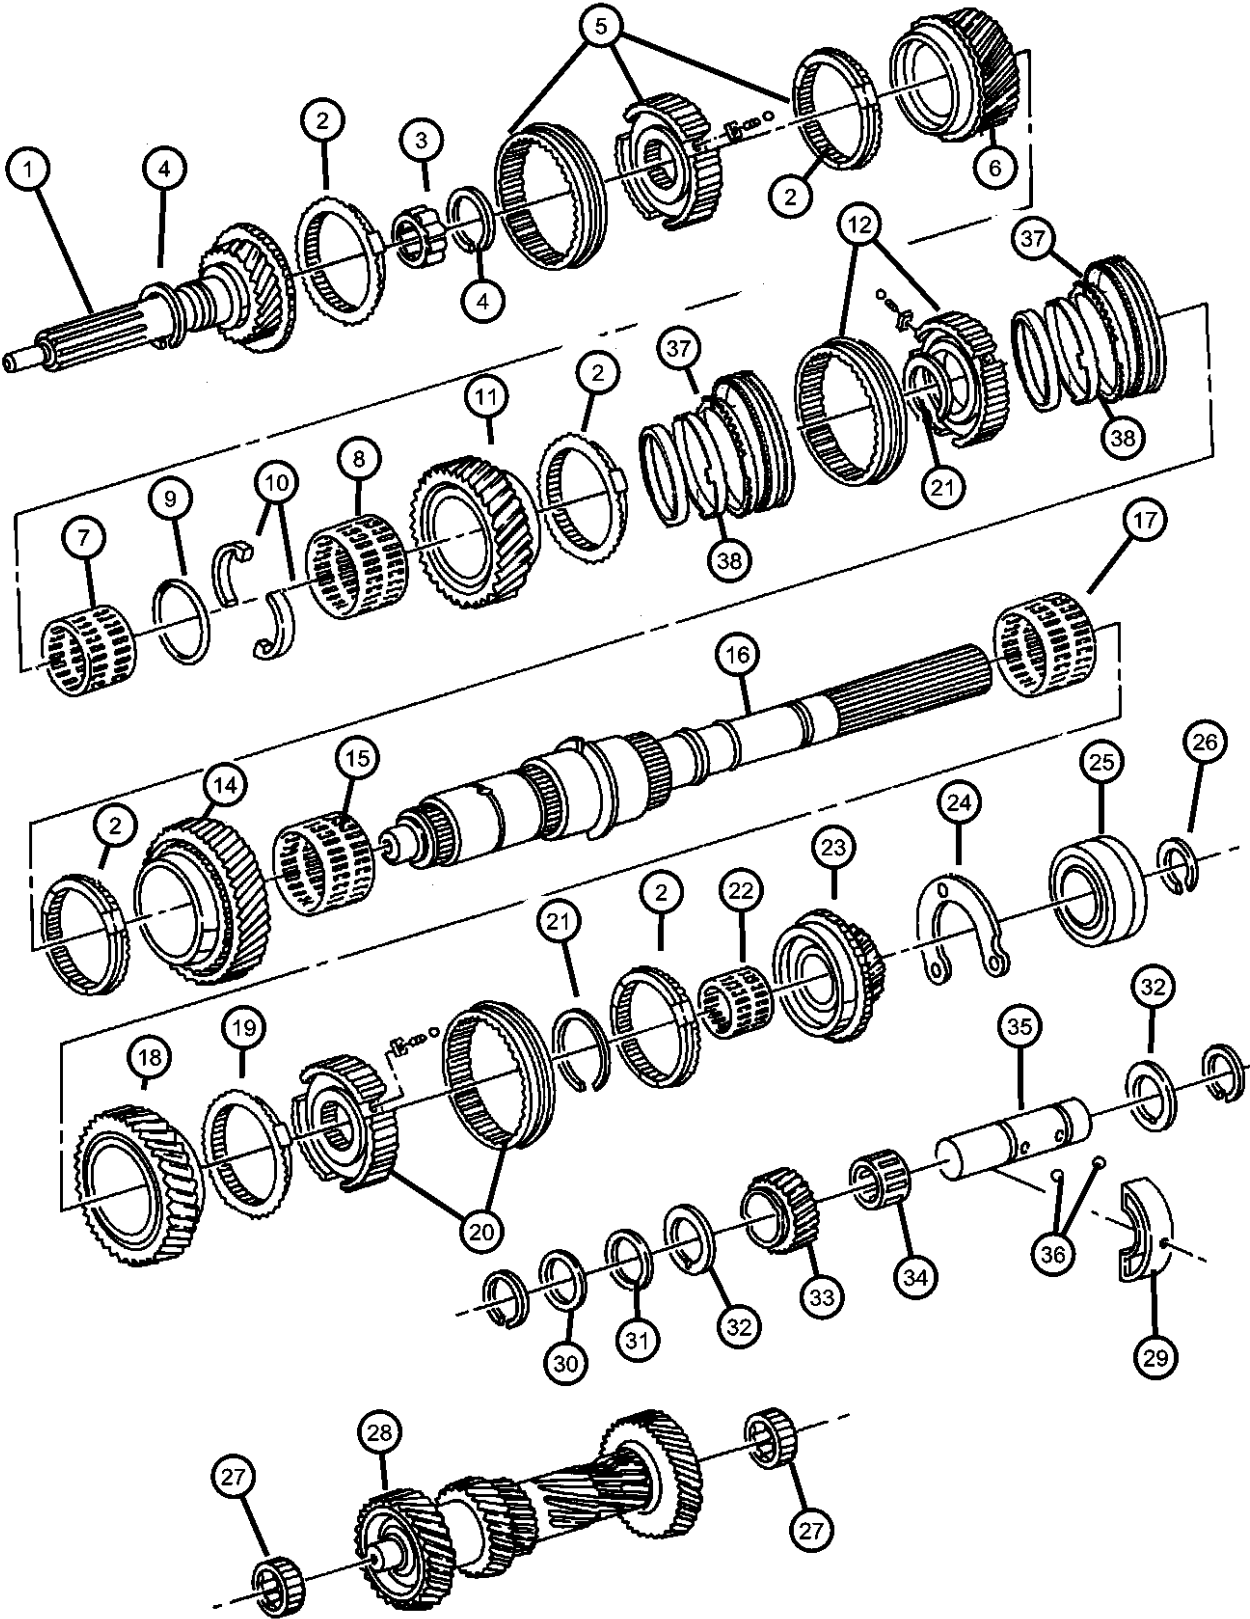


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
8	05003039AA	1	J			EKG	DDD		NEEDLE BEARING, Second Gear
		1	J, U			EN0	DDD		
9	04897922AA	1	J, U			EN0	DDD		SNAP RING
		1	T			EKG	DDD		
		1	J			EKG	DDD		
		1	J			EKG	DDD		
10	05019721AA	2	T			EKG	DDD		WASHER, Output Shaft
		2	J, U			EN0	DDD		
		2	J			EKG	DDD		
		2	J			EKG	DDD		
11	04874358AB	1	J, U			EN0	DDD		GEAR, Second
		1	T			EKG	DDD		
		1	J			EKG	DDD		
		1	J			EKG	DDD		
12	04874356AB	1	J, U			EN0	DDD		SYNCHRONIZER, First and Second
		1	T			EKG	DDD		
		1	J			EKG	DDD		
		1	J			EKG	DDD		
-13	04741277	2	T			EKG	DDD		STOP RING, Synchronizer
		2	J, U			EN0	DDD		
		2	J			EKG	DDD		
		2	J			EKG	DDD		
14	04874355AB	1	J, U			EN0	DDD		GEAR, First
		1	T			EKG	DDD		
		1	J			EKG	DDD		
		1	J			EKG	DDD		
15	04741871	1	J, U			EN0	DDD		NEEDLE BEARING, Transmission
		1	T			EKG	DDD		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Gear Train [DDD]  
Figure 3550-410

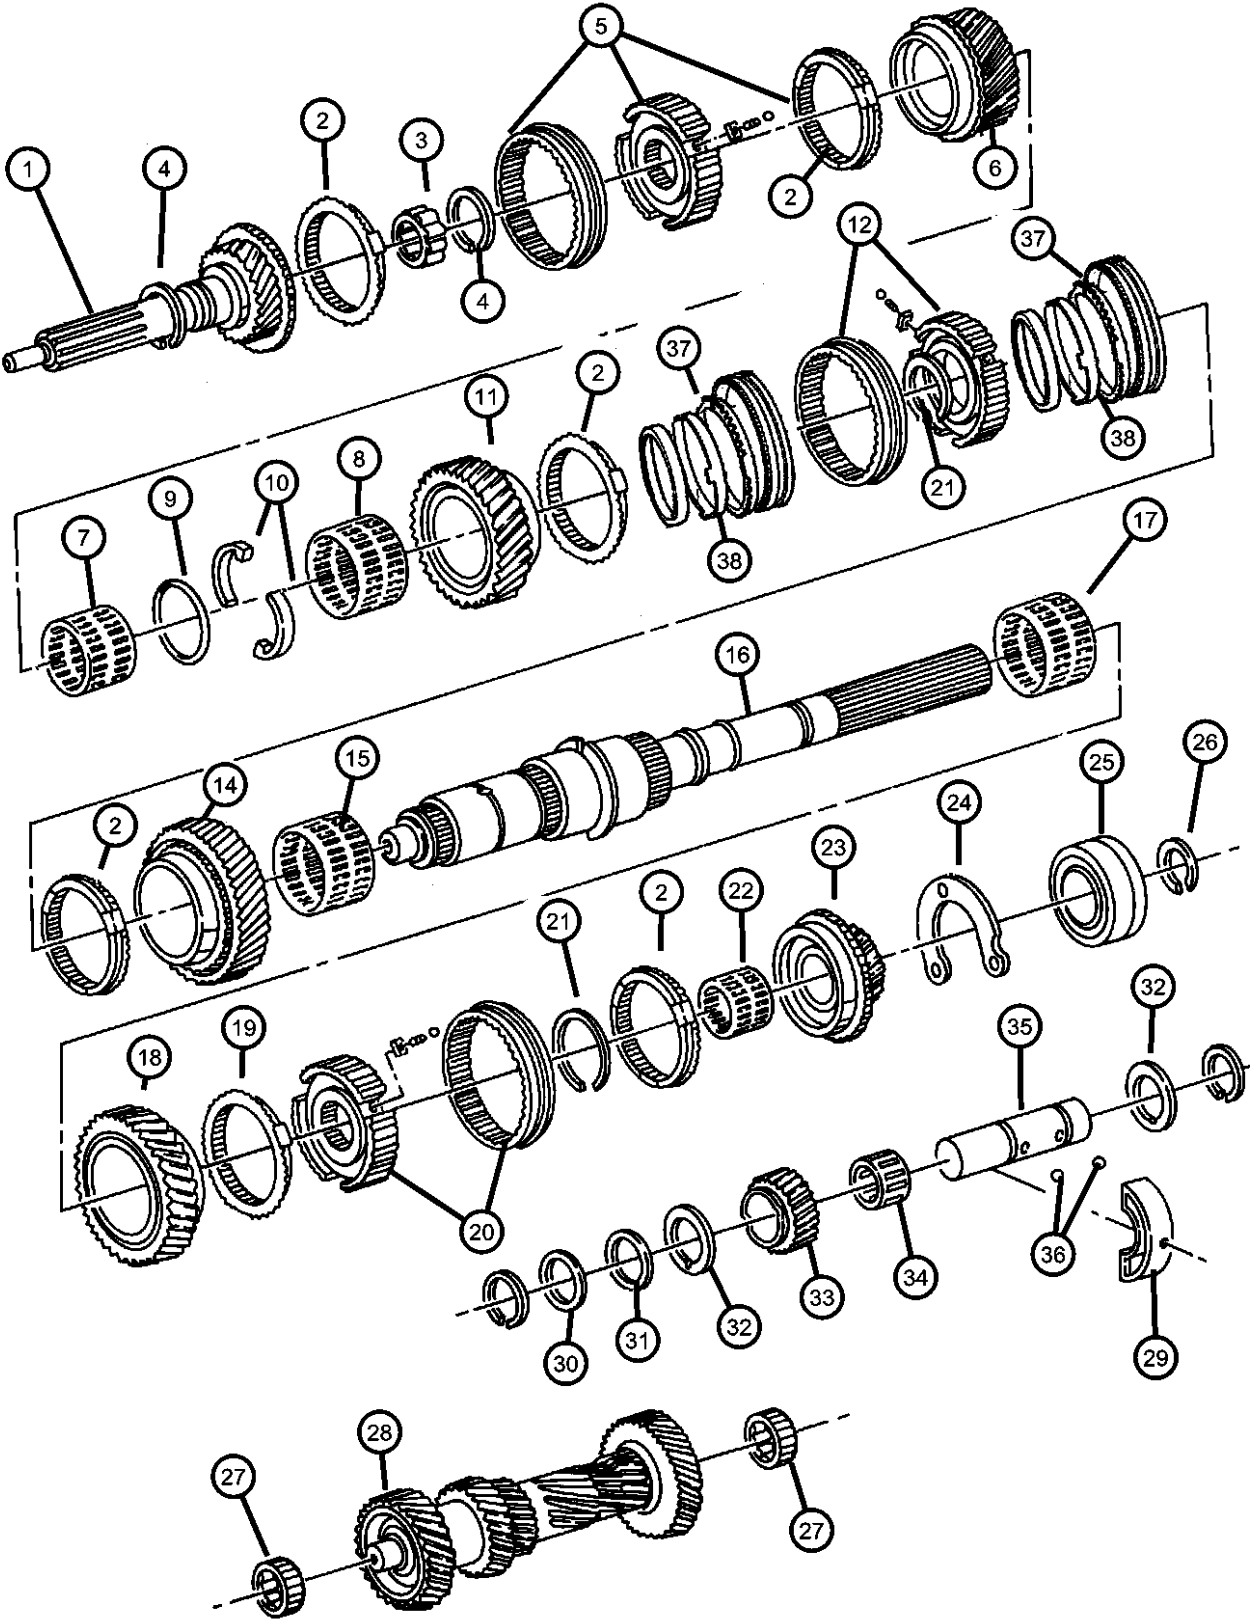

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
16		1	J			EKG	DDD		SHAFT, Output
	04874309	1	J, U			EN0	DDD		
		1	J			EKG	DDD		
17	05003288AA	1	T			EKG	DDD		NEEDLE BEARING, Transmission
	04741871	1	J, U			EN0	DDD		
		1	T			EKG	DDD		
18		1	J			EKG	DDD		GEAR, Reverse
	05019029AA	1	J, U			EN0	DDD		
		1	T			EKG	DDD		
19		1	J			EKG	DDD		STOP RING, Synchronizer
	04741277	1	T			EKG	DDD		
		1	J			EKG	DDD		
20	04741285	1	J, U			EN0	DDD		SYNCHRONIZER, Fifth And Reverse
	04741278AB	1	J, U			EN0	DDD		
		1	T			EKG	DDD		
21		1	J			EKG	DDD		STOP RING, Synchronizer
	04741277	2	T			EKG	DDD		
		2	J, U			EN0	DDD		
22		2	J			EKG	DDD		BEARING, Needle
	04741273	1	J, U			EN0	DDD		
		1	T			EKG	DDD		
		1	J			EKG	DDD		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Gear Train [DDD]  
Figure 3550-410

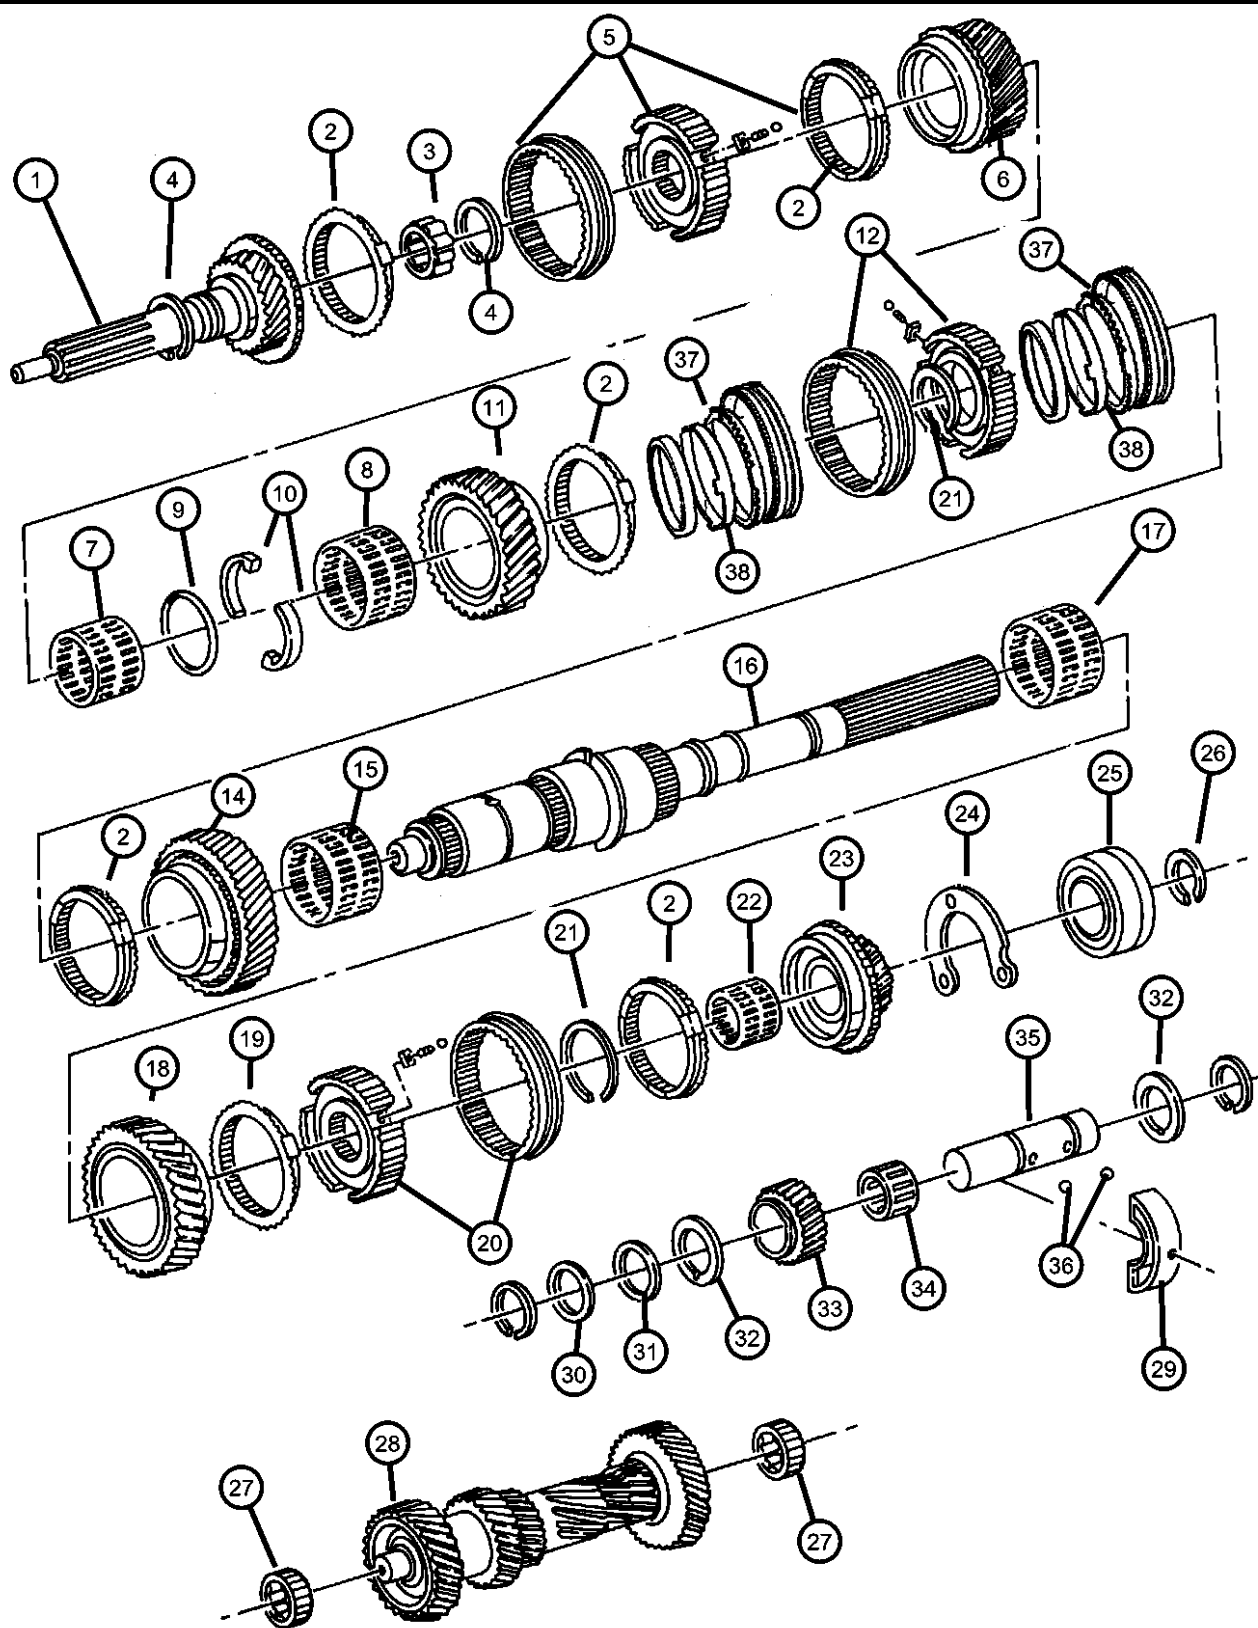

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
23	05069040AA	1	J, U			EN0	DDD		GEAR, Fifth
		1	T			EKG	DDD		
		1	J			EKG	DDD		
24	04741114	1	J, U			EN0	DDD		RETAINER, Transmission Output Shaft Bearing
		1	J			EKG	DDD		
		1	T			EKG	DDD		
25	04741866AB	1	J, U			EN0	DDD		BEARING, Output Shaft
		1	T			EKG	DDD		
		1	J			EKG	DDD		
26	04741266	1	J, U			EN0	DDD		SNAP RING, Output Shaft Bearing
		1	T			EKG	DDD		
		1	J			EKG	DDD		
27	05066646AA	1	J, U			EN0	DDD		BEARING, Countershaft
		1	T			EKG	DDD		
		1	J			EKG	DDD		
28	05066650AA	1	J, U			EN0	DDD		SHAFT, Counter
		1	T			EKG	DDD		
		1	J			EKG	DDD		
29	04741312	1	J, U			EN0	DDD		SUPPORT, Segment Idler Shaft
		1	T			EKG	DDD		
		1	J			EKG	DDD		
30									WASHER, Flat

LIBERTY (KJ)

SERIES	LINE
P = Limited	J = LHD (4WD)
H = Sport	U = RHD (4WD)
M = Renegade	T = LHD (2WD)


BODY
74 = 4 Door (104.3 WB)

ENGINE
ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI
EKG = Engine - 3.7L V6
ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel
ENR = Engine - 2.8L 4 Cyl Turbo Diesel
EN0 = 4Cyl Turbo Diesel
EK0 = All 3.7L
ED0 = All 2.4L

TRANSMISSION
DDD = Transmission - 5-Speed HD Manual
DDK = Transmission - 5-Speed HD Manual
DG4 = Transmission-Multi-Speed Auto, 45RFE
DG6 = Transmission-4-Spd. Automatic, 42RLE
DGQ = Transmission-5-Spd Automatic 5-45RFE
DBB = All Manual Transmissions
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Gear Train [DDD]  
Figure 3550-410

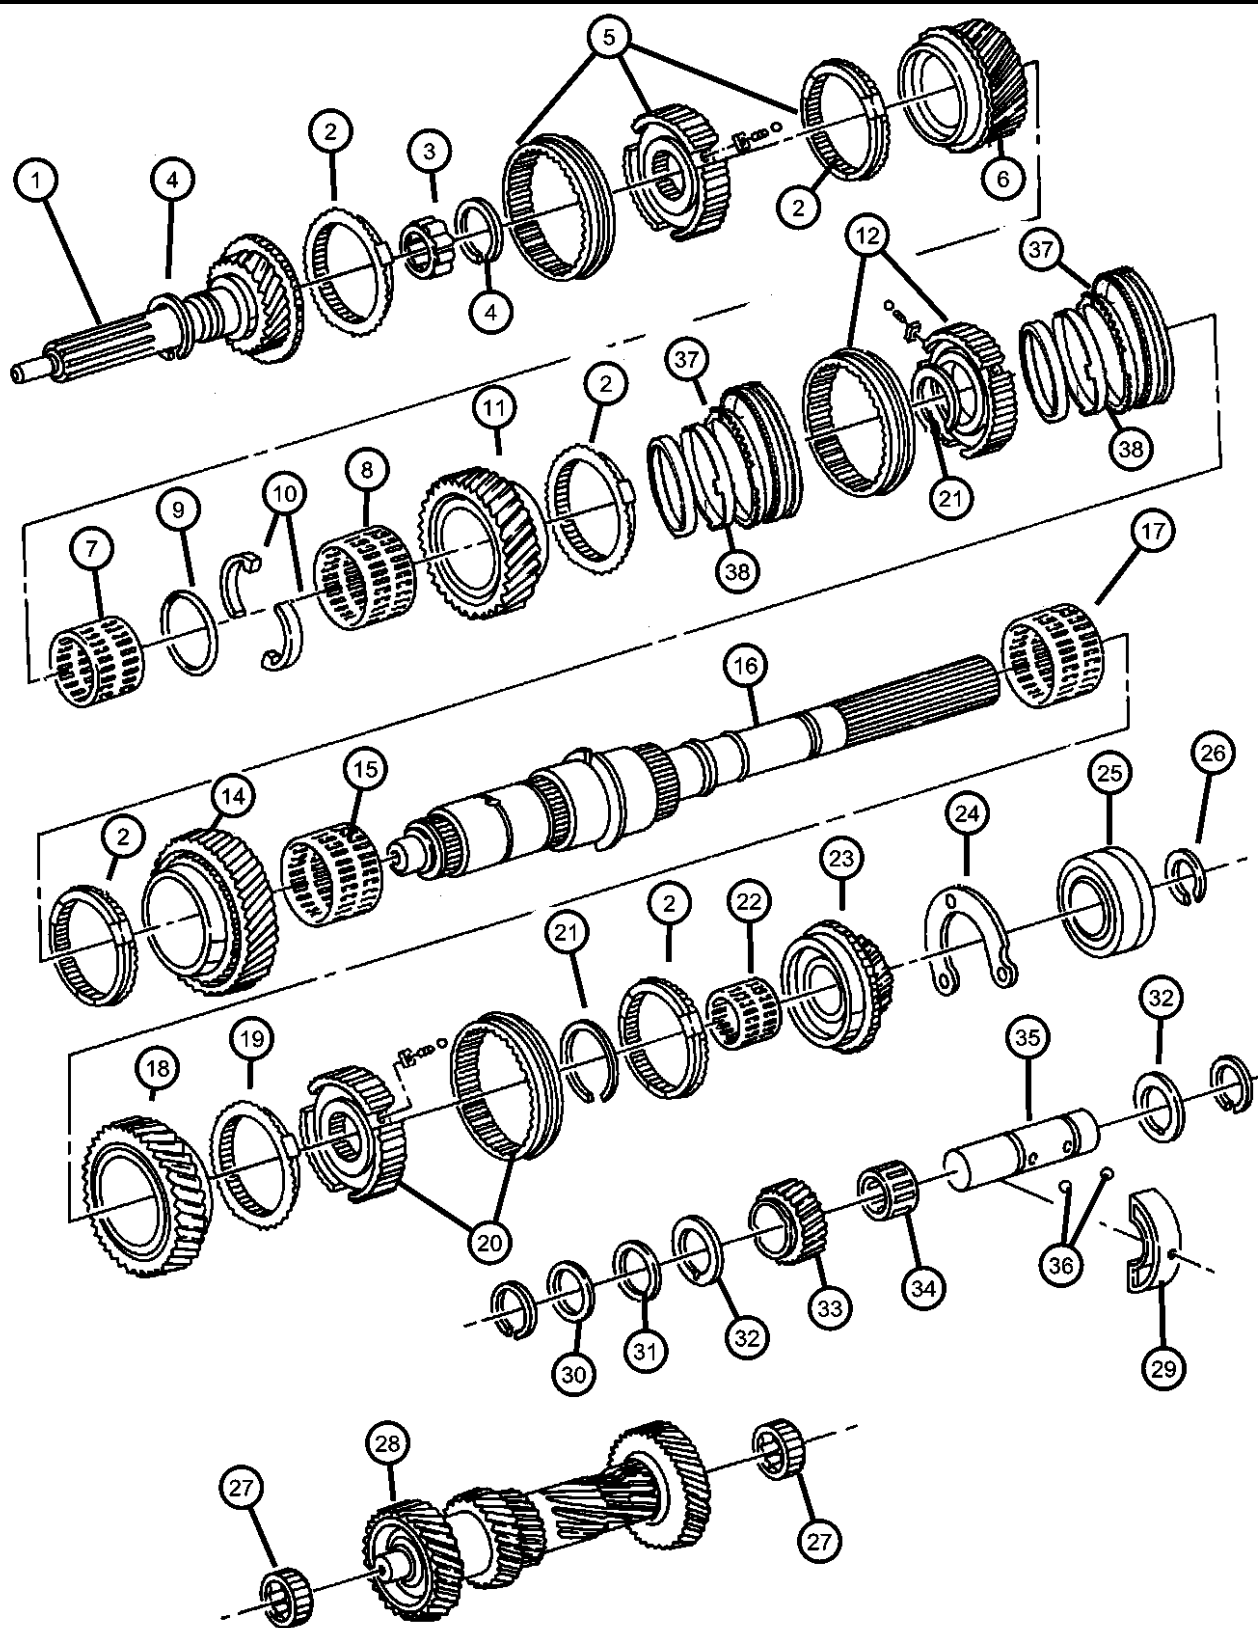


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
31	04741310	1	J, U			EN0	DDD		WASHER, Idler Gear
		1	T			EKG	DDD		
		1	J			EKG	DDD		
32	04741309	1	J, U			EN0	DDD		THRUST WASHER, Reverse Idler
		1	T			EKG	DDD		
		1	J			EKG	DDD		
33	04741307	2	T			EKG	DDD		GEAR, Reverse Idler
		2	J, U			EN0	DDD		
		2	J			EKG	DDD		
34	05066651AA	1	J, U			EN0	DDD		BEARING, Idler
		1	T			EKG	DDD		
		1	J			EKG	DDD		
35	04874359	1	J, U			EN0	DDD		IDLER SHAFT, Transmission
		1	T			EKG	DDD		
		1	J			EKG	DDD		
36	04741303	1	J, U			EN0	DDD		BALL, Check, 4 mm
		1	T			EKG	DDD		
		1	J			EKG	DDD		
37	04741891	2	T			EKG	DDD		RING, Synchronizer Blocker
		2	J, U			EN0	DDD		
		2	J			EKG	DDD		
	04874363	2	T			EKG	DDD		
		2	J, U			EN0	DDD		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Gear Train [DDD]  
Figure 3550-410

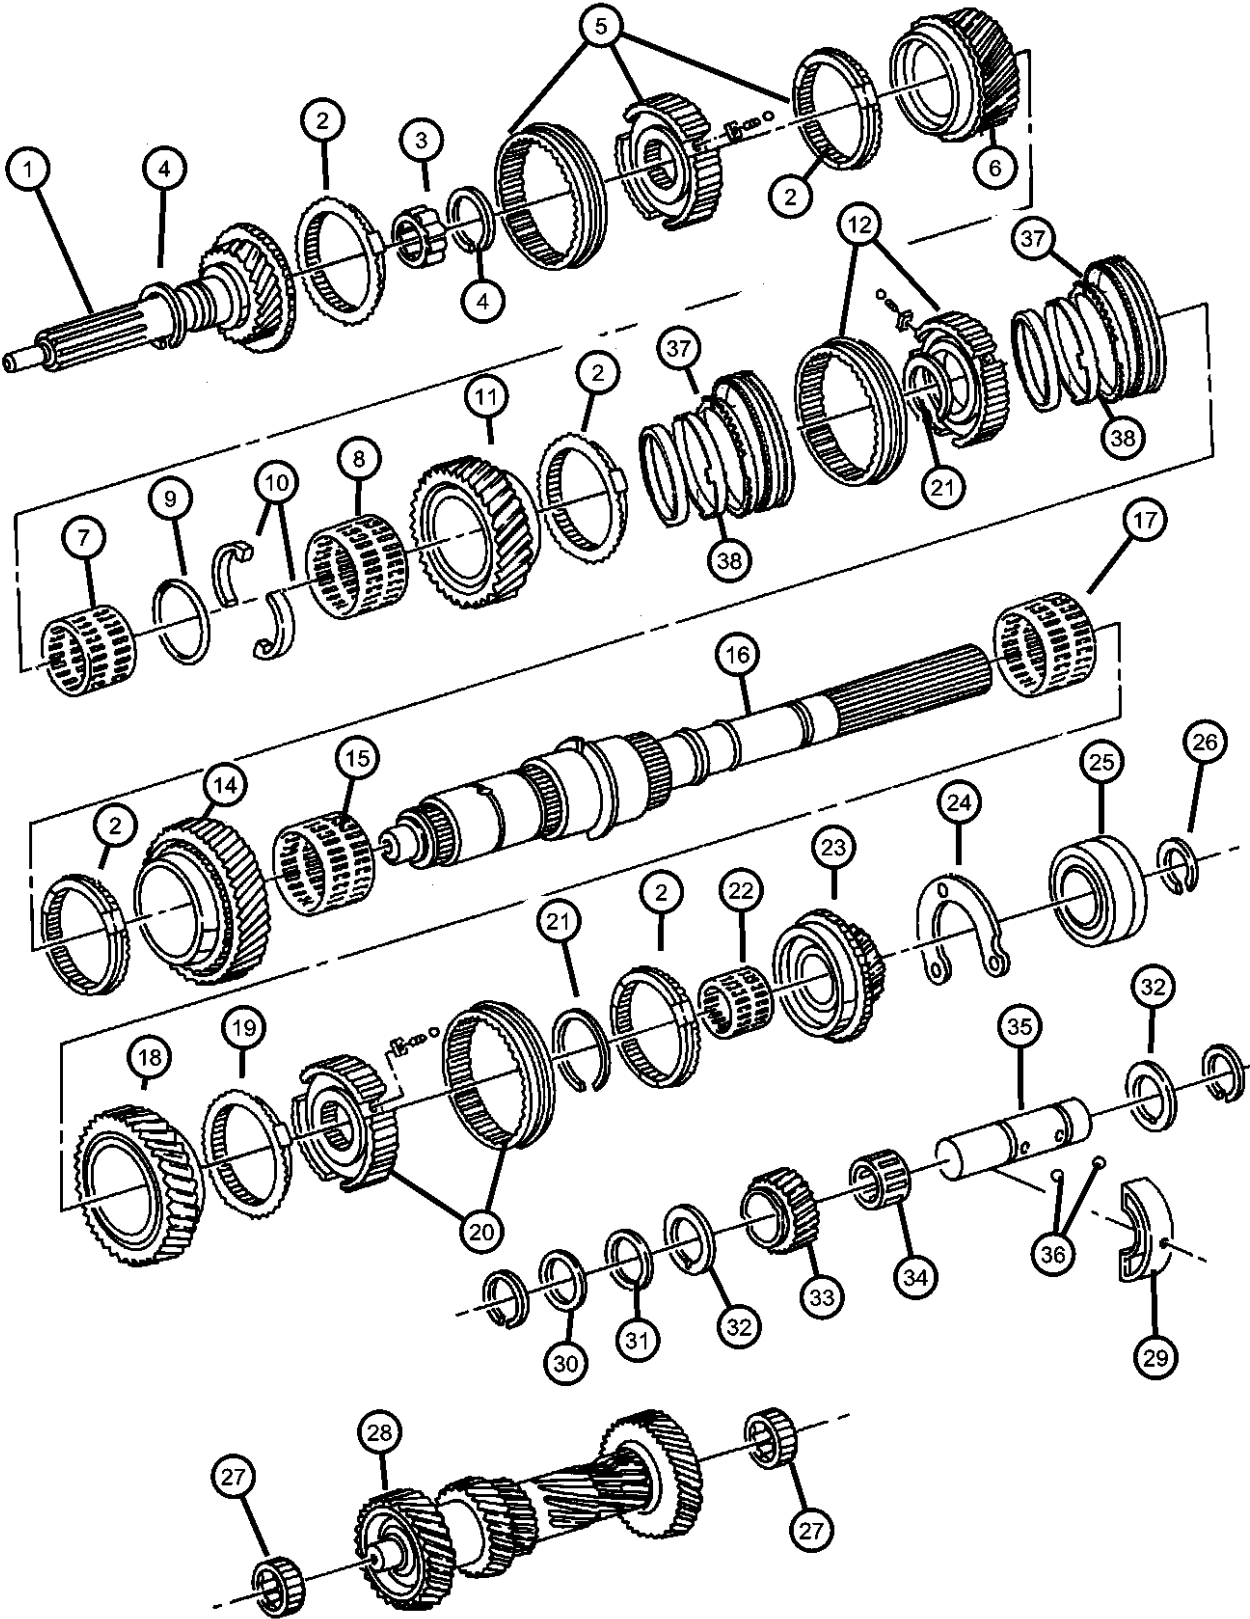

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
38	04874405	2	J			EKG	DDD		CONE, Synchronizer
		2	T			EKG	DDD		
		2	J, U			EN0	DDD		
		2	J			EKG	DDD		
-39	04874353	1	J, U			EN0	DDD		BEARING, First Gear
		1	T			EKG	DDD		
		1	J			EKG	DDD		
-40	04874403	2	T			EKG	DDD		RING Synch Interim Ring
		2	J, U			EN0	DDD		
		2	J			EKG	DDD		
	04874404	2	T			EKG	DDD		
		2	J, U			EN0	DDD		
		2	J			EKG	DDD		
-41	04741805	1	J, U			EN0	DDD		RING, Transmission
		1	T			EKG	DDD		
		1	J			EKG	DDD		
-42	04741311	2	T			EKG	DDD		SNAP RING
		2	J, U			EN0	DDD		
		2	J			EKG	DDD		
-43	04741807	1	J, U			EN0	DDD		SNAP RING PACKAGE, Transmission
		1	T			EKG	DDD		
		1	J			EKG	DDD		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Gear Train [DDD]  
Figure 3550-410

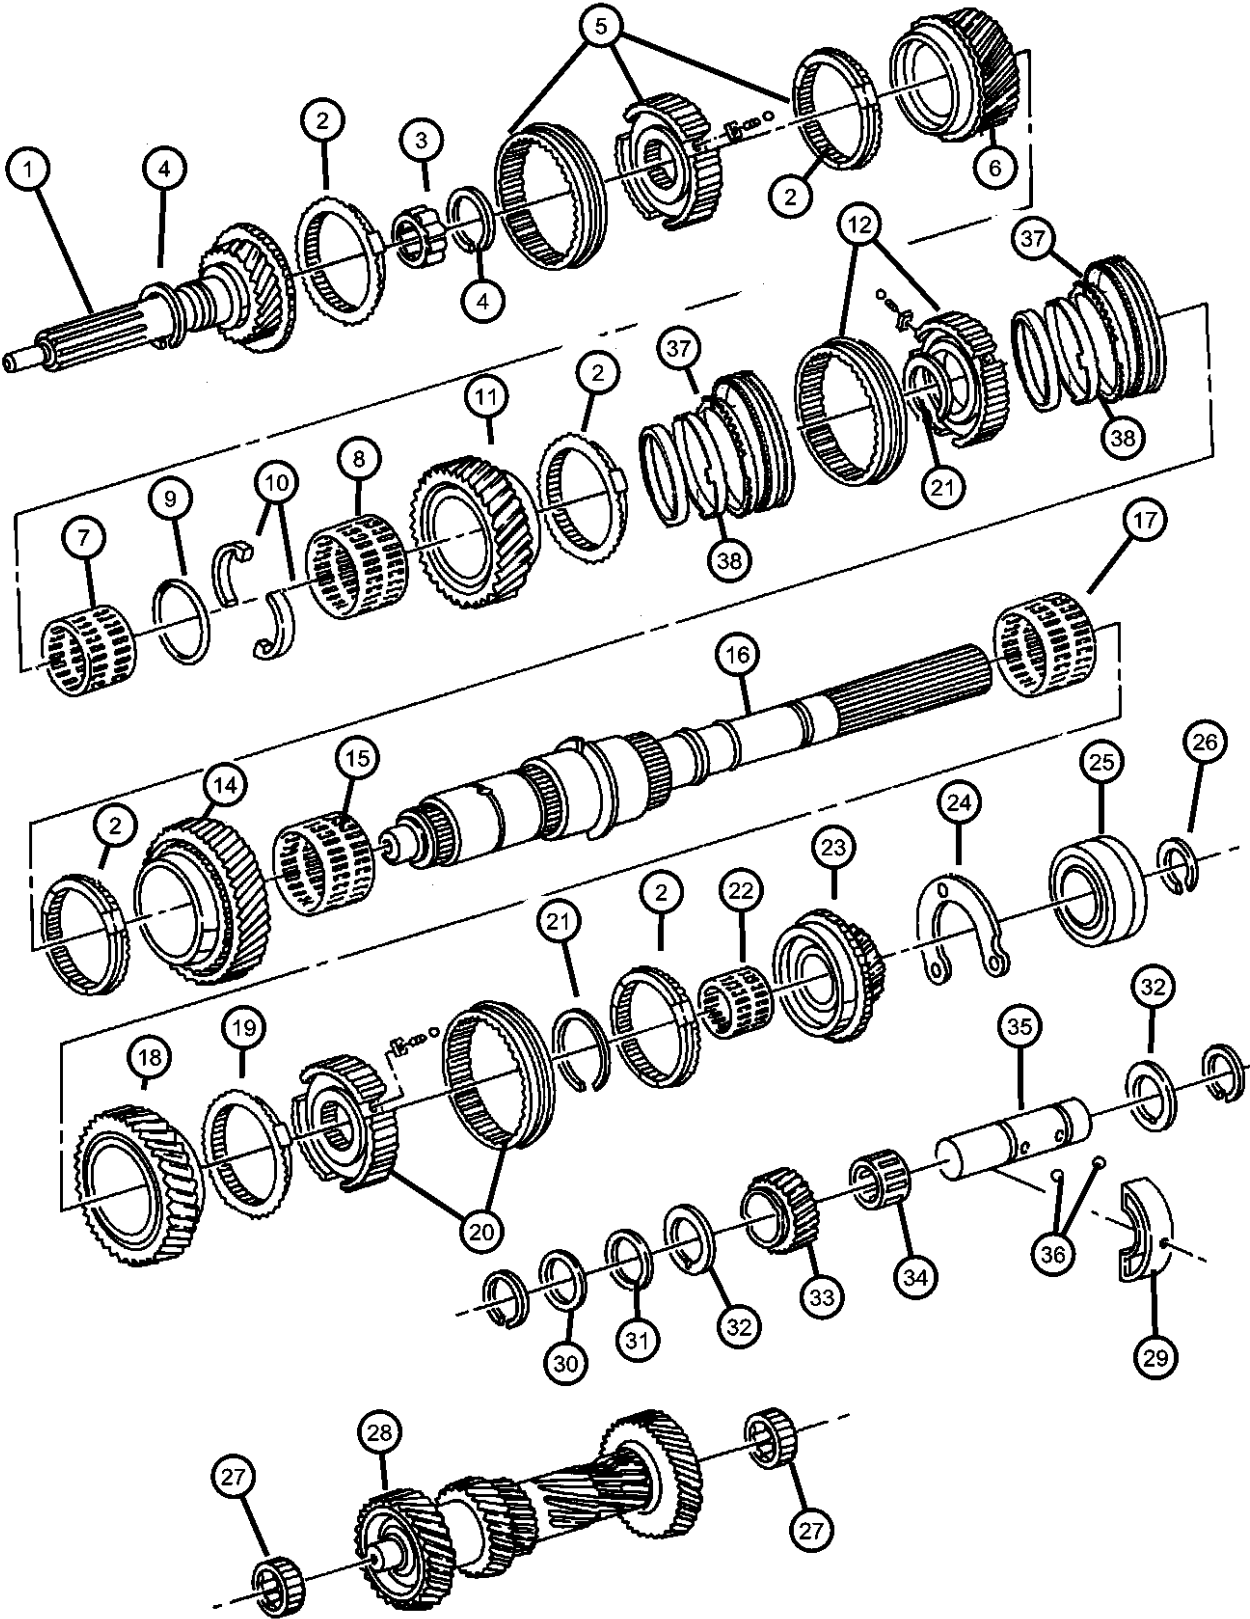


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-44	05015943AA	1	J, U			EN0	DDD		PLATE, Retaining
-45	05015942AA	1	J, U			EN0	DDD		CAM, Reverse Block

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Fork and Rails [DDD]  
Figure 3550-910

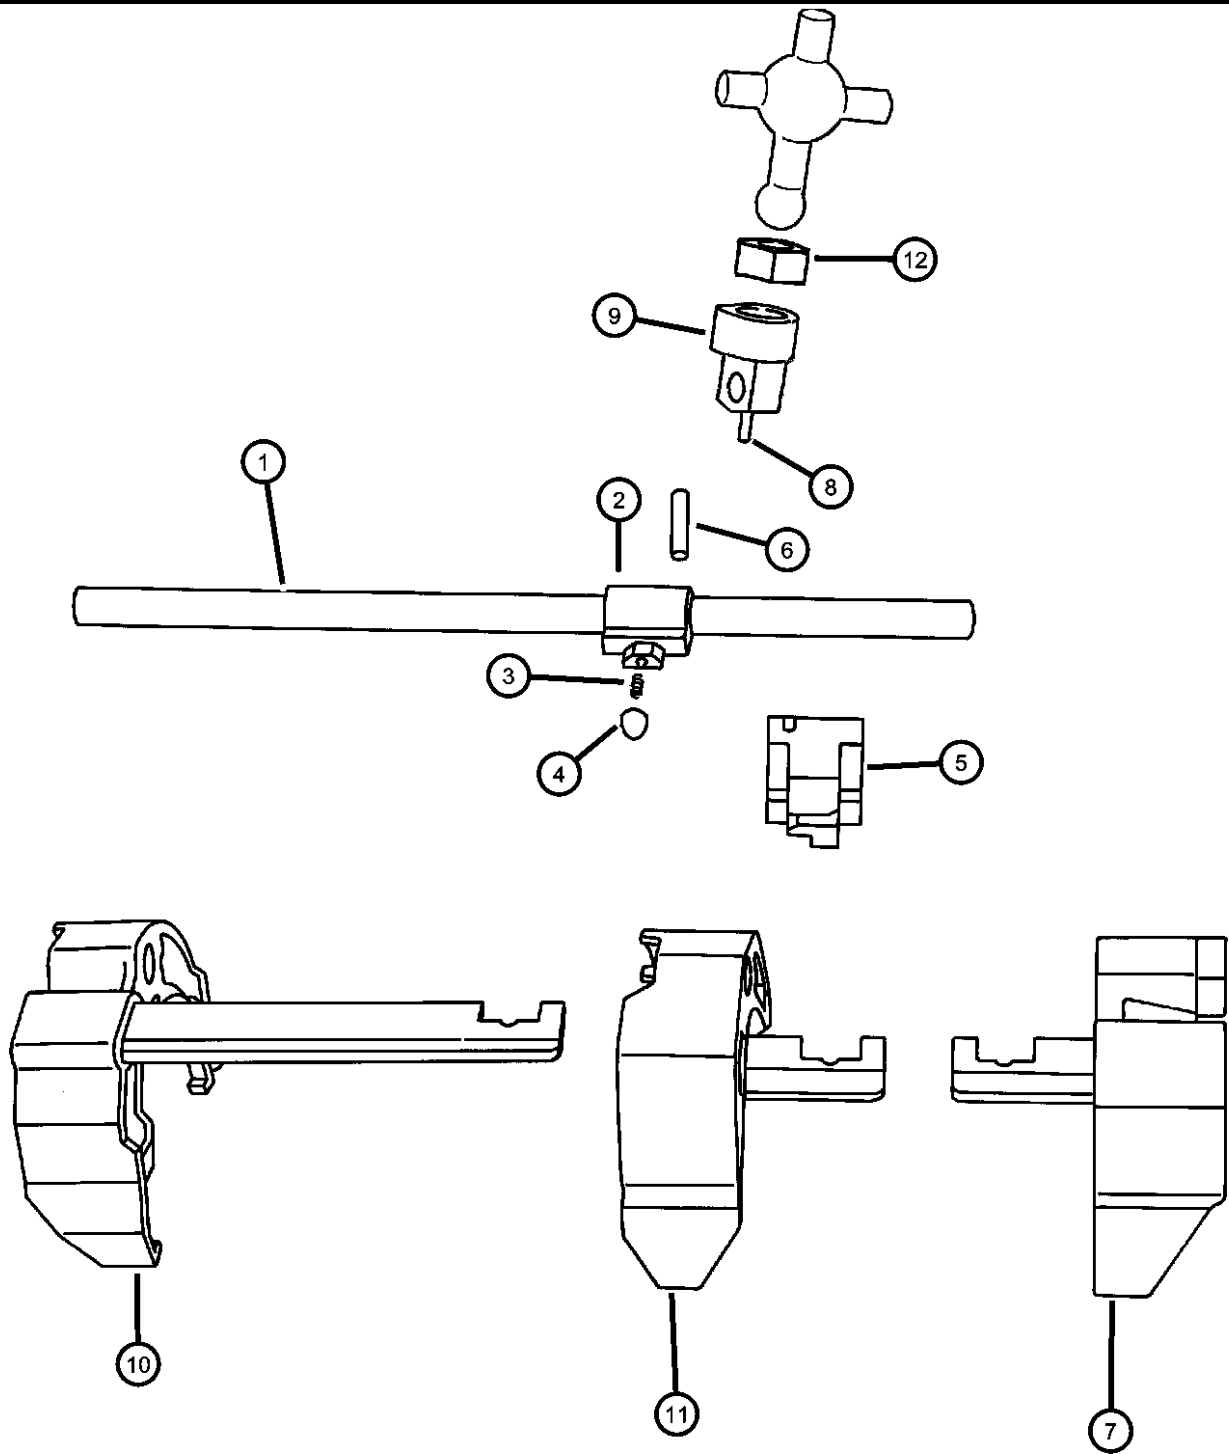


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes [DDD] = 5 Speed Heavy Duty Manual Transmissions [EKG] = Magnum 3.7L V6 Engine									
1	05015951AB	1	J, U			EN0	DDD		SHAFT, Selector
		1	T			EKG	DDD		
		1	J			EKG	DDD		
2	05072248AA	1	J, U			EN0	DDD		LEVER, Shift Shaft
		1	T			EKG	DDD		
		1	J			EKG	DDD		
3	04741137	1	J, U			EN0	DDD		SPRING, Lever
		1	T			EKG	DDD		
		1	J			EKG	DDD		
4	05015949AA	1	J, U			EN0	DDD		PLUNGER
		1	T			EKG	DDD		
		1	J			EKG	DDD		
5	05012337AA	1	J, U			EN0	DDD		BUSHING, Transmission
		1	T			EKG	DDD		
		1	J			EKG	DDD		
6	04741139	1	J, U			EN0	DDD		PIN, Shift Shaft
		1	T			EKG	DDD		
		1	J			EKG	DDD		
7	05066352AB	1	J, U			EN0	DDD		FORK, Third and Fourth
		1	T			EKG	DDD		
		1	J			EKG	DDD		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Fork and Rails [DDD]  
Figure 3550-910

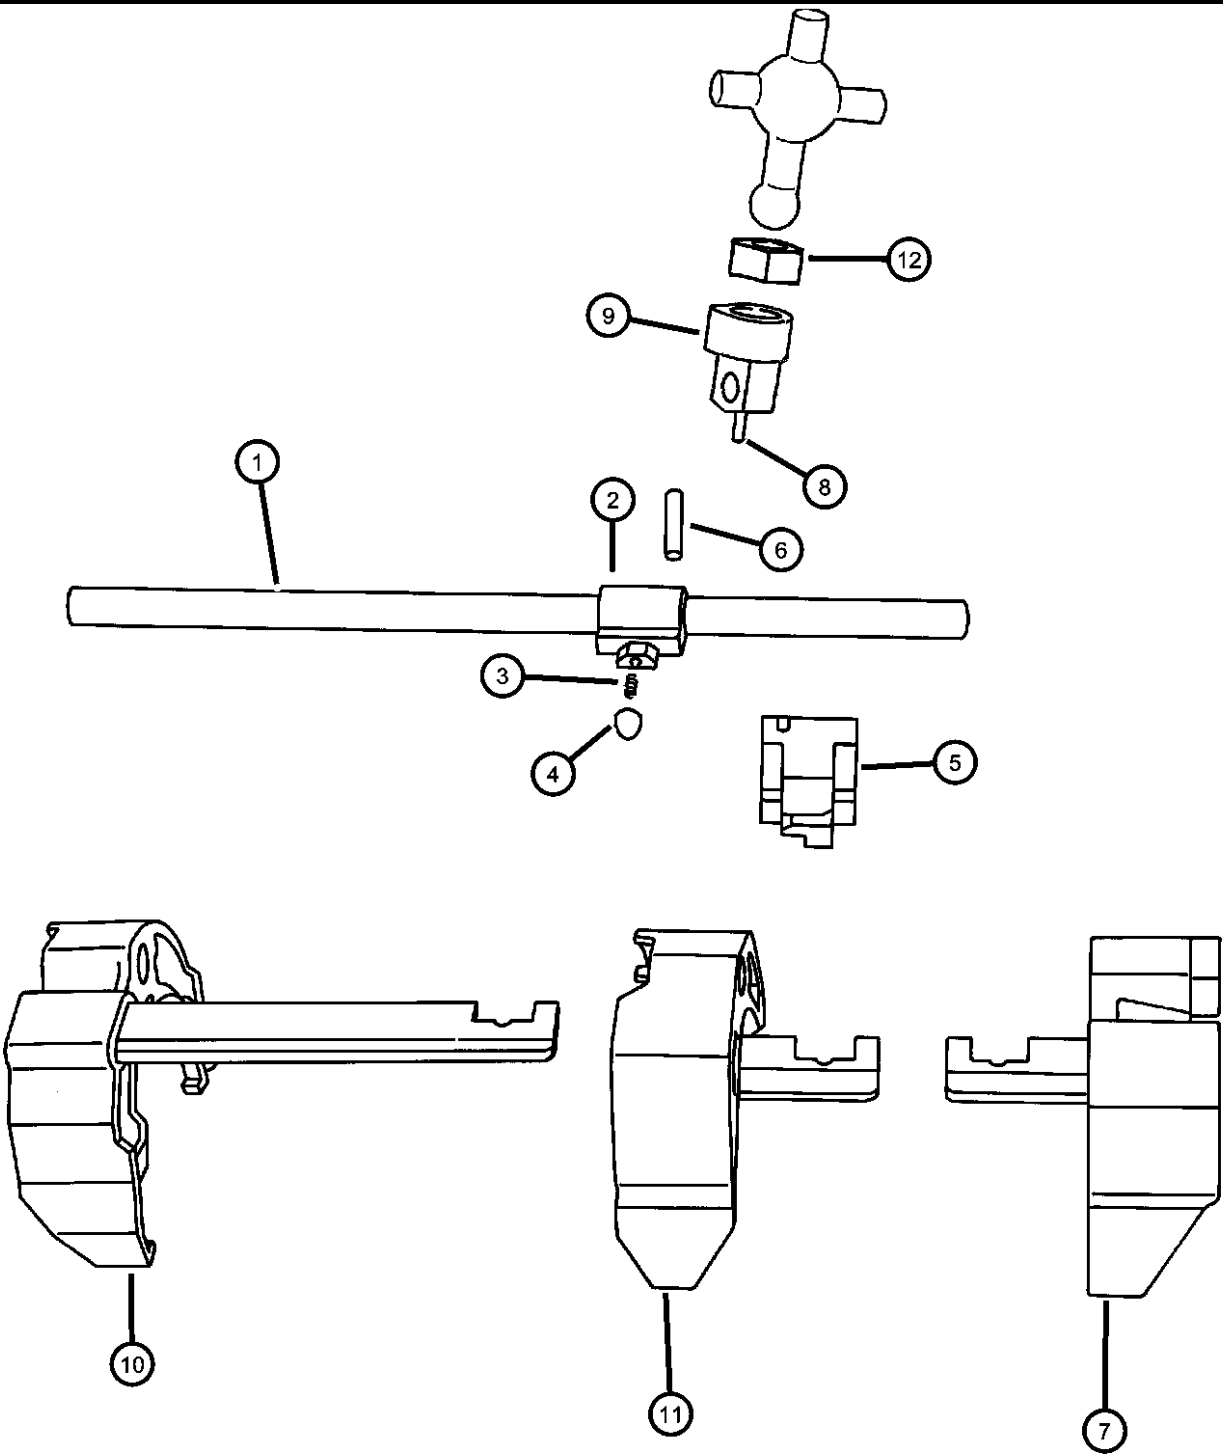


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
8	04741139	1	J, U			EN0	DDD		PIN, Shift Shaft
		1	T			EKG	DDD		
		1	J			EKG	DDD		
9	04874352	1	J, U			EN0	DDD		SOCKET, Shift Shaft
		1	T			EKG	DDD		
		1	J			EKG	DDD		
10	05083104AA	1	J, U			EN0	DDD		FORK, Transmission
		1	T			EKG	DDD		
		1	J			EKG	DDD		
11	04886077AB	1	J, U			EN0	DDD		FORK, First and Second
		1	T			EKG	DDD		
		1	J			EKG	DDD		
12	05012020AA	1	J, U			EN0	DDD		ISOLATOR, Shift Lever
		1	T			EKG	DDD		
		1	J			EKG	DDD		
-13	05012337AA	1	J, U			EN0	DDD		BUSHING, Transmission
		1	J			EKG	DDD		
	05019023AA	1	T			EKG	DDD		
-14	05019024AA	1	J, U			EN0	DDD		PIN Shift Fork Trac
		1	T			EKG	DDD		
		1	J			EKG	DDD		
-15	04740904	1	J, U			EN0	DDD		PIN, Detent

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Fork and Rails [DDD]  
Figure 3550-910

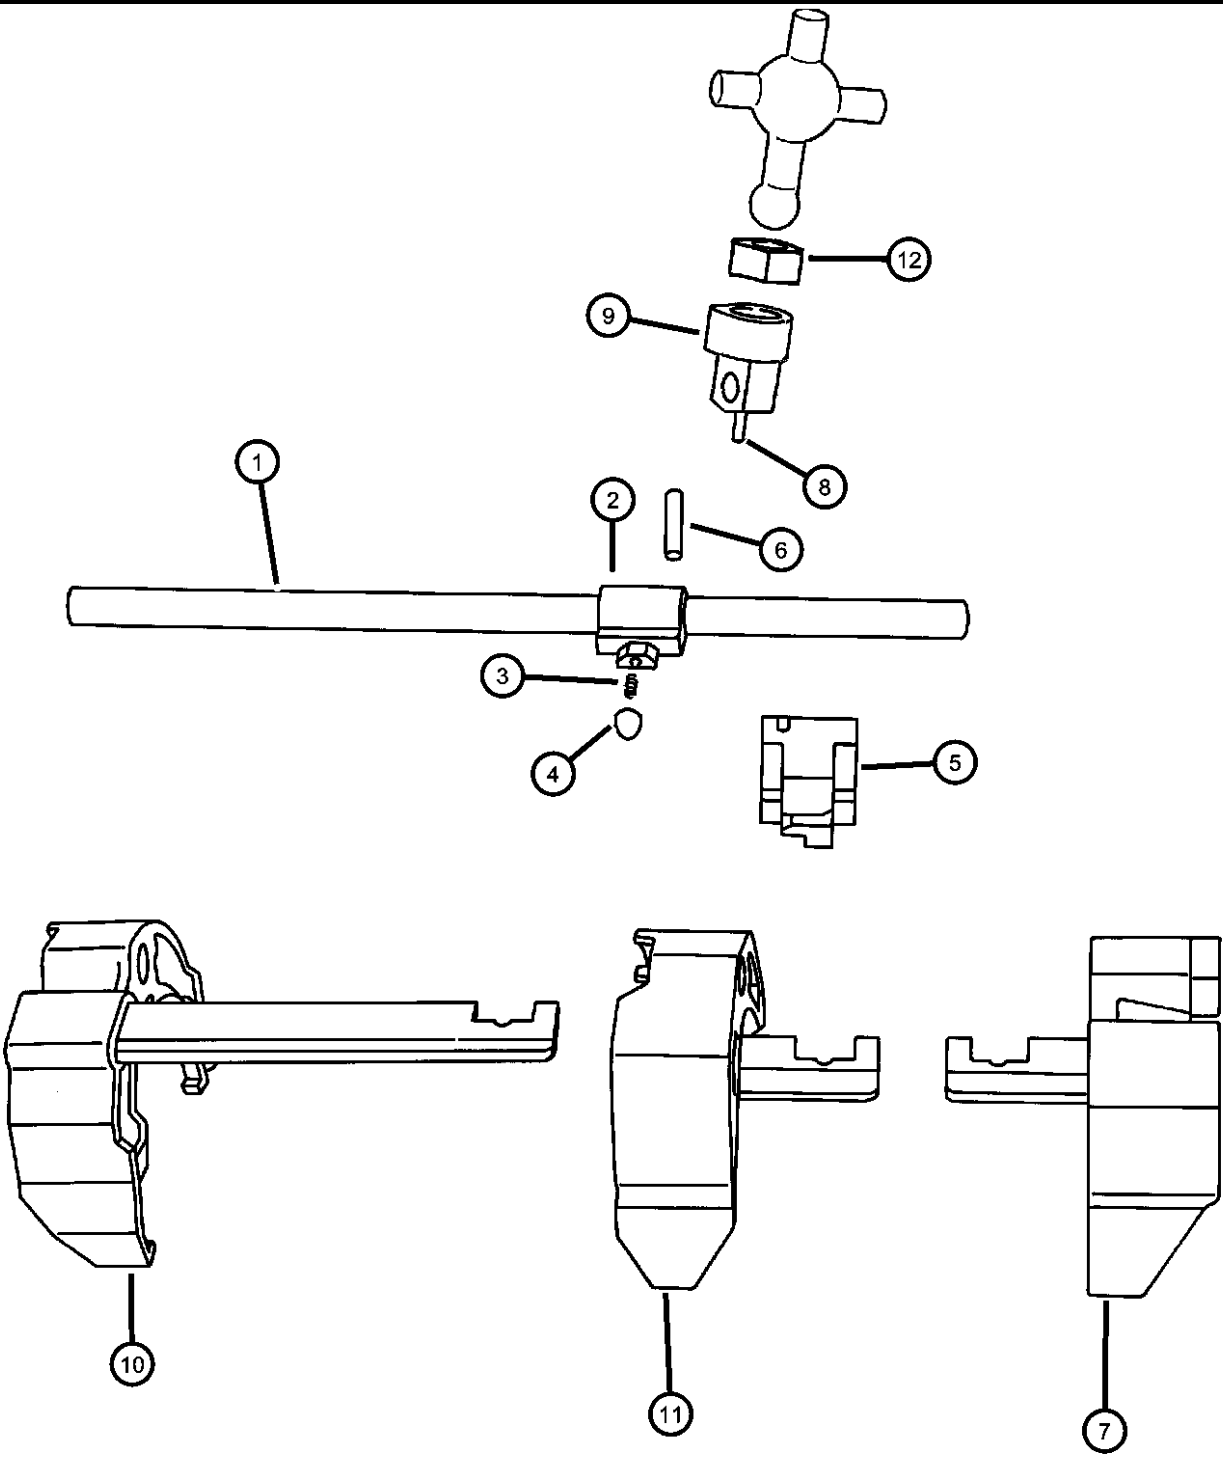

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	T			EKG	DDD		
		1	J			EKG	DDD		

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Gearshift Controls [DDD]  
Figure 3550-1210

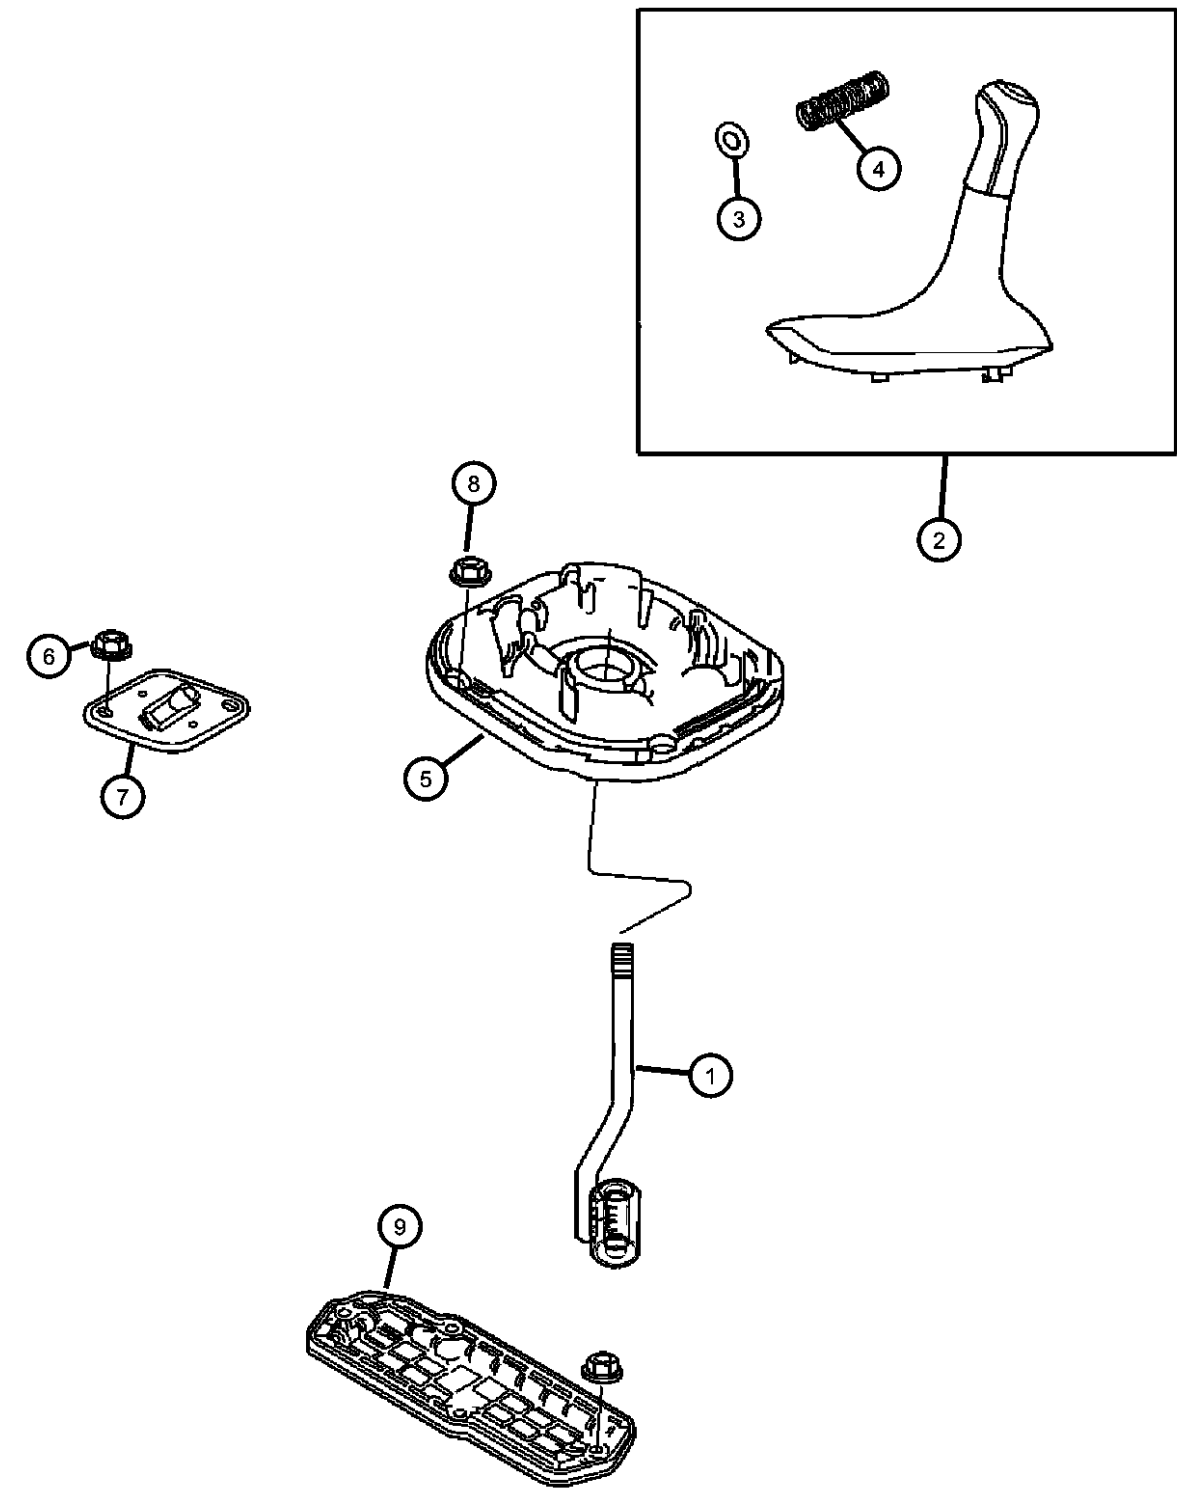


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE; Sales Codes [DBB]= All Manual Transmissions [ED0]= All 4 Cylinder Gas Engines [EK0] = All 3.7L 6 Cylinder Gas Engines [EN0]= All 4/5 Cylinder Turbo Diesel									
1	05102826AA	1					DBB		LEVER, Gearshift
2	05102830AA	1					DBB		BOOT KIT, Gearshift
3	05102828AA	1					DBB		SPRING, Gearshift Lever
4	05102827AA	1					DBB		O RING, Gearshift Boot
5	52104306AB	1				ED0, EK0, EN0	DBB		BOOT, Gearshift Lever
6	06100047	2							NUT AND WASHER, Hex Nut-Coned Washer, M6 x 1.00
7	52104382AA	1					DBB		COVER, Gearshift
8									NUT AND WASHER, Hex Nut-Sealing Washer, M6 x 1.00
	34201358	4					DBB		
9	52104321AA	1	T						COVER, Transfer Case Lever Hole
-10	05015943AA	1	J, U			EN0	DDD		PLATE, Retaining
-11	06506668AA	1					DBB		SCREW, Cap
-12	05015942AA	1	J, U			EN0	DDD		CAM, Reverse Block






LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

# Group - NV1500

## Manual Transmission 5 Speed

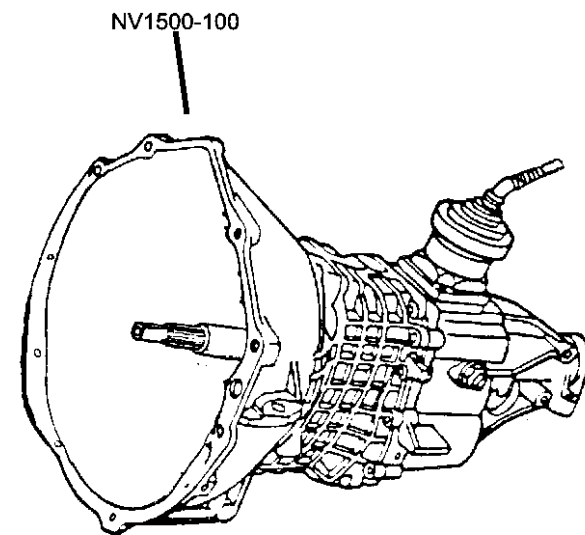
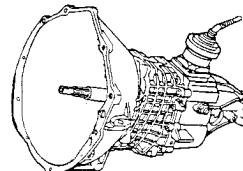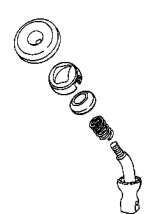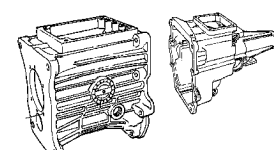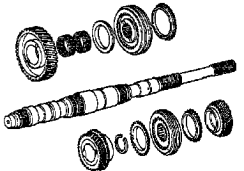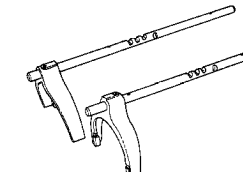
<b>NV1500-100</b> Transmission Assembly	<b>NV1500-1200</b> Gearshift Controls	<b>NV1500-200</b> Case and Extension	<b>NV1500-400</b> Gear Train
			
<b>NV1500-900</b> Fork and Rails			
			

Group - NV1500 Manual Transmission 5 Speed

Illustration Title	Group-Fig. No.
<b>Transmission Assembly</b>	
Transmission [NV 1500] [DDK].....	Fig. NV1500 - 110
<b>Case and Extension</b>	
Case and Extension [NV 1500] [DDK].....	Fig. NV1500 - 210
<b>Gear Train</b>	
Gear Train [NV 1500] [DDK].....	Fig. NV1500 - 410
<b>Fork and Rails</b>	
Fork and Rail [NV 1500] [DDK].....	Fig. NV1500 - 910
<b>Gearshift Controls</b>	
Gearshift Controls [DDK] .....	Fig. NV1500 - 1210

Transmission [NV 1500] [DDK]  
Figure NV1500-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


NOTE; Sales Codes  
[DDK] = 5 Speed Heavy Duty Manual Transmissions  
[ED0] = All 2.2,2.5,2.4 L 4 Cylinder Gas Engines

1  
TRANSMISSION, 5 Speed

52108292AC 1 J, U ED0 DDK  
04874464  
Mopar Manual Transmission  
Fluid

52108293AC 1 T ED0 DDK  
04874464  
Mopar Manual Transmission  
Fluid


-2 05013329AA 3 J, U ED0 DDK BOLT

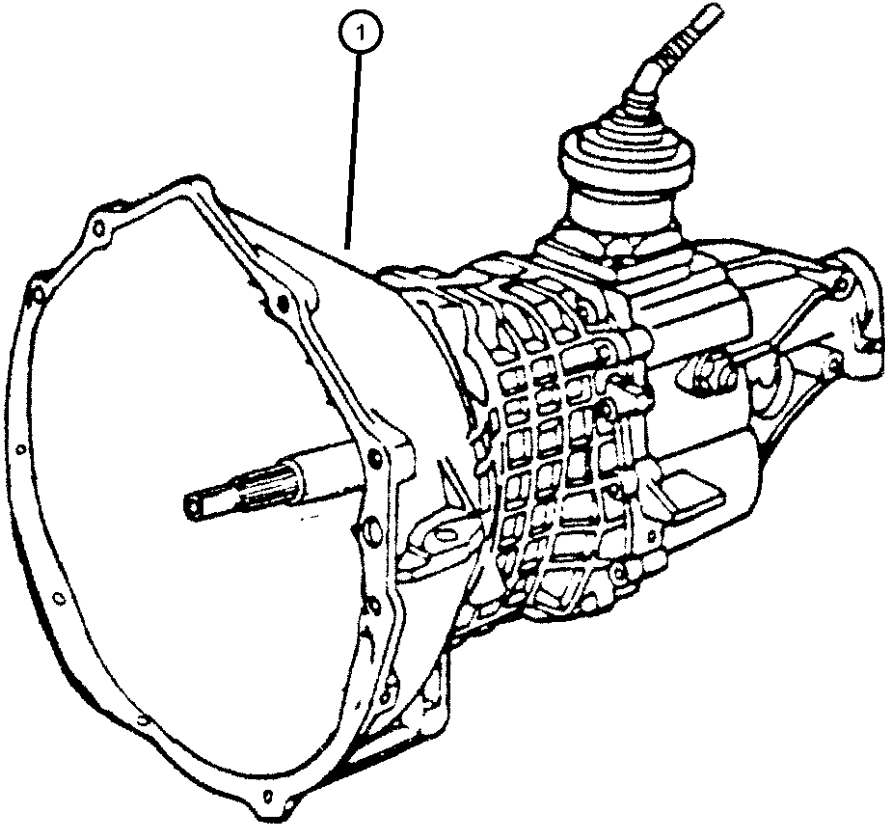

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Case and Extension [NV 1500] [DDK]  
Figure NV1500-210

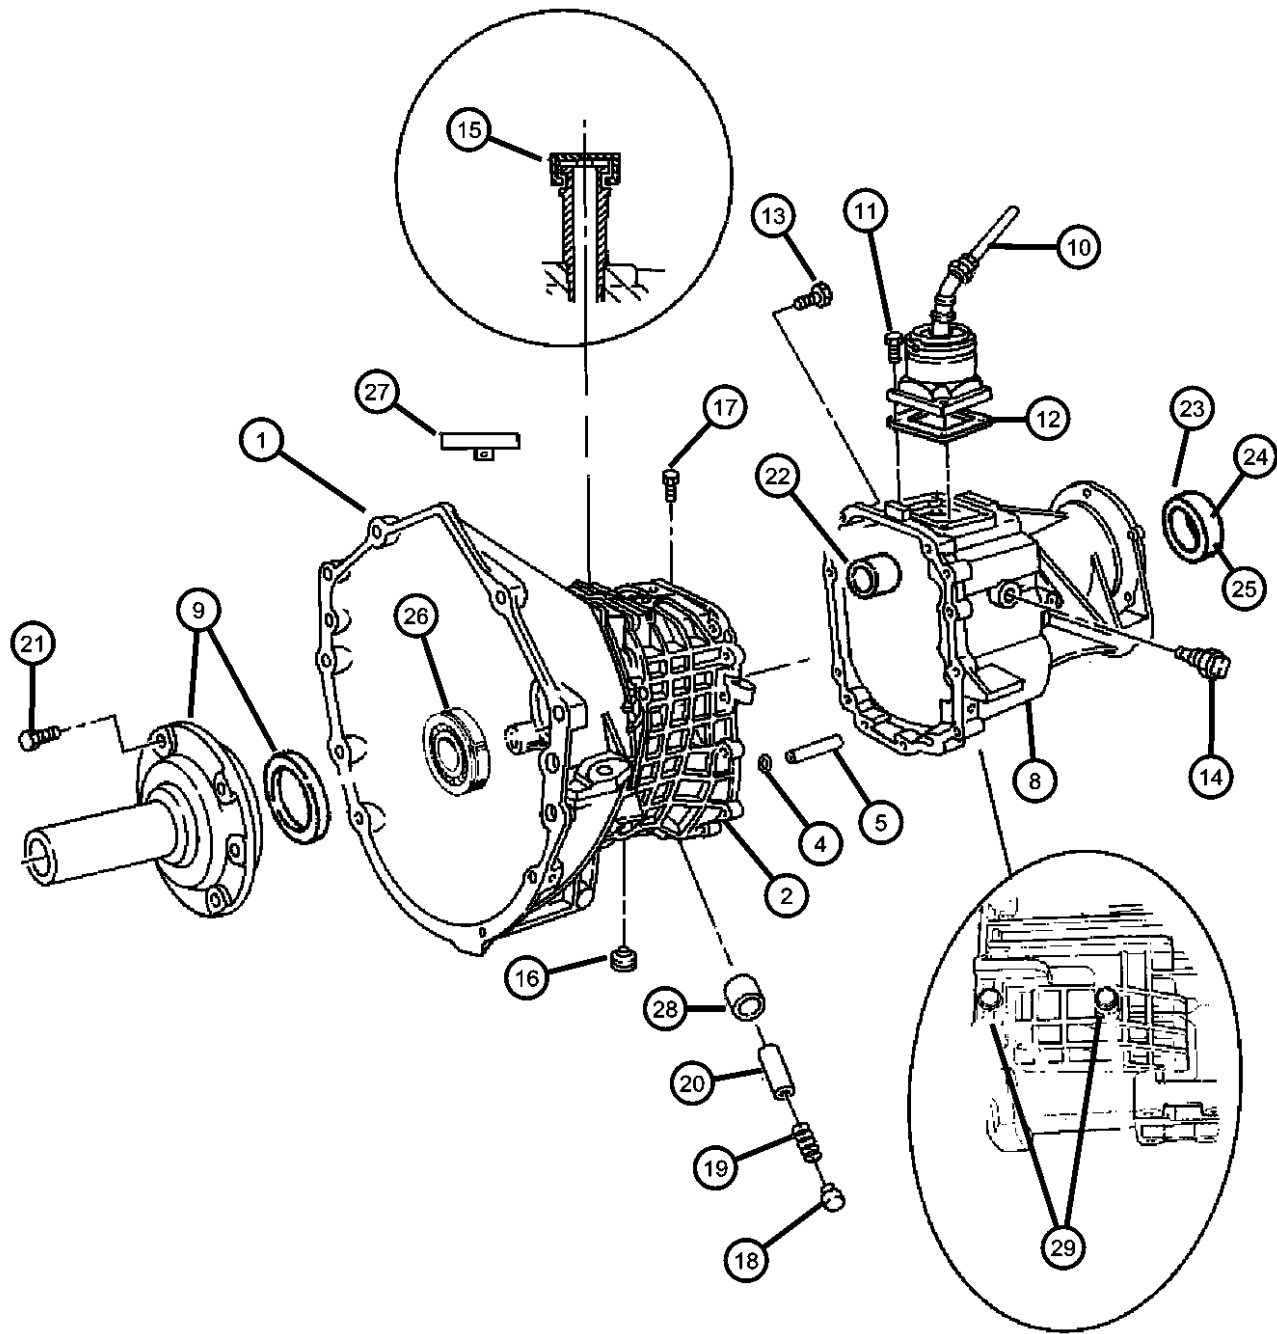


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes									
[DBB] = All Manual Transmissions									
[DDK] = 5 Speed Heavy Duty Manual Transmissions									
[ED0] = All 2.2,2.5,2.4 L 4 Cylinder Gas Engines									
1	52104292AA	1				ED0	DBB		HOUSING, Clutch
2									CASE, Transmission
	05018670AA	1	J, U			ED0	DDK		
		1	T			ED0	DDK		
-3									BUSHING, Shift Rail
	04338945	1	J, U						
	04740899	1	T			ED0	DDK		
4									CUP, Bearing Inner
	05013313AA	1	J, U			ED0	DDK		
		1	T			ED0	DDK		
5									DOWEL, Transmission Case
	05013314AA	1	J, U			ED0	DDK		12 X 16 LG
		2	J, U			ED0	DDK		
-6	05013337AA	1	T			ED0	DDK		DOWEL, Transmission Case
-7									SHIM
	05013315AA	1	J, U			ED0	DDK		Size (.050)
		1	T			ED0	DDK		Size (.050)
	05013316AA	1	J, U			ED0	DDK		Size (.054)
		1	T			ED0	DDK		Size (.054)
	05013317AA	1	J, U			ED0	DDK		Size (.058)
		1	T			ED0	DDK		Size (.058)
8									CASE, Transmission Rear
	05093072AA	1	T			ED0	DDK		
	05093073AB	1	J, U			ED0	DDK		
9									RETAINER, Shaft
	05013413AA	1	J, U			ED0	DDK		
		1	T			ED0	DDK		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part



Case and Extension [NV 1500] [DDK]  
Figure NV1500-210

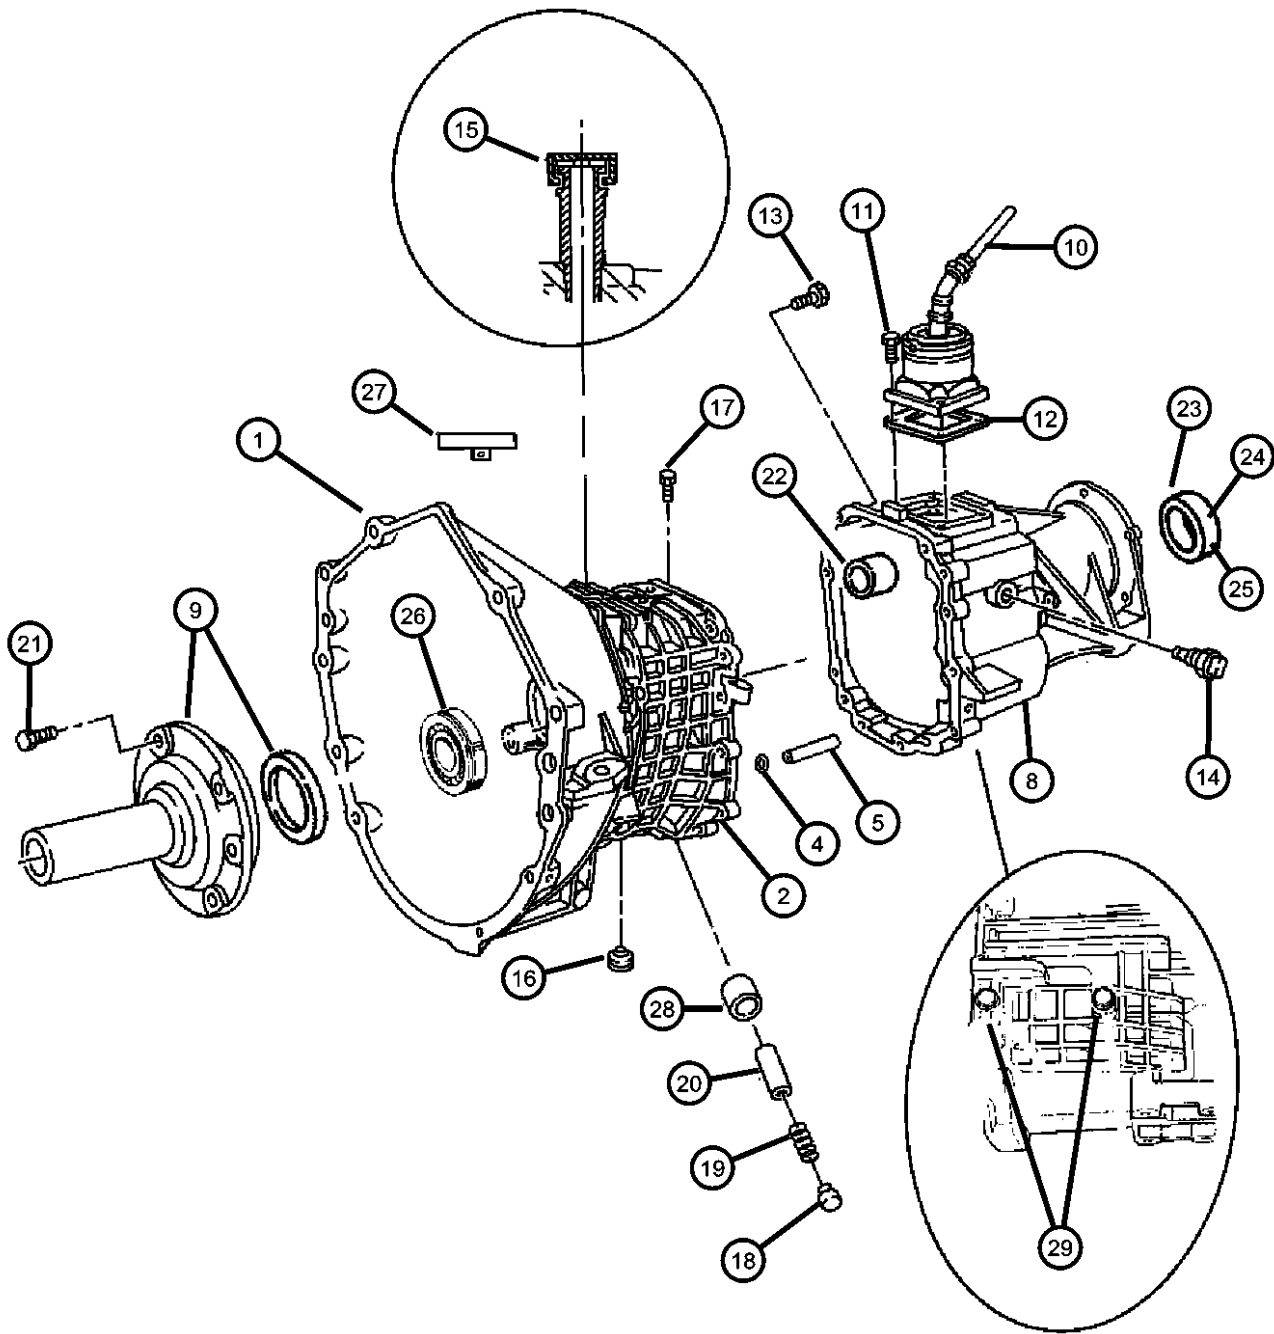


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10	05101818AA	1	J, U			EN0	DDD		LEVER, Gearshift
	05101839AA	1	J, U			ED0	DDK		
		1	T			ED0	DDK		
11	04741144	1	J, U			ED0	DDK		BOLT, Hex Head
		1	T			ED0	DDK		
12	04886153AA	1	J, U			ED0	DDK		SEAL, Shift Lever
		1	T			ED0	DDK		
13	11502628	1	T			ED0	DDK		BOLT, Hex Flange Head, M8x1.25x30
		8	J, U			ED0	DDK		
14	05013336AA	1	J, U			ED0	DDK		SWITCH, Back Up Lamp
		1	T			ED0	DDK		
15	05013319AA	1	J, U			ED0	DDK		VENT, Transmission
		1	T			ED0	DDK		
		1	T			ED0	DDK		
16	04882280	1	T			ED0	DDK		PLUG, Oil Fill
17	05013321AA	1	J, U			ED0	DDK		PIN, Detent
		1	T			ED0	DDK		
18	05013339AA	1	J, U			ED0	DDK		PLUG, Shift Rail
		1	T			ED0	DDK		
19	05093217AA	1	J, U			ED0	DDK		SPRING, Shift Detent
		1	T			ED0	DDK		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Case and Extension [NV 1500] [DDK]  
Figure NV1500-210

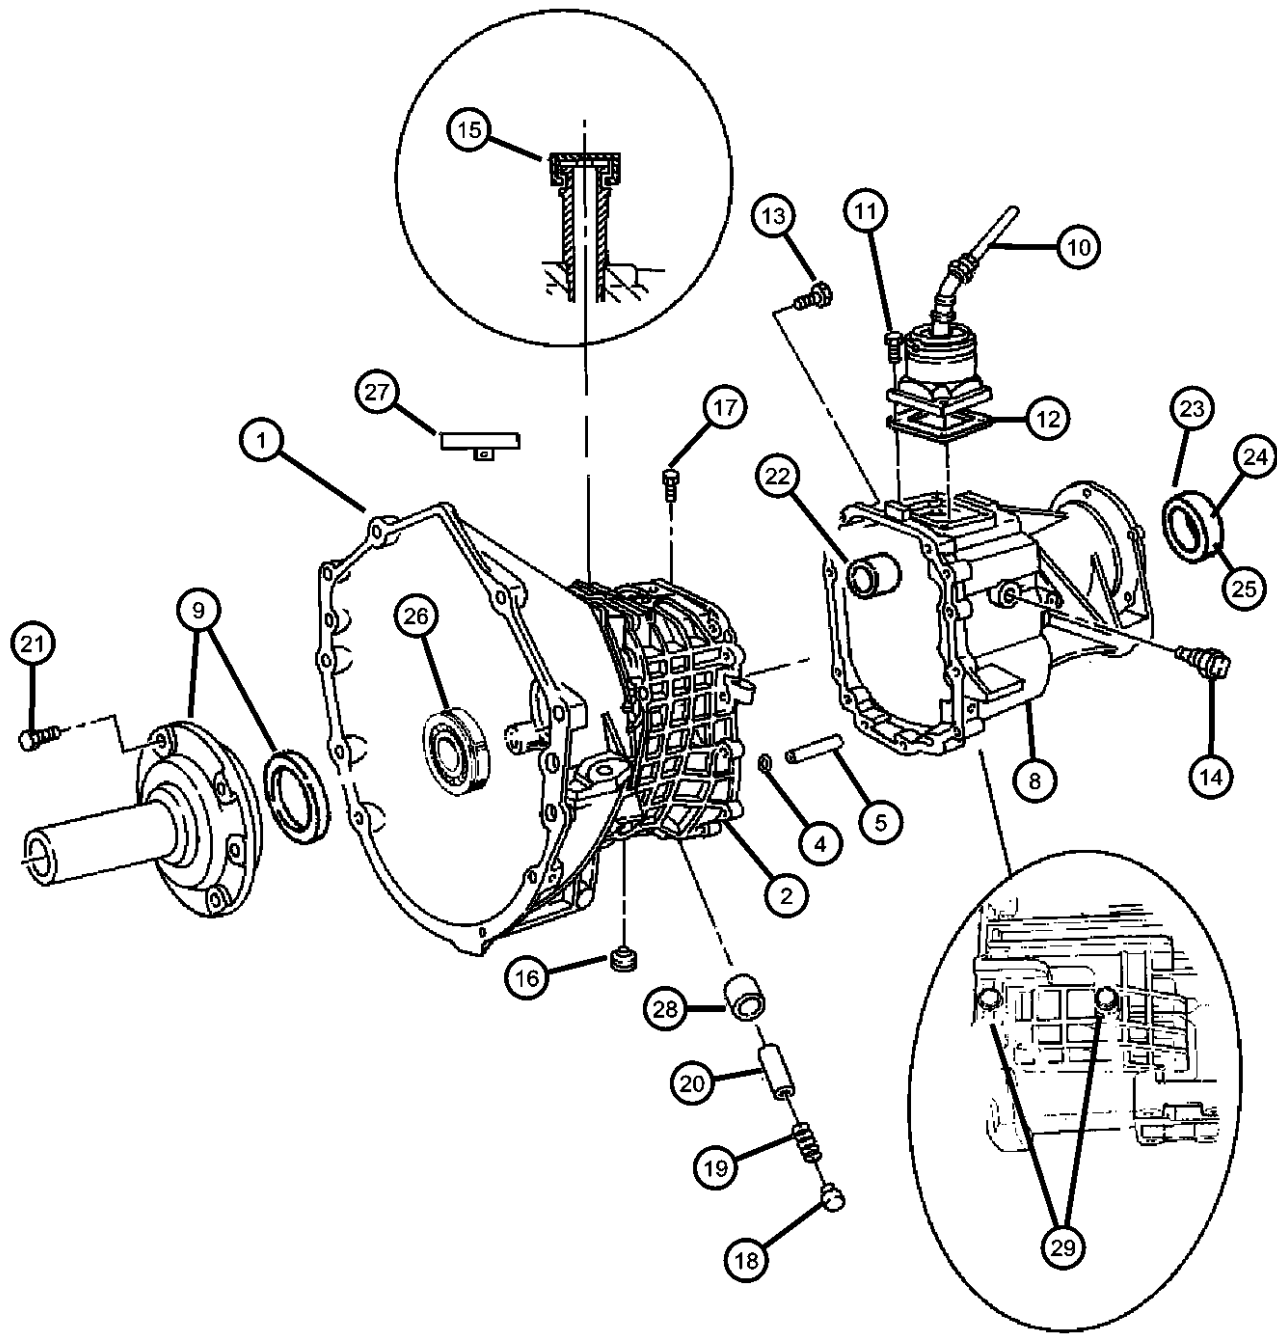

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
20									PLUNGER
	05013348AA	1	J, U			EN0	DDD		
	05015949AA	1	J, U			ED0	DDK		
		1	T			ED0	DDK		
21									BOLT, Hex Head, M8x1.25x50
	04741123	1	T			ED0	DDK		
		8	J, U			ED0	DDK		
22		8							BEARING, Ball, (NOT SERVICED)
23	05013334AA	1	T			ED0	DDK		SEAL, Output Shaft
24	05013332AA	1	T			ED0	DDK		SEAL, Extension Yoke
25	05013333AA	1	J, U			ED0	DDK		SEAL, Adapter
26	05013411AA	1	T			ED0	DDK		BEARING, Input Shaft
27									VENT, Transmission
	05013319AA	1	J, U			ED0	DDK		
		1	T			ED0	DDK		
28									BUSHING, Detent
	04740892	1	T			ED0	DDK		
		2	J, U			ED0	DDK		
29									BOLT
	05013329AA	3	J, U			ED0	DDK		
		1	T			ED0	DDK		
-30									MAGNET, Transmission
	05013327AA	1	J, U			ED0	DDK		
		1	T			ED0	DDK		
-31	05013331AA	1	J, U			ED0	DDK		SEAL, O-Ring
-32									RETAINER, Transmission Output Shaft Bearing
	05013328AA	1	J, U			ED0	DDK		
		1	T			ED0	DDK		
-33									O RING


LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Case and Extension [NV 1500] [DDK]  
Figure NV1500-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


05013320AA	1	J, U				ED0	DDK		
	1	T				ED0	DDK		

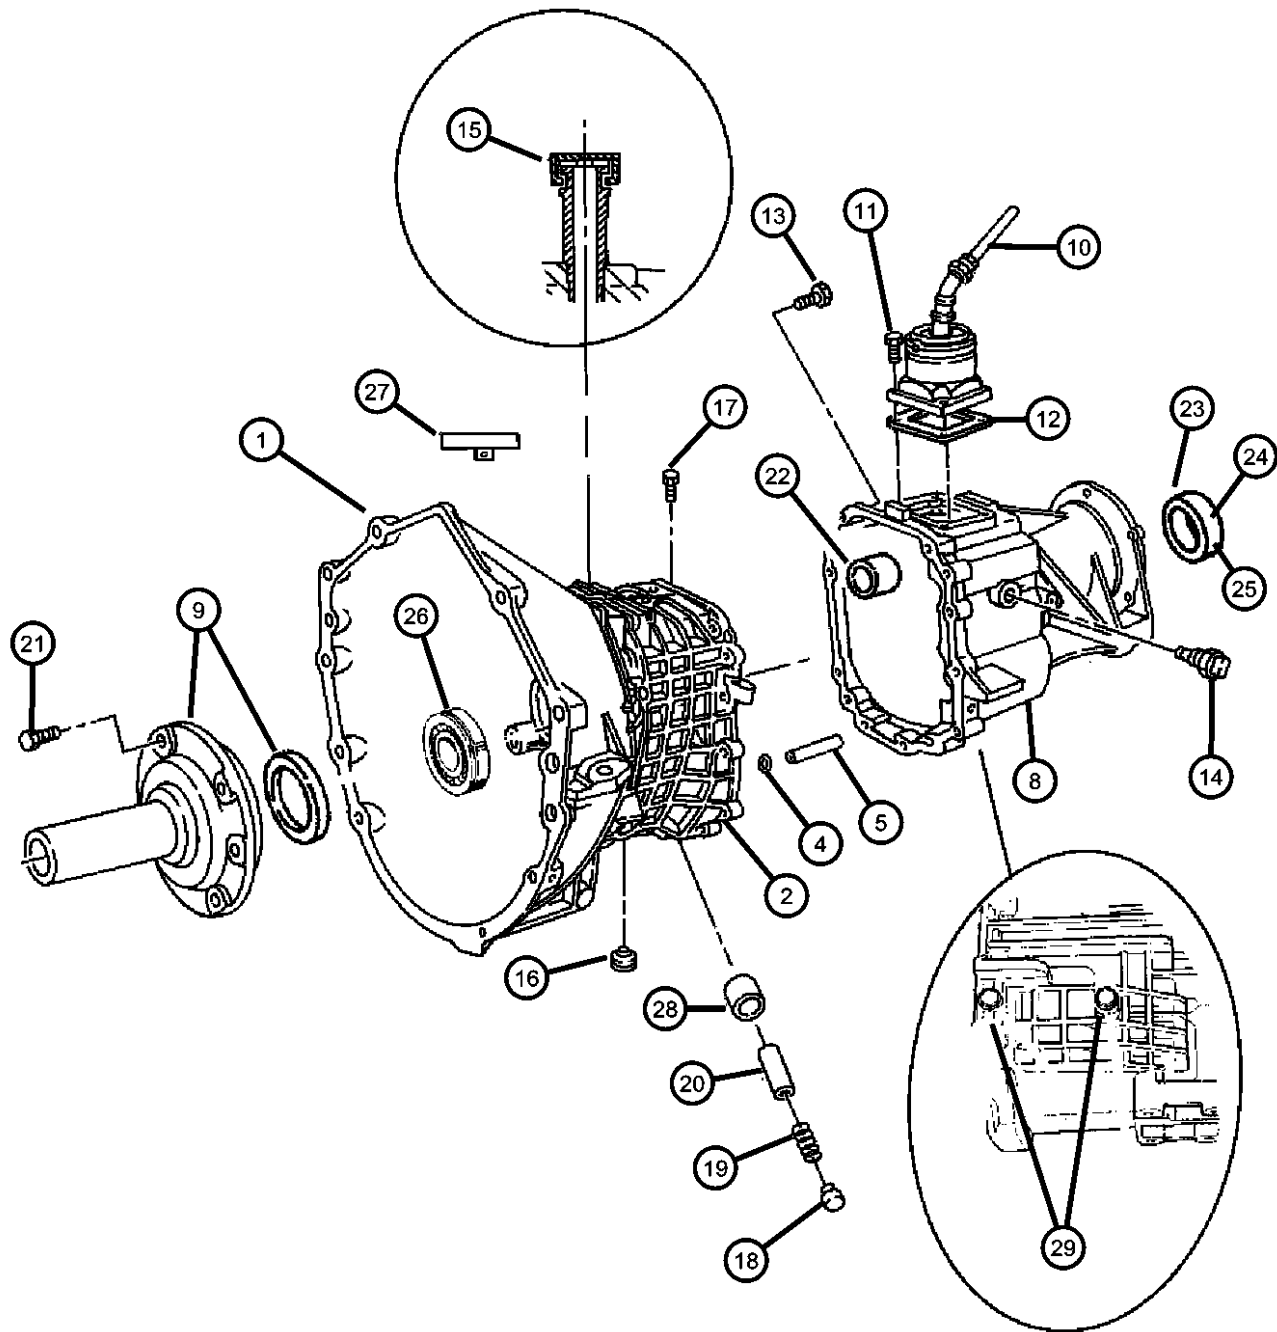

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Gear Train [NV 1500] [DDK]  
Figure NV1500-410

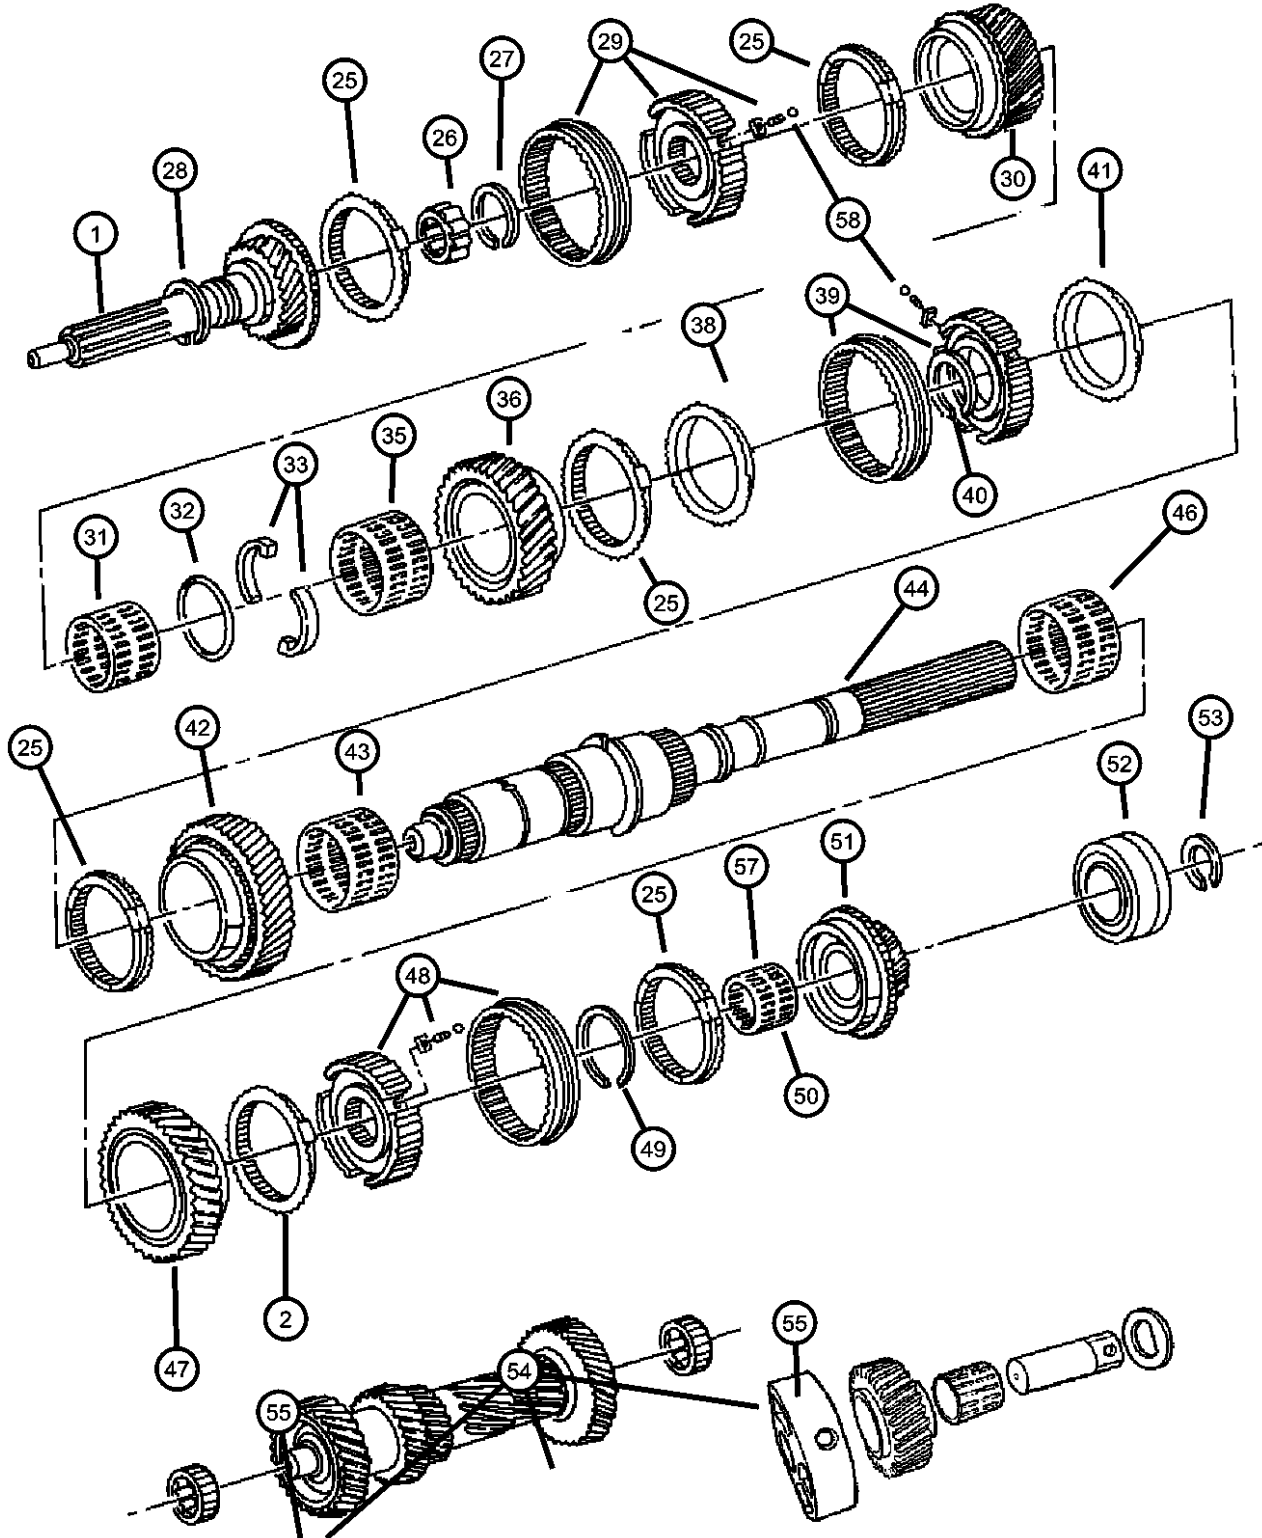

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


NOTE: Sales Codes  
[DDK] = 5 Speed Heavy Duty Manual Transmissions  
[ED0] = All 2.2,2.5,2.4 L 4 Cylinder Gas Engines

1	05013409AA	1	J, U			ED0	DDK		SHAFT, Input
		1	T			ED0	DDK		
2	05013411AA	1	J, U			ED0	DDK		BEARING, Input Shaft
		1	T			ED0	DDK		
-3	04202751	1	J, U			ED0	DDK		SPACER, Input Shaft, 0.62mm(.024")
		1	T			ED0	DDK		
-4	04202301	1	J, U			ED0	DDK		SPACER, Input Shaft, 0.66mm(.026")
		1	T			ED0	DDK		
-5	04202302	1	J, U			ED0	DDK		SPACER, Input Shaft, 0.70mm(.028")
		1	T			ED0	DDK		
-6	04202303	1	J, U			ED0	DDK		SPACER, Input Shaft, 0.74mm(.029")
		1	T			ED0	DDK		
-7	04202304	1	J, U			ED0	DDK		SPACER, Input Shaft, 0.78mm(.031")
		1	T			ED0	DDK		
-8	04202307	1	T			ED0	DDK		SPACER, Input Shaft, 0.90mm(.035")
		1	J, U			ED0	DDK		
-9									SPACER, Input Shaft, 0.94mm(.037")

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

**Gear Train [NV 1500] [DDK]  
Figure NV1500-410**

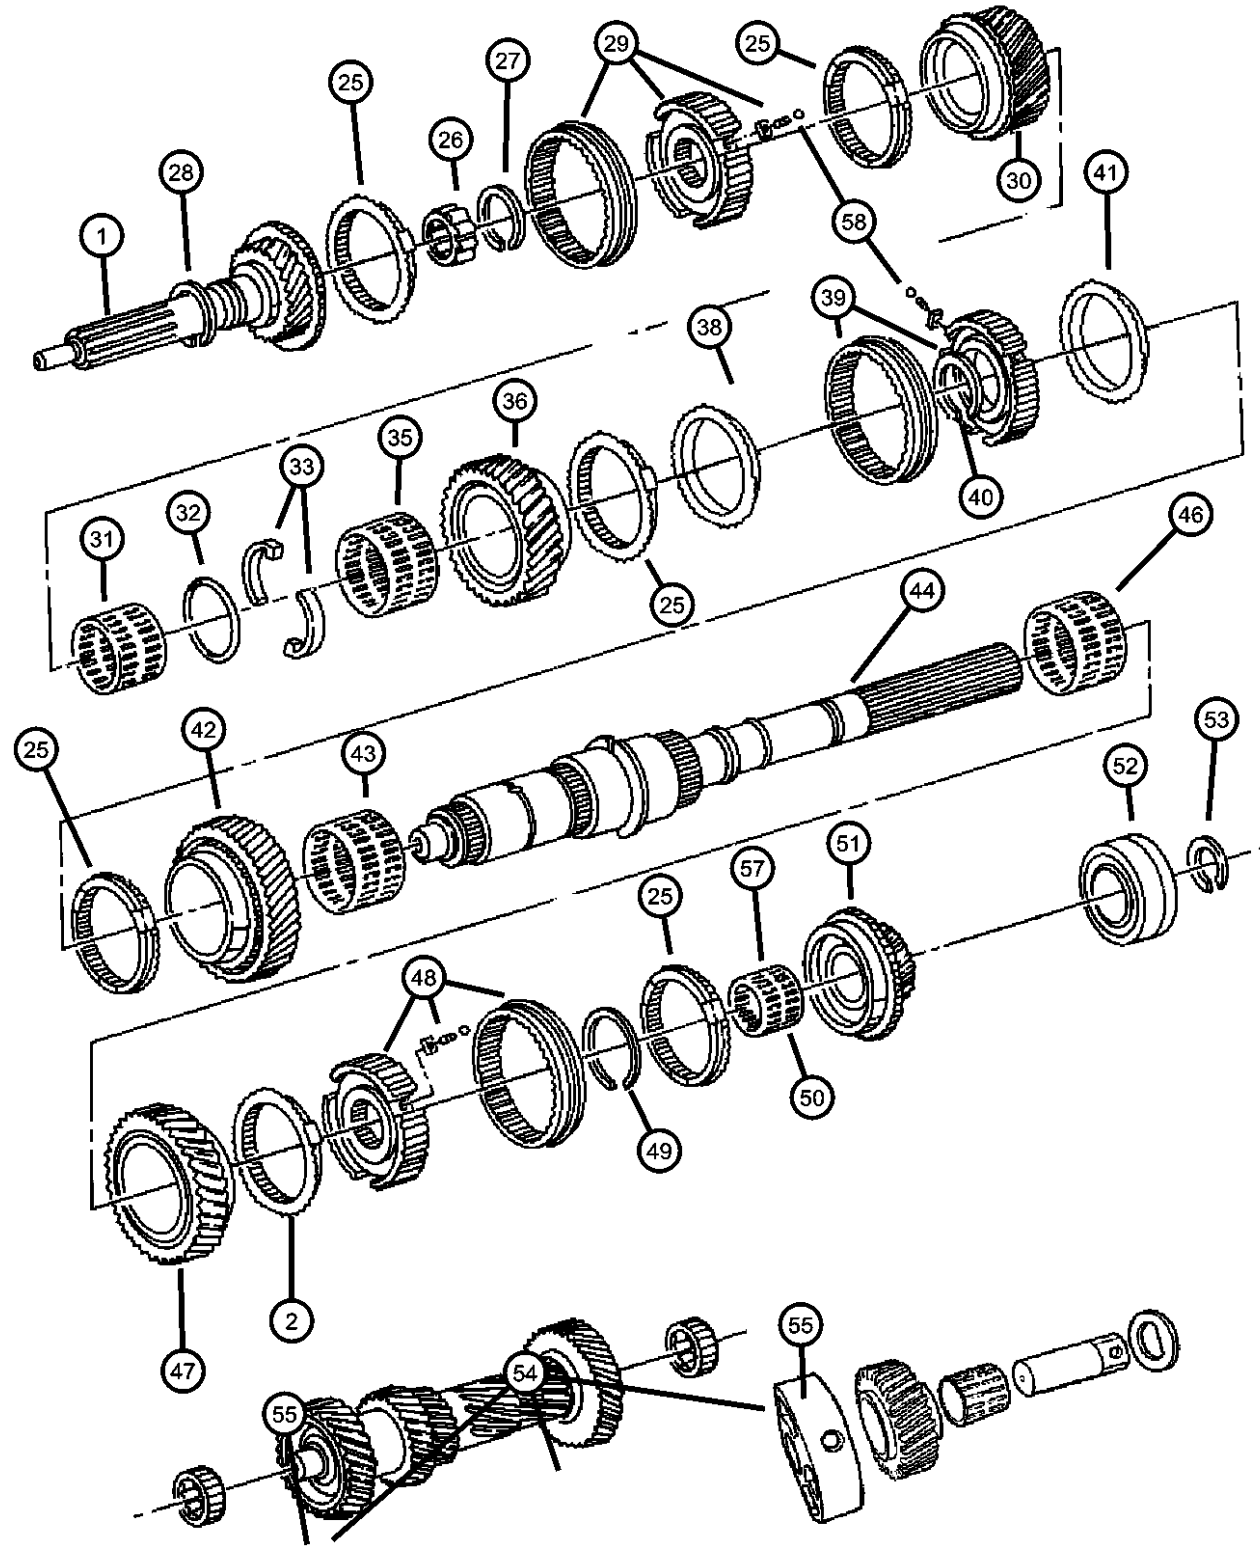

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	04202308	1	J, U			ED0	DDK		SPACER, Input Shaft, 0.98mm(.039")
		1	T			ED0	DDK		
-10	04202309	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.02mm(.040")
		1	T			ED0	DDK		
-11	04202310	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.06mm(.042")
		1	T			ED0	DDK		
-12	04202311	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.10mm(.043")
		1	T			ED0	DDK		
-13	04202312	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.14mm(.045")
		1	T			ED0	DDK		
-14	04202313	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.18mm(.046")
		1	T			ED0	DDK		
-15	04202314	1	T			ED0	DDK		SPACER, Input Shaft, 1.22mm(.048")
		1	J, U			ED0	DDK		
-16	04202315	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.26mm(.050")
		1	T			ED0	DDK		
-17	04202316	1	J, U			ED0	DDK		
		1	T			ED0	DDK		

**LIBERTY (KJ)**

**SERIES**

P = Limited  
H = Sport  
M = Renegade

**LINE**

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

**BODY**

74 = 4 Door (104.3 WB)

**ENGINE**

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
ED0 = All 2.4L


**TRANSMISSION**

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Gear Train [NV 1500] [DDK]  
Figure NV1500-410

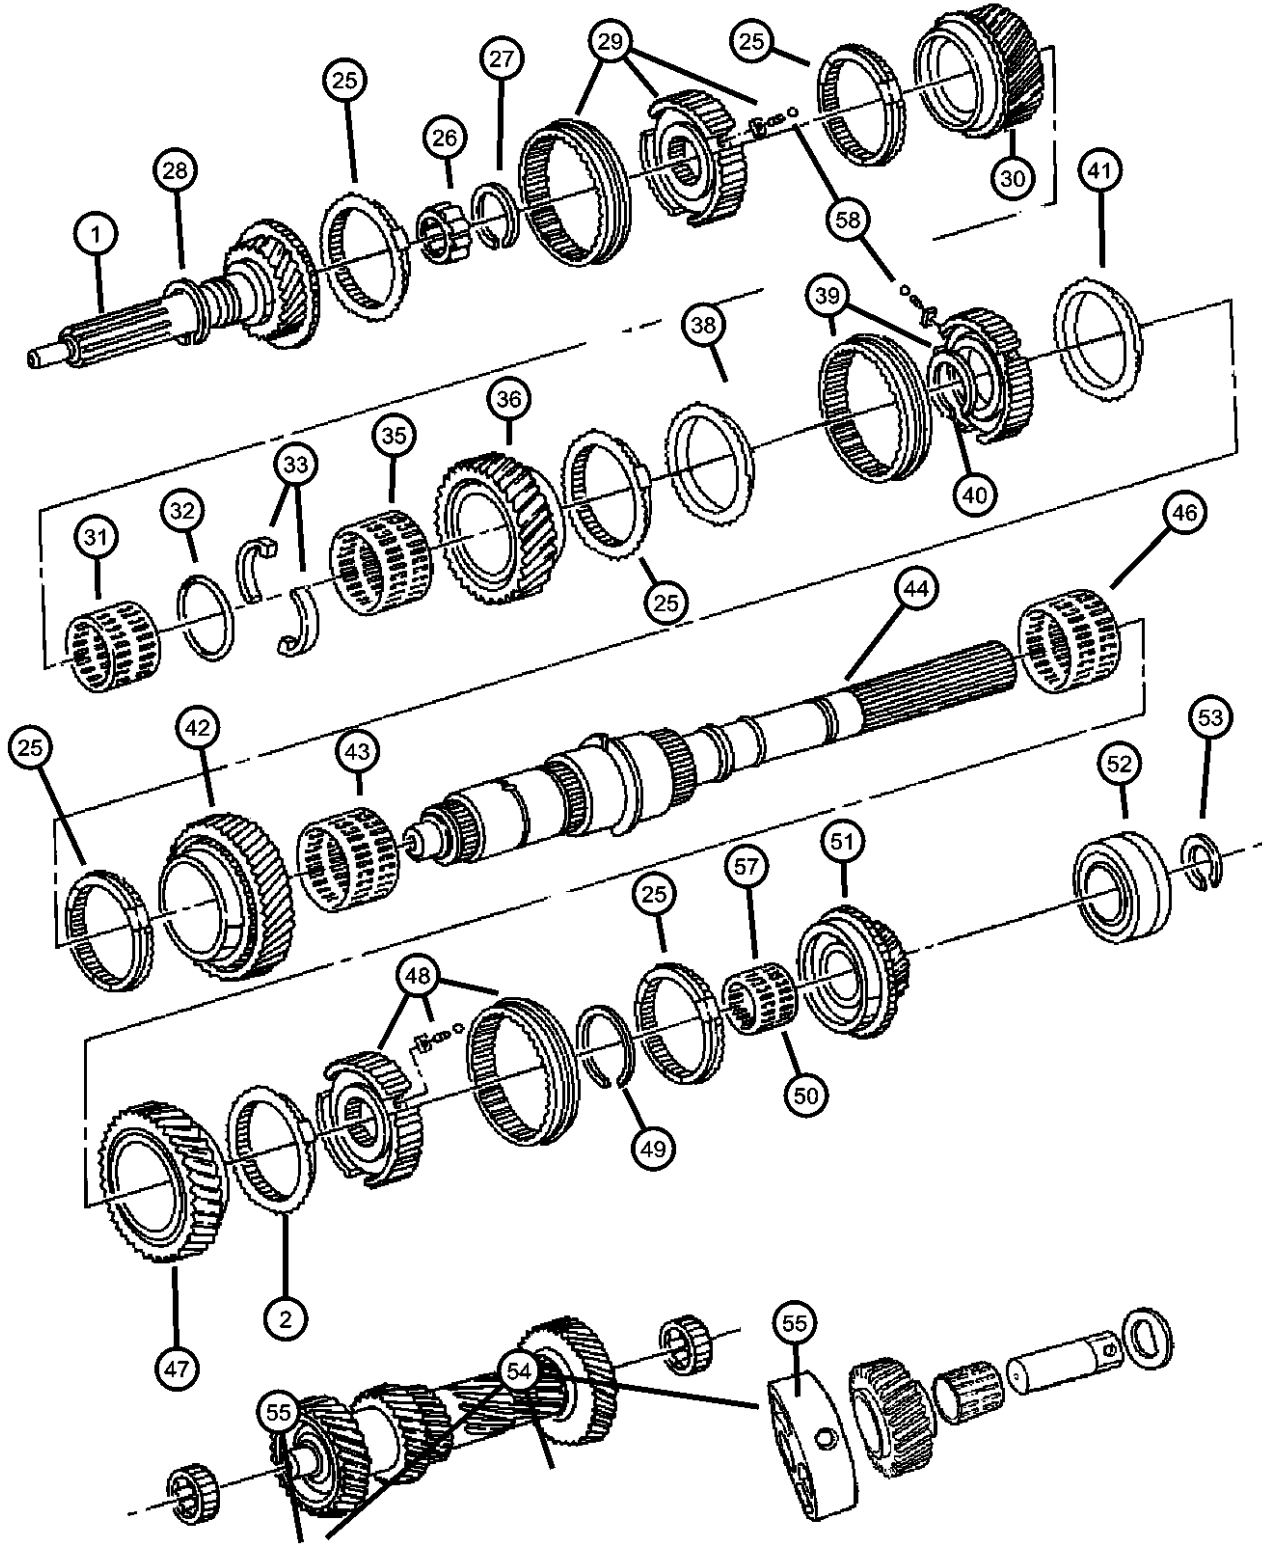


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-18	04202317	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.30mm(.051")
		1	T			ED0	DDK		
-19	04202318	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.34mm(.053")
		1	T			ED0	DDK		
-20	04202319	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.38mm(.054")
		1	T			ED0	DDK		
-21	04202320	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.42mm(.056")
		1	T			ED0	DDK		
-22	04202321	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.46mm(.057")
		1	T			ED0	DDK		
-23	04202322	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.50mm(.059")
		1	T			ED0	DDK		
-24	04202323	1	J, U			ED0	DDK		SPACER, Input Shaft, 1.54mm(.061")
		1	T			ED0	DDK		
25	05013366AA	1	J, U			ED0	DDK		RING, Synchronizer Blocker
		1	T			ED0	DDK		
26	05013410AA	1	J, U			ED0	DDK		NEEDLE BEARING, Input Shaft
		1	T			ED0	DDK		

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Gear Train [NV 1500] [DDK]  
Figure NV1500-410

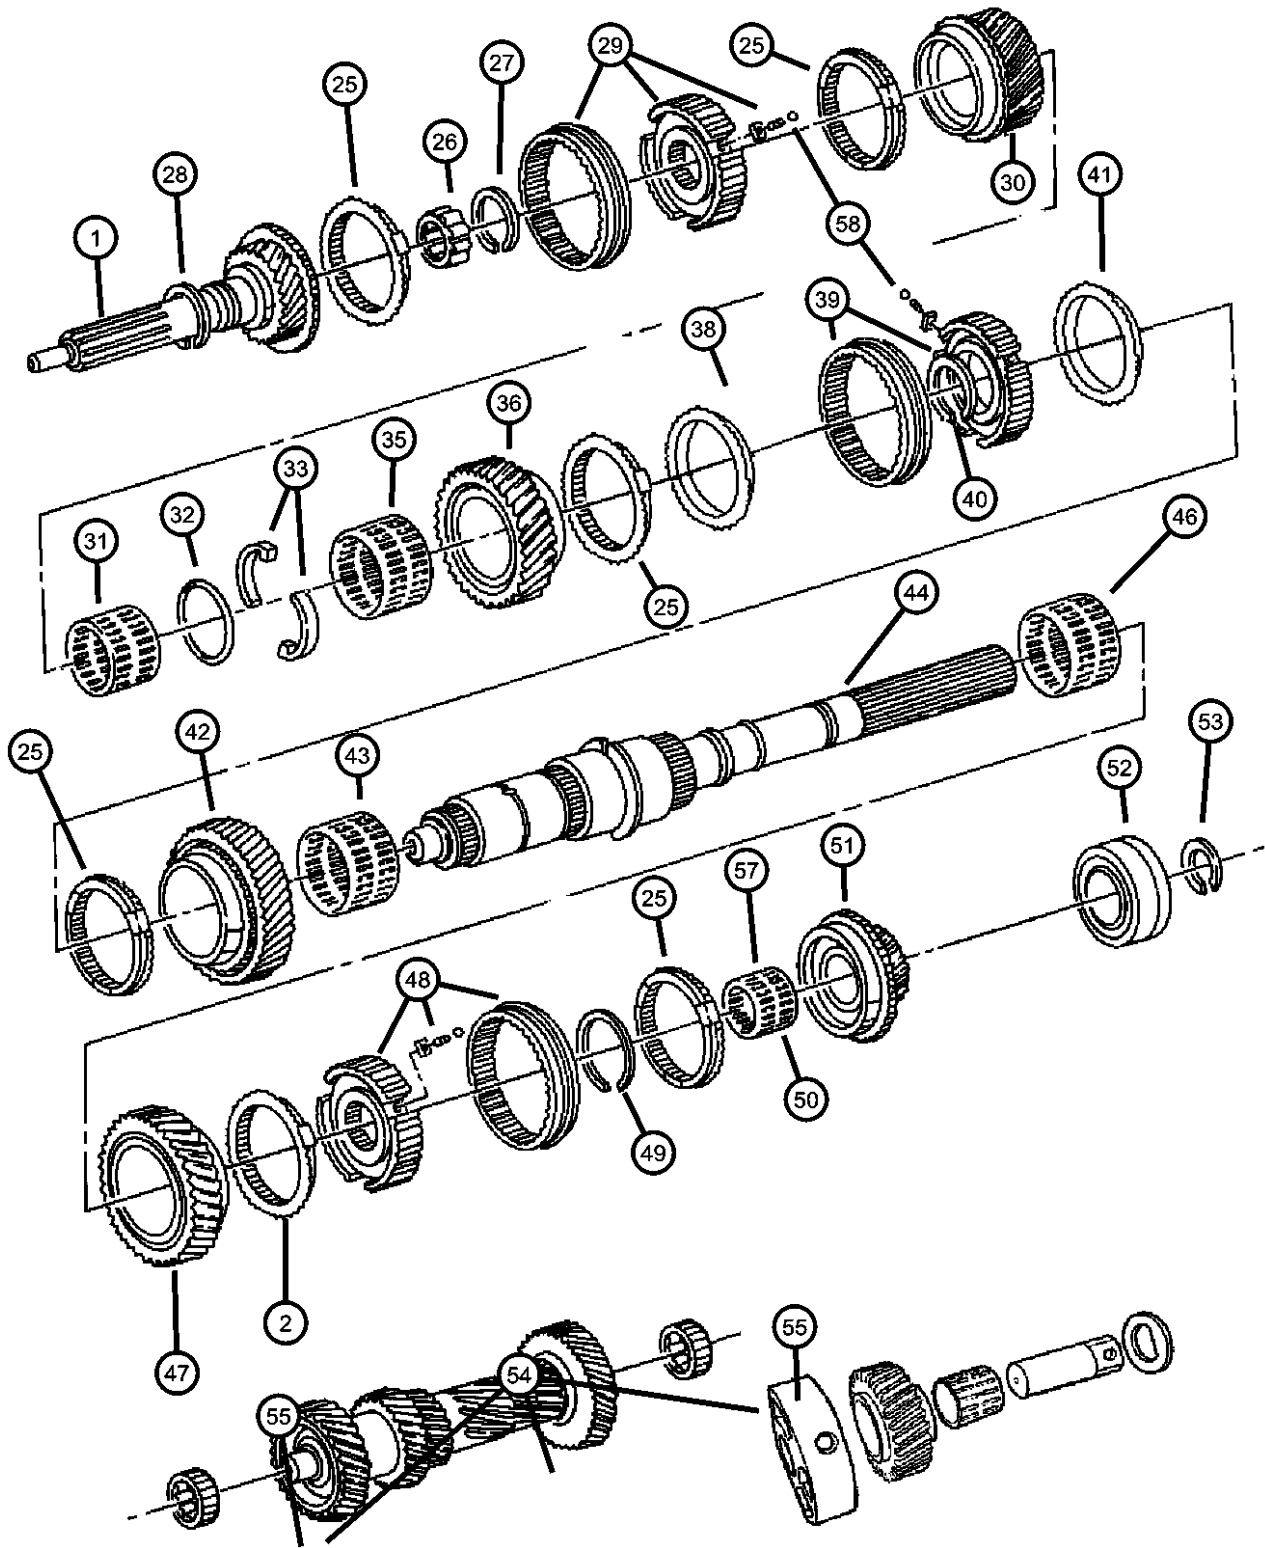


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
27	05013318AB	1	J, U			ED0	DDK		SNAP RING PACKAGE, Fifth Gear
		1	T			ED0	DDK		
28	05013379AA	1	J, U			ED0	DDK		RING, Snap
		1	T			ED0	DDK		
29	05013367AA	1	J, U			ED0	DDK		SYNCHRONIZER, Fifth And Reverse
		1	T			ED0	DDK		
30	05018679AA	1	J, U			ED0	DDK		GEAR, Third
		1	T			ED0	DDK		
31	05013365AA	3	J, U			ED0	DDK		BEARING, Needle
		3	T			ED0	DDK		
32	05013397AA	1	J, U			ED0	DDK		SNAP RING
		1	T			ED0	DDK		
33	05013398AA	2	J, U			ED0	DDK		WASHER, Output Shaft
		2	T			ED0	DDK		
-34	05013378AA	1	J, U			ED0	DDK		PIN
		1	T			ED0	DDK		
35	05013365AA	3	J, U			ED0	DDK		BEARING, Needle
		3	T			ED0	DDK		
36	05013395AA	1	J, U			ED0	DDK		GEAR, Second

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Gear Train [NV 1500] [DDK]  
Figure NV1500-410

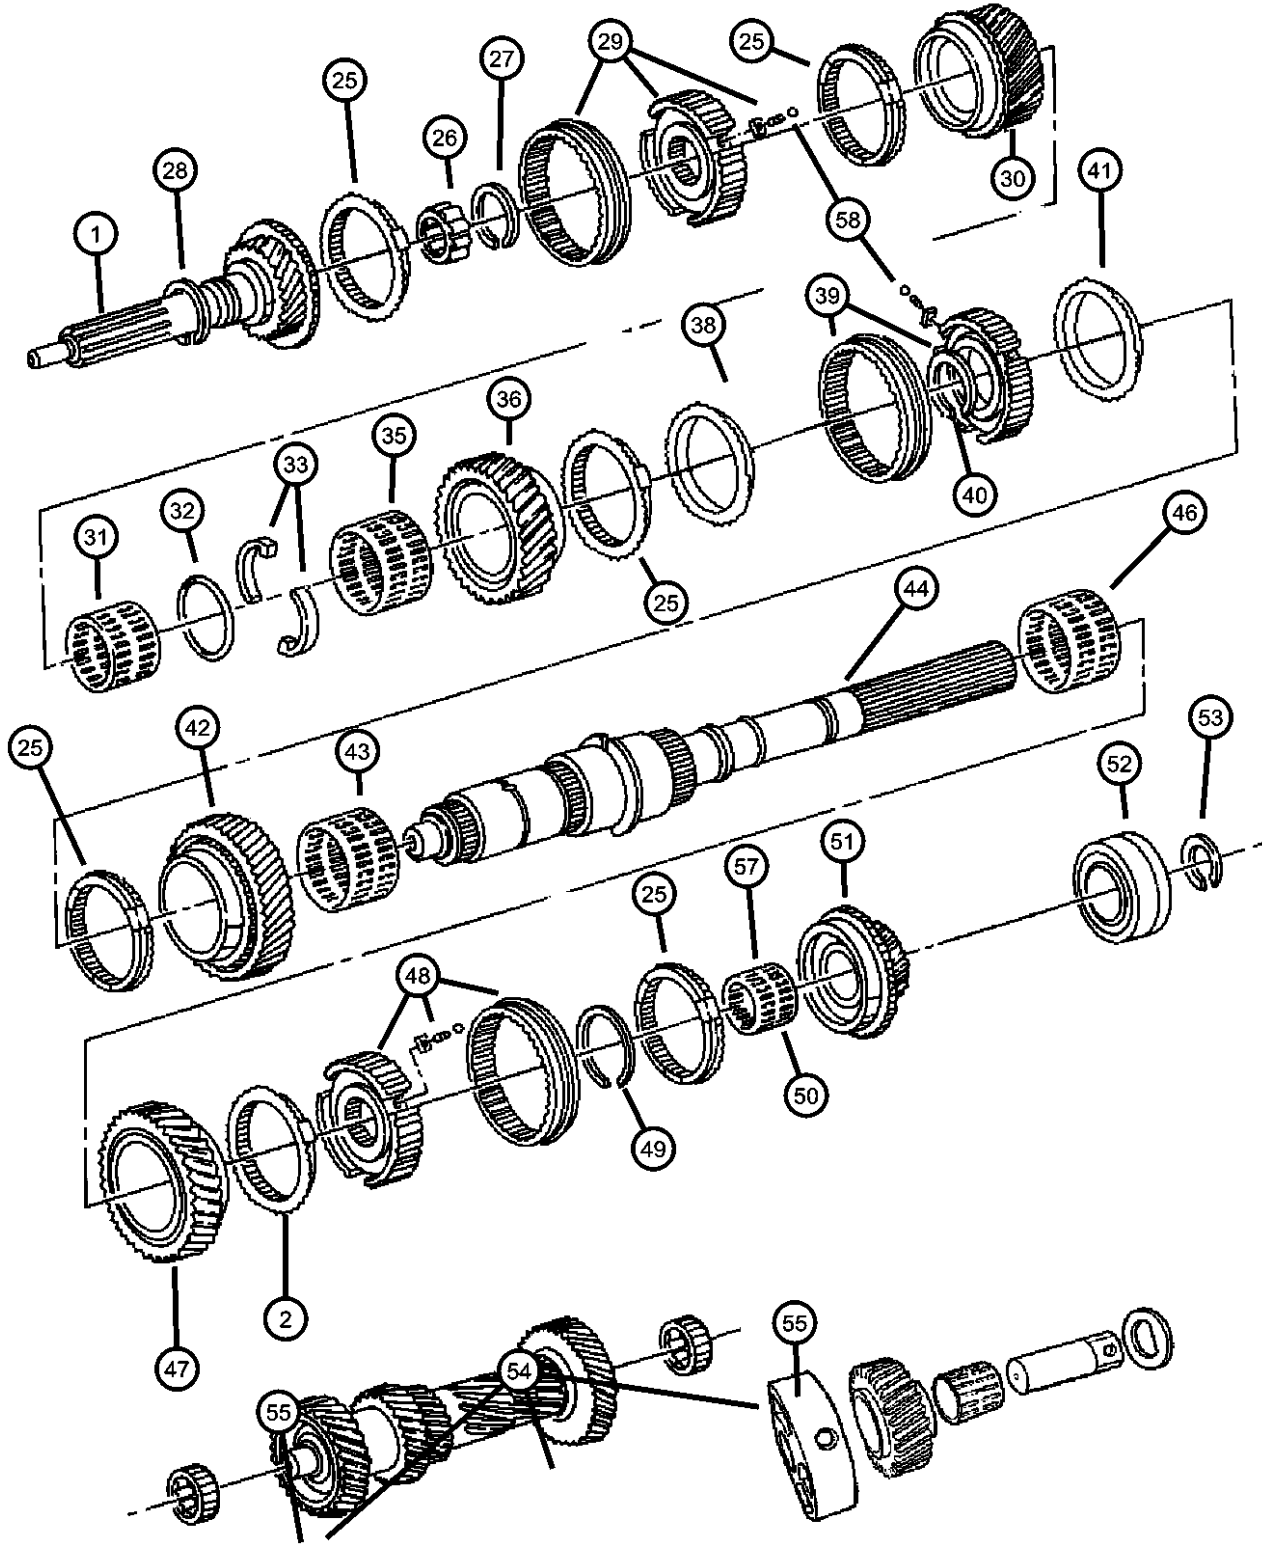


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-37	05013390AA	1	T			ED0	DDK		SNAP RING PACKAGE, Transmission RING, 1st and 2nd Speed Blocker
38	05013385AB	2	J, U			ED0	DDK		
		2	T			ED0	DDK		
39	05013386AA	1	J, U			ED0	DDK		SYNCHRONIZER, First and Second
		1	T			ED0	DDK		
40	05013390AA	1	T			ED0	DDK		SNAP RING PACKAGE, Transmission RING, 1st and 2nd Speed Blocker
41	05013385AB	2	J, U			ED0	DDK		
		2	T			ED0	DDK		
42	05013380AA	1	J, U			ED0	DDK		GEAR, First
		1	T			ED0	DDK		
43	05013381AA	1	J, U			ED0	DDK		BEARING, First Gear
		1	T			ED0	DDK		
44	05013360AA	1	T			ED0	DDK		SHAFT, Output
	05018675AA	1	J, U			ED0	DDK		
-45	05013328AA	1	J, U			ED0	DDK		RETAINER, Transmission Output Shaft Bearing
		1	T			ED0	DDK		
46	05013365AA	3	J, U			ED0	DDK		BEARING, Needle
		3	T			ED0	DDK		
47									GEAR, Reverse

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	



Gear Train [NV 1500] [DDK]  
Figure NV1500-410

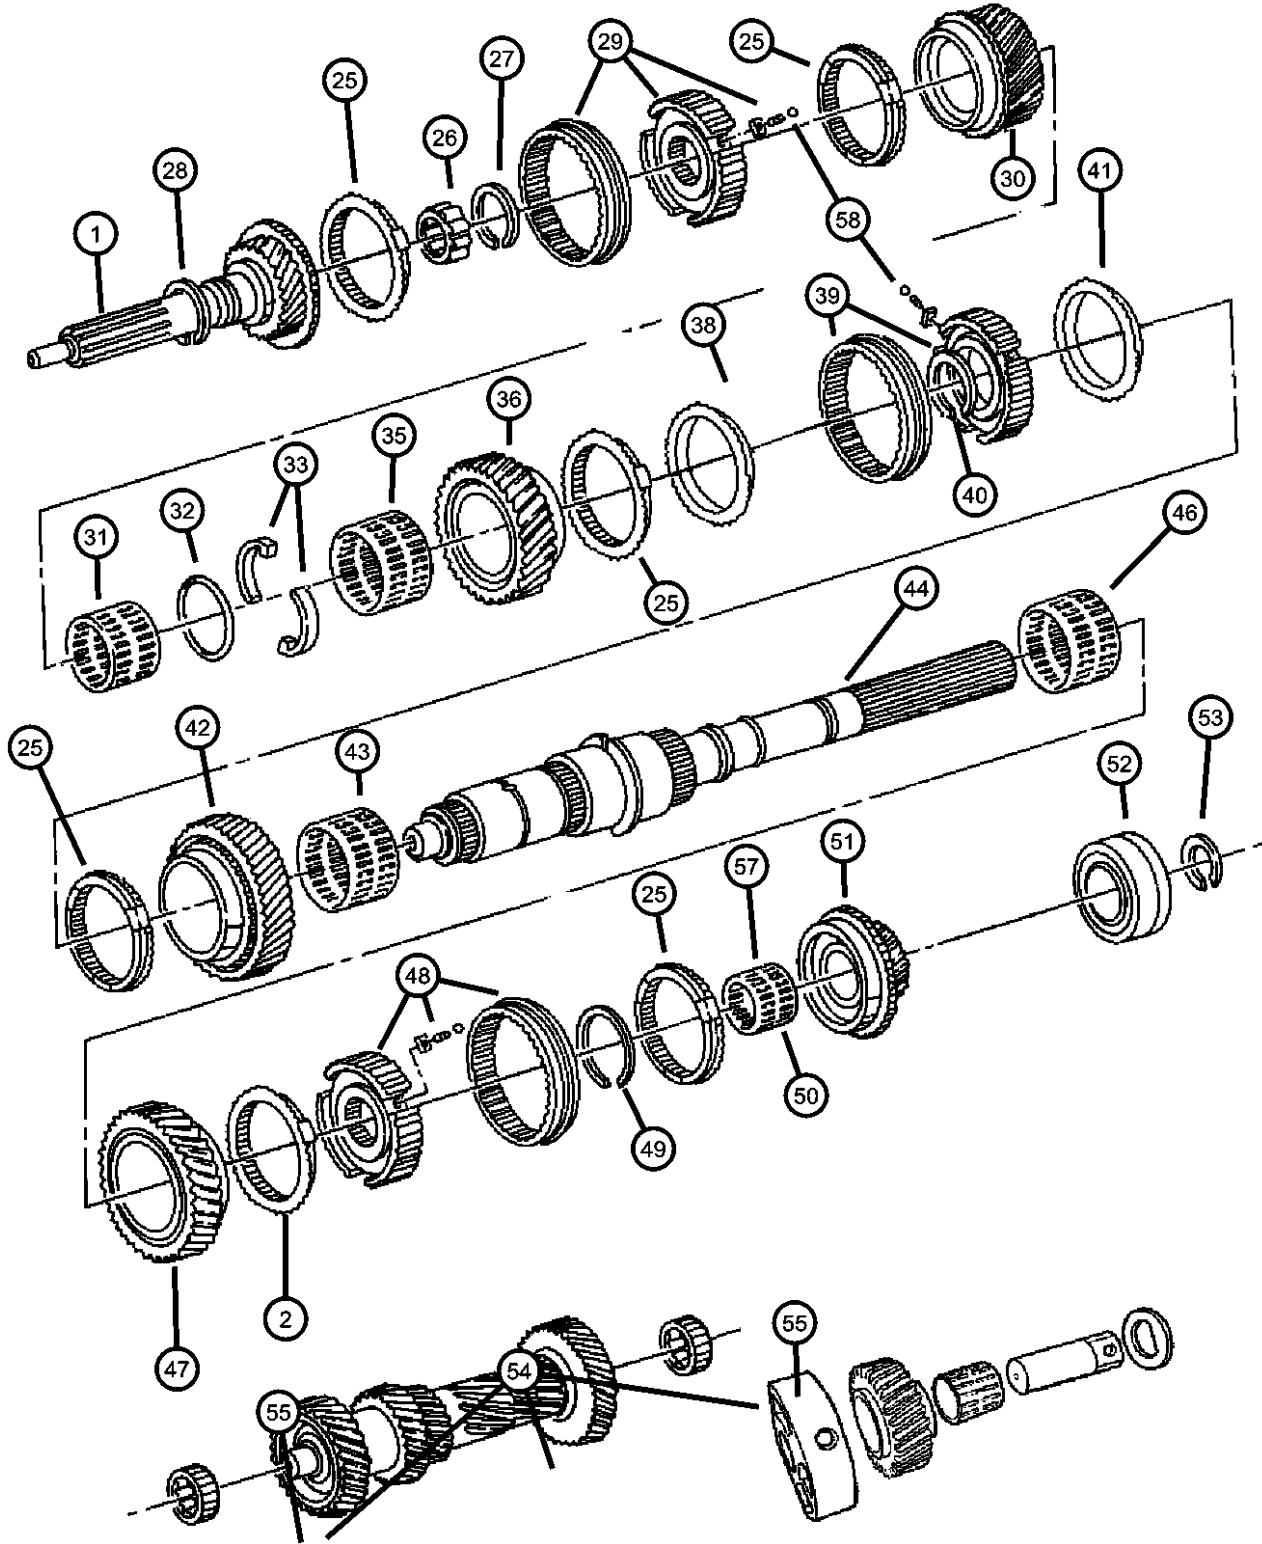


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
48	05013364AA	1	J, U			ED0	DDK		SYNCHRONIZER, Fifth And Reverse
		1	T			ED0	DDK		
49	05013367AA	2	J, U			ED0	DDK		SNAP RING PACKAGE, Fifth Gear
		2	T			ED0	DDK		
50	05013318AB	1	J, U			ED0	DDK		BEARING, Needle
		1	T			ED0	DDK		
51	05013375AA	1	J, U			ED0	DDK		GEAR, Fifth
		1	T			ED0	DDK		
52	05013373AA	1	J, U			ED0	DDK		BEARING, Output Shaft
		1	T			ED0	DDK		
53	05013376AA	1	J, U			ED0	DDK		SNAP RING, Output Shaft Bearing
		1	T			ED0	DDK		
54	05013377AA	1	J, U			ED0	DDK		SHAFT, Counter
		1	T			ED0	DDK		
55	05013414AA	1	J, U			ED0	DDK		CONE ASSEMBLY, Countershaft
		1	T			ED0	DDK		
-56	05013416AA	2	J, U			ED0	DDK		CUP, Bearing Inner
		2	T			ED0	DDK		
	05013313AA	1	J, U			ED0	DDK		
		1	T			ED0	DDK		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Gear Train [NV 1500] [DDK]  
Figure NV1500-410

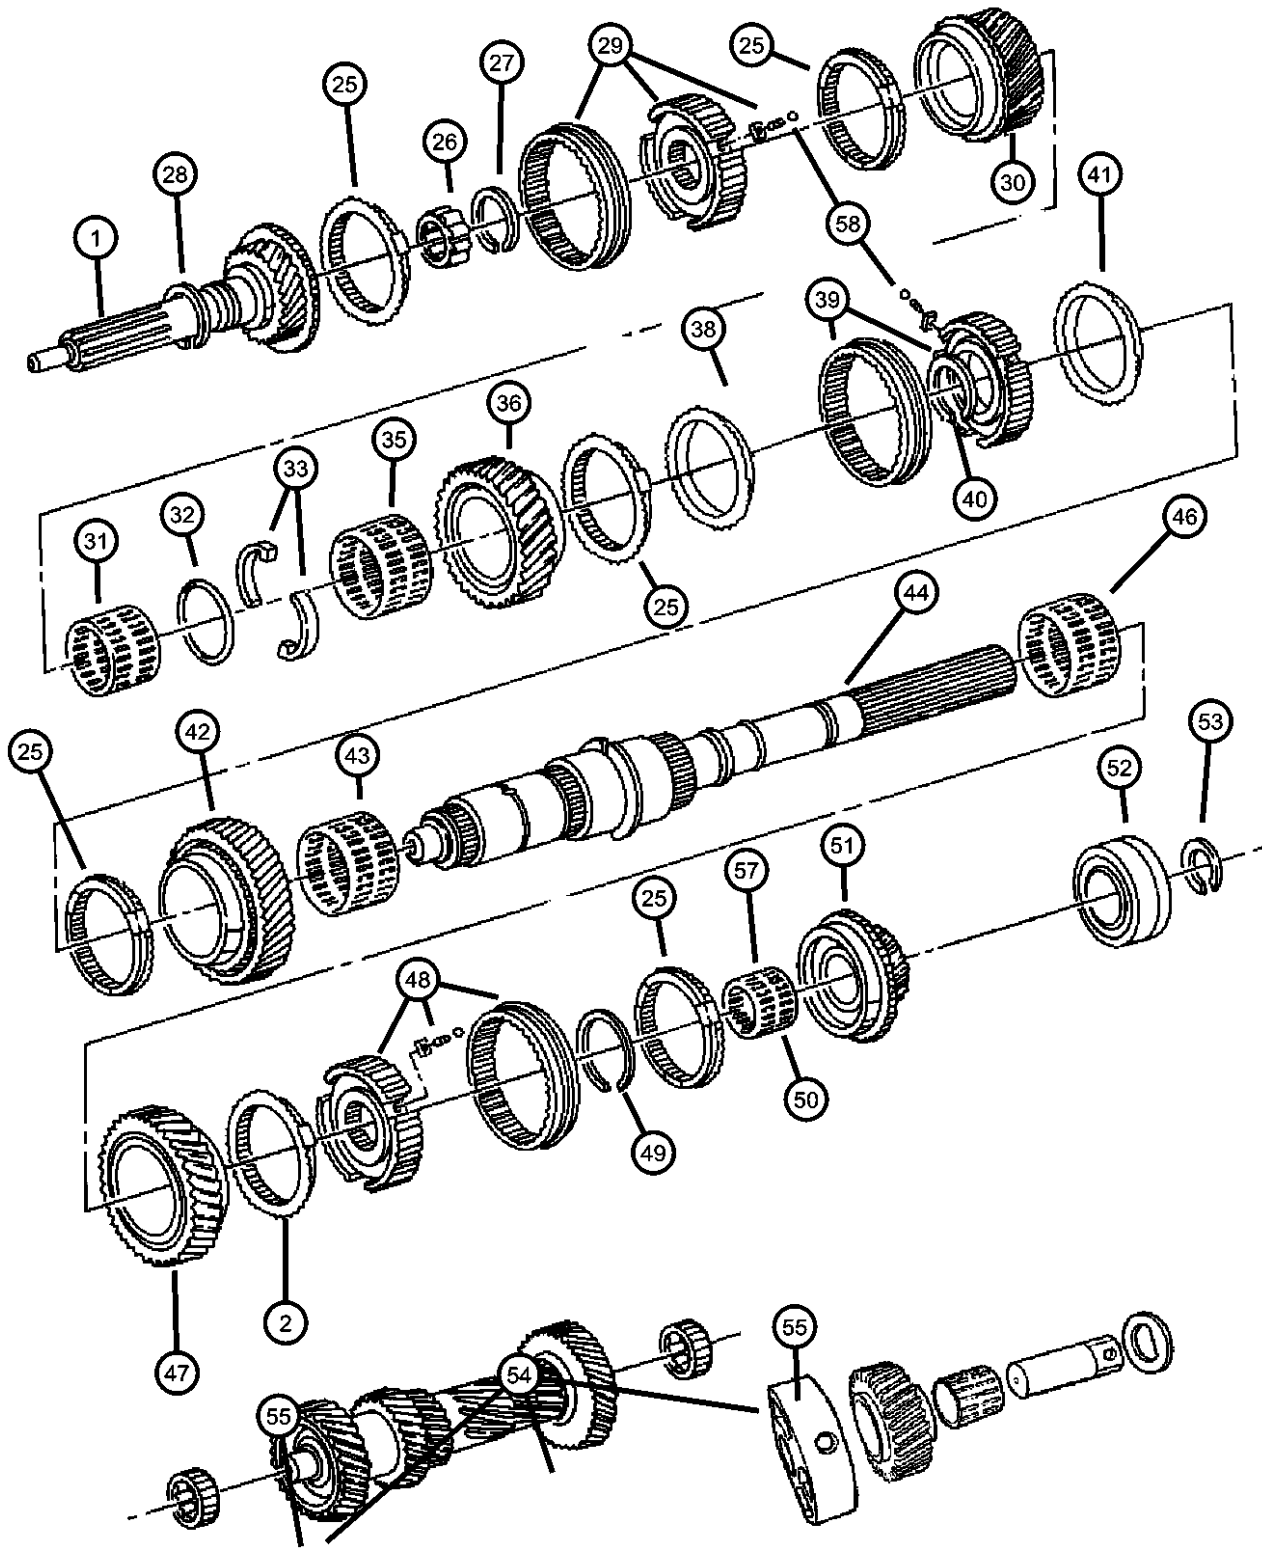


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-57	04419650	1	J, U			ED0	DDK		SHIM PACKAGE, Countershaft
		1	T			ED0	DDK		
58	05013417AA	1	J, U			ED0	DDK		BEARING, Idler
		1	T			ED0	DDK		
59	04741136	3	T			ED0	DDK		BALL, Shift Lever, M5
		3	J, U			ED0	DDK		
-60	05080807AA	3	J, U			ED0	DDK		SPRING, Synchronizer
		3	T			ED0	DDK		

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Fork and Rail [NV 1500] [DDK]  
Figure NV1500-910

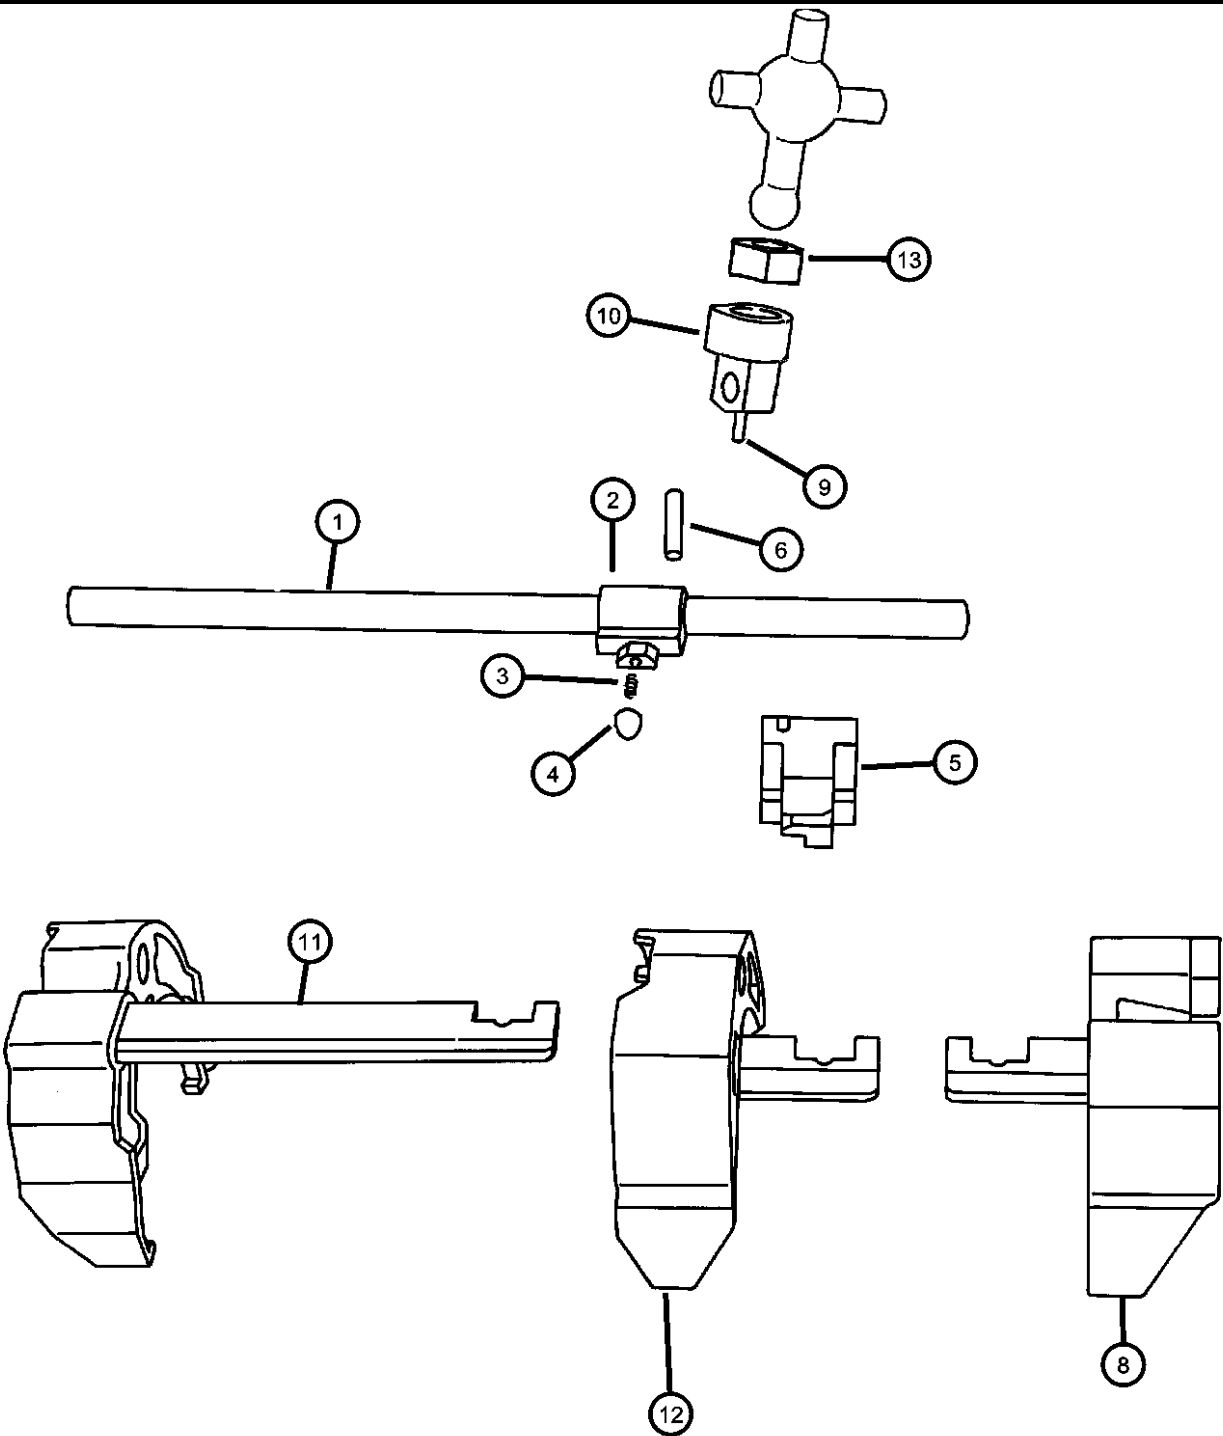


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes [DDK] = 5 Speed Heavy Duty Manual Transmissions [ED0] = All 2.2,2.5,2.4 L 4 Cylinder Gas Engines									
1	05072116AA	1	J, U			ED0	DDK		SHAFT, Shift Lever
		1	T			ED0	DDK		
2	05016504AA	1	J, U			ED0	DDK		LEVER, Shift Shaft
		1	T			ED0	DDK		
3		1							SPRING, Lever, (NOT REQUIRED)
4	05015949AA	1	J, U			ED0	DDK		PLUNGER
		1	T			ED0	DDK		
5	05013350AA	1	J, U			ED0	DDK		BUSHING, Transmission
		1	T			ED0	DDK		
6	04741139	1	J, U			ED0	DDK		PIN, Shift Shaft
		1	T			ED0	DDK		
-7	04741139	1	J, U			ED0	DDK		PIN, Shift Shaft
		1	T			ED0	DDK		
8	05013344AA	1	J, U			ED0	DDK		FORK, Third and Fourth
		1	T			ED0	DDK		
9	04741139	1	J, U			ED0	DDK		PIN, Shift Shaft
		1	T			ED0	DDK		
10	04874352	1	J, U			ED0	DDK		SOCKET, Shift Shaft
		1	T			ED0	DDK		

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Fork and Rail [NV 1500] [DDK]  
Figure NV1500-910

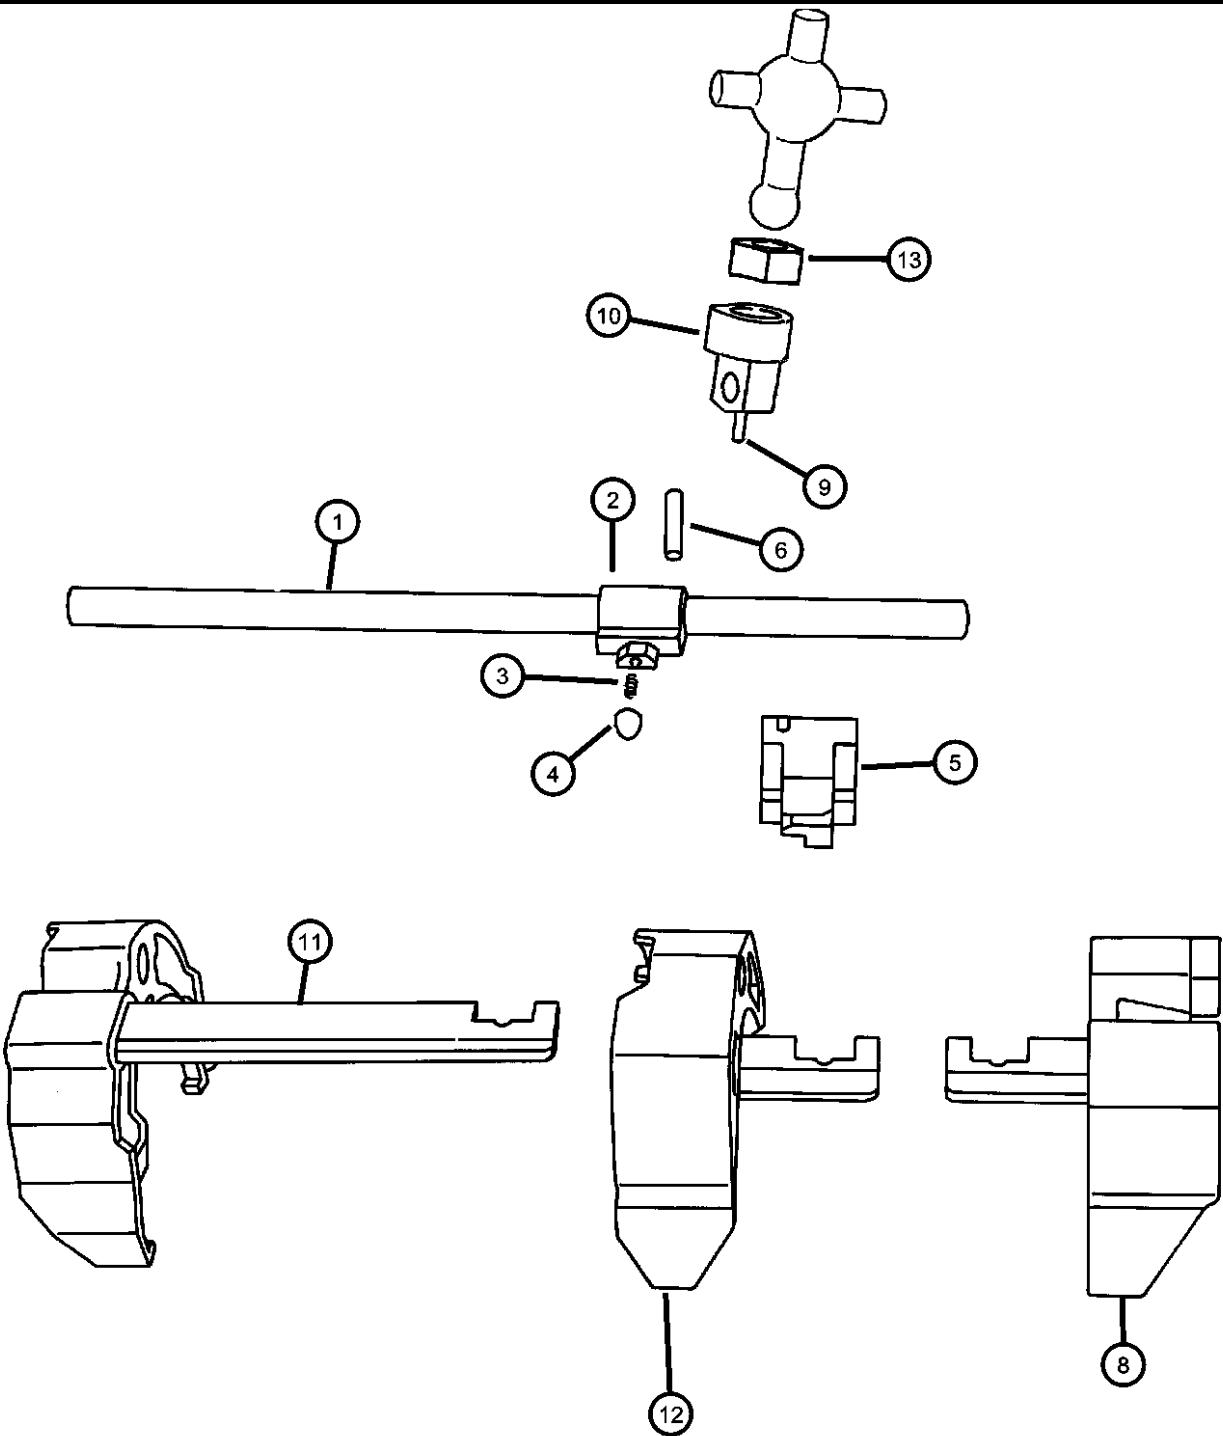


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
11	05013345AA	1	J, U			ED0	DDK		FORK, Fifth Shift
		1	T			ED0	DDK		
12	05013343AA	1	J, U			ED0	DDK		FORK, First and Second
		1	T			ED0	DDK		
13	05012020AA	1	J, U			ED0	DDK		ISOLATOR, Shift Lever
		1	T			ED0	DDK		
-14	04740892	1	T			ED0	DDK		BUSHING, Detent
		2	J, U			ED0	DDK		

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Gearshift Controls [DDK]  
Figure NV1500-1210

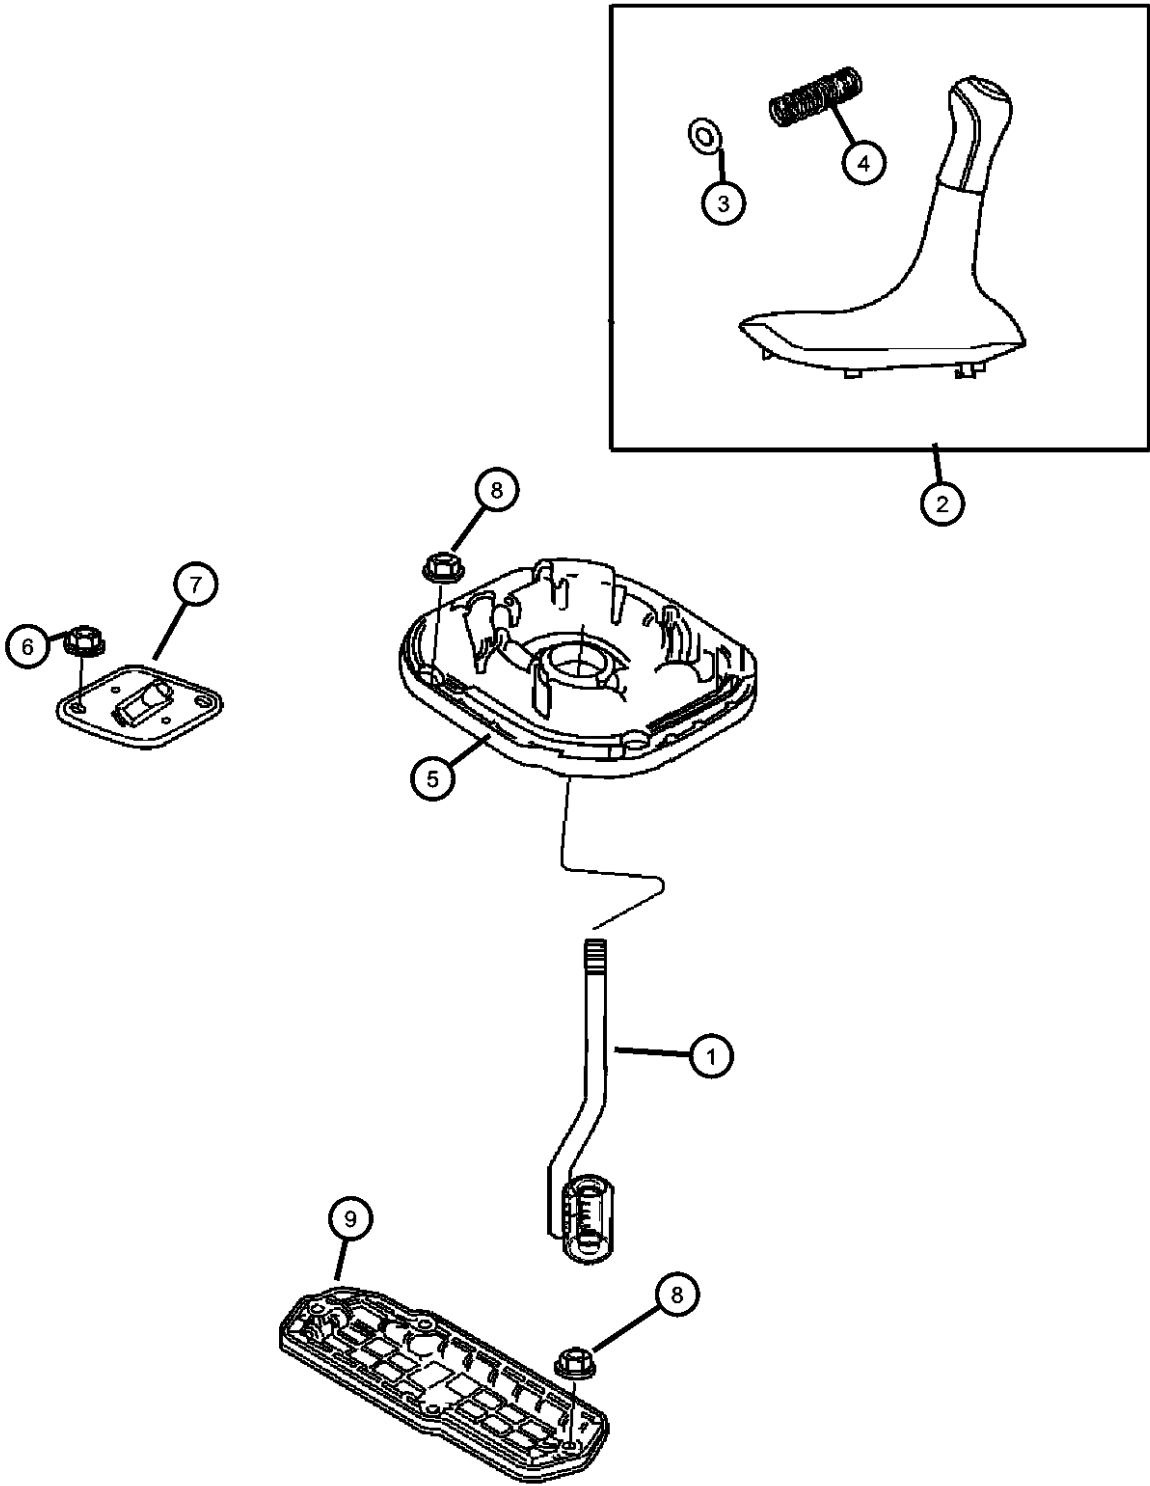


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE; Sales Codes [DBB] = All Manual Transmissions [ED0] = All 4 Cylinder Gas Engines [EK0] = All 3.7L 6 Cylinder Gas Engines [EN0] = All 4/5 Cylinder Turbo Diesel									
1	05102826AA	1					DBB		LEVER, Gearshift
2	05102830AA	1					DBB		BOOT KIT, Gearshift
3	05102828AA	1					DBB		SPRING, Gearshift Lever
4	05102827AA	1					DBB		O RING, Gearshift Boot
5	52104306AB	1				ED0, EK0, EN0	DBB		BOOT, Gearshift Lever
6	06100047	2							NUT AND WASHER, Hex Nut-Coned Washer, M6 x 1.00
7	52104382AA	1					DBB		COVER, Gearshift
8									NUT AND WASHER, Hex Nut-Sealing Washer, M6 x 1.00
	34201358	4					DBB		
		4							
9	52104321AA	1	T						COVER, Transfer Case Lever Hole
-10	06506668AA	1					DBB		SCREW, Cap, Trans Gear Shift Control Lever

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part



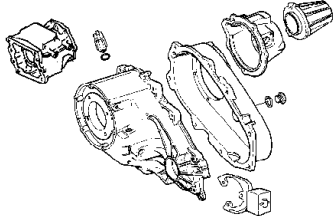
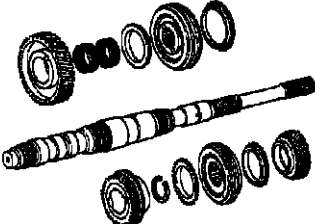
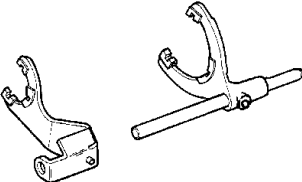
Group - 231

Transfer Case Model 231 [DHN]

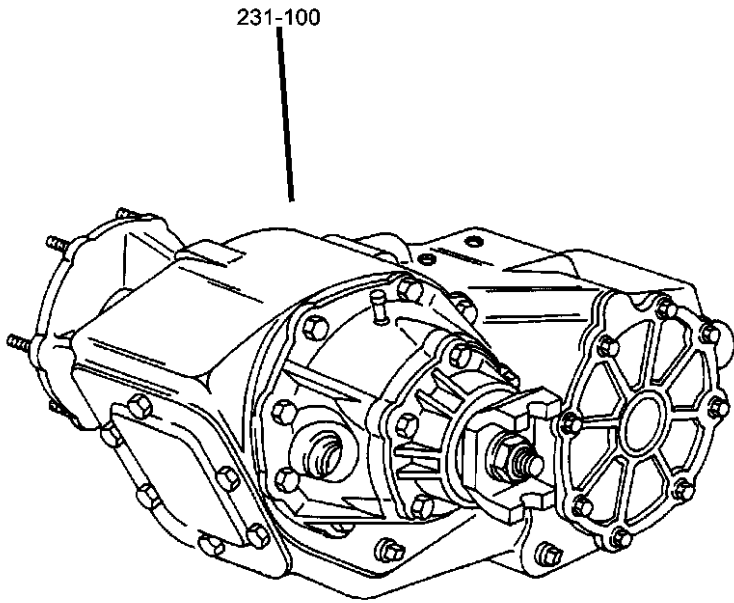

Group - 231 Transfer Case Model 231 [DHN]

Illustration Title	Group-Fig. No.
<b>Transfer Case Assembly</b> Transfer Case Command Trac [DHN] .....	Fig. 231 - 110
<b>Case and Related Parts</b> Case and Related Parts Command Trac [DHN] .....	Fig. 231 - 210
<b>Gear Train</b> Gear Train Command Trac [DHN] .....	Fig. 231 - 410
<b>Fork and Rails</b> Forks and Rails Command Trac [DHN].....	Fig. 231 - 910
<b>Gearshift Controls</b> Gearshift Controls.....	Fig. 231 - 1210

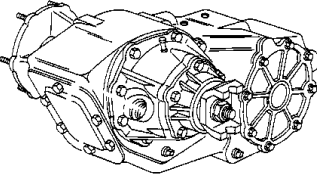
<div><div>231-100</div><div>Transfer Case Assembly</div></div>	<div><div>231-1200</div><div>Gearshift Controls</div></div>	<div><div>231-200</div><div>Case and Related Parts</div></div>	<div><div>231-400</div><div>Gear Train</div></div>
<div><div>231-900</div><div>Fork and Rails</div></div>			

Transfer Case Command Trac [DHN]  
Figure 231-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


NOTE; Sales Codes  
[ED0] = All 2.2,2.5,2.4,L 4 Cylinder Gas Engines  
[EK0 ]= All 3.7L 6 Cylinder Gas Egines  
[EN0] = All 4/5 Turbo Diesel Engines

1	52099421AD	1	J, U			ED0, EK0, EN0			TRANSFER CASE, NV231
---	------------	---	------	--	--	------------------	--	--	----------------------

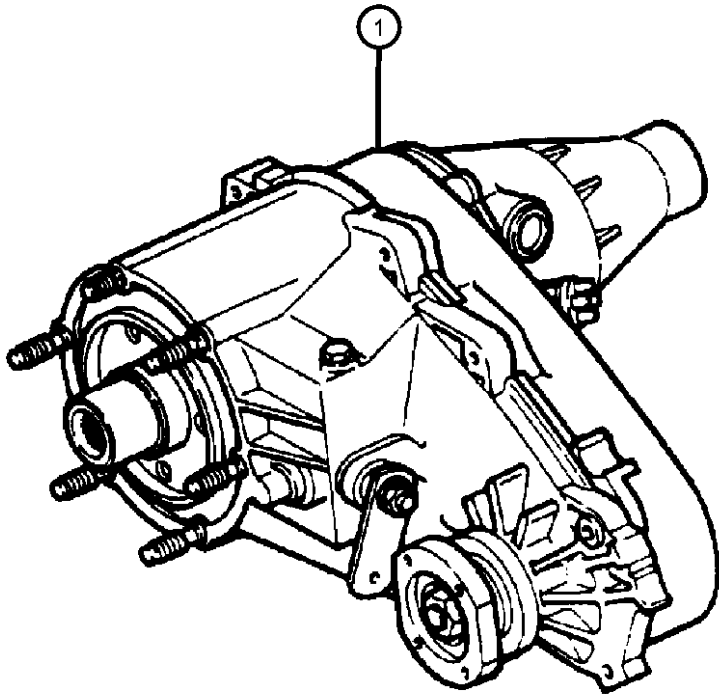

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Case and Related Parts Command Trac [DHN]  
Figure 231-210

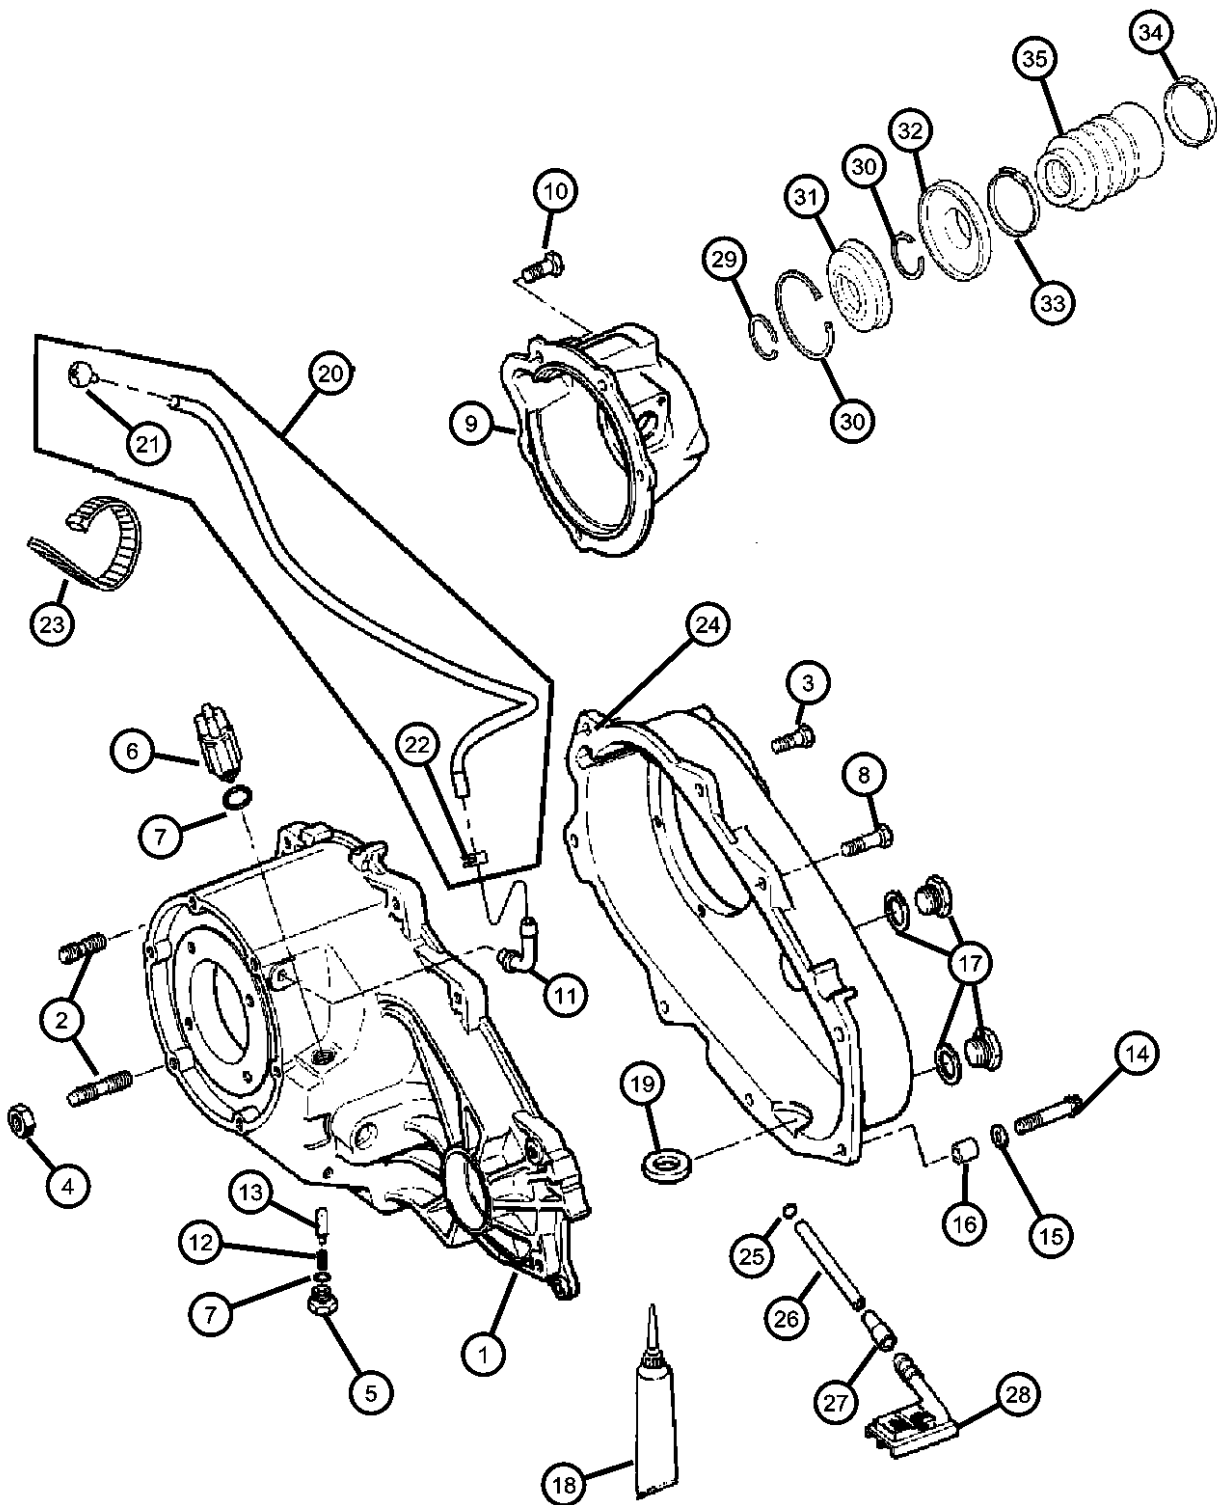


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Sales Codes									
[ED0] = All 2.2,2.5,2.4,L 4 Cylinder Gas Engines									
[EK0] = All 3.7L 6 Cylinder Gas Engines									
[EN0] = All 4/5 Turbo Diesel Engines									
1	05072322AA	1	J, U			ED0, EK0, EN0			CASE, Transfer Front
2	04167922	1	J, U			ED0, EK0, EN0			STUD, Tranmission Case
3	J8130979	1	J, U			ED0, EK0, EN0			BOLT, Twelve Point Head, M10x1.5x48
4	J4006681	6	J, U						NUT AND CONED WASHER, Hex, .375-24
5	04886473AA	1	J, U			ED0, EK0, EN0			SCREW
6	05083138AA	1	J, U			ED0, EK0, EN0			SWITCH, Transfer Case, 5 Position
7	04338956	1	J, U			ED0, EK0, EN0			SEAL, Vacuum Switch
8	04210617	5	J, U			ED0, EK0, EN0			BOLT, Transfer Case
9	05072325AA	1	J, U			ED0, EK0, EN0			RETAINER, Transfer Case Rear
10	06501371	9	J, U			ED0, EK0, EN0			BOLT, Retainer
11	04796910	1	J, U			ED0, EK0, EN0			VENT, Transfer Case
12	05003445AA	1	J, U			ED0, EK0, EN0			SPRING, Poppet Plunger
13	05003444AA	1	J, U			ED0, EK0, EN0			PLUNGER
14	04210614	2	J, U			ED0, EK0, EN0			BOLT, Hex Flange Head
15	04210983	2	J, U			ED0, EK0, EN0			WASHER, Flat
16	04116310	2	J, U			ED0, EK0, EN0			DOWEL, Transfer Case
17	04856641	2	J, U			ED0, EK0, EN0			PLUG, Oil Fill
18	05010884AA	1	J, U			ED0, EK0, EN0			SEALANT, RTV
19	03681601	1	J, U			ED0, EK0, EN0			MAGNET, Transmission

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part



Case and Related Parts Command Trac [DHN]  
Figure 231-210

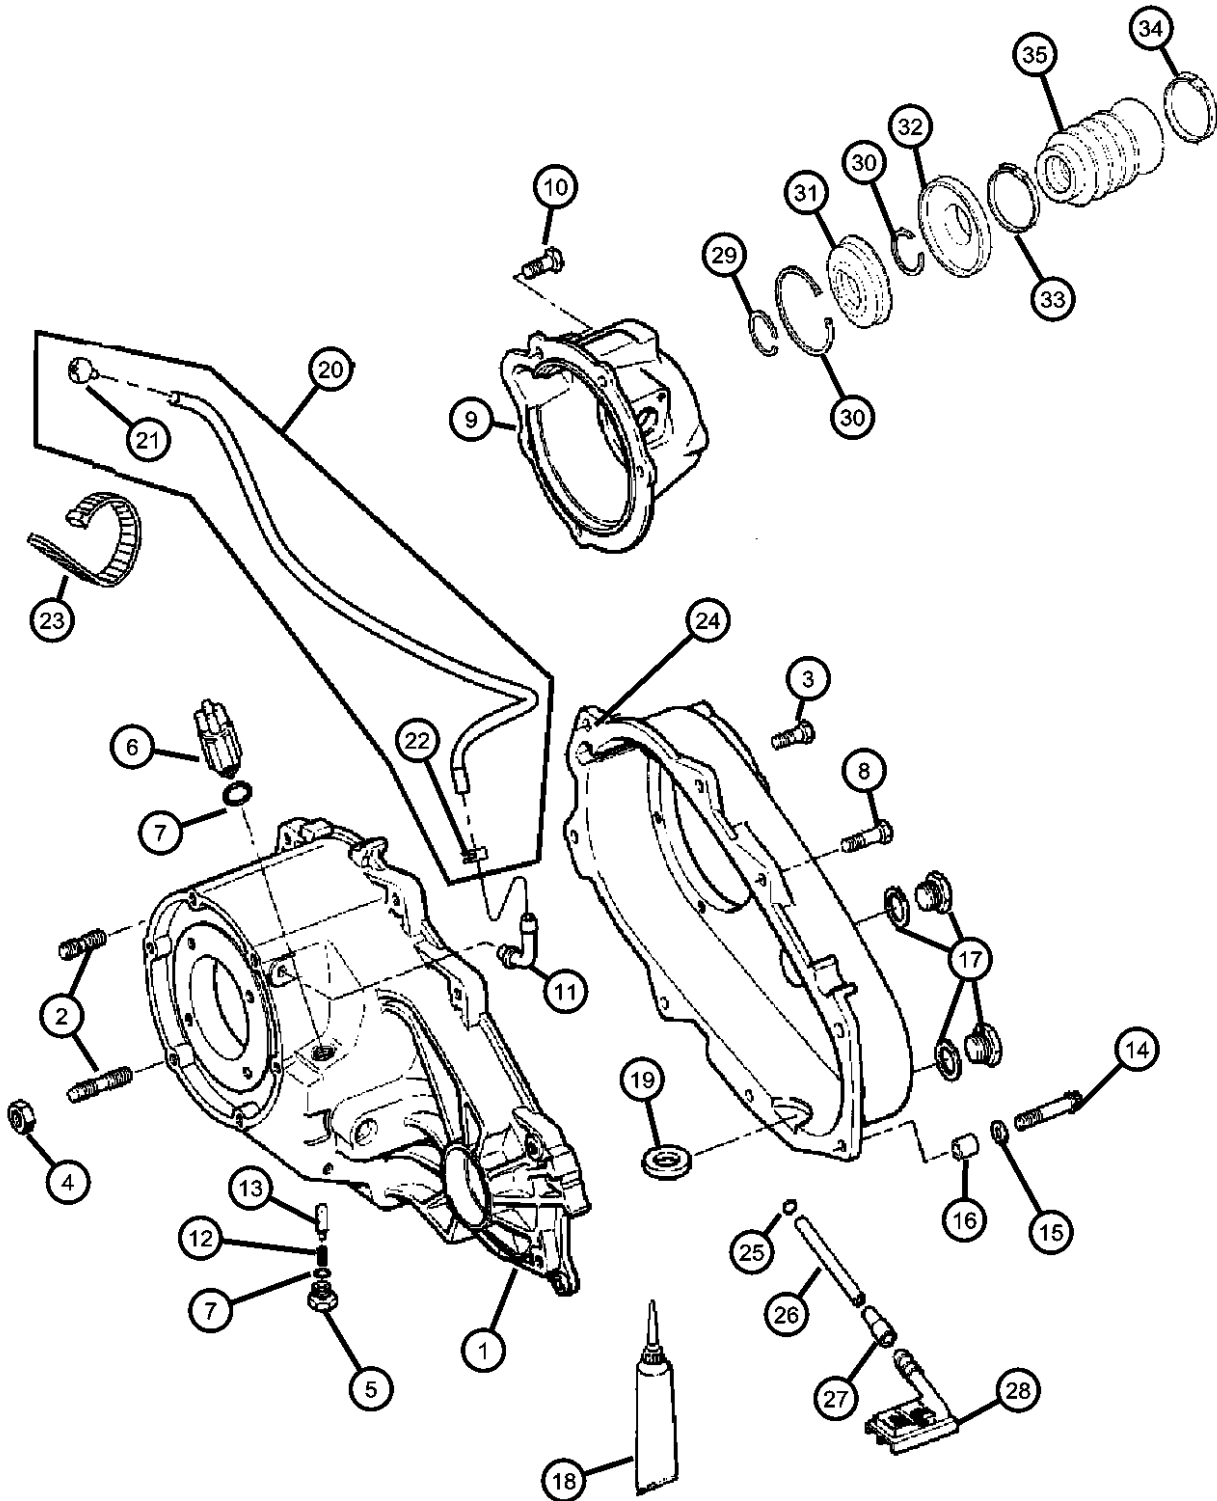

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
20	52105882AA	1	J, U						HOSE, Vent
21	04213328	1	J, U						VENT, Cap
22	06502081	1	J, U						CLAMP, Oil Cooler Line
23	05073039AA	1	J, U						STRAP, Tie
24	04886222AA	1	J, U			ED0, EK0, EN0			CASE, Transfer Rear
25	04338942	1	J, U			ED0, EK0, EN0			SEAL, Oil
26	04338941	1	J, U			ED0, EK0, EN0			TUBE, Oil Pickup
27	04338944	1	J, U			ED0, EK0, EN0			CONNECTOR, Oil Tube Pickup
28	04338943	1	J, U			ED0, EK0, EN0			FILTER, Transfer Case Oil
29	05072306AB	1	J, U			ED0, EK0, EN0			SNAP RING
30	05072306AB	1	J, U			ED0, EK0, EN0			SNAP RING
31	05072307AA	1	J, U			ED0, EK0, EN0			SEAL, Output Shaft
32	05072308AA	1	J, U			ED0, EK0, EN0			SLINGER, Transfer Case Flange
33	05072310AA	1	J, U			ED0, EK0, EN0			CLAMP, Boot
34	05072311AA	1	J, U			ED0, EK0, EN0			CLAMP, Boot
35	05072329AA	1	J, U			ED0, EK0, EN0			BOOT, Output Shaft, None

<b>LIBERTY (KJ)</b>		<b>BODY</b>		<b>ENGINE</b>	<b>TRANSMISSION</b>
SERIES	LINE	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
P = Limited	J = LHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
M = Renegade	T = LHD (2WD)			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Gear Train Command Trac [DHN]  
Figure 231-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

NOTE: Sales Codes  
[ED0] = All 2.2,2.5,2.4L 4 Cylinder Gas Engines  
[EK0] = All 3.7L 6 Cylinder Gas Engines  
[EN0] = All 4/5 Turbo Diesel Engines

1	05072345AA	1	J, U			ED0, EK0, EN0			MAINSHAFT, Transfer Case
2	05019020AA	1	J, U			ED0, EK0, EN0			SEAL, Input Gear
3	04338973	1	J, U			ED0, EK0, EN0			EXTENSION, Transfer Case
4	04210603	1	J, U			ED0, EK0, EN0			SEAL, Main Shaft
5	04883596AA	1	J, U			ED0, EK0, EN0			PUMP, Transfer Case Oil
6	04883601AA	1	J, U			ED0, EK0, EN0			BEARING, Output Shaft
7	04883597AA	1	J, U			ED0, EK0, EN0			SNAP RING
8	83503507	1	J, U			ED0, EK0, EN0			BEARING, Input Shaft
9	04338909	1	J, U			ED0, EK0, EN0			RING
10	04796903AB	1	J, U			ED0, EK0, EN0			PLANETARY, Transfer Case
11	04338908	2	J, U			ED0, EK0, EN0			THRUST WASHER, Planetary Carrier
12	04338910	1	J, U			ED0, EK0, EN0			SNAP RING
13	04338933	1	J, U			ED0, EK0, EN0			SNAP RING
14	04741240	1	J, U			ED0, EK0, EN0			HUB, Synchronizer Mode
15	04796909	1	J, U			ED0, EK0, EN0			SLEEVE, Mode Synchronizer
16	04219065	1	J, U			ED0, EK0, EN0			SNAP RING, Annulus Gear
17	04797013	1	J, U			ED0, EK0, EN0			SLEEVE, Range Fork
18	04796908	1	J, U			ED0, EK0, EN0			SPROCKET, Transfer Case
19	03821558	1	J, U			ED0, EK0, EN0			SNAP RING

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


Gear Train Command Trac [DHN]  
Figure 231-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
20									GEAR, Input
	04798113	1	J, U			ED0, EK0, EN0			
	04897953AA	1	J, U			ED0, EK0, EN0			52099421ag
21	04269189	1	J, U			ED0, EK0, EN0			BEARING, Output Shaft
22	04338935	1	J, U			ED0, EK0, EN0			CHAIN, Transfer Case
23	05072324AA	1	J, U			ED0, EK0, EN0			OUTPUT SHAFT, Transfer Case
24	04883601AA	1	J, U			ED0, EK0, EN0			BEARING, Output Shaft
25	04338892	1	J, U			ED0, EK0, EN0			BEARING
26	04338894	1	J, U			ED0, EK0, EN0			SNAP RING, Bearing
27	05015847AA	1	J, U			ED0, EK0, EN0			SEAL, Output Shaft
28	05019583AA	1	J, U			ED0, EK0, EN0			FLANGE, Driveshaft Yoke
29	04446487	1	J, U			ED0, EK0, EN0			WASHER, Flat
30	04446488	1	J, U			ED0, EK0, EN0			NUT, Hex Flange
31	06501371	9	J, U			ED0, EK0, EN0			BOLT, Retainer
32	04746155	1	J, U			ED0, EK0, EN0			BEARING, Input Gear

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Forks and Rails Command Trac [DHN]  
Figure 231-910

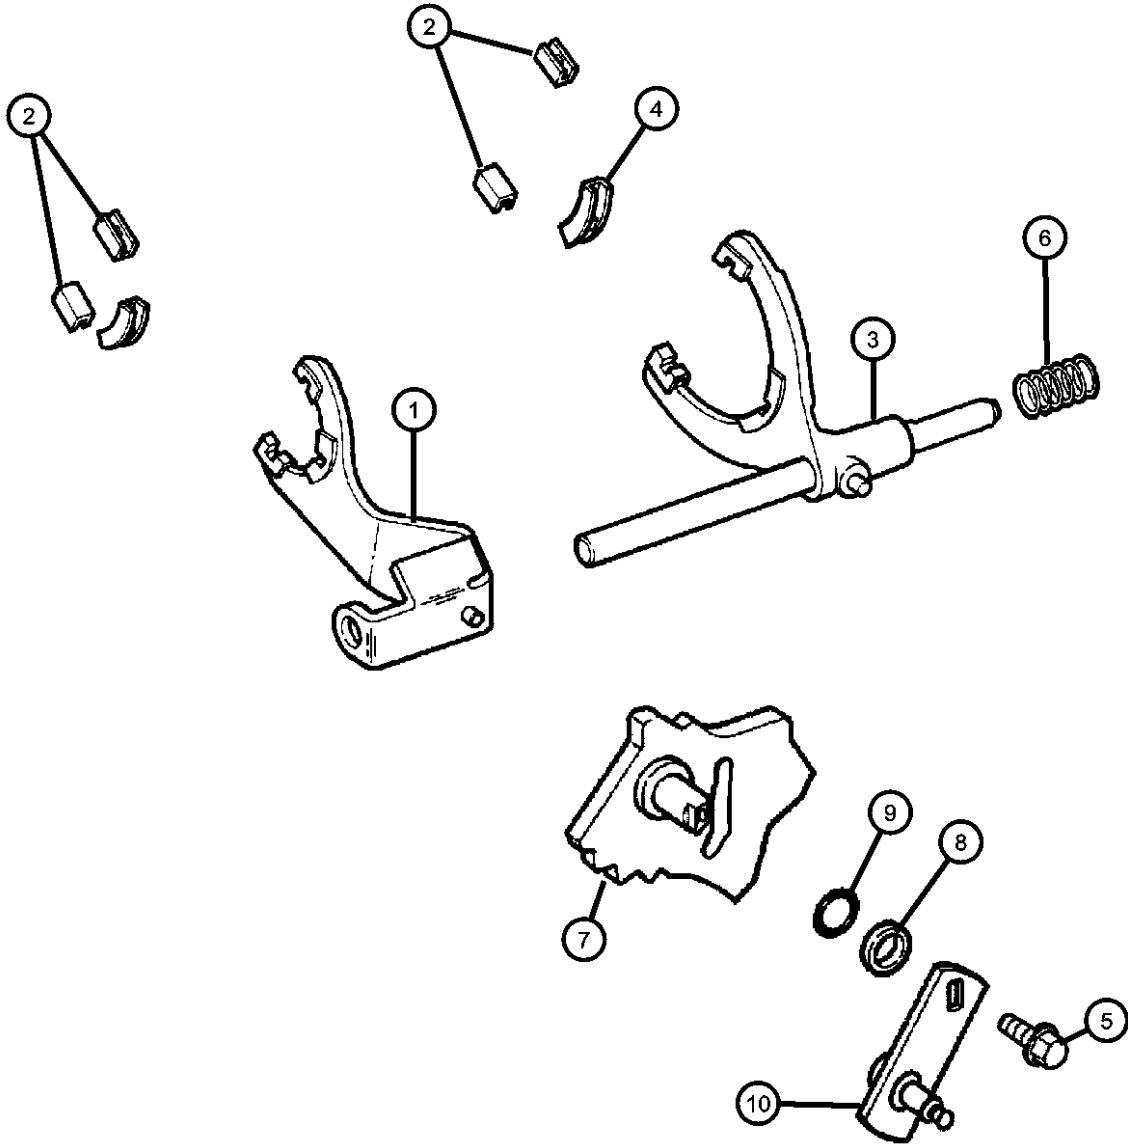

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes; Sales Codes									
[ED0] = All 2.2,2.5,2.4L 4 Cylinder Gas Engines									
[EK0] = All 3.7L 6 Cylinder Gas Engines									
[EN0] = All 4/5 Turbo Diesel Engines									
1	04798136	1	J, U			ED0, EK0, EN0			FORK, Range
2	04167969	2	J, U			ED0, EK0, EN0			PAD, Shift Fork
3	04741237	1	J, U			ED0, EK0, EN0			FORK, Transfer Case Mode Shift
4	04219073	1	J, U			ED0, EK0, EN0			PAD, Shift Fork
5	05014048AA	1	J, U			ED0, EK0, EN0			BOLT, Hex Head
6	04338925	1	J, U			ED0, EK0, EN0			SPRING, Mode Shift Rail
7	05072568AA	1	J, U			ED0, EK0, EN0			SECTOR, Transfer Case
8	05003442AA	1	J, U			ED0, EK0, EN0			BEARING, Shift Lever Linkage
9	05014046AA	1	J, U			ED0, EK0, EN0			SEAL, Sector Shaft
10	05072328AA	1	J, U			ED0, EK0, EN0			LEVER, Selector

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

Gearshift Controls  
Figure 231-1210

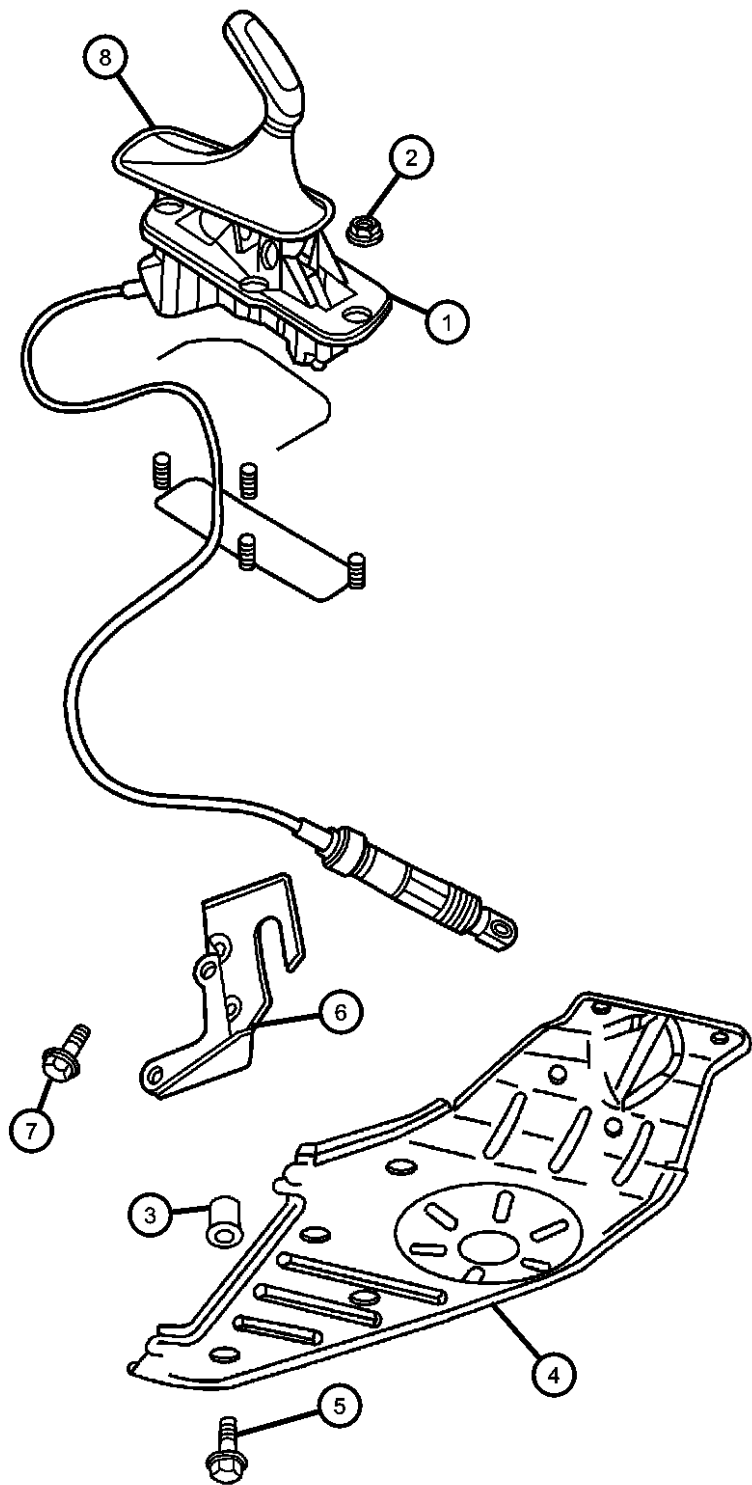


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE; Sales Codes [DBB] = All Manual Transmissions [DG0] = All Automatic Transmissions									
1									SHIFTER, Transfer Case
	52104308AD	1	J						
	52104309AD	1	U						
2	34201358	4							NUT AND WASHER, Hex Nut-Sealing Washer, M6 x 1.00
3	06506644AA	4	J, U						RIVET
4	52128649AA	1	J, U						PLATE, Transfer Case Skid
5	06506644AA	4	J, U						RIVET
6									BRACKET, Shifter
	52104389AB	1	J, U				DGQ		
	52104390AC	1	J, U				DBB		
	52109747AB	1	J, U				DG6		
7	06101752	3	J, U				DG0		SCREW AND WASHER, Hex Head, M10x1.5x28
8	52109709AB	1	J, U						BOOT, Gearshift
-9	68001899AA	1	J						BUSHING, Transfer case shifter

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Group - 242

Transfer Case Model 242 [DHP]

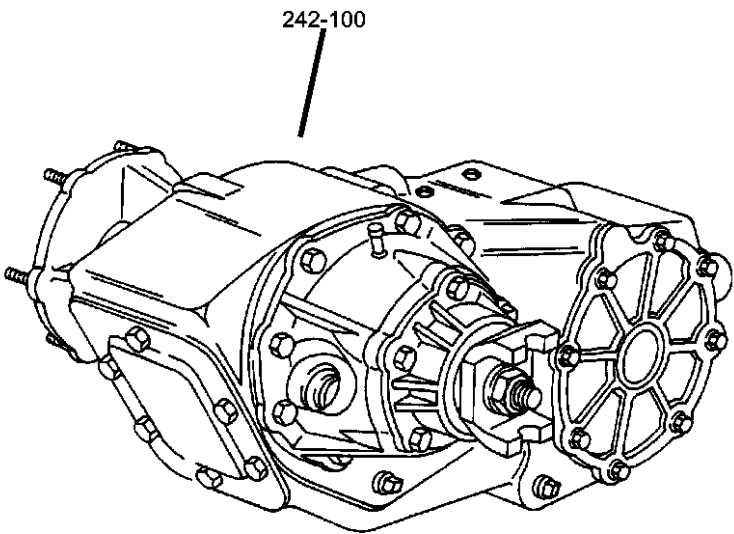


Group - 242 Transfer Case Model 242 [DHP]

Illustration Title	Group-Fig. No.
<b>Transfer Case Assembly</b>	
Transfer Case Select Trac [DHP] .....	Fig. 242 - 110
<b>Case and Related Parts</b>	
Case and Related Parts Select Trac [DHP] .....	Fig. 242 - 210
<b>Gear Train</b>	
Gear Train Select Trac [DHP] .....	Fig. 242 - 410
<b>Fork and Rails</b>	
Forks and Rails Select Trac [DHP] .....	Fig. 242 - 910
<b>Gearshift Controls</b>	
Gearshift Controls .....	Fig. 242 - 1210

<div><div>242-100</div><div>Transfer Case Assembly</div><div></div></div>	<div><div>242-1200</div><div>Gearshift Controls</div><div></div></div>	<div><div>242-200</div><div>Case and Related Parts</div><div></div></div>	<div><div>242-400</div><div>Gear Train</div><div></div></div>
<div><div>242-900</div><div>Fork and Rails</div><div></div></div>			


Transfer Case Select Trac [DHP]  
Figure 242-110

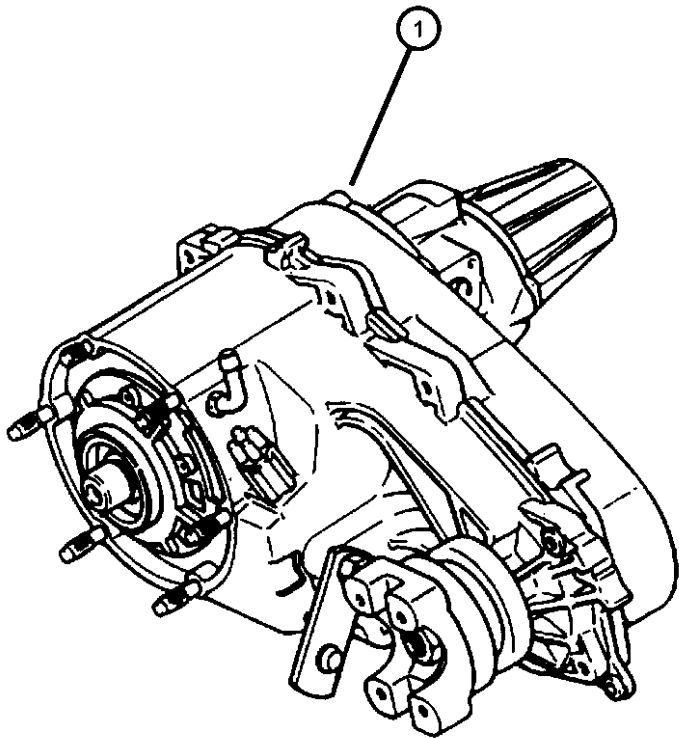

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes: Sales Code ED0=All 2.2,2.4,2.5,L 4Cylinder Gas Engines EK0=All 3.7L Gas Engines EN0=All 4/5 Cylinber Turbo Diesel Engines									
1									TRANSFER CASE, NP242
	52111022AH	1	J, U			ED0, EK0			
	52853123AB	1	J, U			EN0			

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Case and Related Parts Select Trac [DHP]  
Figure 242-210

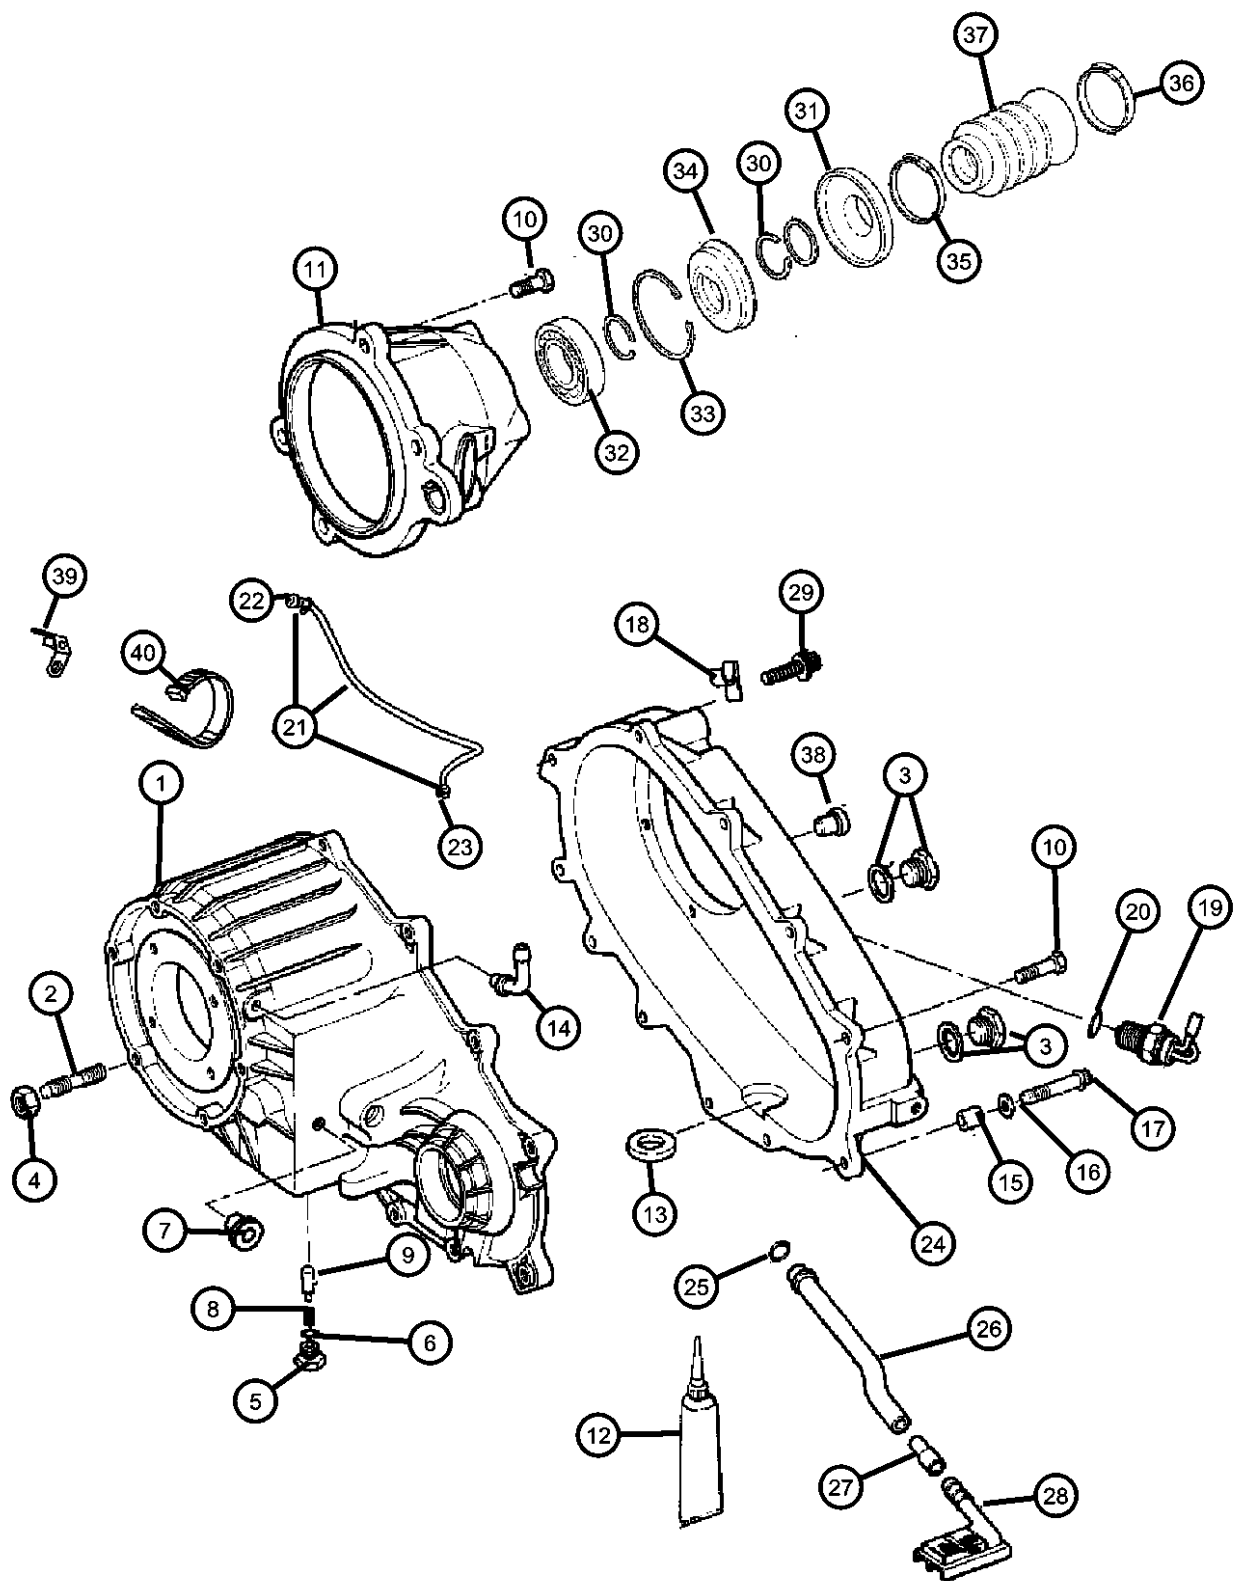

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Notes: Sales Code  
ED0=All 2.2,2.4,2.5,L 4Cylinder Gas Engines  
EK0=All 3.7L Gas Engines  
EN0=All 4/5 Cylinber Turbo Diesel Engines

1									CASE, Transfer Front
	05072315AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
2									STUD, Tranmission Case
	04167922	6	J, U			ED0, EK0			
		6	J, U			EN0			
3									PLUG, Oil Fill
	04856641	2	J, U			ED0, EK0			
		2	J, U			EN0			
4	J4006681	6	J, U						NUT AND CONED WASHER, Hex, .375-24
5									SCREW
	04886473AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
6									SEAL, Vacuum Switch
	04338956	1	J, U			ED0, EK0			
		1	J, U			EN0			
7									PLUG
	00015105	1	J, U			ED0, EK0			
		1	J, U			EN0			
8									SPRING, Poppet Plunger
	05003445AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
9									PLUNGER
	05003444AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
10									BOLT, Transfer Case
	04210617	8	J, U			ED0, EK0			

LIBERTY (KJ)

SERIES

P = Limited  
H = Sport  
M = Renegade

LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EK0 = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EK0 = All 3.7L  
ED0 = All 2.4L

TRANSMISSION


DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ



Case and Related Parts Select Trac [DHP]  
Figure 242-210

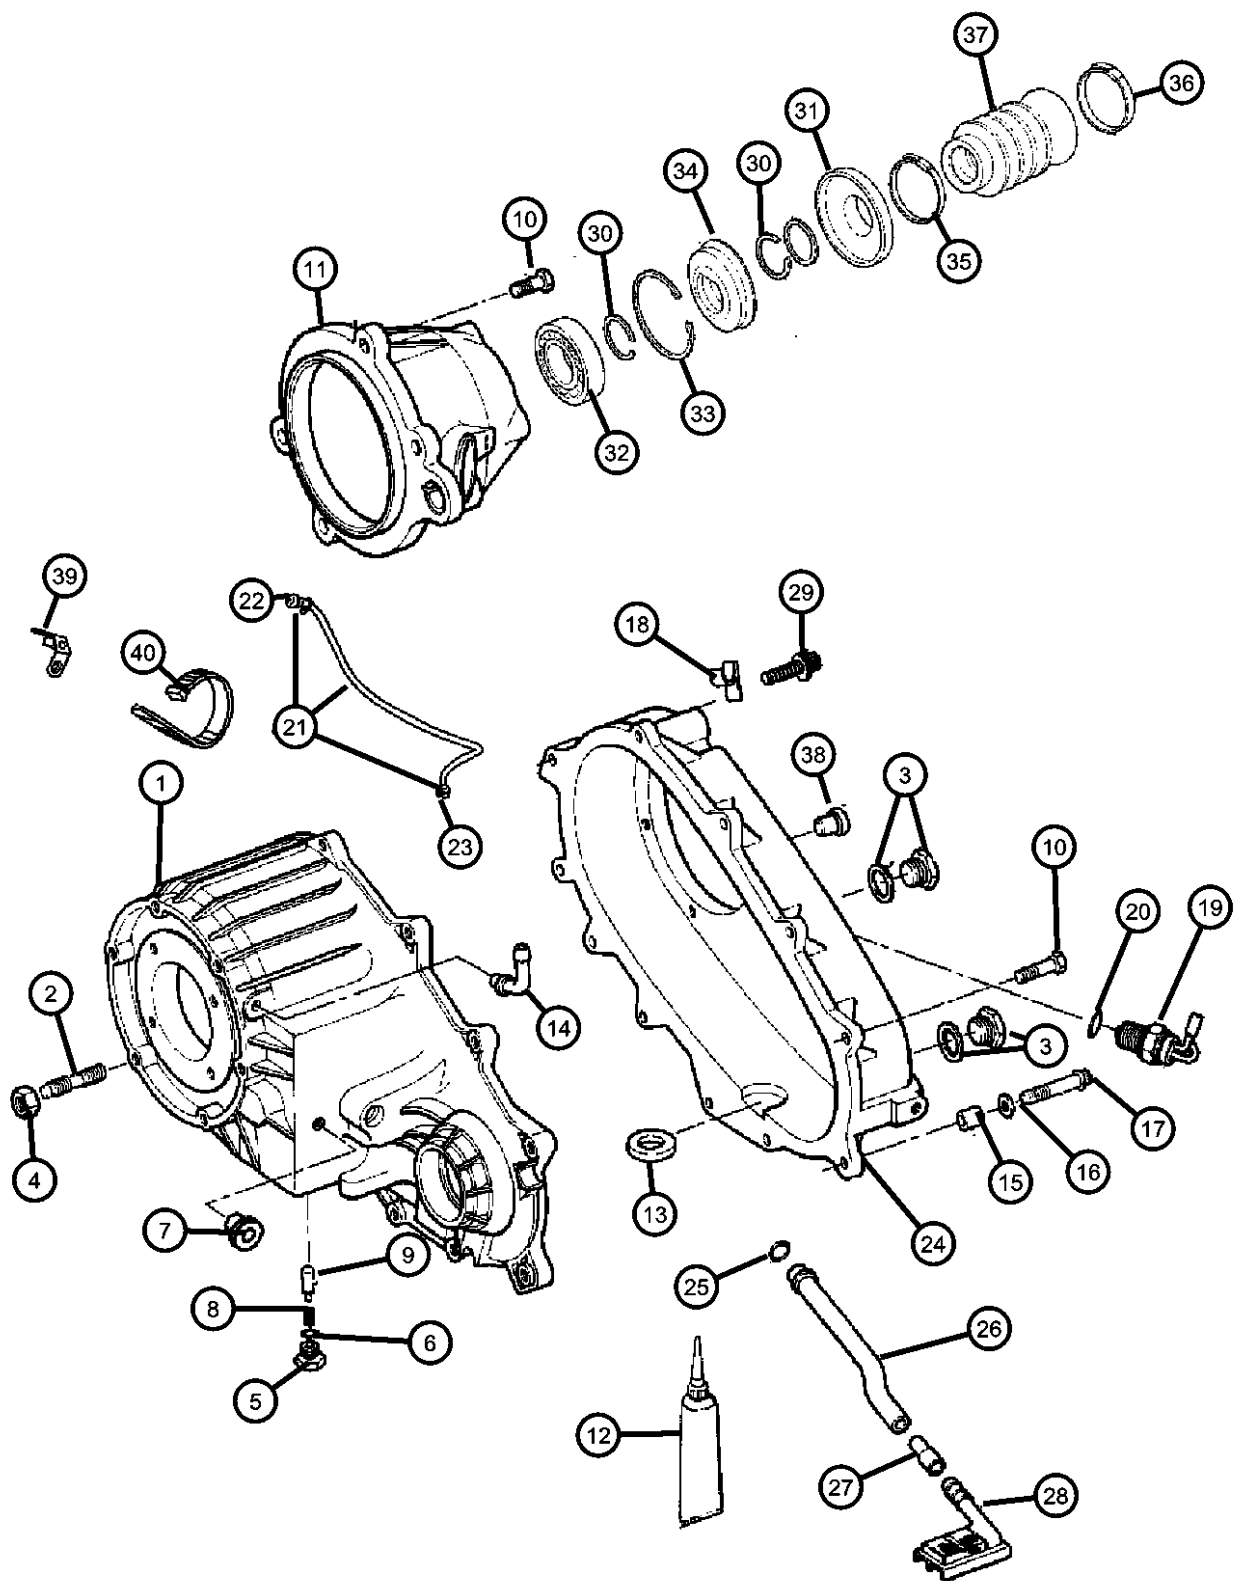


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
11		8	J, U			EN0			RETAINER, Transfer Case Rear
	05072305AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
12									SEALANT, RTV
	05010884AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
13									MAGNET, Transmission
	03681601	1	J, U			ED0, EK0			
		1	J, U			EN0			
14									VENT, Transfer Case
	04796910	1	J, U			ED0, EK0			
		1	J, U			EN0			
15									DOWEL, Transfer Case
	04116310	2	J, U			ED0, EK0			
		2	J, U			EN0			
16									WASHER, Flat
	04210983	2	J, U			ED0, EK0			
		2	J, U			EN0			
17									BOLT, Hex Flange Head
	04210614	6	J, U			ED0, EK0			
		6	J, U			EN0			
18	52118181	1				ED0			CLIP
19									SWITCH, Transfer Case, 5 Position
	05083138AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
20									SEAL, Vacuum Switch
	04338956	1	J, U			ED0, EK0			
		1	J, U			EN0			
21	52105882AA	1	J, U						HOSE, Vent

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16v	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Case and Related Parts Select Trac [DHP]  
Figure 242-210

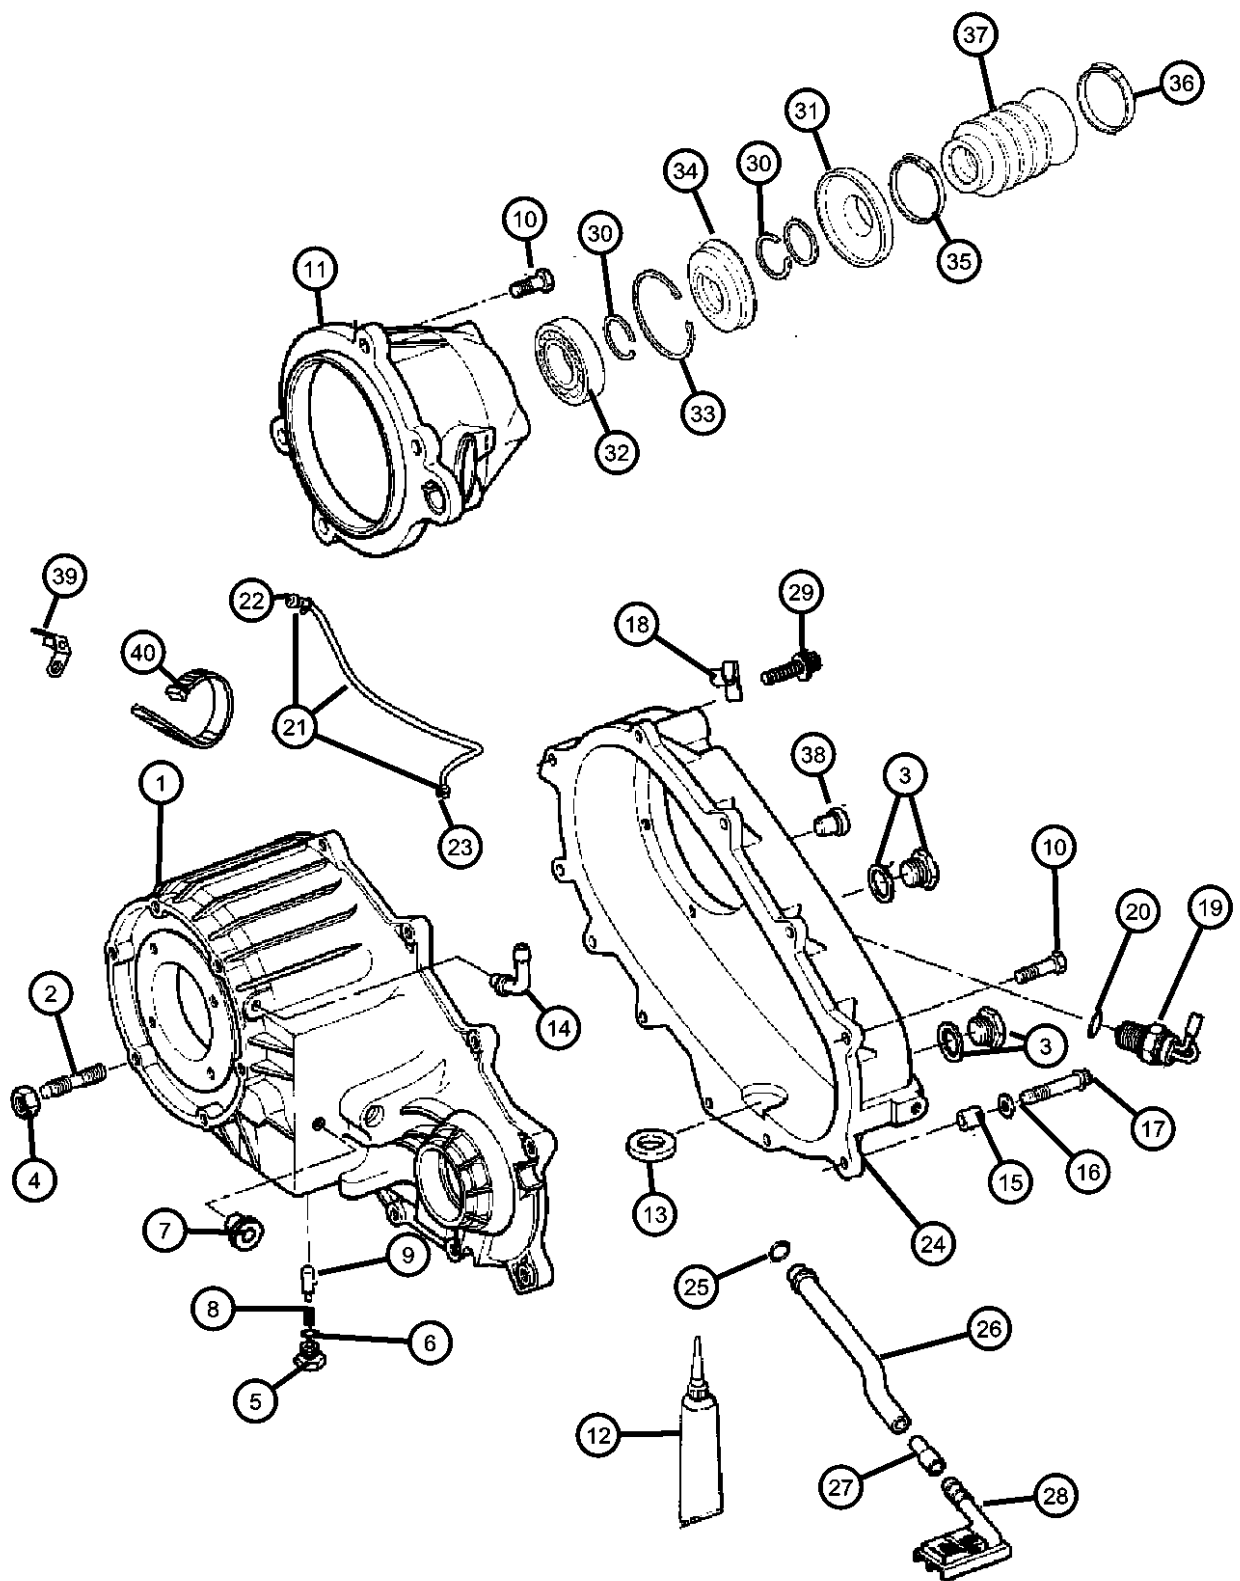


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
22	04213328	1	J, U						VENT, Cap
23	06502081	1	J, U						CLAMP, Oil Cooler Line
24									CASE, Transfer Rear
	05013858AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
25									SEAL, Oil
	04338942	1	J, U			ED0, EK0			
		1	J, U			EN0			
26									TUBE, Oil Pickup
	05003455AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
27									CONNECTOR, Oil Tube Pickup
	04338944	1	J, U			ED0, EK0			
		1	J, U			EN0			
28									FILTER, Transfer Case Oil
	04338943	1	J, U			ED0, EK0			
		1	J, U			EN0			
29									BOLT, Twelve Point Head, M10x1.5x48
	J8130979	1	J, U			ED0, EK0			
		1	J, U			EN0			
30									SNAP RING
	04883597AA	2	J, U			ED0, EK0			
		2	J, U			EN0			
31									SLINGER, Transfer Case Flange
	05072308AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
32									BEARING, Output Shaft
	02466224	1	J, U			EN0			
	04883601AA	1	J, U			ED0, EK0			

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Case and Related Parts Select Trac [DHP]  
Figure 242-210

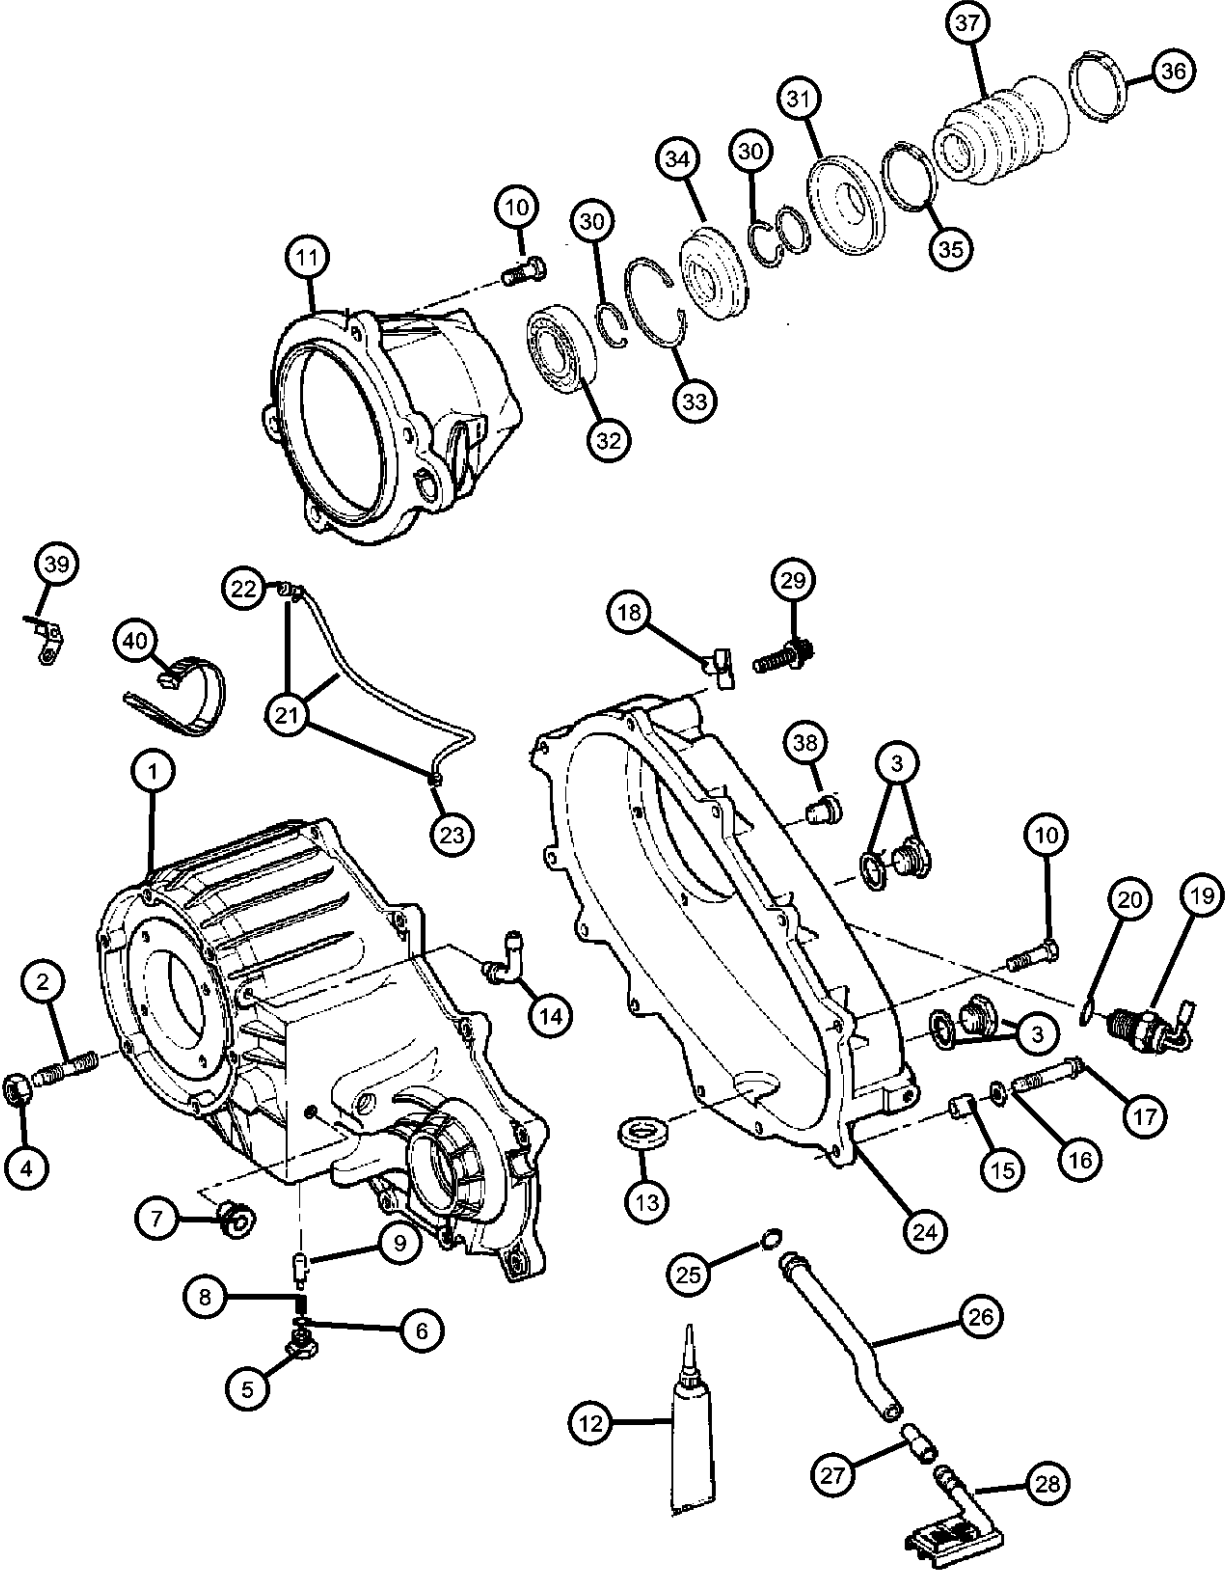

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
33	05072306AB	1	J, U			ED0, EK0			SNAP RING
		1	J, U			EN0			
34	05072307AA	1	J, U			ED0, EK0			SEAL, Output Shaft
		1	J, U			EN0			
35	05072310AA	1	J, U			ED0, EK0			CLAMP, Boot
		1	J, U			EN0			
36	05072311AA	1	J, U			ED0, EK0			CLAMP, Boot
		1	J, U			EN0			
37	05072329AB	1	J, U			ED0, EK0			BOOT, Output Shaft, None
		1	J, U			EN0			
38	04638953	1	J, U			ED0, EK0			DOWEL
		1	J, U			EN0			
39	56041823AB	2				EK0	DBB		BRACKET, Oxygen Sensor
40	05073039AA	1	J, U						STRAP, Tie

LIBERTY (KJ)

SERIES

P = Limited  
H = Sport  
M = Renegade

LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EK0 = All 3.7L  
ED0 = All 2.4L


TRANSMISSION

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Gear Train Select Trac [DHP]  
Figure 242-410

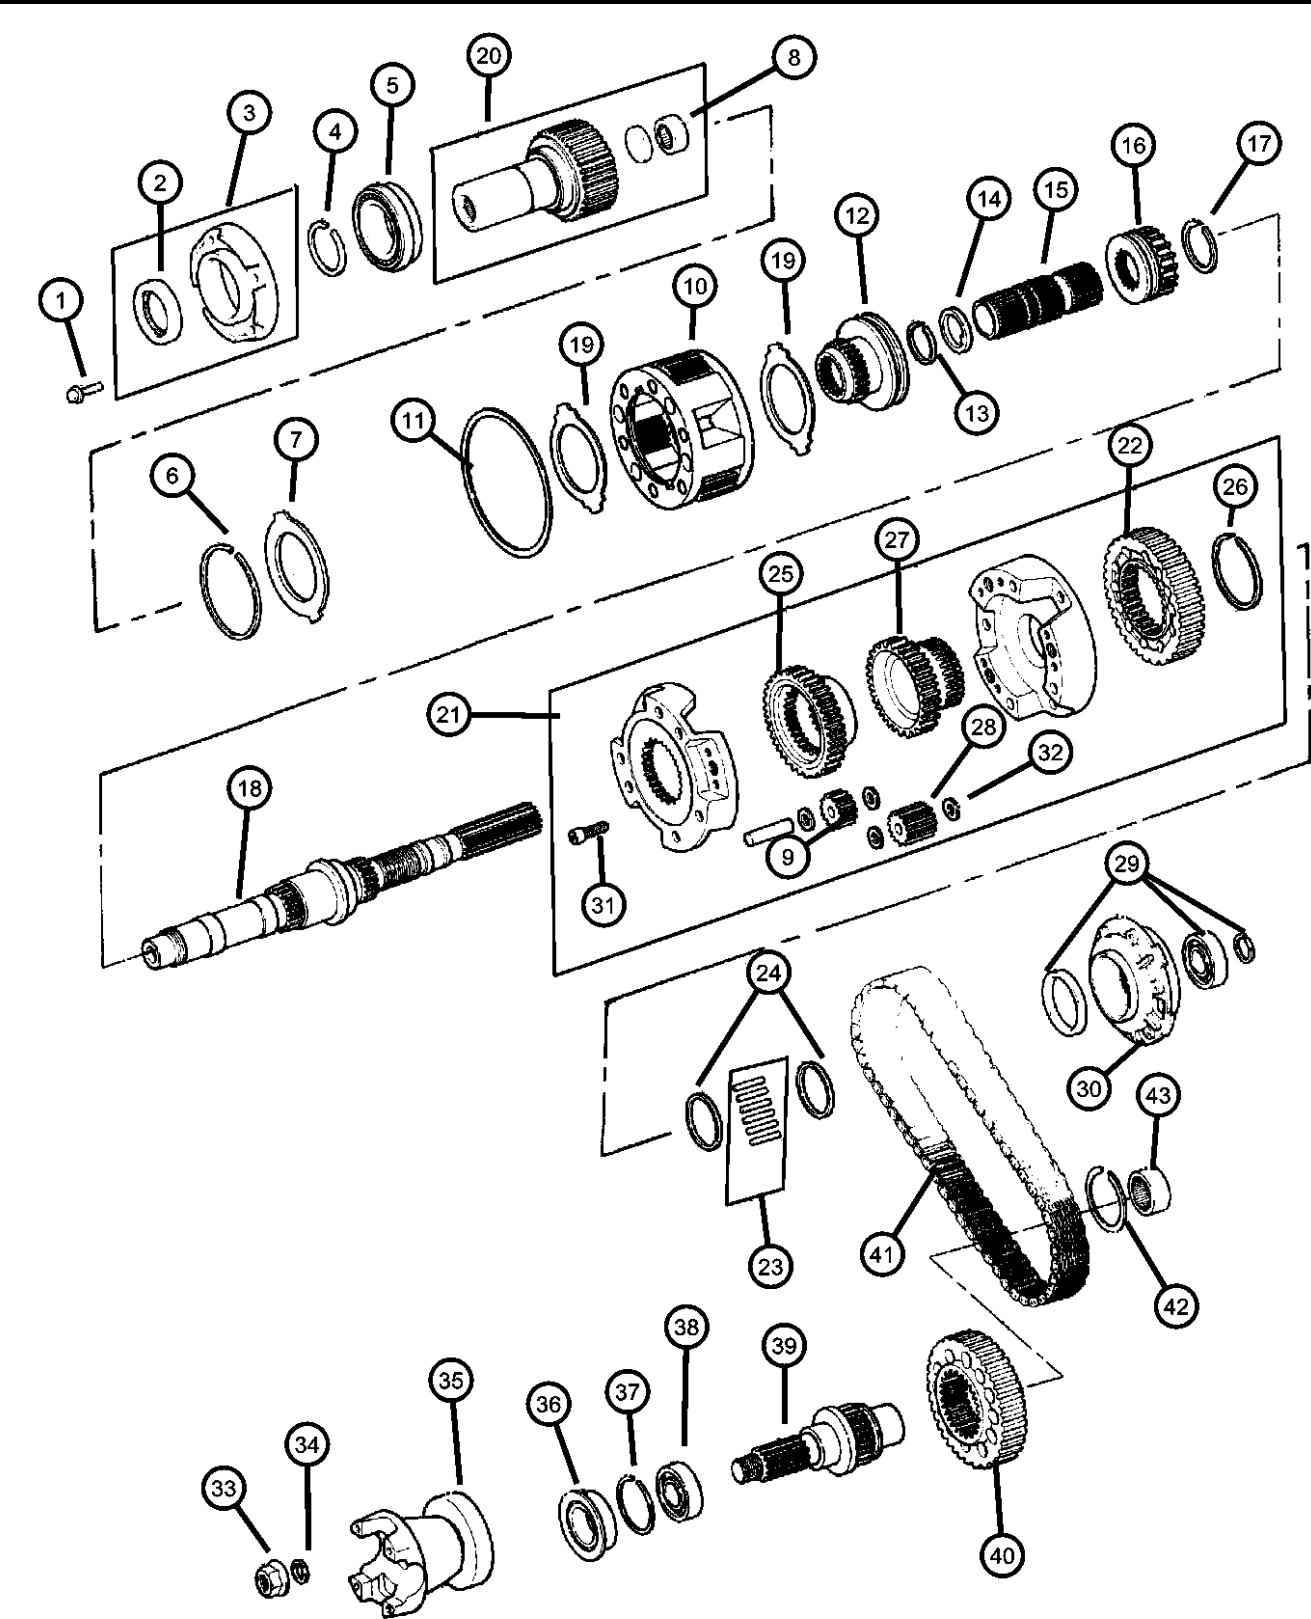

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Notes: Sales Code  
ED0=All 2.2,2.4,2.5,L 4Cylinder Gas Engines  
EK0=All 3.7L Gas Engines  
EN0=All 4/5 Cylinber Turbo Diesel Engines

1	06501371	4	J, U			ED0, EK0			BOLT, Retainer
		4	J, U			EN0			
2	05019020AA	1	J, U			ED0, EK0			SEAL, Input Gear
		1	J, U			EN0			
3	04338973	1	J, U			ED0, EK0			EXTENSION, Transfer Case
		1	J, U			EN0			
4	03821558	1	J, U			ED0, EK0			SNAP RING
		1	J, U			EN0			
5	04746155	1	J, U			ED0, EK0			BEARING, Input Gear
		1	J, U			EN0			
6	04338910	1	J, U			ED0, EK0			SNAP RING
		1	J, U			EN0			
7	04338909	1	J, U			ED0, EK0			RING
		1	J, U			EN0			
8	83503507	1	J, U			EN0			BEARING, Input Shaft
		1	J, U			ED0, EK0			
9	83504170	1	J, U			ED0, EK0			GEAR, Planetary
		1	J, U			EN0			

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Gear Train Select Trac [DHP]  
Figure 242-410

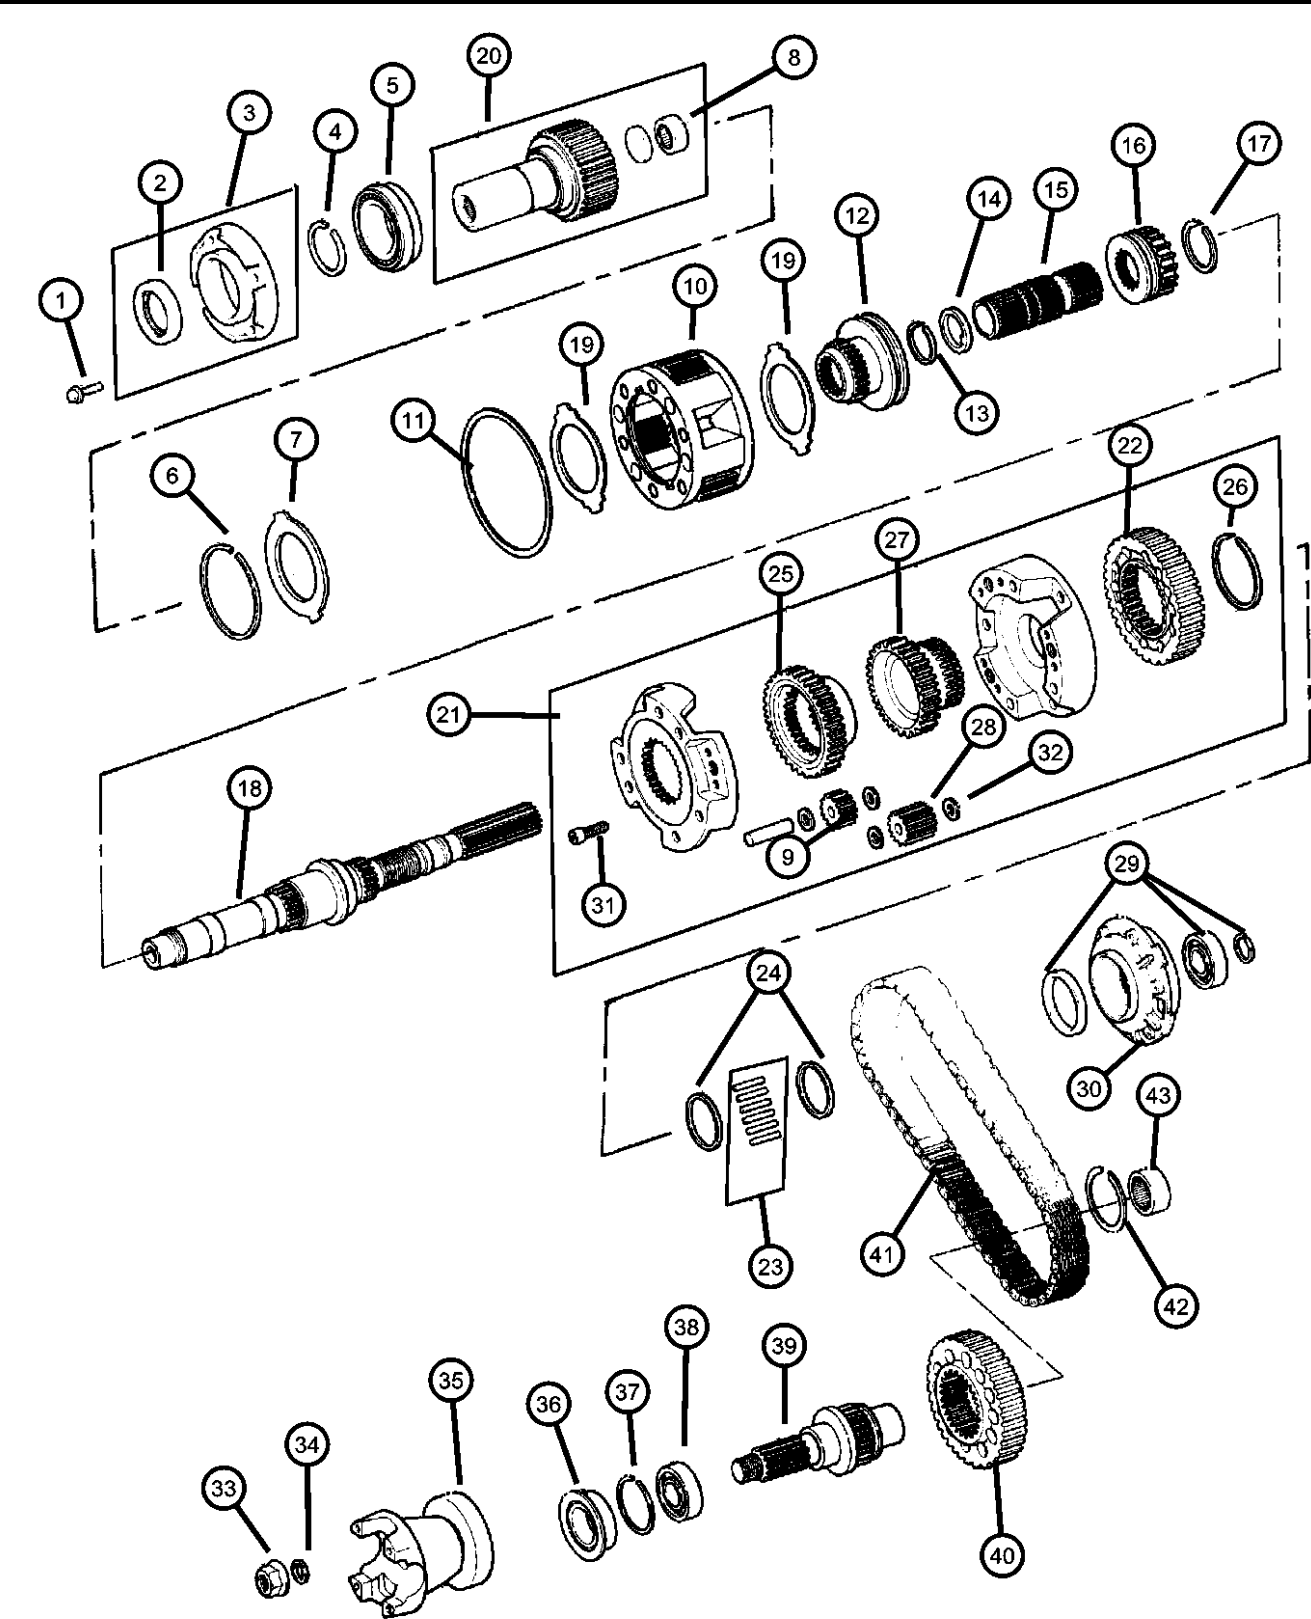


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10	04796903AB	1	J, U			ED0, EK0			PLANETARY, Transfer Case
		1	J, U			EN0			
11	04219065	1	J, U			ED0, EK0			SNAP RING, Annulus Gear
		1	J, U			EN0			
12	05003746AA	1	J, U			ED0, EK0			SLEEVE, Shift Range
		1	J, U			EN0			
13	83503540	1	J, U			EN0			SNAP RING
		1	J, U			ED0, EK0			
14	83503539	1	J, U			ED0, EK0			WASHER, Intermediate Sleeve
		1	J, U			EN0			
15	04798277	1	J, U			EK0, ED0			SHAFT, Intermediate
		1	J, U			EN0			
16	83503542	1	J, U			ED0, EK0			SLEEVE, Mode Synchronizer
		1	J, U			EN0			
17	83503537	1	J, U			ED0, EK0			SNAP RING
		1	J, U			EN0			
18	05072299AA	1	J, U			ED0, EK0			MAINSHAFT, Transfer Case
		1	J, U			EN0			
19	04338908	2	J, U			ED0, EK0			THRUST WASHER, Planetary Carrier

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16v	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Gear Train Select Trac [DHP]  
Figure 242-410

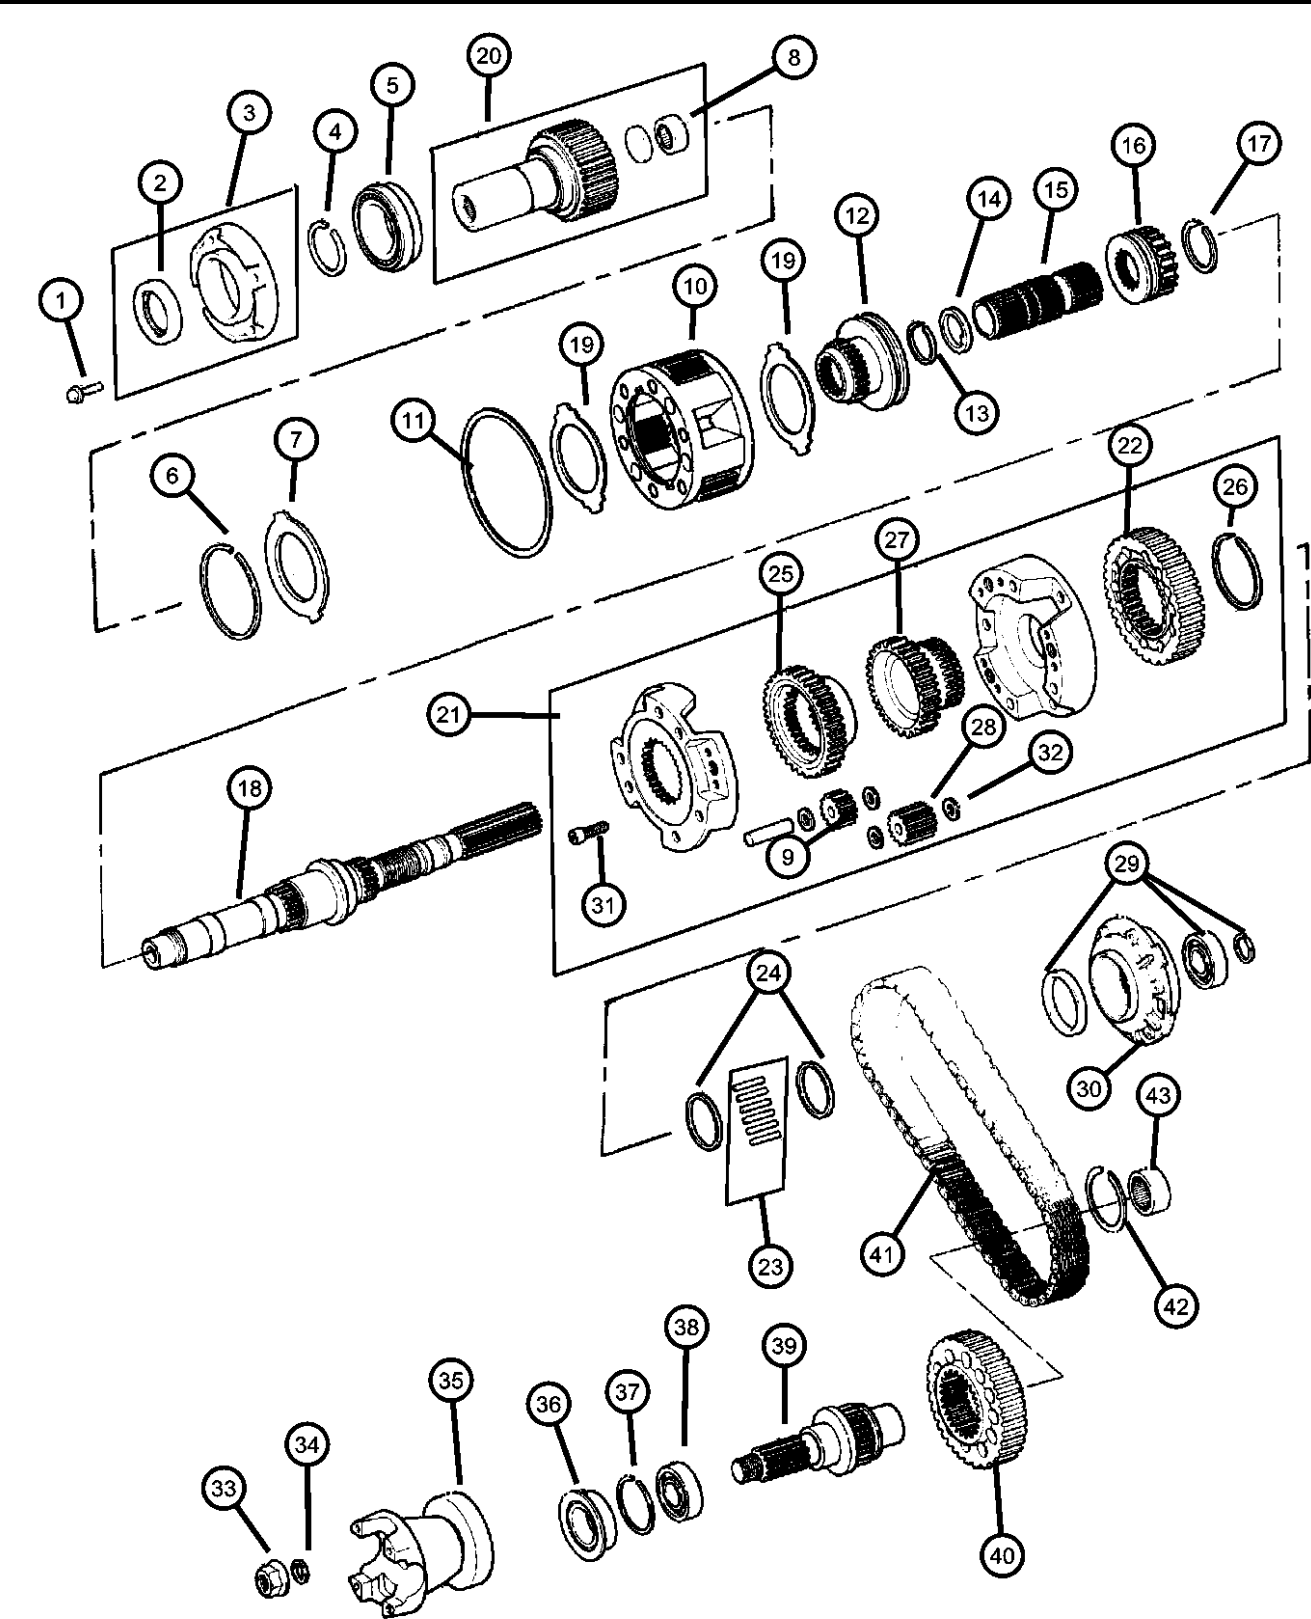


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
20		2	J, U			EN0			GEAR, Input
	05072298AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
21									DIFFERENTIAL, Transfer Case
	05072300AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
22									SPROCKET, Transfer Case
	05072301AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
23									NEEDLE BEARING, Roller Cage, None
	05066996AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
24									THRUST WASHER, Planetary Carrier
	04338908	2	J, U			ED0, EK0			
		2	J, U			EN0			
25									SPROCKET, Differential
	83503536	1	J, U			ED0, EK0			
		1	J, U			EN0			
26	83503532	1	J, U						SNAP RING
27									GEAR, Differential Drive
	05003450AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
28									GEAR, Planetary
	83504169	3	J, U			ED0, EK0			
		3	J, U			EN0			
29		3							SEAL, Main Shaft, (NOT REQUIRED)
30									PUMP, Transfer Case Oil

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Gear Train Select Trac [DHP]  
Figure 242-410

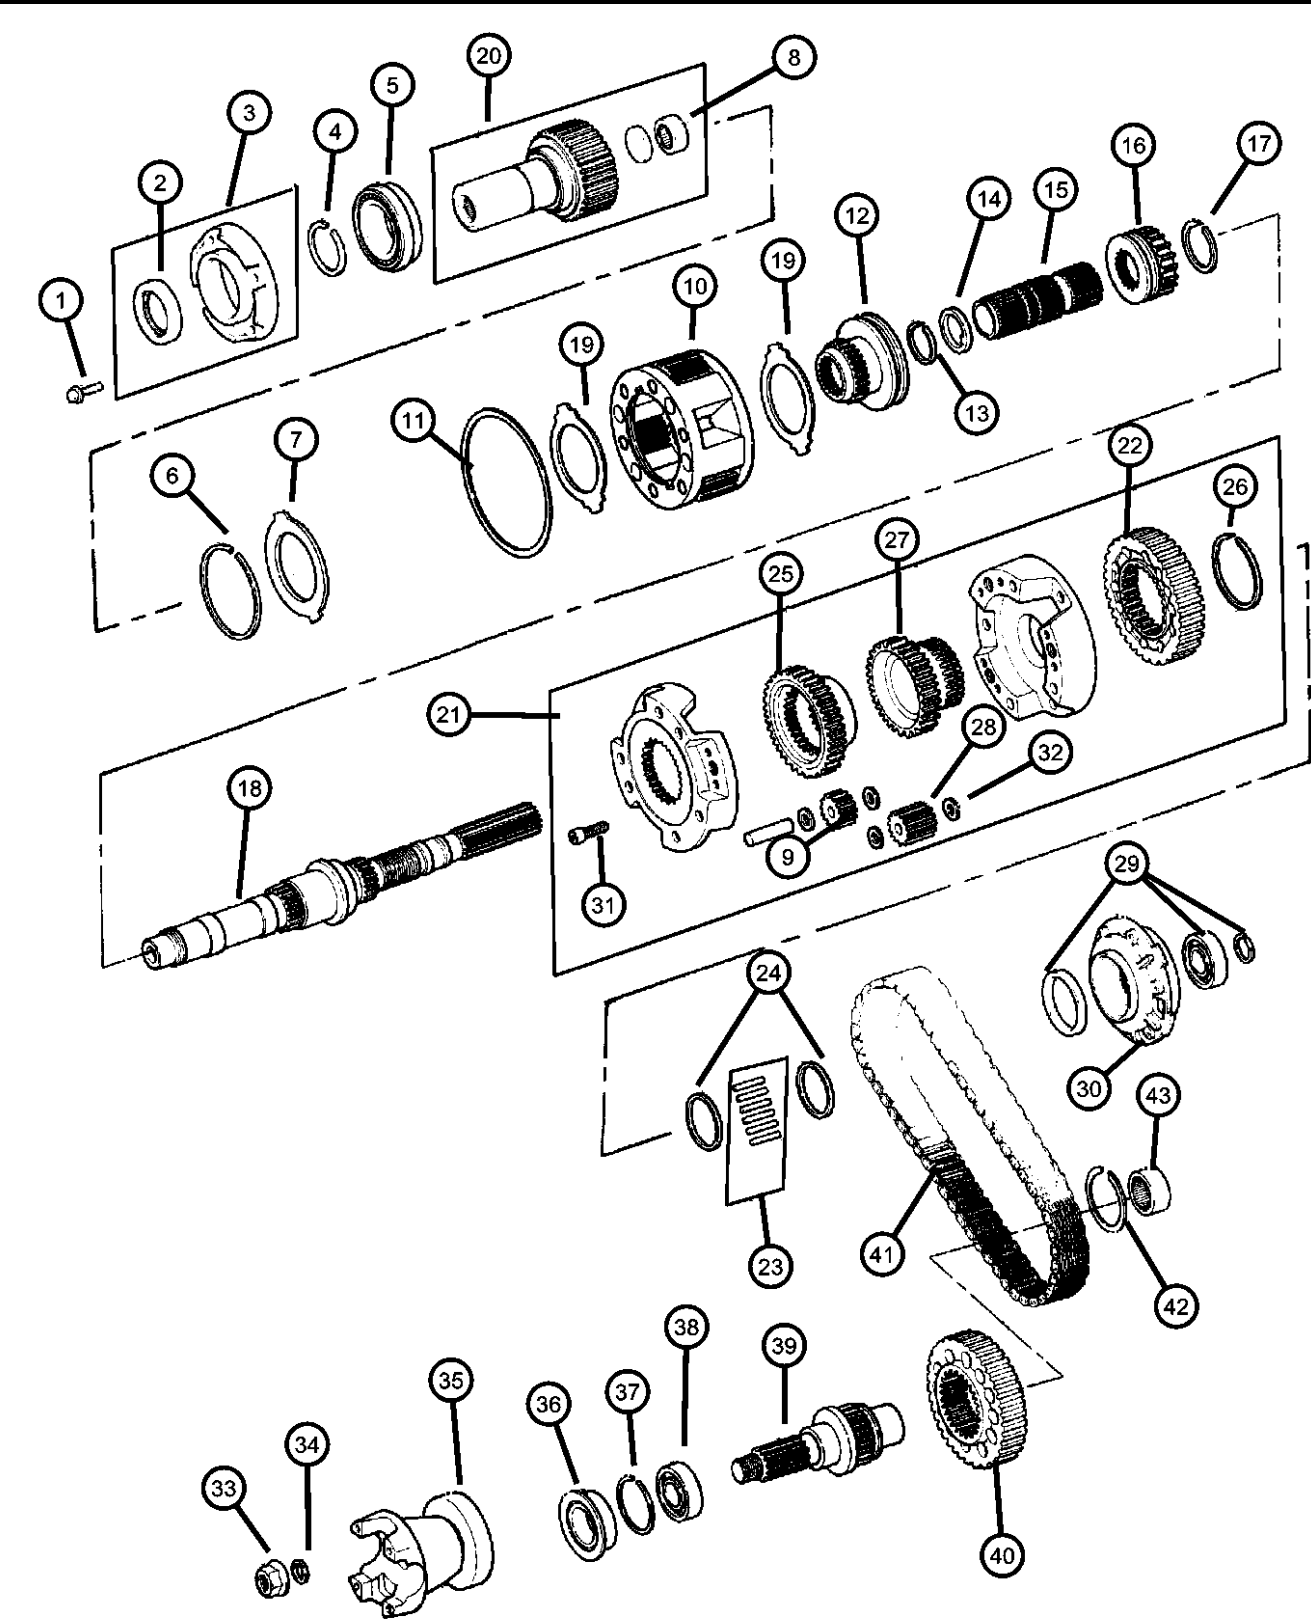


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
31	04883596AA	1	J, U			ED0, EK0			SCREW
		1	J, U			EN0			
32	03820898	1	J, U			ED0, EK0			WASHER, Differential Gear
		1	J, U			EN0			
33	83504168	12	J, U			EN0			NUT, Transfer Case Yoke
		12	J, U			ED0, EK0			
34	04167924	1	J, U			ED0, EK0			WASHER, Transfer Case Yoke
		1	J, U			EN0			
35	04210973	1	J, U			EN0			FLANGE, Driveshaft Yoke
		1	J, U			ED0, EK0			
36	05066927AA	1	J, U			ED0, EK0			SEAL, Output Shaft
	05103223AA	1	J, U			EN0			
37	04798125	1	J, U			ED0, EK0			SNAP RING
		1	J, U			EN0			
38	0089331A	1	J, U			ED0, EK0			BEARING, Output Shaft
		1	J, U			EN0			
39	04269189	1	J, U			ED0, EK0			OUTPUT SHAFT, Transfer Case
		1	J, U			EN0			
40	05012336AA	1	J, U			ED0, EK0			SPROCKET, Transfer Case
		1	J, U			EN0			

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Gear Train Select Trac [DHP]  
Figure 242-410

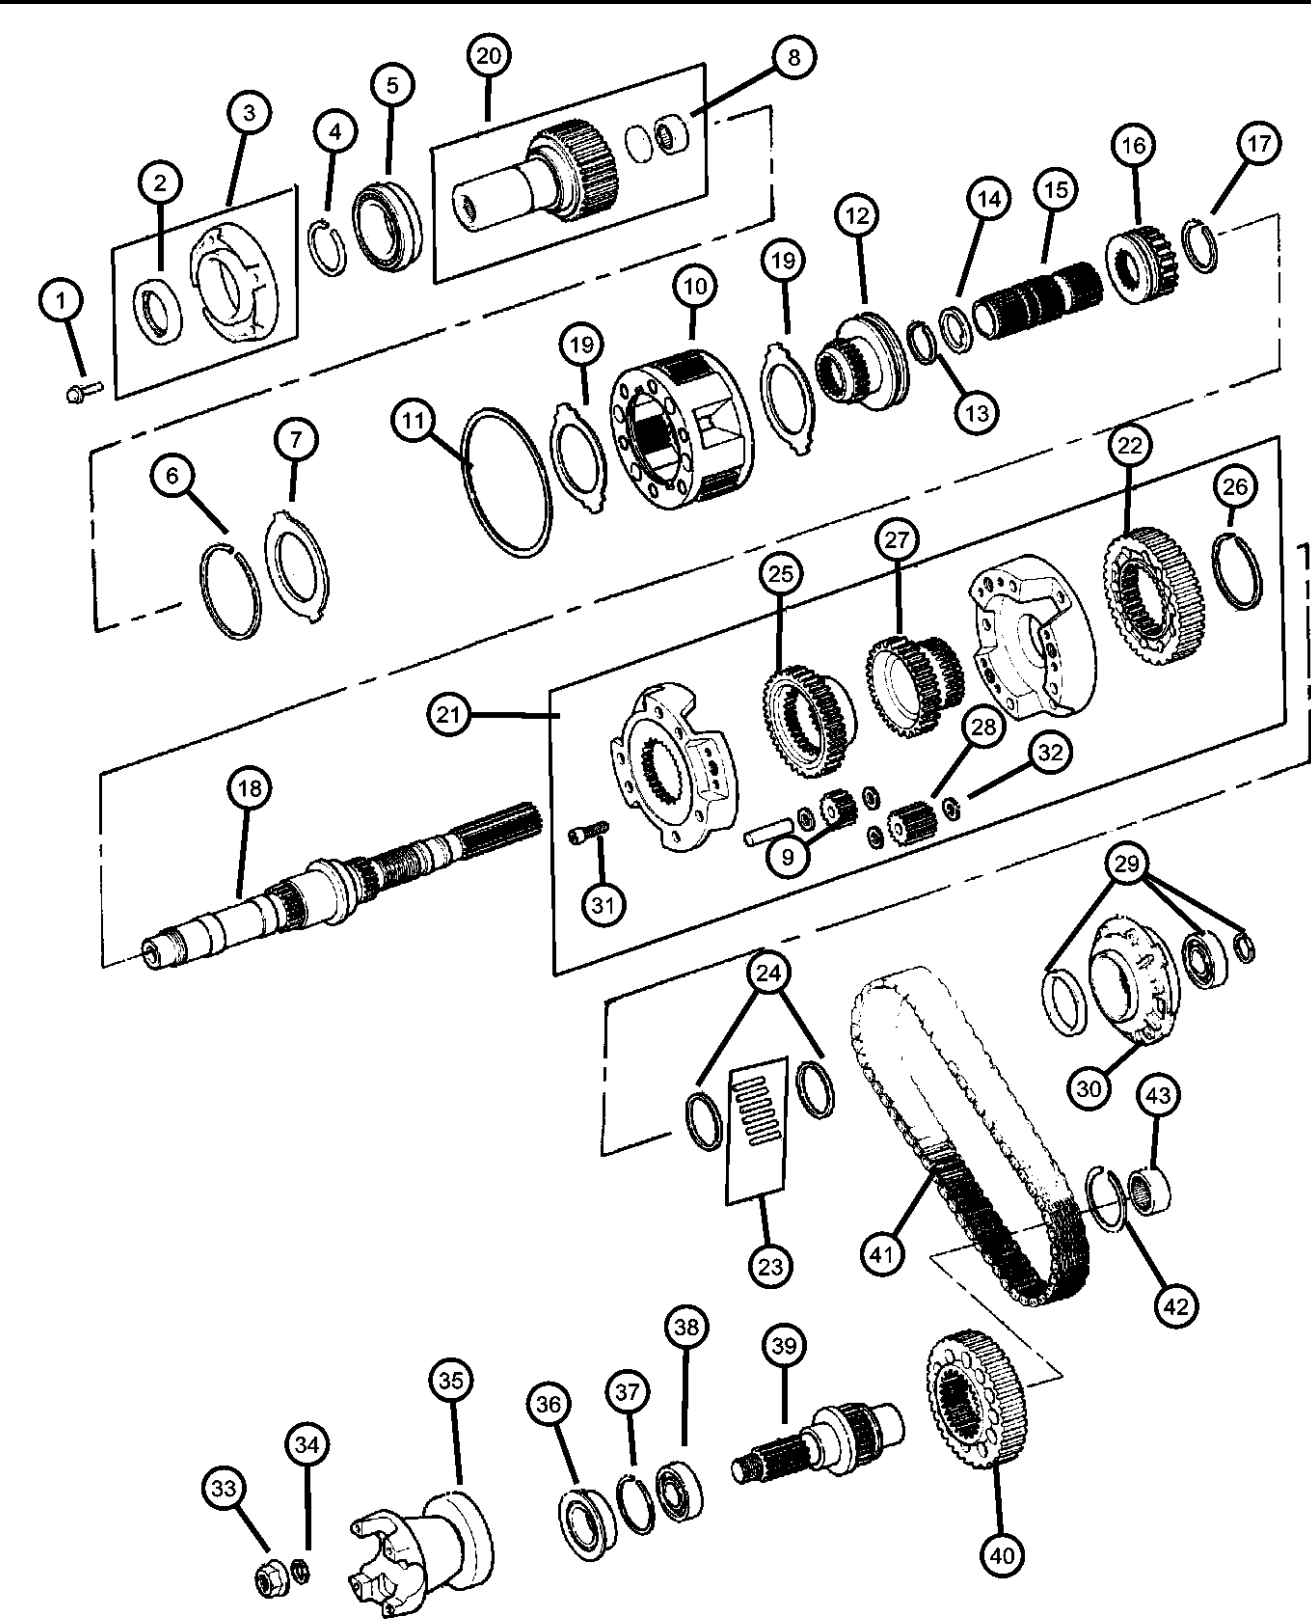


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
41	05072302AA	1	J, U			EN0			CHAIN, Transfer Case
		1	J, U			EK0, ED0			
42	05012322AB	1	J, U			ED0, EK0			SNAP RING, Bearing
		1	J, U			EN0			
43	04167991	1	J, U			ED0, EK0			BEARING, Output Shaft
		1	J, U			EN0			
	02466224	1	J, U			ED0, EK0			
		1	J, U			EN0			

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Forks and Rails Select Trac [DHP]  
Figure 242-910

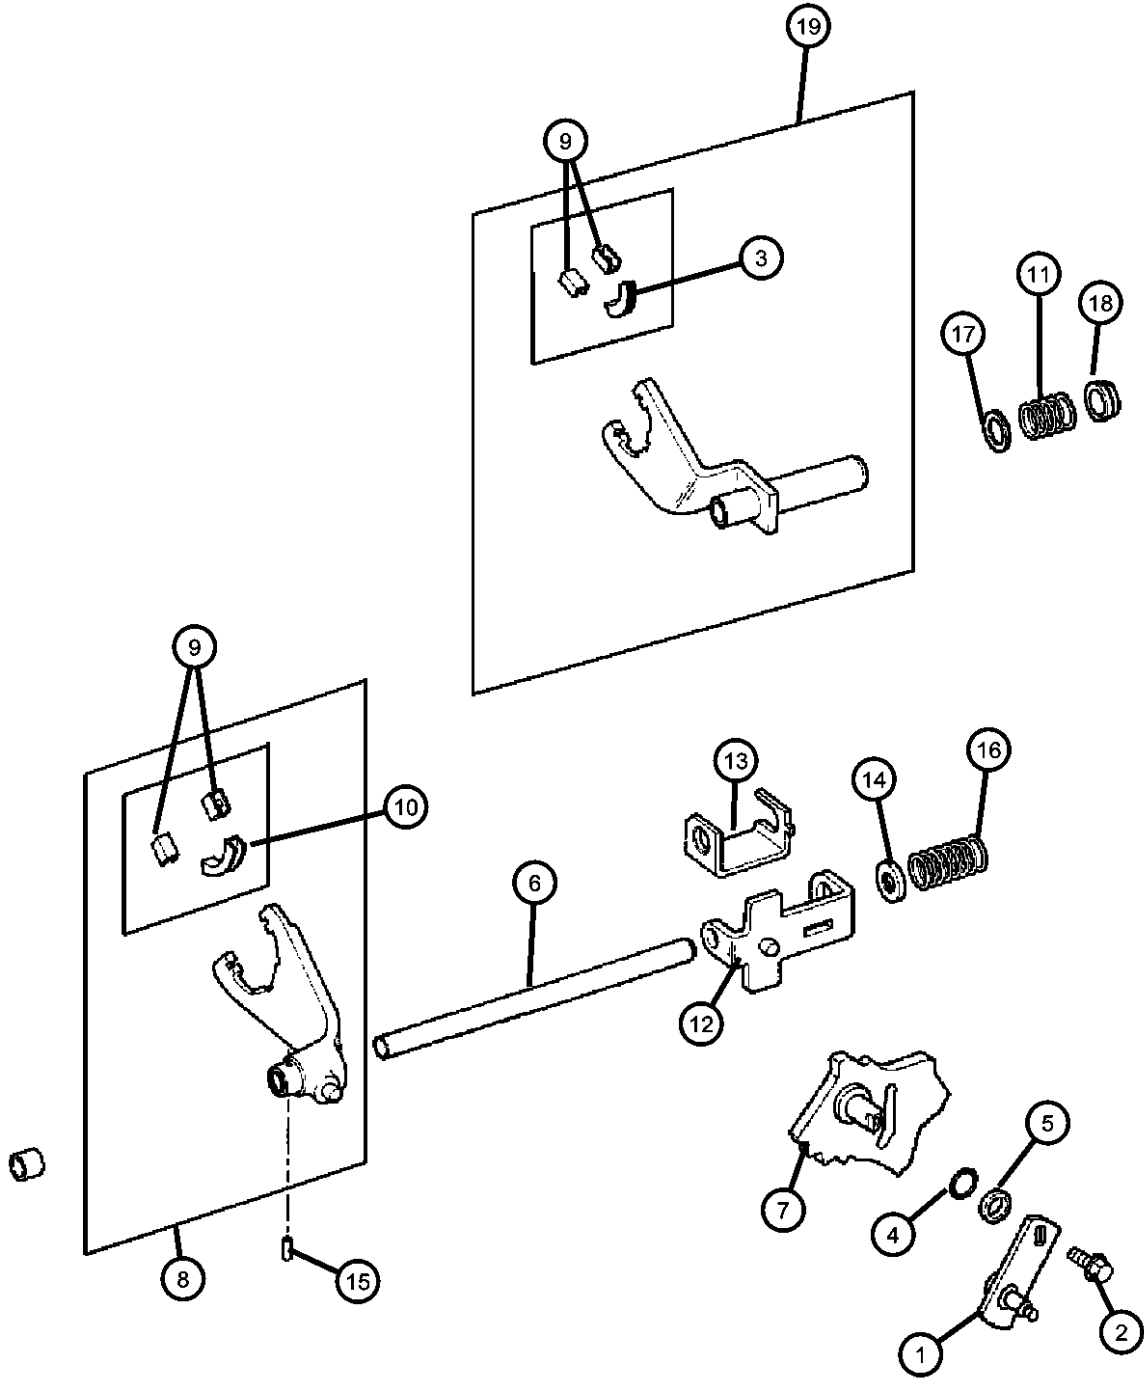

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Notes: Sales Code  
ED0=All 2.2,2.4,2.5,L 4Cylinder Gas Engines  
EK0=All 3.7L Gas Engines  
EN0=All 4/5 Cylinber Turbo Diesel Engines

1									LEVER, Transfer Case
	05072316AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
2									BOLT, Hex Head
	05014048AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
3									PAD, Shift Fork
	04338376	1	J, U			ED0, EK0			
		1	J, U			EN0			
4									SEAL, Sector Shaft
	05014046AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
5									BEARING, Shift Lever Linkage
	05003442AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
6									RAIL, Transfer Case
	83504469	1	J, U			ED0, EK0			
		1	J, U			EN0			
7									SECTOR, Transfer Case
	05072569AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
8									FORK, Range
	05003459AA	1	J, U			ED0, EK0			
		1	J, U			EN0			
9									PAD, Shift Fork
	04167969	2	J, U			ED0, EK0			From 9/10/02
		2	J, U			EN0			From 9/10/02

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16v	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Forks and Rails Select Trac [DHP]  
Figure 242-910

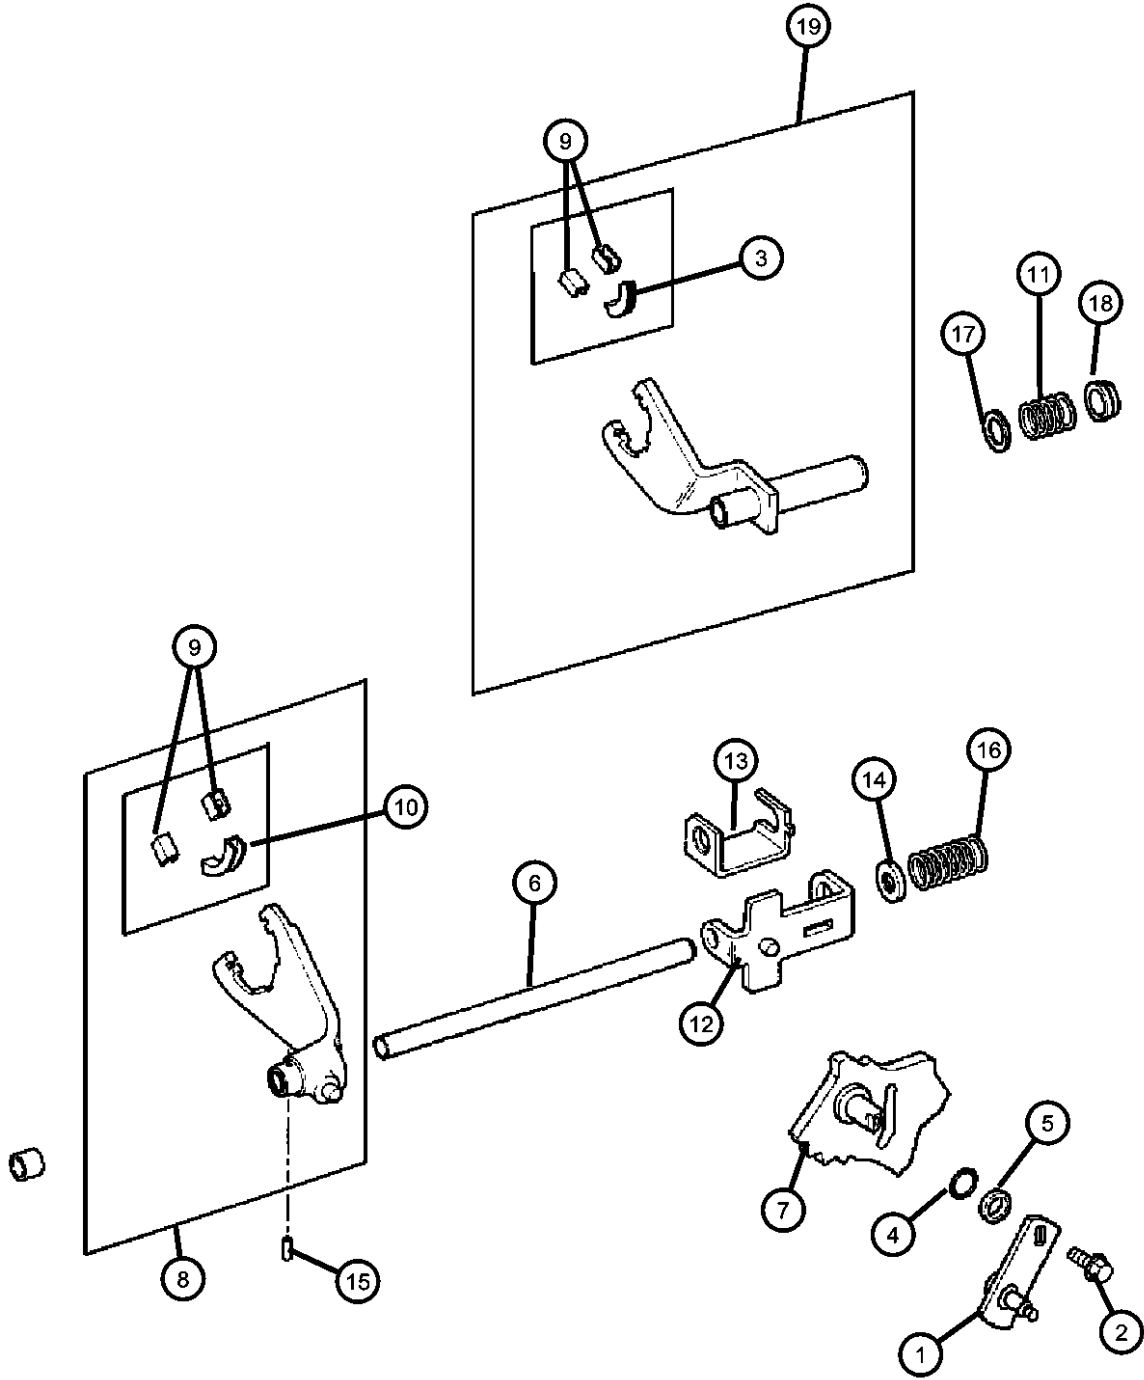


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10	04167970	1	J, U			ED0, EK0			PAD, Shift Fork
		1	J, U			EN0			
11	83503513	1	J, U			ED0, EK0			SPRING, Mode Shift Fork
		1	J, U			EN0			
12	83503510	1	J, U			ED0, EK0			BRACKET, Shift Mode
		1	J, U			EN0			
13	83503511	1	J, U			ED0, EK0			BRACKET, Shift Mode
		1	J, U			EN0			
14	83503515	1	J, U			ED0, EK0			CUP, Shift Fork Spring
		1	J, U			EN0			
15	01664355	1	J, U			ED0, EK0			PIN, Shift Fork
		1	J, U			EN0			
16	83503516	1	J, U			ED0, EK0			SPRING, Mode Shift Fork
		1	J, U			EN0			
17	83503512	1	J, U			ED0, EK0			WASHER, Flat
		1	J, U			EN0			
18	83503514	1	J, U			ED0, EK0			BUSHING, Shift Rail
		1	J, U			EN0			
19	04638950AB	1	J, U			ED0, EK0			FORK, Transfer Case Mode Shift
		1	J, U			EN0			

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Forks and Rails Select Trac [DHP]  
Figure 242-910

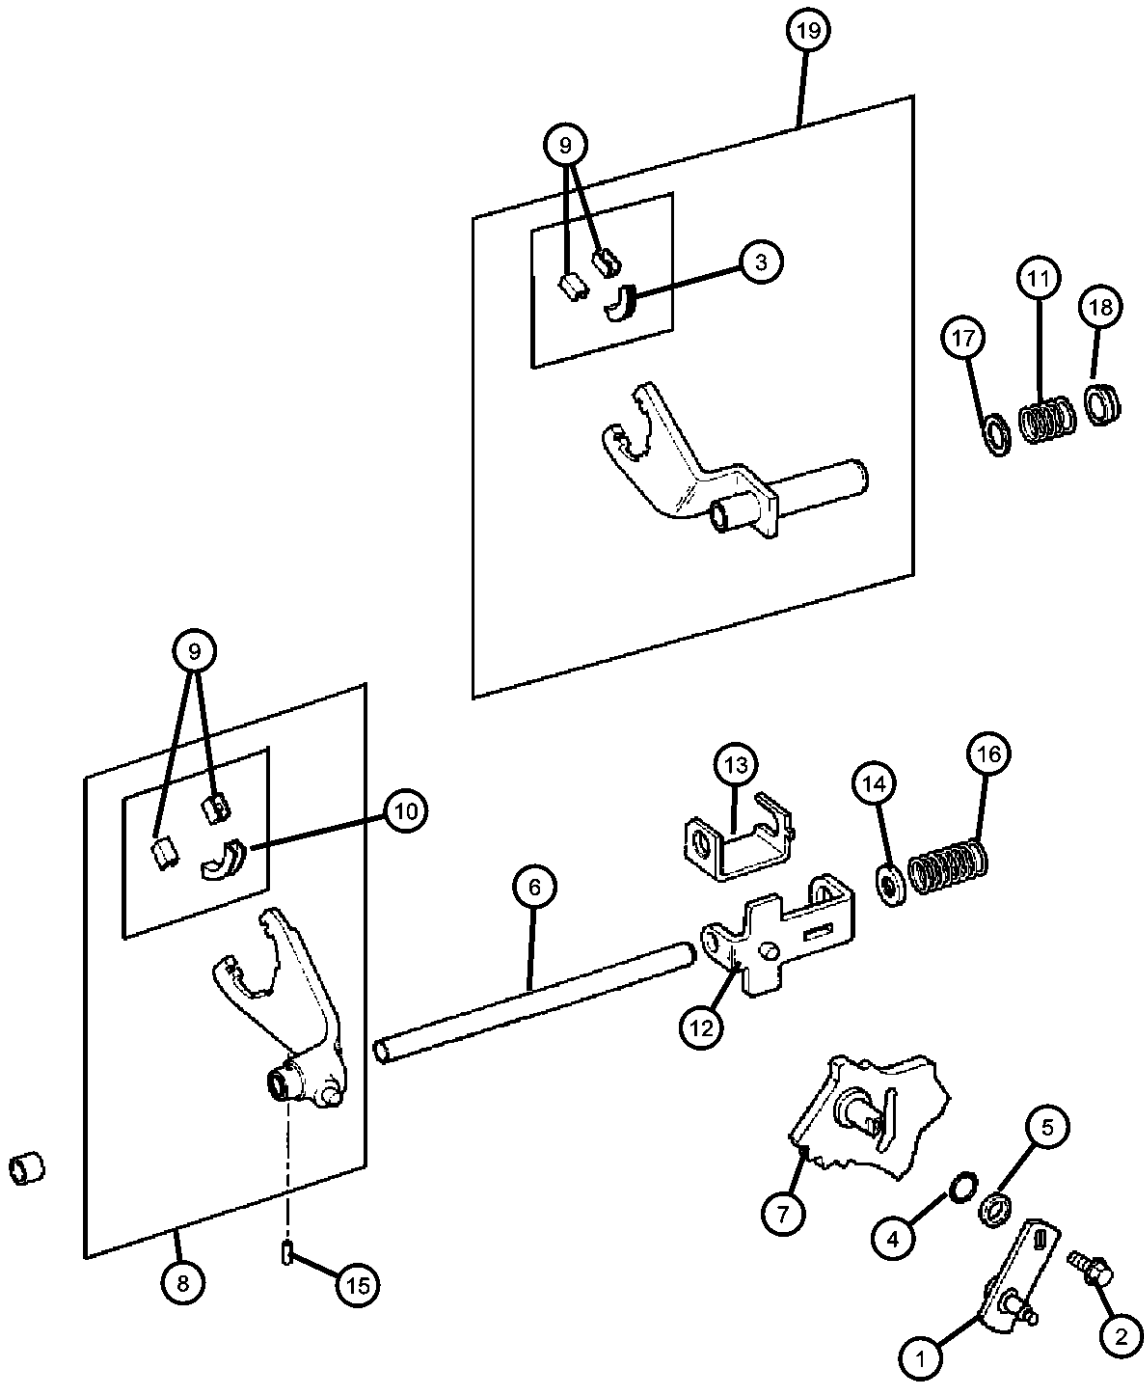


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-20	05072304AA	1	J, U			ED0, EK0			SNAP RING
		1	J, U			EN0			From 9/10/02
-21	0089331A	1	J, U			ED0, EK0			SNAP RING
		1	J, U			EN0			From 9/10/02

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Gearshift Controls  
Figure 242-1210

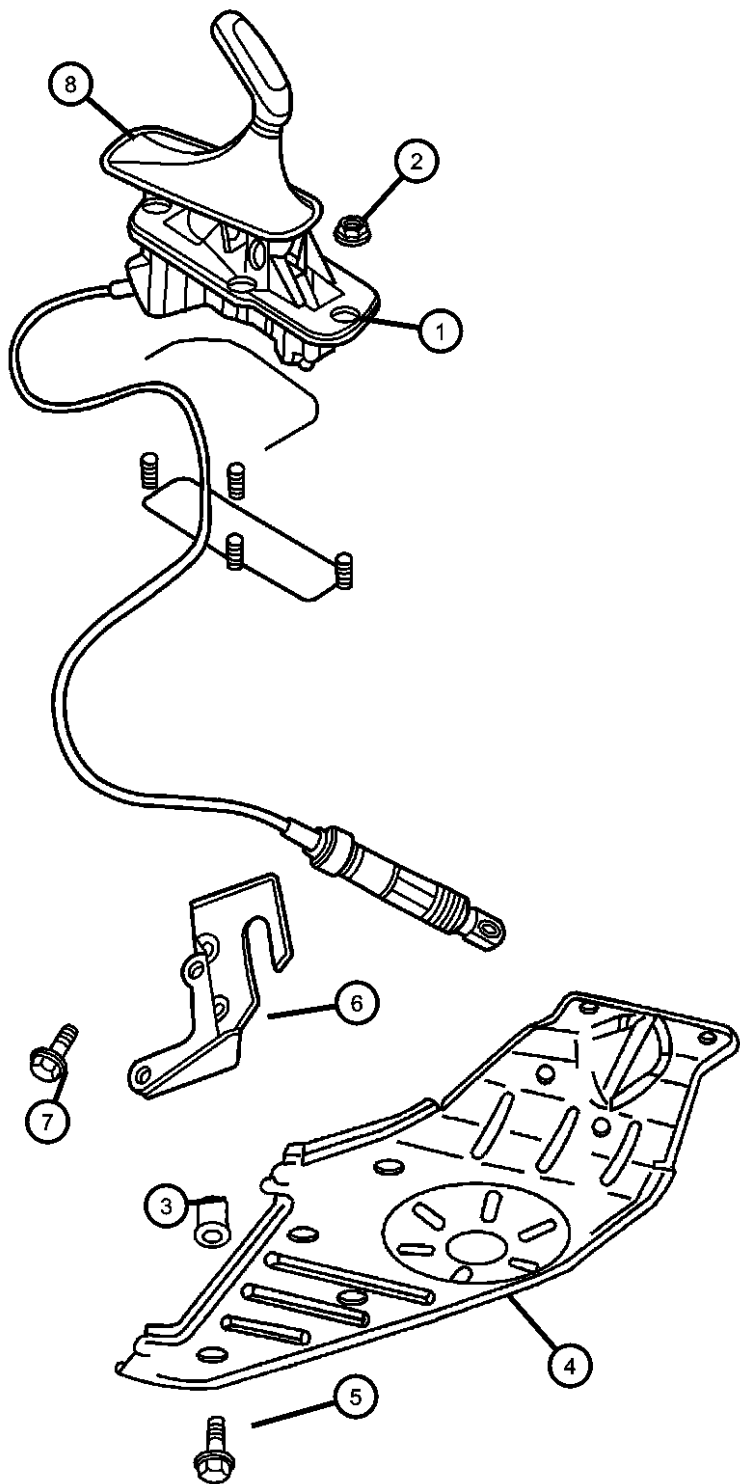

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE; Sales Codes [DBB] = All Manual Transmissions [DG0] = All Automatic Transmissions									
1									SHIFTER, Transfer Case
	52104310AD	1	J						
	52104311AD	1	U						
2	34201358	4							NUT AND WASHER, Hex Nut-Sealing Washer, M6 x 1.00
3	06506644AA	4	J, U						RIVET
4	52128649AA	1	J, U						PLATE, Transfer Case Skid
5	06506027AA	4	J, U						SCREW, Hex Head
6									BRACKET, Shifter
	52104389AB	1	J, U				DGQ		
	52104390AC	1	J, U				DBB		
	52109747AB	1	J, U				DG6		
7	06101752	3	J, U				DG0		SCREW AND WASHER, Hex Head, M10x1.5x28
8	52109709AB	1	J, U						BOOT, Gearshift

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

# Group - 22


## Wheels, Covers and Jacks

### Group - 22 Wheels, Covers and Jacks

Illustration Title

Group-Fig. No.

<b>Wheels and Hardware</b>	
Wheels and Hardware .....	Fig. 22 - 110
<b>Wheel Covers and Center Caps</b>	
Wheel Caps.....	Fig. 22 - 210
<b>Jack Stowage</b>	
Jack and Hardware .....	Fig. 22 - 310
<b>Spare Tire Stowage</b>	
Spare Wheel.....	Fig. 22 - 410
Spare Wheel, Export.....	Fig. 22 - 420

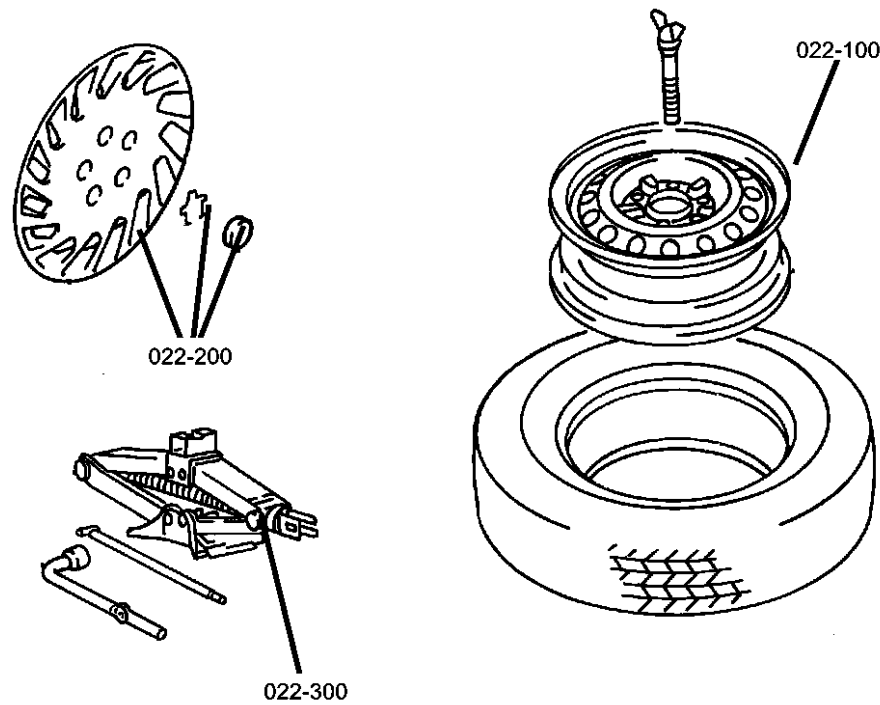

<b>022-100</b> Wheels and Hardware	<b>022-200</b> Wheel Covers and Center Caps	<b>022-300</b> Jack Stowage	<b>022-400</b> Spare Tire Stowage

### Wheels and Hardware

#### Figure 22-110


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes [WDN] = 16X7.0 Aluminum Wheels [WD5] = 16x7.0 Cast Aluminum Wheels [WLC] = 16x7.0 Lux Style Steel Wheels [WLD] = 16x7.0 Lus Aluminum Wheels [WND] = 16x7.0 Cast Aluminum Wheels									
1	52128674AA	4							WHEEL, Aluminum
	5GK75ZDRAC	4							[WGWL]
	5GL66PAKAD	4							[WDN]
	5GL66ZDRAD	4							[WND]
	5GL67PAKAE	4							[WD5]
2	5GL65S4AAC	4							[WLD]
3	52059522AA	4							WHEEL, Steel, [WLC]
		4							CAP, Wheel Center
		1							[WD5]
		4							[WND]
		1							[WKB+WND]
		4							[WLD]
		1							[WD5+WKB]
		4							[WNB]
		1							[WNB+WKB]
		4							[WDN]
		1							[WDN+WKB]
		1							[WKB+WLD]
4	02073355	4							STEM, Wheel Valve
5	52088990AC	5							SENSOR, Tire Pressure, Valve stem
-6	52088961AA	5							NUT, Tire Pressure Sensor
7	52109664AA	1							MAGNET
-8	06036310AA	20							NUT, Wheel, .50x20, Road Wheel Mounting
LIBERTY (KJ)									
SERIES		LINE		BODY		ENGINE		TRANSMISSION	
P = Limited		J = LHD (4WD)		74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPi		DDD = Transmission - 5-Speed HD Manual	
H = Sport		U = RHD (4WD)				EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade		T = LHD (2WD)				ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
						ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
						EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
						EK0 = All 3.7L		DBB = All Manual Transmissions	
						ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required    - = Non illustrated part

2004 KJ

**<< RETURN TO GROUP INDEX**

Wheel Caps  
Figure 22-210

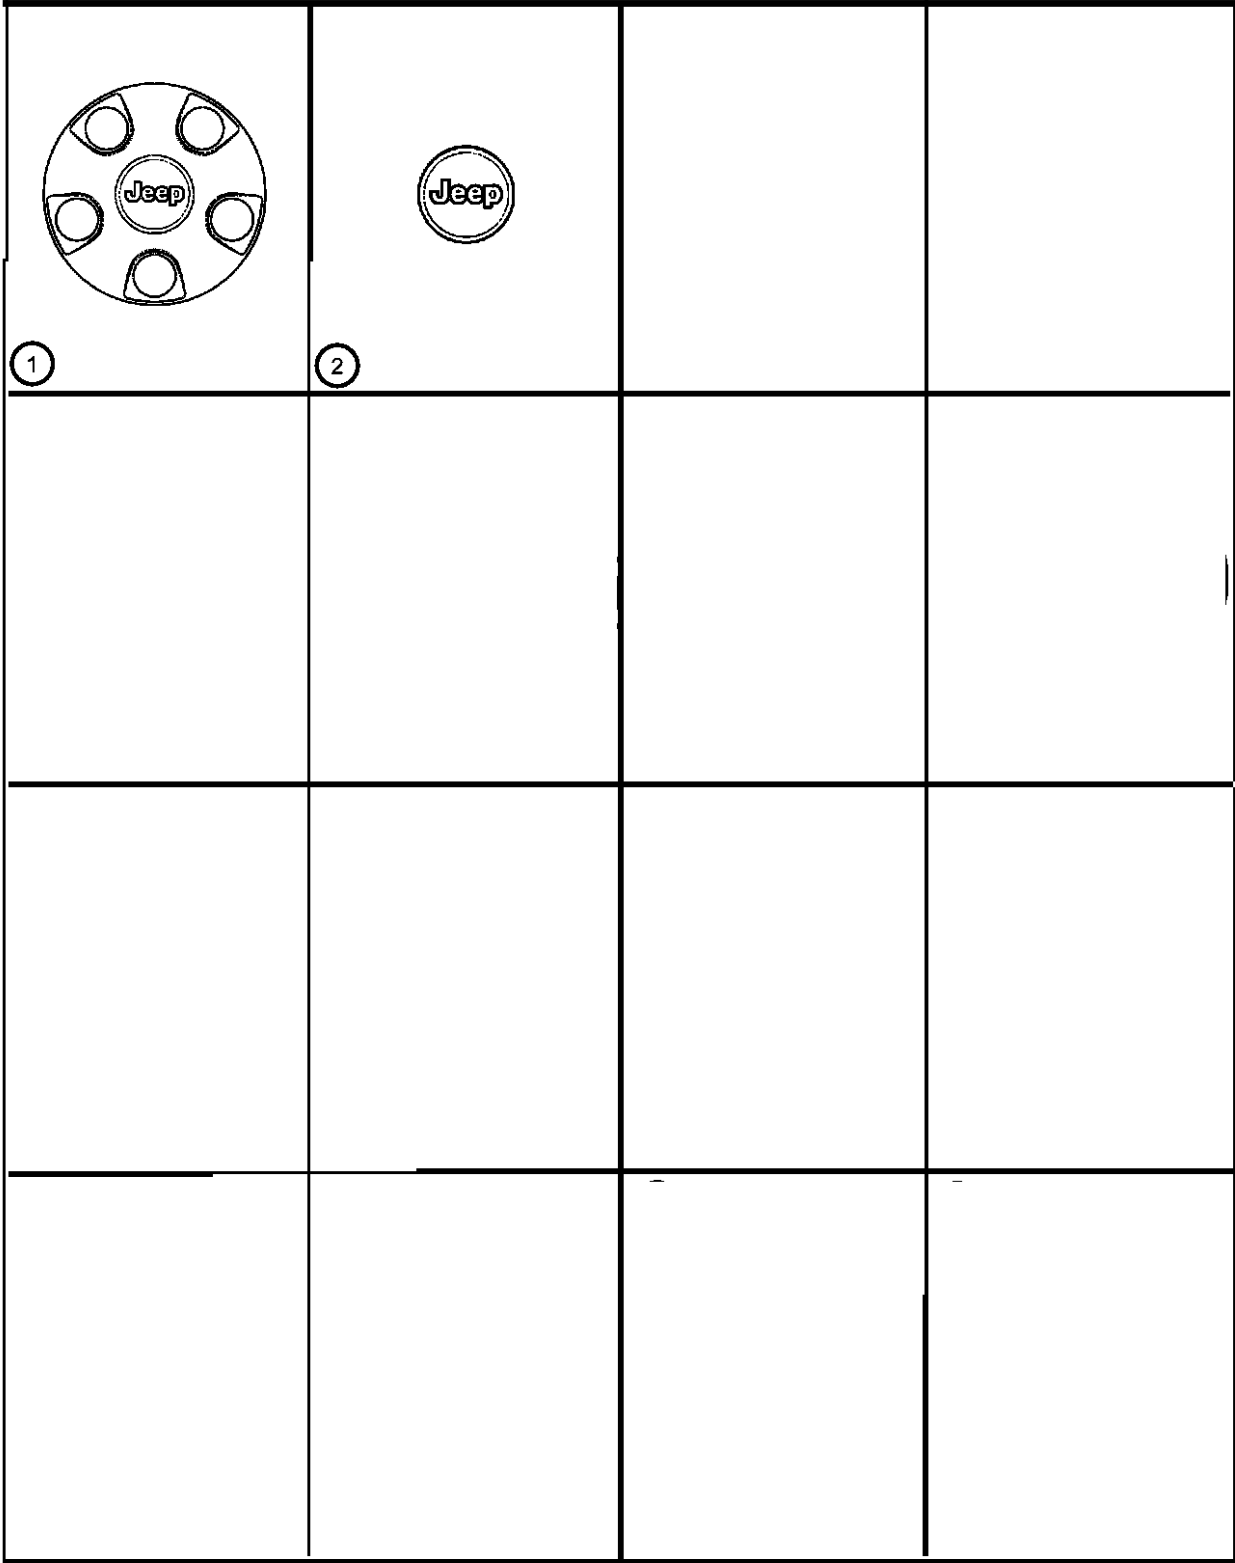


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[WLD,WLC]= 16x7 Lux Aluminum  
[WND]= 16x7 Cast Aluminum  
[WGR]= 17x7.5 Cast Aluminum  
[WGQ]= 17x7.5 Aluminum

1									CAP, Wheel Center [GW,WKB] [WLC,WNP]
	52128525AA	1							
	5GL69S4AAA	4							
2	52059522AA	4							CAP, Wheel Center, [WND,WDN,WFM]

LIBERTY (KJ)									
SERIES	LINE				BODY	ENGINE		TRANSMISSION	
P = Limited	J = LHD (4WD)				74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)					DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)					EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
						ENJ = Engine -2.5L 4 Cyl 16V		Manual	
						Turbo Diesel		DG4 = Transmission-Multi-Speed	
						ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
						Turbo Diesel		DG6 = Transmission-4-Spd.	
						EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
						EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
						ED0 = All 2.4L		5-45RFE	
								DBB = All Manual Transmissions	
								DG0 = All Automatic Transmissions	

Jack and Hardware  
Figure 22-310

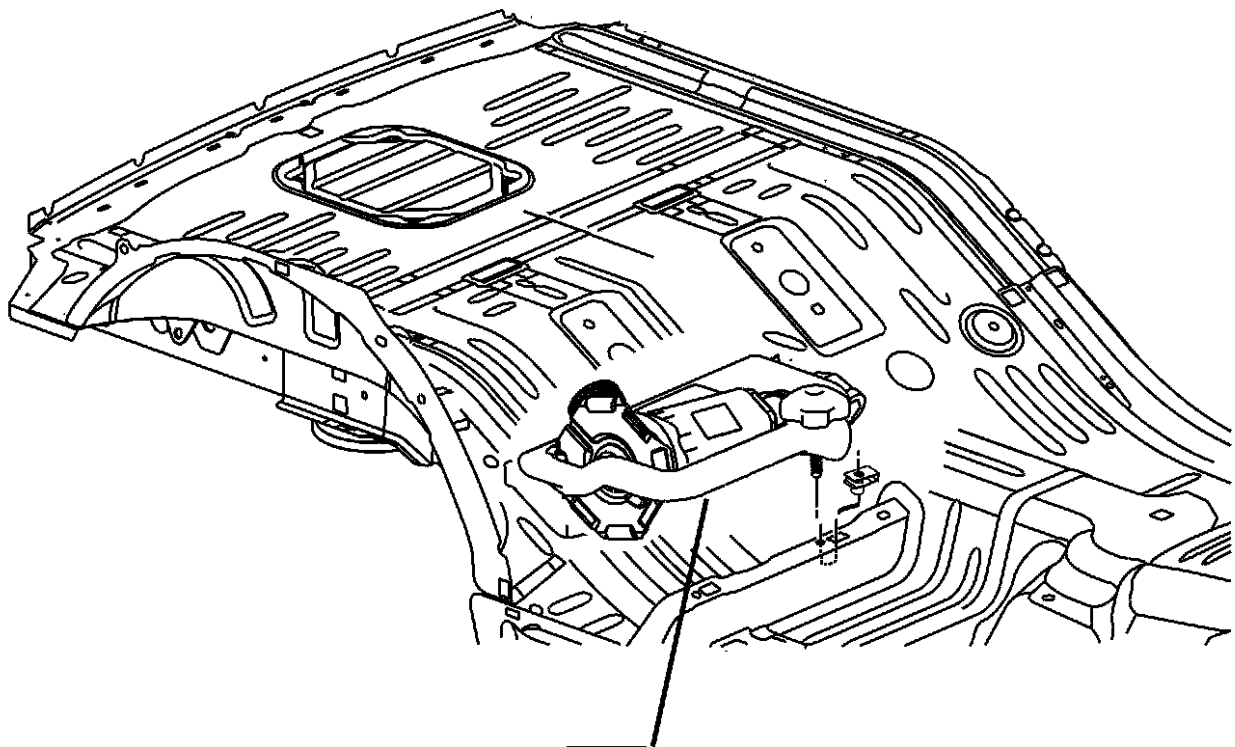

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	52080427AA	1							JACK, Scissor Type Up to 04/14/03
	52110302AA	1							After 04/14/03
-2	05093791AA	1							JACK ASSEMBLY, Screw Type
3	52059478AA	1							WRENCH, Wheel Lug Nut
4									BRACKET AND LOCATOR, Jack Stowage
	52128755AA	1							Screw Type Jack
	52129757AA	1							Bottle Type Jack
5									LABEL, Jack Instructions [ABA]
	52059371AB	1							
	52128756AA	1							
6	05093510AA	1							EXTENSION KIT, JACK HANDLE, Screw Type Jack

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	



Spare Wheel  
Figure 22-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION	
Note; Sales Codes										
[WND]= 16x7 Cast Aluminum										
[WLD]= 16x7 Lux Aluminum										
[WGR]= 17x7.5 Cast Aluminum										
[WGQ]= 17x7.5 Aluminum										
-1									BRACKET, License Plate	
	5HF06RXFAI	1	J, U	H, P						
		1	J, U	M						
2	55155933AC	1							BRACKET, Spare Tire	
-3	55360585AA	2							GASKET, Spare Tire Bracket	
4	06507799AA	4							NUT, Wheel	
-5	5GL66PAKAD	4							WHEEL, Aluminum, [WND]	
-6	5JG141X7AB	1							COVER, Spare Tire	
-7									WHEEL, Steel	
	5GL64S4AAA	4							[WNP]	
		1							[WKB+WNP]	
	5GL65S4AAC	4							[WLC]	
		1							[WKB+WLC]	
8									STUD	
	06507016AA	AR							Repair Outside Spare Tire Carrier	
	06507623AA	AR								
9	06036310AA	2							NUT, Wheel, .50x20	
10	55360618AA	2							BRACKET, Spare TireReinforce-ment	

LIBERTY (KJ)

SERIES

P = Limited  
H = Sport  
M = Renegade

LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L

TRANSMISSION

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


2004 KJ

AR = use ase required - = Non illustrated part

Spare Wheel, Export  
Figure 22-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes:  
[CSA] = Spare Tire Cover  
[CSB] = Spare Tire Cover  
[TBR] = Outside Tire Carrier  
[WKB] = Matching Spare Wheel  
[WLD] = 16X7.0 Lux Aluminum Wheels  
[WNP] = 16X7.0 Styled Steel Wheels

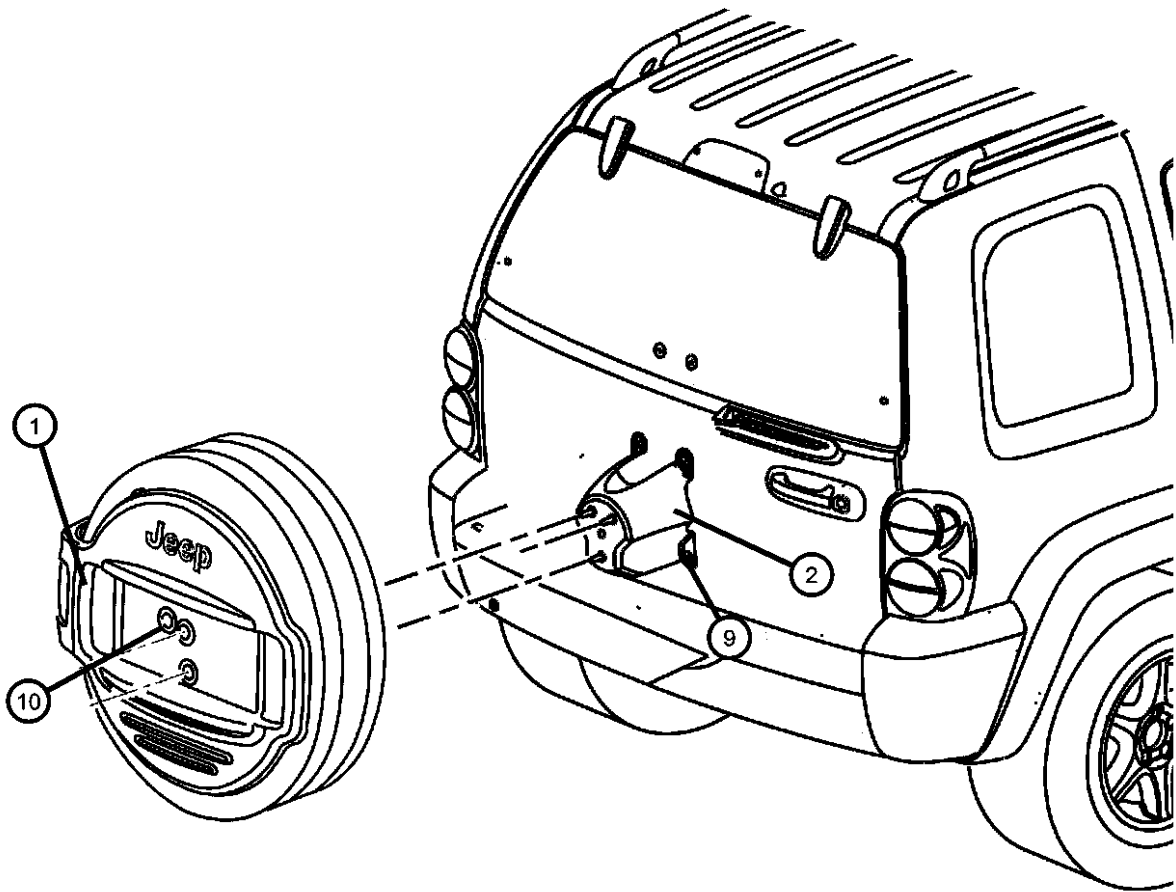

1									BRACKET, License Plate [TBR]
	5HF06RXFAI	1	J, U	H, P					[TBR]
		1	J, U	M					[TBR]
2	55155933AC	1							BRACKET, Spare Tire, [TBR]
-3	06036303AA	2	J, U						NUT, .50-20, [TBR]
-4	06036310AA	2							NUT, Wheel, .50x20, [TBR]
-5	5GL67PAKAB	1							WHEEL, Aluminum, [WKB+WLD]
-6	5GL64S4AAA	1							WHEEL, Steel, [WKB+WNP]
-7									COVER, Spare Tire [CSA] [CSB]
	5JG141X7AC	1							
	5JG711X7AA	1							
-8	06035201	1	J, U						RIVET, [TBR]
9	06507799AA	4							NUT, Wheel, [TBR]
10	06506429AA	2	J, U						SCREW, M8x1.25x21, [TBR]

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
			EDO = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

# Group - 23D

## Wiper/Lock Cylinder and Keys

Group - 23D Wiper/Lock Cylinder and Keys

Illustration Title

Group-Fig. No.

**Lock Cylinders and Keys**

Lock Cylinder and Keys.....

**Windshield Wiper and Washer Systems**

Windshield Wiper & Washer.....


**Rear Wiper and Washer System**




Rear Wiper & Washer.....

Fig. 23D - 110


Fig. 23D - 210

Fig. 23D - 310

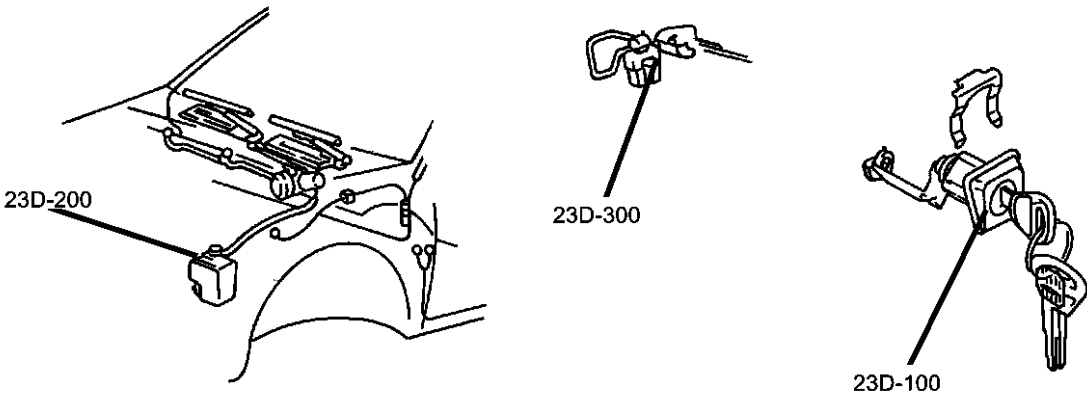
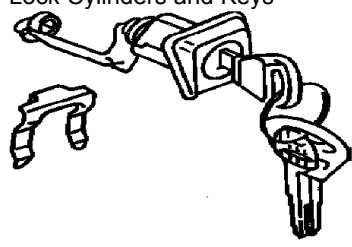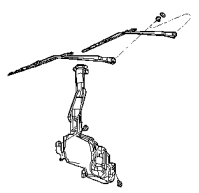
<div><div>23D-100</div><div>Lock Cylinders and Keys</div></div>	<div><div>23D-200</div><div>Windshield Wiper and Washer Systems</div></div>	<div><div>23D-300</div><div>Rear Wiper and Washer System</div></div>	
---	--	--	--

Lock Cylinder and Keys  
Figure 23D-110

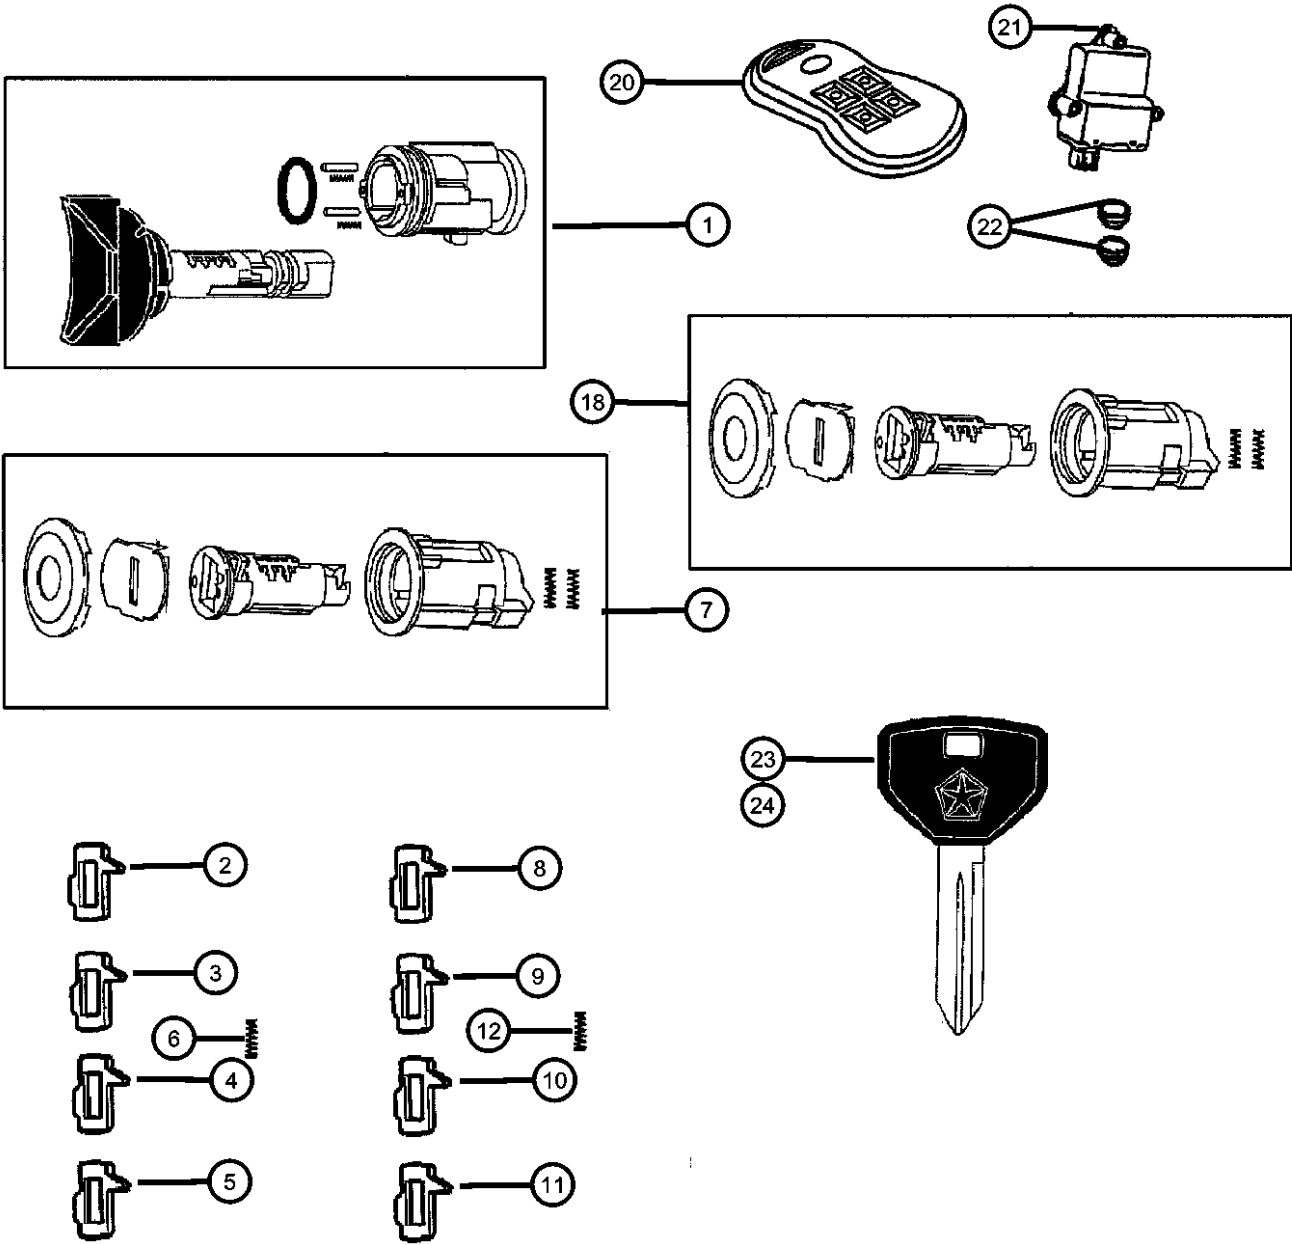


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	05083915AA	1	J, T						CYLINDER, Ignition Lock Europe
2	05257132	1							TUMBLER, Ignition Number 1, Europe
3	05257133	1							TUMBLER, Ignition Number 2, Europe
4	05257134	1							TUMBLER, Ignition Number 3, Europe
5	05257135	1							TUMBLER, Ignition Number 4, Europe
6	04746873	1							SPRING, Lock Cylinder Tumbler, Europe
7	05013682AA	1	J, T						CYLINDER, Door Lock Europe
8	04778117	1	J, T						TUMBLER, Door and Deck Number 1, Wide Europe
9	04778118	1							TUMBLER, Door and Deck Number 2, Wide Europe
10	04778119	1	J, T						TUMBLER, Door and Deck Number 3, Wide Europe
11	04778120	1							TUMBLER, Door and Deck Number 4, Wide Europe
12	04778121	7	J, T						SPRING, Door and Deck Tumbler  Europe

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Lock Cylinder and Keys  
Figure 23D-110

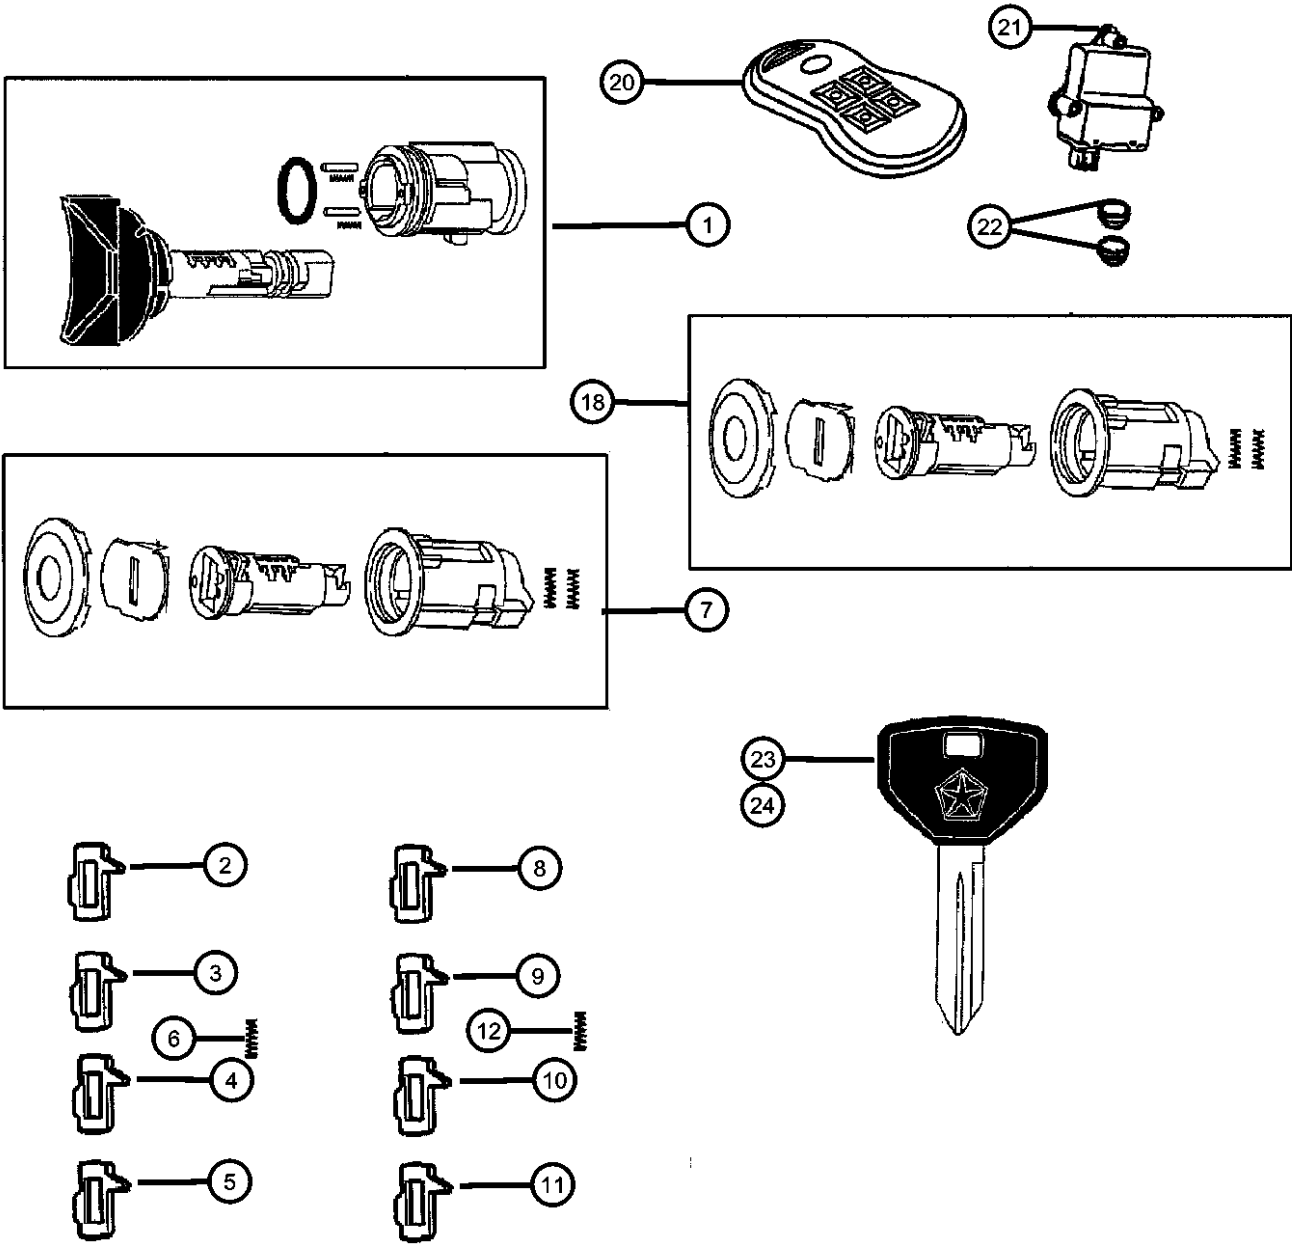


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-13	05071039AA	1	J, T						LEVER, Door Lock
		1							Europe
-14	05071063AA	1							RETAINER, Lock Rod
		1	J, T						Europe, Right Door
	05071155AA	1							, Right Door
		1	J, T						Europe, Left Door
-15	05072944AA	1	J, T						Left Door
-16	55360636AA	1	J, T						ROD, Lock Cylinder
	55360659AA	1							BRACKET, Door Inside
									Europe
-17	05071201AA	1							SPACER, Lock Cylinder
		1	J, T						Europe
18	05013682AA	1	J, T						CYLINDER, Door Lock
	05072294AA	1							Europe
-19	05071201AA	1	J, T						SPACER, Lock Cylinder
		1							
20	04602260AA	2							TRANSMITTER, Keyless Entry
	04602261AB	2							Remote with 4 Button
	56010562AB	2							Remote with 4 Button (Export)
									Remote with 315MHZ BCM Interconnect (Export)
21	56010209AC	1							MODULE, Immobilizer, (Located on the Steering Column)
22	83504802	2							BATTERY, Transmitter
23	05018700AA	1	J, T						KEY, Master, MASTER KEY JEEP
24	05018699AA	1							KEY, Blank

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Lock Cylinder and Keys  
Figure 23D-110


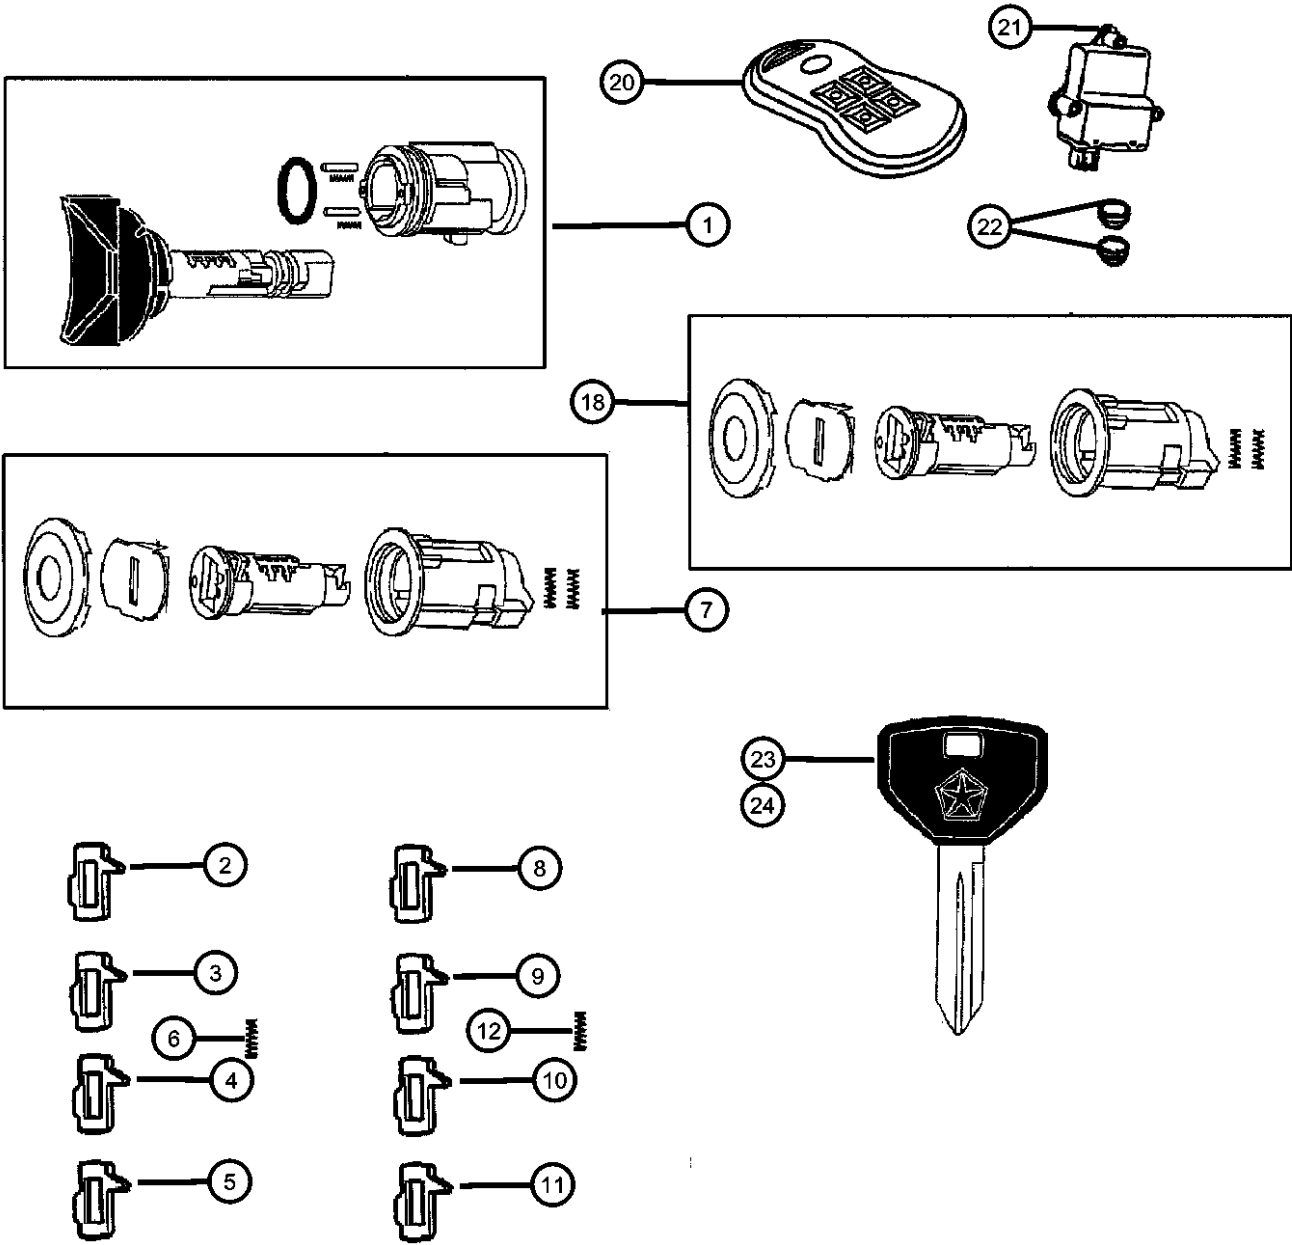


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-25	56010424AA	1							RECEIVER, Keyless EntryRemote
-26	56010335AC	1							SIREN, Alarm, Security Alarm with Bracket (Europe)
-27	05019605AA	1	J, T						SHUTTER, Lock Cylinder, Serviced in Lock Kit Only
-28	04778149	1	J, T						CAP, Door Lock Cylinder, Bright, Serviced in Lock Kit Only
-29									TUMBLER, Ignition Number 1, Sidebar Europe
	05010879AA	1							
		1	J, T						
-30									TUMBLER, Ignition Number 2, Sidebar Europe
	05010880AA	1							
		1	J, T						
-31									TUMBLER, Ignition Number 3, Sidebar Europe
	05010881AA	1							
		1	J, T						
-32									TUMBLER, Ignition Number 4, Sidebar Europe
	05010882AA	1							
		1	J, T						
-33									SPRING, Ignition Tumbler, Sidebar Europe
	05010883AB	1							
		1	J, T						
-34	05071283AA	1	J, T						SPACER, Lock Cylinder
-35	05102099AA	1	J, T						BRACKET, Lock Cylinder Attach, Swing gate
-36									BRACKET, Door Inside
	05072943AA	1	J, T						Right Door
	05072945AA	1	J, T						Left Door
-37	06507946AA	2							SCREW, Lock Cyliner to Handle

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DOHC 16v SMPI	DDD = Transmission - 5-Speed HD	Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v	Turbo Diesel	DG4 = Transmission-Multi-Speed	Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl	Turbo Diesel	DG6 = Transmission-4-Spd.	Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic	5-45RFE
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	



AR = use ase required - = Non illustrated part

Windshield Wiper & Washer  
Figure 23D-210

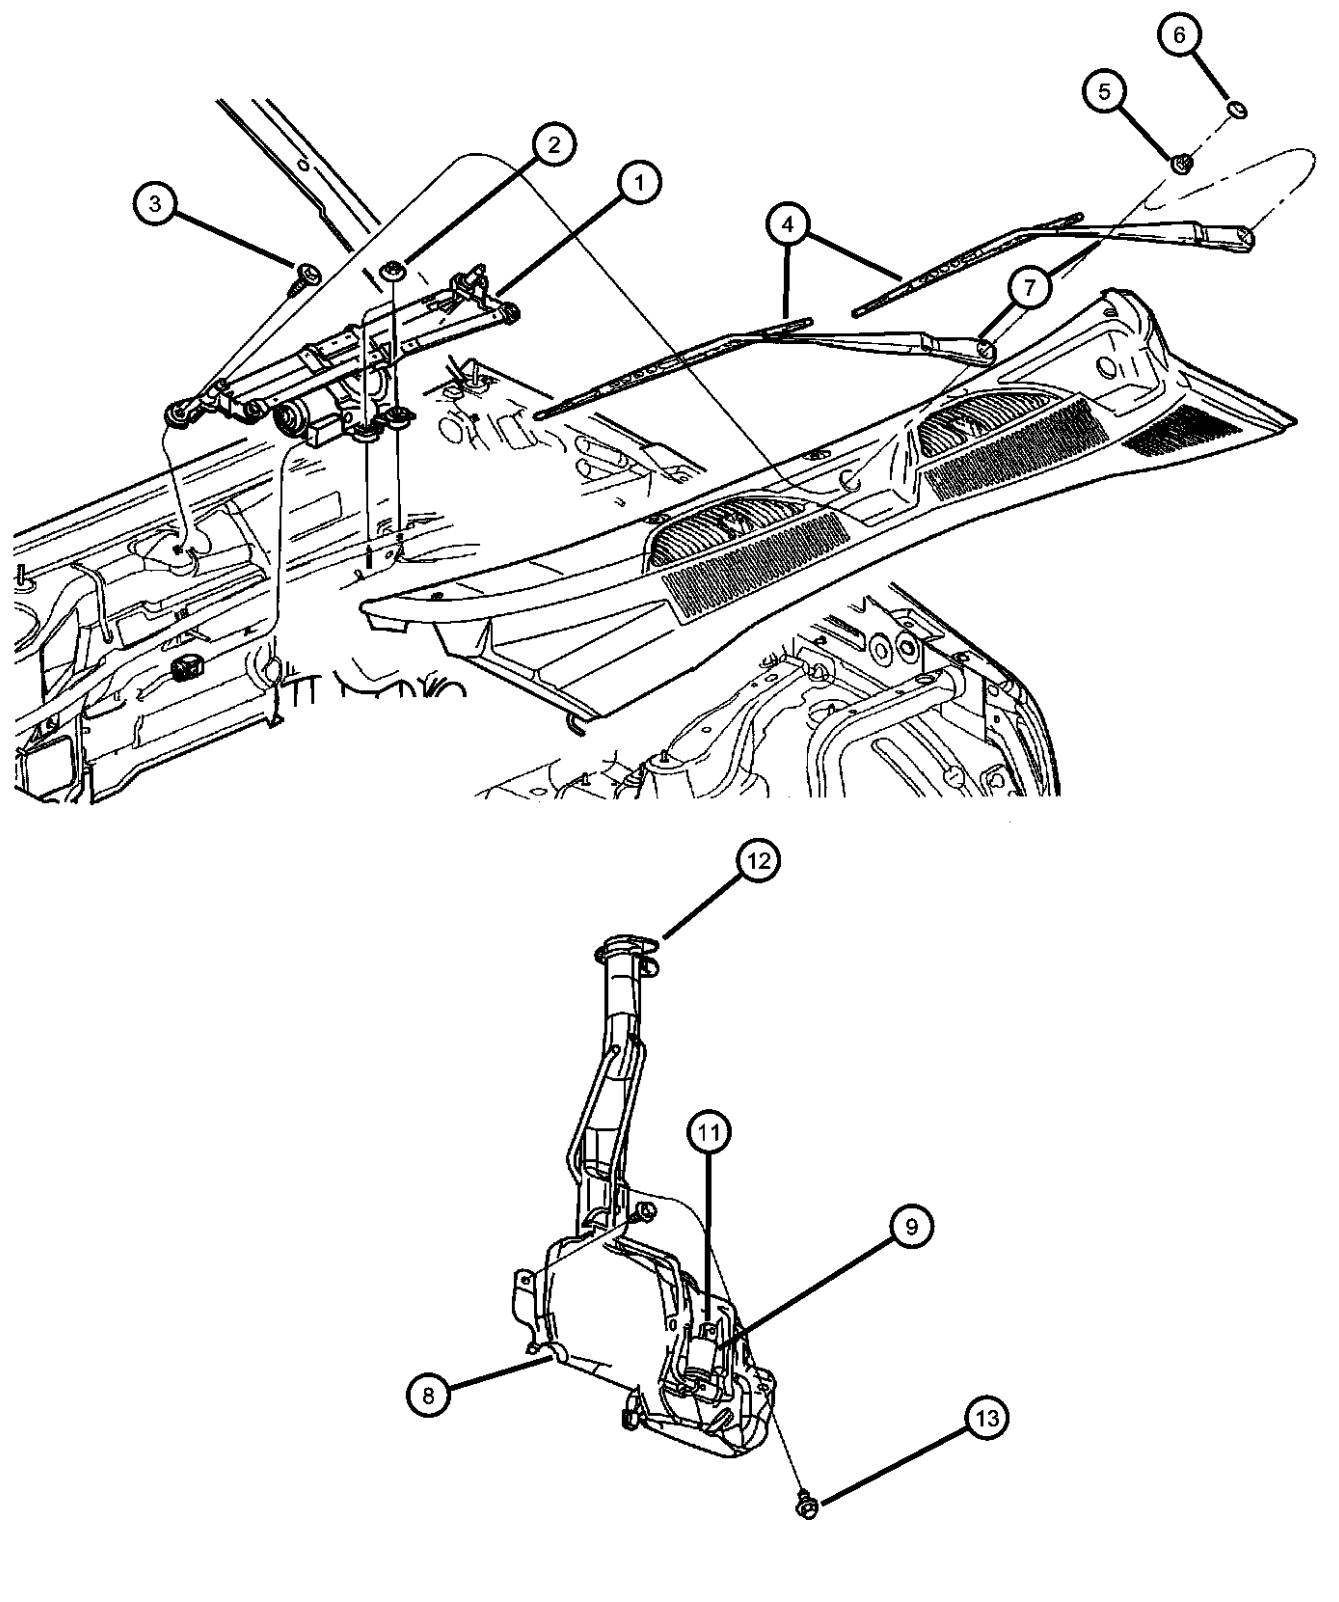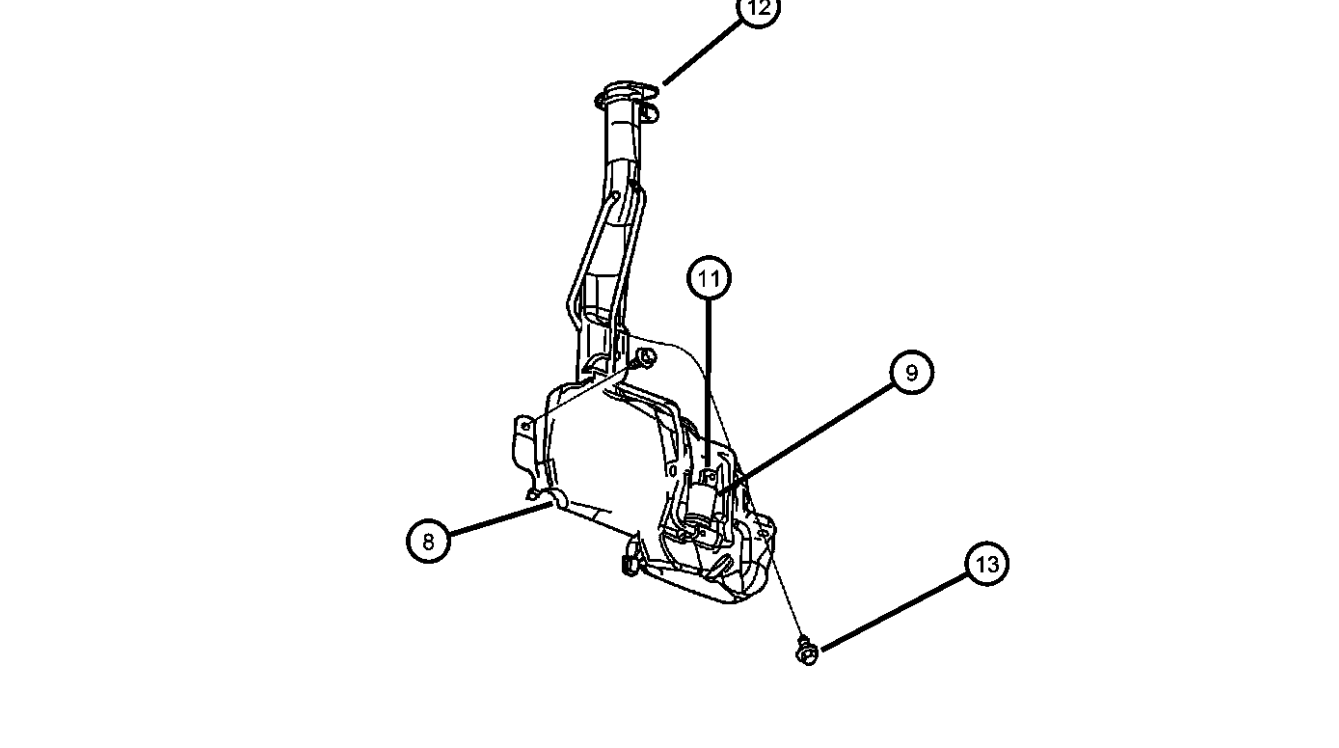ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
									
1									MODULE, Wiper
	55155894AD	1	U						
	55155895AD	1	J, T						
2	34201358	2							NUT AND WASHER, Hex Nut-Sealing Washer, M6 x 1.00
3	34201358	2							SCREW, Hex Flange Head, M6x1.00x35.00, (NOT SERVICED)
4									BLADE, Wiper
	05066973AA	1	U						For [RHD], Right
	WBFLAT02AA								Mopar Alternative Flat Blade Set
	WB000019AA								Mopar V-Line Alternative Part
	WBW00019AA								Mopar Alternative Winter Wiper Blades
	05066974AA	1	U						For [RHD], Left
	WBFLAT02AA								Mopar Alternative Flat Blade Set
	WBW00019AD								Mopar Alternative Winter Wiper Blades
	WB000019AE								Mopar V-Line Alternative Part
	WB-BLU019AA								Mopar Alternative Color Wiper Blade (Blue)
	WBRED019AA								Mopar Alternative Color Wiper Blade (Red)
	WBYEL019AA								Mopar Alternative Color Wiper Blade (Yellow)
	WB-WHI019AA								Mopar Alternative Color Wiper Blade (White)
	WB-CAR019AA	1	J, T						Mopar Alternative Color Wiper Blade (Carbon Fiber)
									Left
	WBFLAT02AA								Mopar Alternative Flat Blade Set
	WBW00019AD								Mopar Alternative Winter Wiper Blades
	WB000019AE								Mopar V-Line Alternative Part
	WB-BLU019AA								Mopar Alternative Color Wiper Blade (Blue)
	WBRED019AA								Mopar Alternative Color Wiper Blade (Red)
									
<b>LIBERTY (KJ)</b>									
SERIES		LINE		BODY		ENGINE		TRANSMISSION	
P = Limited		J = LHD (4WD)		74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport		U = RHD (4WD)				EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade		T = LHD (2WD)				ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
						ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
						EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
						EK0 = All 3.7L		DBB = All Manual Transmissions	
						ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Windshield Wiper & Washer  
Figure 23D-210

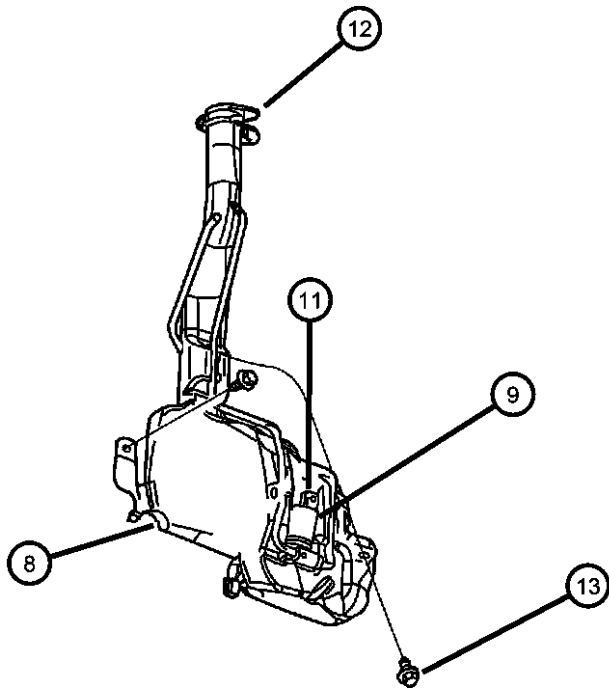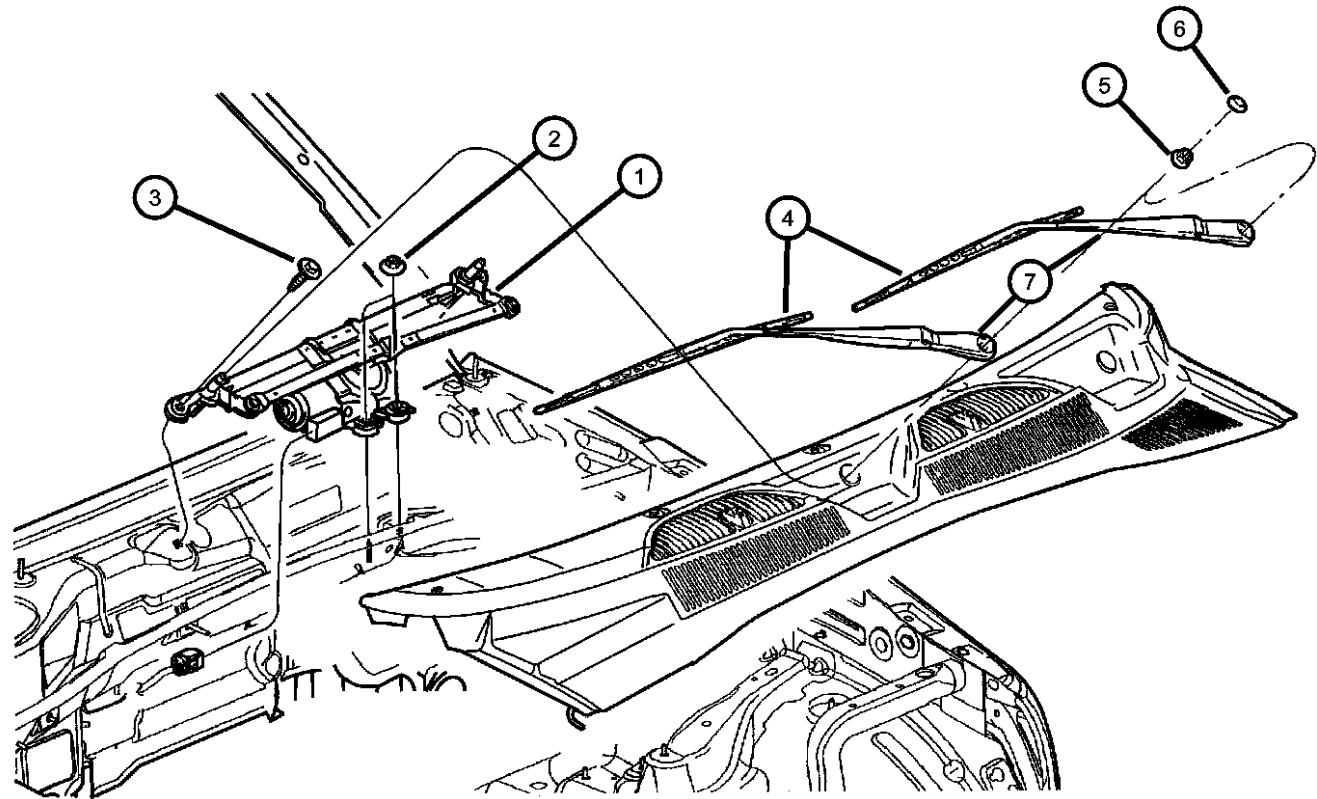



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	WBYEL019AA								Mopar Alternative Color Wiper Blade (Yellow)
	WB-WHI019AA								Mopar Alternative Color Wiper Blade (White)
	WB-CAR019AA	1	J, T						Mopar Alternative Color Wiper Blade (Carbon Fiber) Right
	WBFLAT02AA								Mopar Alternative Flat Blade Set
	WBW00019AD								Mopar Alternative Winter Wiper Blades
	WB000019AE								Mopar V-Line Alternative Part
	WB-BLU019AA								Mopar Alternative Color Wiper Blade (Blue)
	WBRED019AA								Mopar Alternative Color Wiper Blade (Red)
	WBYEL019AA								Mopar Alternative Color Wiper Blade (Yellow)
	WB-WHI019AA								Mopar Alternative Color Wiper Blade (White)
	WB-CAR019AA								Mopar Alternative Color Wiper Blade (Carbon Fiber)
5	06503335	2							NUT, Hex, M10X1.25
6	55155765AA	2							CAP, Wiper Arm Nut
7									ARM, Wiper
	05066968AA	1	J						Europe, Left
	05066969AA	1	U						For [RHD], Right
	05066970AA	1	J, T						Right
	05066971AA	1	U						For [RHD], Left
	05096337AA	1	J, T						Left
8	05066867AA	1							RESERVOIR, Washer
9	05066880AB	1							PUMP, Washer, Windshield
-10	05011809AA	1							GROMMET, Windshield Washer Pump
11	04882797	1							SENSOR, Washer Fluid Level
12	05066881AA	1							CAP, Washer Reservoir

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part




Windshield Wiper & Washer  
Figure 23D-210

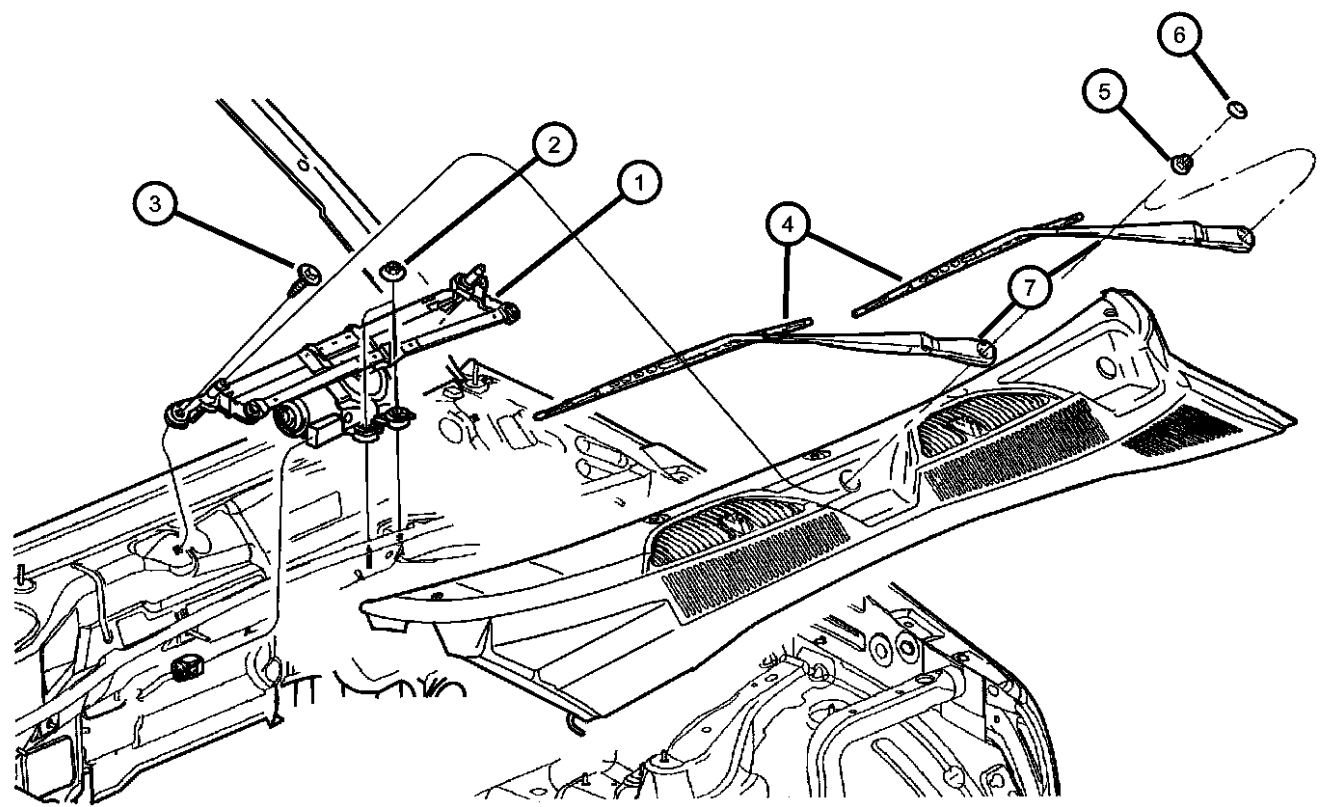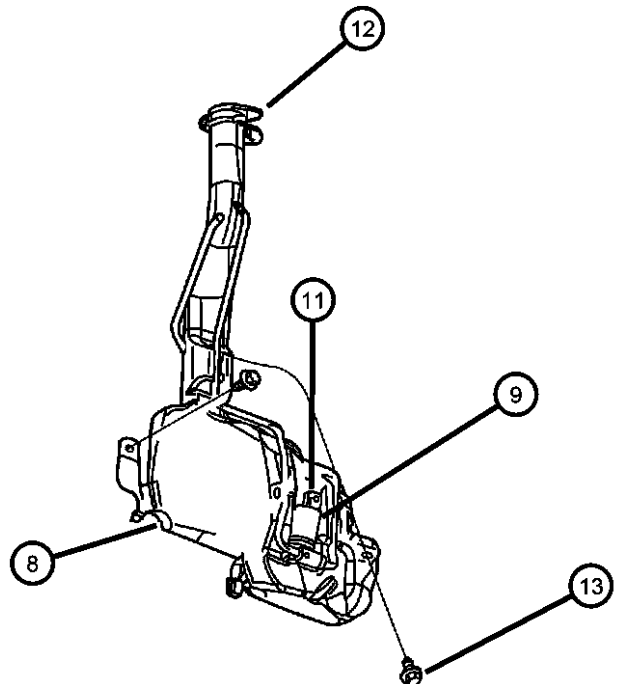	ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	13	06034716	2							SCREW AND WASHER, Hex Flange Head, .25-14x.875
	-14									HOSE 1FT, Windshield Washer, 5/32"
		HWV00532AB	1	J, T						
			1	J, U						
	-15									NOZZLE, Washer, Windshield
		55155854AB	2	J, T						
			2	U						
	-16									HOSE, Washer Reservoir
		55155892AC	1	J, T						
			1	U						
	-17	04778097	2							GROMMET, WIPER FRAME
	-18	06036456AA	1							RIVET, Wiper Cap to Core Support
	-19	05013755AA	1							GROMMET, Washer Level Sensor

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear Wiper & Washer  
Figure 23D-310

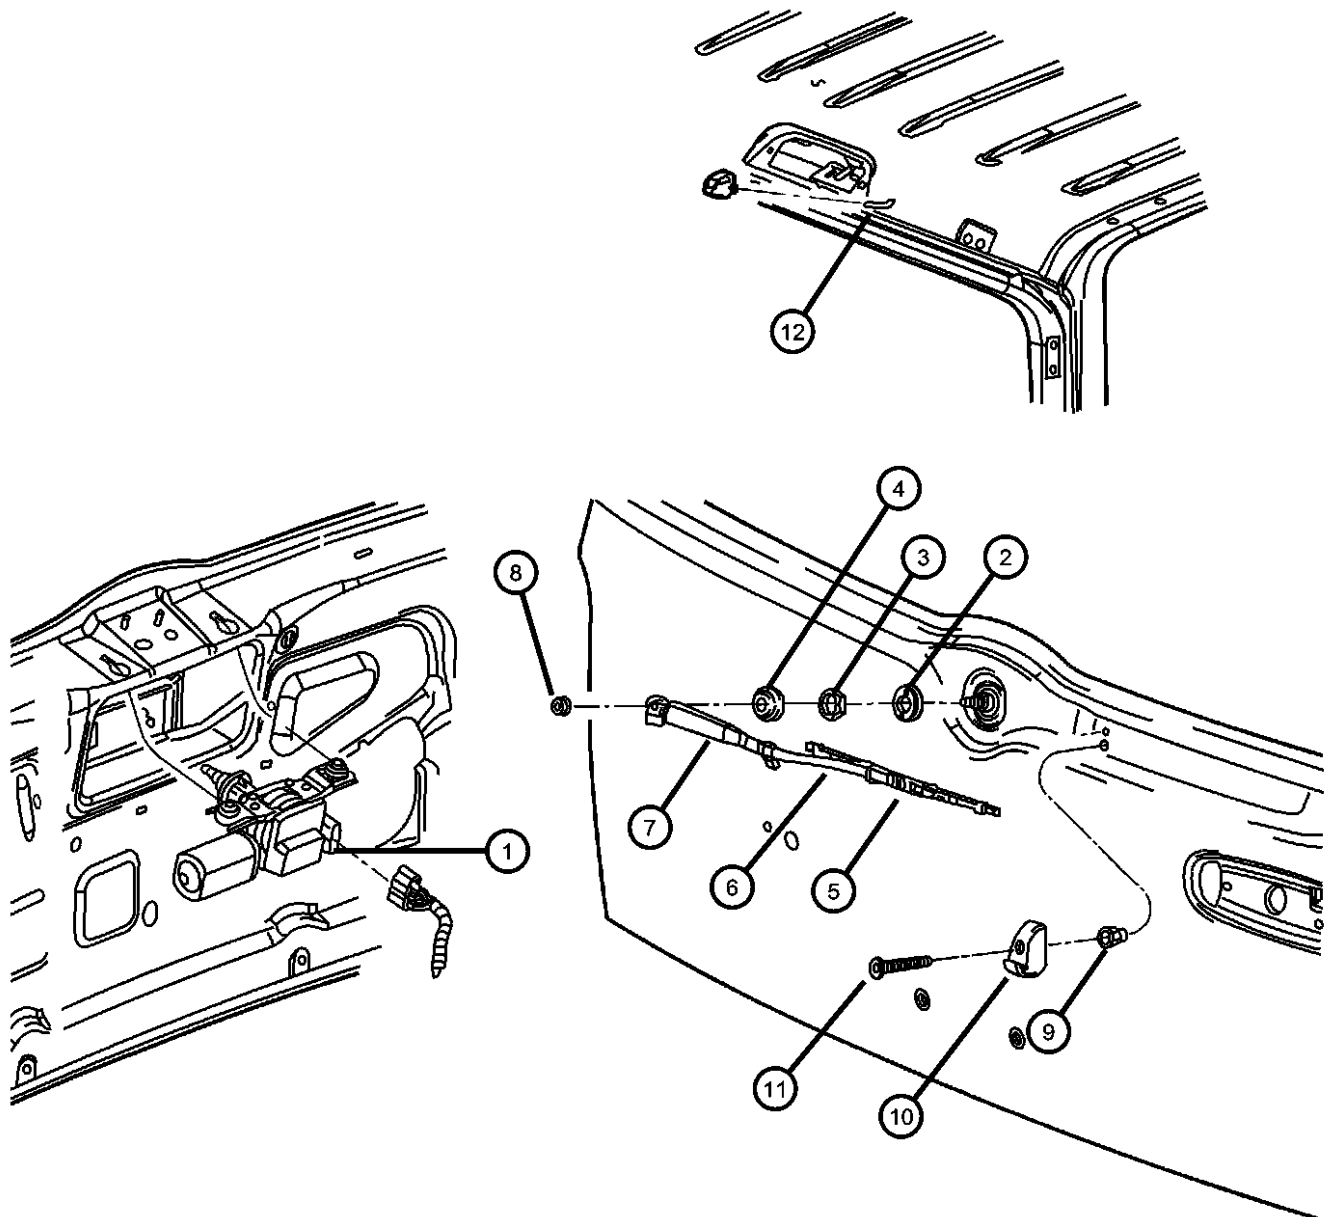	ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	1	55155884AB	1							MOTOR, Wiper
	2	55155887AB	1							BEZEL, Wiper Motor
	3	06507801AA	1							NUT, Hex, M20x1.00
	4	55076650	1							COVER, Rear Wiper Motor
	5	05066964AA	1							BLADE, Wiper
	6	WBRW0011AB 05066965AA	1							Mopar V-Line Alternative Part ARM, Liftgate Wiper
	7	06500165	1							NUT, Wiper Arm
	8	06503245	2							RIVET
	9	55155886AA	1							RAMP, Wiper Park
	10	06505062AA	1							SCREW, Pilot Point
	11	55156158AD	1							NOZZLE, Washer, Windshield
	-12	HWV00532AB	1	J, T						HOSE 1FT, Windshield Washer, 5/32"
	-13	55156260AA	1							CLIP, Hose

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

# Group - 24

## Air Conditioning & Heater

### Group - 24 Air Conditioning & Heater

Illustration Title

Group-Fig. No.

#### Air Conditioner and Heater Units

HEVAC Unit.....

Fig. 24 - 110

#### Air Conditioner and Heater Plumbing

Plumbing, Heater 2.4L Engine, LHD.....

Fig. 24 - 210

Plumbing, Heater 2.4L Engine, RHD .....

Fig. 24 - 220

Plumbing, Heater 3.7L Engine, LHD.....

Fig. 24 - 230

Plumbing, Heater 3.7L Engine, RHD .....

Fig. 24 - 240

Plumbing, Heater 2.5,2.8L Diesel Engine, LHD.....

Fig. 24 - 250

Plumbing, Heater 2.5,2.8L Diesel Engine, RHD .....

Fig. 24 - 260

Plumbing, Air Conditioning 2.4L Engine, LHD .....

Fig. 24 - 270

Plumbing, Air Conditioning 2.4L Engine, RHD.....

Fig. 24 - 280

Plumbing, Air Conditioning 3.7L Engine, LHD .....

Fig. 24 - 285

Plumbing, Air Conditioning 3.7L Engine, RHD .....

Fig. 24 - 288

Plumbing, Air Conditioning 2.5,2.8L Diesel Engine, LHD .....

Fig. 24 - 290

Plumbing, Air Conditioning 2.5,2.8L Diesel Engine, RHD.....

Fig. 24 - 295

#### Air Conditioner and Heater Controls

Control, Heater and Air Conditioning .....

Fig. 24 - 310

#### Air Conditioning Compressor

Compressor, 2.4L - 3.7L Engine .....

Fig. 24 - 410

Compressor, 2.5,2.8L Diesel Engine .....

Fig. 24 - 430

#### Air Conditioning Compressor Mounting

Compressor Mounting, 2.4L - 3.7L Engine.....

Fig. 24 - 510


Compressor Mounting, 2.5,2.8L Diesel Engine .....

Fig. 24 - 530

#### Air Ducts and Outlets


Air Distribution Ducts.....

Fig. 24 - 610

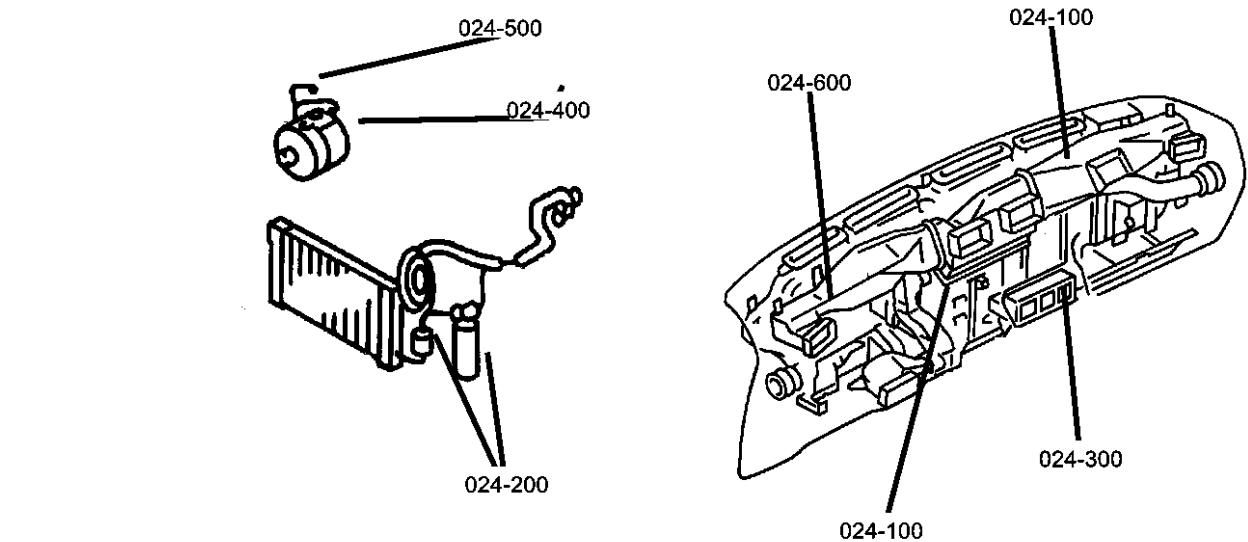

<div>024-100</div> <div>Air Conditioner and Heater Units</div> <div></div>	<div>024-200</div> <div>Air Conditioner and Heater Plumbing</div> <div></div>	<div>024-300</div> <div>Air Conditioner and Heater Controls</div> <div></div>	<div>024-400</div> <div>Air Conditioning Compressor</div> <div></div>
<div>024-500</div> <div>Air Conditioning Compressor Mounting</div> <div></div>	<div>024-600</div> <div>Air Ducts and Outlets</div> <div></div>		

HEVAC Unit  
Figure 24-110

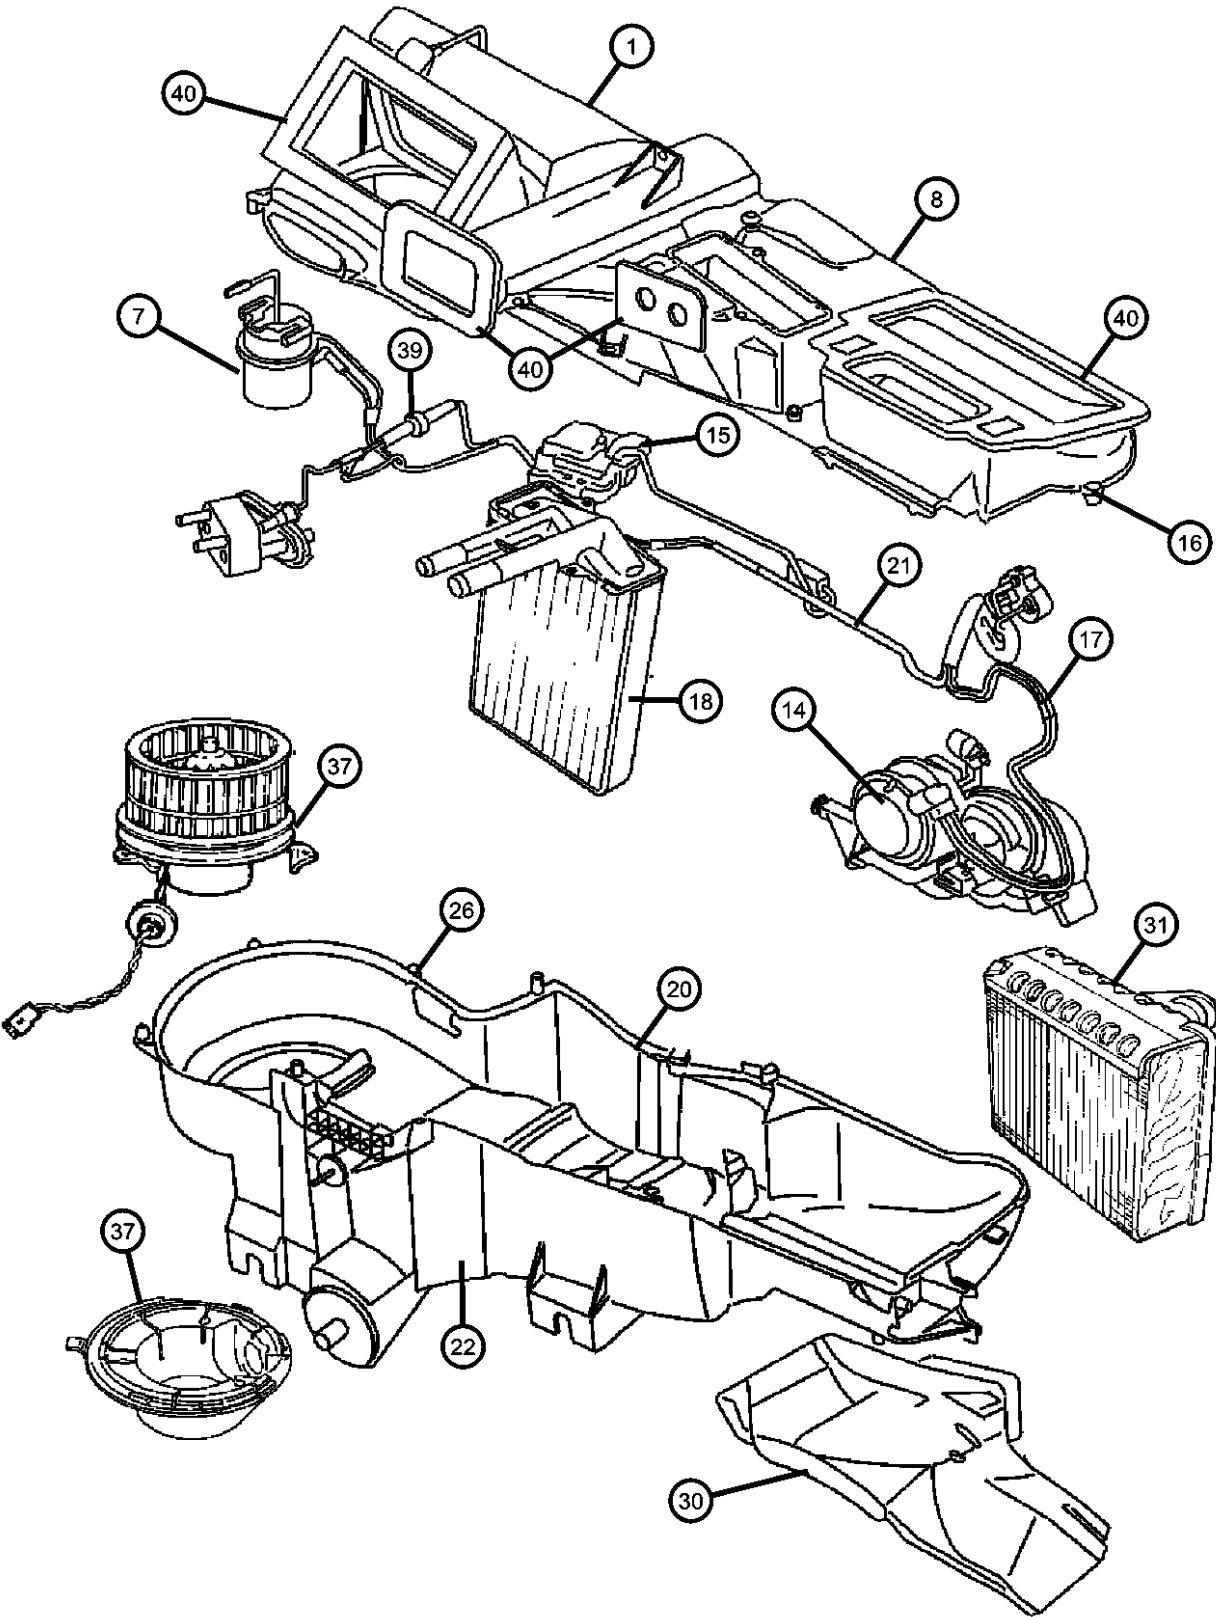


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	05066496AA	1	J, T						HOUSING, Air Inlet
	05066507AA	1	U						
-2	05066507AA	1							HOUSING, Air Inlet, (NOT SERVICED)
-3	05066507AA	1							DOOR, Air Inlet, (NOT SERVICED)
-4	05066507AA	1							CAM, Recirculating Door, (NOT SERVICED)
-5	05066507AA	1							LEVER, A/C Recirculation Door, (NOT SERVICED)
-6	05066507AA	1							SEAL, Air Inlet, (NOT SERVICED)
7									ACTUATOR, A/C and Heater
	05066510AA	1	J, T						Recirculation Door, Vacuumed Controlled
	05066511AA	1	U						
8									HOUSING, A/C Upper
	05066501AA	1	J, T						
	05066509AA	1	U						
-9	05066509AA	1							HOUSING, A/C Upper, (NOT SERVICED)
-10	05066509AA	1							DOOR, Panel, (NOT SERVICED)
-11	05066509AA	1							LEVER, Panel Door, (NOT SERVICED)
-12	05066509AA	1							SEAL, Evaporator, Tubes To Dash, (NOT SERVICED)
-13	05066509AA	1							SEAL, Defroster To Panel, (NOT SERVICED)
14									ACTUATOR, A/C and Heater
	05066518AA	1	J, T						Floor and Defrost Door, Vacuumed Controlled
		1	U						Floor and Defrost Door, Vacuumed Controlled
15									ACTUATOR, A/C and Heater
	05066519AA	1	J, T						Blend Door, Electric Controlled
	05066522AA	1	U						
16	04734227	22	J, T						SCREW, Hex Head, M4.8-1.59x19

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

HEVAC Unit  
Figure 24-110

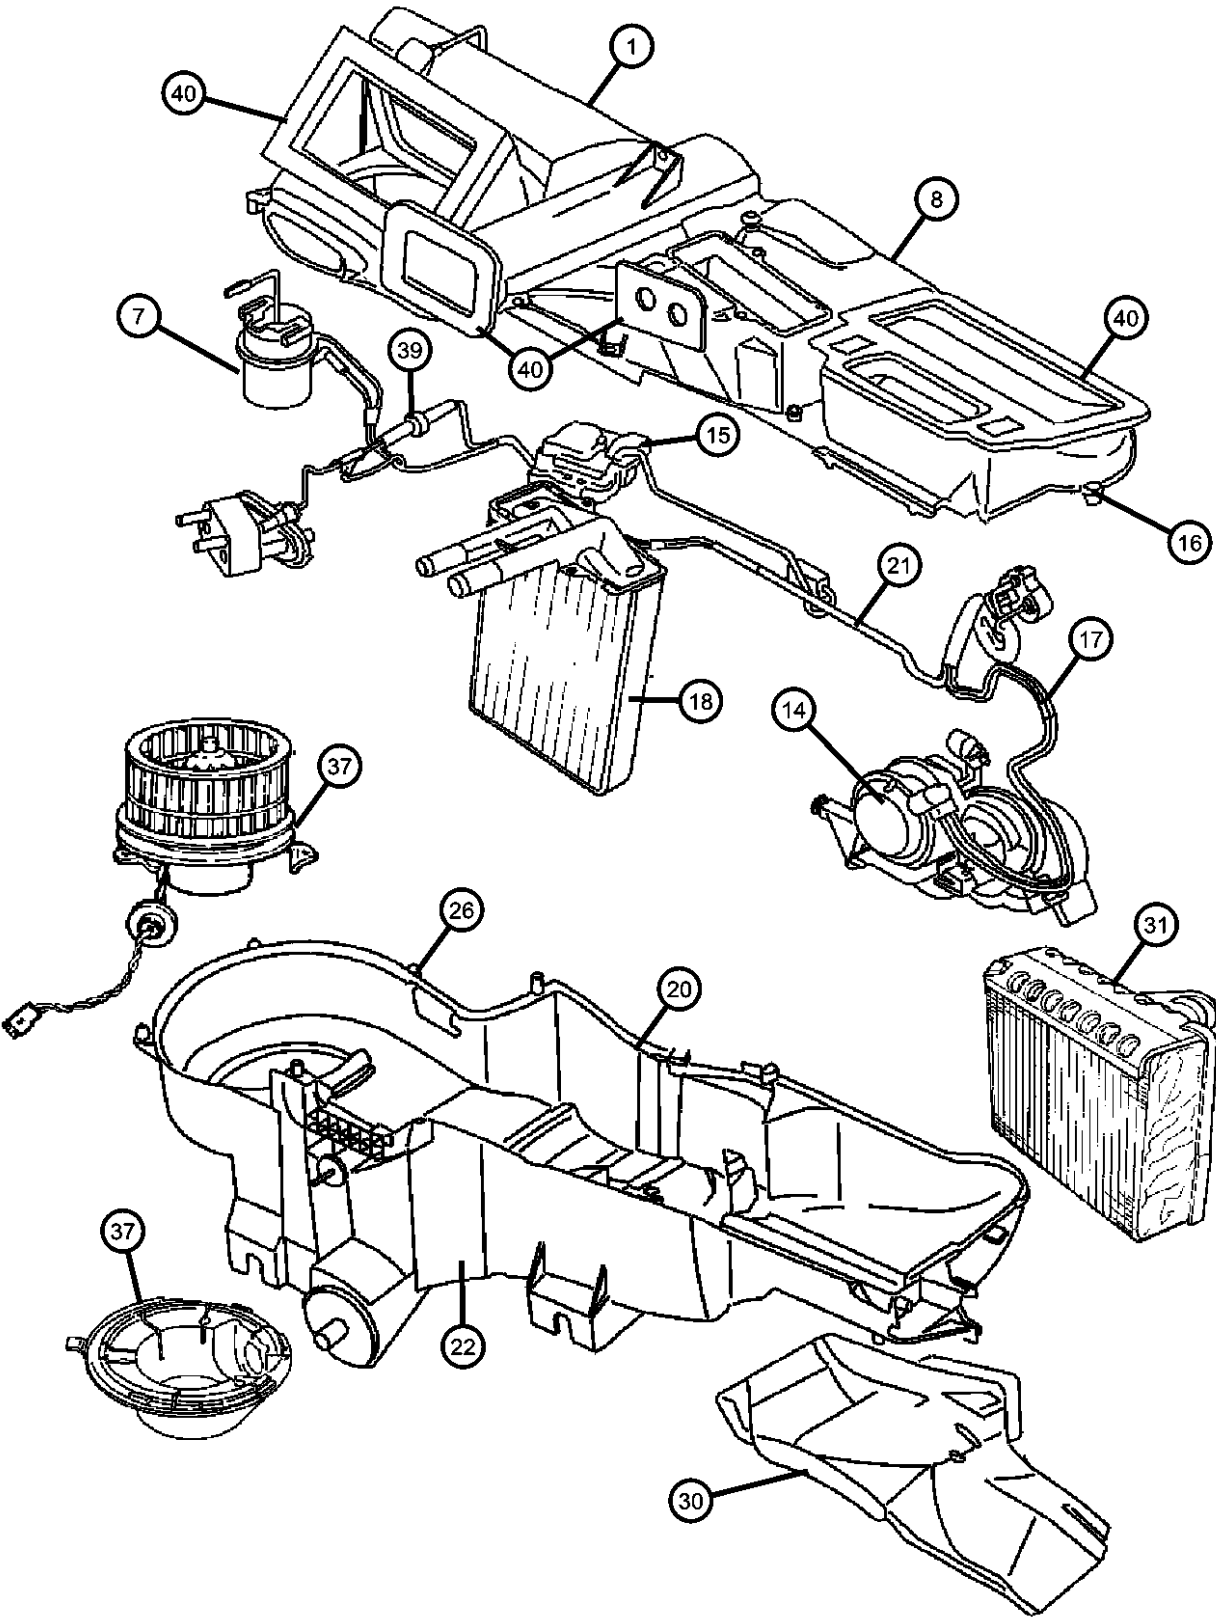


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
17	05066528AA	1	J, T						HARNESS, Jumper
		1	U						
18	05066555AA	1	J, T						HEATER, Core Kit
		1	U						
-19	05066551AA	1	J, T						ISOLATOR, Tube
20	04644388	4	J, T						CLIP, A/C Heater Housing
21									VACUUM HARNESS, Heater and A/C
	05066531AA	1	J, T						
		1	U						
22									HOUSING, A/C Lower
	05066532AB	1	J, T						
	05066534AB	1	U						
-23	05066534AB	1							HOUSING, A/C Lower, (NOT SERVICED)
-24	05066534AB	1							STUD, A/C and Heater Housing Mtg., (NOT SERVICED)
-25	05066534AB	1							WASHER, A/C Unit Mounting Stud, (NOT SERVICED)
26	06101712	2							NUT, U, M6x1.00
-27	06101712	2							DOOR, Blend Air, (NOT SERVICED)
-28	06101712	2							DOOR, A/C and Heater Mode, (NOT SERVICED)
-29	06101712	2							LINK, Blend Door, (NOT SERVICED)
30									DUCT, Floor
	05066535AA	1	J, T						
	05066536AA	1	U						
31	05066549AB	1	J, T						EVAPORATOR, Air Conditioning
-32	05066549AB	1							LINER, Evaporator, (NOT SERVICED)

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16v	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

HEVAC Unit  
Figure 24-110

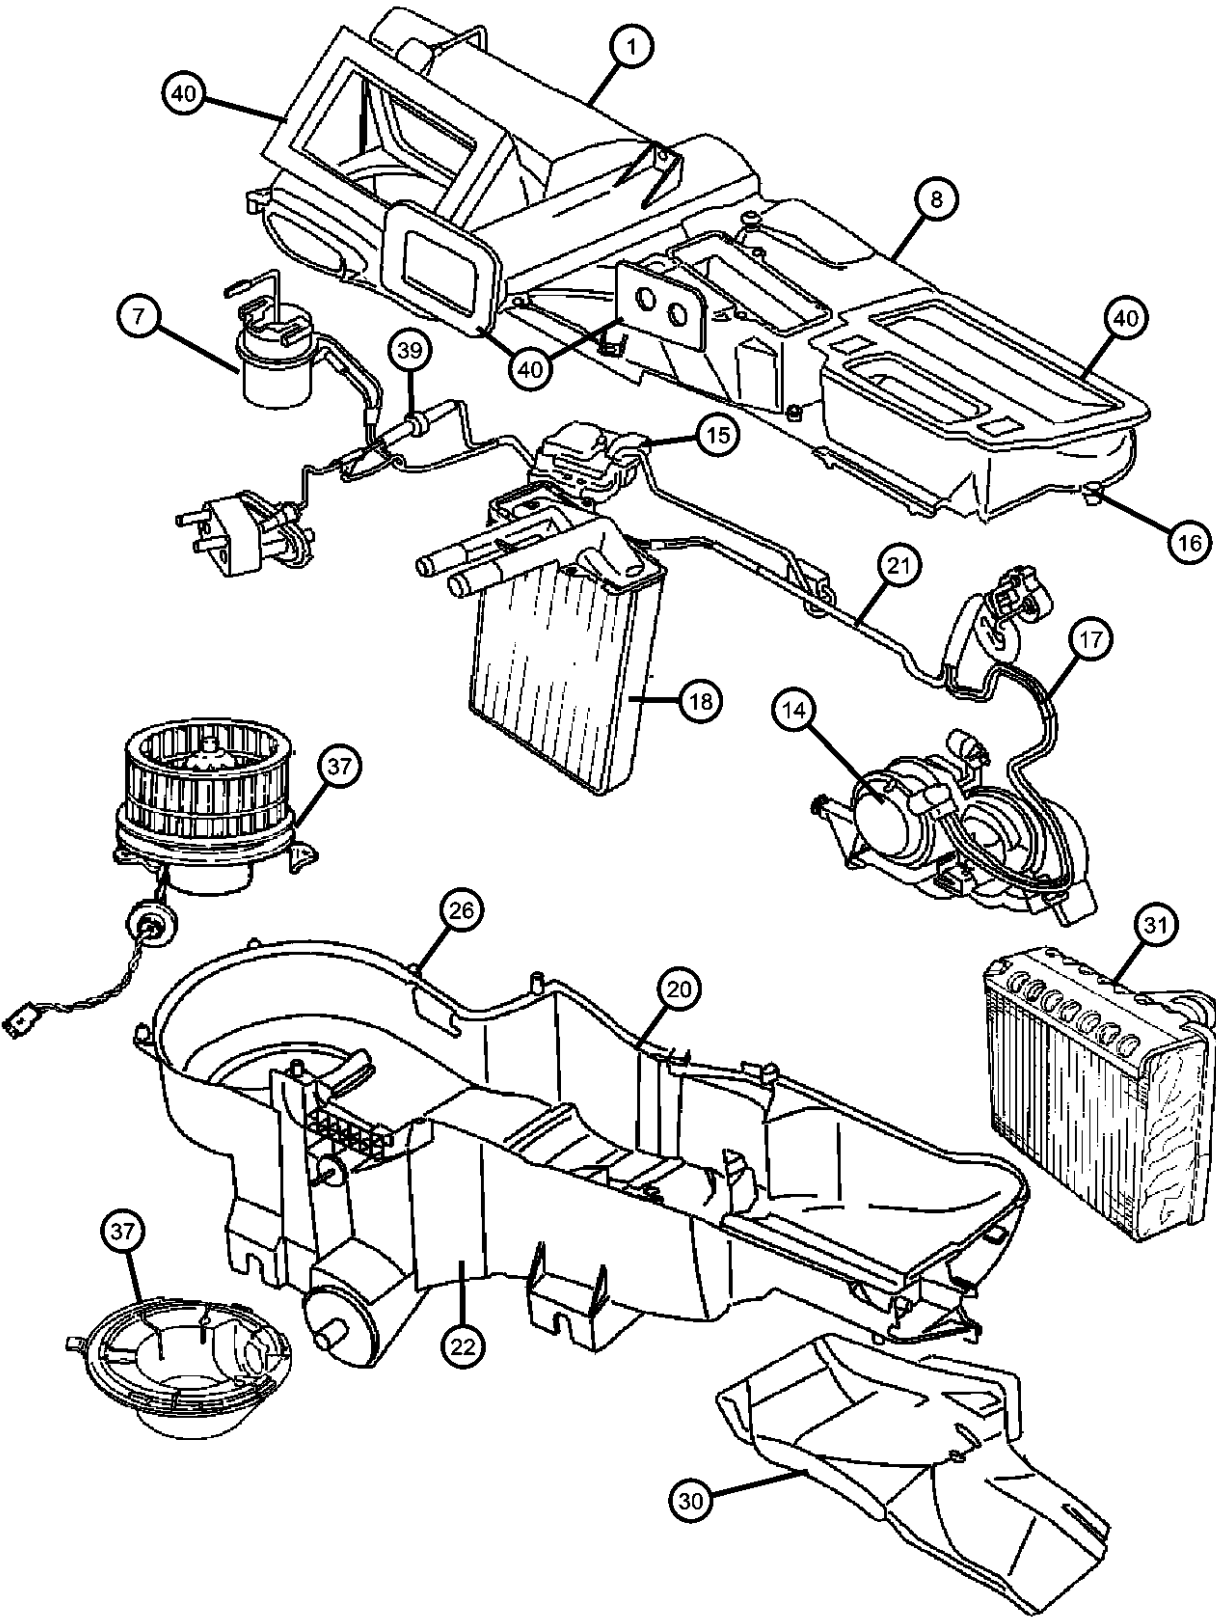

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-33	05066549AB	1							EVAPORATOR, Air Conditioning, (NOT SERVICED)
-34	05066549AB	1							ISOLATOR, Evaporator Tube, (NOT SERVICED)
-35	55037651AA	1	J, T						TUBE, Evaporator Housing
-36	55037651AA	1							SEAL, Evaporator Tube, (NOT SERVICED)
37									MOTOR, Blower with Wheel
	05066553AA	1	J, T						[Up To 10-08-03]
	05066554AA	1	U						[Up To 10-08-03]
	05139720AA	1	J, T						[After 10-08-03]
	05139721AA	1	U						[After 10-08-03]
-38									RESISTOR, A/C Heater
	05066552AA	1	J, T						[Up To 10-08-03]
		1	U						[Up To 10-08-03]
	05139719AA	1	J, T						[After 10-08-03]
		1	U						[After 10-08-03]
39	04549209	1	J, T						VALVE PACKAGE, Check
40									SEAL KIT, A/C And Heater Unit
	05071491AA	1	J, T						
	05072576AA	1	U						
-41									HOSE AND VALVE, Vacuum
	55038432AD	1	J, T						Air Conditioning
	55038433AD	1	U						Air Conditioning
-42	06504441	1				EK0			SCREW AND WASHER, A/C Unit mounting

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	


AR = use ase required - = Non illustrated part

Plumbing, Heater 2.4L Engine, LHD  
Figure 24-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[ED0]=All 2.4L 4 Cyl. 16-V Engines

1	55038330AB	1	J, T			ED0			HOSE, Heater Supply
2	06501474	1	J, T			ED0			BOLT, Hex Head, M8x1.25x16
3	06101445	1	J, T			ED0			NUT AND WASHER, Hex Nut-Coned Washer, M8 x 1.25

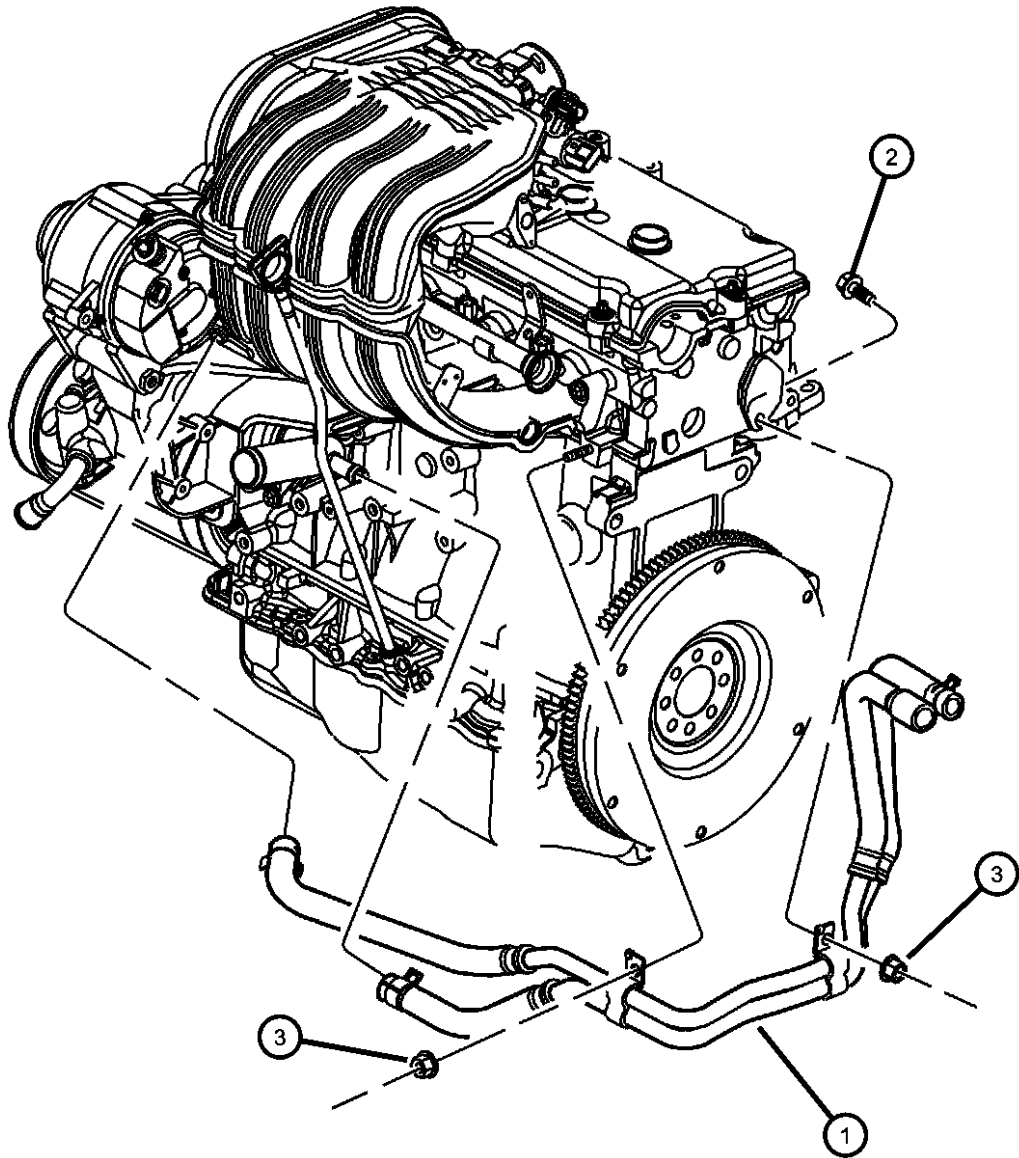

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part

Plumbing, Heater 2.4L Engine, RHD  
Figure 24-220

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines

1	55038333AB	1	U			ED0			HOSE, Heater Supply
-2	06101445	1				ED0			NUT AND WASHER, Hex Nut-Coned Washer, M8 x 1.25, Hose to Cylinder Head

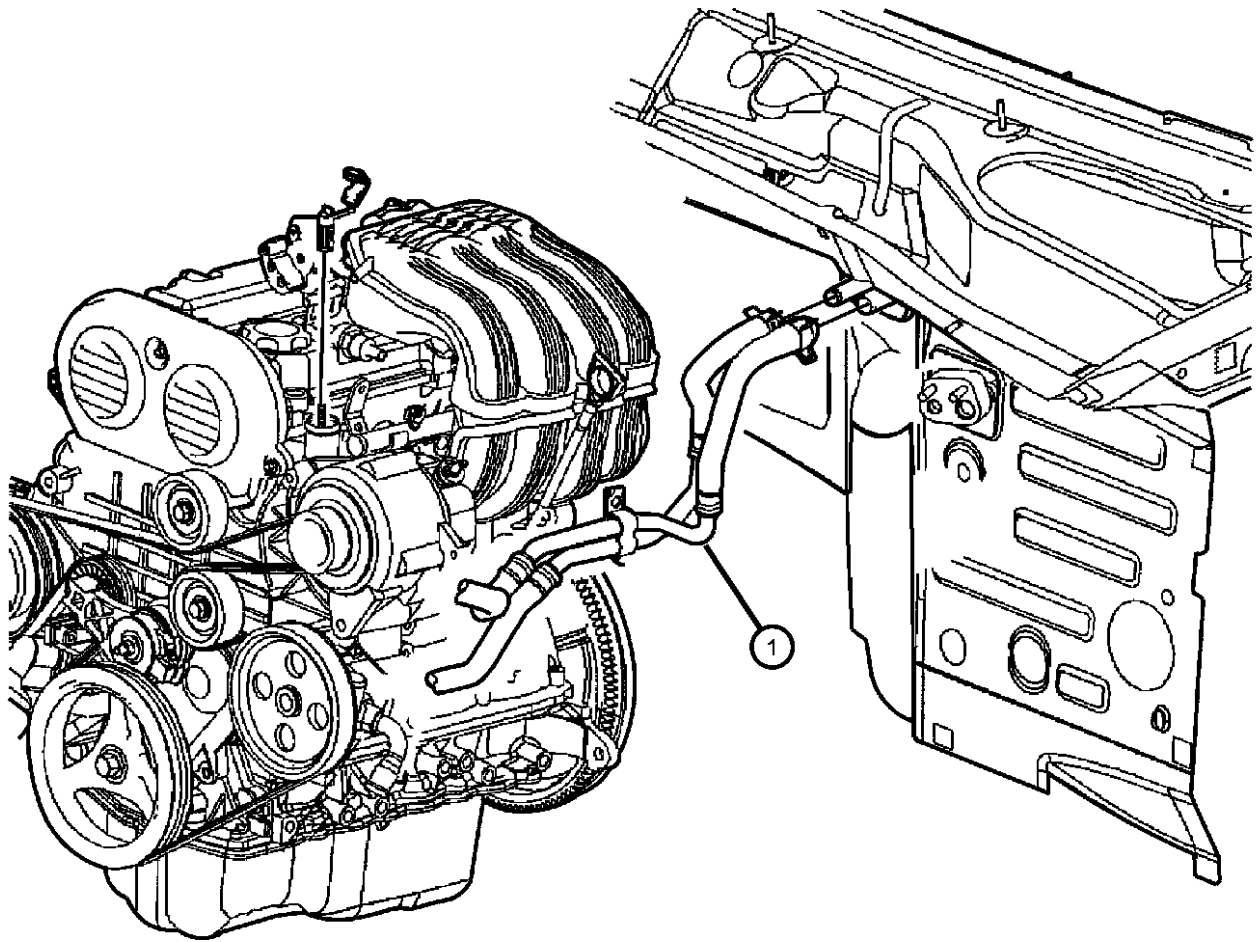

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part




Plumbing, Heater 3.7L Engine, LHD  
Figure 24-230

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:  
Sales Codes:  
[EK0]=All 3.7L V-6 Engines

1	55038331AD	1	J, T			EK0			HOSE, Heater Supply
-2	05072449AA	1	J, T			EK0			BRACKET
-3	05072450AB	1	J, T			EK0			BRACKET
-4	HHR00034AA	1							HOSE 1FT, Heater, 3/4"

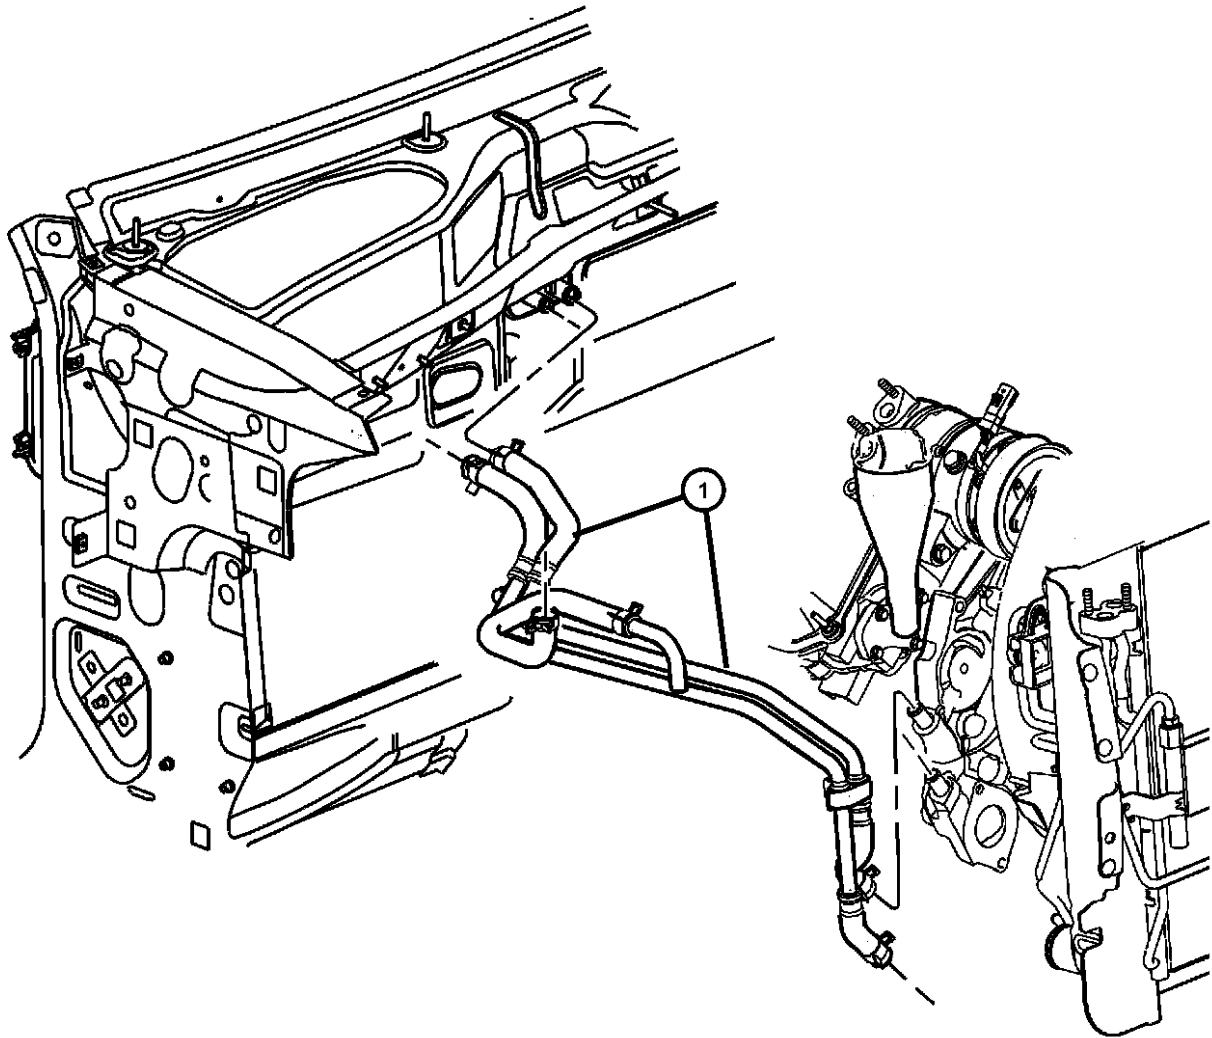

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part

Plumbing, Heater 3.7L Engine, RHD  
Figure 24-240

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[EK0]= All 3.7L, 6 Cylinder Gas Engines

1	05072448AA	1	U			EK0			HOSE, Hot Bottle
2	05072449AA	1	U			EK0			BRACKET, Oil Fill
3	05072450AB	1	U			EK0			BRACKET, Valve Cover
4	05072451AB	1	U			EK0			BRACKET, Intake Manifold
5	55038334AD	1	U			EK0			HOSE, Heater Supply

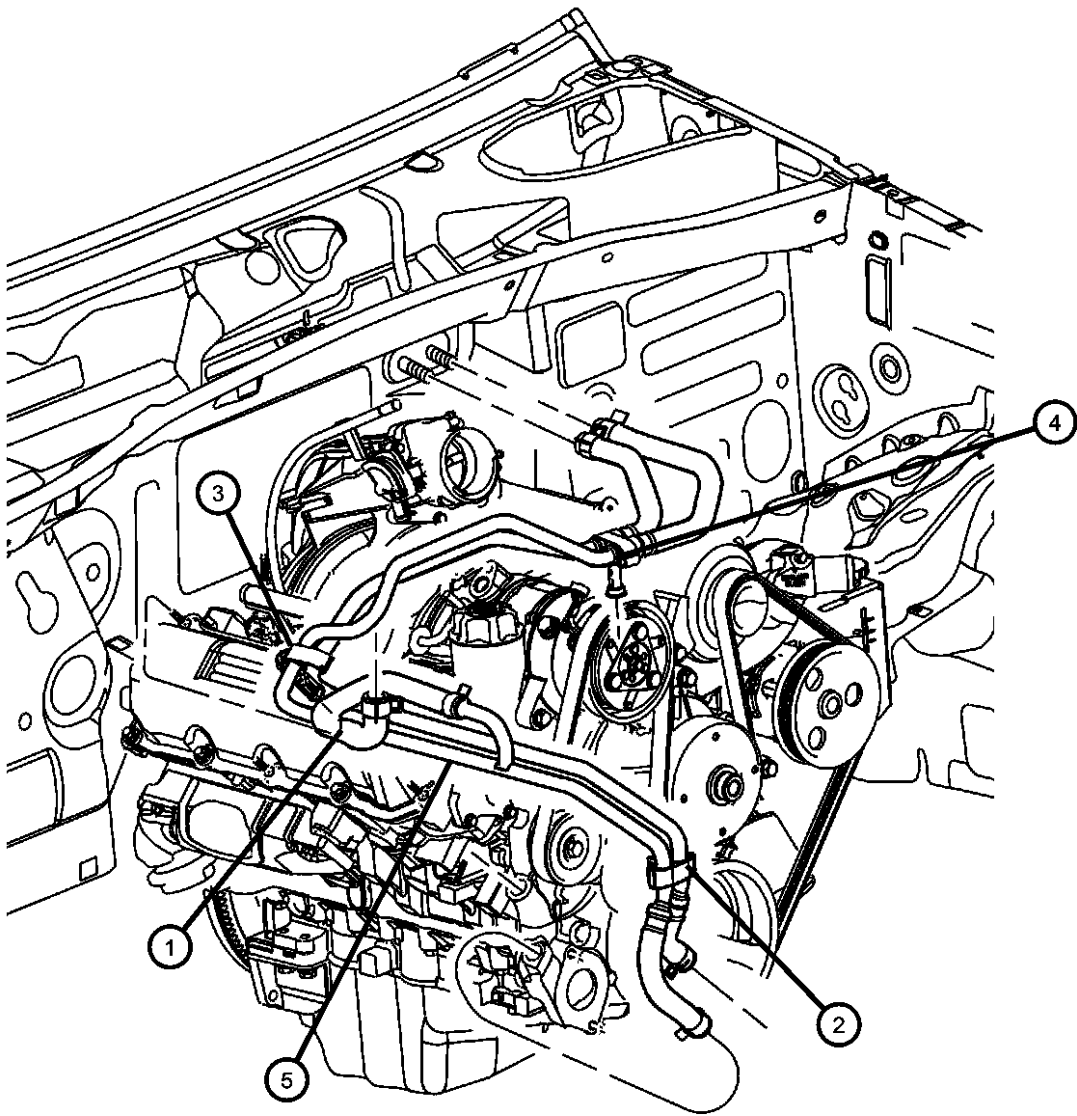


LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Plumbing, Heater 2.5,2.8L Diesel Engine, LHD  
Figure 24-250


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55037605AB	1	J, T			EN0			HOSE
2	55037703AA	1	J, T			EN0			HOSE, Heater Supply
3	06504035	1	J, T			EN0			STUD, M8x1.25x41.00
4	05072740AB	1				EN0			PIPE

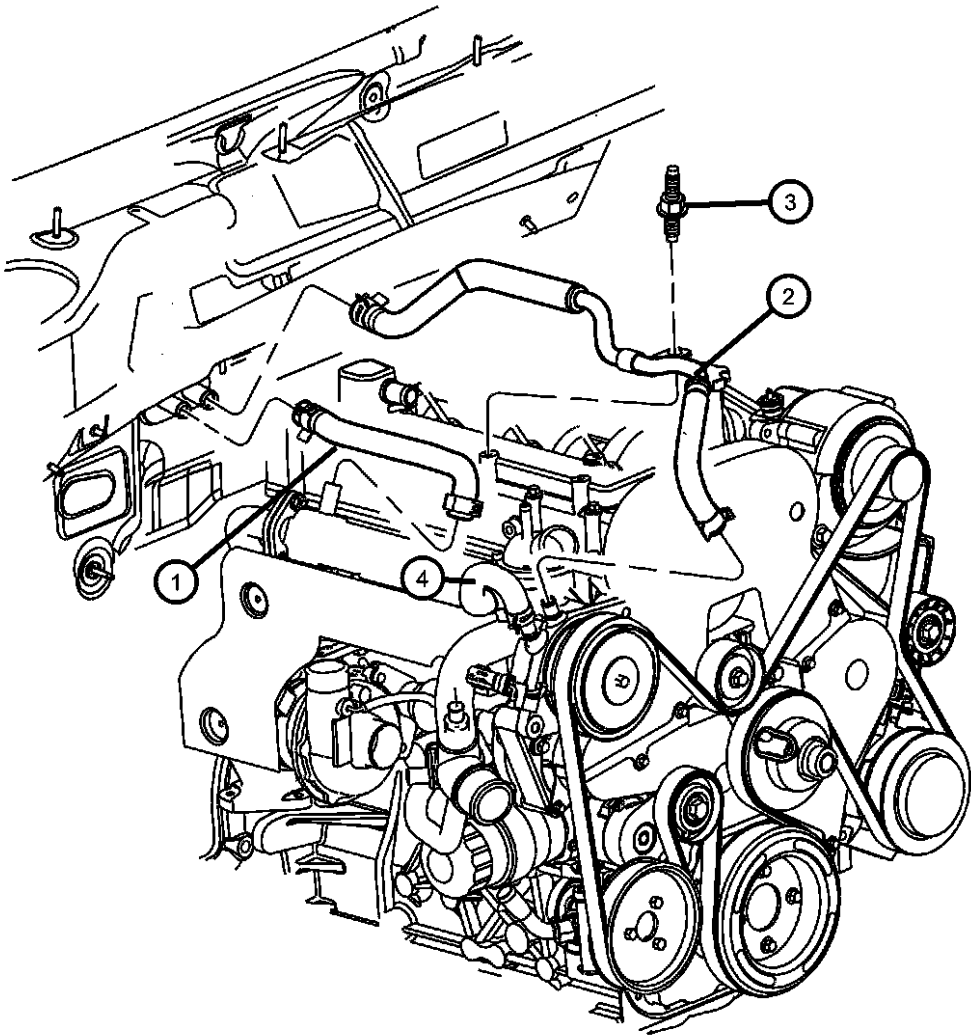

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions


Plumbing, Heater 2.5,2.8L Diesel Engine, RHD  
Figure 24-260

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55037704AA	1	T, U			EN0			HOSE, Heater Supply
2	06501474	2	U			EN0			BOLT, Hex Head, M8x1.25x16

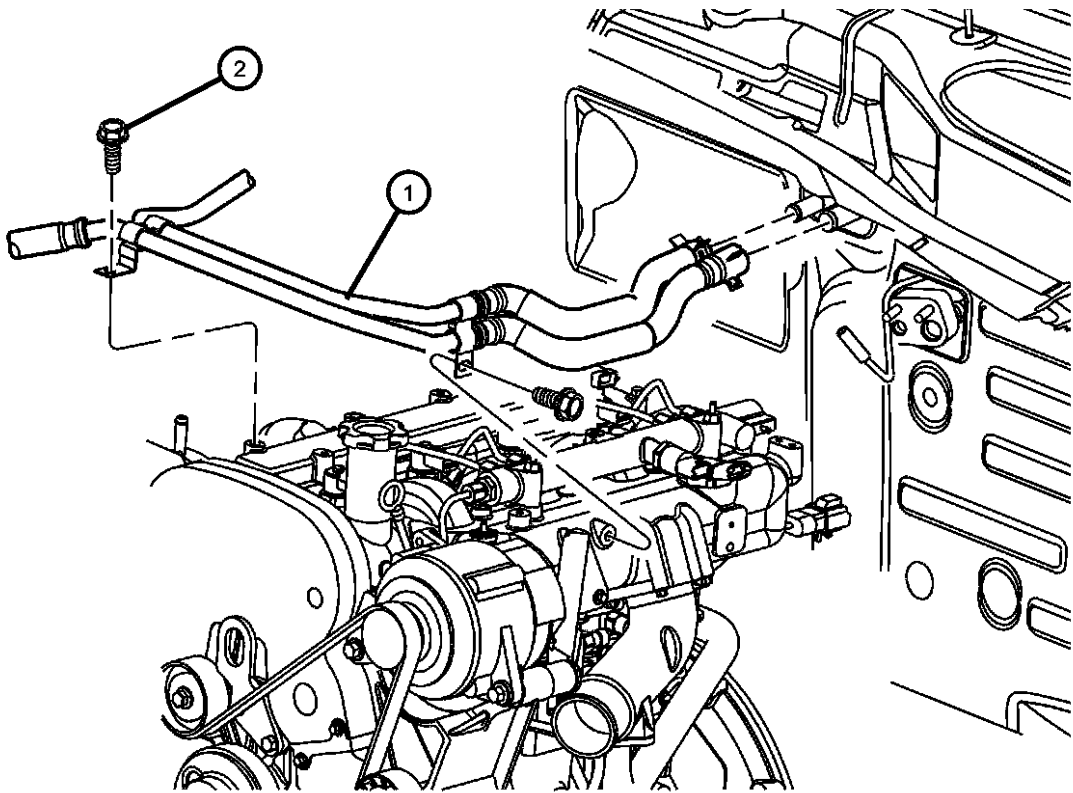

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Plumbing, Air Conditioning 2.4L Engine, LHD  
 Figure 24-270

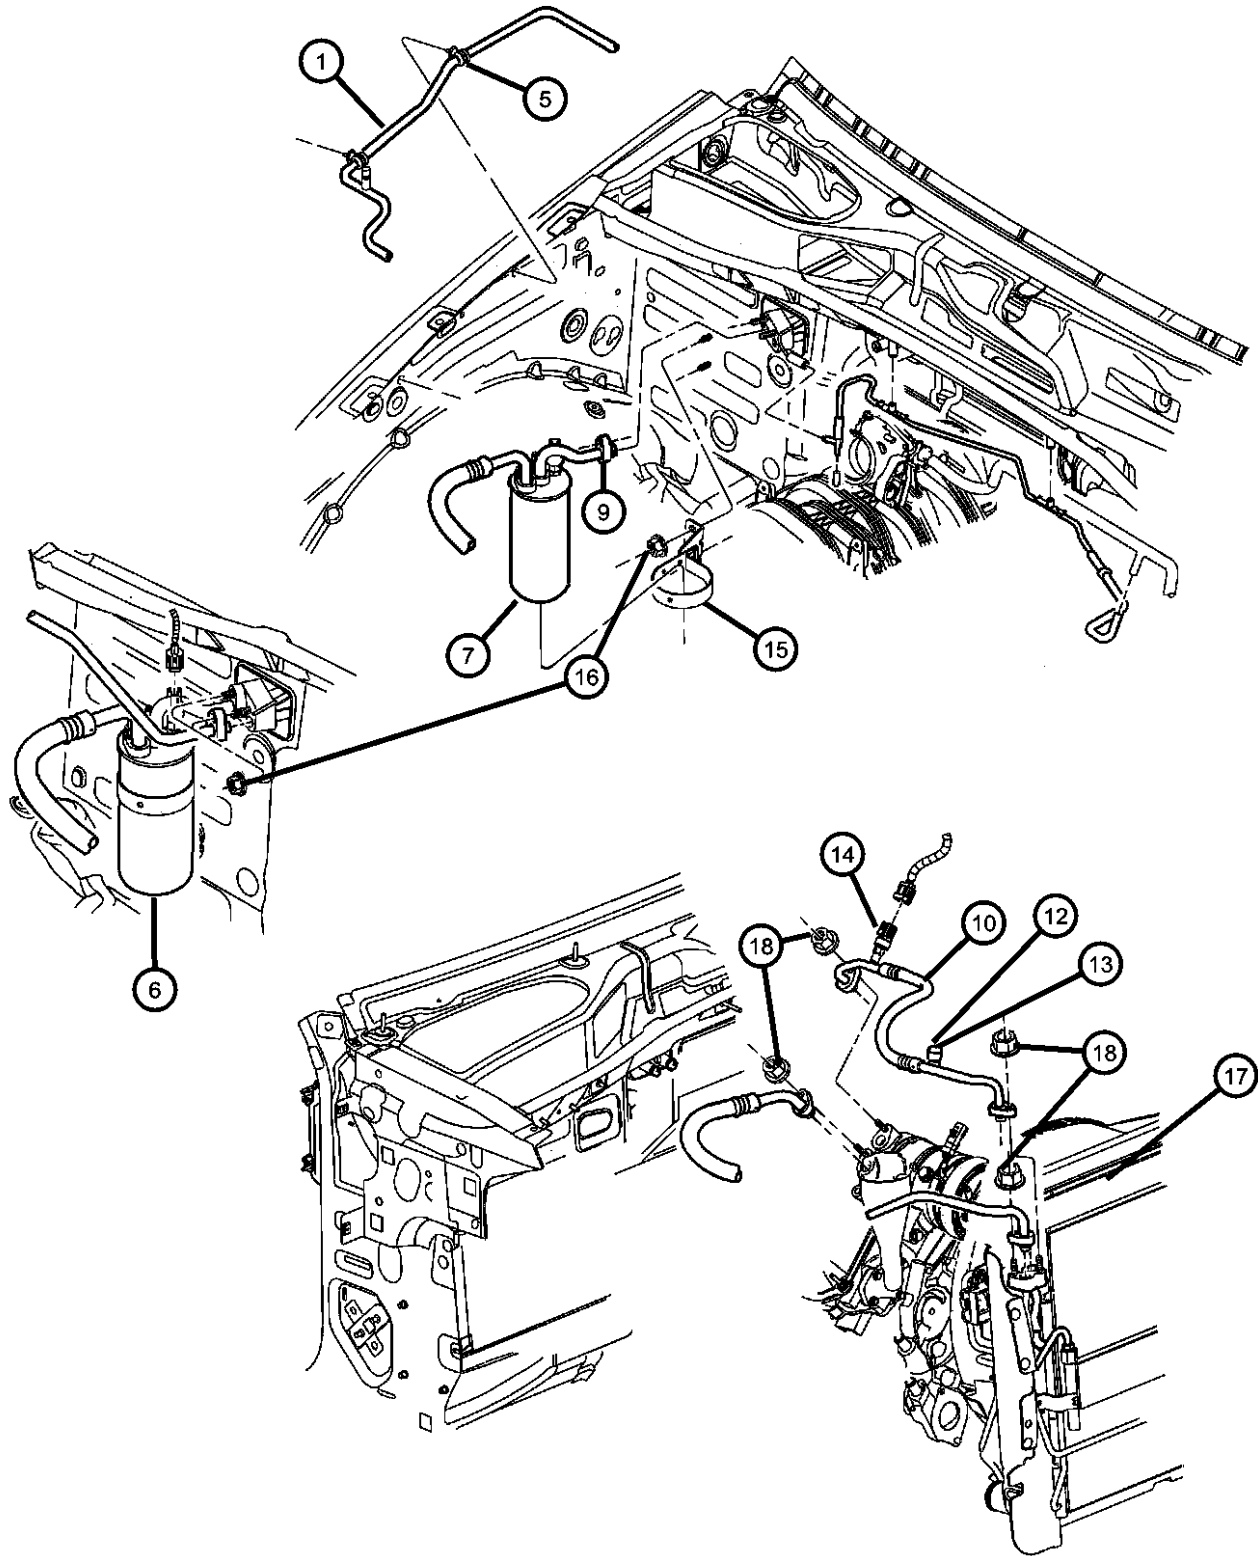


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines									
1	55037809AC	1	J, T						LINE, A/C Liquid
-2	05072141AA	2	J, T						GASKET & O RING KIT, A/C Line
-3	04882334	1	J, T						VALVE, A/C Discharge Line Check
-4									CAP, A/C Check Valve
	05264642	1				ED0			
	04882335	1	J, T						
5	56021384	2							CLIP, Wiring
6	55037803AB	1	J, T			ED0			ACCUMULATOR, Suction Line, Includes: Line and Switch
7	05072139AA	1	J, T			ED0			ACCUMULATOR, Air Conditioning, With Switch
-8	05072141AA	2	J, T						GASKET & O RING KIT, A/C Line, Suction Line
9	05072160AA	1	J, T			ED0			LINE, A/C Liquid
10	55037800AD	1				ED0			LINE, A/C Discharge
-11	05066497AA	2				ED0			GASKET & O RING KIT, A/C Line
12	04882334	1	J, T						VALVE, A/C Discharge Line Check
13	05264642	1				ED0			CAP, A/C Check Valve
14	05072138AA	1				ED0			TRANSDUCER KIT, A/C Pressure
15	55037476AB	1	J, T						BRACKET, Accumulator
16	06506152AA	2	J, T						NUT AND CONED WASHER, Hex, M8x1.25
17	55037465AB	1				ED0			CONDENSER, Air Conditioning
18	06506152AA	2							NUT AND CONED WASHER, Hex, M8x1.25

LIBERTY (KJ)		BODY	ENGINE	TRANSMISSION
SERIES	LINE			
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part

Plumbing, Air Conditioning 2.4L Engine, RHD  
 Figure 24-280

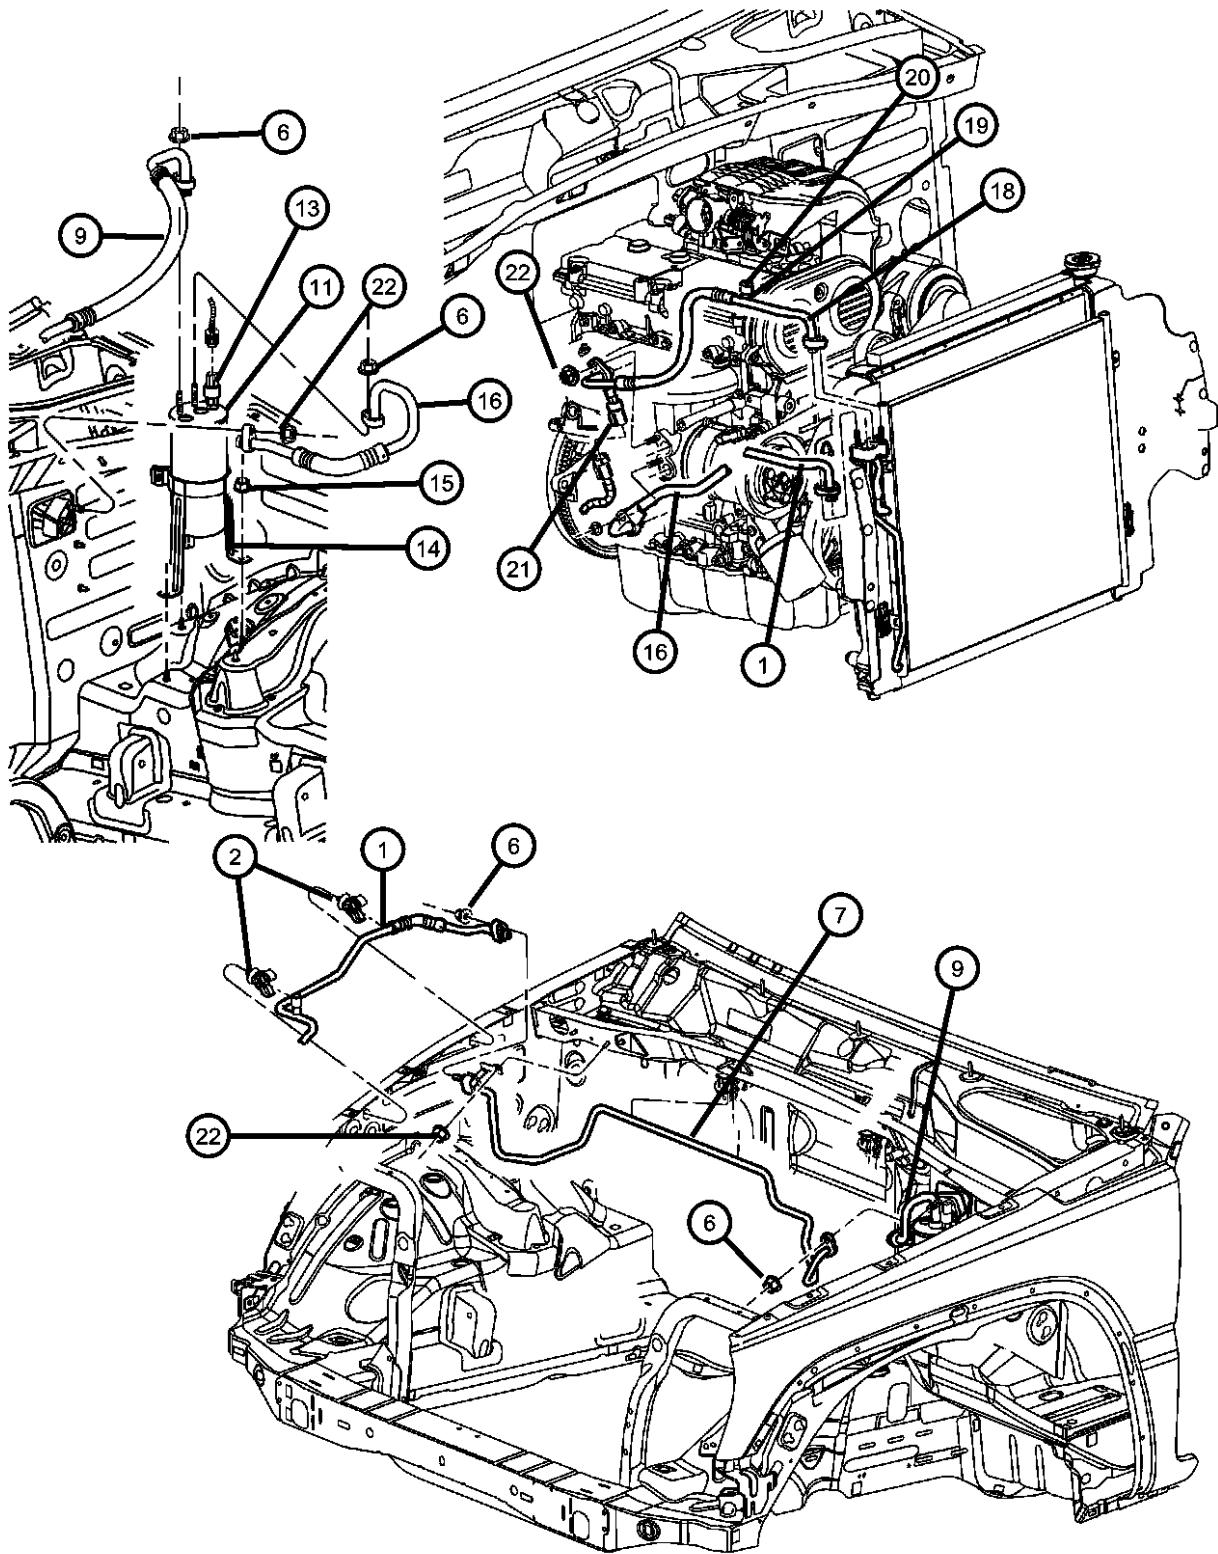


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines									
1	55037810AC	1	U						LINE, A/C Liquid
2	56021384	2							CLIP, Wiring
-3	04882334	1	U						VALVE, A/C Discharge Line Check
-4	04882335	1	U						CAP, A/C Check Valve
-5	05066497AA	2				ED0			GASKET & O RING KIT, A/C Line
6	06506152AA	1	U						NUT AND CONED WASHER, Hex, M8x1.25
7	55037811AC	1	U						LINE, A/C Liquid
-8	05066497AA	2				ED0			GASKET & O RING KIT, A/C Line
9									LINE, A/C Suction
	55037595AB	1	U						
	55037804AB	1	U			ED0			
-10	05066497AA	2				ED0			GASKET & O RING KIT, A/C Line
11	55037471AC	1	U						ACCUMULATOR, Air Conditioning
-12	55037588AA	1	U			ED0			CLIP, A/C Suction Line
13	04799758AC	1	J, U						TRANSDUCER, Pressure Sensor
14	55037476AB	1	J, T						BRACKET, Accumulator
15	06101447	1	U						NUT
16	55037595AB	1	U						LINE, A/C Suction
-17	05072141AA	2	J, T						GASKET & O RING KIT, A/C Line
18	55037800AD	1				ED0			LINE, A/C Discharge
19	04882334	1	U						VALVE, A/C Discharge Line Check
20	04882335	1	U						CAP, A/C Check Valve
21	05072138AA	1				ED0			TRANSDUCER KIT, A/C Pressure
22	06506152AA	1	U						NUT AND CONED WASHER, Hex, M8x1.25
23	55037465AB	1				ED0			CONDENSER, Air Conditioning

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part


Plumbing, Air Conditioning 3.7L Engine, LHD  
Figure 24-285

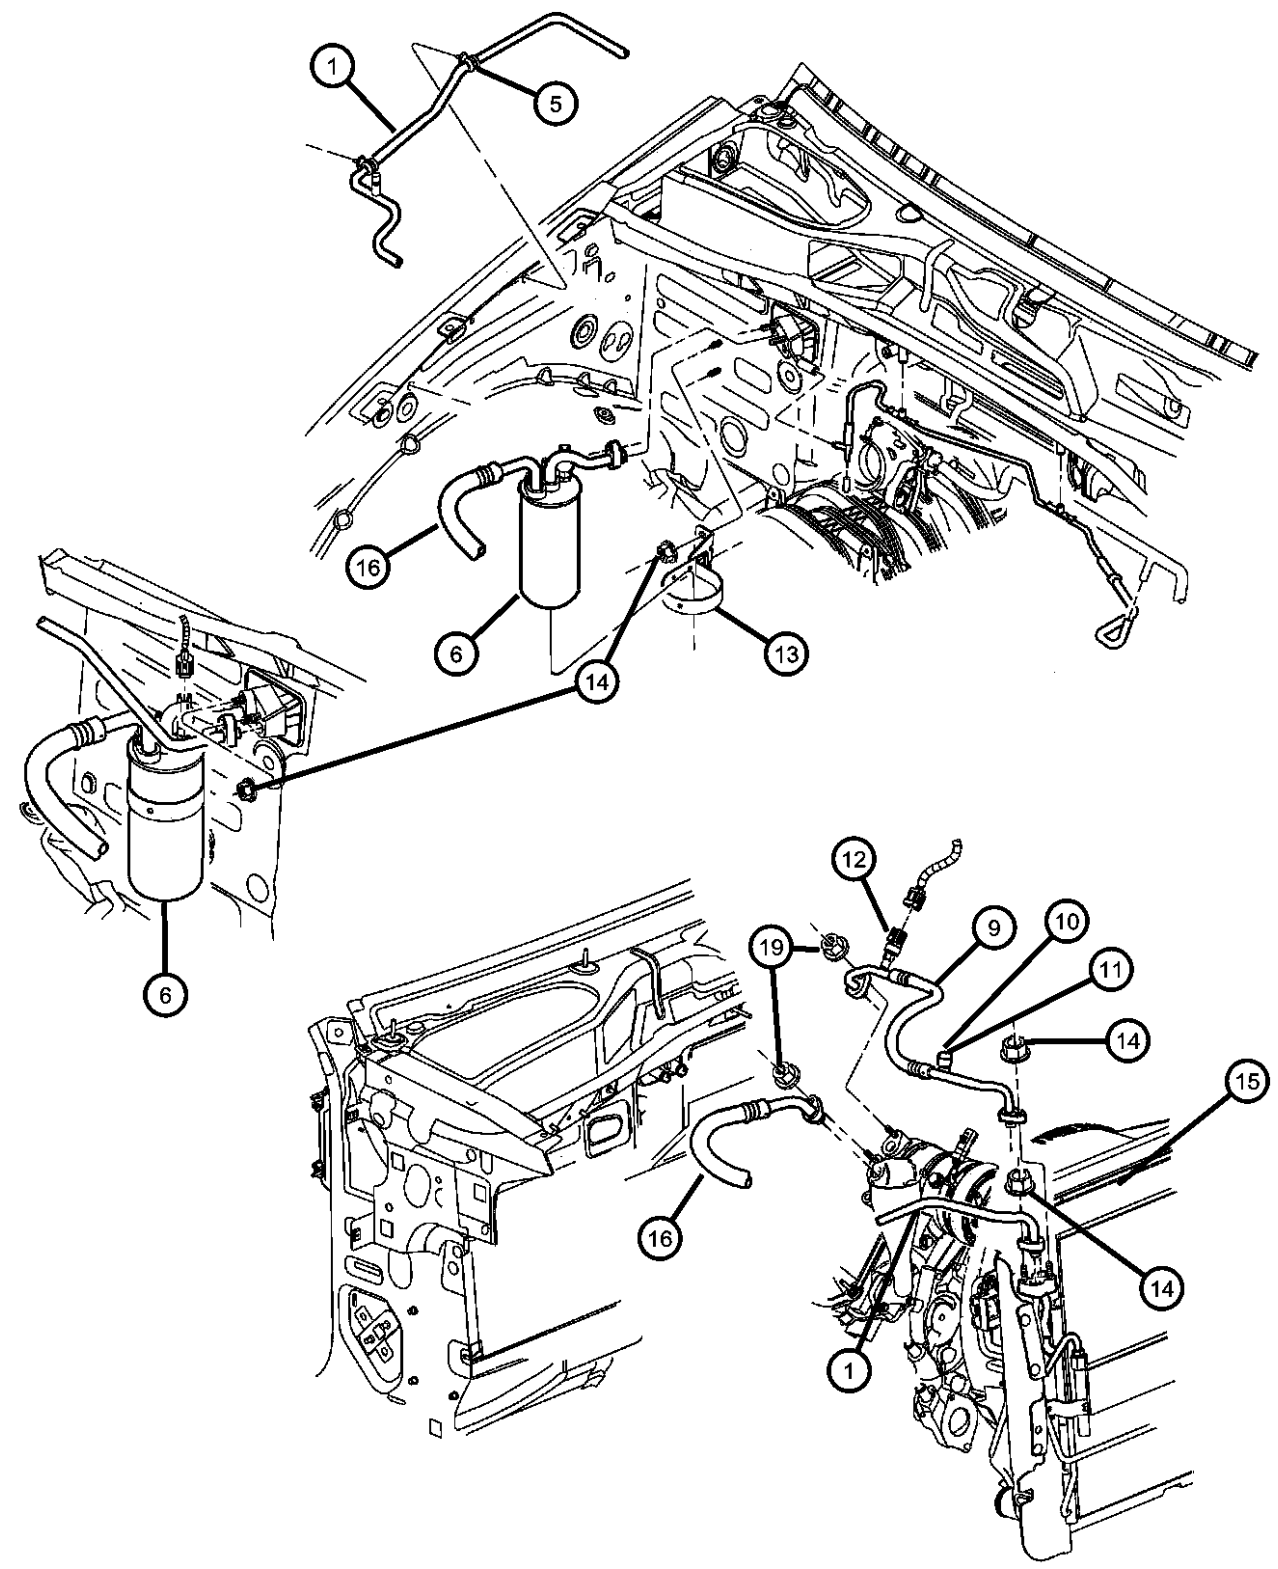

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Sales Codes [EK0]= All 3.7L, 6 Cylinder Gas Engines									
1	55037809AC	1	J, T						LINE, A/C Liquid
-2	05072141AA	2	J, T						GASKET & O RING KIT, A/C Line, To Evaperator or Condensor
-3	04882334	1	J, T						VALVE, A/C Discharge Line Check
-4	04882335	1	J, T						CAP, A/C Check Valve
5	56021384	2							CLIP, Wiring
6	55037807AD	1	T, J			EK0			ACCUMULATOR, Air Conditioning, With Suction Line
-7	55037807AD	1	J, T			EK0			ACCUMULATOR, Air Conditioning, Without Suction Line
-8	05072141AA	2	J, T						GASKET & O RING KIT, A/C Line
9	55037801AC	1				EK0			LINE, A/C Discharge
-10	05066497AA	2				EK0			GASKET & O RING KIT, A/C Line, To Compressor and Condenser
11	04882334	1	J, T						VALVE, A/C Discharge Line Check
12	05264642	1				EK0			CAP, A/C Check Valve
13	05019881AA	1				EK0			TRANSDUCER PACKAGE, A/C Pressure, Discharge Line
14	55037476AB	1	J, T						BRACKET, Accumulator
15	06506152AA	2	J, T						NUT AND CONED WASHER, Hex, M8x1.25
16	55037465AC V8507465AA V8507509AA	1				EK0			CONDENSER, Air Conditioning Mopar ValueLine Condenser Mopar Alternative Condenser ( Without Shroud )
17	05072199AA	1	J, T			EK0			LINE, A/C Suction
-18	05072141AA	2	J, T						GASKET & O RING KIT, A/C Line
-19	05072200AA	1	J, T			EK0			TRANSDUCER, Pressure Sensor, Suction Line
20	06506152AA	2							NUT AND CONED WASHER, Hex, M8x1.25

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION
SERIES	LINE					
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V		Manual
				Turbo Diesel		DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE
				Turbo Diesel		DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L		5-45RFE
						DBB = All Manual Transmissions
						DG0 = All Automatic Transmissions

Plumbing, Air Conditioning 3.7L Engine, RHD  
 Figure 24-288

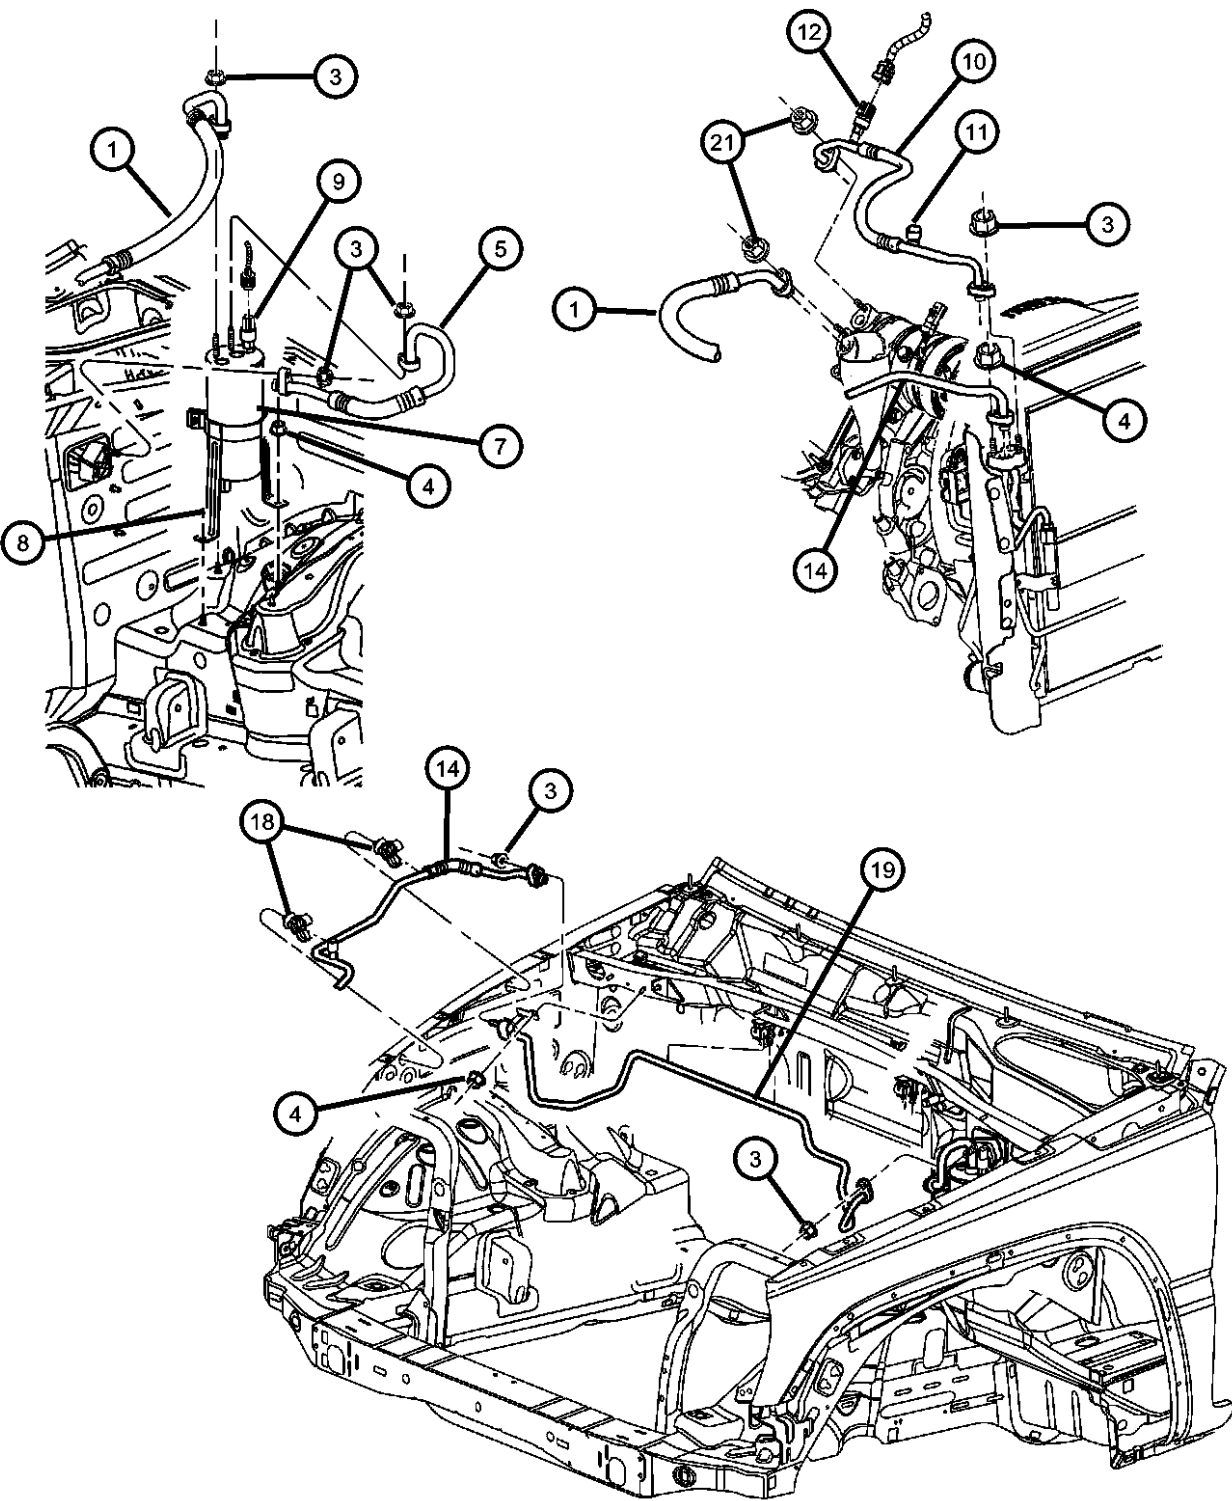


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [EK0]= All 3.7L, 6 Cylinder Gas Engines									
1	55037808AA	1	U			EK0			LINE, A/C Suction
-2	05072141AA	2	J, T						GASKET & O RING KIT, A/C Line
3	06506152AA	1	U						NUT AND CONED WASHER, Hex, M8x1.25
4	06101447	1	U						NUT
5	55037595AB	1	U						LINE, A/C Suction, to Evaporator
-6	05072141AA	2	J, T						GASKET & O RING KIT, A/C Line
7	55037471AC	1	U						ACCUMULATOR, Air Conditioning
8	55037476AB	1	J, T						BRACKET, Accumulator
9	05072200AA	1	J, T			EK0			TRANSDUCER, Pressure Sensor
10	55037801AC	1				EK0			LINE, A/C Discharge
11	05264642	1				EK0			CAP, A/C Check Valve
12	05072200AA	1	J, T			EK0			TRANSDUCER, Pressure Sensor
-13	05066497AA	2				EK0			GASKET & O RING KIT, A/C Line
14	55037810AC	1	U						LINE, A/C Liquid
-15	04882334	1	U						VALVE, A/C Discharge Line Check
-16	04882335	1	U						CAP, A/C Check Valve
-17	05066497AA	2				EK0			GASKET & O RING KIT, A/C Line
18	56021384	2							CLIP, Wiring
19	55037811AC	1	U						LINE, A/C Liquid
-20	05066497AA	2				EK0			GASKET & O RING KIT, A/C Line
21	06506152AA	2							NUT AND CONED WASHER, Hex, M8x1.25

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part



Plumbing, Air Conditioning 2.5,2.8L Diesel Engine, LHD  
 Figure 24-290

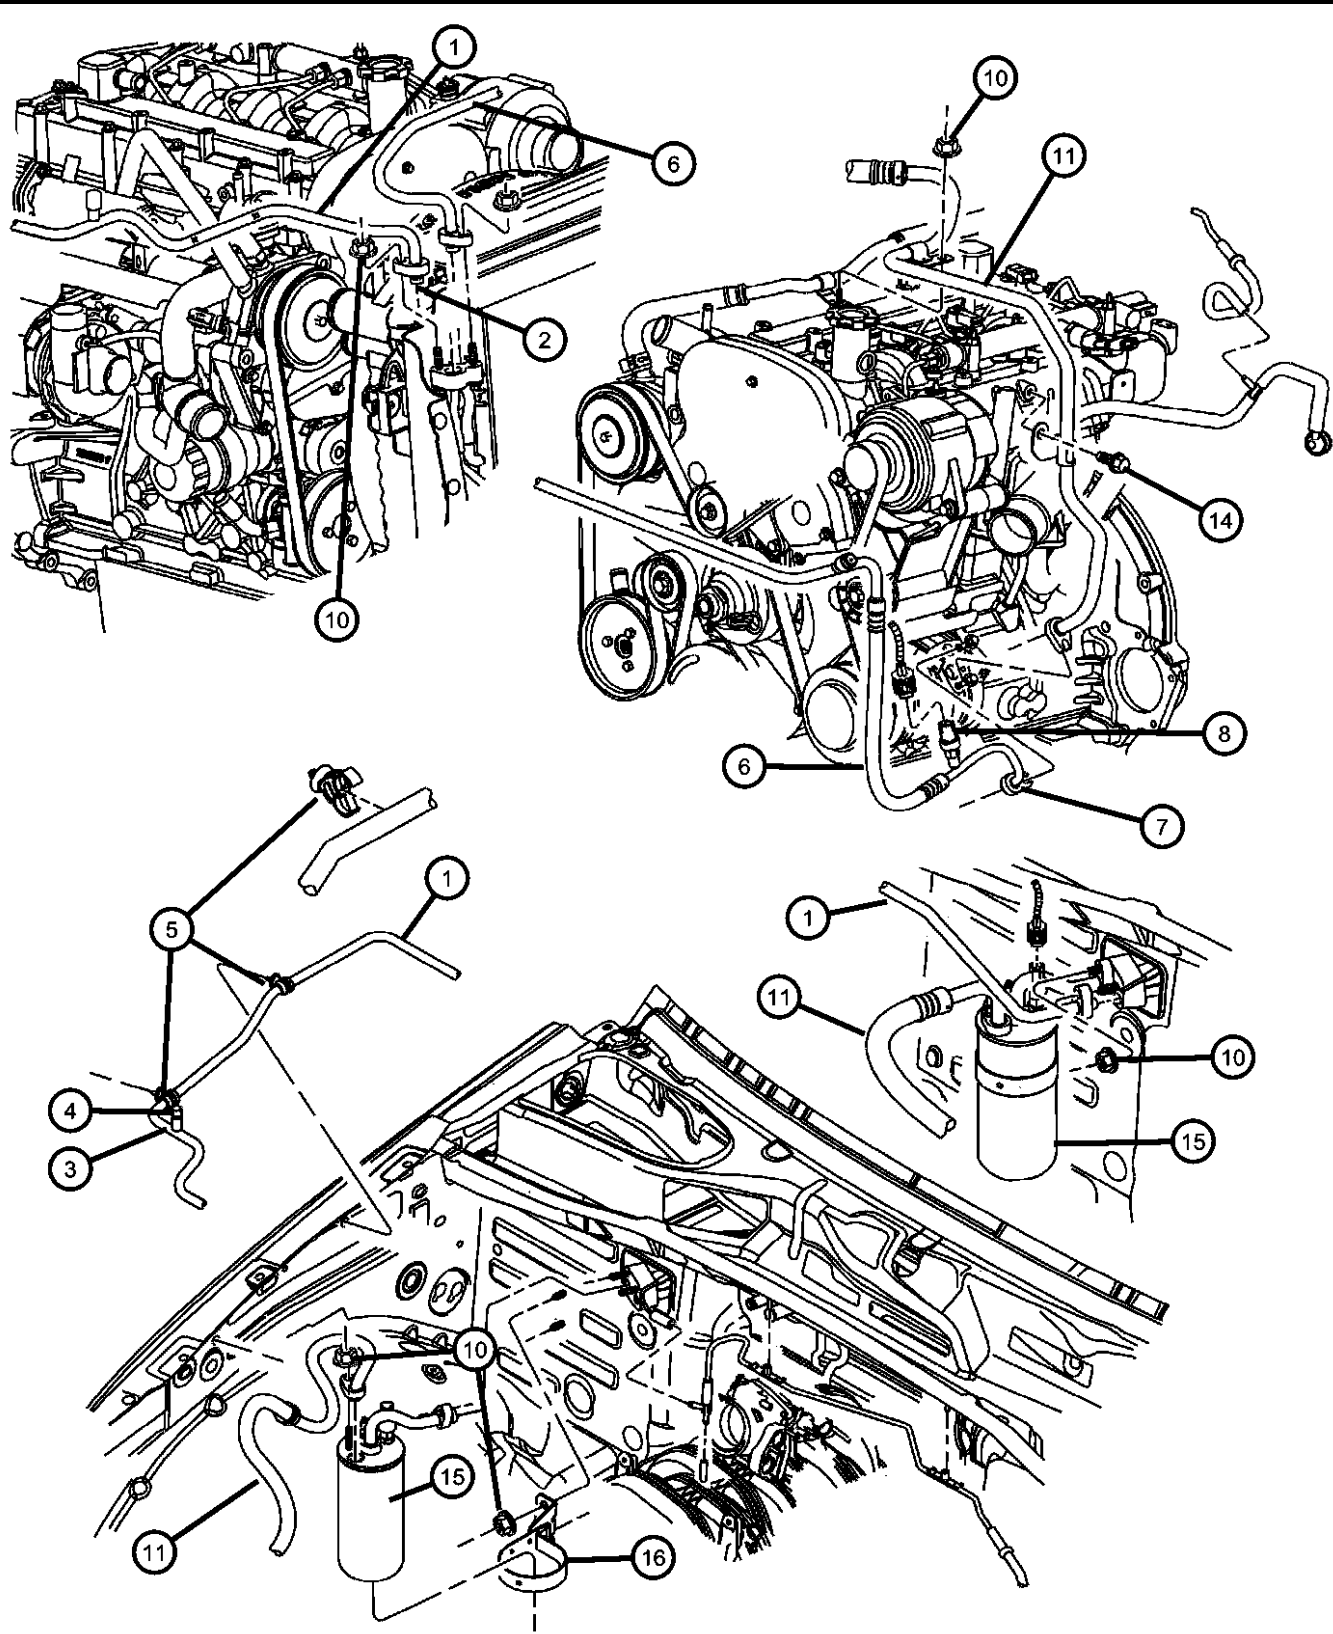


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55037809AC	1	J, T						LINE, A/C Liquid
2	05072141AA	1	J, T			EN0			GASKET & O RING KIT, A/C Line
3	04882334	1	J, T						VALVE, A/C Discharge Line Check
4	04882335	1	J, T						CAP, A/C Check Valve
5	55036022	2				EN0			CLIP, A/C Liquid Line
6	55037802AB	1				EN0			LINE, A/C Discharge
7	05066497AA	2				EN0			GASKET & O RING KIT, A/C Line
8	05072138AA	1				EN0			TRANSDUCER KIT, A/C Pressure
-9	04796565	1				EN0			O RING, A/C Line, 1/2 inch - Red
10	06506152AA	2	J, T						NUT AND CONED WASHER, Hex, M8x1.25
11	55037805AC	1	J, T			EN0			LINE, A/C Suction
-12	04796564	1	J, T			EN0			O RING, A/C Line, 5/8 inch - Red
-13	05072141AA	1	J, T			EN0			GASKET & O RING KIT, A/C Line
14	06501474	1	J, T			EN0			BOLT, Hex Head, M8x1.25x16
15	55037470AC	1	J, T			EN0			ACCUMULATOR, Suction and Discharge Line
16	55037476AB	1	J, T						BRACKET, Accumulator

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part

Plumbing, Air Conditioning 2.5,2.8L Diesel Engine, RHD  
Figure 24-295

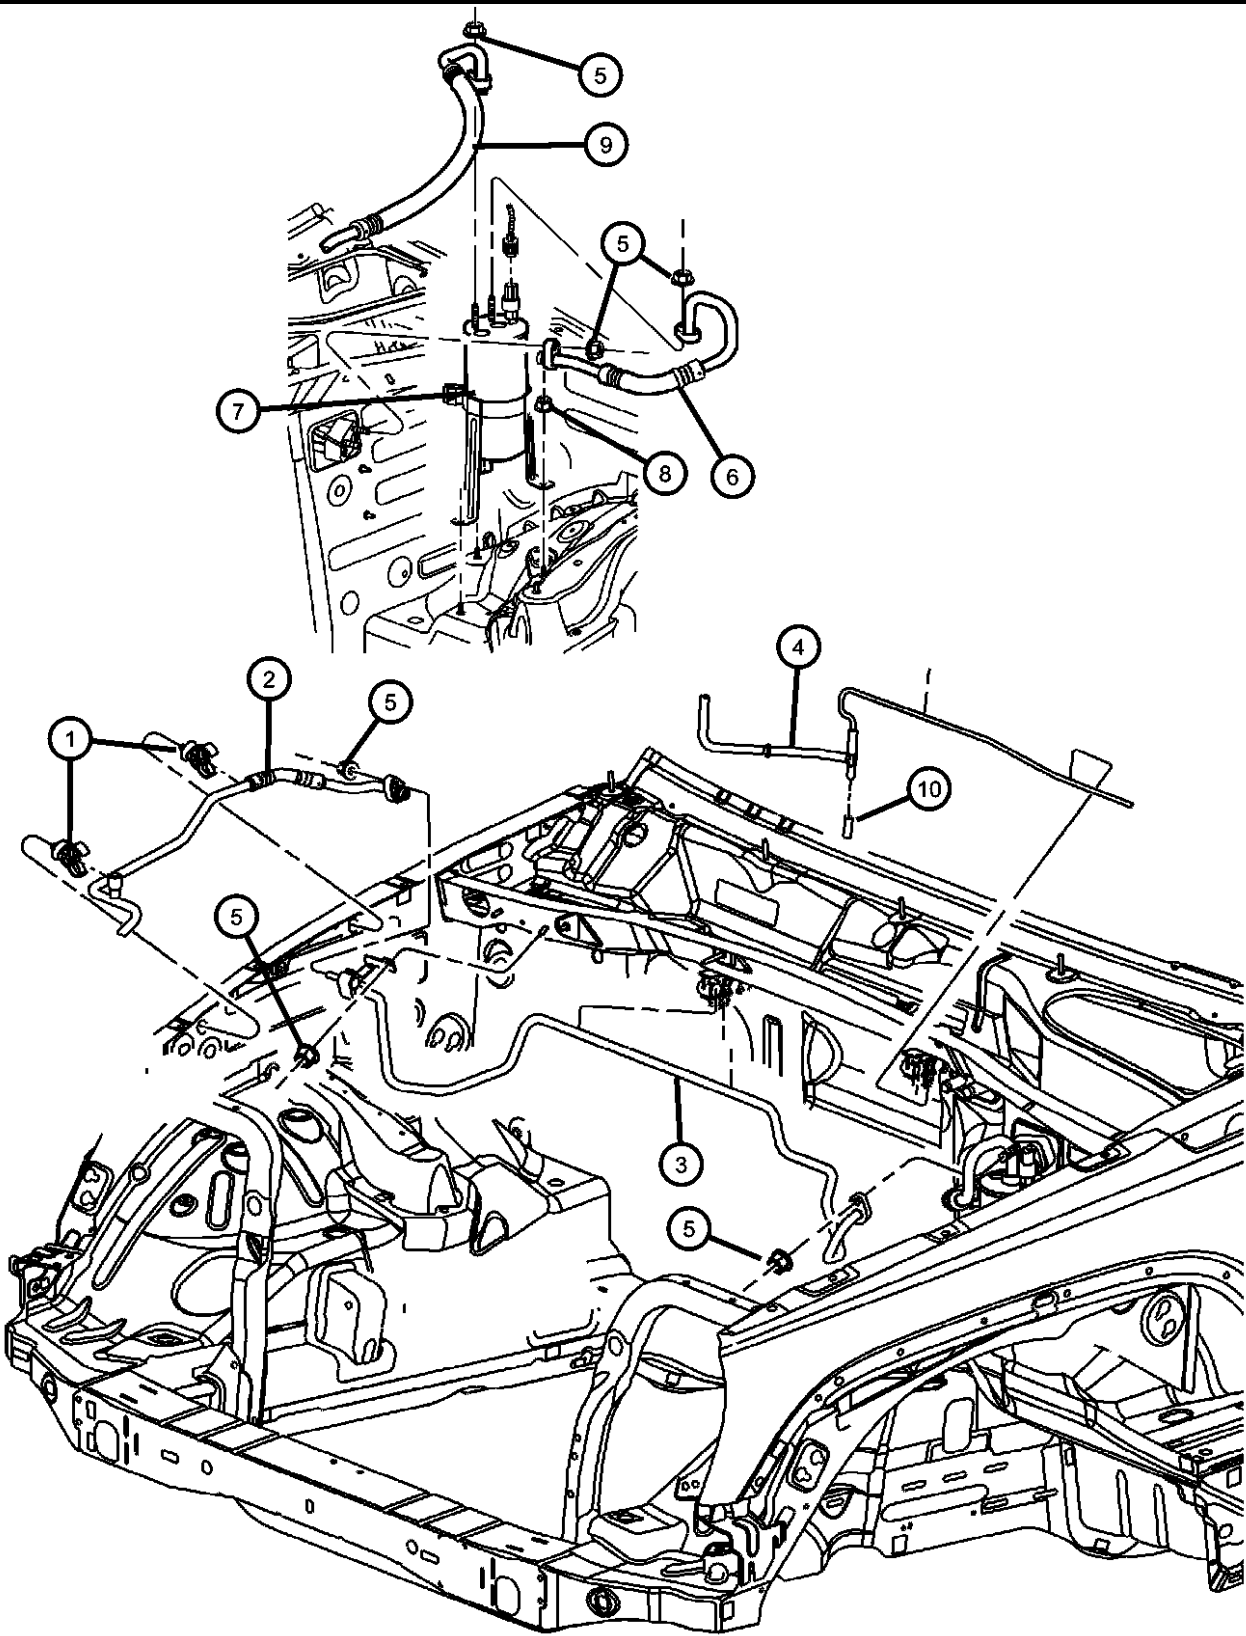


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	56021384	2							CLIP, Wiring
2	55037810AC	1	U						LINE, A/C Liquid
3	55037811AC	1	U						LINE, A/C Liquid
4	55038433AD	1	U						HOSE AND VALVE, Vacuum
5	06506152AA	3				EN0			NUT AND CONED WASHER, Hex, M8x1.25
6	55037595AB	1	U						LINE, A/C Suction
7	55037471AC	1	U						ACCUMULATOR, Air Conditioning
8	06101447	1	U						NUT
9	55037806AA	1	U			EN0			LINE, A/C Suction
10	03580172	1							CAP, Vacuum

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Control, Heater and Air Conditioning  
Figure 24-310


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55037533AD	1							CONTROL, A/C And Heater, with Air Conditioning
-2	55037531AD	1							CONTROL, Heater, without Air Conditioning
3	05069169AA	3							KNOB, A/C And Heater Control - Rotary
-4	05069170AA	2							BULB, Heater and A/C Control

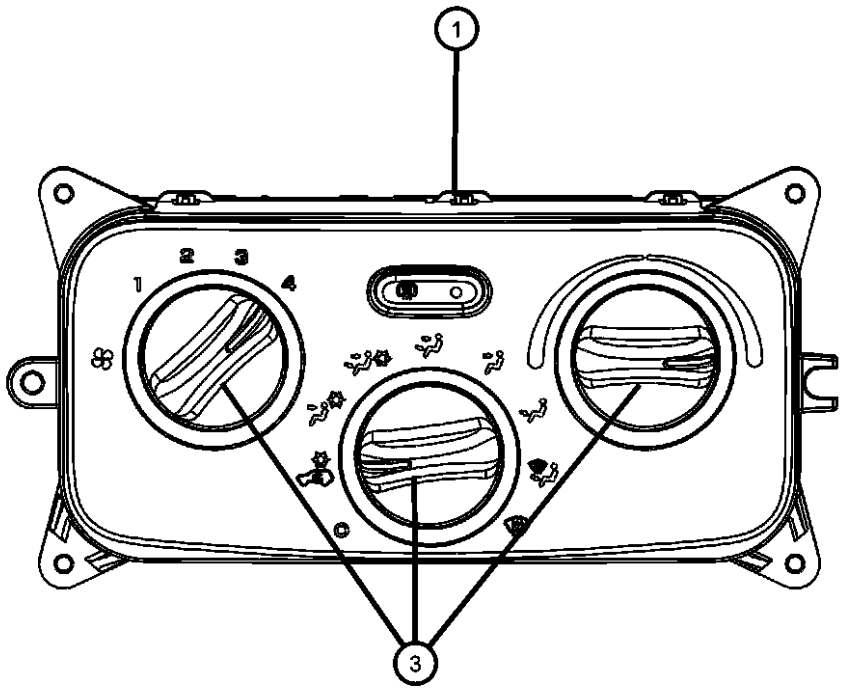

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Compressor, 2.4L - 3.7L Engine  
Figure 24-410

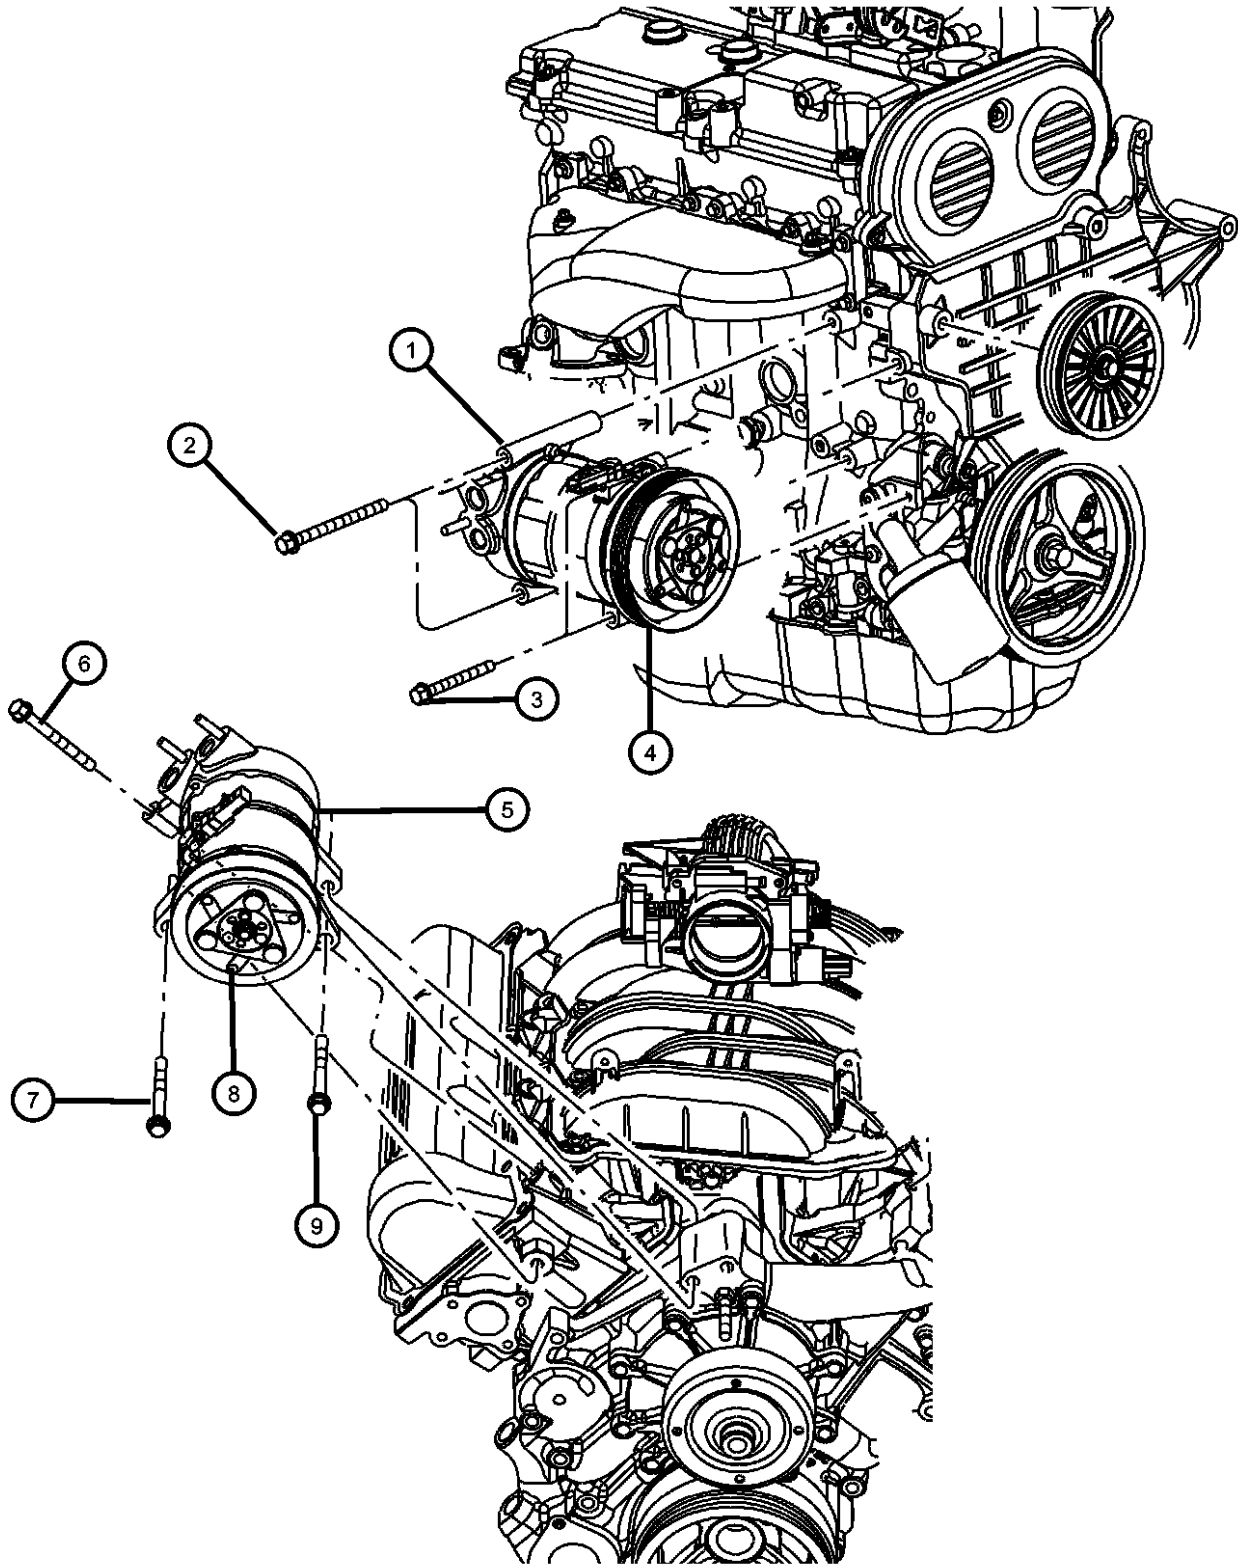


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes									
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines									
[EK0]= All 3.7L, 6 Cylinder Gas Engines									
1	55037524AE	1				ED0			COMPRESSOR, Air Conditioning
2	06102178AA	2				ED0			SCREW, Hex Flange Head, M8x1.25x130
3	06102178AA	2							BOLT, (NOT SERVICED)
4	05083076AA	1				EK0			CLUTCH, A/C Compressor
5	55037466AE	1				EK0			COMPRESSOR, Air Conditioning
6	06505482AA	1				EK0			SCREW AND WASHER, Hex Head, M8x1.25x50
7	06505487AA	1				EK0			SCREW AND WASHER, M10x1.5x45
8	05083076AA	1				EK0			CLUTCH, A/C Compressor
9	06504344	1				EK0			SCREW AND WASHER, Hex Head

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	


Compressor, 2.5,2.8L Diesel Engine  
Figure 24-430

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									COMPRESSOR, Air Conditioning
	05093940AA	1				EN0			Without Clutch
	55037467AB	1				EN0			With Clutch

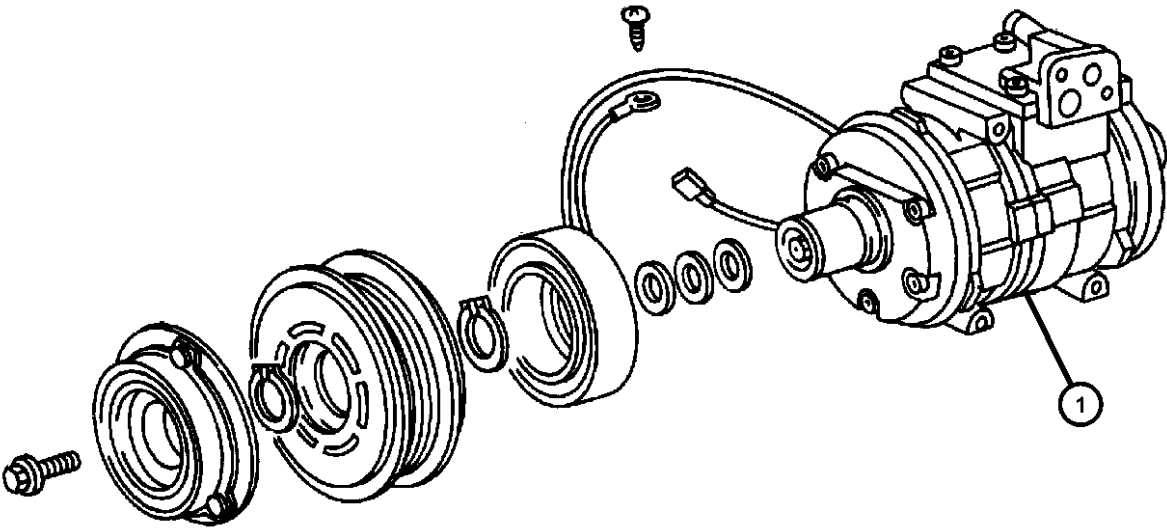

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Compressor Mounting, 2.4L - 3.7L Engine  
Figure 24-510

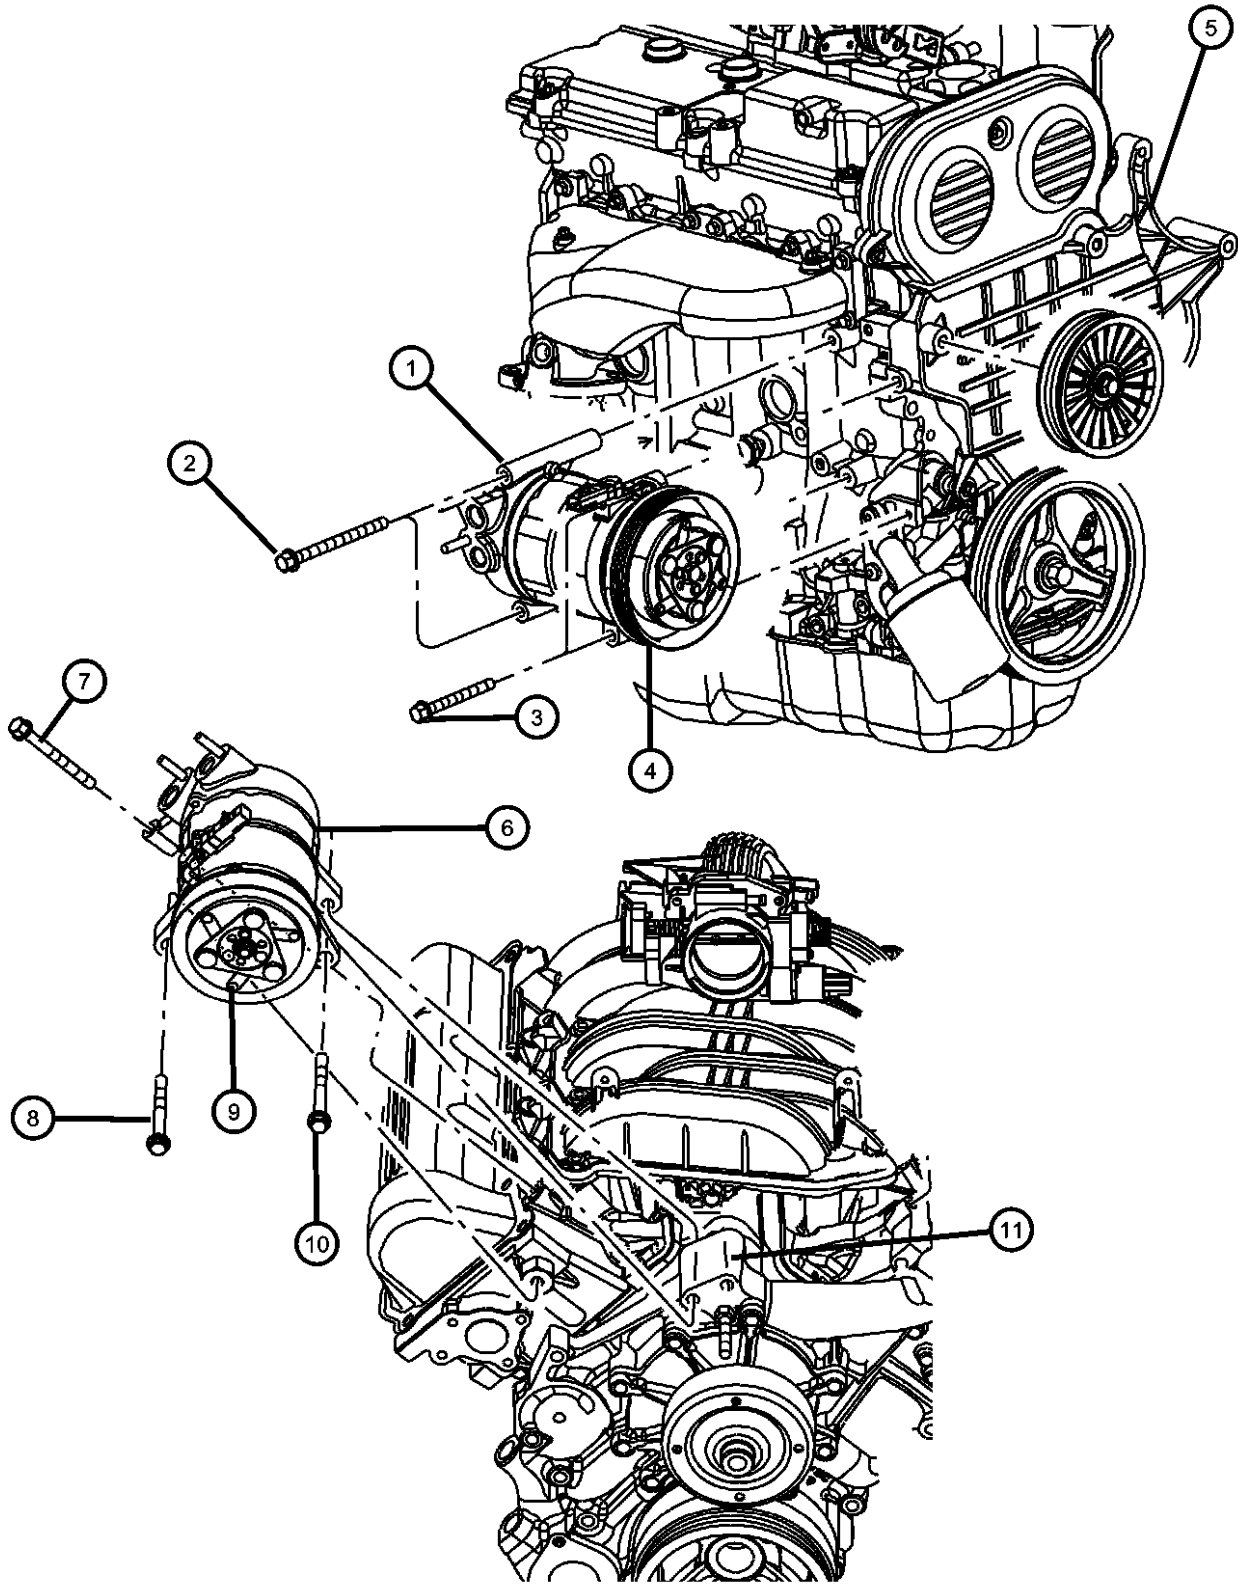


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes									
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines									
[EK0]= All 3.7L, 6 Cylinder Gas Engines									
1	55037524AE	1				ED0			COMPRESSOR, Air Conditioning
2	06102178AA	2				ED0			SCREW, Hex Flange Head, M8x1.25x130
3	06102178AA	2							BOLT, (NOT SERVICED)
4	05083076AA	1				EK0			CLUTCH, A/C Compressor
5	04861371AA	1				ED0			BRACKET, Alternator
6	55037466AE	1				EK0			COMPRESSOR, Air Conditioning
7	06505482AA	1				EK0			SCREW AND WASHER, Hex Head, M8x1.25x50
8	06507372AA	2				ED0			STUD, Double Ended
9	05083076AA	1				EK0			CLUTCH, A/C Compressor
10	06504344	1				EK0			SCREW AND WASHER, Hex Head
11	53021238AB	1				EK0			COVER, Timing Belt

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Compressor Mounting, 2.5,2.8L Diesel Engine  
Figure 24-530

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	04897253AA	1				EN0			BOLT, Hex Flange Head, M10x35
2	05093940AA	1				EN0			COMPRESSOR, Air Conditioning
	55037467AB	1				EN0			Without Clutch
						EN0			With Clutch
3	05066930AA	2				EN0			PIN

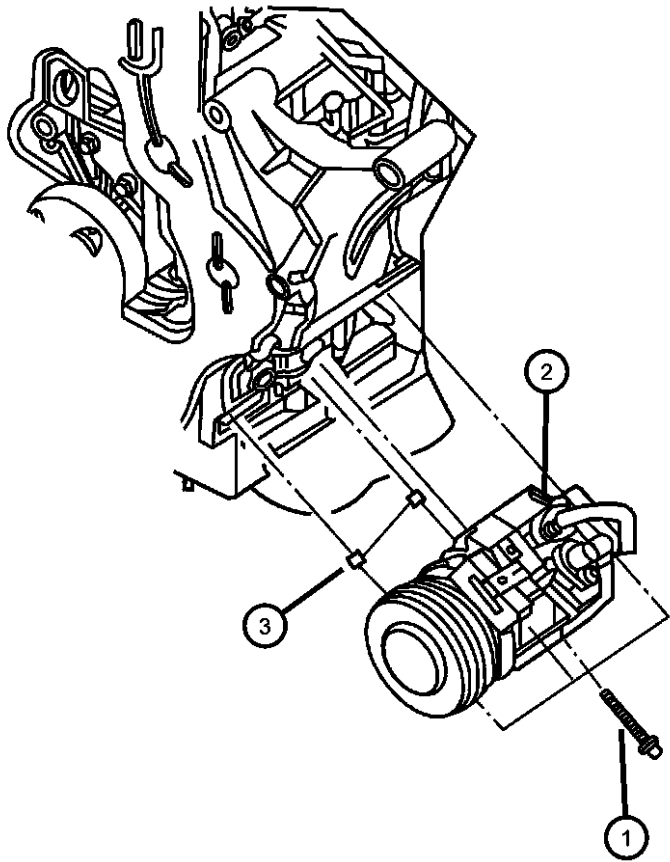

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Air Distribution Ducts  
Figure 24-610

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE : SALES CODES  
[DBB]= Transmission - All Manual  
[DG0] = Transmission - All Automatic


1	55037448AB	1	J, T						DUCT, Defroster
	55037535AB	1	U						
2	55037480AB	1							DUCT, Rear Floor Heat
	55037562AB	1							[DG0]
									[DBB]
3	55037522AA	1	J, T						BAFFLE, Air Inlet
	55037523AA	1	U						
4	55037523AA	1							NUT, (NOT SERVICED)

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions



# Group - 25

## Emission Systems

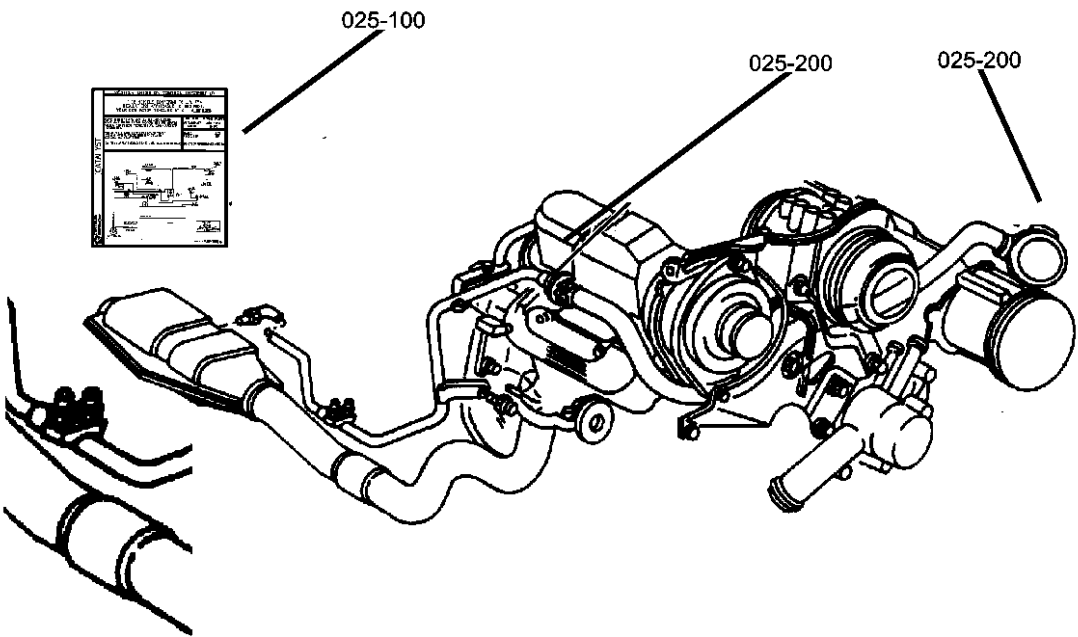

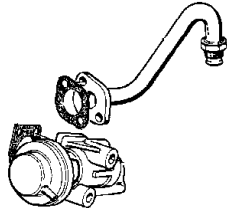
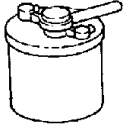
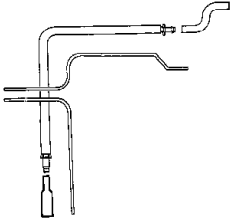
### Group - 25 Emission Systems

Illustration Title Group-Fig. No.

**EGR System**  
EGR System 2.8L [EN0] .....Fig. 25 - 210

**Vacuum Canister**  
Vapor Canister 2.4L [ED1], 3.7L [EKG] .....Fig. 25 - 310

**Emission Harness**  
Emission Vacuum Harness 2.8L [EN0] .....Fig. 25 - 410  
Emission Vacuum Harness 2.4L [ED1], 3.7L [EKG] .....Fig. 25 - 420  
Leak Detection Pump, 2.4L [ED1], 3.7L [EKG] .....Fig. 25 - 430


<div>025-200 EGR System</div> <div></div>	<div>025-300 Vacuum Canister</div> <div></div>	<div>025-400 Emission Harness</div> <div></div>	
--	---	---	--

EGR System 2.8L [EN0]  
Figure 25-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[DBB]= All Manual Transmissions  
[EN0]= All 2.8L 4 Cylinder Turbo Diesels


1	05072689AA	1				EN0	DG0		PIPE, EGR to Manifold
2	04883924AA	2				EN0	DG0		CLAMP, Heater Hose
3									GASKET, EGR Tube Flange
	05083261AA	1				EN0	DG0		
		1				EN0	DBB		
4									NUT, Lock
	04882610	4				EN0	DG0		
		6				EN0	DBB		
5									VALVE, EGR
	05066800AB	1				EN0	DG0		
		1				EN0	DBB		
6	04663247AB	1				ED0			GASKET, EGR Valve
7	04882606	1				EN0	DG0		STUD, Turbo Elbow
8	05072687AB	1				EN0	DG0		COOLER, EGR
9									SCREW
	05072688AA	4				EN0	DBB		
		4				EN0	DG0		
10									SCREW
	05066986AA	1				EN0	DG0		
		1				EN0	DBB		
11	05066942AA	1				EN0	DG0		CLAMP
12	05066943AA	1				EN0	DG0		CLAMP, Hose
13									PIPE, EGR
	05093932AA	1				EN0	DBB		
		1				EN0	DG0		
14									WASHER, Starter
	04723279	1				EN0	DBB		
		1				EN0	DG0		

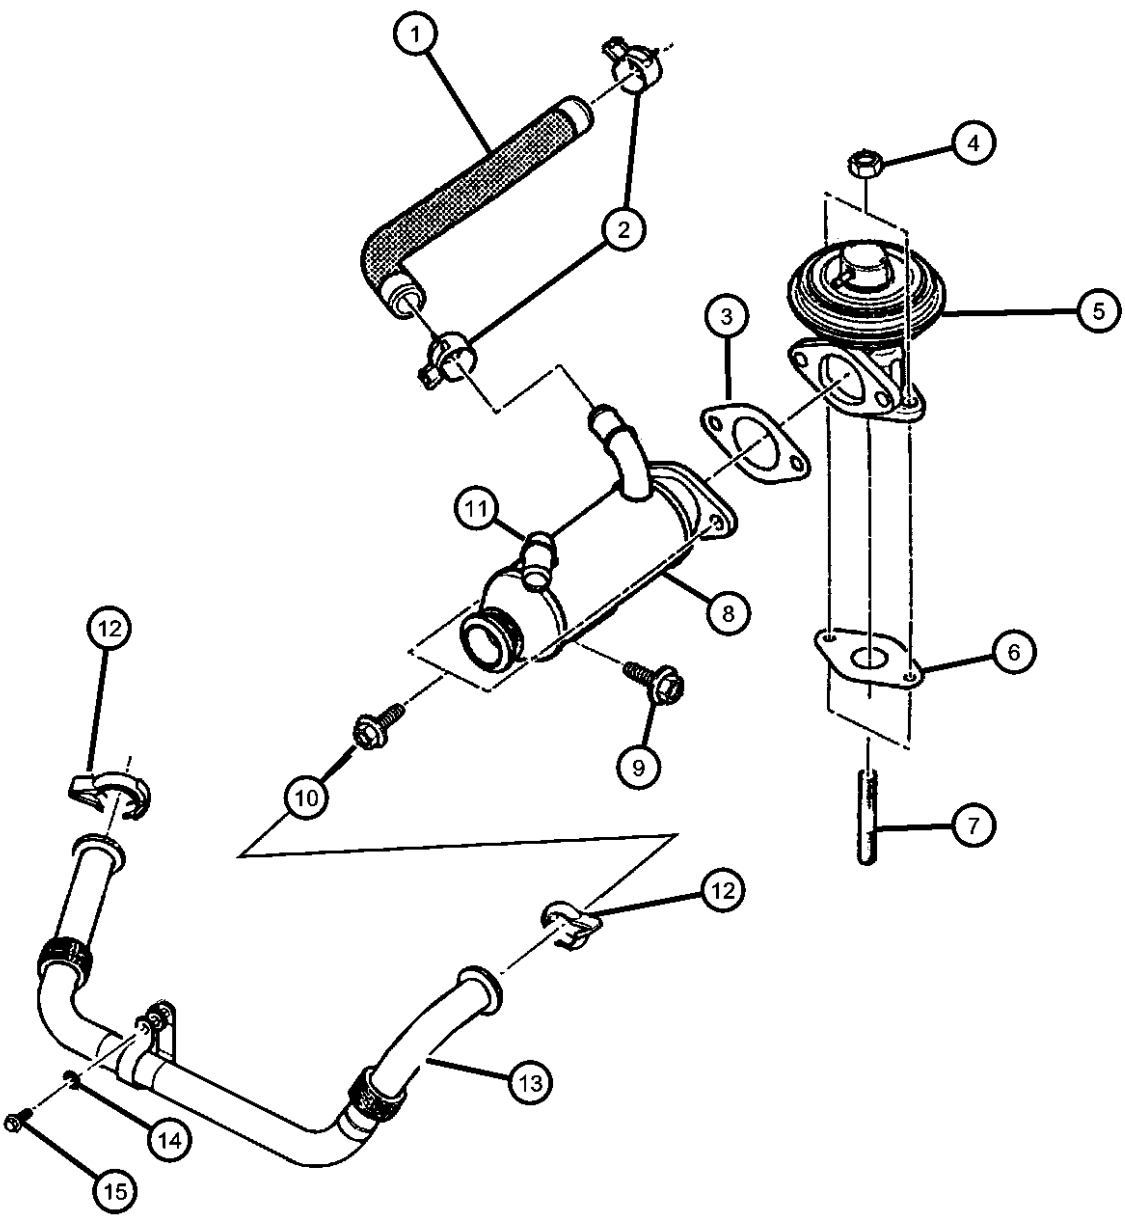

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions


EGR System 2.8L [EN0]  
Figure 25-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
15	05066944AA	4				EN0	DBB		SCREW
		4				EN0	DG0		

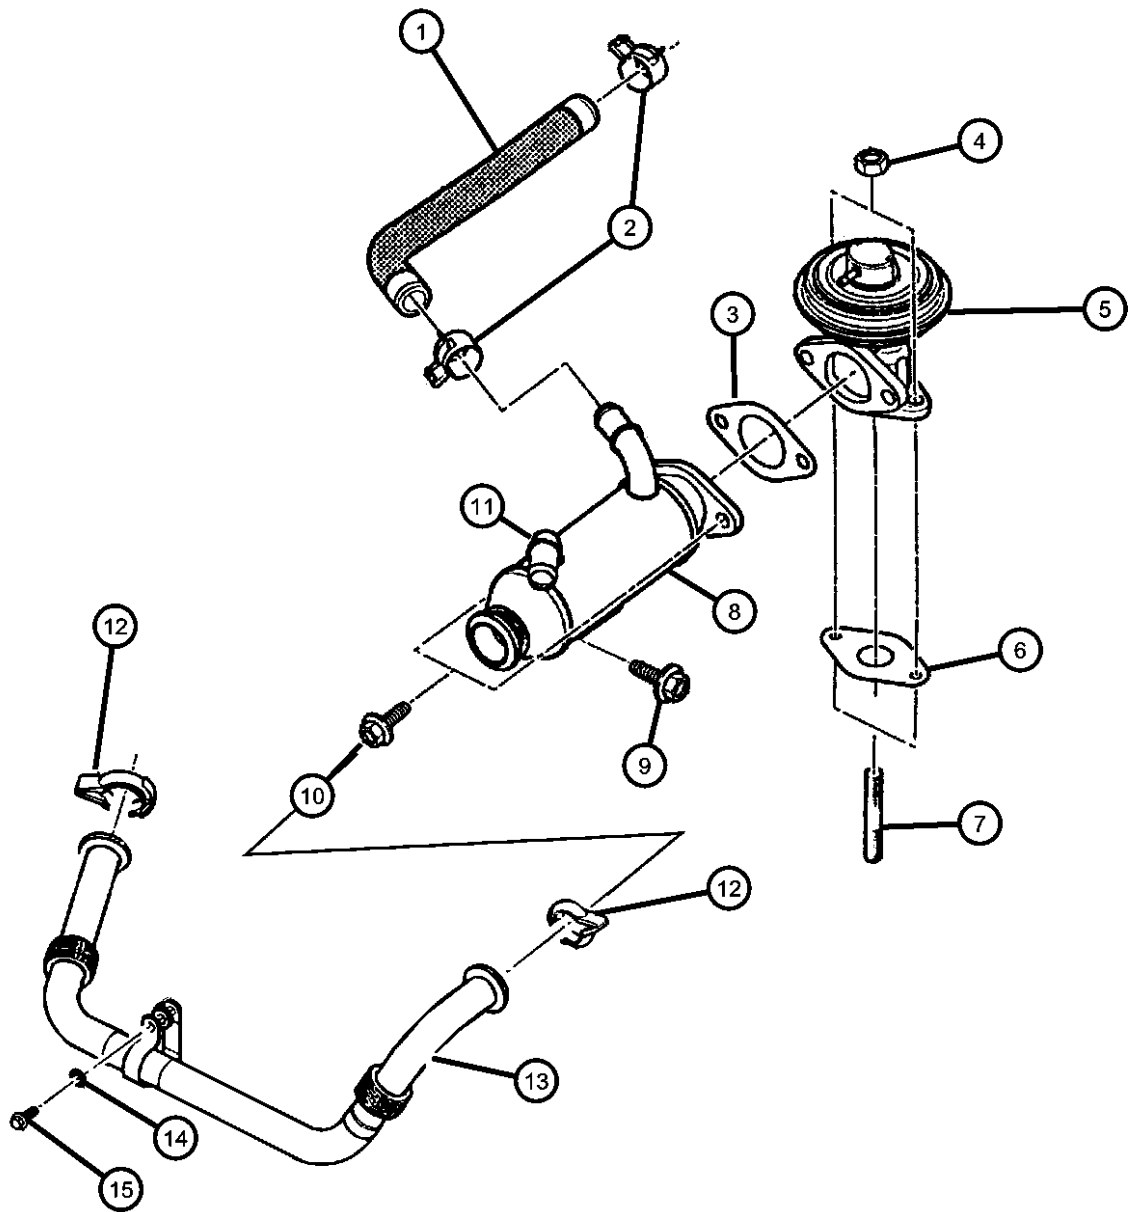

<b>LIBERTY (KJ)</b>				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Vapor Canister 2.4L [ED1], 3.7L [EKG]  
Figure 25-310

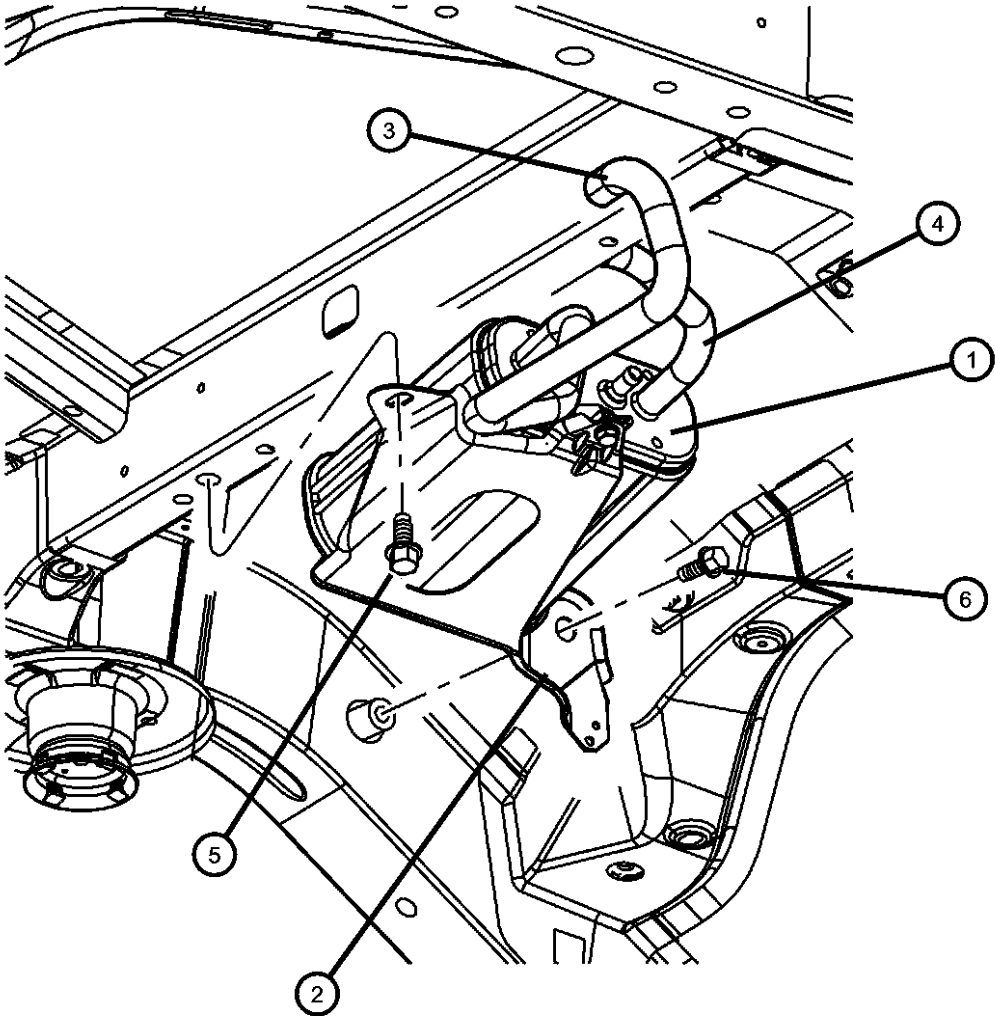


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	04891562AA	1				ED0, EK0			CANISTER, Vapor
2	52128677AA	1				ED0, EK0			BRACKET, Vapor Canister
3	52128661AA	1				ED0, EK0			HOSE, Canister to NVLD
4	52128679AA	1				ED0, EK0			HOSE, Canister to Vent Valve
5	06101452	1				ED0, EK0			SCREW AND WASHER, Hex Head, M8x1.25x20
6	06503900	2				ED0, EK0			SCREW AND WASHER, Hex Head, M12x1.75x40
-7	06101467	1				ED0, EK0			NUT, Hex Flange, M8x1.25

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Emission Vacuum Harness 2.8L [EN0]  
Figure 25-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes									
[EN0]= All 2.8L 4 Cylinder Turbo Diesels									
1	05274478AA	1	J, U			EN0			SOLENOID, Vacuum
-2	05274510AA	1	J, U			EN0			FILTER, Vacuum Solenoid
3	52109619AB	1	J, U			EN0			HOSE, Solenoid
4	52109619AB	1							SCREW, M4.8-1.59X15.00, (NOT SERVICED)
5	53013411AB	1	J, U			EN0			BRACKET
6	53013088AD	1	J, U			EN0			TUBE, EGR To Vacuum Regulator

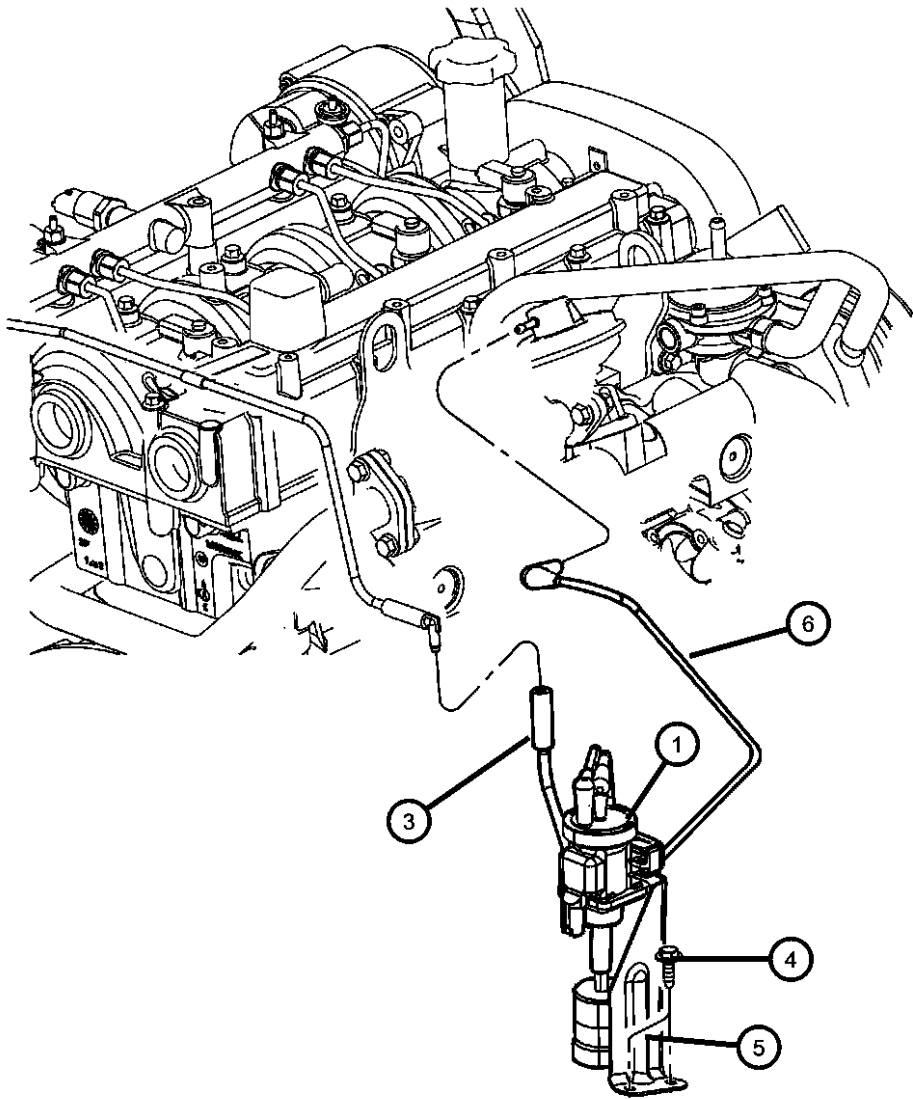

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Emission Vacuum Harness 2.4L [ED1], 3.7L [EKG]  
Figure 25-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines  
[EK0]= All 3.7L 6 Cylinder Gas Engines

1	52090419AA	1				ED0, EK0			SOLENOID, Proportional Purge
2									HARNESS, Vapor Purge
	52128696AC	1				EK0			
		1				ED0			
-3									TUBE, Vacuum, From Vapor
	52128663AB	1				EK0			Harness To Throttle Body
	52128666AB	1				ED0			
4	52128666AB	1							CONNECTOR, See Headlamp
									To Dash Wiring , Group 8, (NOT
									SERVICED)
-5	03580172	1							CAP, Vacuum

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Leak Detection Pump, 2.4L [ED1], 3.7L [EKG]  
Figure 25-430

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Code  
[ED0]= All 2.2L, 2.5L, 2.4L, 4 Cylinder Gas Engines  
[EK0]= All 3.7L 6 Cylinder Gas Engines

1	04891525AB	1				ED0, EK0			DETECTOR, Natural Vacuum Leak Detection
-2	05085164AA	1				ED0, EK0			FILTER, Leak Detection Pump
3	52128629AC	1				ED0, EK0			BRACKET, Natural Vacuum Leak Detection
4	52128661AA	1				ED0, EK0			HOSE, Canister to NVLD
5	52128661AA	1							BUNDLE, Fuel Line, Service in group 14, (NOT SERVICED)
-6	52128679AA	1				ED0, EK0			HOSE, Canister to Vent Valve
-7									TUBE, Vacuum
	52128663AB	1				EK0			
	52128666AB	1				ED0			
-8	52128700AB	1				ED0, EK0			TUBE, Fuel Vapor
-9	52128631AB	1				ED0, EK0			TUBE, Vapor
-10	04891562AA	1				ED0, EK0			CANISTER, Vapor

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

# Group - DKJ

## Doors and Related Parts

### Group - DKJ Doors and Related Parts

Illustration Title

Group-Fig. No.

#### Front Door

Door, Front, Shell and Hinges.....	Fig. DKJ - 110
Door, Front, Glass and Regulator.....	Fig. DKJ - 120
Door, Front, Lock and Controls.....	Fig. DKJ - 130

#### Rear Door


Door, Rear, Shell and Hinges .....	Fig. DKJ - 210
Door, Rear, Glass and Regulator .....	Fig. DKJ - 220
Door, Rear, Lock and Controls .....	Fig. DKJ - 230





#### Exterior Mirror

Mirrors, Exterior .....	Fig. DKJ - 510
-------------------------	----------------

#### Weatherstrips and Seals



Door, Front.....	Fig. DKJ - 610
Door, Rear .....	Fig. DKJ - 620

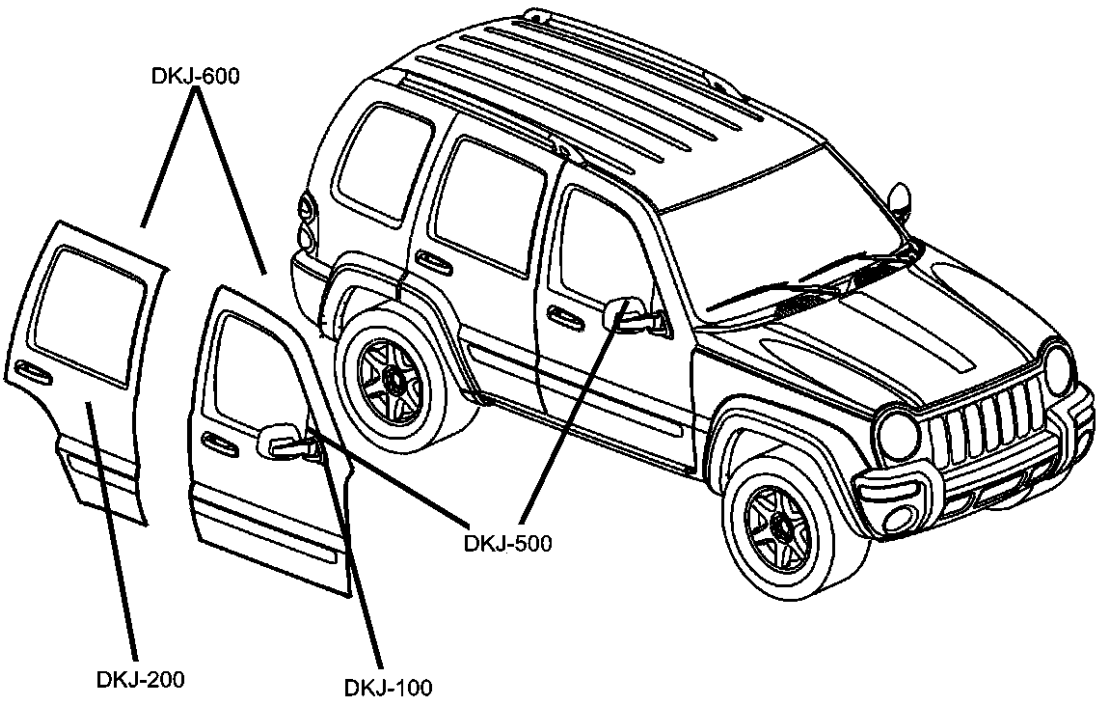
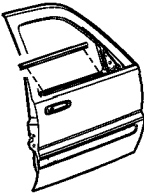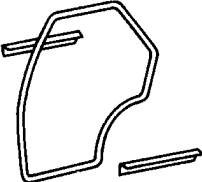
<div>DKJ-100</div> <div>Front Door</div> <div></div>	<div>DKJ-200</div> <div>Rear Door</div> <div></div>	<div>DKJ-500</div> <div>Exterior Mirror</div> <div></div>	<div>DKJ-600</div> <div>Weatherstrips and Seals</div> <div></div>
---	--	--	--



Door, Front, Shell and Hinges  
Figure DKJ-110

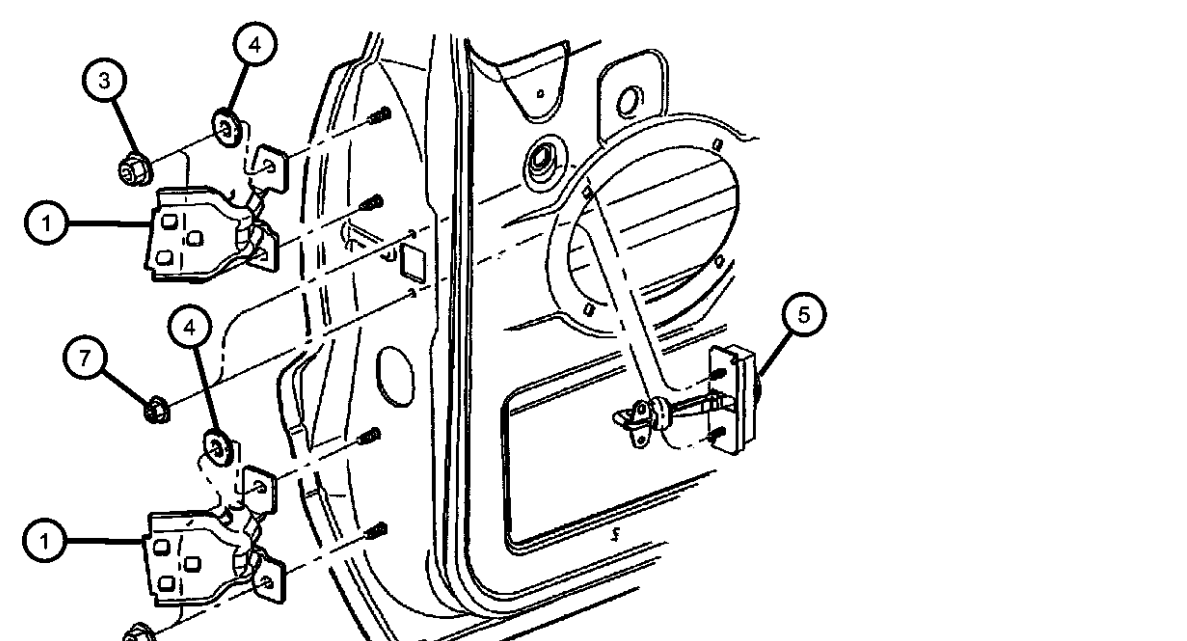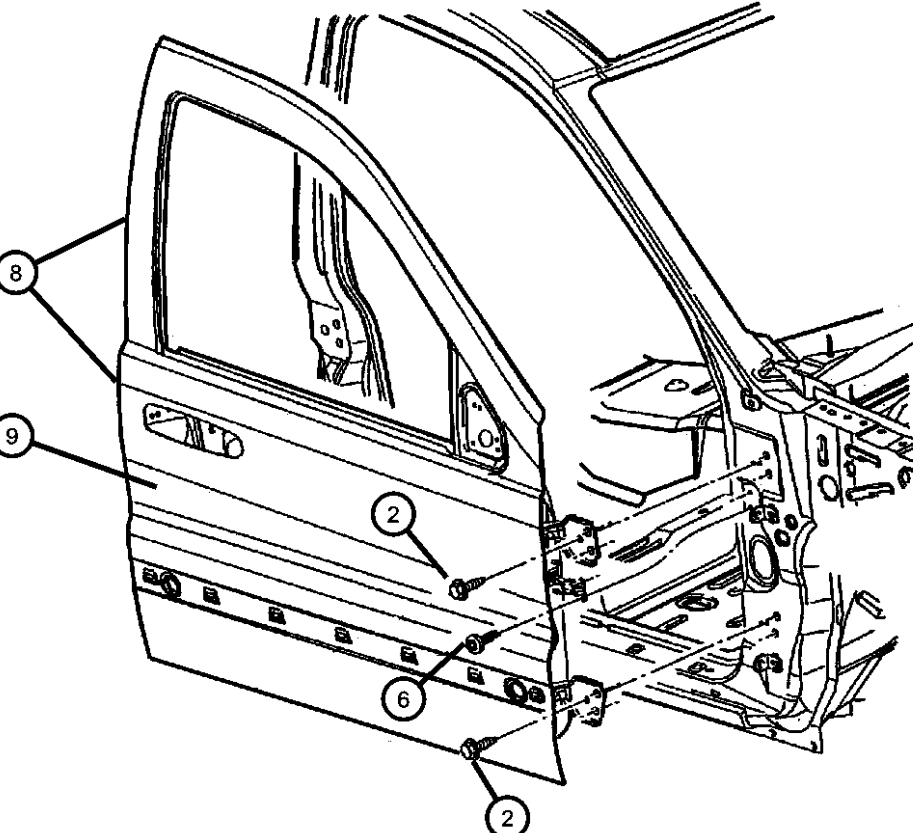
	ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	1	55177026AB	4							HINGE, Door
	2	06503328	4							SCREW, Hex Head, M8x1.25x30
	3	06101809	1							NUT AND WASHER, Hex, M8x1.25
	4	55136971AC	4							WASHER, Flat
	5	55177028AC	2							CHECK, Front Door
	6	55177028AC	2							SCREW, Torx Round Head, M6-1.0x20.0, (NOT SERVICED)
	7	06503504	2							NUT AND WASHER, Hex, M6x1
	8									DOOR, Front
		55176890AF	1							Right
		55176891AF	1							Left
	9									PANEL, Front Door Outer Repair
		55176882AC	1							Right
		55176883AC	1							Left
	-10	55176883AC	1							NUT, Rivet, M5x.080x26.41, (NOT SERVICED)
	-11	55360636AA	1	J, T						BRACKET, Door Inside

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Door, Front, Glass and Regulator  
Figure DKJ-120


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									GLASS, Front Door
	55360374AG	1							Right
	55360375AG	1							Left
2									WEATHERSTRIP, Glass Channel
	55235874AD	1							Run
	55235875AD	1							Right
	55235875AD	1							Left
3	55235875AD	1							SCREW AND WASHER, Tapping, M6-1.0x20.0, (NOT SERVICED)
4									REGULATOR, Front Door Window
	55360030AH	1							With Power Windows, Right
	55360031AH	1							With Power Windows, Left
	55360032AF	1							Without Power Windows, Right
	55360033AF	1							Without Power Windows, Left
5	55360033AF	1							SCREW, M6X1.00X16.00, (NOT SERVICED),
-6	0FW80XDV	2							HANDLE, Window Regulator

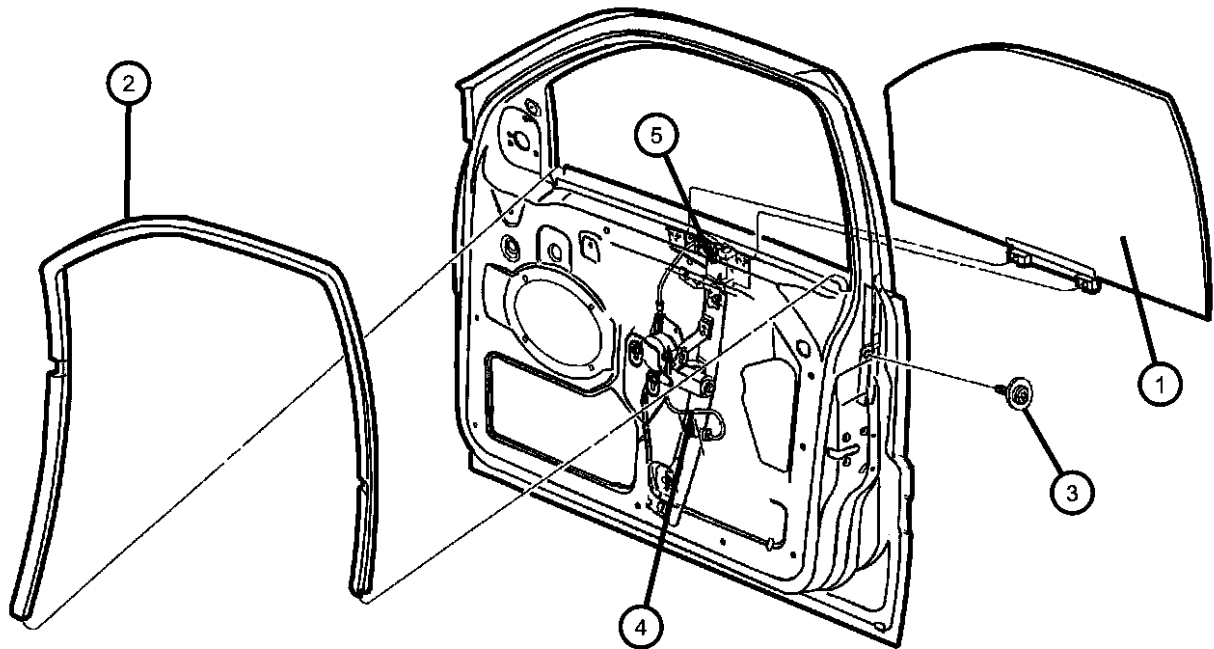

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Door, Front, Lock and Controls  
Figure DKJ-130

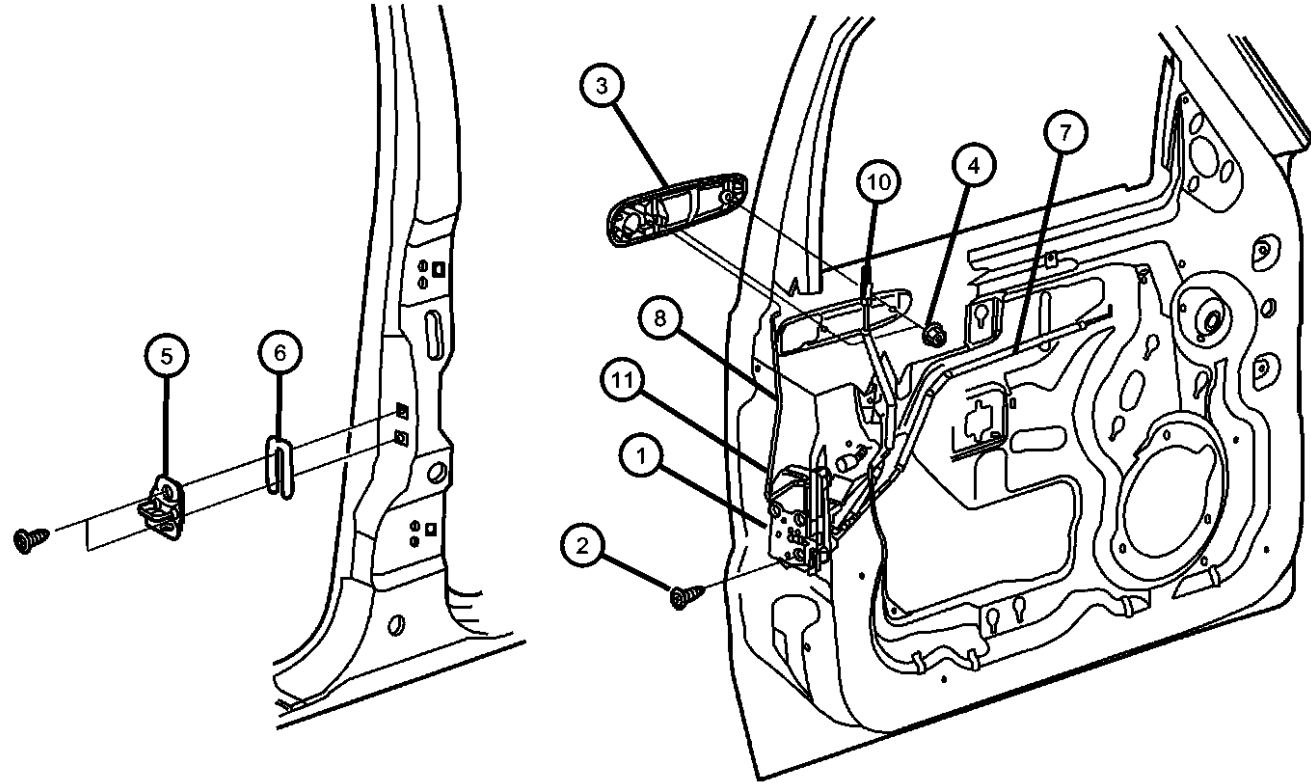


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [JPB]= Power Locks									
1									LATCH, Front Door
	55177040AJ	1							Without [JPB,JPB], Right
	55177041AI	1							Without [JPB,JPB], Left
	55177042AJ	1							[JPB,JPB] [Up To 1-14-04], Right
	55177042AK	1							[JPB,JPB] [After 1-14-04], Right
	55177043AI	1							[JPB,JPB] [Up To 1-20-04], Left
	55177043AK	1							[JPB,JPB] [After 1-20-04], Left
	55360611AC	1							[GXM] [Up To 1-13-04], Right
	55360611AD	1							[GXM] [After 1-13-04], Right
2	06033876	6							SCREW, Tapping, M6.3x1.8x38.1
3									HANDLE, Front Door Exterior
	55360332AF	1							With Cylinder, Right
	55360333AF	1							, Left
	55360614AB	1							Without Cylinder, Right
4	06503226	2							NUT, Hex Flange, M5x.8
5	04780607AA	2							STRIKER, Door
6	04520289	AR							SPACER, Door Latch Striker
7									ROD, Inside Handle to Latch
	05072350AA	1							Right
	05072351AA	1							Left
8	05072354AA	1							ROD, Inside Lock to LatchRight
-9	04658677	2							CLIP, Latch Link
10									ROD, Latch To Knob
	55360534AC	1							Right
	55360535AC	1							Left
11									LINK, Exterior Door Handle,
	05072358AB	1							05072358aa-9
	05072359AB	1							With Cylinder, Right
									, Left

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16v	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


Door, Front, Lock and Controls  
Figure DKJ-130

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-12	05103132AA	1							Without Cylinder, Right
									CLIP, Outside Door Handle
	04615346	1							Inner
	04615347	1							Outer

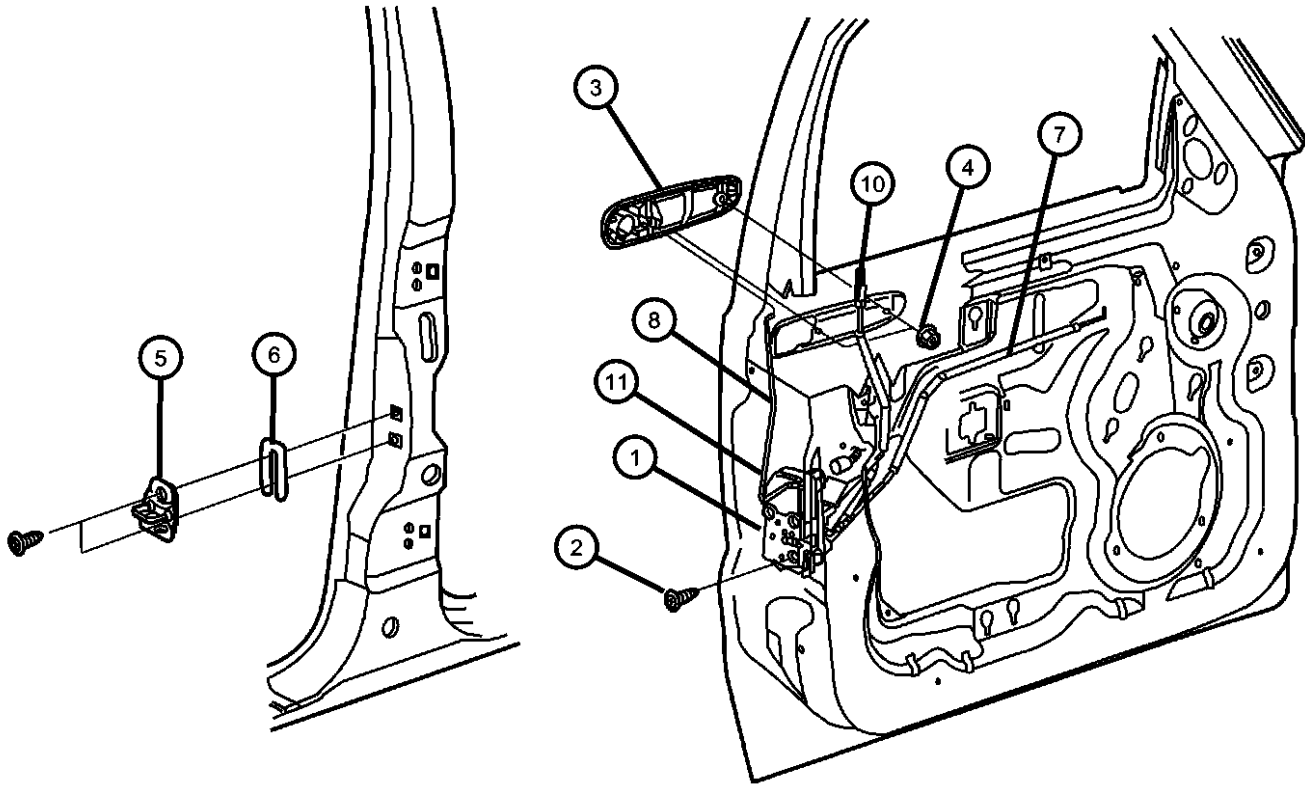

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	


Door, Rear, Shell and Hinges  
Figure DKJ-210

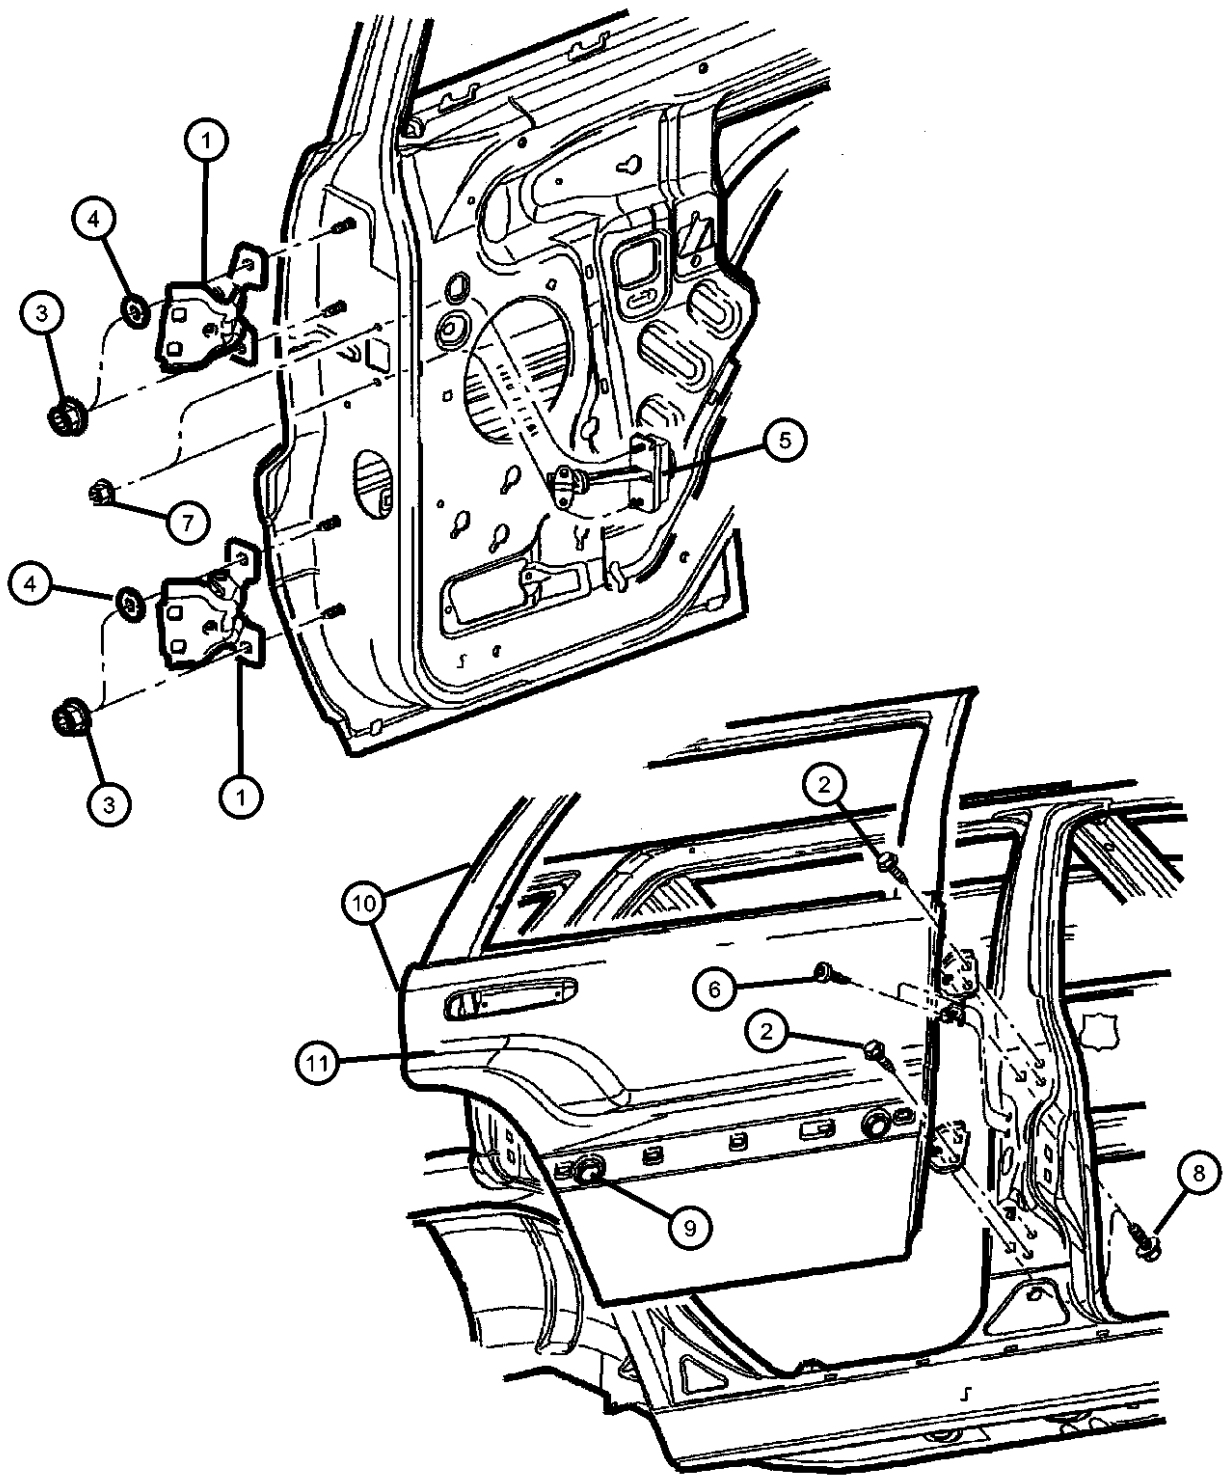

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55177030AD	4							HINGE, Door
2	06503328	4							SCREW, Hex Head, M8x1.25x30
3	06101809	1							NUT AND WASHER, Hex, M8x1.25
4	55136971AC	4							WASHER, Flat
5	55177036AC	2							CHECK, Rear Door
6	55177036AC	2							SCREW, Torx Head, M6x1.00x16.00, (NOT SERVICED)
7	06503504	2							NUT AND WASHER, Hex, M6x1
8	06503504	2							SCREW AND WASHER, Hex Head, M8x1.25x30, (NOT SERVICED)
9	55136859AA	2							PLUG
10									DOOR, Rear
	55176906AF	1							Right
	55176907AF	1							Left
11									PANEL, Rear Door
	55176908AC	1							Right
	55176909AC	1							Left

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

Door, Rear, Glass and Regulator  
Figure DKJ-220

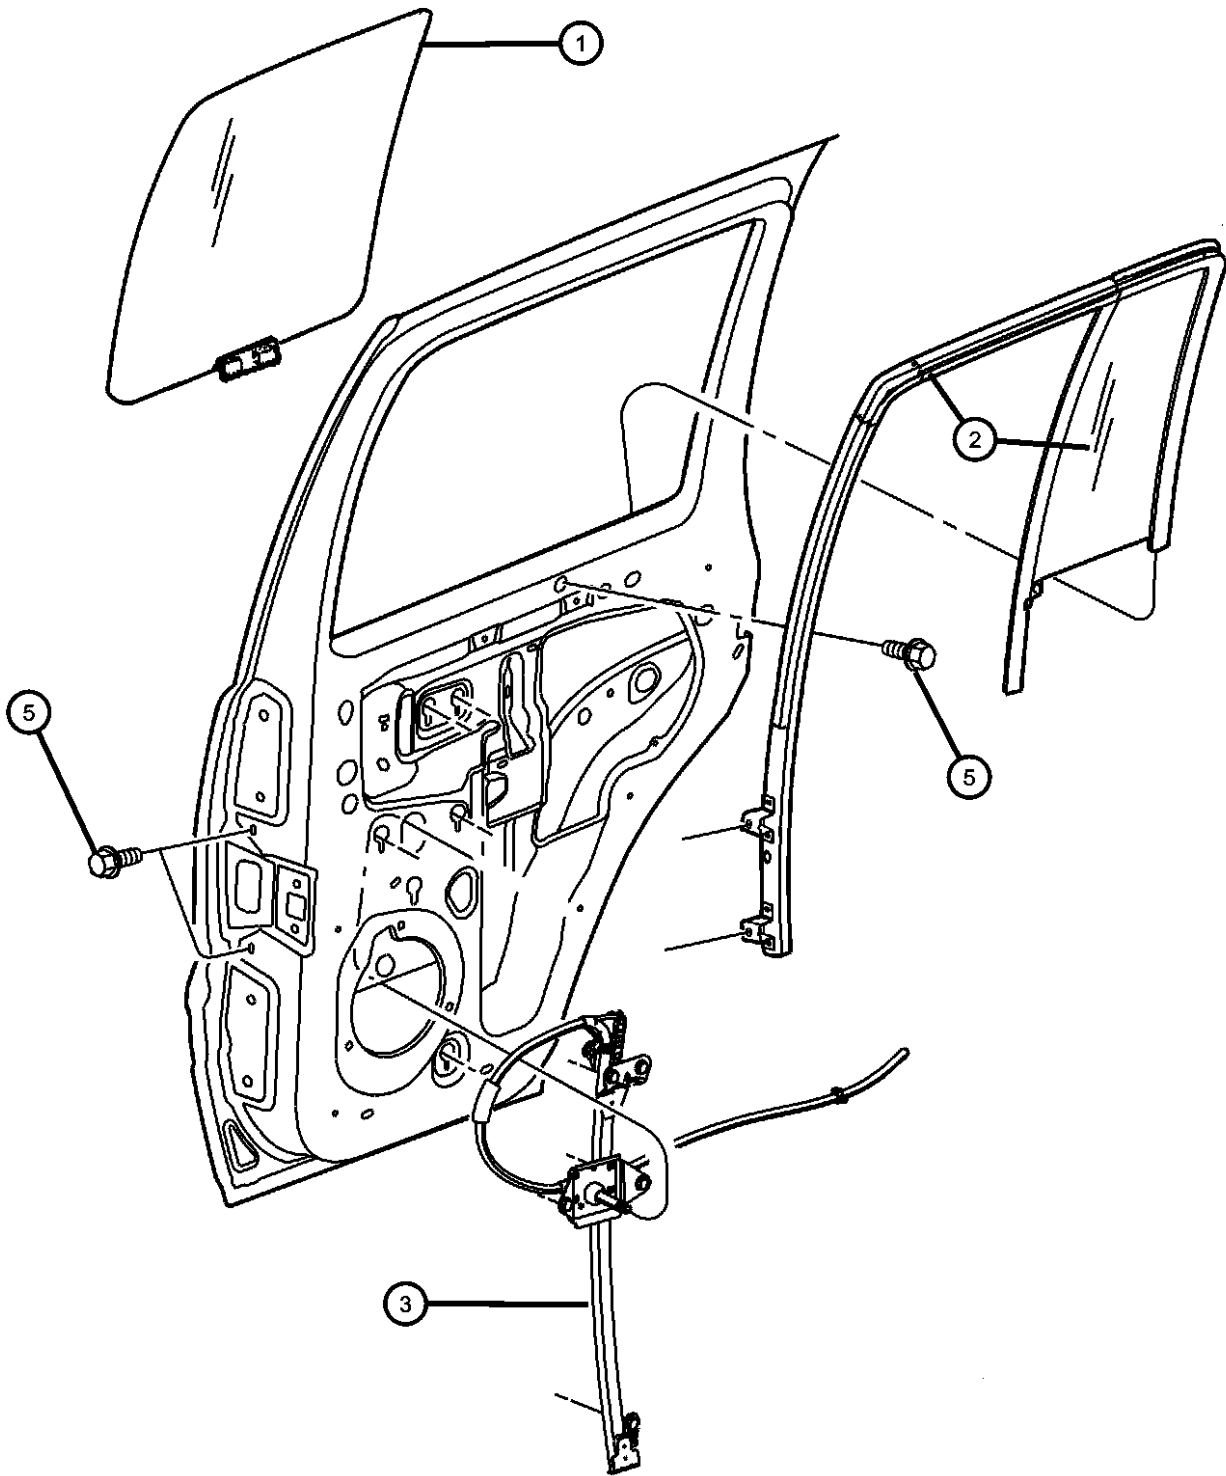

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note; Sales Codes  
[GEG] = Glass - Deep Tint Sunscreen  
[GEJ] = Glass - Tinted  
[JPD] = Window - Power

1									GLASS, Rear Door, Roll Up
	55360376AF	1							[GEJ], Right
	55360377AE	1							[GEJ], Left
	55360378AF	1							[GEG], Right
	55360379AF	1							[GEG], Left
2									GLASS, Rear Door, Fixed, With Weatherstrip
	05103247AC	1							[GEJ], Left
	05103248AC	1							[GEJ], Right
	05103251AC	1							[GEG], Left
	05103252AC	1							[GEG], Right
3									REGULATOR, Rear Door Window
	55360034AG	1							With Power Windows, Right
	55360035AG	1							With Power Windows, Left
	55360036AE	1							Without Power Windows, Right
	55360037AE	1							Without Power Windows, Left
-4									HANDLE, Window Regulator
	0FW80WL5	2							[L5]
	0FW80XDV	2							[DV]
5	0FW80XDV	2							SCREW, (NOT SERVICED),

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Door, Rear, Lock and Controls  
Figure DKJ-230

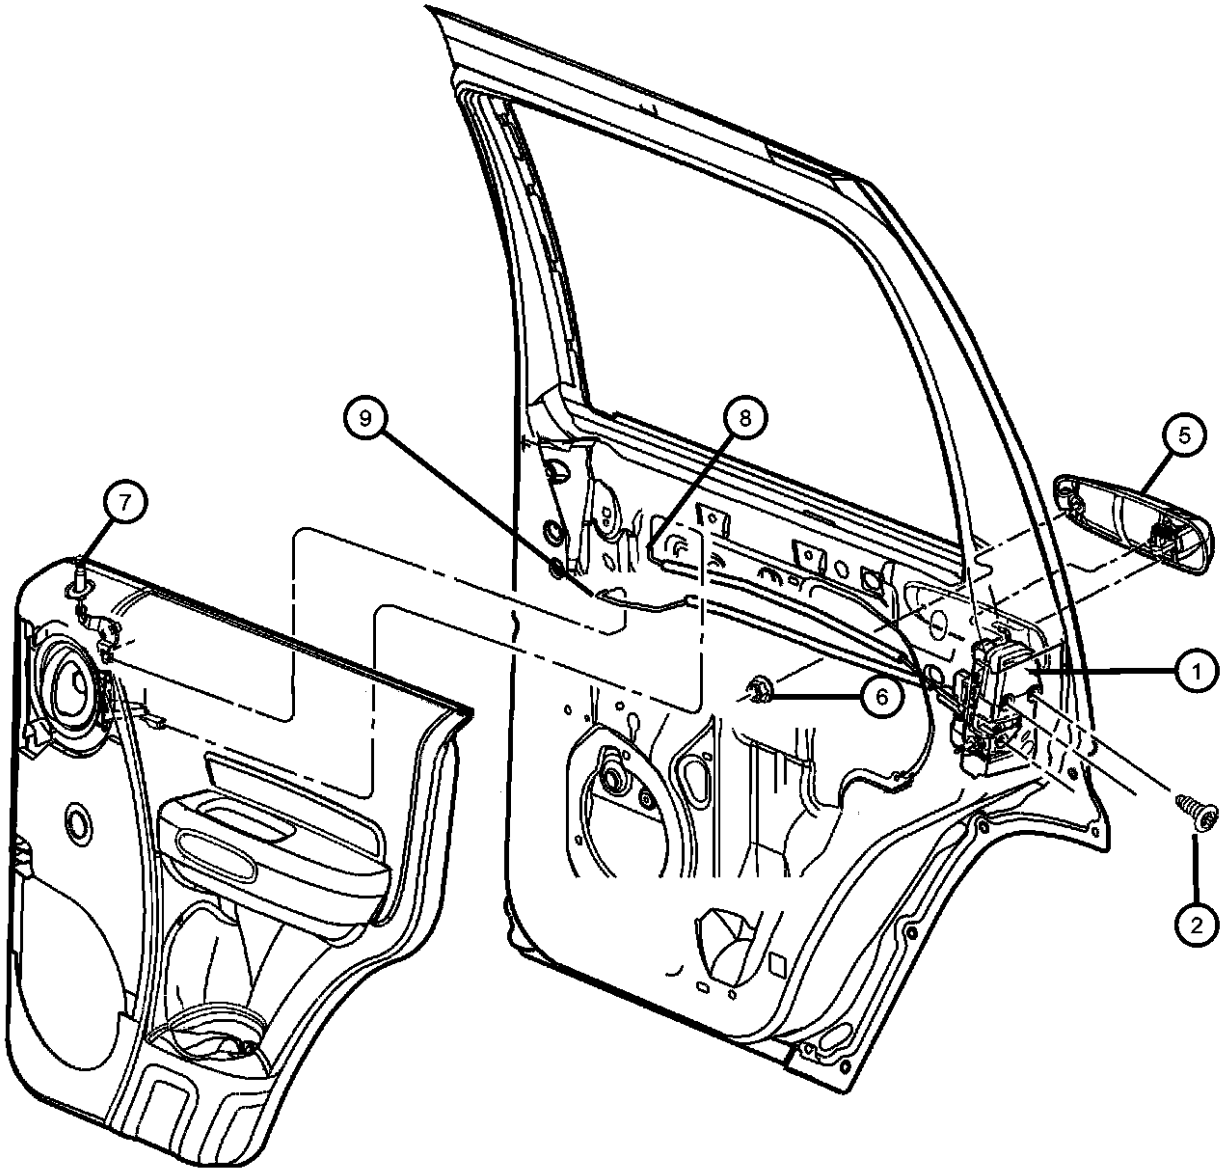


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [JPB]- Power Locks									
1									LATCH, Rear Door
	55177044AG	1							[JPB,JPH] [Up To 1-13-04], Right
	55177044AH	1							[JPB,JPH] [After 1-13-04], Right
	55177045AG	1							[JPB,JPH] [Up To 1-21-04], Left
	55177045AH	1							[JPB,JPH] [After 1-21-04], Left
	55177046AG	1							Without [JPB,JPH], Right
	55177047AG	1							Without [JPB,JPH], Left
2	06033876	6							SCREW, Tapping, M6.3x1.8x38.1
-3	04780607AA	2							STRIKER, Door
-4	04520289	AR							SPACER, Door Latch Striker
5									HANDLE, Exterior Door
	55360334AF	1							Right
	55360335AF	1							Left
6	06503226	2							NUT, Hex Flange, M5x.8
7									KNOB, Door Lock
	55360464AB	1							Right
	55360465AB	1							Left
8									ROD, Inside Handle to Latch
	05072356AA	1							Right
	05072357AA	1							Left
9									ROD, Inside Lock to Latch
	05072360AB	1							Right
	05072361AB	1							Left
-10									LINK, Exterior Door Handle, 05072358ab-9
	05072358AB	1							Right
	05072359AB	1							Left
-11									COVER, Latch-Anti Theft

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
				EDO = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Door, Rear, Lock and Controls  
Figure DKJ-230


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	05014395AA	1							Right
	05014396AA	1							Left

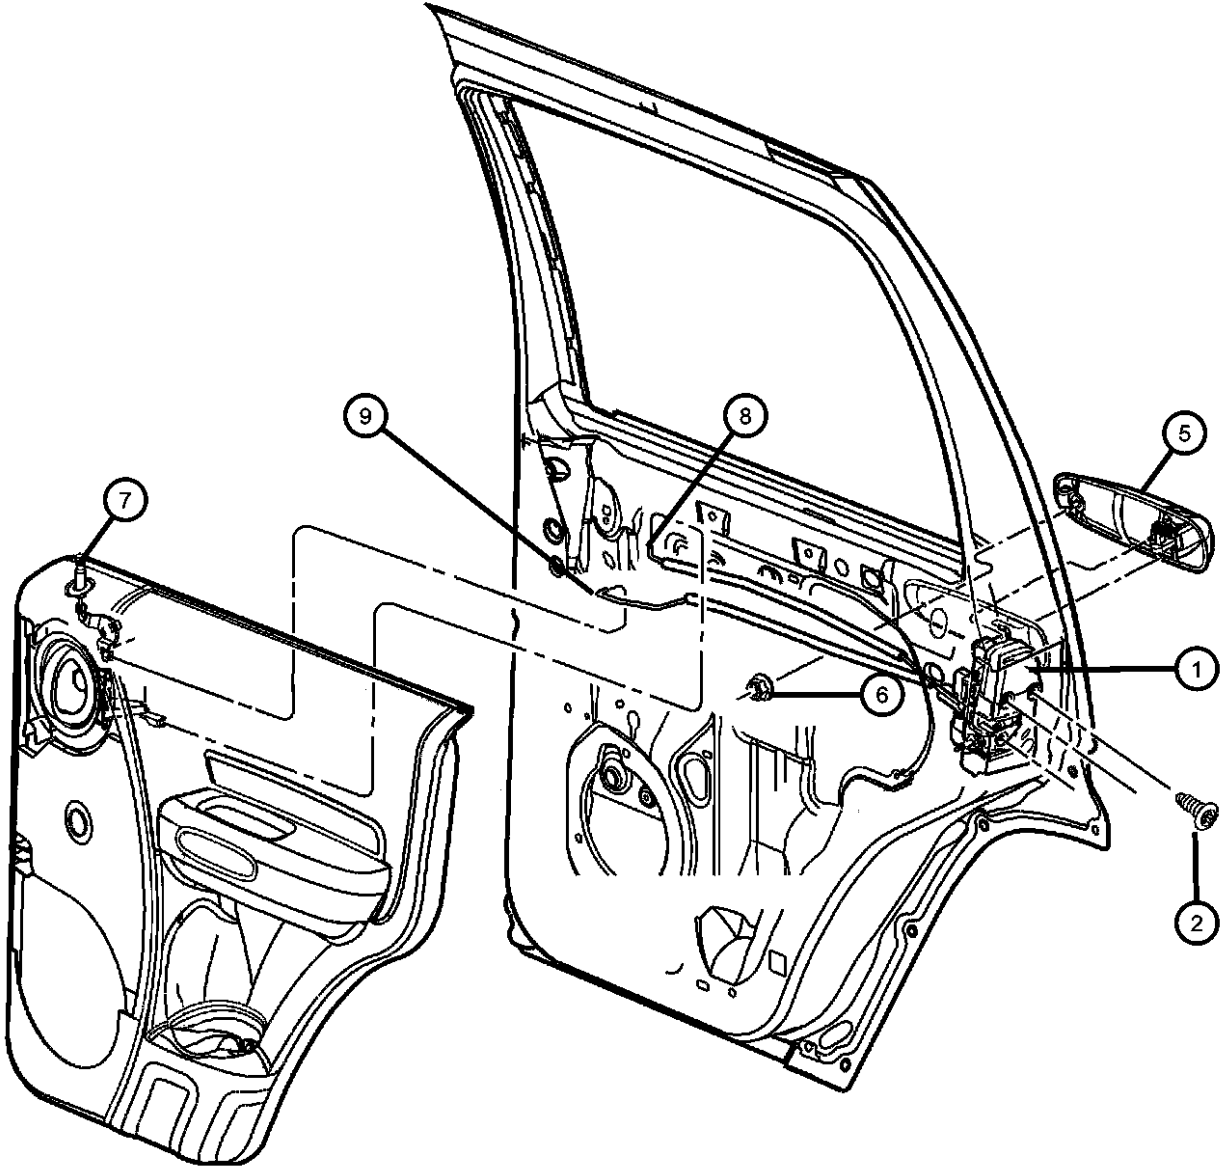

<b>LIBERTY (KJ)</b>				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions



# Mirrors, Exterior Figure DKJ-510

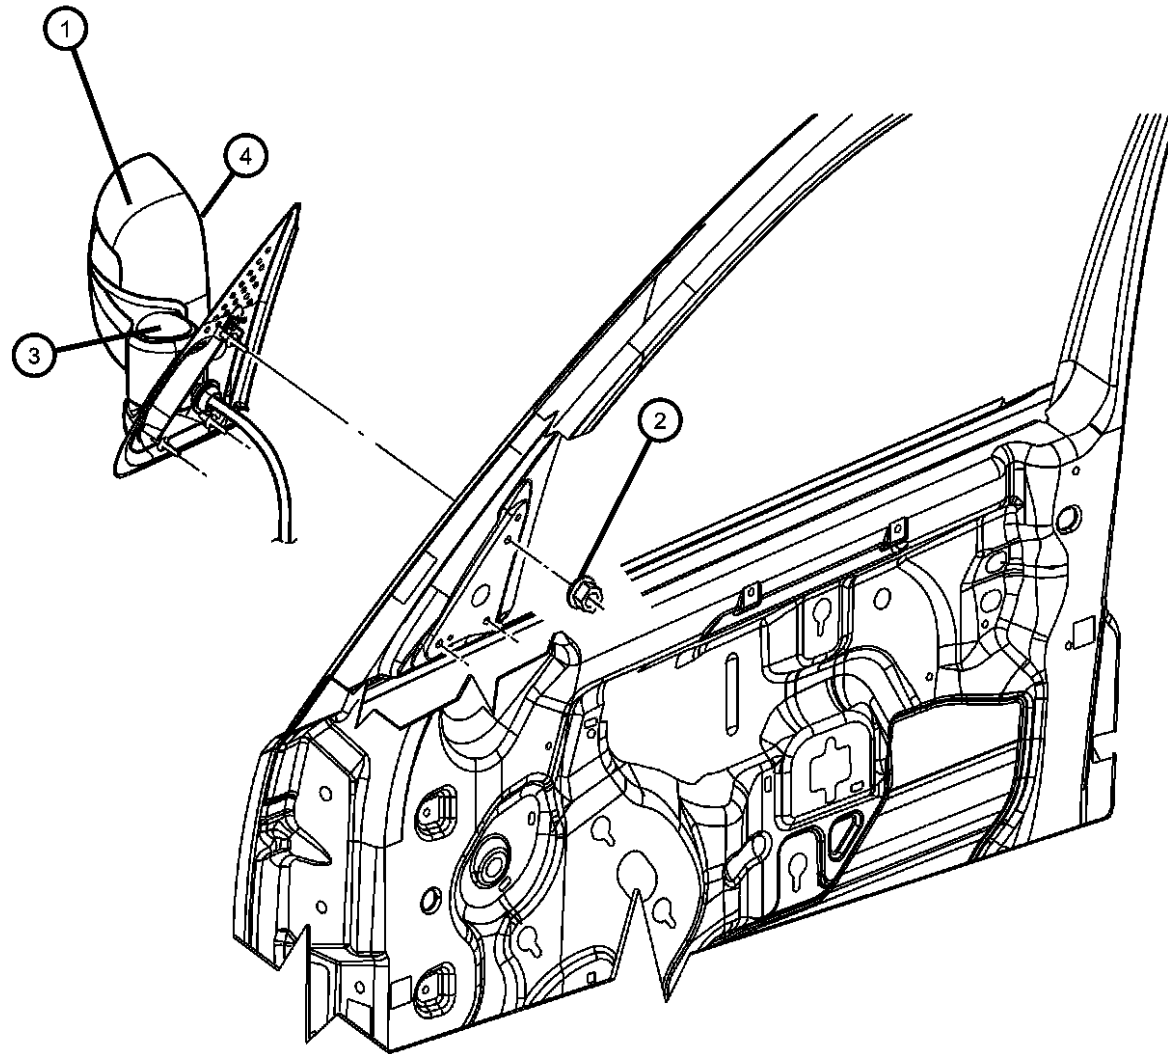

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes

[GT9] = Mirrors - Power Heated Memory F/Away

[GTB] = Mirrors - Power Heated

[GTJ] = Mirrors - Power

[GTP] = Mirrors - Manual - Fold Away

[GPF] = Mirrors - Manual - Fold Away Black

1

55155836AE	1	J, T
55155837AE	1	J, T
55155839AE	1	J, T
55155843AF	1	J, T
55155846AE	1	U
55155847AE	1	U
55155840AE	1	J, T
55155841AE	1	J, T
55155842AF	1	J, T
55155848AE	1	U
55155849AE	1	U
55156411AD	1	

MIRROR, Outside Rearview

[GTP], Right  
[GTP], Left  
[GTB], Right  
[GTS,GTB], Left  
[GTJ], Right  
[GTJ], Left  
[GT9], Right  
[GT9], Left  
[GTS,GUW], Right  
[GPF], Right  
[GPF], Left  
[GUW], Left

2

06504047	6	
----------	---	--

NUT AND WASHER, Hex, M5x.80

3

05086298AA	1	J, T
05086299AA	1	J, T
	1	U
	1	U

COVER, Mirror Flag

Right  
Left  
Right  
Left

4

05083983AA	1	J, T
05083982AA	1	J, T
05083991AA	1	U
05134236AA	1	
05083984AA	1	U
05083985AA	1	U

GLASS, Mirror Replacement

[GTP], Left  
[GTP], Right  
[GTJ], Left  
[GTS,GTB], Right  
[GPF], Right  
[GPF], Left

## LIBERTY (KJ)

SERIES	LINE
P = Limited	J = LHD (4WD)
H = Sport	U = RHD (4WD)
M = Renegade	T = LHD (2WD)

BODY  
74 = 4 Door (104.3 WB)

ENGINE  
ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L


TRANSMISSION  
DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ


Mirrors, Exterior  
Figure DKJ-510

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	05083986AA	1	J, T						[GTB], Right
	05083990AA	1	U						[GTJ], Right
	05134237AA	1	J, T						[GTS,GTB], Left
	05134238AA	1	J, T						[GT9], Right
	05134239AA	1	J, T						[GT9], Left

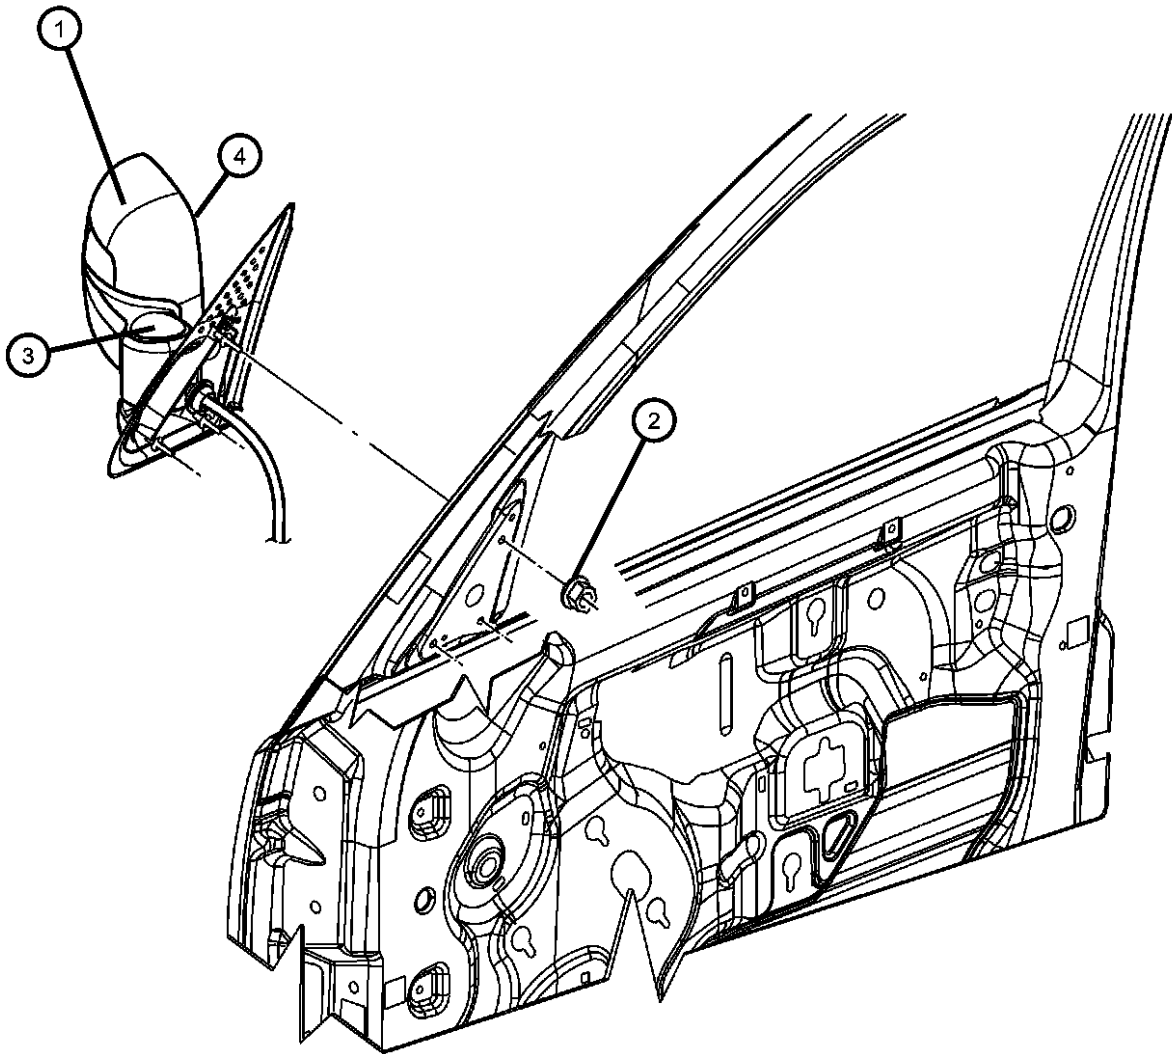

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

# Door, Front Figure DKJ-610

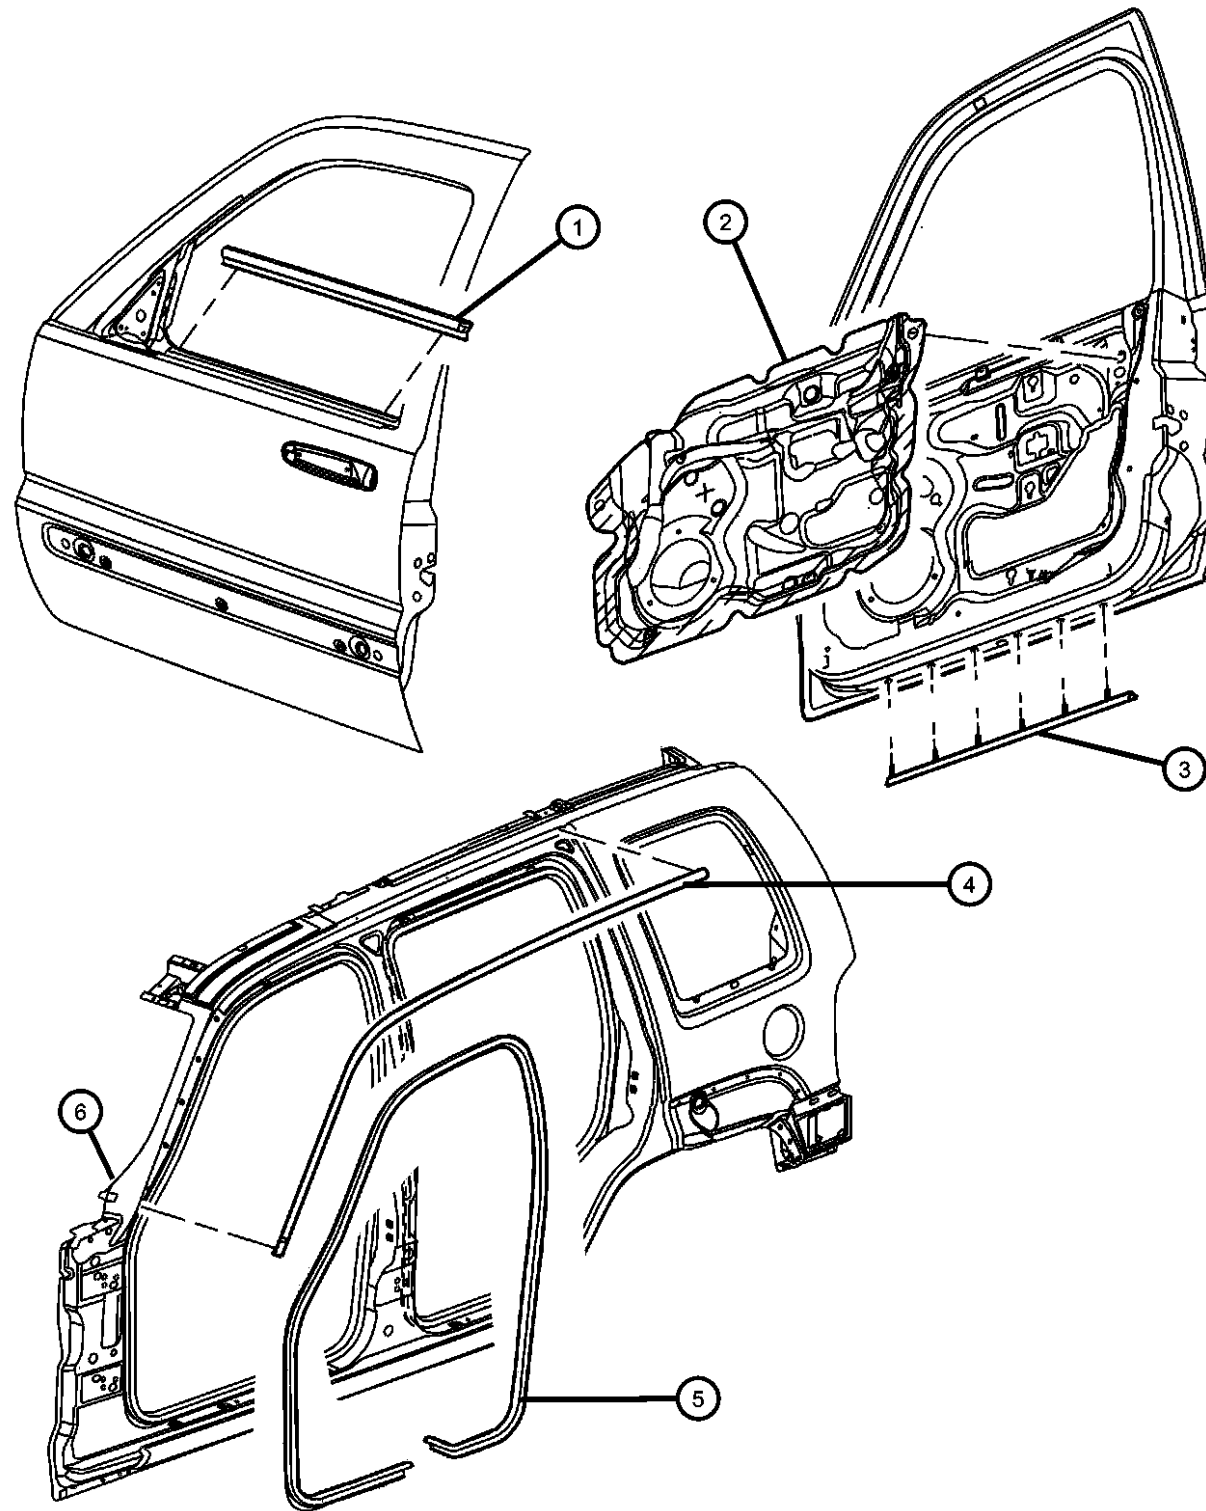

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									WEATHERSTRIP, Door Belt
	55360642AA	1							Right
	55360643AA	1							Left
2									WATERDAM, Front Door
	55235892AG	1							Right
	55235893AG	1							Left
3	55360663AA	2							SEAL, Rocker
4									SEAL, Door
	55235918AI	1							Right
	55235919AI	1							Left
5	5GU15XXXAH	2							WEATHERSEAL, Full Door To Body
6									SEAL, A-Pillar Blocker, Body Mounted
	55360542AD	1							Right
	55360543AD	1							Left
-7	55360256AC	2							SEAL, A-Pillar, Door Mounted

## LIBERTY (KJ)

### SERIES

P = Limited  
H = Sport  
M = Renegade

### LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

### BODY

74 = 4 Door (104.3 WB)

### ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L


### TRANSMISSION

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Door, Rear  
Figure DKJ-620

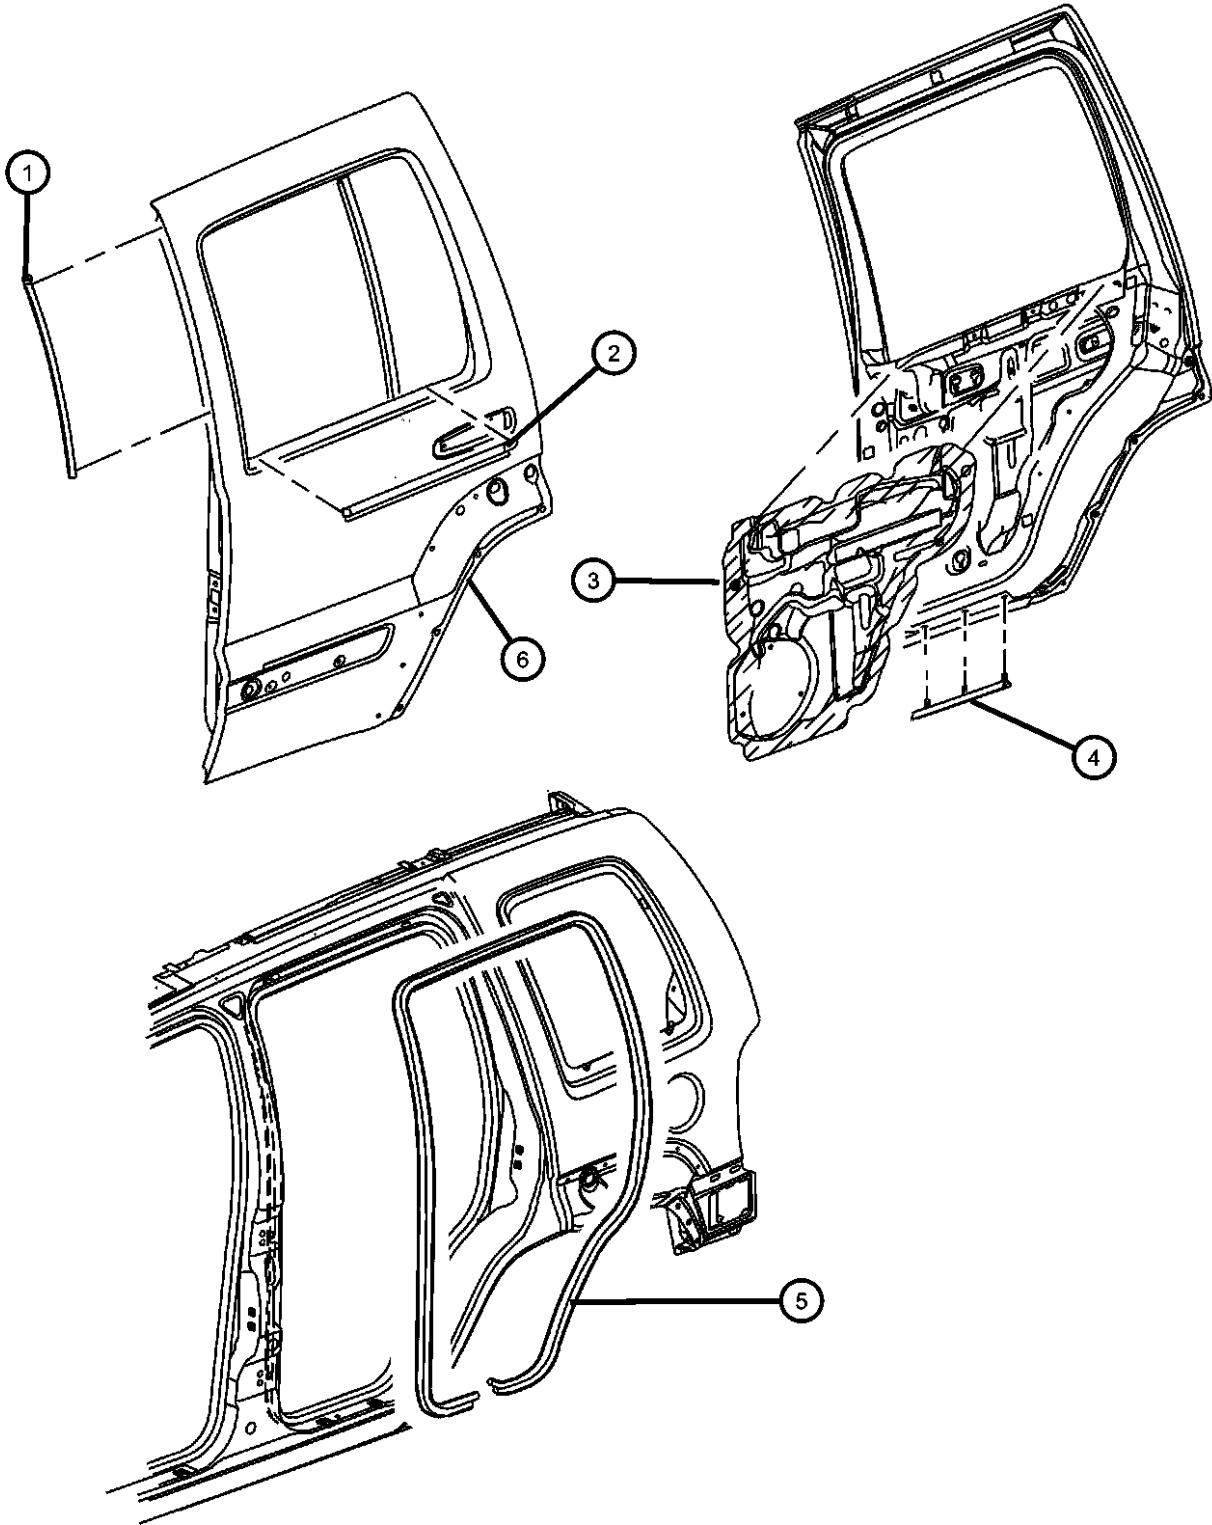


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55235880AB	2							WEATHERSTRIP, B Pillar
2									Secondary
	55360644AC	1							WEATHERSTRIP, Belt
	55360645AC	1							Right
									Left
3									WATERDAM, Rear Door
	55235894AH	1							Right
	55235895AH	1							Left
4	55360664AA	2							SEAL, Rocker
5									WEATHERSEAL, Full Door To
									Body
	5GU13XXXAH	1							Left
	5JD42XXXAF	1							Right
6	55360254AA	1							SEAL, Moulding

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

# Group - EKJ

## Exterior Ornamentation



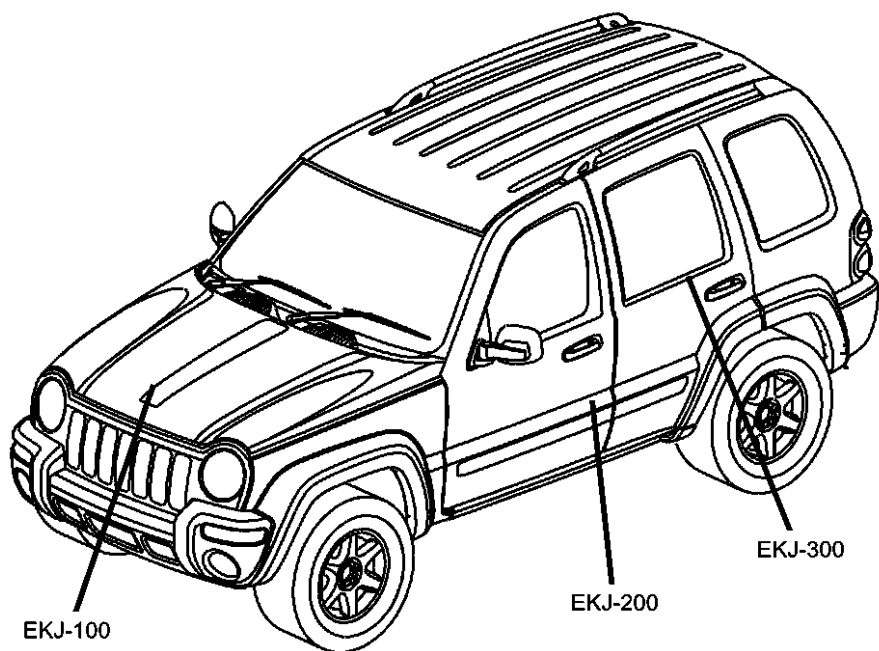


### Group - EKJ Exterior Ornamentation

Illustration Title	Group-Fig. No.
<b>Nameplates</b>	
Nameplates .....	Fig. EKJ - 110
<b>Moldings and Ornamentation</b>	
Moldings, Body Side .....	Fig. EKJ - 210
Side Rails, Tubular [MRK] .....	Fig. EKJ - 220
<b>Decals and Tapestripes</b>	
Decals .....	Fig. EKJ - 310


<div><div>EKJ-100</div><div>Nameplates</div><div></div></div>	<div><div>EKJ-200</div><div>Moldings and Ornamentation</div><div></div></div>	<div><div>EKJ-300</div><div>Decals and Tapestripes</div><div></div></div>	
---	---	---	--

Nameplates  
Figure EKJ-110

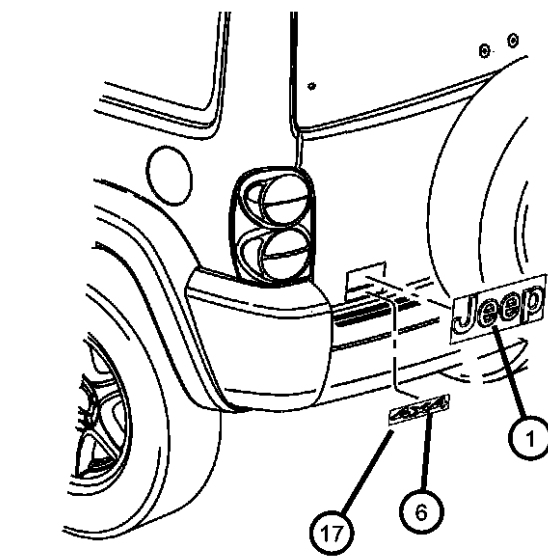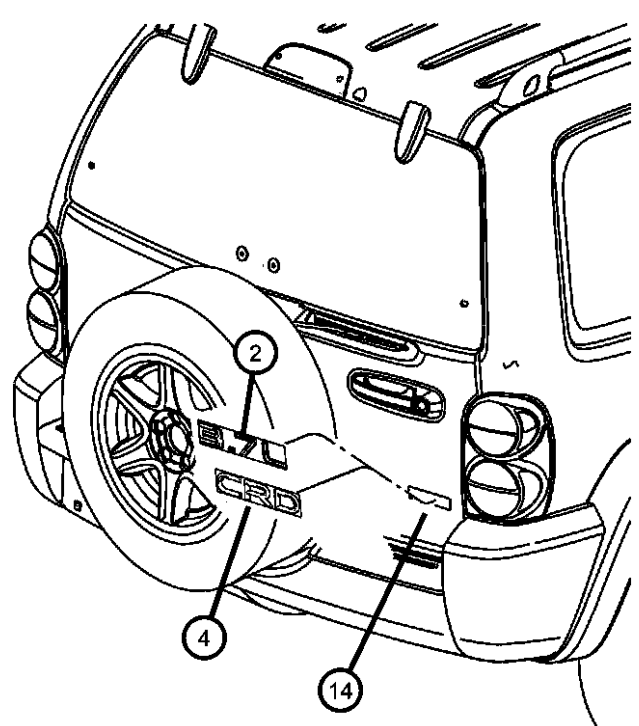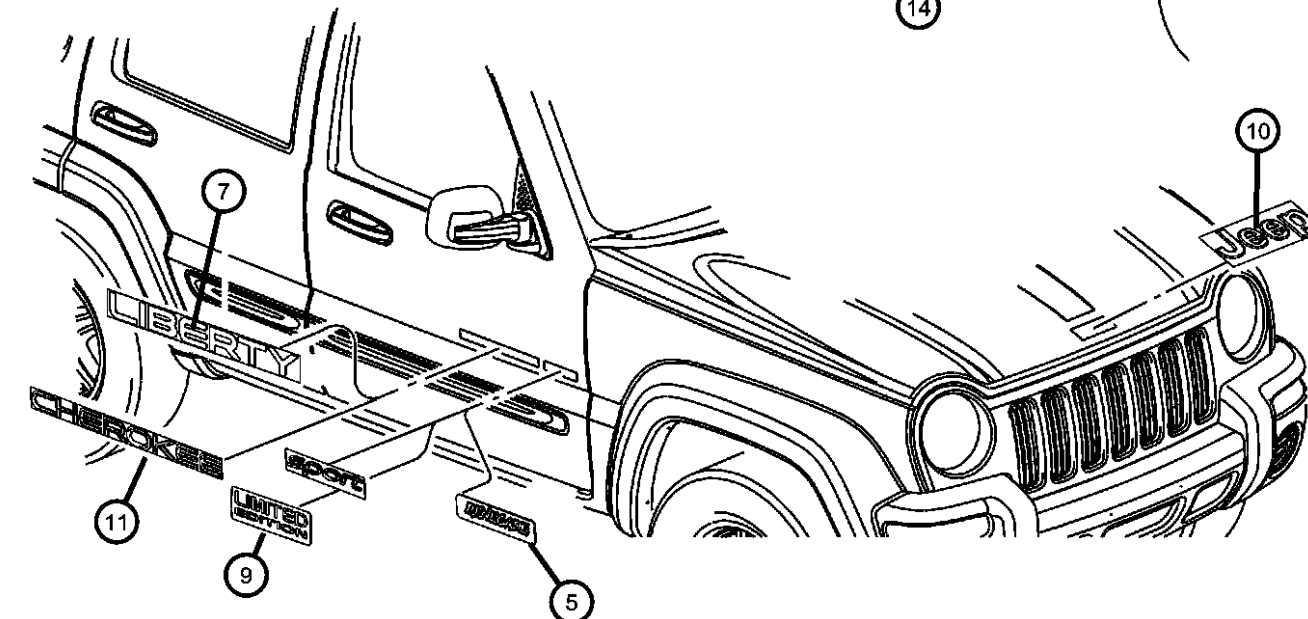ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; Sales Codes [MZR]= Common Rail Diesel									
1	55156554AE	1							DECAL, JEEP, [MVC]
2	55156275AF	1							DECAL, 3.7L, [MZL]
-3	5JN17CA1AB	1							NAMEPLATE, 3.7L, [KFS]
4									NAMEPLATE, CRD
	55156405AD	1							[MZR], Bright Chrome Finish
	5JN01CA1AA	1							Dull Finish
5	52112057AA	2							DIMENSIONAL GRAPHIC, Renegade, [MZ2]
6	5JN16CA1AB	1	J, U						NAMEPLATE, 4X4, [KRS]
7	5JN11CA1AB	2							NAMEPLATE, Liberty, [KLS]
-8	55156604AD	2							DECAL, Liberty, [MZ3]
9	55156605AA	2							DECAL, Limited Edition, [MZ2]
10	55156554AE	1							DECAL, JEEP, [MVC]
11	55156272AG	2							DECAL, Cherokee, [MZC]
-12	04399791	2							REFLECTOR, Fascia
-13	52112057AA	2							DIMENSIONAL GRAPHIC, Freedom Edition
14	55156043AB	2							DIMENSIONAL GRAPHIC, Limited, [MSU]
-15	55157305AA	2							DIMENSIONAL GRAPHIC, Extreme Sport, [MV5]
-16	55157099AA	2							NAMEPLATE, Columbia Edition, [MTS]
17	55156555AE	1	J, U						DECAL, 4x4, [MVD]
-18	55157022AB	2							DIMENSIONAL GRAPHIC, Rocky Mountain
<div><div></div><div></div><div></div></div> <div><div><b>LIBERTY (KJ)</b> SERIES P = Limited H = Sport M = Renegade</div><div>LINE J = LHD (4WD) U = RHD (4WD) T = LHD (2WD)</div><div>BODY 74 = 4 Door (104.3 WB)</div><div>ENGINE ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel EN0 = 4Cyl Turbo Diesel EK0 = All 3.7L ED0 = All 2.4L</div><div>TRANSMISSION DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions</div></div>									

AR = use ase required - = Non illustrated part

Moldings, Body Side  
Figure EKJ-210

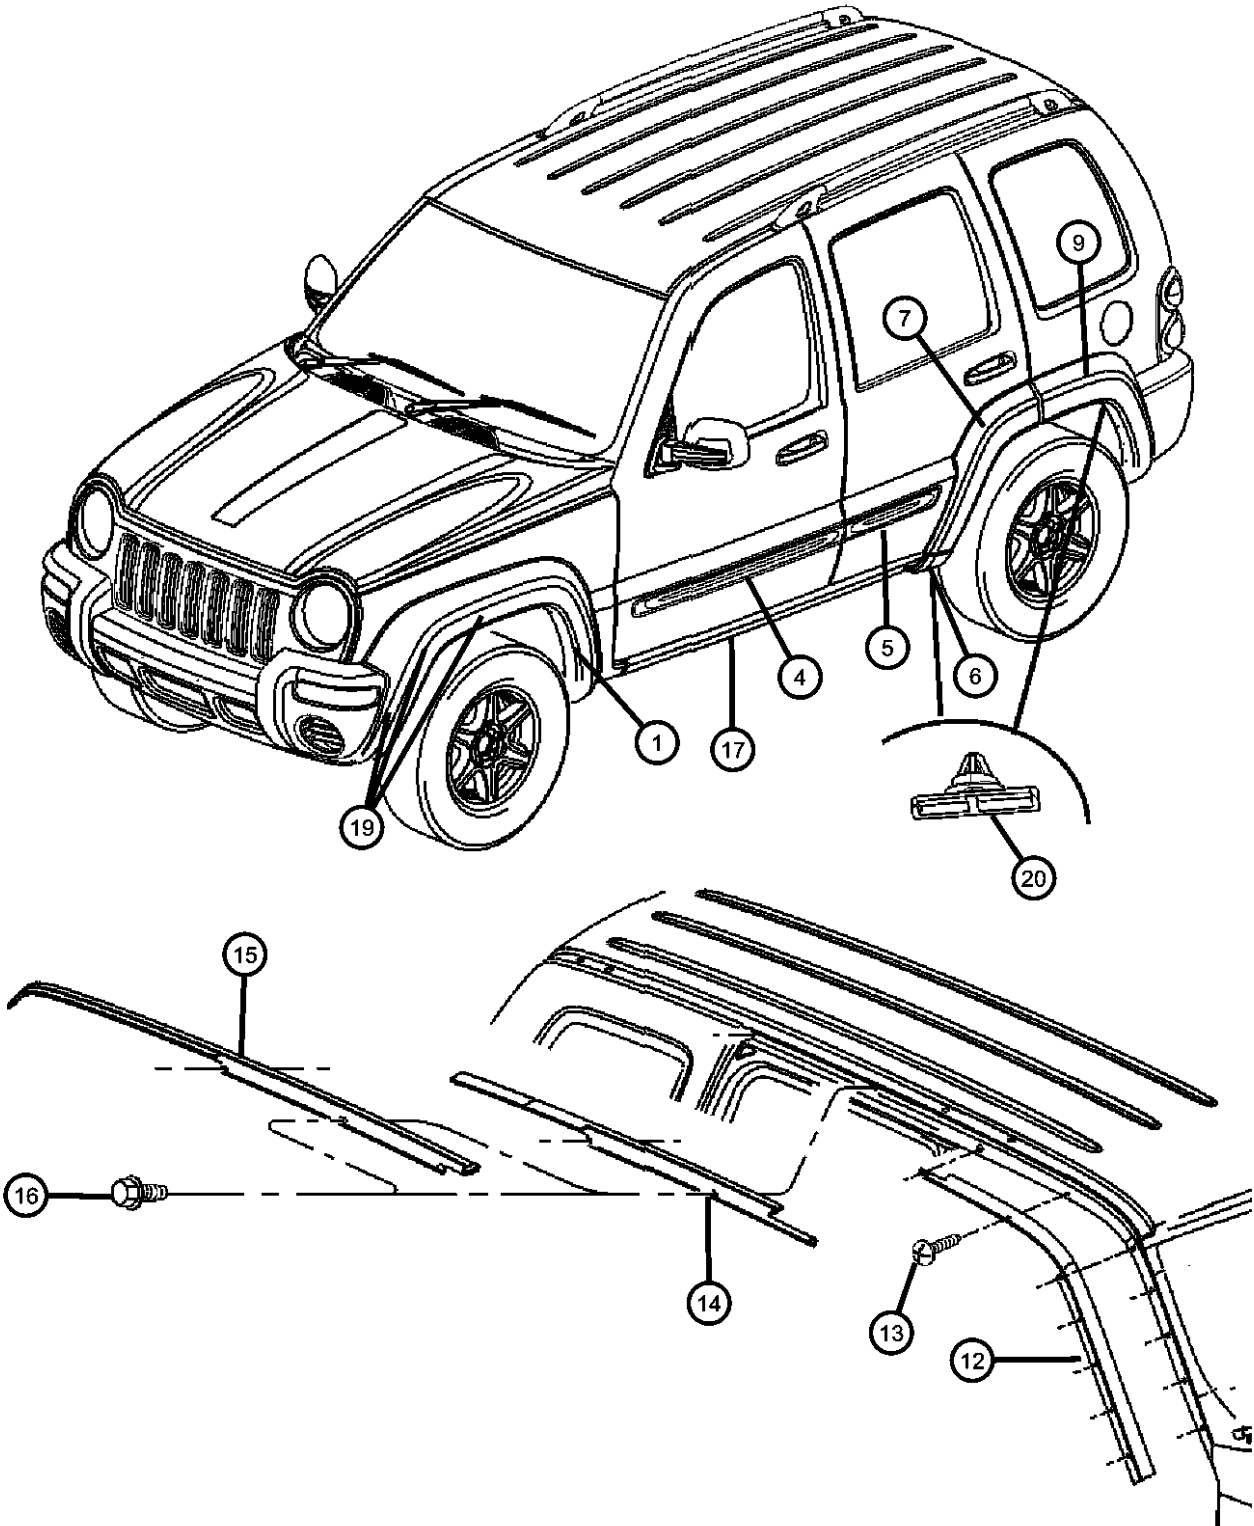

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


NOTE  
Sales Code :  
[MWE] = Side Roof Rails  
Sales Code : [MRK] = Side Step  
Sales Code : [APA] = Australia Equipment Group

1									APPLIQUE, Fender Wheel Opening
	5GG96HS5AG	1		H					[K3A], Right
	5GG97HS5AG	1		H					[K3A], Left
	5GH00AG- WAF	1		P					[K5G], Right
	5GH00AJCAF	1		P					[K5K], Right
	5GH00BR8AF	1		P					[K5H], Right
	5GH00WB7AF	1		P					[K5B], Right
	5GH00WS2AF	1		P					[K5S], Right
	5GH00ZBJAF	1		P					[K5D], Right
	5GH01AG- WAF	1		P					[K5G], Left
	5GH01AJCAF	1		P					[K5K], Left
	5GH01BR8AF	1		P					[K5H], Left
	5GH01DX8AF	1		P					[K5X], Left
	5GH01PR4AF	1		P					[K5R], Left
	5GH01SW1AF	1		P					[K5W], Left
	5GH00DX8AF	1		P					[K5X], Right
	5GH00PR4AF	1		P					[K5R], Right
	5GH00SW1AF	1		P					[K5W], Right
	5GH01ZBJAF	1		P					[K5D], Left
	5HV45AF- MAD	1							[K4C], Left
	5HV45AJCAD	1							[K4K], Left
	5HV45DX8AD	1							[K4X], Left
	5HV45WS2AD	1							[K4S], Left
	5HV46AF- MAD	1							[K4C], Right

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

**Moldings, Body Side  
Figure EKJ-210**

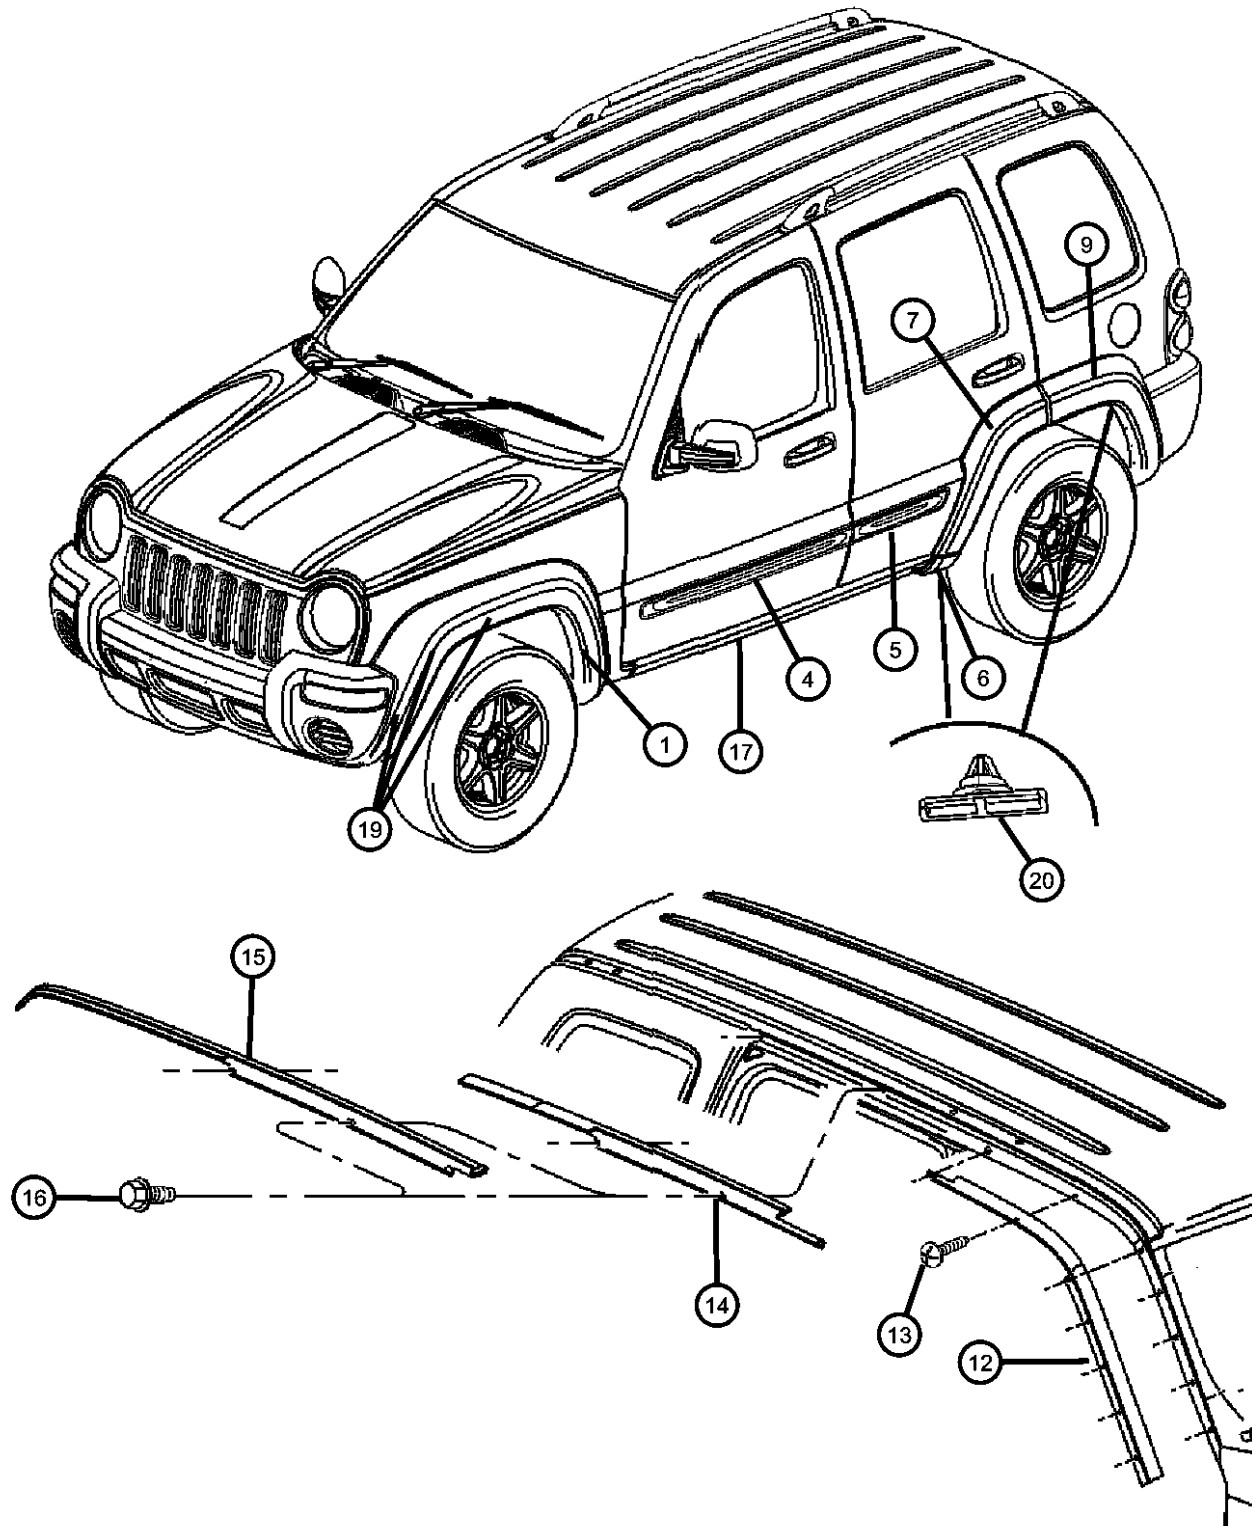

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5HV46AJCAD	1							[K4K], Right
	5HV46DX8AD	1							[K4X], Right
	5HV46WS2AD	1							[K4S], Right
	5GH01WB7AF	1		P					[K5B], Left
	5GH01WS2AF	1		P					[K5S], Left
-2	55156429AA	3							RETAINER, Applique
-3	55156447AA	11							PIN, Push
4									MOLDING, Front Door
	5GF34HS5AB	1		H					[K1A], Right
	5GF34RXFAB	1		M					[K1F], Right
	5GF35HS5AB	1		H					[K1A], Left
	5GF35RXFAB	1		M					[K1F], Left
	5GF54AG-WAB	1		P					[K2G], Right
	5GF54AJCAB	1		P					[K2K], Right
	5GF54BR8AB	1		P					[K2H], Right
	5GF54DX8AB	1		P					[K2X], Right
	5GF54PR4AB	1		P					[K2R], Right
	5GF54SW1AB	1		P					[K2W], Right
	5GF54WB7AB	1		P					[K2B], Right
	5GF54WS2AB	1		P					[K2S], Right
	5GF54ZBJAB	1		P					[K2D], Right
	5GF54ZDRAB	1							[K7J], Right
	5GF55AG-WAB	1		P					[K2G], Left
	5GF55AJCAB	1		P					[K2K], Left
	5GF55BR8AB	1		P					[K2H], Left
	5GF55DX8AB	1		P					[K2X], Left
	5GF55PR4AB	1		P					[K2R], Left
	5GF55SW1AB	1		P					[K2W], Left
	5GF55WB7AB	1		P					[K2B], Left

**LIBERTY (KJ)**

**SERIES**

P = Limited  
H = Sport  
M = Renegade

**LINE**

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

**BODY**

74 = 4 Door (104.3 WB)

**ENGINE**

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16v  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L

**TRANSMISSION**


DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ



Moldings, Body Side  
Figure EKJ-210

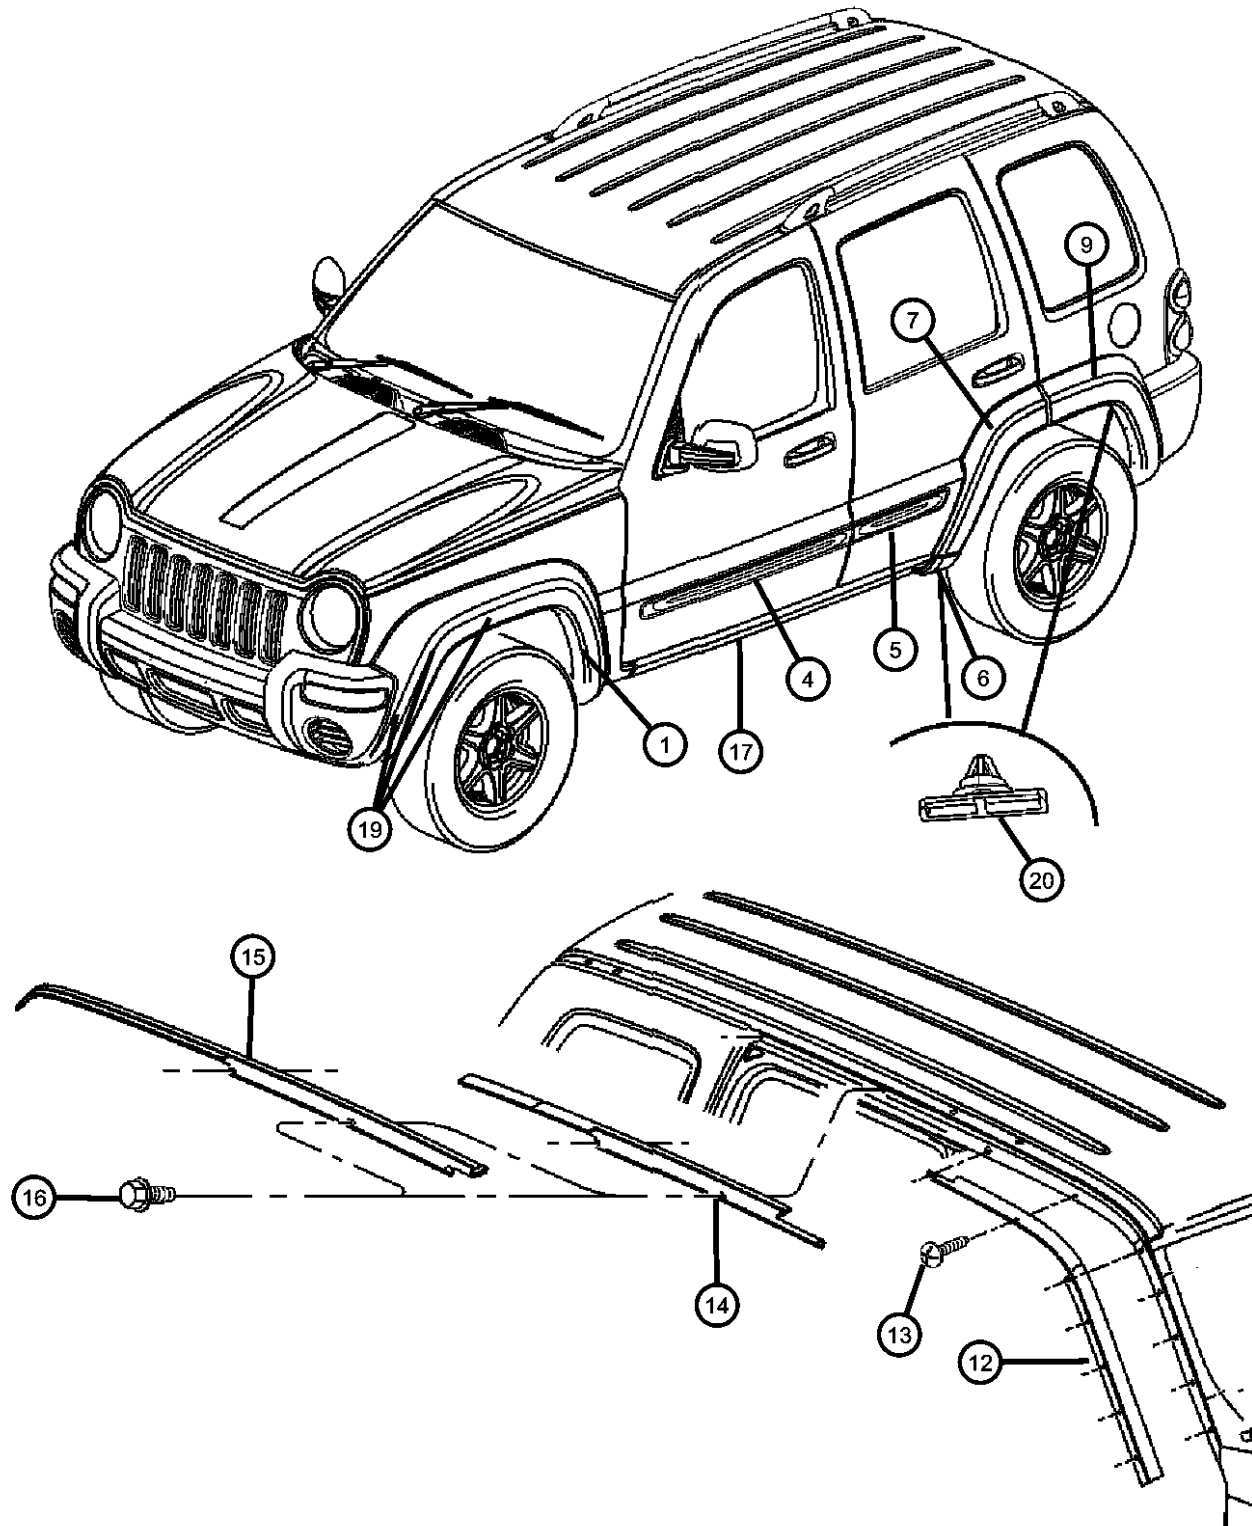

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
5	5GF55WS2AB	1		P					[K2S], Left
	5GF55ZBJAB	1		P					[K2D], Left
									MOLDING, Rear Door
	5GF30HS5AC	1		H					[K1A], Right
	5GF30RXFAC	1		M					[K1F], Right
	5GF31HS5AC	1		H					[K1A], Left
	5GF31RXFAC	1		M					[K1F], Left
	5GF38AG-WAC	1		P					[K2G], Right
	5GF38AJCAC	1		P					[K2K], Right
	5GF38BR8AC	1		P					[K2H], Right
	5GF38DX8AC	1		P					[K2X], Right
	5GF38PR4AC	1		P					[K2R], Right
	5GF38SW1AC	1		P					[K2W], Right
	5GF38WB7AC	1		P					[K2B], Right
	5GF38WS2AC	1		P					[K2S], Right
	5GF38ZBJAC	1		P					[K2D], Right
	5GF38ZDRAC	1							[K7J], Right
	5GF39AG-WAC	1		P					[K2G], Left
	5GF39AJCAC	1		P					[K2K], Left
	5GF39BR8AC	1		P					[K2H], Left
	5GF39DX8AC	1		P					[K2X], Left
6	5GF39PR4AC	1		P					[K2R], Left
	5GF39SW1AC	1		P					[K2W], Left
	5GF39WB7AC	1		P					[K2B], Left
	5GF39WS2AC	1		P					[K2S], Left
	5GF39ZBJAC	1		P					[K2D], Left
	5GF39ZDRAC	1							[K7J], Left
									APPLIQUE, Sill
	5GK86HS5AD	1		H					[K3A], Right

LIBERTY (KJ)

SERIES

P = Limited

H = Sport

M = Renegade

LINE

J = LHD (4WD)

U = RHD (4WD)

T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl

DOHC 16v SMPI

EKG = Engine - 3.7L V6

ENJ = Engine -2.5L 4 Cyl 16v

Turbo Diesel

ENR = Engine - 2.8L 4 Cyl

Turbo Diesel

ENO = 4Cyl Turbo Diesel

EKO = All 3.7L

EDO = All 2.4L

TRANSMISSION

DDD = Transmission - 5-Speed HD

Manual

DDK = Transmission - 5-Speed HD

Manual

DG4 = Transmission-Multi-Speed

Auto, 45RFE

DG6 = Transmission-4-Spd.

Automatic, 42RLE

DGQ = Transmission-5-Spd Automatic

5-45RFE


DBB = All Manual Transmissions

DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

**Moldings, Body Side**  
**Figure EKJ-210**

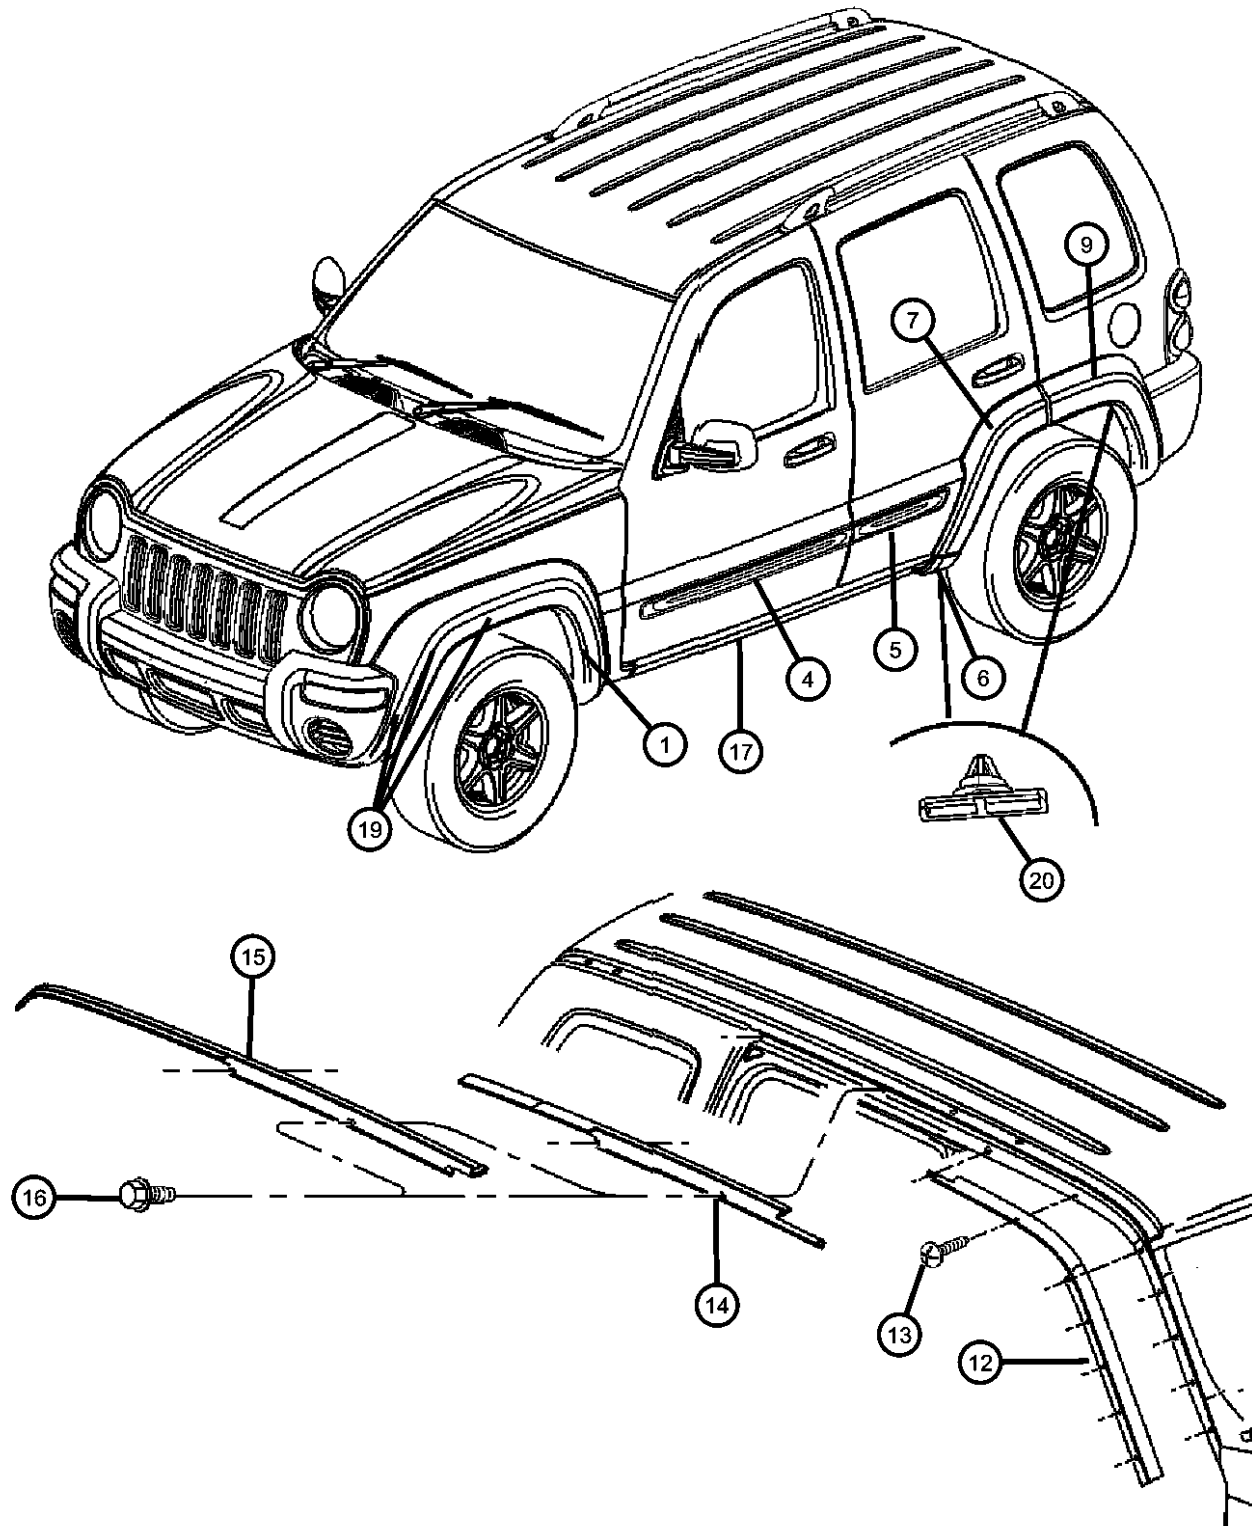

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5GK86XXXAD	1							[AYG], Right
		1							[ALS], Right
		1		P					Right
		1							[AER], Right
	5GK87HS5AD	1		H					[K3A], Left
	5GK87XXXAD	1							[AYG], Left
		1							[ALS], Left
		1		P					Left
		1							[AER], Left
	5HV51AF-MAD	1							[K4C], Left
	5HV51AJCAD	1							[K4K], Left
	5HV51DX8AD	1							[K4X], Left
	5HV51WS2AD	1							[K4S], Left
	5HV52AF-MAD	1							[K4C], Right
	5HV52AJCAD	1							[K4K], Right
	5HV52DX8AD	1							[K4X], Right
	5HV52WS2AD	1							[K4S], Right
7									APPLIQUE, Rear Door
	5GF32AG-WAF	1		P					[K5G], Right
	5GF32AJCAF	1		P					[K5K], Right
	5GF32BR8AF	1		P					[K5H], Right
	5GF32PR4AF	1		P					[K5R], Right
	5GF32SW1AF	1		P					[K5W], Right
	5GF32WB7AF	1		P					[K5B], Right
	5GF32WS2AF	1		P					[K5S], Right
	5GF32ZBJAF	1		P					[K5D], Right
	5GF32DX8AG	1							[K5X], Right
	5GF33AG-WAF	1		P					[K5G], Left

**LIBERTY (KJ)**

**SERIES**

P = Limited  
H = Sport  
M = Renegade

**LINE**

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

**BODY**

74 = 4 Door (104.3 WB)

**ENGINE**

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16v  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L


**TRANSMISSION**

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Moldings, Body Side  
Figure EKJ-210

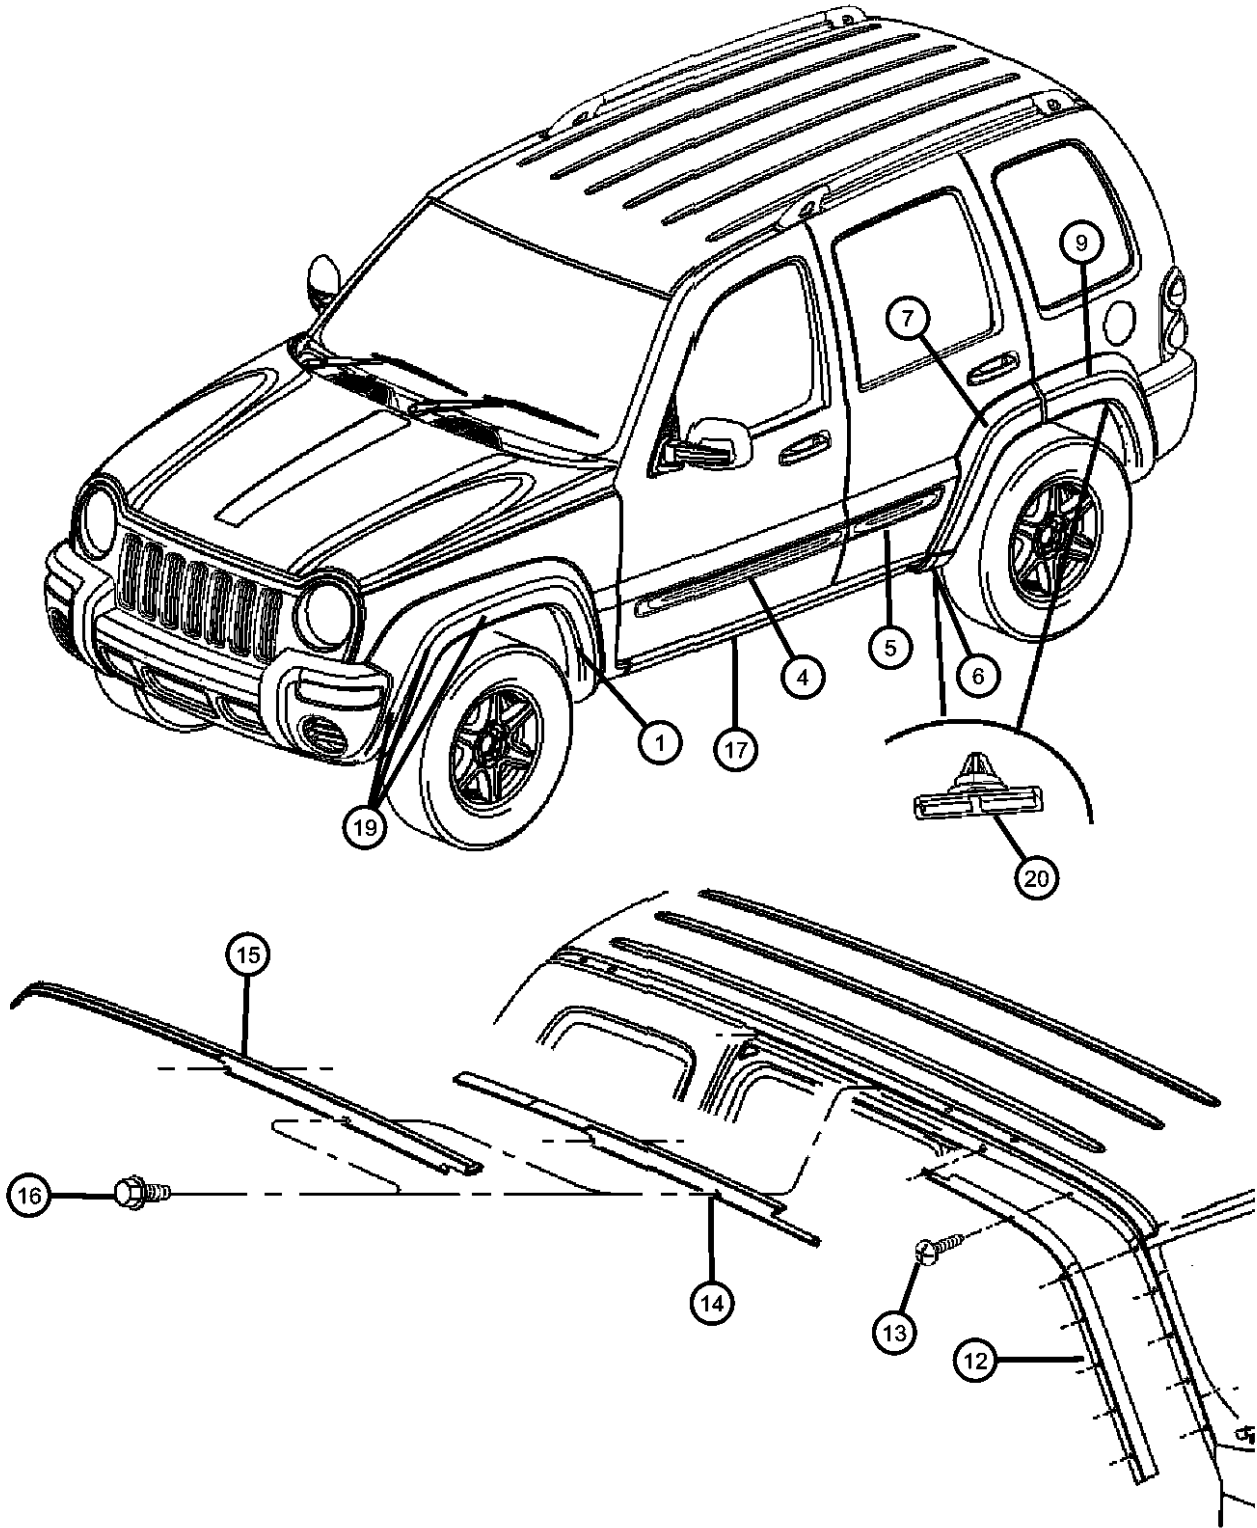


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5GF33AJCAF	1		P					[K5K], Left
	5GF33BR8AF	1		P					[K5H], Left
	5GF33PR4AF	1		P					[K5R], Left
	5GF33WB7AF	1		P					[K5B], Left
	5GF33WS2AF	1		P					[K5S], Left
	5GF33ZBJAF	1		P					[K5D], Left
	5GF33SW1AF	1		P					[K5W], Left
	5GF33DX8AG	1							[K5X], Left
	5HV50AJCAC	1							[K4K], Right
	5HV50DX8AC	1							[K4X], Right
	5HV50WS2AC	1							[K4S], Right
	5GF36HS5AG	1		H					[K3A], Right
	5GF37HS5AG	1		H					[K3A], Left
	5HV49AF-MAC	1							[K4C], Left
	5HV49AJCAC	1							[K4K], Left
	5HV49DX8AC	1							[K4X], Left
	5HV49WS2AC	1							[K4S], Left
	5HV50AF-MAC	1							[K4C], Right
-8	55156447AB	11							PIN, Push
9									APPLIQUE, Rear Wheel Opening
	5GH02HS5AC	1		H					[K3A], Right
	5GH03HS5AC	1		H					[K3A], Left
	5GH04AG-WAB	1		P					[K5G], Right
	5GH04AJCAC	1							[K5K], Right
	5GH04BR8AB	1		P					[K5H], Right
	5GH04SW1AB	1		P					[K5W], Right
	5GH04WB7AB	1		P					[K5B], Right
	5GH04PR4AC	1							[K5R], Right

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

**Moldings, Body Side**  
**Figure EKJ-210**

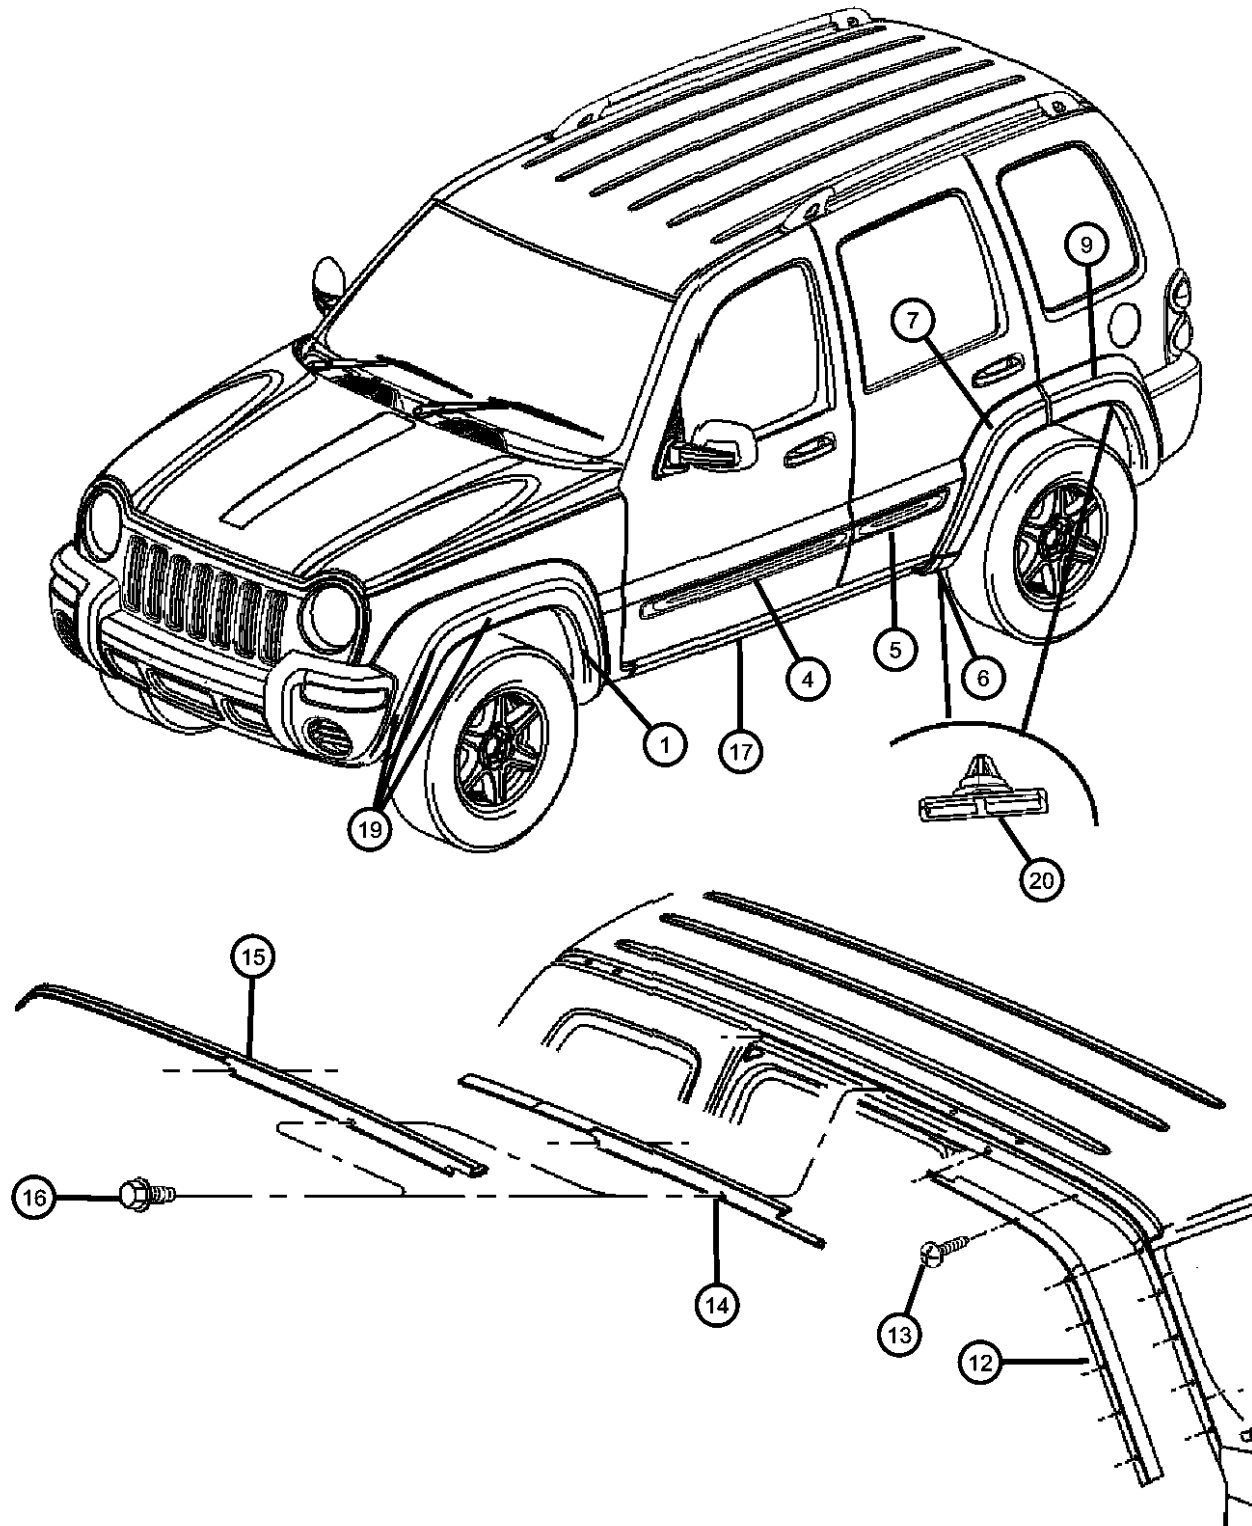

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5GH04DX8AC	1							[K5X], Right
	5GH04ZBJAC	1							[K5D], Right
	5GH05AG-WAB	1		P					[K5G], Left
	5GH04WS2AC	1							[K5S], Right
	5GH05AJCAC	1							[K5K], Left
	5GH05BR8AB	1		P					[K5H], Left
	5GH05SW1AB	1		P					[K5W], Left
	5GH05WB7AB	1		P					[K5B], Left
	5GH05PR4AC	1							[K5R], Left
	5GH05DX8AC	1							[K5X], Left
	5GH05ZBJAC	1							[K5D], Left
	5HV47AF-MAC	1							[K4C], Left
	5HV47AJCAC	1							[K4K], Left
	5HV47DX8AC	1							[K4X], Left
	5GH05WS2AC	1							[K5S], Left
	5HV47WS2AC	1							[K4S], Left
	5HV48AF-MAC	1							[K4C], Right
	5HV48AJCAC	1							[K4K], Right
	5HV48DX8AC	1							[K4X], Right
	5HV48WS2AC	1							[K4S], Right
-10	55360254AA	1							SEAL, Moulding
-11	55360509AA	8							SPACER, Windshield
12									MOLDING, A-PILLAR
	55360052AC	1							[Up To 11-20-03], Right
	55360053AC	1							[Up To 11-20-03], Left
	55360688AA	1							[After 11-20-03], Right
	55360689AA	1							[After 11-20-03], Left
13	00153732	14							SCREW, .164-15x.500

**LIBERTY (KJ)**

**SERIES**

P = Limited  
H = Sport  
M = Renegade

**LINE**

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

**BODY**

74 = 4 Door (104.3 WB)

**ENGINE**

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16v  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L


**TRANSMISSION**

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Moldings, Body Side  
Figure EKJ-210

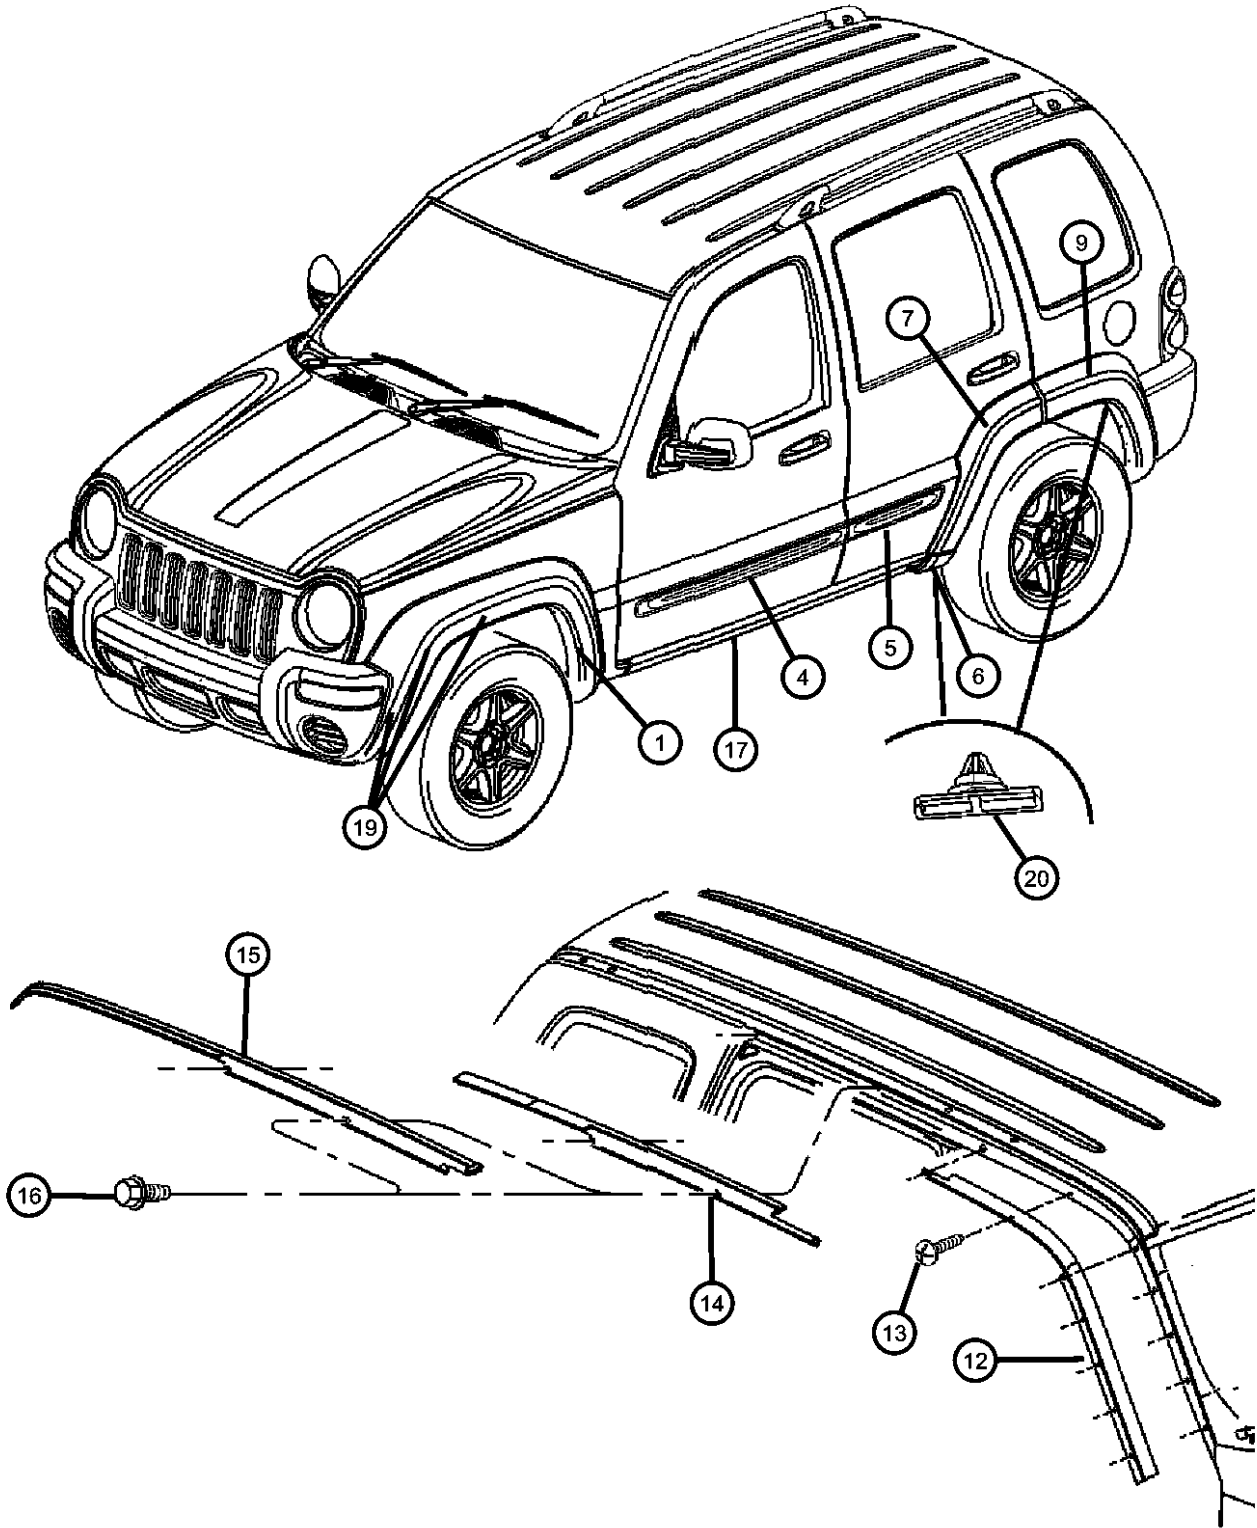


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	55360174AC	1							MOLDING, Roof With Roof Rack, [MWE], Molding Rear Section Serviced With P/N 55360418AH Roof Rack Side Rails, Right
	55360175AC	1							With Roof Rack, [MWE], Molding Rear Section Serviced With P/N 55360419AH Roof Rack Side Rails, Left
15	55360176AE	1							MOLDING, Roof Without Roof Rack [MWE], Right
	55360177AE	1							Without Roof Rack [MWE], Left
16	00153732	4							SCREW, .164-15x.500
17	5GU02RX-FAC	1			H, P				MOLDING, Sill Cover Right
	5GU03RX-FAC	1			H, P				Left
-18	05101912AA	8			H, P				RETAINER, Molding
19	05140709AA	1							ORNAMENT, Wheel Flare, Package of 5 Rivets
20	55156655AA	5							PIN, Push

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Side Rails, Tubular [MRK]  
Figure EKJ-220

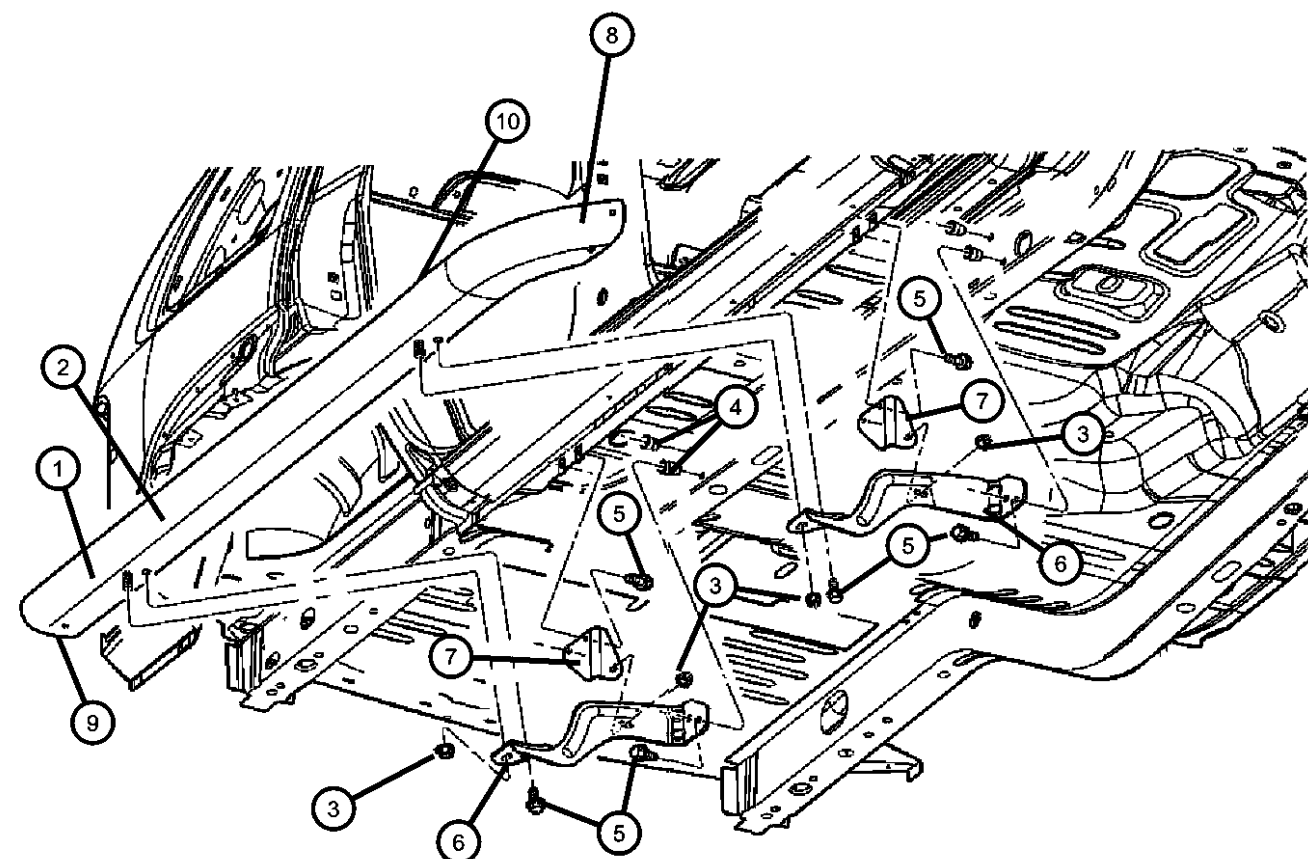	ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	1									STEP, Right Side
		5HY50WS2AD	1							Right
		5HY51WS2AD	1							Left
	2									RAIL, Rocker Panel
		5JY16WS2AA	1							Right
		5JY17WS2AA	1							Left
	3	5JY17WS2AA	1							NUT AND WASHER, M8-1.25, (NOT SERVICED)
	4	06507091AA	8							RIVNUT, Installation, M8x1.25x17.78
	5	06100592	4							SCREW, M8x1.25x30
	6									BRACKET, Side Rail
		55156510AD	1							Front, Right
		55156511AD	1							Front, Left
		55156584AD	1							Rear, Right
		55156587AD	1							Rear, Left
	7									BRACKET, Side Rail
		55156580AC	2							Right
		55156581AC	2							Left
	8									END CAP, Side Step
		55156512AD	1							Right, Front
		55156513AD	1							Left, Front
		55156582AC	1							Right, Rear
		55156583AC	1							Left, Rear
	9	55360695AA	2							END CAP, Side Rail
	10									STEP PAD, Side Step
		55156508AD	1							Right
		55156509AD	1							Left

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions


AR = use ase required - = Non illustrated part

Decals  
Figure EKJ-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; Sales Codes  
[MZR]= Common Rail Diesel

1	55156554AE	1							DECAL, JEEP, [MVC]
2	55156275AF	1							DECAL, 3.7L, [MZL]
-3	5JN17CA1AB	1							NAMEPLATE, 3.7L, [KFS]
4									NAMEPLATE, CRD
	55156405AD	1							[MZR], Bright Chrome Finish
	5JN01CA1AA	1							Dull Finish
5	52112057AA	2							DIMENSIONAL GRAPHIC, Renegade, [MZ2]
6	5JN16CA1AB	1	J, U						NAMEPLATE, 4X4, [KRS]
7	5JN11CA1AB	2							NAMEPLATE, Liberty, [KLS]
-8	55156604AD	2							DECAL, Liberty, [MZ3]
9	55156605AA	2							DECAL, Limited Edition, [MZ2]
10	55156554AE	1							DECAL, JEEP, [MVC]
11	55156272AG	2							DECAL, Cherokee, [MZC]
-12	04399791	2							REFLECTOR, Fascia
-13	55157106AA	1							DECAL, Trail Rated, MT2

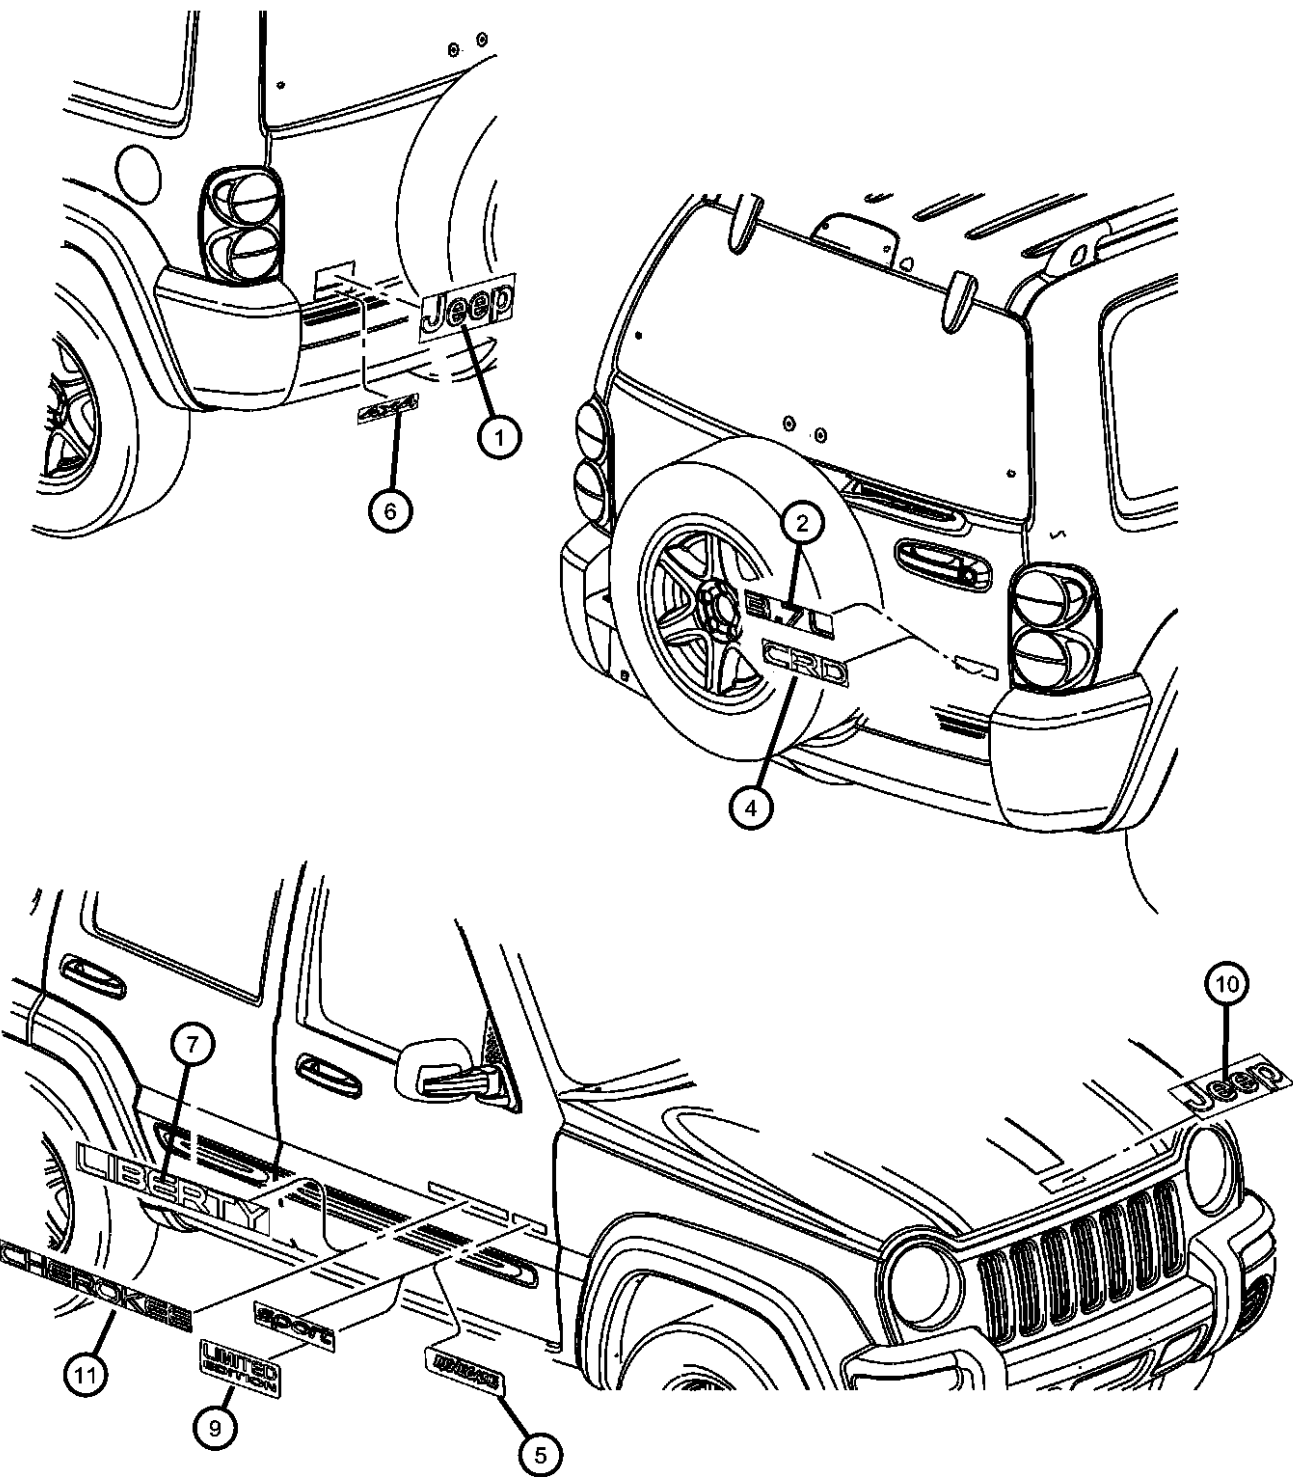


<b>LIBERTY (KJ)</b>				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

# Group - IKJ

## Interior Trim

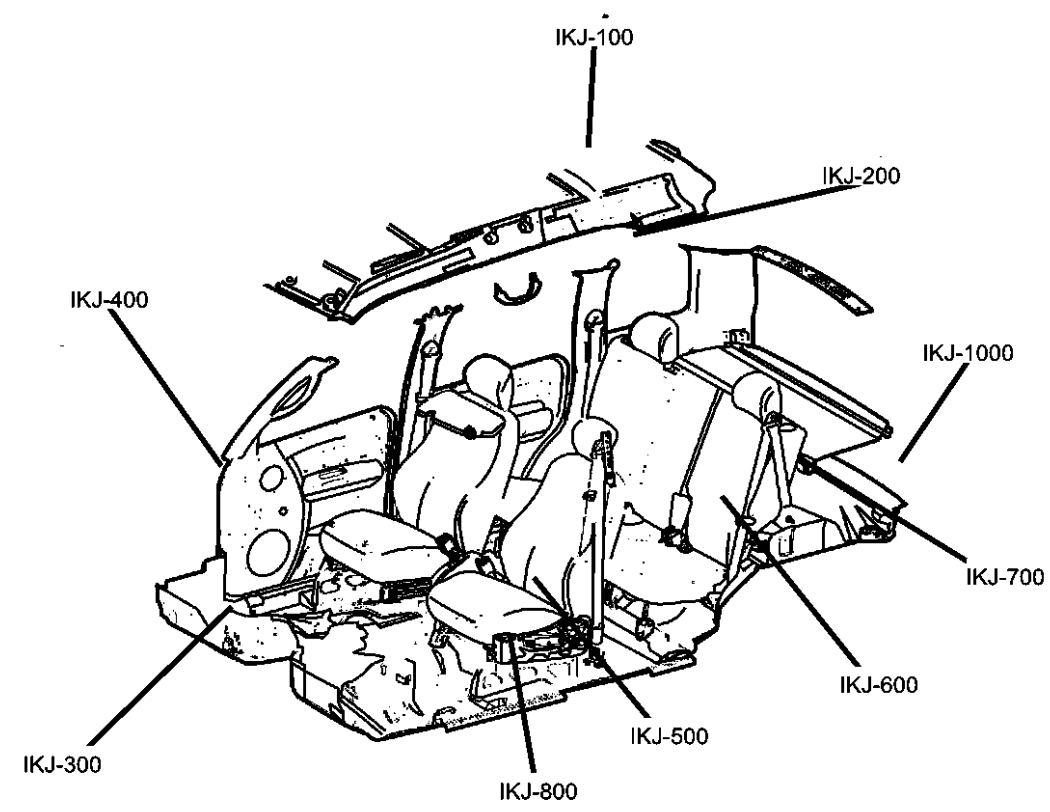


<b>IKJ-100</b> Headliner and Visor	<b>IKJ-1000</b> Lift Gate Trim	<b>IKJ-200</b> Moldings, Scuff Plates	<b>IKJ-300</b> Carpet
<b>IKJ-400</b> Door Trim Panels	<b>IKJ-500</b> Front Seats and Attaching Parts	<b>IKJ-600</b> Rear Seats and Attaching Parts	<b>IKJ-700</b> Seat Belts-Front and Rear
<b>IKJ-800</b> Adjusters, Covers, Shields, and Risers			



Group - IKJ Interior Trim

Illustration Title	Group-Fig. No.
<b>Headliner and Visor</b>	
Headliner and Visors.....	Fig. IKJ - 110
<b>Moldings, Scuff Plates</b>	
Panels, Interior Trim, Front.....	Fig. IKJ - 210
Panels, Interior Trim, Rear .....	Fig. IKJ - 220
<b>Carpet</b>	
Carpets and Mats .....	Fig. IKJ - 310
Cargo Organizer.....	Fig. IKJ - 320
<b>Door Trim Panels</b>	
Trim Panel, Front Door .....	Fig. IKJ - 410
Trim Panel, Rear Door.....	Fig. IKJ - 420
<b>Front Seats and Attaching Parts</b>	
Front Seat, Leather, Low Back, Trim Code [DL] .....	Fig. IKJ - 510
Front Seat, Cloth, Low Back, Trim Code [XJ] .....	Fig. IKJ - 520
Front Seat, Cloth, Trim Code [M5] .....	Fig. IKJ - 530
Front Seat, Cloth, Low Back, Trim Code [E7] .....	Fig. IKJ - 540
Front Seat, Cloth, Trim Code [J5] .....	Fig. IKJ - 550
Front Seat, Cloth, Low Back, Trim Code [F7] .....	Fig. IKJ - 560
Front Seat, Cloth, Low Back, Trim Code [A7] .....	Fig. IKJ - 570
Front Seat, Cloth, Trim Code [V5] .....	Fig. IKJ - 580
<b>Rear Seats and Attaching Parts</b>	
Rear Seats, Trim Code [M5].....	Fig. IKJ - 610
Rear Seat, Trim Code [DL] .....	Fig. IKJ - 620
Rear Seat, Trim Code [XJ] .....	Fig. IKJ - 630
Rear Seat, Trim Code [E7] .....	Fig. IKJ - 640
Rear Seat, Trim Code [J5].....	Fig. IKJ - 650
Rear Seat, Trim Code [F7] .....	Fig. IKJ - 660
Rear Seat, Trim Code [A7] .....	Fig. IKJ - 670
Rear Seat, Trim Code [V5] .....	Fig. IKJ - 680
<b>Seat Belts-Front and Rear</b>	
Seat Belts, Front .....	Fig. IKJ - 710
Seat Belts, Rear.....	Fig. IKJ - 720
<b>Adjusters, Covers, Shields, and Risers</b>	
Recliner and Adjuster .....	Fig. IKJ - 810
<b>Lift Gate Trim</b>	
Swing Gate Trim Panel .....	Fig. IKJ - 1010

Headliner and Visors  
Figure IKJ-110

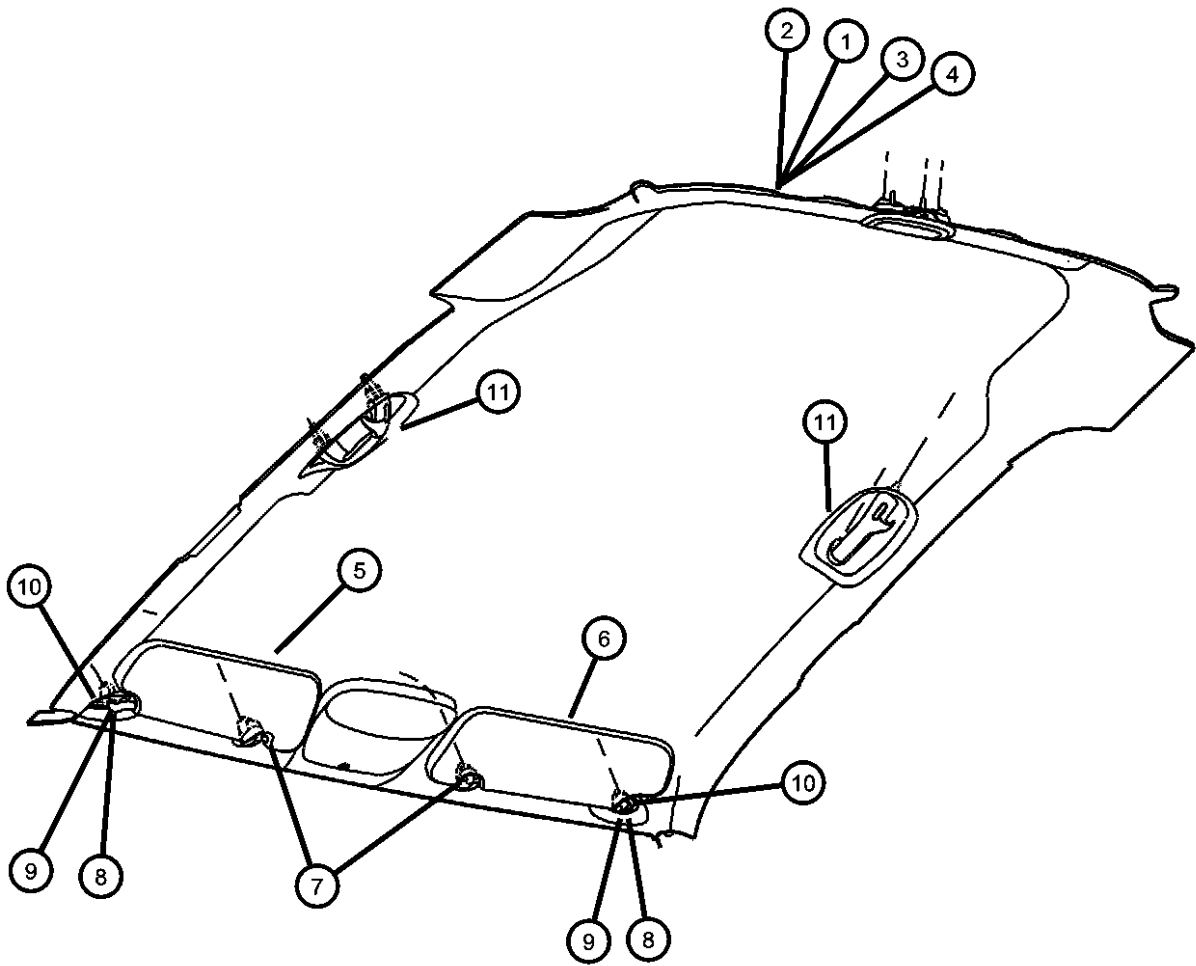

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Sales Codes:  
[AHM] = Convenience Group 1  
[CGS] = Side Air Bags  
[CUD] = Console, Mini Overhead  
[GNA] = Prismatic  
[GNK] = Electrochromic  
[GWA] = Power Sunroof  
[LSC] = Security Alarm  
[RSP] = Hands Free Communication

1

0XP81TL2AA

1

J, T

HEADLINER, Without Sunroof  
[GWA]  
Up to 2/9/04, With [CGS] Side  
Air Bags Only  
Up to 2/9/04, With [AHM]  
Convenience Group 1, [CUD]  
Overhead Console, [GWA]  
Power Sunroof, and [CGS] Side  
Air Bags  
Up to 2/9/04, With [AHM]  
Convenience Group 1 and [CGS]  
Side Air Bags  
Up to 2/9/04, Without [AHM]  
Convenience Group 1, [CUD]  
Overhead Console, [GWA]  
Power Sunroof, and [CGS] Side  
Air Bags  
Up to 2/9/04, With [AHM]  
Convenience Group 1,Only  
Up to 2/9/04, With [AHM]  
Convenience Group 1, [CUD]  
Overhead Console, [GNK] Auto  
Dim Mirror  
Up to 2/9/04, With [AHM]  
Convenience Group 1, [CUD]  
Overhead Console  
Up to 2/9/04, With [AHM]  
Convenience Group 1, [CUD]  
Overhead Console, and [CGS]  
Side Air Bags

0XP821L2AA

1

J, T

0XP83TL2AA

1

J, T

0XP85TL2AA

1

J, T

0XP86TL2AA

1

J, T

0XP871L2AA

1

J, T

0XW081L2AA

1

0XW091L2AA

1

LIBERTY (KJ)

SERIES

P = Limited  
H = Sport  
M = Renegade

LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EKO = All 3.7L  
ED0 = All 2.4L


TRANSMISSION

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ


Headliner and Visors  
Figure IKJ-110

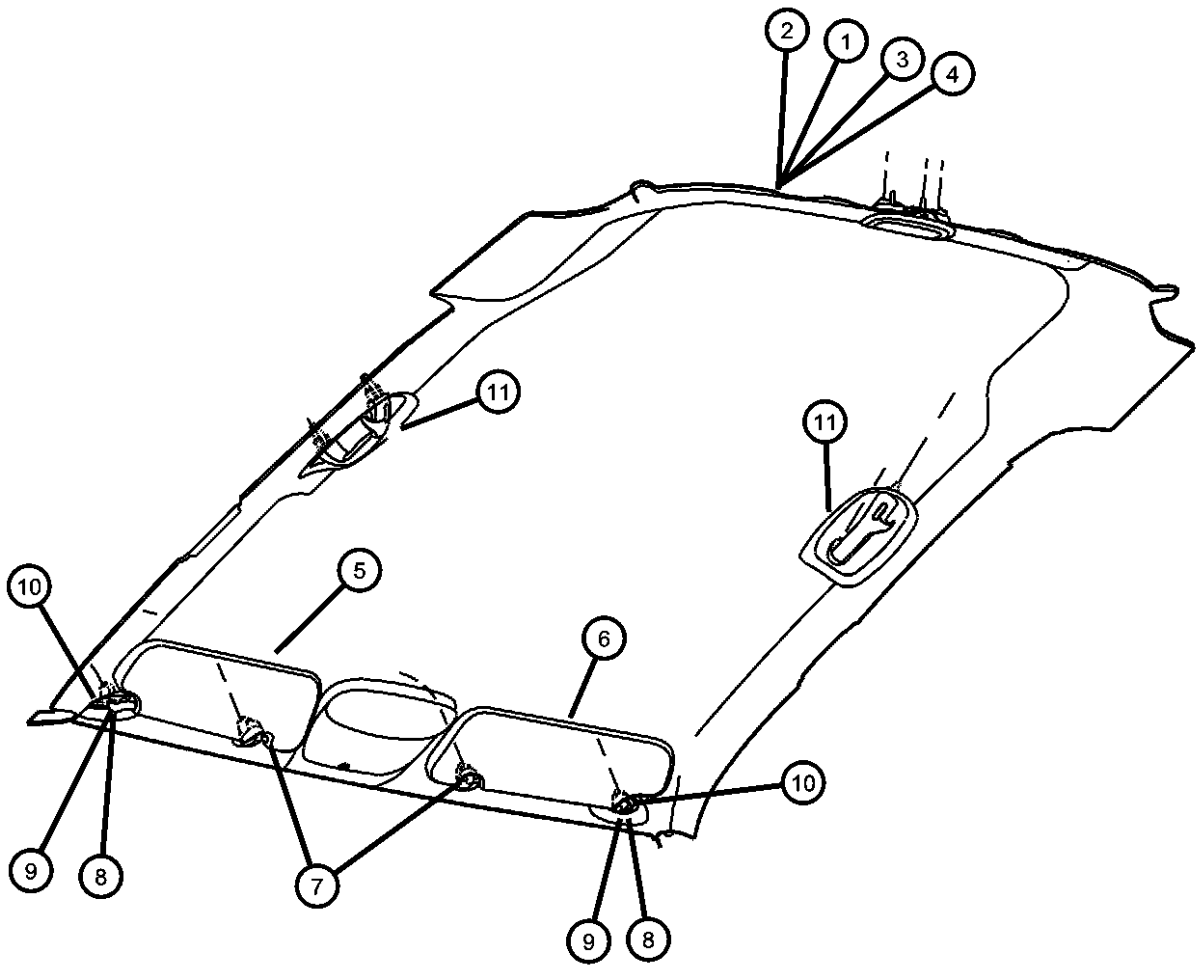

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	1AS12TL2AA	1	J, T					*O0	After 2/9/04, Without [AHM] Convenience Group 1, [CUD] Overhead Console, [GWA] Power Sunroof, and [CGS] Side Air Bags
	1AS13TL2AA	1	J, T					*O0	After 2/9/04, With [AHM] Convenience Group 1,Only
	1AS15TL2AA	1	J, T					*O0	After 2/9/04, With [CGS] Side Air Bags Only
	1AS16TL2AA	1	J, T					*O0	After 2/9/04, With [AHM] Convenience Group 1 and [CGS] Side Air Bags
	1AS281L2AA	1	J, T					*O0	After 2/9/04, With [AHM] Convenience Group 1, [CUD] Overhead Console
	1AS291L2AA	1	J, T					*O0	After 2/9/04, With [AHM] Convenience Group 1, [CUD] Overhead Console, and [CGS] Side Air Bags
	1AS401L2AA	1	J, T					*O0	After 2/9/04, With [AHM] Convenience Group 1, [CUD] Overhead Console, [CUD], [GNK] Auto Dim Mirror
	1AS421L2AA	1	J, T					*O0	After 2/9/04, With [AHM] Convenience Group 1, [CUD] Overhead Console, [GWA] Power Sunroof, and [CGS] Side Air Bags
2									HEADLINER, With Sunroof [GWA]
	0XP89TL2AA	1	J, T					*O0	Up to 2/9/04, With [AHM] Convenience Group 1, [CGS] Side Air Bags
	0XP90TL2AA	1	J, T					*O0	Up to 2/9/04, With [AHM] Convenience Group 1, [CUD] Overhead Console, [CGS] Side Air Bags and [GNK] Auto Dim Mirror
	0XP92TL2AA	1	J, T					*O0	Up to 2/9/04, With [AHM] Convenience Group 1

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				EDO = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	


Headliner and Visors  
Figure IKJ-110

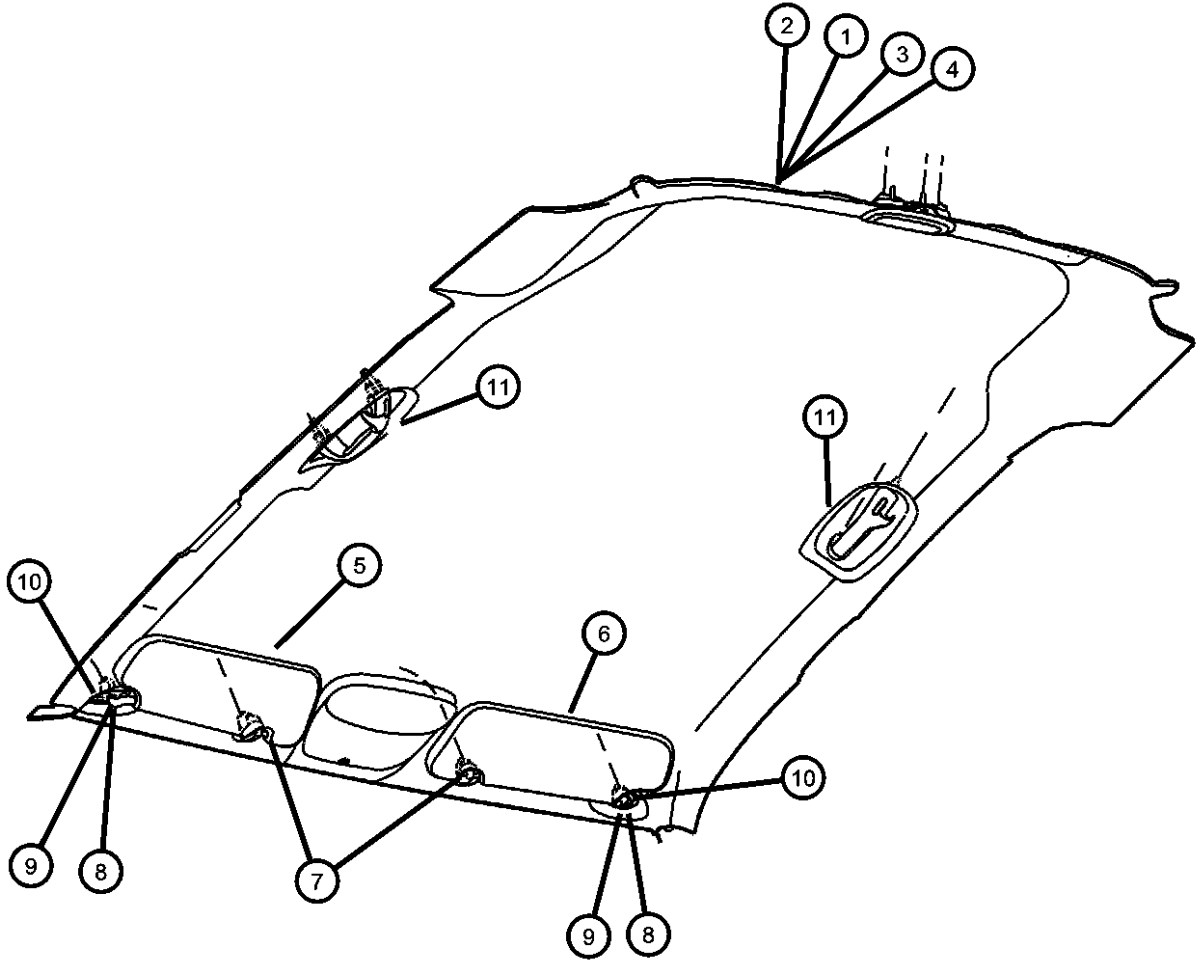

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	0XP93TL2AA	1	J, T					*O0	Up to 2/9/04, With [AHM] Convenience Group 1, [CUD] Overhead Console, and [GNK] Auto Dim Mirror
	0XW10TL2AA	1						*O0	Up to 2/04, With [AHM] Convenience Group 1, [CUD] Overhead Console, and [CGS] Side Air Bags
	0XW11TL2AA	1						*O0	Up to 2/9/04, With [AHM] Convenience Group 1, [CUD] Overhead Console
	1AS14TL2AA	1	J, T					*O0	After 2/9/04, With [AHM] Convenience Group 1
	1AS17TL2AA	1	J, T					*O0	After 2/9/04, With [AHM] Convenience Group 1, [CGS] Side Air Bags
	1AS30TL2AA	1	J, T					*O0	After 2/04, With [AHM] Convenience Group 1, [CUD] Overhead Console, and [CGS] Side Air Bags
	1AS31TL2AA	1	J, T					*O0	After 2/9/04, With [AHM] Convenience Group 1, [CUD] Overhead Console
	1AS41TL2AA	1	J, T					*O0	After 2/9/04, With [AHM] Convenience Group 1, [CUD] Overhead Console, and [GNK] Auto Dim Mirror
	1AS43TL2AA	1	J, T					*O0	After 2/9/04, With [AHM] Convenience Group 1, [CUD] Overhead Console, [CGS] Side Air Bags and [GNK] Auto Dim Mirror
3	0XP91TL2AA	1	J, U					*O0	HEADLINER, Export, With Sunroof [GWA] Up to 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console, [LSC] Security Alarm, [GNK] Auto Dim Mirror
	0XP94TL2AA	1	J, U					*O0	Up to 2/9/04, With [CUD] Overhead Console, [LSC] Security Alarm, [GNK] Auto Dim Mirror

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

# Headliner and Visors Figure IKJ-110

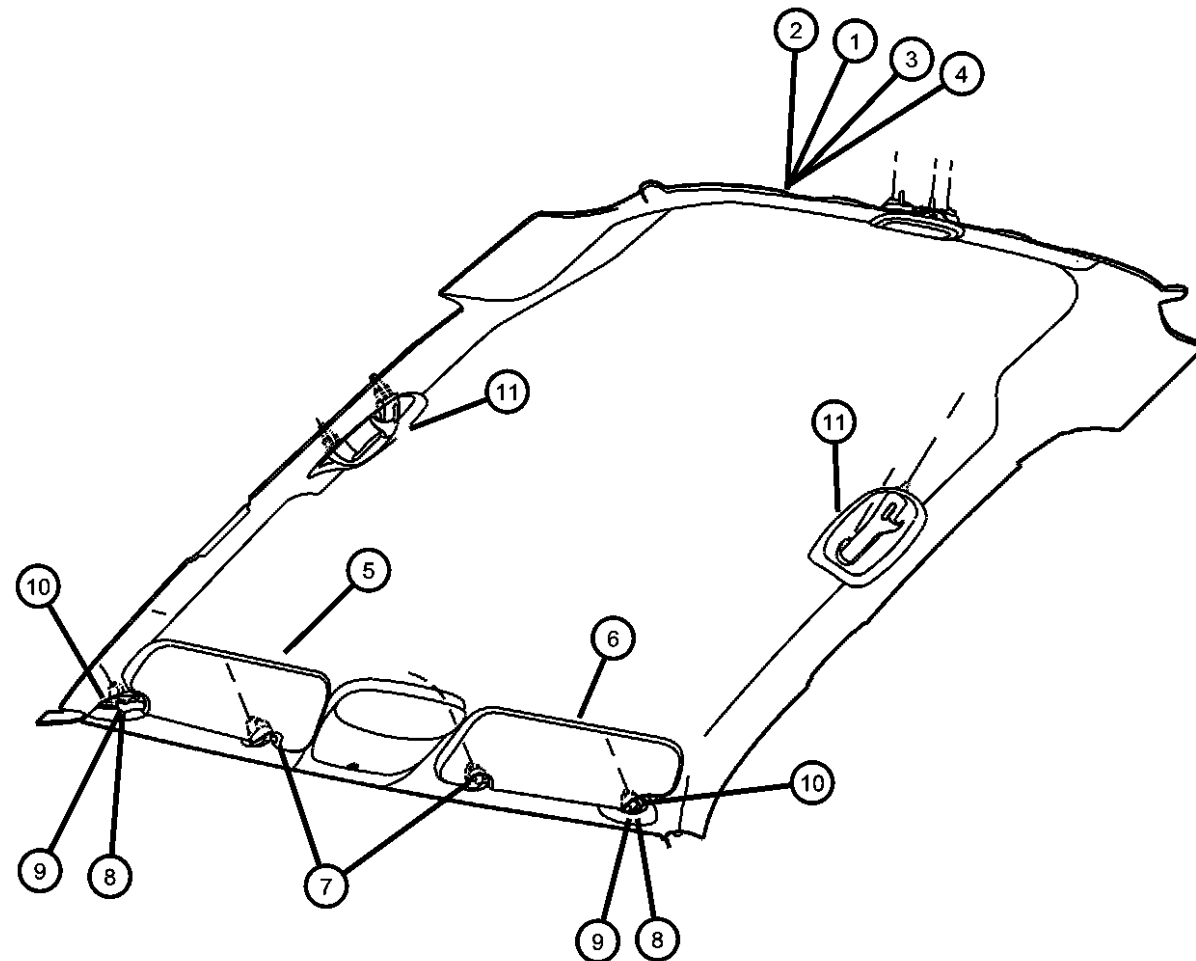

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	0XW10TL2AA	1						*O0	Up to 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console
	0XW11TL2AA	1	J, T					*O0	Up to 2/9/04, With [CUD] Overhead Console
	0XY04TL2AA	1	J, U					*O0	Up to 2/9/04, With Sunroof Only
	0XY06TL2AA	1	J, U					*O0	Up to 2/9/04, With [CUD] Overhead Console, [GNK ] Auto Dim Mirror
	0XZ20TL2AA	1	J, U					*O0	Up to 2/9/04, With [CGS] Side Air Bags Only
	0XZ22TL2AA	1	J, U					*O0	Up to 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console, [GNK ] Auto Dim Mirror
	0YL04TL2AA	1						*O0	Up to 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console, [LSC] Security Alarm
	0YL12TL2AA	1						*O0	Up to 2/9/04, With [CUD] Overhead Console, [LSC] Security Alarm
	1AS01TL2AA	1	J, U					*O0	After 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console, [LSC] Security Alarm, [GNK ] Auto Dim Mirror
	1AS07TL2AA	1	J, U					*O0	After 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console, [GNK ] Auto Dim Mirror
	1AS08TL2AA	1	J, U					*O0	After 2/9/04, With [CUD] Overhead Console, [LSC] Security Alarm, [GNK ] Auto Dim Mirror
	1AS11TL2AA	1	J, U					*O0	After 2/9/04, With [CUD] Overhead Console, [GNK ] Auto Dim Mirror
	1AS19TL2AA	1	J, U					*O0	After 2/9/04, With [CGS] Side Air Bags Only
	1AS21TL2AA	1	J, U					*O0	After 2/9/04, With Sunroof Only
	1AS30TL2AA	1						*O0	After 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console
	1AS31TL2AA	1	J, T					*O0	After 2/9/04, With [CUD] Overhead Console

## LIBERTY (KJ)

### SERIES

P = Limited  
H = Sport  
M = Renegade

### LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

### BODY

74 = 4 Door (104.3 WB)

### ENGINE

ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L


### TRANSMISSION

DDD = Transmission - 5-Speed HD Manual  
DDK = Transmission - 5-Speed HD Manual  
DG4 = Transmission-Multi-Speed Auto, 45RFE  
DG6 = Transmission-4-Spd. Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic 5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ


Headliner and Visors  
Figure IKJ-110

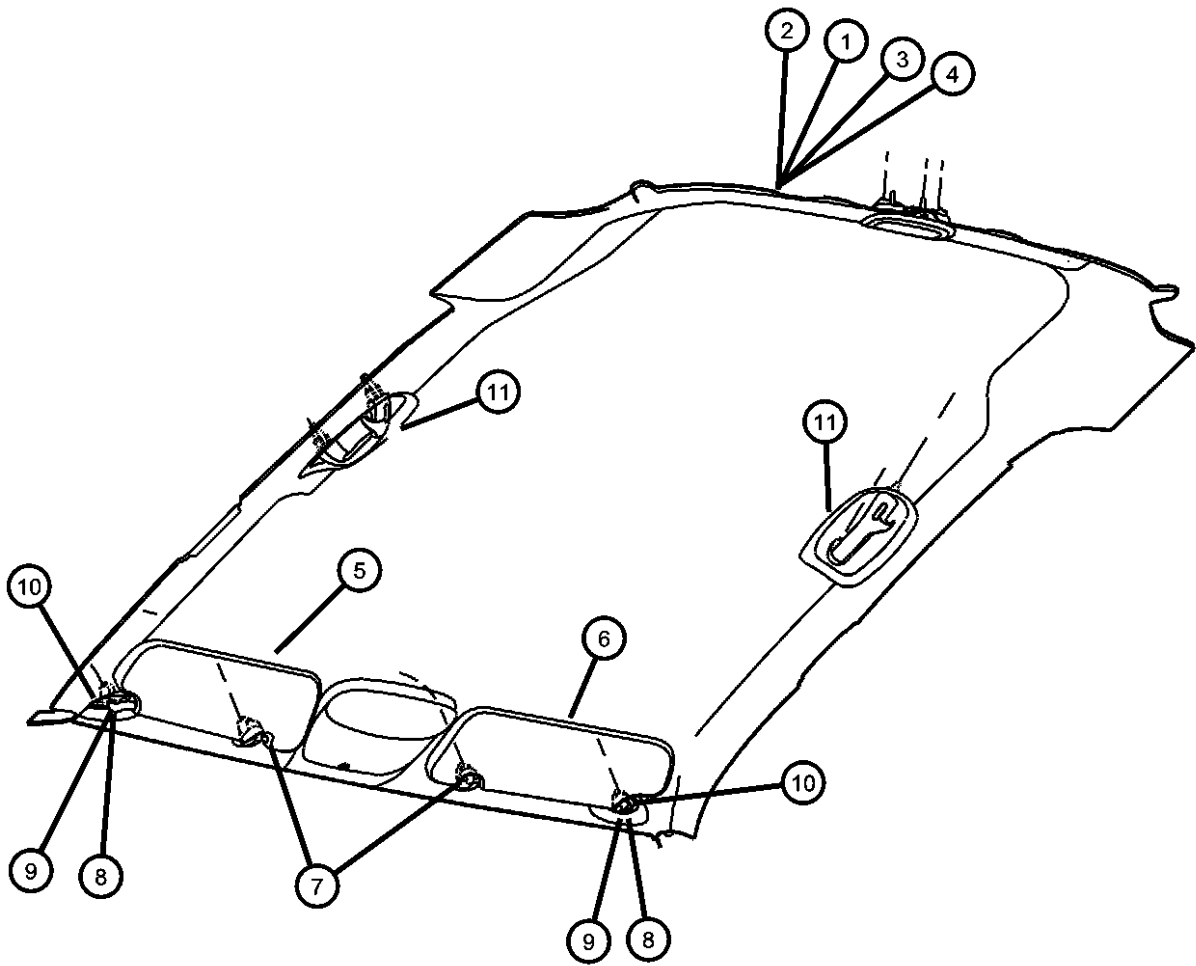

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	1AS32TL2AA	1						*O0	After 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console, [LSC] Security Alarm
	1AS35TL2AA	1						*O0	After 2/9/04, With [CUD] Overhead Console, [LSC] Security Alarm
4									HEADLINER, Export, Without Sunroof [GWA]
	0XP841L2AA	1	J, U					*O0	Up to 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console, [GNK ] Auto Dim Mirror, [LSC] Security Alarm
	0XP881L2AA	1	J, U					*O0	Up to 2/9/04, With [CUD] Overhead Console, [GNK ] Auto Dim Mirror, [LSC] Security Alarm
	0XW081L2AA	1						*O0	Up to 2/9/04, With [CUD] Overhead Console
	0XW091L2AA	1						*O0	Up to 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console
	0XY03TL2AA	1	J, U					*O0	Up to 2/9/04, Without [CGS] Side Air Bags, [CUD] Overhead Console, [LSC] Security Alarm
	0XY051L2AA	1	J, U					*O0	Up to 2/9/04, With [CUD] Overhead Console, [GNK ] Auto Dim Mirror
	0XZ11TL2AA	1	J, U					*O0	Up to 2/9/04, With [CGS] Side Air Bags Only
	0XZ211L2AA	1	J, U					*O0	Up to 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console, [GNK ] Auto Dim Mirror
	0YL031L2AA	1						*O0	Up to 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console, [LSC] Security Alarm
	0YL091L2AA	1						*O0	Up to 2/9/04, With [CUD] Overhead Console, [LSC] Security Alarm
	1AS051L2AA	1	J, U					*O0	After 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console, [GNK ] Auto Dim Mirror, [LSC] Security Alarm

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

Headliner and Visors  
Figure IKJ-110

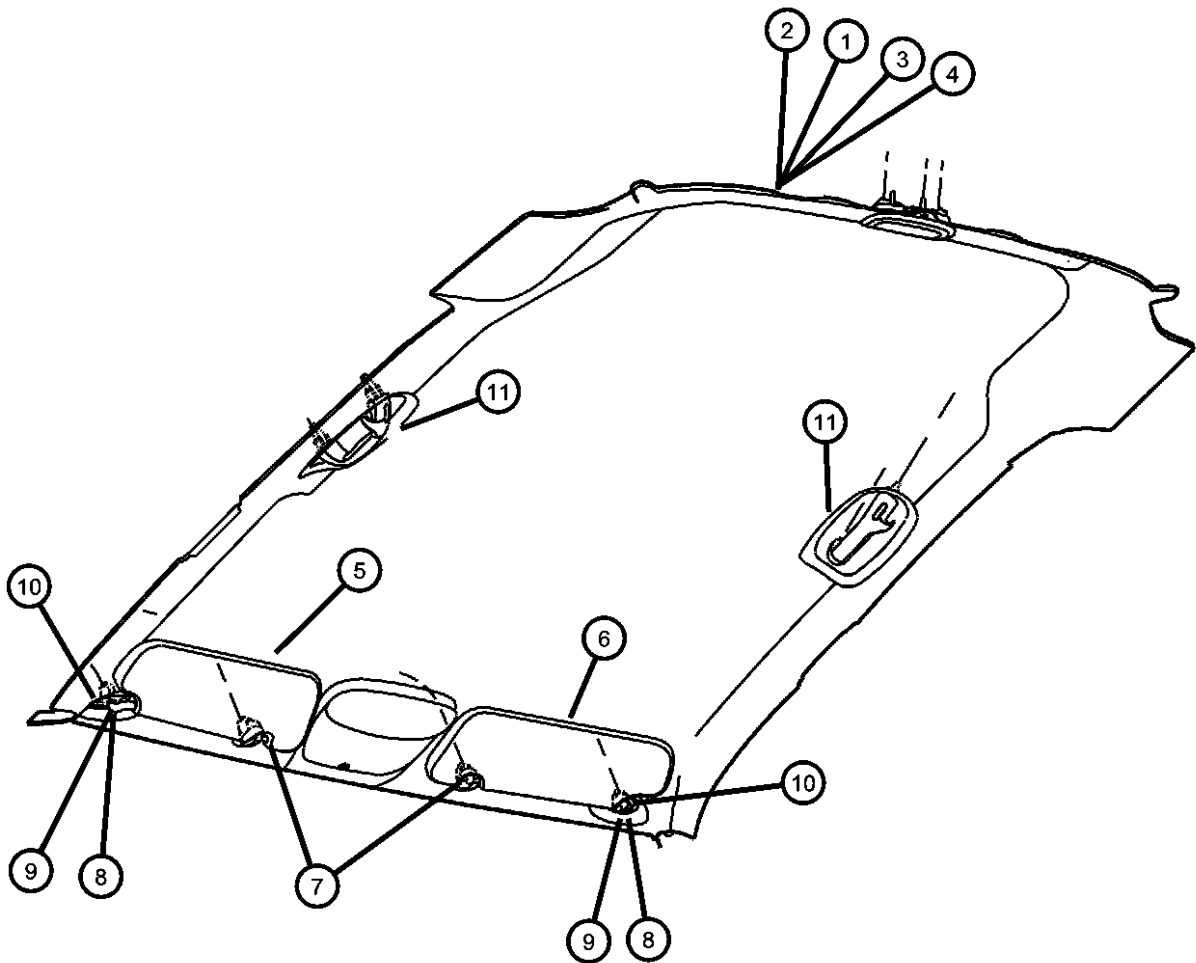


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	1AS061L2AA	1	J, U					*O0	After 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console, [GNK ] Auto Dim Mirror
	1AS091L2AA	1	J, U					*O0	After 2/9/04, With [CUD] Overhead Console, [GNK ] Auto Dim Mirror, [LSC] Security Alarm
	1AS101L2AA	1	J, U					*O0	After 2/9/04, With [CUD] Overhead Console, [GNK ] Auto Dim Mirror
	1AS18TL2AA	1	J, U					*O0	After 2/9/04, With [CGS] Side Air Bags Only
	1AS20TL2AA	1	J, U					*O0	After 2/9/04, Without [CGS] Side Air Bags, [CUD] Overhead Console, [LSC] Security Alarm
	1AS281L2AA	1						*O0	After 2/9/04, With [CUD] Overhead Console
	1AS291L2AA	1						*O0	After 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console
	1AS331L2AA	1						*O0	After 2/9/04, With [CGS] Side Air Bags, [CUD] Overhead Console, [LSC] Security Alarm
	1AS381L2AA	1						*O0	After 2/9/04, With [CUD] Overhead Console, [LSC] Security Alarm
5	0XN861L2AB	1						*O0	Export Only, Up to 2/9/04, Right
	0ZX32TL2AA	1	J, T					*O0	Without [AHM], Up to 2/9/04, Right
	0ZX341L2AA	1	J, T					*O0	With [AHM], Up to 2/9/04, Right
	5KF88TL2AA	1	J, T					*O0	Without [AHM], After 2/9/04, Right
	5KF90TL2AA	1						*O0	Export Only, After 2/9/04, Right
		1						*O0	With [AHM], After 2/9/04, Right
6	0XN871L2AB	1	J, U					*O0	Export Only, Up to 2/9/04, Left
	0ZX33TL2AA	1	J, T					*O0	Without [AHM], Up to 2/9/04, Left
	0ZX351L2AA	1	J, T					*O0	With [AHM], Up to 2/9/04, Left
	5KF89TL2AA	1	J, T					*O0	Without [AHM], After 2/9/04, Left

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				EDO = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Headliner and Visors  
Figure IKJ-110

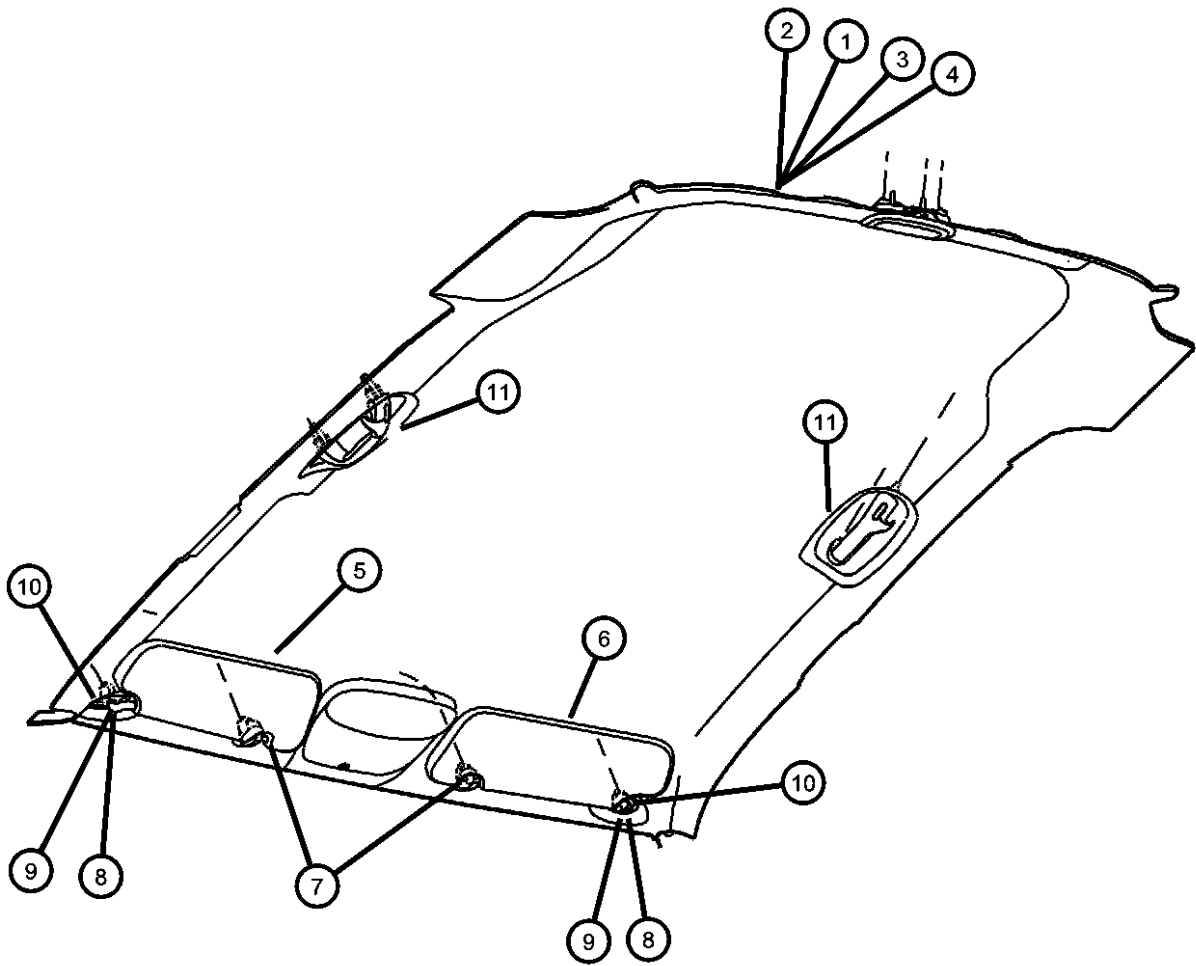


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5KF91TL2AA	1	J, U					*O0	With [AHM], After 2/9/04, Left
		1	J, U					*O0	Export Only, After 2/9/04, Left
7									SUPPORT, Visor
	0XP97TL2AA	2						*O0	Up to 2/9/04
	1AR26TL2AA	2						*O0	After 2/9/04
8	05072343AA	2						*O0	CLIP, Visor, Use Up To 2/19/04
9	05140534AA	2						*O0	SPACER, Visor, Use After 2/19/04
10	06034912	4						*O0	SCREW, Pan Head, .19-16x.75
11									HANDLE, Roof Grab
	0UY681L2AA	1						*O0	Right
	0UY691L2AA	1						*O0	Left
-12	04897875AA	2	J, U					*O0	LABEL, Air Bag Warning, Export Only
-13	05108000AA	1	J, T					*O0	LABEL, Air Bag Warning, CANADA ONLY
-14	55352825AA	1							LABEL, Warning, CANADA ONLY, High Risk Roll Over, French and English

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions




Panels, Interior Trim, Front  
Figure IKJ-210

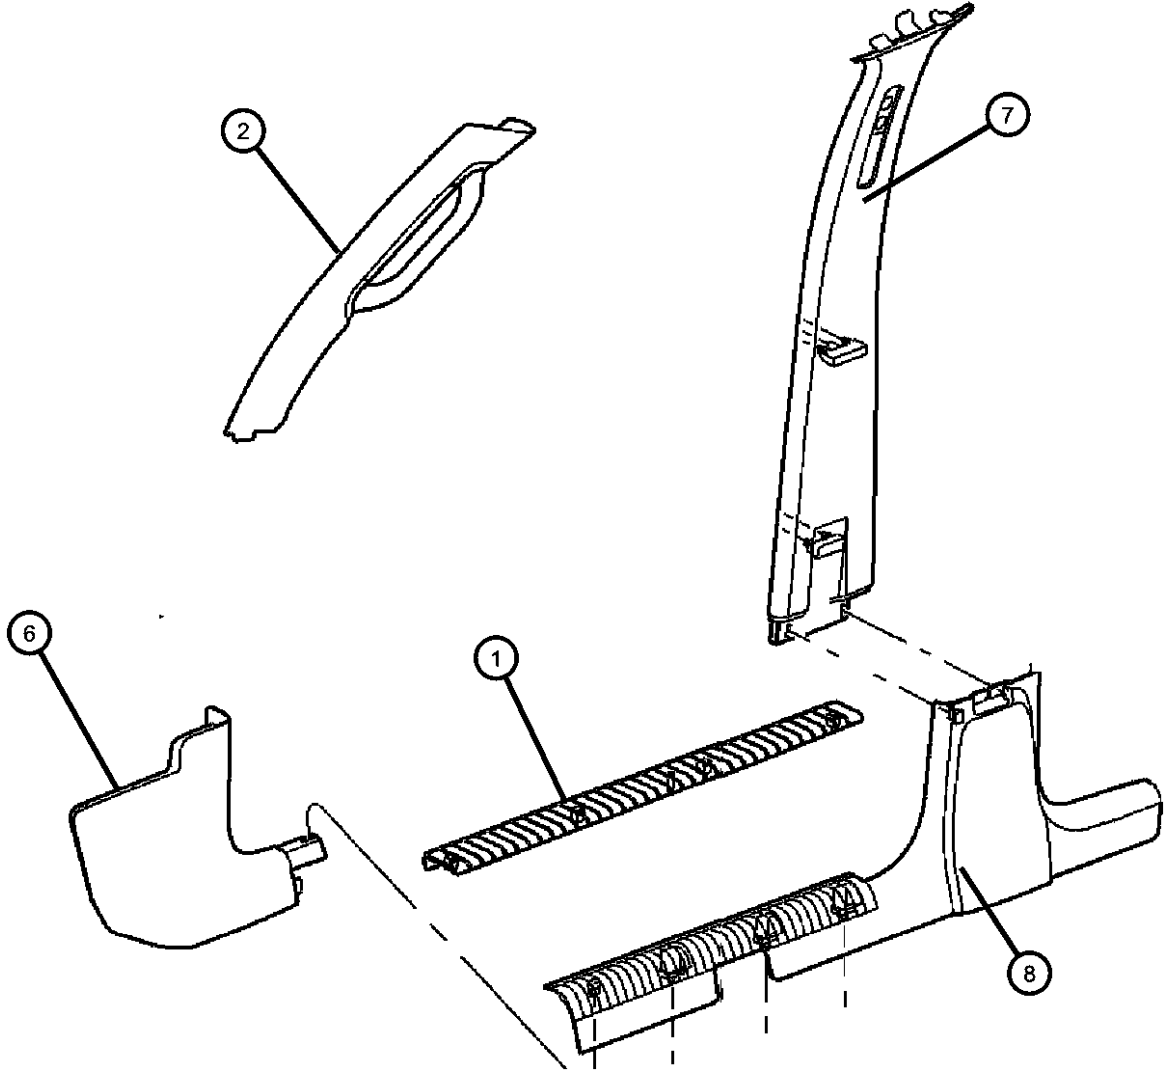

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									PLATE, Scuff
	55352778AC	1							Right Front
	55352779AE	1							Left Front
2									PANEL, A Pillar Trim
	5GM92TL2AI	1						*O0	Right
	5GM93TL2AI	1						*O0	Left
-3	05140693AA	1	J, T, U		74			*O0	CLIP, A Pillar Trim Panel Attaching Clip
-4	05175099AA	1	J, T, U		74			*O0	CLIP, Trim Panel, A Pillar Trim Panel Attaching Clip
-5	06505852AA	1	J, T, U		74			*O0	CLIP, Trim Panel, A Pillar Trim Panel Attaching Clip
6									PANEL, Cowl Side Trim
	5GE62WL5AH	1						*O0	[L2, L5], Right
	5GE62XD-VAH	1						*O0	[D2, DV], Right
	5GE67WL5AI	1						*O0	[L2, L5], Left
	5GE67XDVAI	1						*O0	[D2, DV], Left
7									COVER, B Pillar Trim Panel
	5GE60WL5AL	1						*O0	[L2, L5], Right
	5GE60XDVAL	1						*O0	[D2, DV], Right
	5GE61WL5AL	1						*O0	[L2, L5], Left
	5GE61XDVAL	1						*O0	[D2, DV], Left
8									PANEL, Side Sill
	5GG22WL5AK	1						*O0	[L2, L5], Right
	5GG23XDVAL	1						*O0	[D2, DV], Left
	5GG22XD-VAK	1						*O0	[D2, DV], Right
	5GG23WL5AL	1						*O0	[L2, L5], Left

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions


Panels, Interior Trim, Rear  
Figure IKJ-220

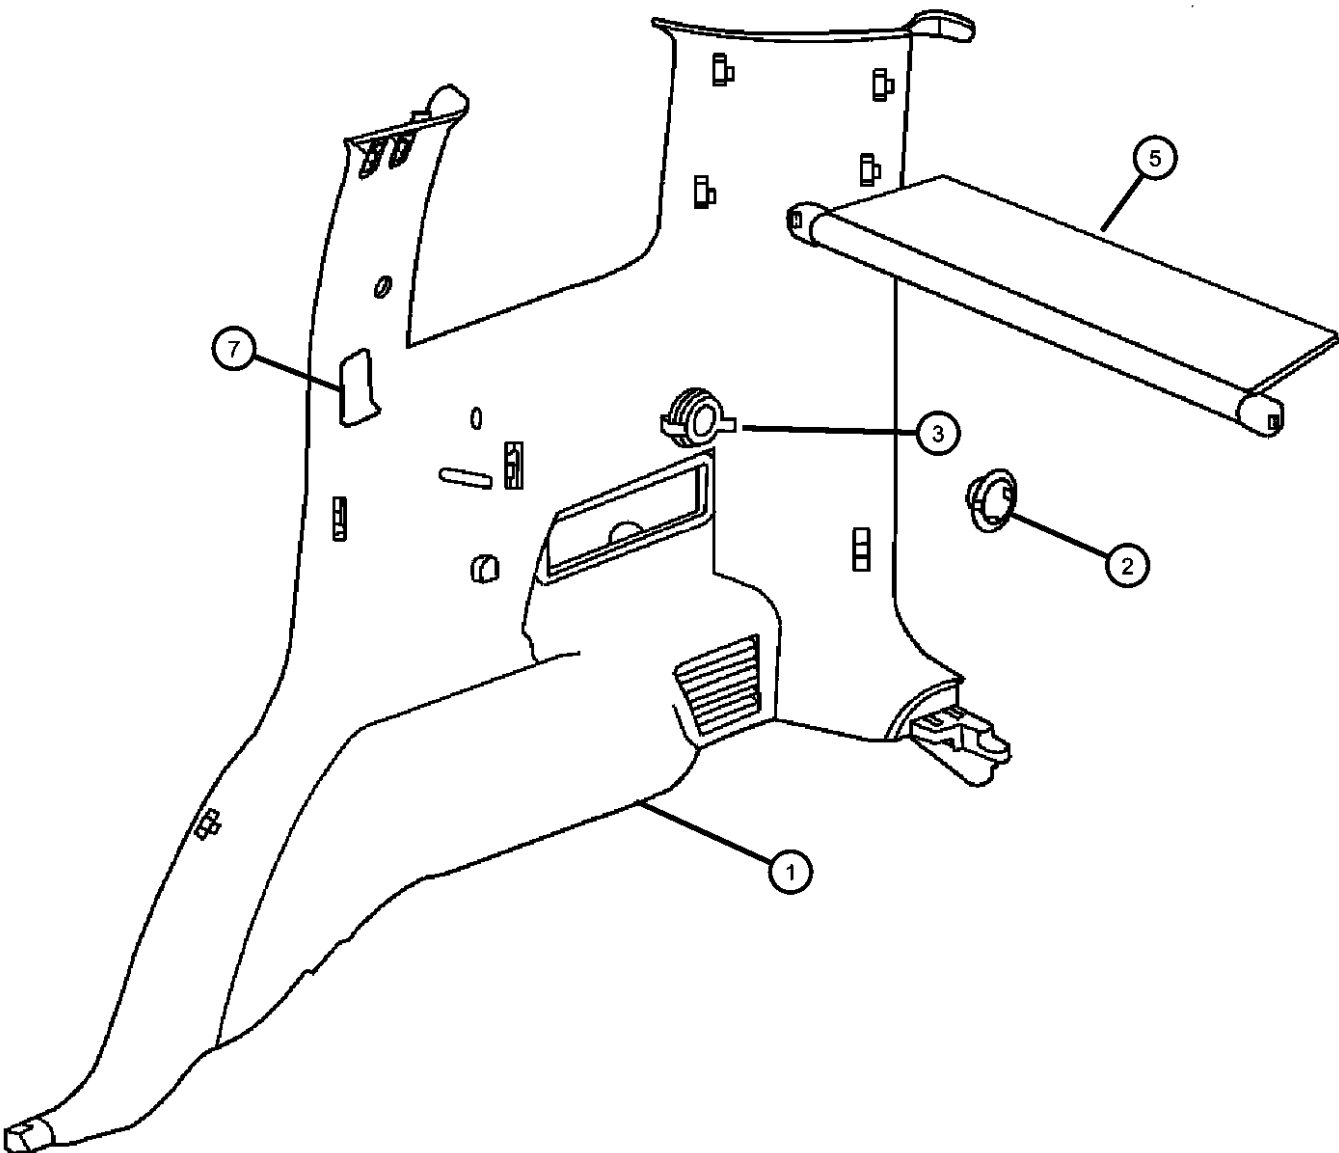

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5HG52WL5AO	1						*O0	PANEL, Quarter Trim
									[L2, L5], Right
	5HG52XD-VAO	1						*O0	[D2, DV], Right
	5HG55WL5AO	1						*O0	[L2, L5], With CD Changer Opening, Right
	5HG55XD-VAO	1						*O0	[D2, DV], With CD Changer Opening, Right
	5HG56WL5AO	1						*O0	[L2, L5], With Trim Panel Net, Right
	5HG56XD-VAO	1						*O0	[D2, DV], With Trim Panel Net, Right
	5HG57WL5AO	1						*O0	[L2, L5], Left
2	5HG57XD-VAO	1						*O0	[D2, DV], Left
3	5HH32WL5AA	1						*O0	PLUG, Quarter Trim Panel
	5HH32XDVAA	1						*O0	[L2, L5]
4	04793554AB	1						*O0	[D2, DV]
	04685668AA	1						*O0	POWER OUTLET
5								*O0	MOUNT, Power Outlet
6	5JM751DVAA	1						*O0	COVER, Cargo Compartment
	5JM751L5AA	1						*O0	[D2, DV]
7								*O0	[L2, L5]
8	0WL87WL5AA	1						*O0	BEZEL, Interior trim, Surrounds [CD] Changer
	0WL87XD-VAA	1						*O0	[L2, L5]
9								*O0	[D2, DV]
10	0WR16WL5AA	1						*O0	COVER, C Pillar
	0WR16XD-VAA	1						*O0	[L2, L5], Right
11	0WR17WL5AA	1						*O0	[D2, DV], Right
	0WR17XD-VAA	1						*O0	[L2, L5], Left
12								*O0	[D2, DV], Left

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Carpets and Mats  
Figure IKJ-310

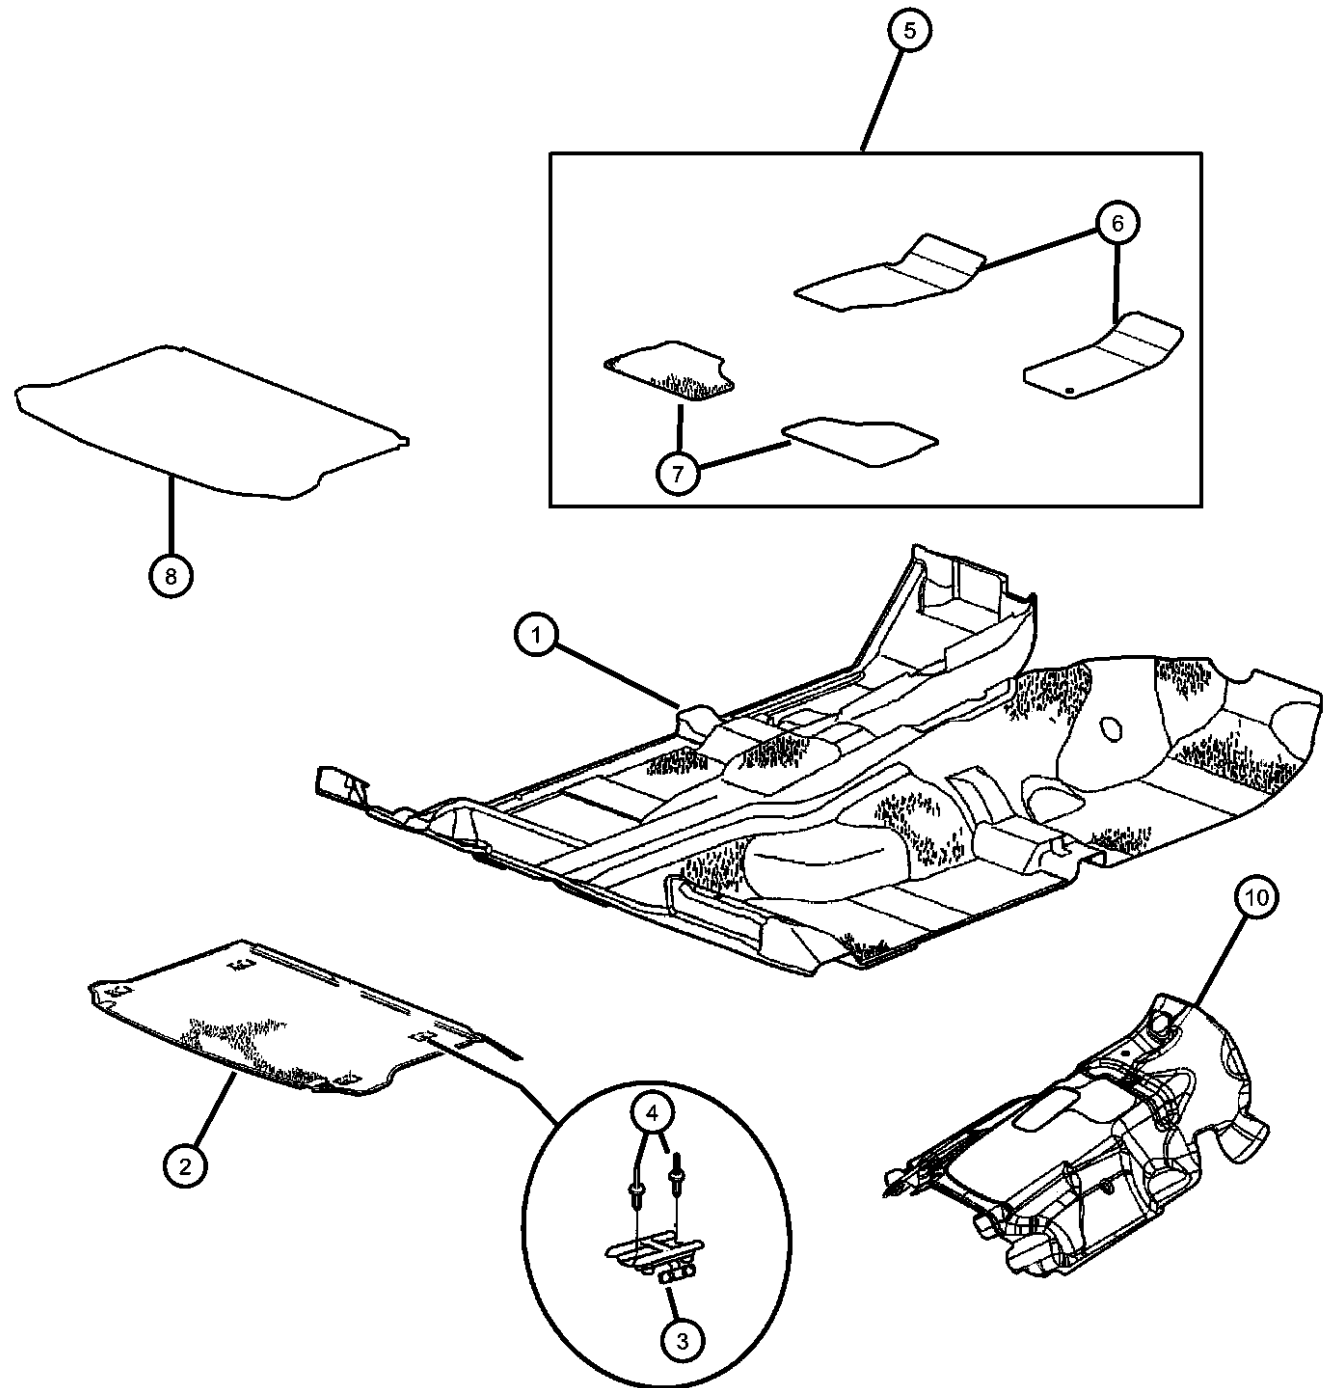


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5GF83WL8AH	1	J, T					*O0	CARPET, Front Floor [L2, L5], Without Footrest, With Vinyl Heel Pad, With Manual Transmission
	5GF83XDVAH	1	J, T					*O0	[D2, DV], Without Footrest, With Vinyl Heel Pad, With Manual Transmission
	5GF86WL8AI	1	U					*O0	[L2, L5], Without Footrest, With Manual Transmission
	5GF86XDVAI	1	U					*O0	[D2, DV], Without Footrest, With Manual Transmission
	5GU95WL8AH	1	J, T					*O0	[L2, L5], With Footrest, With Vinyl Heel Pad, With Automatic Transmission
	5GU95XD-VAH	1	J, T					*O0	[D2, DV], With Footrest, With Vinyl Heel Pad, With Automatic Transmission
	5GV15WL8AI	1	U					*O0	[L2, L5], With Footrest, With Automatic Transmission
	5GV15XDVAI	1	U					*O0	[D2, DV], With Footrest, With Automatic Transmission
	5JH17WL8AD	1	J, T					*O0	[L2, L5], With Footrest, Without Vinyl Heel Pad, With Automatic Transmission
	5JH17XDVAD	1	J, T					*O0	[D2, DV], With Footrest, Without Vinyl Heel Pad, With Automatic Transmission
	5JH18WL8AD	1	J, T					*O0	[L2, L5], Without Footrest, Without Vinyl Heel Pad, With Manual Transmission
	5JH18XDVAD	1	J, T					*O0	[D2, DV], Without Footrest, Without Vinyl Heel Pad, With Manual Transmission
	5JR01WL8AA	1	J, T					*O0	[L2, L5], With Footrest, Without Vinyl Heel Pad, With 2.8L Diesel
	5JR01XDVAA	1	J, T					*O0	[D2, DV], With Footrest, Without Vinyl Heel Pad, With 2.8L Diesel
	5JR08WL8AA	1	U					*O0	[L2, L5], With Footrest, With 2.8L Diesel
	5JR08XDVAA	1	U					*O0	[DV], With Footrest, With 2.8L Diesel
2									CARPET, Cargo Floor, Includes Cargo Tie Down Hooks

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Carpets and Mats  
Figure IKJ-310

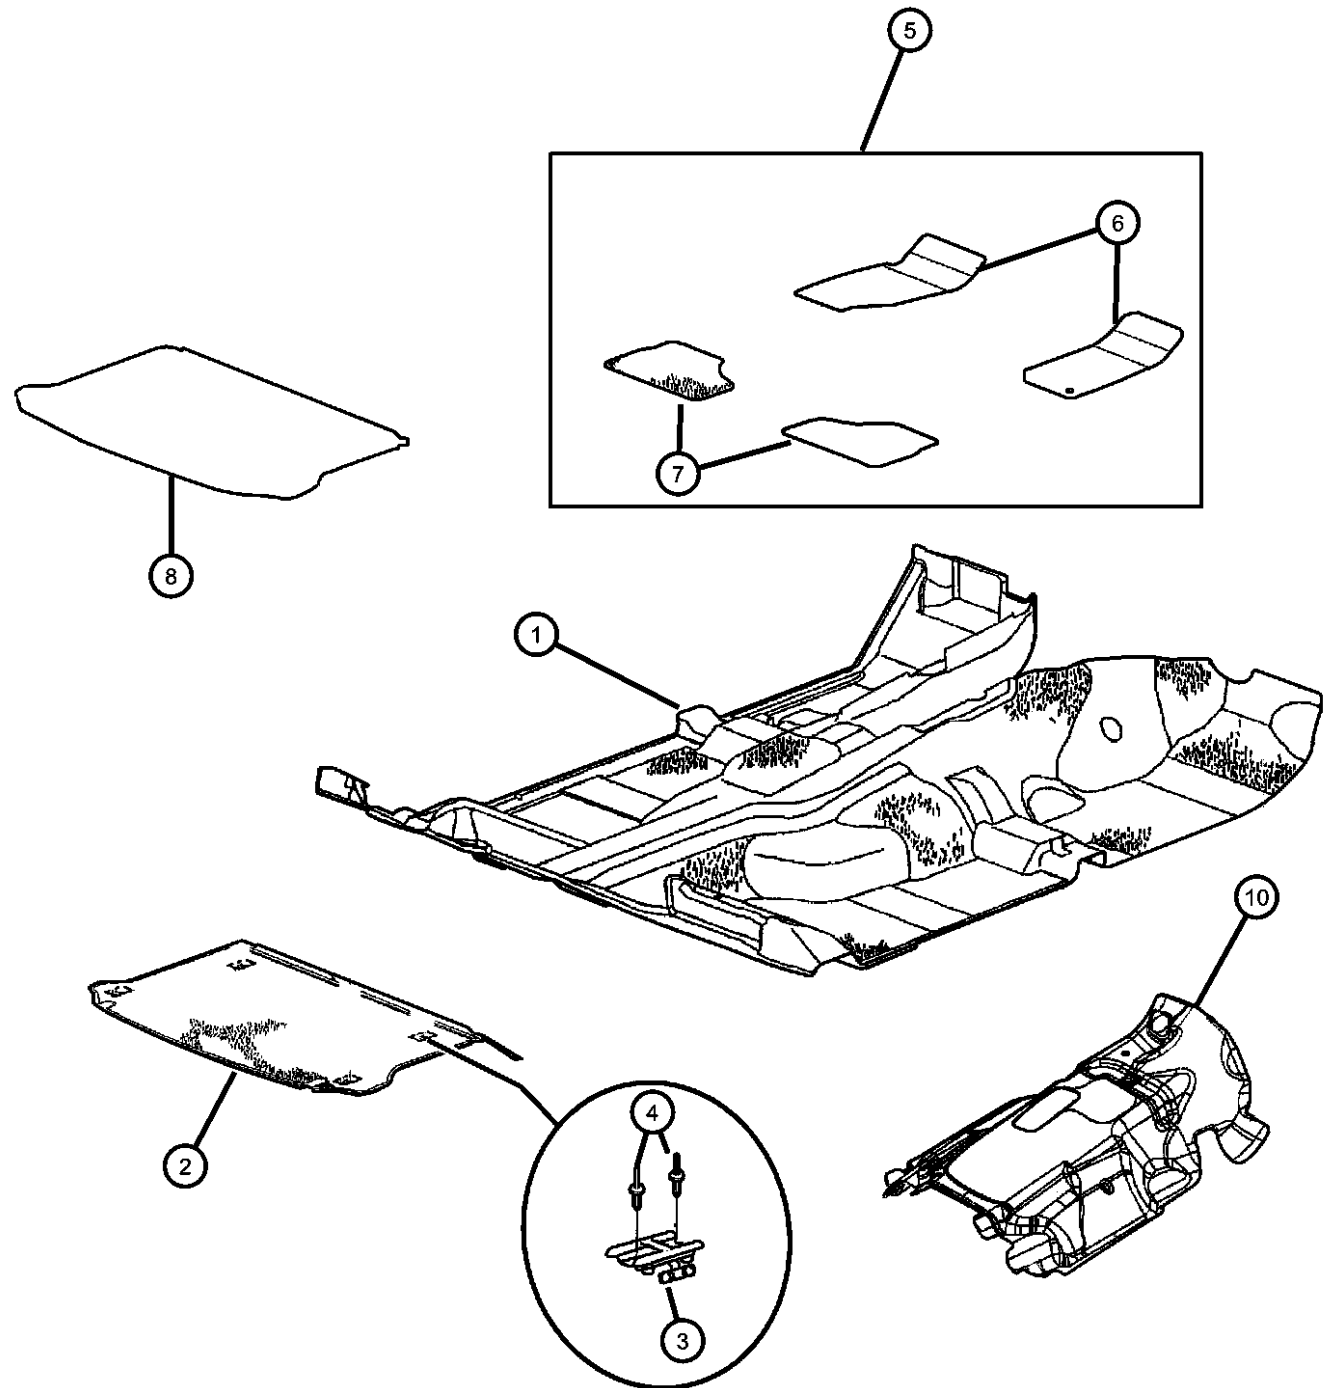


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5GF79WL8AG	1						*O0	[L2, L5]
	5GF79XD-VAG	1						*O0	[D2, DV]
3	05086138AA	4						*O0	LOOP, Cargo Tie Down
4	06036484AA	8							RIVET, Blind Bulb, Open
5									MAT KIT, Floor - Complete, Export Only
	82206858	1	J, T	H, M, P	74				Dark Taupe, Without Footrest
	82206859	1	J, T	H, M, P	74				Dark Slate, Without Footrest
	82206860	1	U	H, P	74				Dark Taupe, Without Footrest
	82206861	1	U	H, P	74				Dark Slate, Without Footrest
	82207377	1	J, T		74				Dark Taupe, With Footrest
	82207378	1	J, T		74				Dark Slate, With Footrest
	82207379	1	U		74				Dark Taupe, With Footrest
	82207380	1	U		74				Dark Slate, With Footrest
6									MAT KIT, Floor - Front
	82206004	1							Dark Slate, Slush, Urethane
	82206005	1							Taupe, Slush, Urethane
	82206851	1	J, T		74				[L2, L5], Dark Taupe
	82206852	1	J, T		74				[DV, D2], Dark Slate
	82206853	1	U	H, P	74				Dark Taupe
	82206854	1	U	H, P	74				Dark Slate
	82207356	1							Dark Slate, Slush, Urethane, Export
	82207357	1							Taupe, Slush, Urethane, Export
7									MAT KIT, Floor - Rear
	82206006	1							Dark Slate, Slush, Urethane
	82206007	1							Taupe, Slush, Urethane
	82206856	1							[L2, L5], Dark Taupe
	82206857	1							[DV, D2], Dark Slate

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Carpets and Mats  
Figure IKJ-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION	
8	82206761	1							MAT KIT, Bed - Interior, One piece mat folds at rear seat and flexes with seats when layed flat or in up position.	
-9	05086365AA	1	J, T					*O0	CLIP, Floor Mat Retention	
		1	U					*O0		
10	55352864AB	1							PAD, Tunnel	
-11	55352898AB	1							SILENCER, Floor Pan, 2.8 Diesel Only	
	55352899AB	1							Right	
									Left	

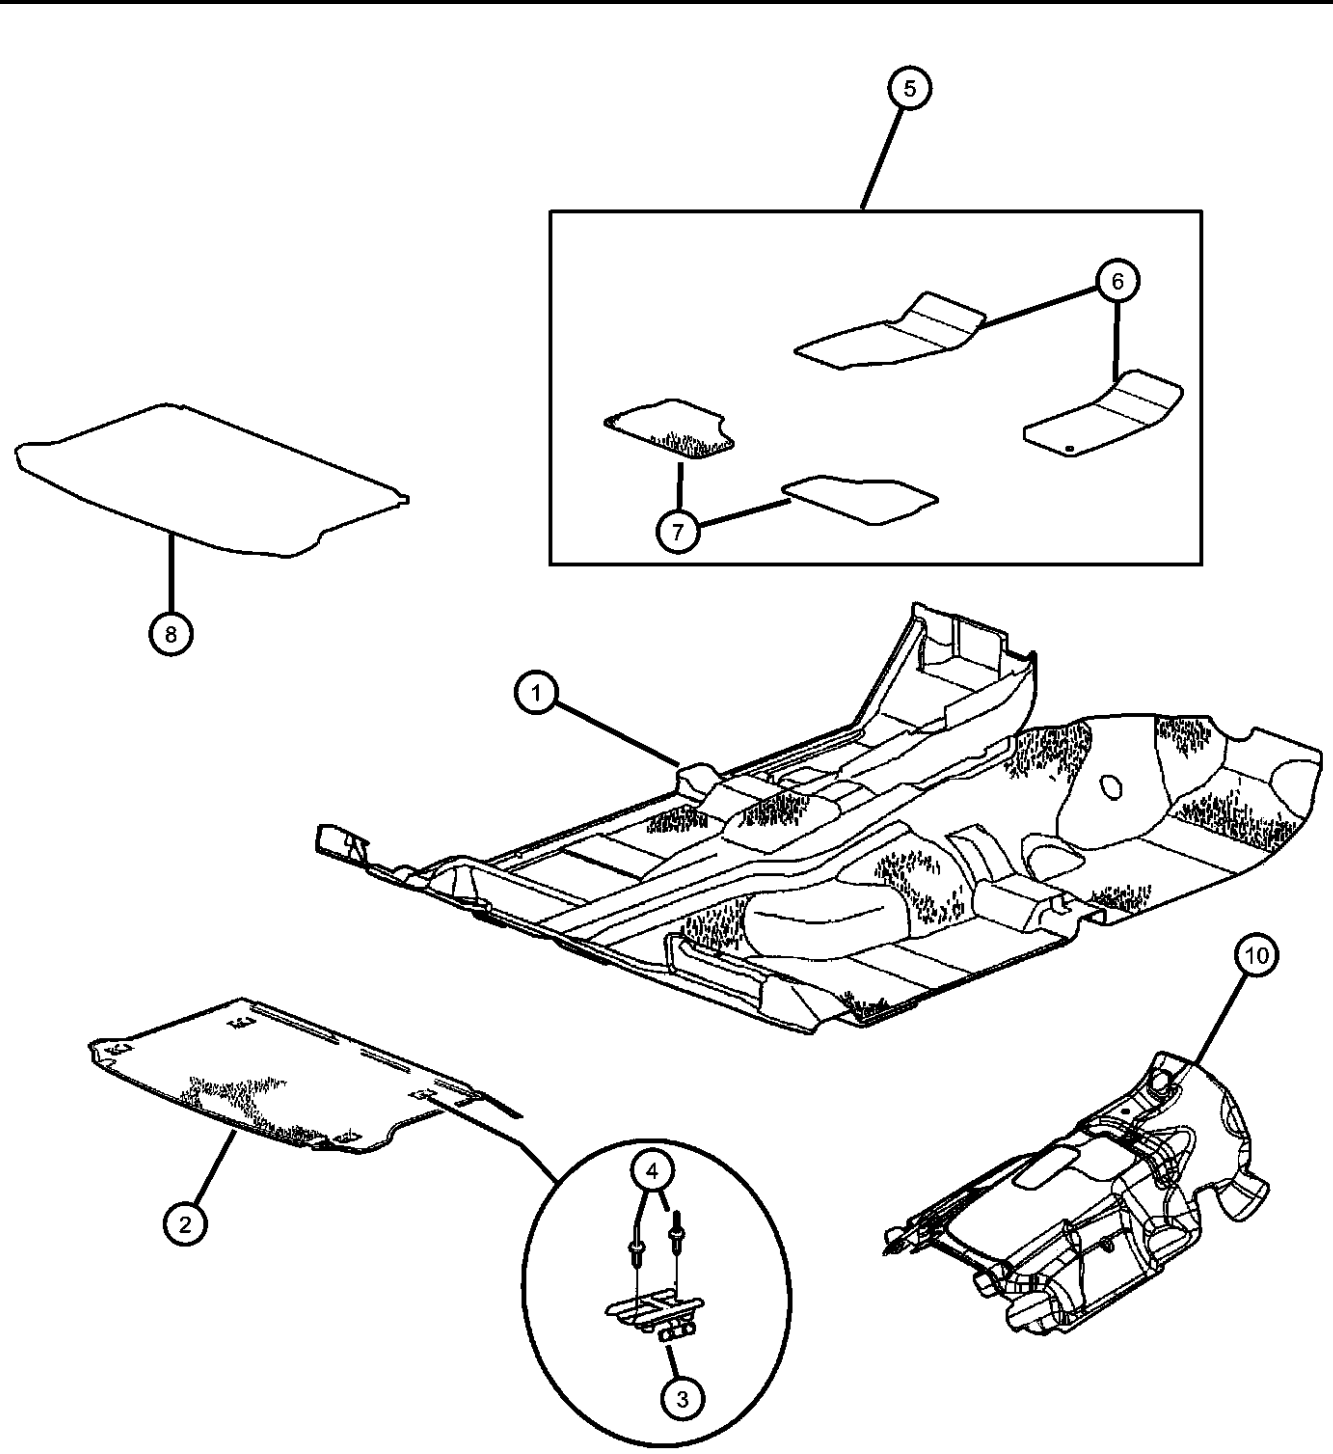

**LIBERTY (KJ)**

SERIES

P = Limited

H = Sport

M = Renegade

LINE

J = LHD (4WD)

U = RHD (4WD)

T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI

EKG = Engine - 3.7L V6

ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel

ENR = Engine - 2.8L 4 Cyl Turbo Diesel

EN0 = 4Cyl Turbo Diesel

EK0 = All 3.7L

ED0 = All 2.4L

TRANSMISSION

DDD = Transmission - 5-Speed HD Manual

DDK = Transmission - 5-Speed HD Manual

DG4 = Transmission-Multi-Speed Auto, 45RFE

DG6 = Transmission-4-Spd. Automatic, 42RLE

DGQ = Transmission-5-Spd Automatic 5-45RFE

DBB = All Manual Transmissions


DG0 = All Automatic Transmissions

Cargo Organizer  
Figure IKJ-320

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note : Cargo Organizer and Related Parts Not Available Until February 2004.

1									ORGANIZER, CARGO
	5JK491DVAB	1						*O0	[DV, D2]
	5JK491L5AB	1						*O0	[L2, L5]
2									MAT, Storage Tray
	05114524AA	1						*O0	Right
	05114525AA	1						*O0	Left
3	05114585AA	2						*O0	MOUNT KIT
4	05114584AA	2						*O0	CAP, Rubber

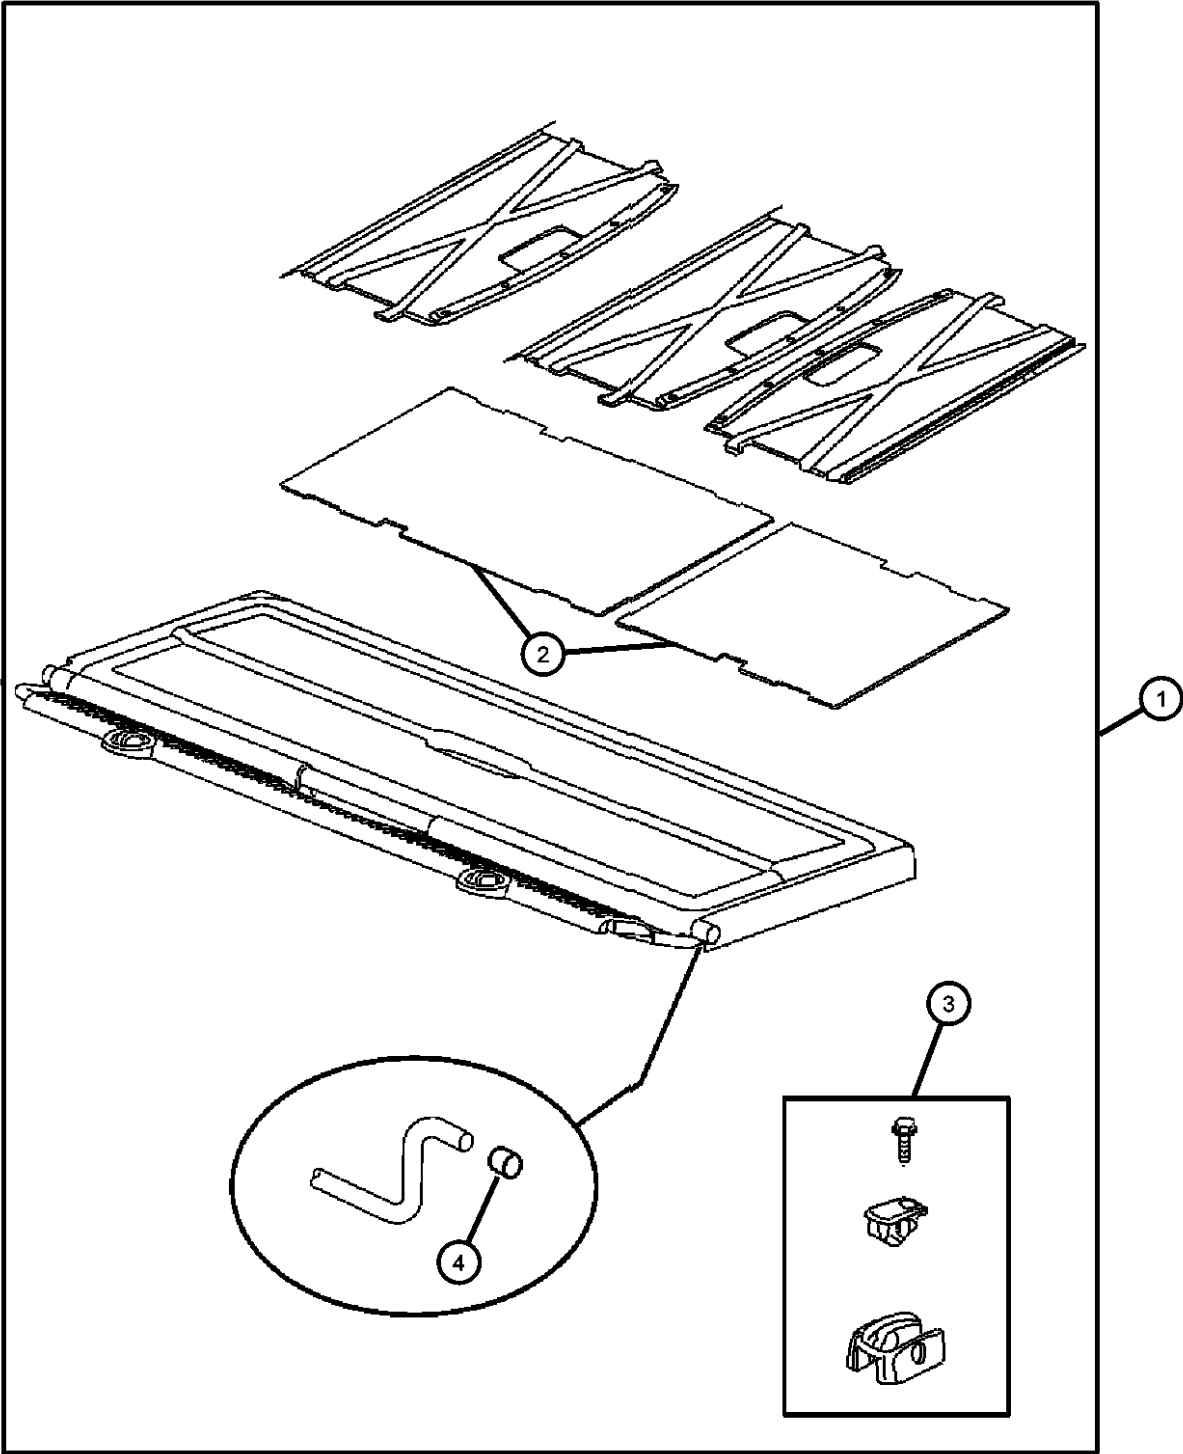

<b>LIBERTY (KJ)</b>				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Trim Panel, Front Door  
Figure IKJ-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Sales Codes:  
[CBF] = Premium Cloth Bolster, Bright Door Handle  
[CTC] = Leather  
[CTL] = Base, Cloth Bolster, Color Keyed Door Handle

1									PANEL, Front Door Trim, Includes Door Handle and Clips
	0YB40WL5AA	1	J, T					*O0	[L5], With Power Locks Only, With Sales Code [CTL], Right
	0YB43WL5AA	1	J, T					*O0	[L5], With Power Windows and Locks, With Sales Code [CTL], Left
	0YB43XDVAA	1	J, T					*O0	[DV], With Power Windows and Locks, With Sales Code [CTL], Left
	0YC06WL5AA	1	U					*O0	[L5], With Power Windows and Locks, With Sales Code [CTL], Right
	0YC06XDVAA	1	U					*O0	[DV], With Power Windows and Locks, With Sales Code [CTL], Right
	0YB40XDVAA	1	J, T					*O0	[DV], With Power Locks Only, With Sales Code [CTL], Right
	0YB41WL5AA	1	J, T					*O0	[L5], With Power Locks Only, With Sales Code [CTL], Left
	0YB41XDVAA	1	J, T					*O0	[DV], With Power Locks Only, With Sales Code [CTL], Left
	0YB42WL5AA	1	J, T					*O0	[L5], With Power Windows and Locks, With Sales Code [CTL], Right
	0YB42XDVAA	1	J, T					*O0	[DV], With Power Windows and Locks, With Sales Code [CTL], Right
	0YC081L2AA	1	J, T					*O0	[L2], With Sales Codes [CBF] and [CTC], With Chrome Door Lock Bezel, Right
	0YC07WL5AA	1	U					*O0	[L5], With Power Windows and Locks, With Sales Code [CTL], Left
	0YC07XDVAA	1	U					*O0	[DV], With Power Windows and Locks, With Sales Code [CTL], Left

LIBERTY (KJ)									
SERIES	LINE				BODY	ENGINE			TRANSMISSION
P = Limited	J = LHD (4WD)				74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI			DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)					EKG = Engine - 3.7L V6			DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)					ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel			DG4 = Transmission-Multi-Speed Auto, 45RFE
						ENR = Engine - 2.8L 4 Cyl Turbo Diesel			DG6 = Transmission-4-Spd. Automatic, 42RLE
						EN0 = 4Cyl Turbo Diesel			DGQ = Transmission-5-Spd Automatic 5-45RFE
						EK0 = All 3.7L			DBB = All Manual Transmissions
						ED0 = All 2.4L			DG0 = All Automatic Transmissions

Trim Panel, Front Door  
Figure IKJ-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	0YC081D2AA	1	J, T					*O0	[D2], With Sales Codes [CBF] and [CTC], With Chrome Door Lock Bezel, Right
	0YC081DVAA	1	J, T					*O0	[DV], With Sales Codes [CBF] and [CTC], With Chrome Door Lock Bezel, Right
	0YC081L5AA	1	J, T					*O0	[L5], With Sales Codes [CBF] and [CTC], With Chrome Door Lock Bezel, Right
	0YC091D2AA	1	J, T					*O0	[D2], With Sales Codes [CBF] and [CTC], With Chrome Door Lock Bezel, Left
	0YC091DVAA	1	J, T					*O0	[DV], With Sales Codes [CBF] and [CTC], With Chrome Door Lock Bezel, Left
	0YC091L2AA	1	J, T					*O0	[L2], With Sales Codes [CBF] and [CTC], With Chrome Door Lock Bezel, Left
	0YC091L5AA	1	J, T					*O0	[L5], With Sales Codes [CBF] and [CTC], With Chrome Door Lock Bezel, Left
	0YC101L2AA	1	U					*O0	[L2], With Sales Code [CBF], With Chrome Door Lock Bezel, Right
	0YC101L5AA	1	U					*O0	[L5], With Sales Code [CBF], With Chrome Door Lock Bezel, Right
	0YC111DVAA	1	U					*O0	[DV], With Sales Code [CBF], With Chrome Door Lock Bezel, Left
	0YC111L2AA	1	U					*O0	[L2], With Sales Code [CBF], With Chrome Door Lock Bezel, Left
	0YC111L5AA	1	U					*O0	[L5], With Sales Code [CBF], With Chrome Door Lock Bezel, Left
	1AE101D2AA	1	J, T					*O0	[D2], With Sales Codes [CBF] and [CTC], With Color Keyed Door Lock Bezel, Right
	0YC101DVAA	1	U					*O0	[DV], With Sales Code [CBF], With Chrome Door Lock Bezel, Right

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part



Trim Panel, Front Door  
Figure IKJ-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	1AE101DVAA	1	J, T					*O0	[DV], With Sales Codes [CBF] and [CTC], With Color Keyed Door Lock Bezel, Right
	1AE101L2AA	1	J, T					*O0	[L2], With Sales Codes [CBF] and [CTC], With Color Keyed Door Lock Bezel, Right
	1AE111D2AA	1	J, T					*O0	[D2], With Sales Codes [CBF] and [CTC], With Color Keyed Door Lock Bezel, Left
	1AE111DVAA	1	J, T					*O0	[DV], With Sales Codes [CBF] and [CTC], With Color Keyed Door Lock Bezel, Left
	1AE111L2AA	1	J, T					*O0	[L2], With Sales Codes [CBF] and [CTC], With Color Keyed Door Lock Bezel, Left
	1AE111L5AA	1	J, T					*O0	[L5], With Sales Codes [CBF] and [CTC], With Color Keyed Door Lock Bezel, Left
	1AE121DVAA	1	U					*O0	[DV], With Sales Code [CBF], With Color Keyed Door Lock Bezel, Right
	1AE121L2AA	1	U					*O0	[L2], With Sales Code [CBF], With Color Keyed Door Lock Bezel, Right
	1AE121L5AA	1	U					*O0	[L5], With Sales Code [CBF], With Color Keyed Door Lock Bezel, Right
	1AE131DVAA	1	U					*O0	[DV], With Sales Code [CBF], With Color Keyed Door Lock Bezel, Left
	1AE131L2AA	1	U					*O0	[L2], With Sales Code [CBF], With Color Keyed Door Lock Bezel, Left
	1AE131L5AA	1	U					*O0	[L5], With Sales Code [CBF], With Color Keyed Door Lock Bezel, Left
	1AE101L5AA	1	J, T					*O0	[L5], With Sales Codes [CBF] and [CTC], With Color Keyed Door Lock Bezel, Right
	5GF01XDVAP	1						*O0	[DV], Without Power, With Sales Code [CTL], Left

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Trim Panel, Front Door  
Figure IKJ-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5GF00WL5AP	1						*O0	[L5], Without Power, With Sales Code [CTL], Right
	5GF00XDVAP	1						*O0	[DV], Without Power, With Sales Code [CTL], Right
	5GF01WL5AP	1						*O0	[L5], Without Power, With Sales Code [CTL], Left
-2	04658676	2						*O0	CLIP, Latch Link
3									PLUG, Door Trim Panel
	5GY30WL5AA	2						*O0	[L2, L5]
	5GY30XDVAA	2						*O0	[D2, DV]
4	5GY30XDVAA	2							SCREW, .164-18x1.00, (NOT SERVICED),
5	00152490	2							NUT, Spring, .16-18
6	05023173AA	11						*O0	RETAINER, Trim Panel, Grommet and Pin
7	55235878AC	1						*O0	WEATHERSTRIP, Door Belt MouldingRight & Left

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Trim Panel, Rear Door  
Figure IKJ-420

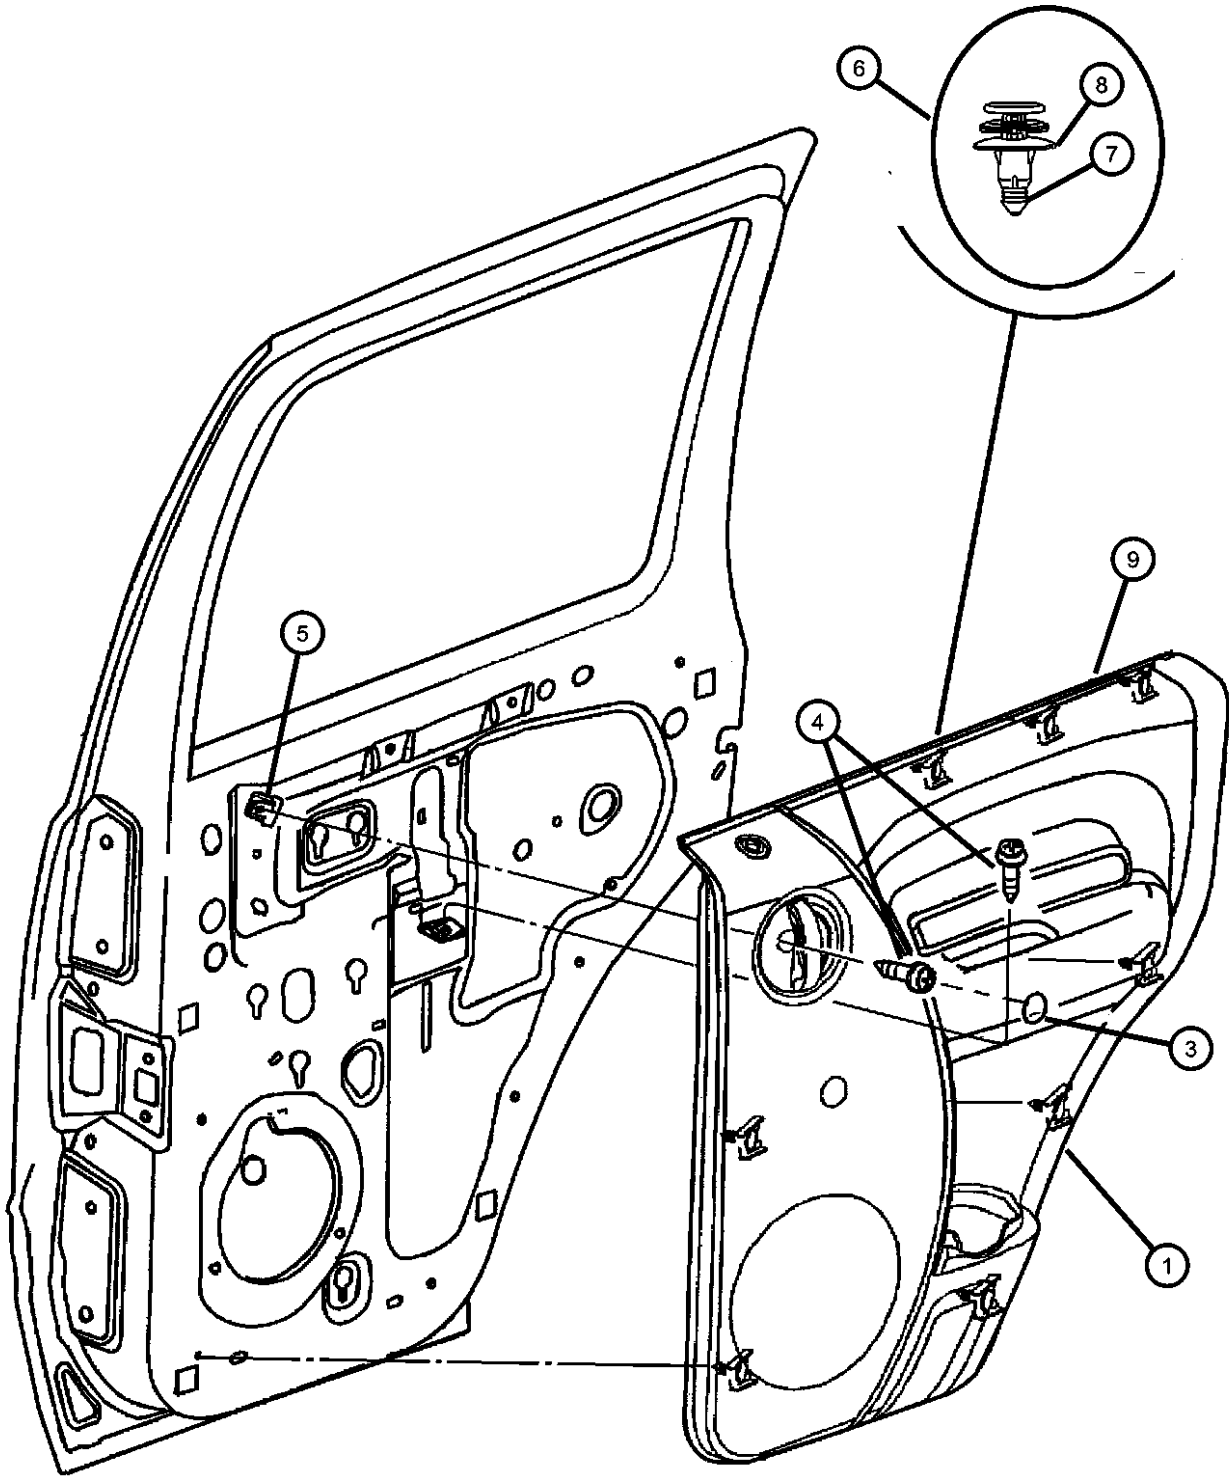

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Sales Codes:  
[CBF] = Premium Vinyl Bolster, Bright Door Handle  
[CTC] = Leather  
[CTL] = Base, Vinyl Bolster, Color Keyed Door Handle

1									PANEL, Rear Door Trim, Includes Door Handle
	5GF18WL5AM	1						*O0	[L5], With Sales Code [CTL], Right
	5GF18XD-VAM	1						*O0	[DV], With Sales Code [CTL], Right
	5GF19WL5AM	1						*O0	[L5], With Sales Code [CTL], Left
	5GF19XD-VAM	1						*O0	[DV], With Sales Code [CTL], Left
	5GF201D2AP	1						*O0	[D2], With Sales Code [CBF] or [CTC], With Chrome Door Lock Bezel, Right
	5GF201DVAP	1						*O0	[DV], With Sales Code [CBF] or [CTC], With Chrome Door Lock Bezel, Right
	5GF201L2AP	1						*O0	[L2], With Sales Code [CBF] or [CTC], With Chrome Door Lock Bezel, Right
	5GF201L5AP	1						*O0	[L5], With Sales Code [CBF] or [CTC], With Chrome Door Lock Bezel, Right
	5GF201D2AS	1						*O0	[D2], With Sales Code [CBF] or [CTC], With Color Keyed Door Lock Bezel, Right
	5GF201DVAS	1						*O0	[DV], With Sales Code [CBF] or [CTC], With Color Keyed Door Lock Bezel, Right
	5GF201L2AS	1						*O0	[L2], With Sales Code [CBF] or [CTC], With Color Keyed Door Lock Bezel, Right
	5GF201L5AS	1						*O0	[L5], With Sales Code [CBF] or [CTC], With Color Keyed Door Lock Bezel, Right
	5GF211D2AP	1						*O0	[D2], With Sales Code [CBF] or [CTC], With Chrome Door Lock Bezel, Left

LIBERTY (KJ)									
SERIES	LINE				BODY	ENGINE	TRANSMISSION		
P = Limited	J = LHD (4WD)				74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual		
H = Sport	U = RHD (4WD)					EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual		
M = Renegade	T = LHD (2WD)					ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE		
						ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE		
						EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE		
						EK0 = All 3.7L	DBB = All Manual Transmissions		
						ED0 = All 2.4L	DG0 = All Automatic Transmissions		

AR = use ase required - = Non illustrated part

Trim Panel, Rear Door  
Figure IKJ-420

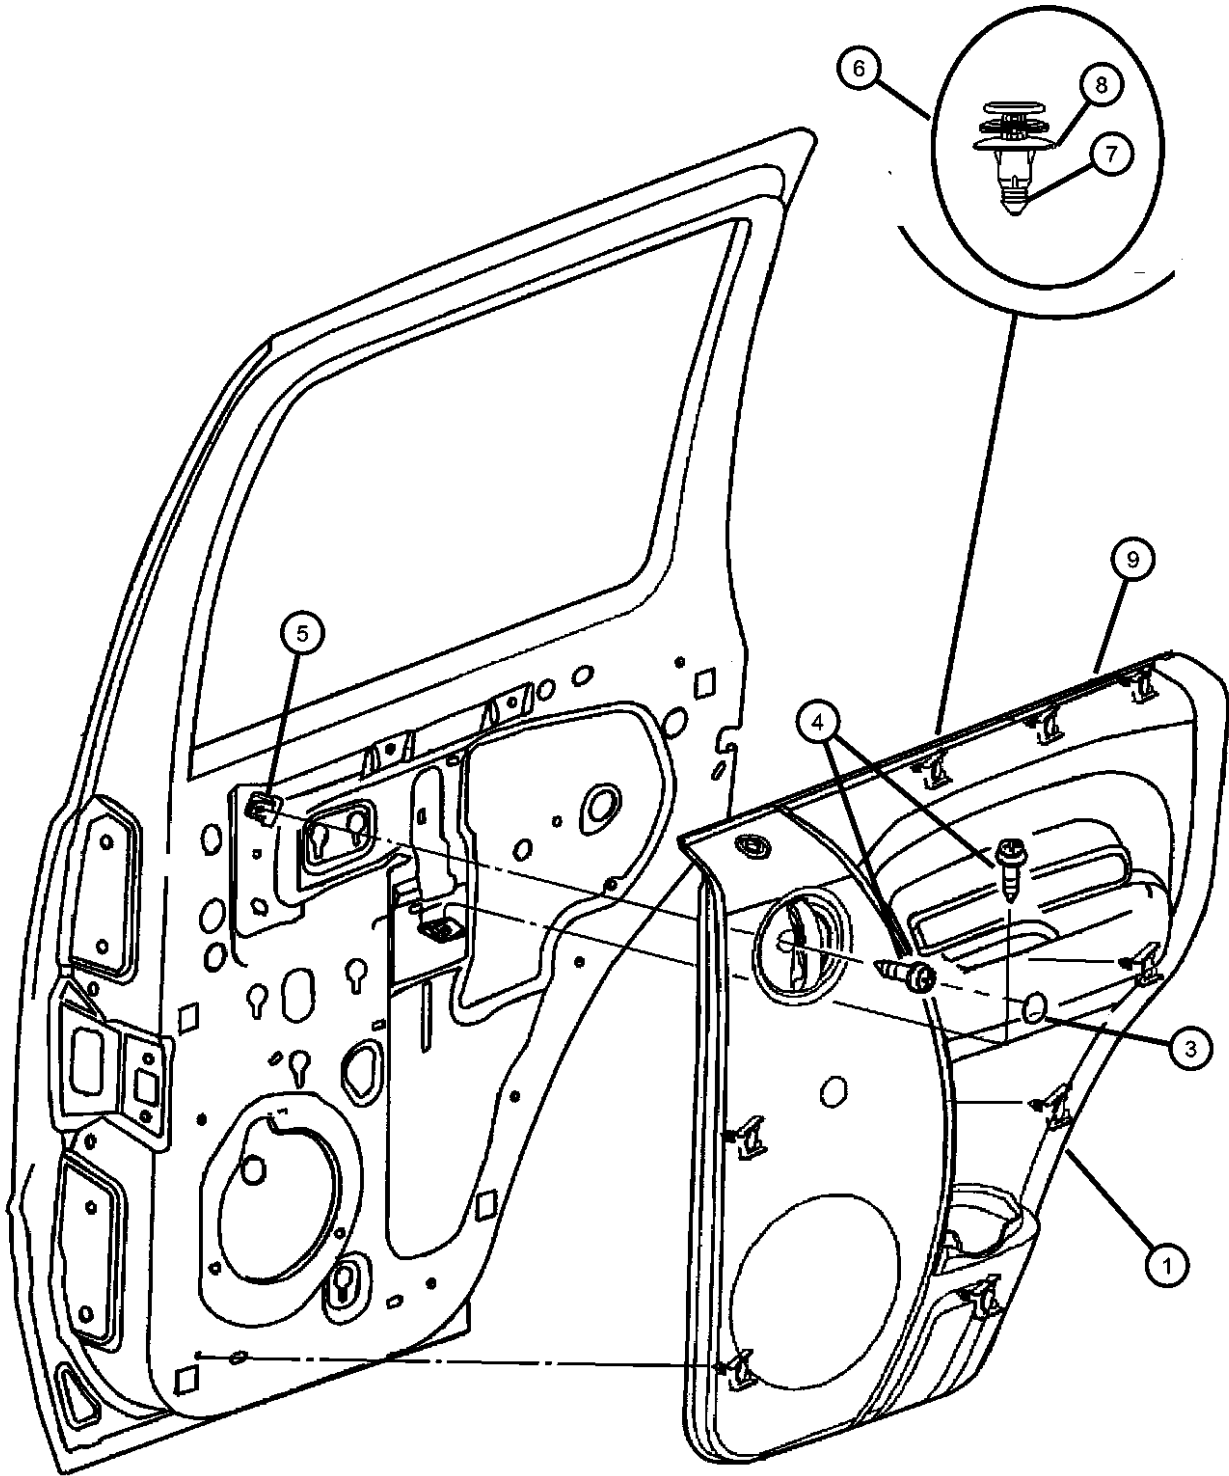


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5GF211DVAP	1						*O0	[DV], With Sales Code [CBF] or [CTC], With Chrome Door Lock Bezel, Left
	5GF211L2AP	1						*O0	[L2], With Sales Code [CBF] or [CTC], With Chrome Door Lock Bezel, Left
	5GF211L5AP	1						*O0	[L5], With Sales Code [CBF] or [CTC], With Chrome Door Lock Bezel, Left
	5GF211D2AS	1						*O0	[D2], With Sales Code [CBF] or [CTC], With Color Keyed Door Lock Bezel, Left
	5GF211DVAS	1						*O0	[DV], With Sales Code [CBF] or [CTC], With Color Keyed Door Lock Bezel, Left
	5GF211L2AS	1						*O0	[L2], With Sales Code [CBF] or [CTC], With Color Keyed Door Lock Bezel
	5GF211L5AS	1						*O0	[L5], With Sales Code [CBF] or [CTC], With Color Keyed Door Lock Bezel, Left
-2	04658676	2						*O0	CLIP, Latch Link, Also serviced with the Door Panel
3									PLUG, Door Trim Panel
	5GY30WL5AA	2						*O0	[L2, L5]
	5GY30XDVAA	2						*O0	[D2, DV]
4	5GY30XDVAA	2							SCREW, .164-18x1.00, (NOT SERVICED),
5	00152490	2							NUT, Spring, .16-18
6	05023173AA	9						*O0	RETAINER, Trim Panel, Grommet and Pin
7	05023174AA	9						*O0	PIN, Push, Also serviced with 5023713AA
8	05023175AA	9						*O0	GROMMET, Also serviced with 5023713AA
9									WEATHERSTRIP, Door Belt Moulding
	55235886AC	1						*O0	Right
	55235887AC	1						*O0	Left

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Front Seat, Leather, Low Back, Trim Code [DL]  
Figure IKJ-510

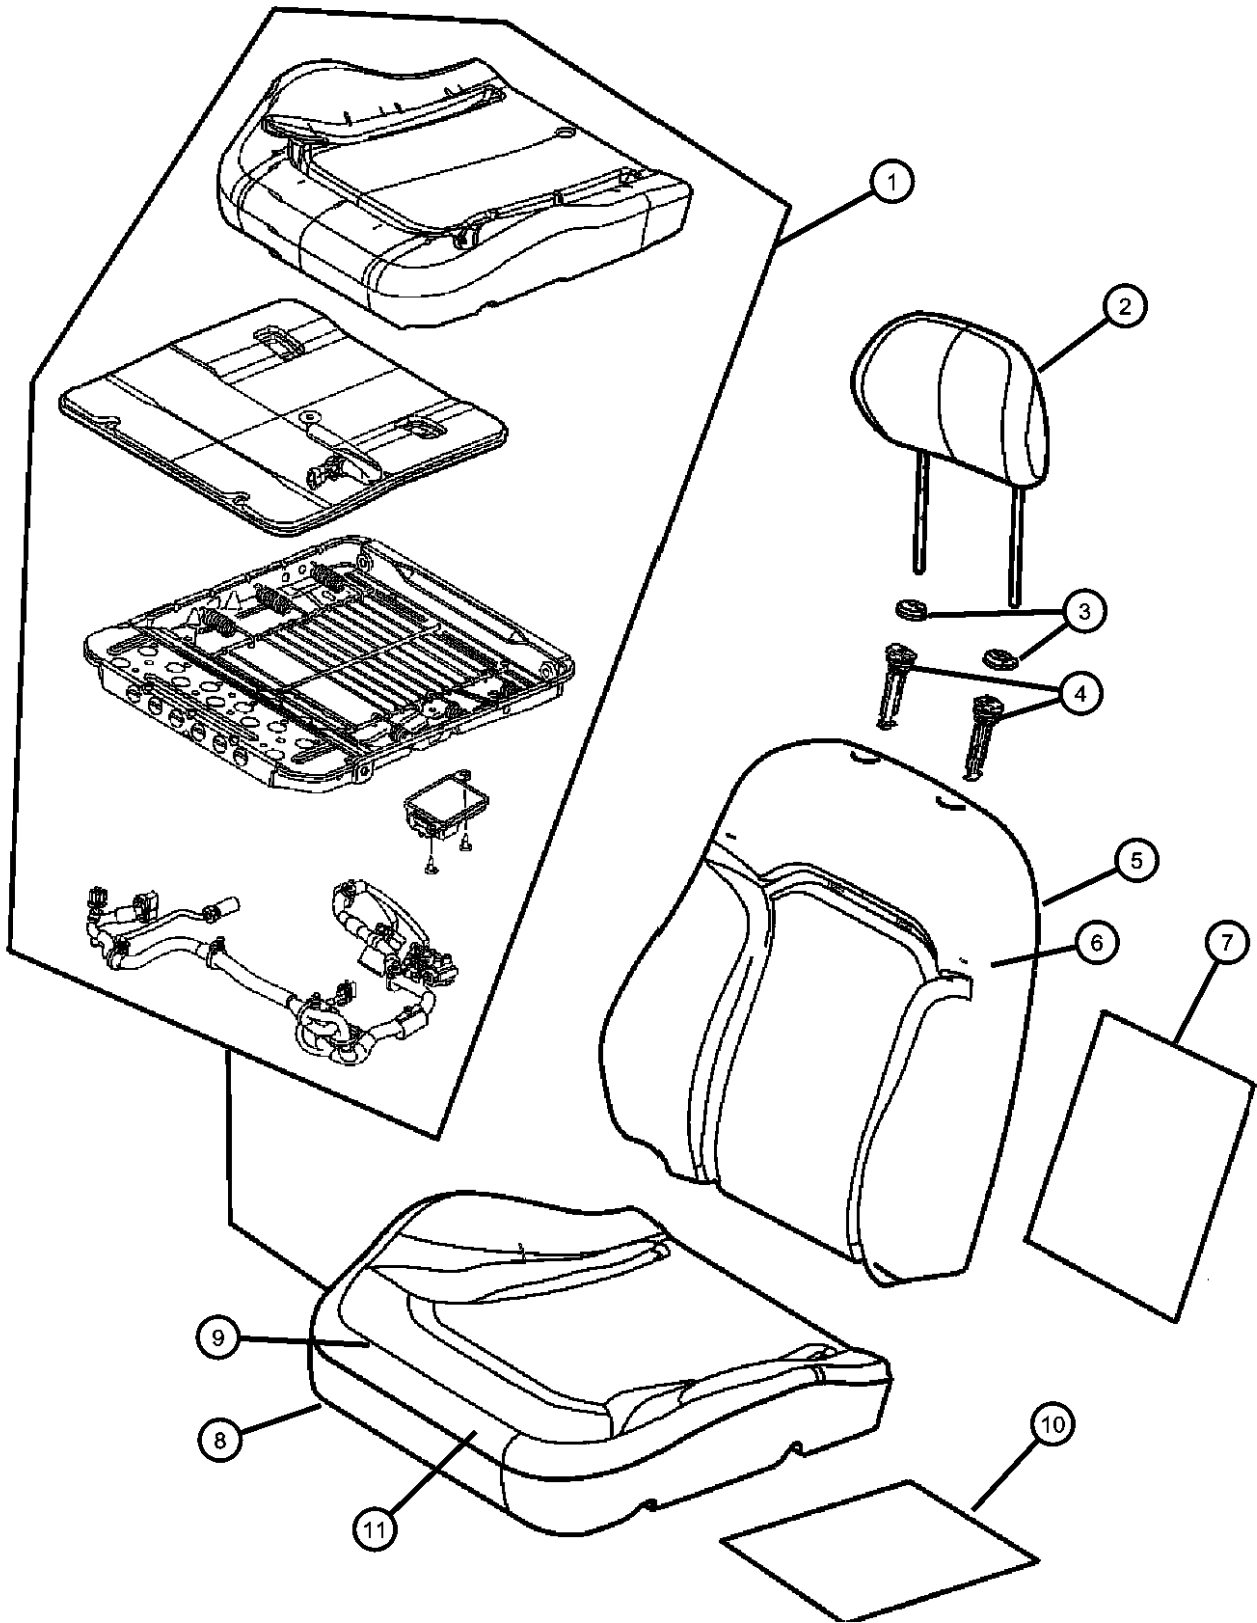


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; For United States/Canada vehicles only, if right side Cushion Foam is needed order Bladder Repair Kit. Do not attempt to replace the right side

1									BLADDER REPAIR KIT, Occupant Classification System, See Note, Right Side Only
	05114583AA	1	J, T					*DL	Includes Foam, Bladder, Frame, Control Module and Harness, Passenger
	05126326AA	1	J, T					*DL	Includes Foam, Bladder, Frame, Control Module and Harness for Heated Seats . Order Heater Pad Separately if Required., Passenger
2									HEADREST, Front
	0WA521DVAA	2	J, U					*DL	[DV], Export
	0WA521L2AA	2	J, T					*DL	[D2, L2],
		2	J, U					*DL	[L2], Export
3									CAP, Headrest Adjuster
	0WA491L2AA	1	J, T					*DL	[D2, L2], With Button
	0WA49TL2AA	2	J, U					*DL	[L2], With Button, Export
	0WA49XD-VAA	2	J, U					*DL	[DV], With Button, Export
	0WA501L2AA	1	J, T					*DL	[D2, L2], Without Button, Export
	0WA50TL2AA	2	J, U					*DL	[L2], Without Button, Export
	0WA50XD-VAA	2	J, U					*DL	[DV], Without Button, Export
4									SLEEVE, Headrest
	05066563AA	2	J, T					*DL	
		2	J, U					*DL	
5									BACK, Front Seat
	0ZD081L2AA	1	J, T					*DL	[L2], Non-Heated, From 1/12/04 to 3/2/04, Right
		1	J, U					*DL	[L2], Non-Heated, Export, From 1/12/04 to 3/2/04, Right
		1	J, T					*DL	[D2], Non-Heated, From 1/12/04 to 3/2/04, Right
	0ZD101L2AB	1	J, T					*DL	[D2], Heated, From 1/12/04 to 1/26/04, Right

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	


Front Seat, Leather, Low Back, Trim Code [DL]  
Figure IKJ-510

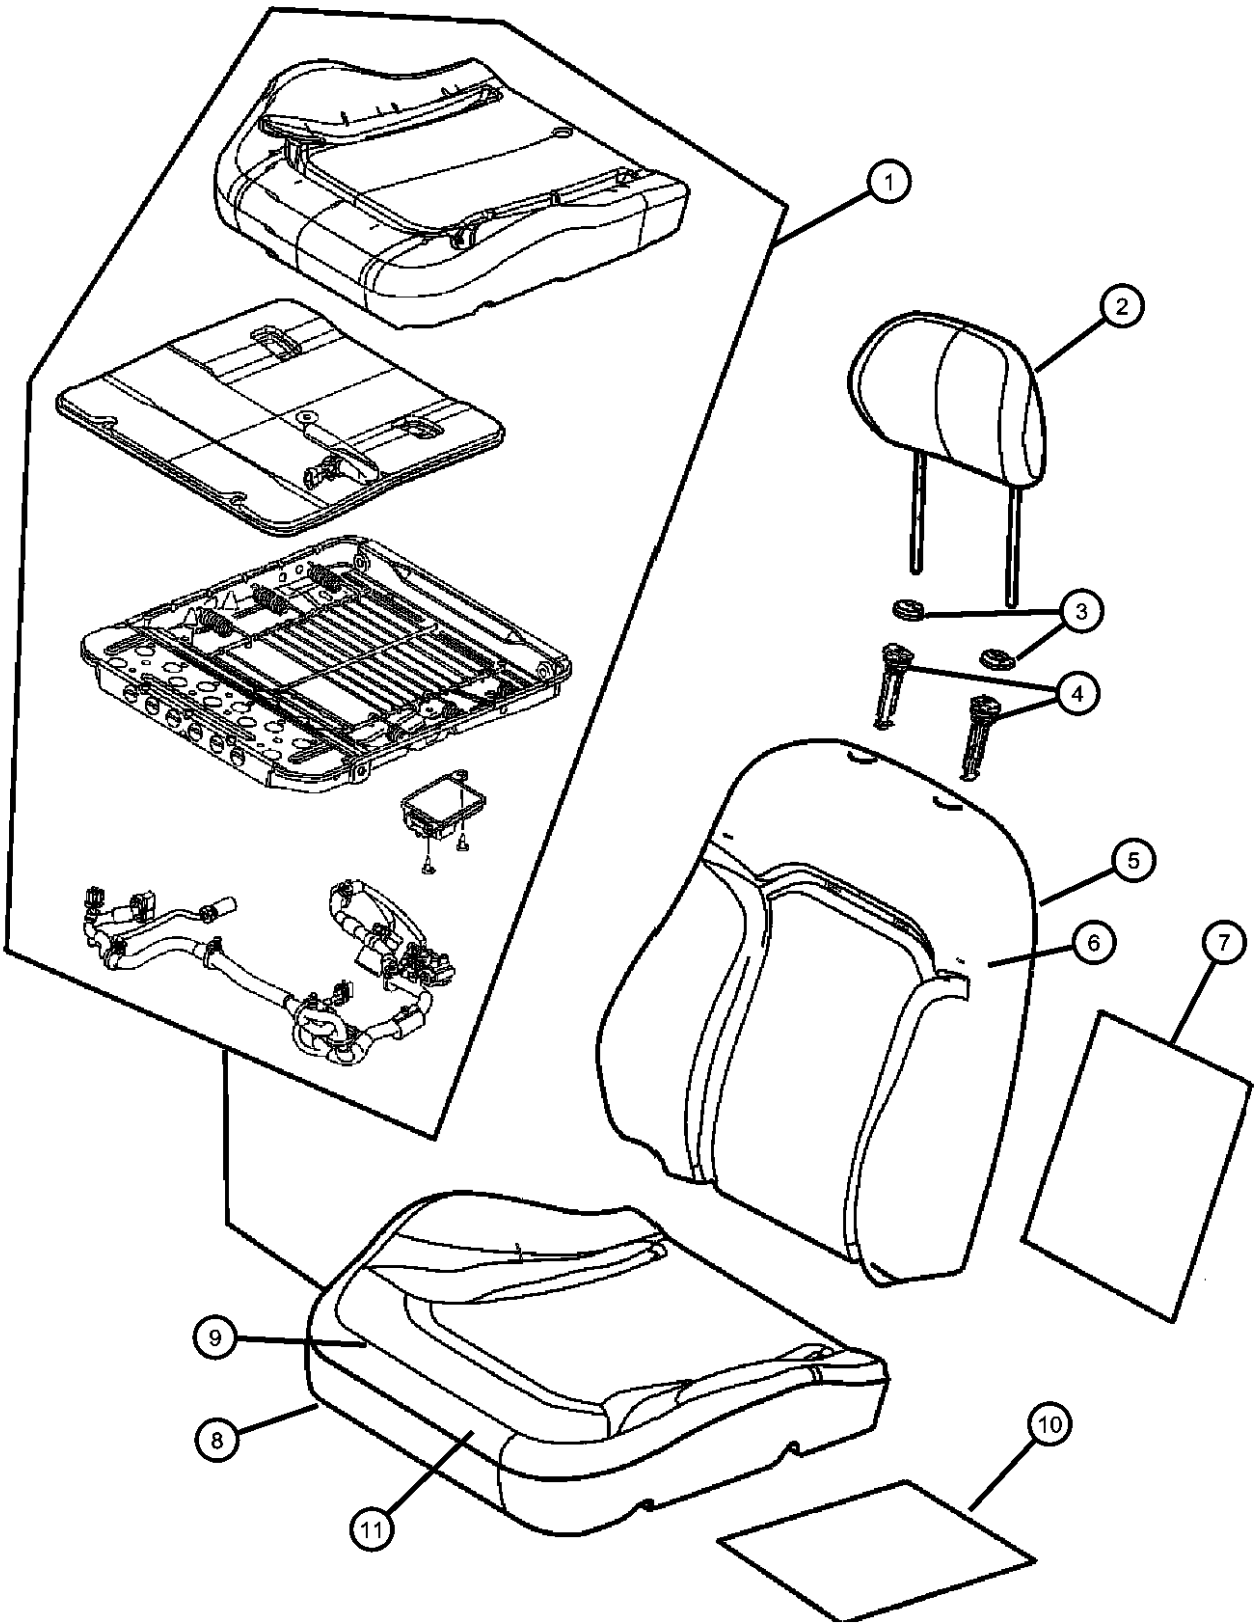

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	J, U					*DL	[L2], Heated, Export, From 1/12/04 to 1/26/04, Right
	0ZD091L2AA	1	J, T					*DL	[D2], Non-Heated, From 1/12/04 to 3/2/04, Left
		1	J, U					*DL	[L2], Non-Heated, Export, From 1/12/04 to 3/2/04, Left
		1	J, T					*DL	[L2], Non-Heated, From 1/12/04 to 3/2/04, Left
	0ZD111L2AB	1	J, U					*DL	[L2], Heated, Export, From 1/12/04 to 1/26/04, Left
		1	J, T					*DL	[D2], Heated, From 1/12/04 to 1/26/04, Left
	0ZN961DVAA	1	J, U					*DL	[DV], Heated, Export, Up to 1/26/04, Right
	0ZN961L2AA	1	J, U					*DL	[L2], Heated, Export, Up to 1/12/04, Right
		1	J, T					*DL	[L2], Heated, From 1/12/04 to 1/26/04, Right
		1	J, T					*DL	[L2], Heated, From 1/12/04 to 1/26/04, Left
	0ZN971L2AA	1	J, T					*DL	[D2], Heated, Up to 1/12/04, Left
		1	J, T					*DL	[L2], Heated, Up to 1/12/04, Left
		1	J, T					*DL	[D2], Heated, Up to 1/12/04, Right
		1	J, T					*DL	[L2], Heated, Up to 1/12/04, Right
	0ZN971DVAA	1	J, U					*DL	[DV], Heated, Export, Up to 1/26/04, Left
		1	J, U					*DL	[L2], Heated, Export, Up to 1/12/04, Left
	0ZP011L2AA	1	J, T					*DL	[L2], Non-Heated, Up to 1/12/04 and After 3/2/04, Left
		1	J, T					*DL	[D2], Non-Heated, Up to 1/12/04 and After 3/2/04, Left
	0ZP001DVAA	1	J, U					*DL	[DV], Non-Heated, Export, Right
	0ZP001L2AA	1	J, T					*DL	[L2], Non-Heated, Up to 1/12/04 and After 3/2/04, Right
		1	J, T					*DL	[D2], Non-Heated, Up to 1/12/04 and After 3/2/04, Right

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI		DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel		DG4 = Transmission-Multi-Speed Auto, 45RFE	
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel		DG6 = Transmission-4-Spd. Automatic, 42RLE	
				EN0 = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic 5-45RFE	
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	


Front Seat, Leather, Low Back, Trim Code [DL]  
Figure IKJ-510

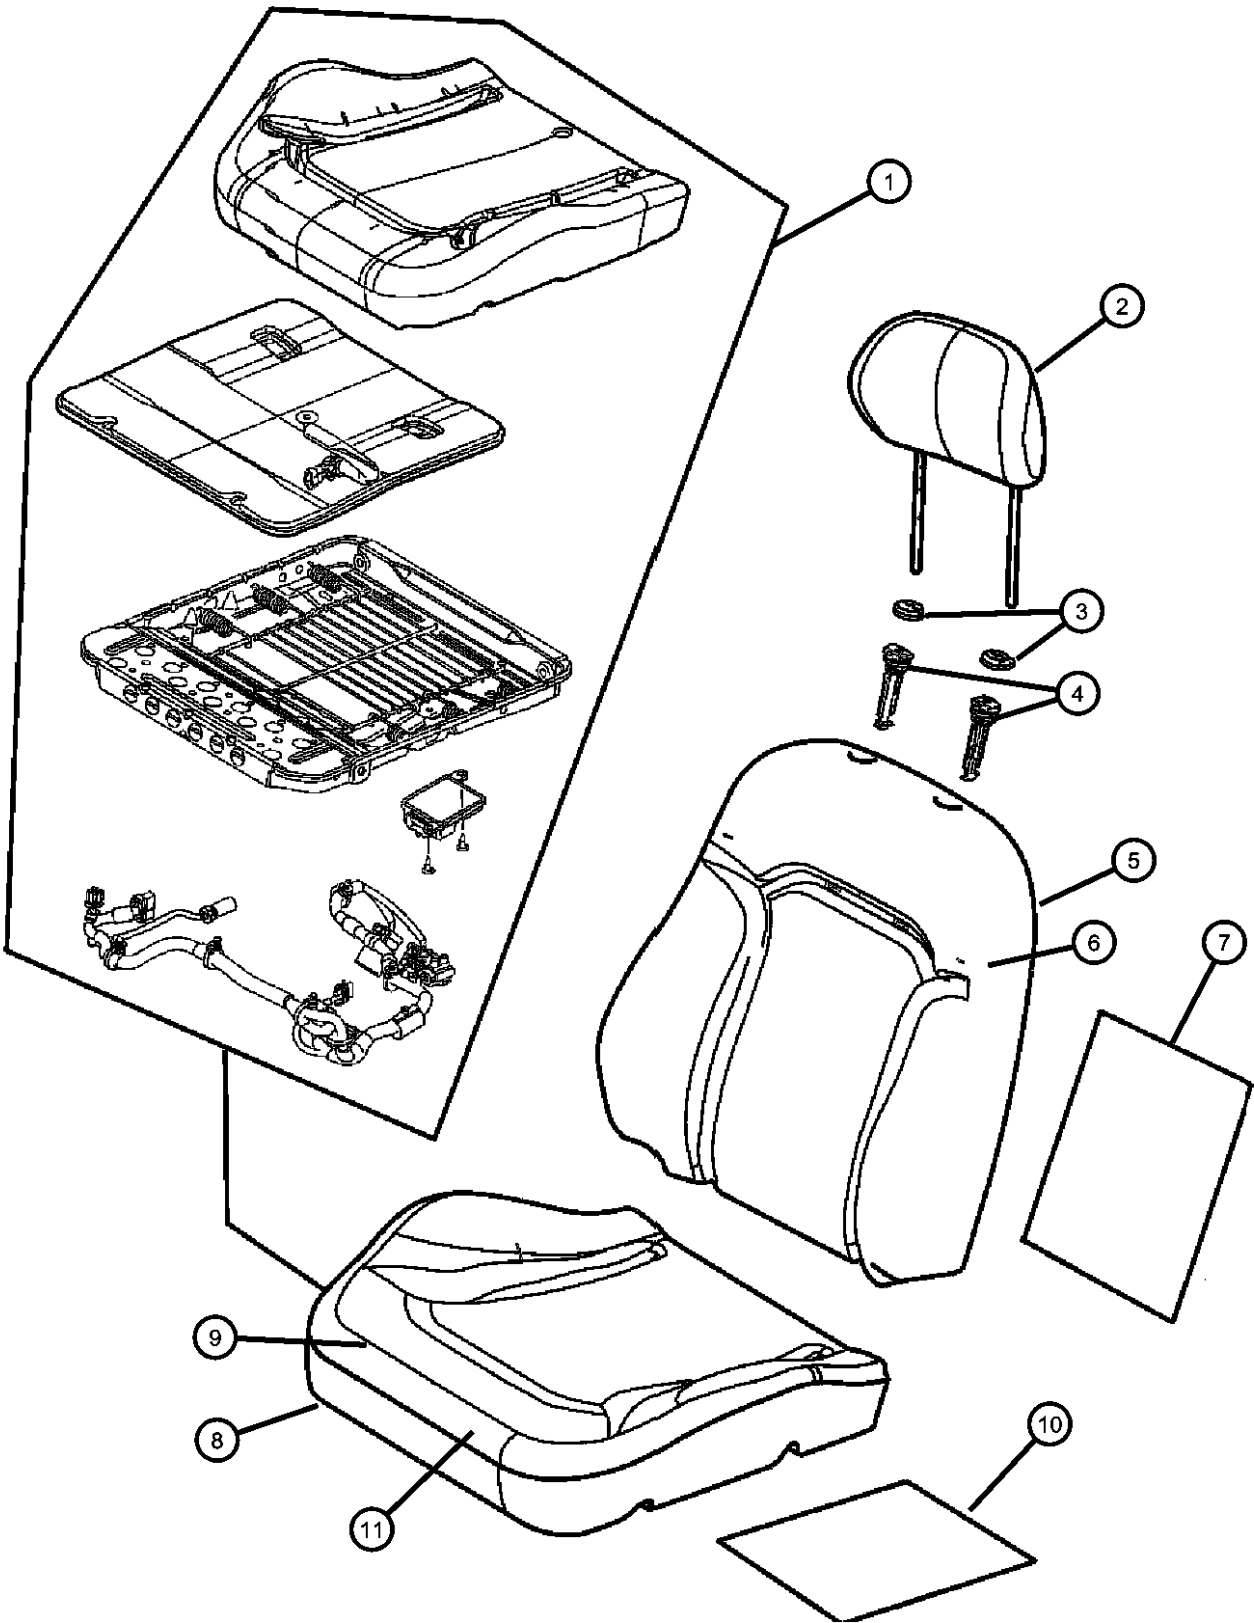

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	J, U					*DL	[L2], Non-Heated, Export, Up to 1/12/04 and After 3/2/04, Right
	0ZP011DVAA	1	J, U					*DL	[DV], Non-Heated, Export, Left
		1	J, U					*DL	[L2], Non-Heated, Export, Up to 1/12/04 and After 3/2/04, Left
	1BU001L2AA	1	J, T					*DL	[D2], Heated, From 1/26/04 to 3/2/04, Right
		1	J, T					*DL	[L2], Heated, From 1/26/04 to 3/2/04, Right
		1	J, U					*DL	[L2], Heated, Export, From 1/26/04 to 3/2/04, Right
	1BU011L2AA	1	J, T					*DL	[D2], Heated, From 1/26/04 to 3/2/04, Left
		1	J, T					*DL	[L2], Heated, From 1/26/04 to 3/2/04, Left
	1BV001DVAA	1	J, U					*DL	[DV], Heated, Export, After 1/26, Right
	1BV001L2AA	1	J, T					*DL	[L2], Heated, After 3/2/04, Right
		1	J, U					*DL	[L2], Heated, Export, After 3/2/04, Right
		1	J, T					*DL	[D2], Heated, After 3/2/04, Right
	1BV011DVAA	1	J, U					*DL	[DV], Heated, Export, After 1/26, Left
	1BV011L2AA	1	J, T					*DL	[L2], Heated, After 3/2/04, Left
		1	J, U					*DL	[L2], Heated, Export, From 1/26/04 to 3/2/04, Left
		1	J, T					*DL	[D2], Heated, After 3/2/04, Left
		1	J, U					*DL	[L2], Heated, Export, After 3/2/04, Left
6									COVER, Front Seat Back
	0ZD121L2AA	1	J, T					*DL	[D2, L2], From 1/12/04 to 3/2/04, Right
	0ZD131L2AA	1	J, T					*DL	[D2, L2], From 1/12/04 to 3/2/04, Left
		1	J, U					*DL	[D2, L2], Export, From 1/12/04 to 3/2/04, Right
		1	J, U					*DL	[D2, L2], Export, From 1/12/04 to 3/2/04, Left

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Front Seat, Leather, Low Back, Trim Code [DL]  
Figure IKJ-510

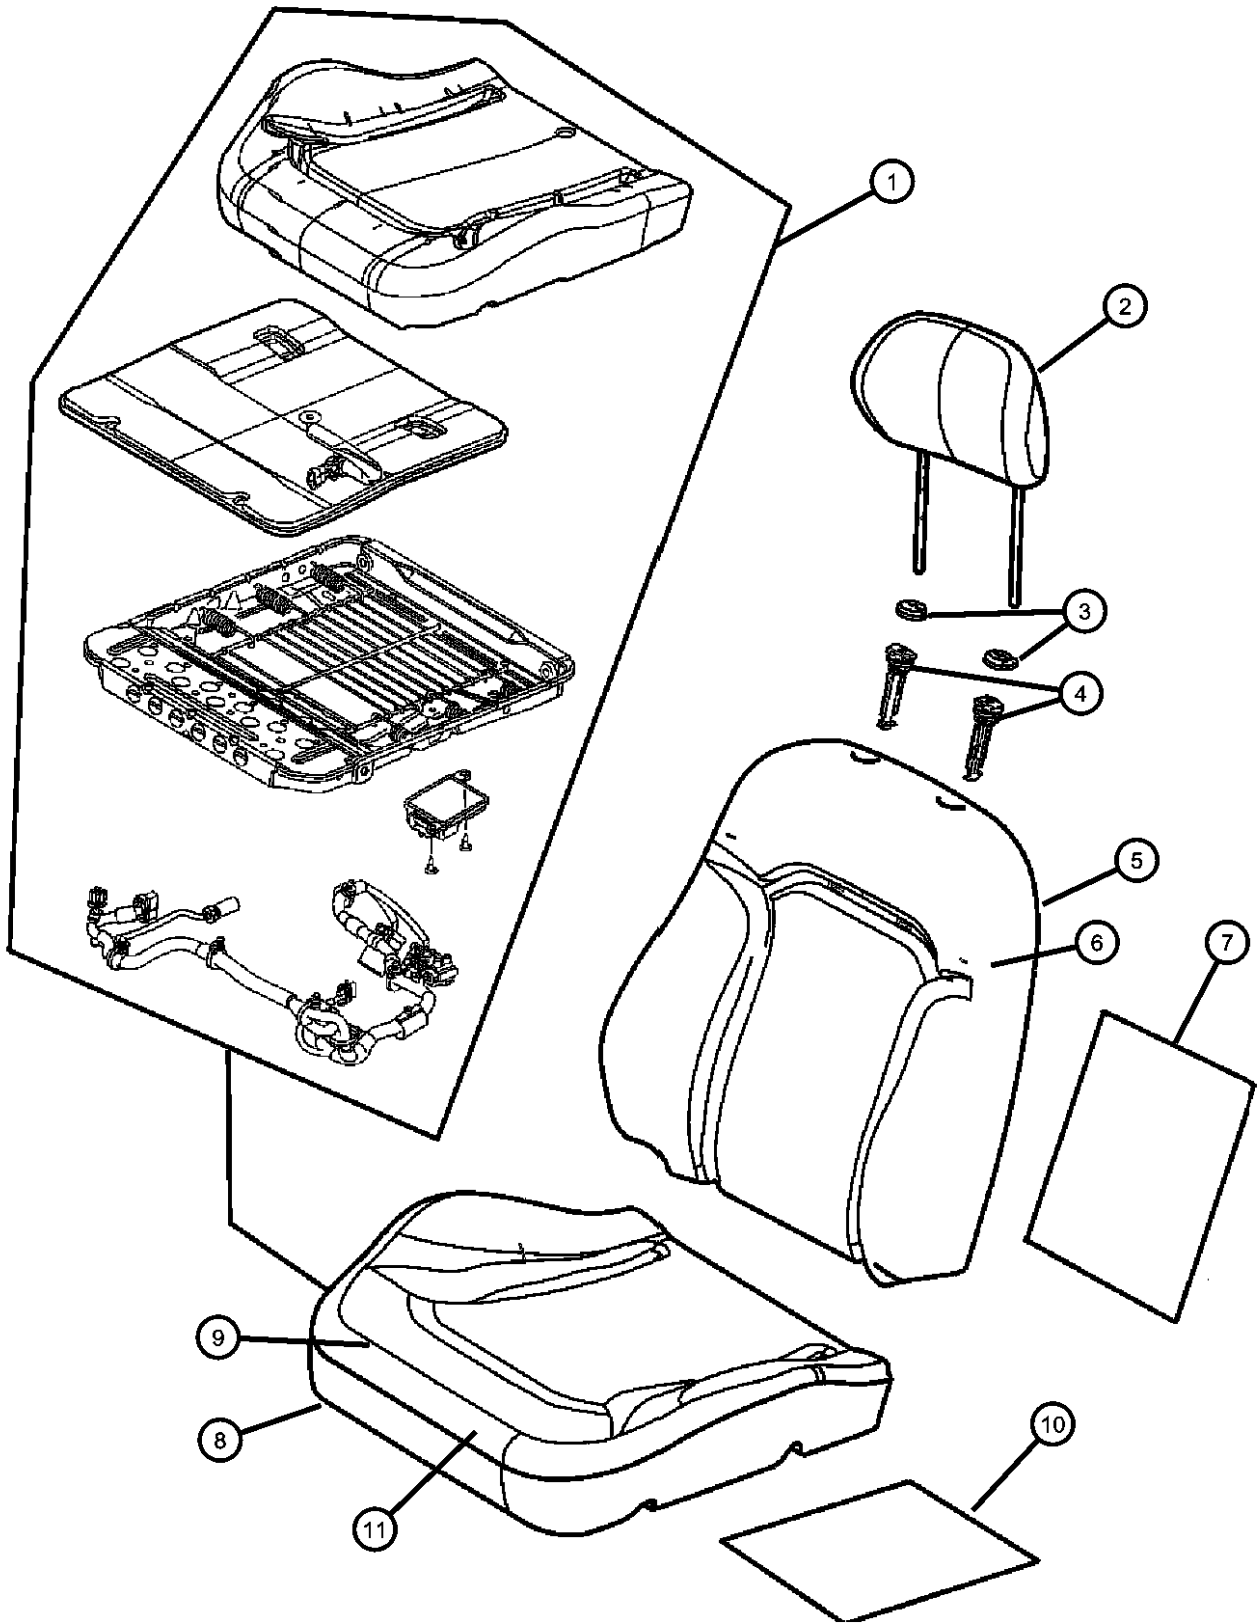


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
7	0ZN981L2AA	1	J, U					*DL	[L2], Export, Up to 1/12/04 and After 3/2/04, Right
		1	J, T					*DL	[D2, L2], Up to 1/12/04 and After 3/2/04, Right
	0ZN981DVAA	1	J, U					*DL	[DV], Export, Right
	0ZN991L2AA	1	J, U					*DL	[L2], Export, Up to 1/12/04 and After 3/2/04, Left
		1	J, T					*DL	[D2, L2], Up to 1/12/04 and After 3/2/04, Left
	0ZN991DVAA	1	J, U					*DL	[DV], Export, Left
									PAD, Heater, Back
	05103170AA	1	J, U					*DL	Up to 1/26/04, Export
		1	J, T					*DL	Up to 1/26/04,
	05142762AA	2	J, U					*DL	After 1/26/04, Export
8		2	J, T					*DL	After 1/26/04
									FRAME, Front Seat Cushion
	05126323AA	1	J, T					*DL	Left
		1	J, U					*DL	Left
	05126322AA	1	J, U					*DL	Right
9		1	J, T					*DL	Right
									COVER, Front Seat Cushion
	0XV841DVAA	1	J, U					*DL	[DV], Export, Right
	0XV841L2AA	1	J, U					*DL	[L2], Export, Up to 1/12/04 and After 3/2/04, Right
		1	J, T					*DL	[D2, L2], Up to 1/12/04 and After 3/2/04, Right
	0XV851L2AA	1	J, T					*DL	[D2, L2], Up to 1/12/04 and After 3/2/04, Left
	0XV851DVAA	1	J, U					*DL	[DV], Export, Left
		1	J, U					*DL	[L2], Export, Up to 1/12/04 and After 3/2/04, Left
	0ZD041L2AA	1	J, T					*DL	[D2, L2], From 1/12/04 and Up to 3/2/04, Right
		1	J, U					*DL	[D2, L2], Export, From 1/12/04 and Up to 3/2/04, Right

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part




Front Seat, Leather, Low Back, Trim Code [DL]  
Figure IKJ-510

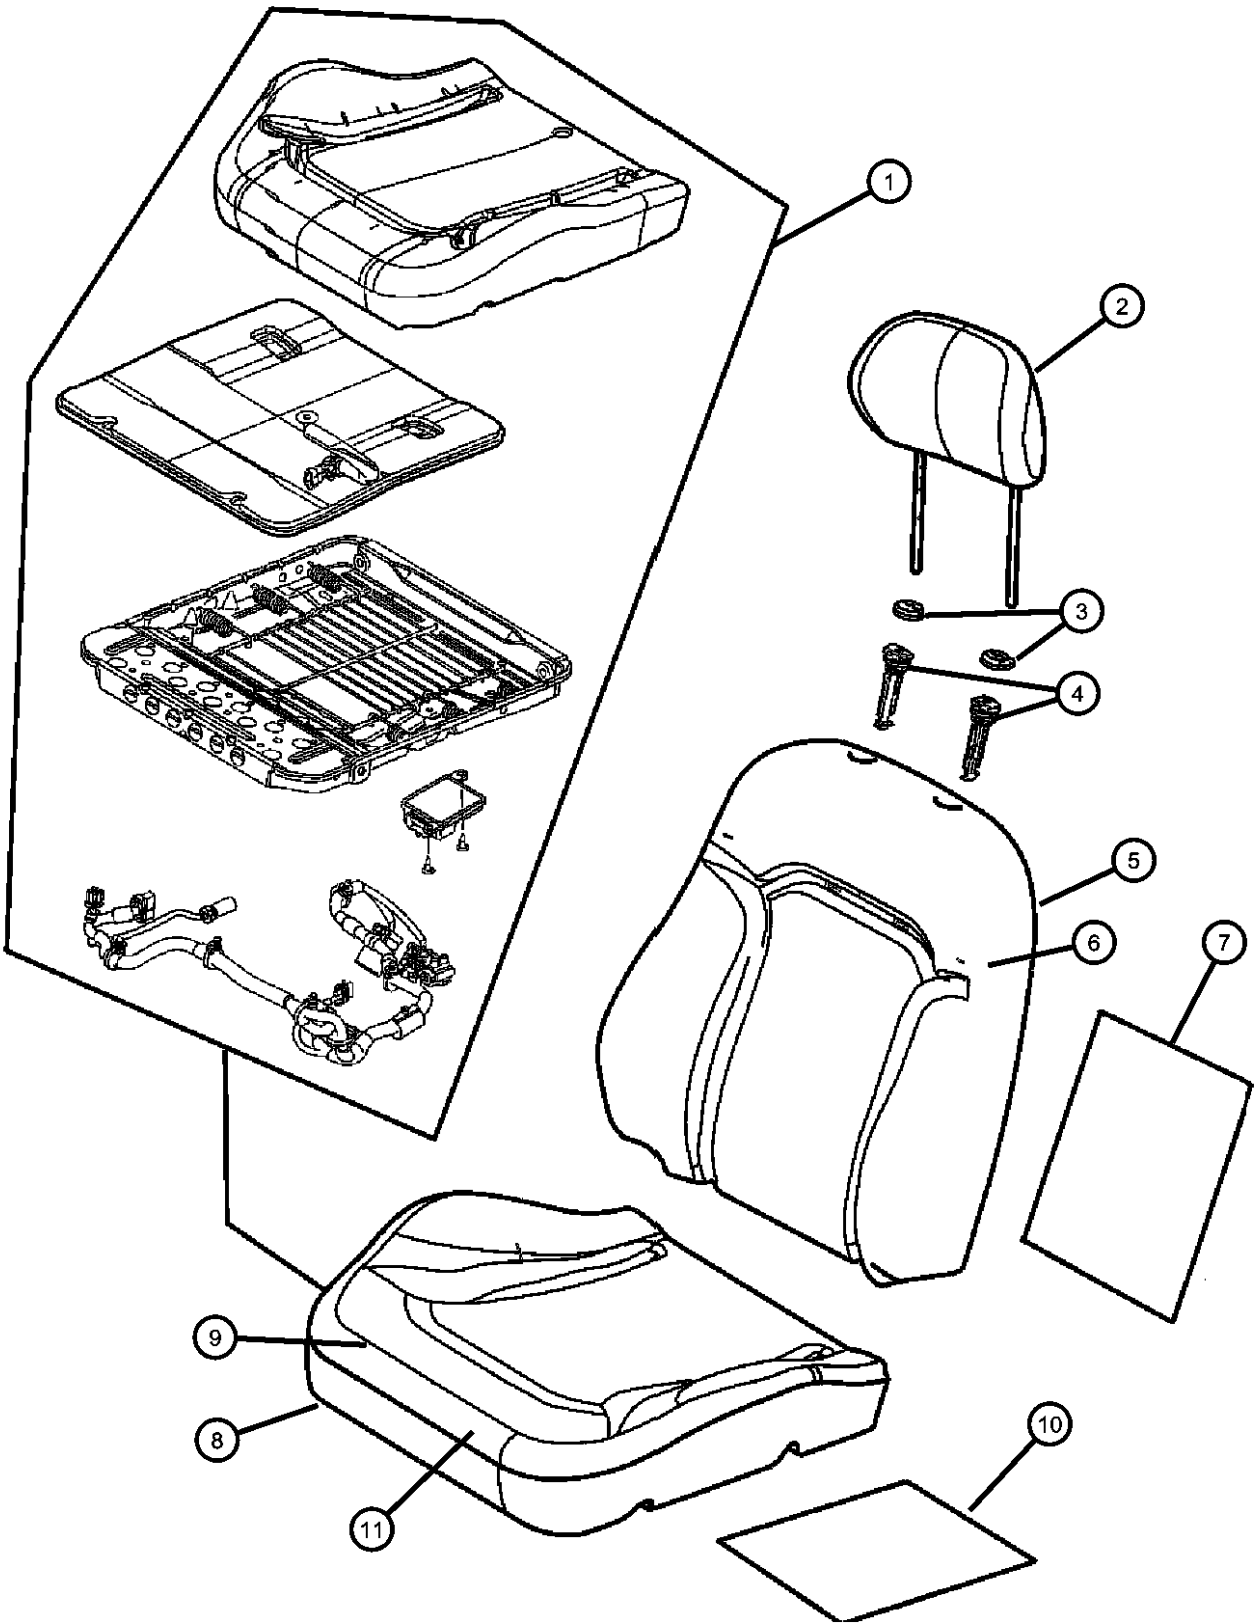

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10	0ZD051L2AA	1	J, T					*DL	[D2, L2], From 1/12/04 and Up to 3/2/04, Left
		1	J, U					*DL	[D2, L2], Export, From 1/12/04 and Up to 3/2/04, Left
									PAD, Heater, Cushion
	05103171AA	2	J, U					*DL	Up to 1/26/04, Export
		2	J, T					*DL	Up to 1/26/04,
11	05142763AA	2	J, T					*DL	After 1/26/04
		2	J, U					*DL	After 1/26/04, Export
									FOAM, Seat Cushion
	05093976AA	2	J, T					*DL	Mexico, Driver and Passenger
		2	J, U					*DL	, Driver and Passenger, Export
-12		1	J, T					*DL	Domestic Left Side Only
									WIRE KIT, Trimming
	05093977AA	2	J, U					*DL	Export
		2	J, T					*DL	

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Front Seat, Cloth, Low Back, Trim Code [XJ]  
Figure IKJ-520

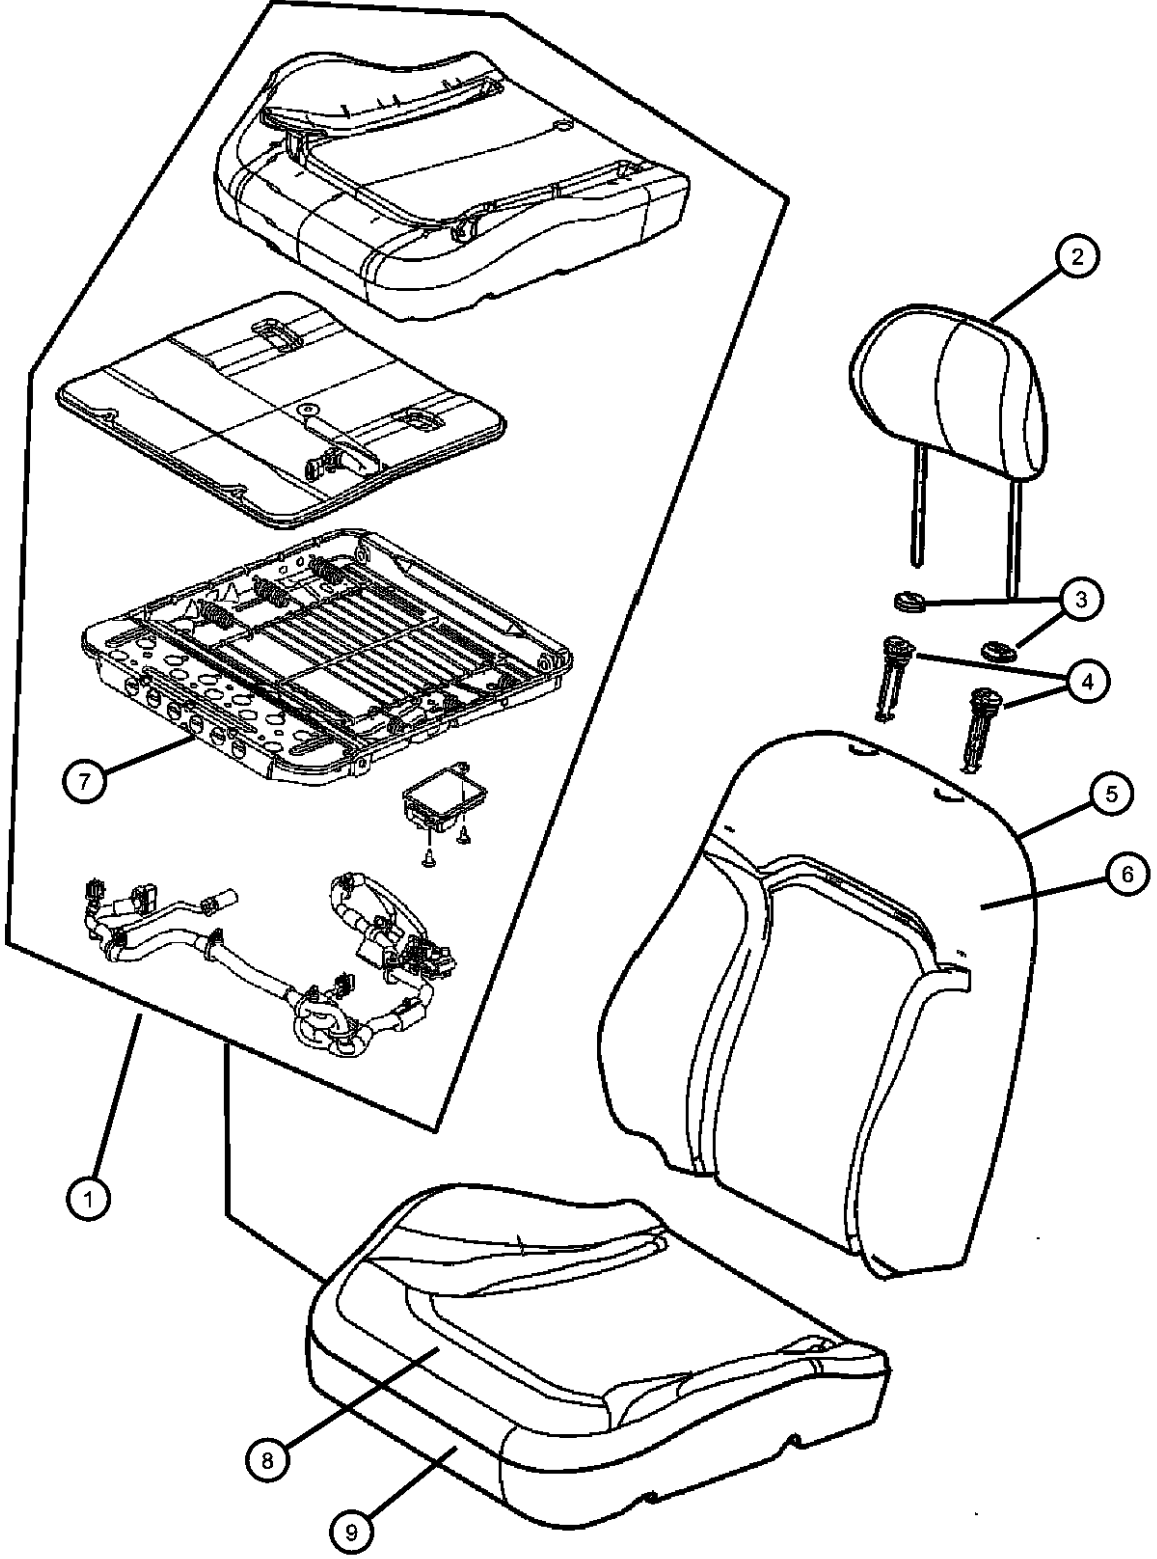

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note; For United States/Canada vehicles only, if right side Cushion Foam is needed order Bladder Repair Kit. Do not attempt to replace the right side

1	05126304AA	1	J, T					*XJ	BLADDER REPAIR KIT, Occupant Classification System, See Note, Right Side OnlyPassenger HEADREST, Front
2	0XP741DVAA	2	J, T					*XJ	[DV]
		2	J, U					*XJ	[DV], Export
	0XP741L5AA	2	J, T					*XJ	[L5]
		2	J, U					*XJ	[L5], Export
3	0WA49WL5AA	2	J, T						CAP, Headrest Adjuster
			J, U					*XJ	[L5], With Button
		2	J, T					*XJ	[L5], With Button, Export
			J, U					*XJ	[DV], With Button
	0WA49XD-VAA	2	J, T						
			J, U					*XJ	[DV], With Button, Export
		2	J, T					*XJ	[L5], Without Button
			J, U					*XJ	[L5], Without Button, Export
4	0WA50WL5AA	2	J, T						
			J, U					*XJ	[DV], Without Button
	0WA50XD-VAA	2	J, T						
			J, U					*XJ	[DV], Without Button, Export
5	05066563AA	2	J, T					*XJ	SLEEVE, Headrest
		2	J, U					*XJ	
5	0ZD921DVAA	1	J, T						BACK, Front Seat
			J, U					*XJ	[DV], Right
	0ZD921L5AA	1	J, T					*XJ	[DV], Right, Export
			J, U					*XJ	[L5], Right
	0ZD931DVAA	1	J, T					*XJ	[L5], Right, Export
			J, U					*XJ	[DV], Left
		1	J, T					*XJ	[DV], Left, Export
			J, U					*XJ	[L5], Left
5	0ZD931L5AA	1	J, T					*XJ	[L5], Left, Export
		1	J, U					*XJ	

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Front Seat, Cloth, Low Back, Trim Code [XJ]  
Figure IKJ-520

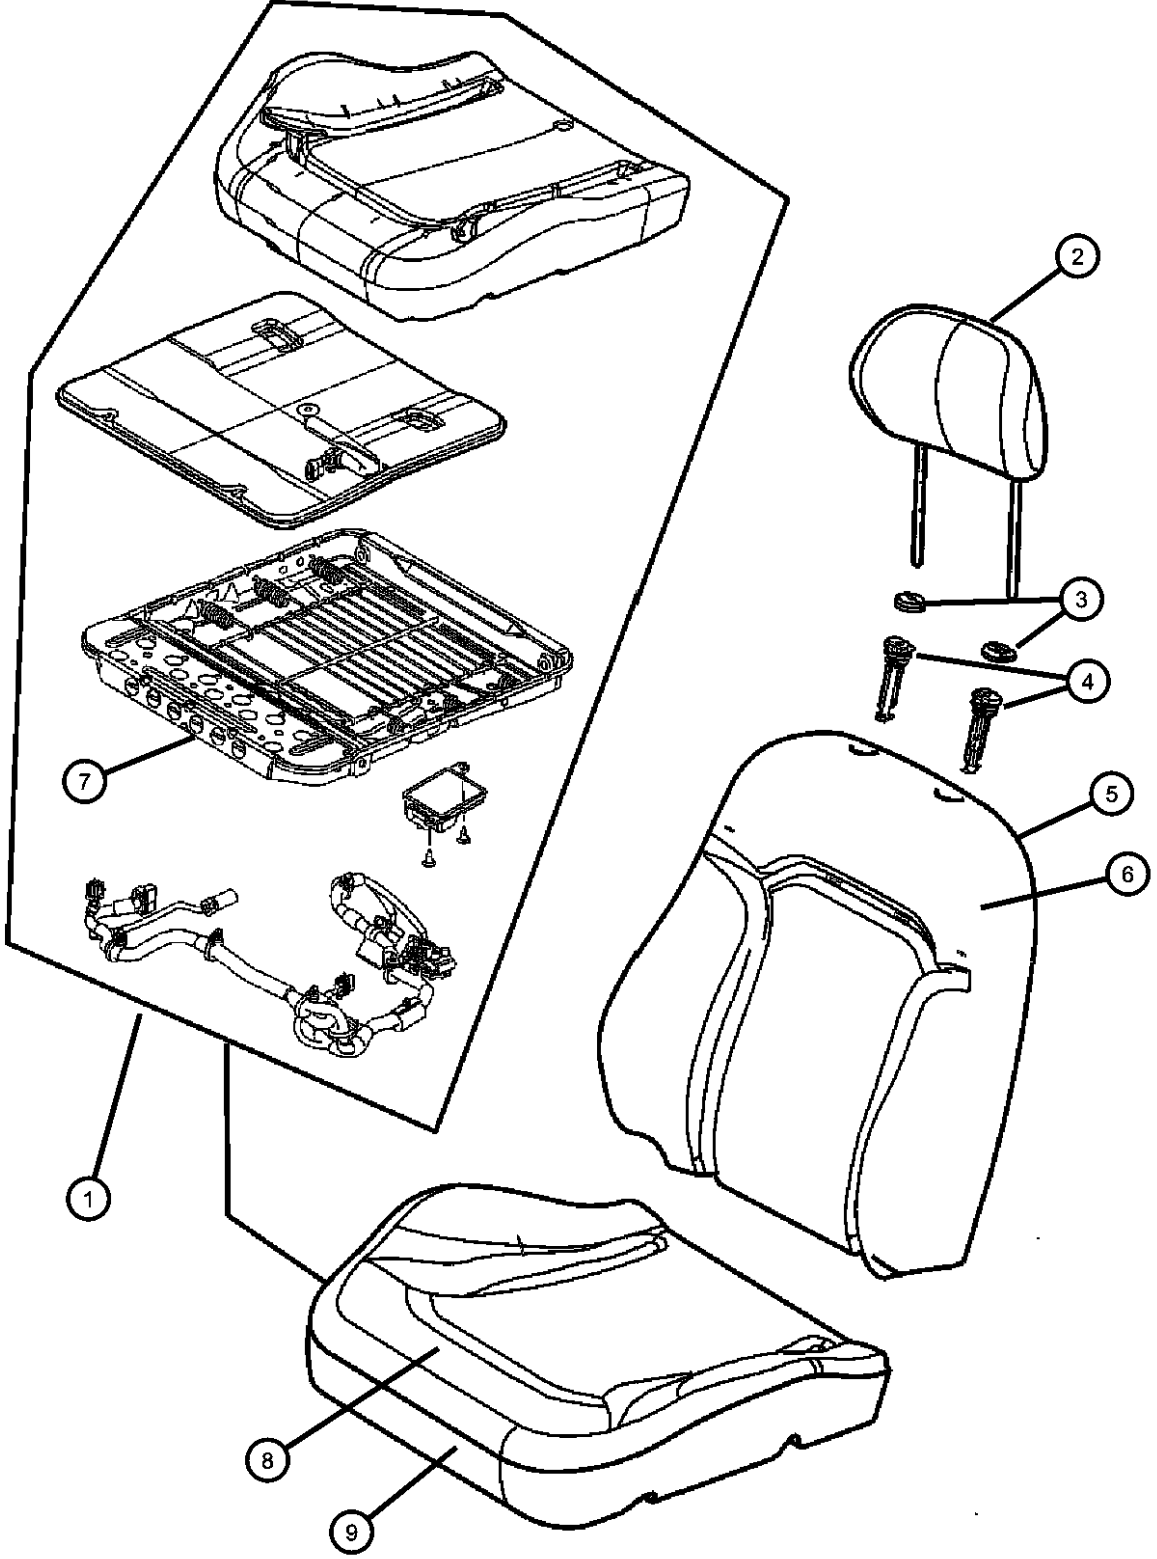

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
6	0ZD901DVAA	1	J, U					*XJ	COVER, Front Seat Back
		1	J, T					*XJ	[DV], Right, Export
	0ZD901L5AA	1	J, T					*XJ	[DV], Right, Export
		1	J, U					*XJ	[L5], Right
	0ZD911DVAA	1	J, T					*XJ	[L5], Right, Export
		1	J, U					*XJ	[DV], Left
	0ZD911L5AA	1	J, U					*XJ	[DV], Left, Export
		1	J, T					*XJ	[L5], Left, Export
7	05126322AA	1	J, U					*XJ	FRAME, Front Seat Cushion
		1	J, T					*XJ	Right, Export
	05126323AA	1	J, U					*XJ	Right, Export
		1	J, T					*XJ	Left, Export
8	0YG511DVAA	2	J, T					*XJ	Left
		2	J, U					*XJ	COVER, Front Seat Cushion
	0YG511L5AA	2	J, T					*XJ	[DV], Right & Left
		2	J, U					*XJ	[DV], Right & Left, Export
	9	05093975AA	2	J, T					*XJ
1			J, U					*XJ	[L5], Right & Left, Export
05093978AA		2	J, T					*XJ	FOAM, Seat Cushion
	2	J, U					*XJ	Export Only, Driver and Passenger	
-10	05093978AA	1	J, T					*XJ	For Passenger Side Use Bladder Repair Kit, Driver
		2	J, U					*XJ	WIRE KIT, Trimming

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Front Seat, Cloth, Trim Code [M5]  
Figure IKJ-530

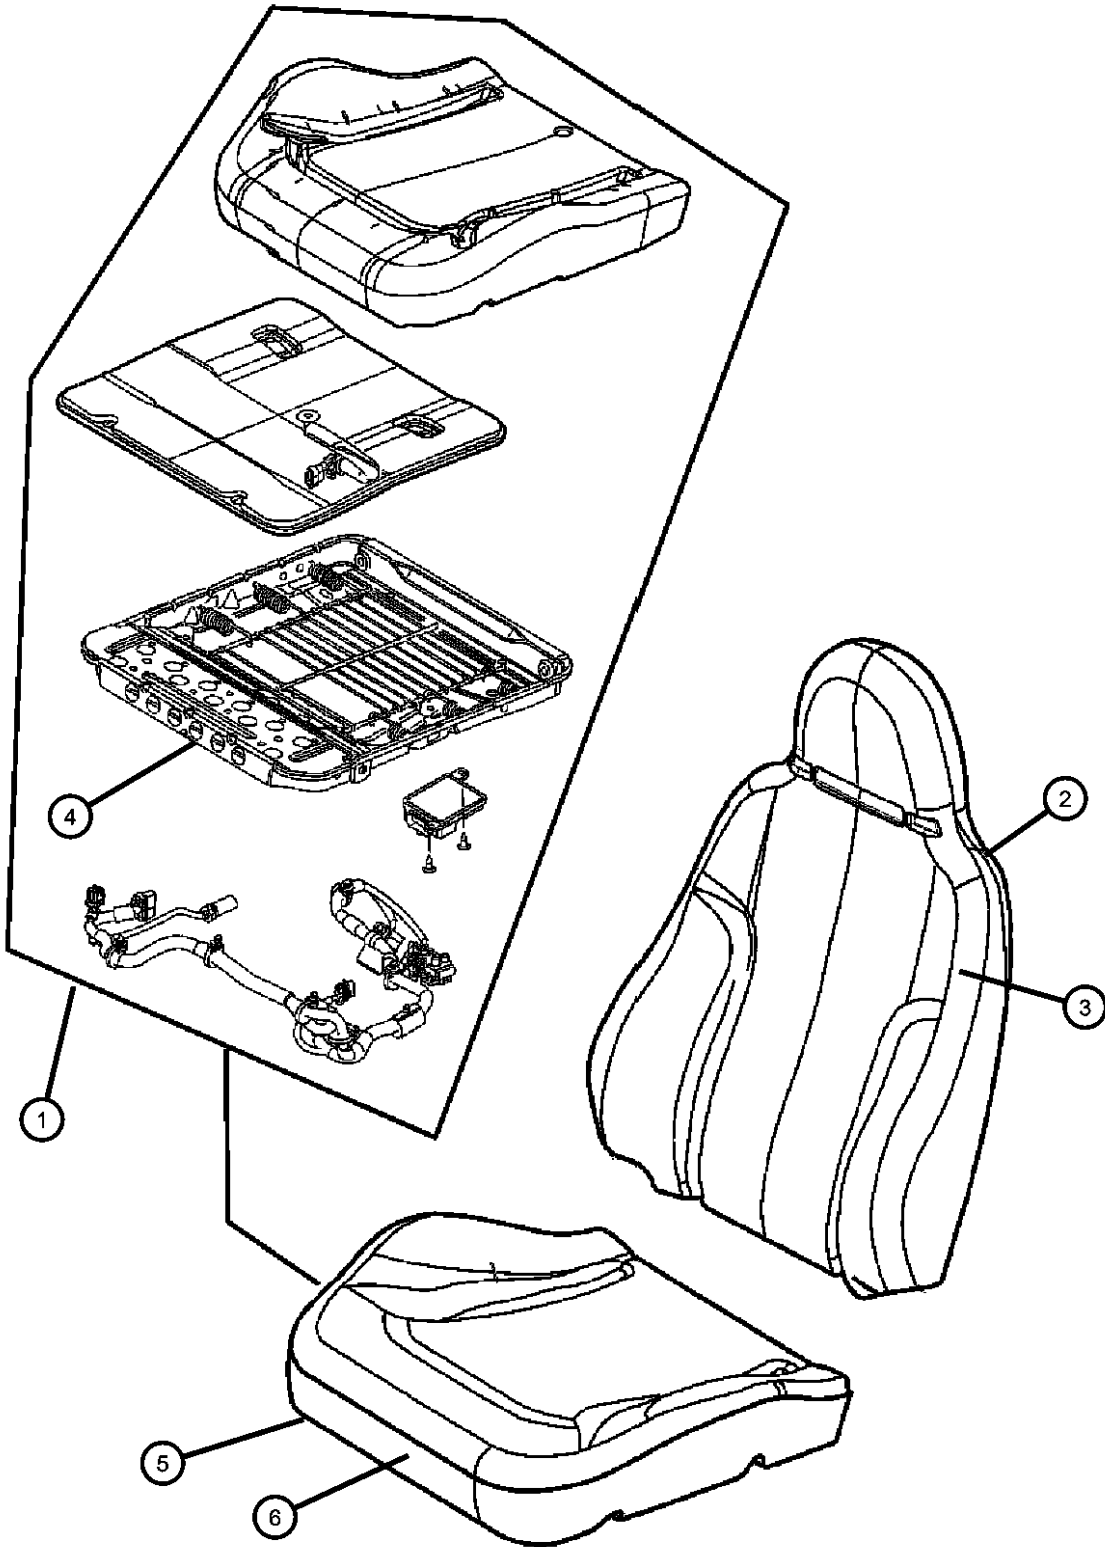


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: For United States/Canada vehicles only, if right side Cushion Foam is needed order Bladder Repair Kit. Do not attempt to replace the right side									
1	05126305AA	1	J, T					*M5	BLADDER REPAIR KIT, Occupant Classification System, See Note, Right Side Only, Includes Foam, Bladder, Frame, Control Module and Harness, Passenger BACK, Front Seat
2	0ZD641DVAA	1	J, T					*M5	[DV], Right
	0ZD641L5AA	1	J, T					*M5	[L5], Right
	0ZD651DVAA	1	J, T					*M5	[DV], Left
	0ZD651L5AA	1	J, T					*M5	[L5], Left
3	0ZD621DVAA	1	J, T					*M5	COVER, Front Seat Back
	0ZD621L5AA	1	J, T					*M5	[L5]
4	05126322AA	1	J, T					*M5	FRAME, Front Seat Cushion
	05126323AA	1	J, T					*M5	Left
5	0XV811DVAA	2	J, T					*M5	COVER, Front Seat Cushion
	0XV811L5AA	2	J, T					*M5	[L5]
6	05093974AA	2	J, T					*M5	FOAM, Seat Cushion
		1	J, T					*M5	Mexico Only, Driver and Passenger
-7	05093977AA	2	J, T					*M5	For Passenger Side Use Bladder Repair Kit, Driver
								*M5	WIRE KIT, Trimming

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Front Seat, Cloth, Low Back, Trim Code [E7]  
Figure IKJ-540

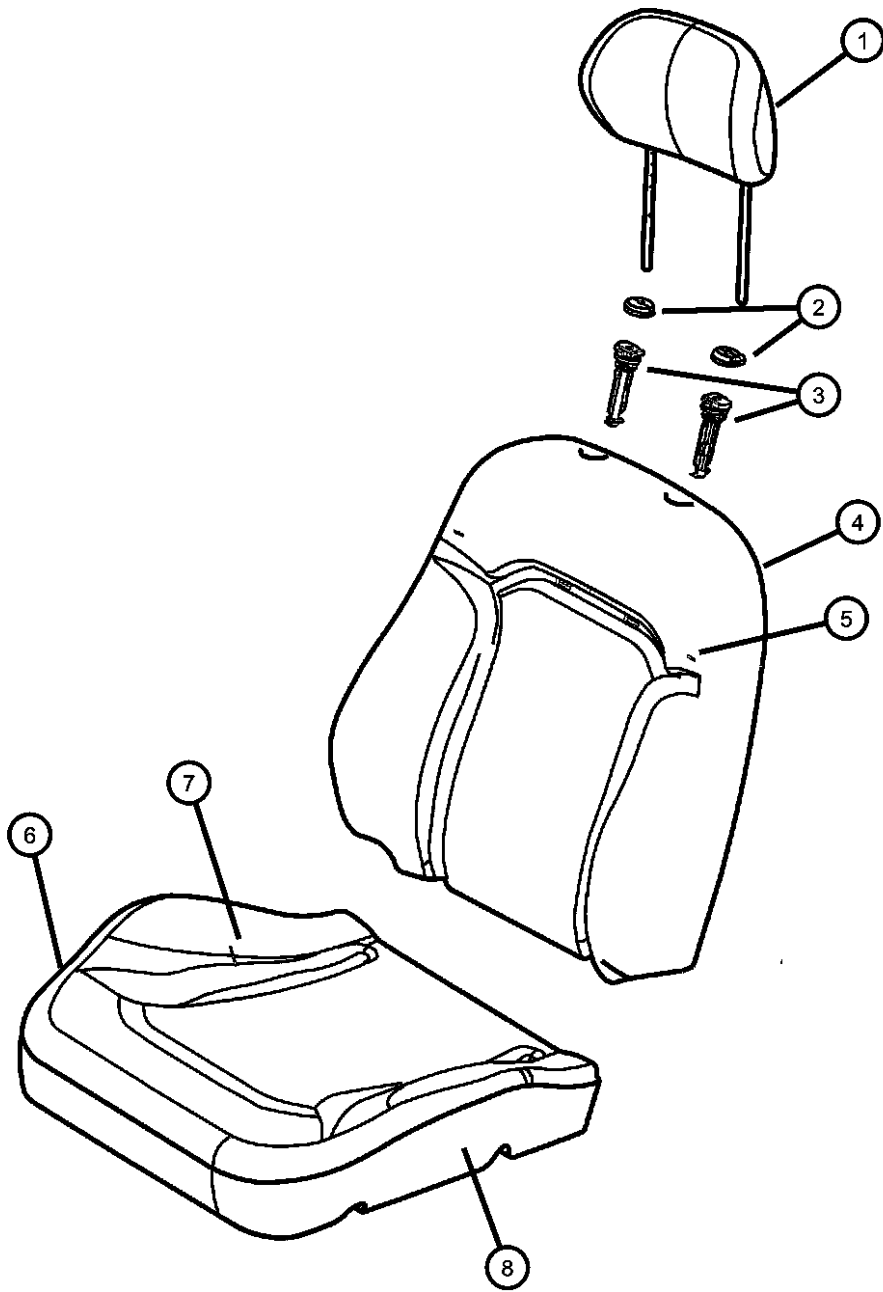


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	0WK031DVAA	2	J, U					*E7	HEADREST, Front
	0WK031L5AA	2	J, U					*E7	[DV]
2	0WA49WL5AA	2	J, U					*E7	CAP, Headrest Adjuster
	0WA49XD-VAA	2	J, U					*E7	[L5], With Button
	0WA50WL5AA	2	J, U					*E7	[DV], With Button
	0WA50XD-VAA	2	J, U					*E7	[L5], Without Button
	0WA50XD-VAA	2	J, U					*E7	[DV], Without Button
3	05066017AA	4	J, U					*E7	SLEEVE, Headrest
4	0ZD661DVAA	1	J, U					*E7	BACK, Front Seat
	0ZD661L5AA	1	J, U					*E7	[DV], Right
	0ZD671DVAA	1	J, U					*E7	[L5], Right
	0ZD671L5AA	1	J, U					*E7	[DV], Left
	0ZD671L5AA	1	J, U					*E7	[L5], Left
5	0ZD631DVAA	2	J, U					*E7	COVER, Front Seat Back
	0ZD631L5AA	2	J, U					*E7	[DV]
6	05126322AA	1	J, U					*E7	FRAME, Front Seat Cushion
	05126323AA	1	J, U					*E7	[L5]
7	0XV811DVAA	2	J, U					*E7	COVER, Front Seat Cushion
	0XV811L5AA	2	J, U					*E7	[DV]
8	05093974AA	2	J, U					*E7	[L5]
-9	05093977AA	2	J, U					*E7	FOAM, Seat Cushion
								*E7	WIRE KIT, Trimming

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Front Seat, Cloth, Trim Code [J5]  
Figure IKJ-550

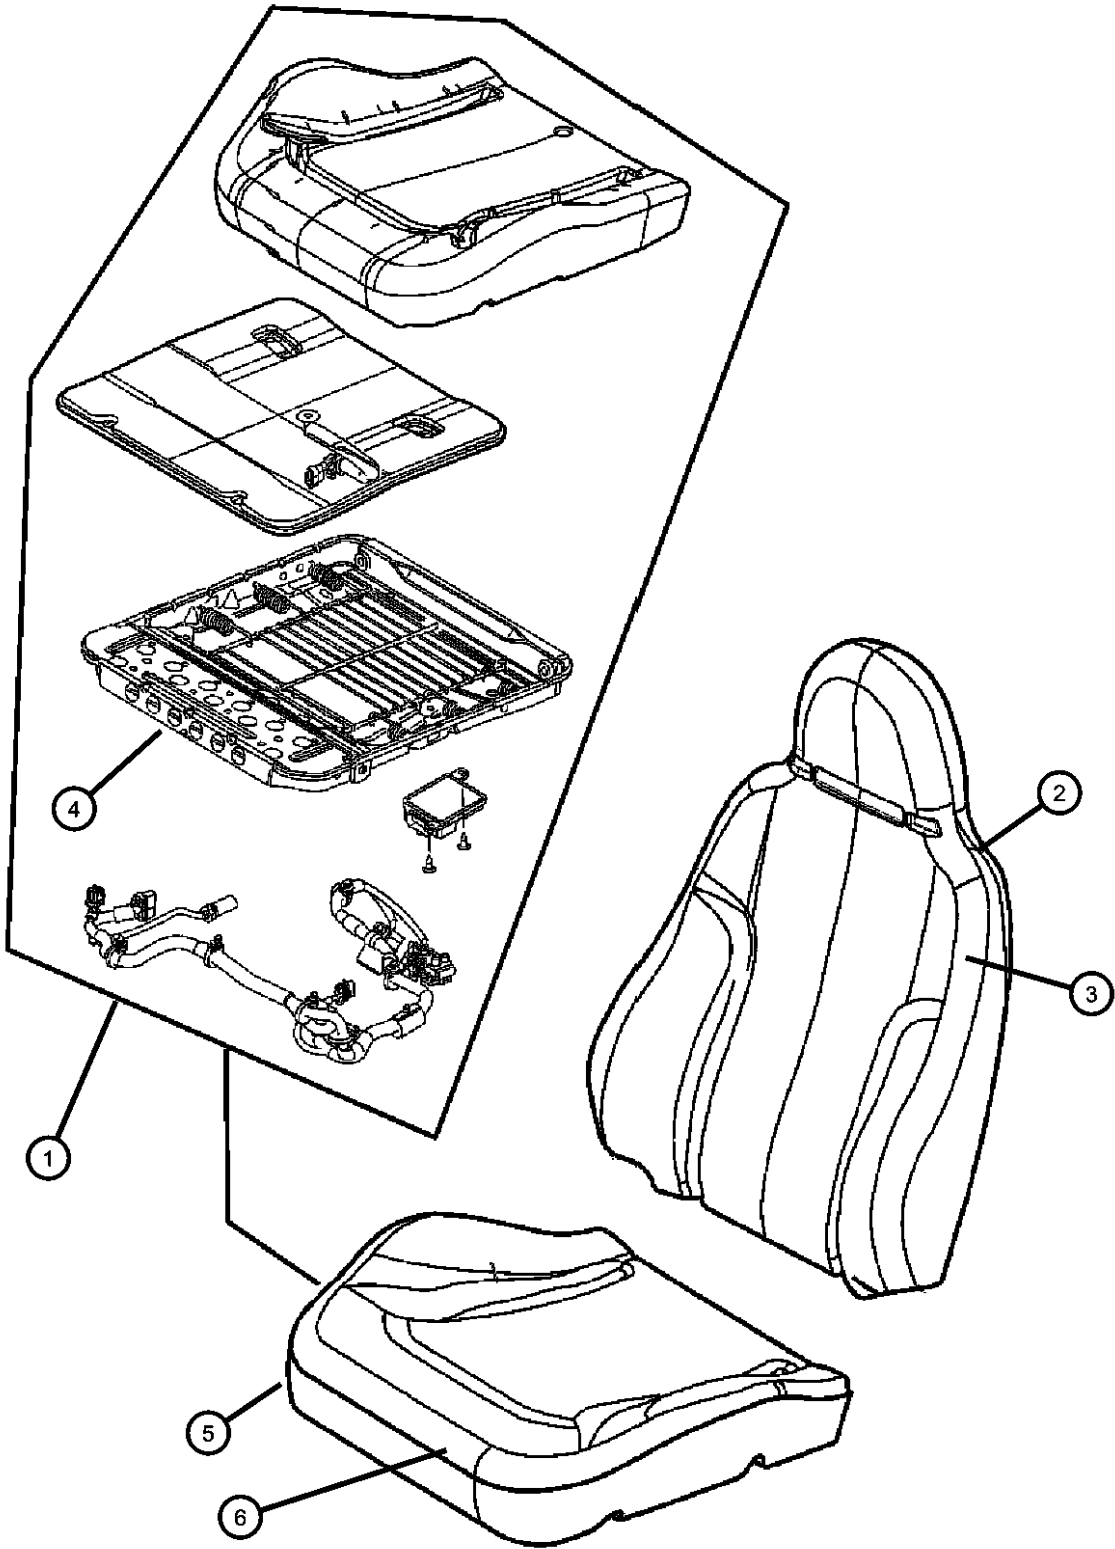


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; For United States/Canada vehicles only, if right side Cushion Foam is needed order Bladder Repair Kit. Do not attempt to replace the right side

1	05126305AA	1						*J5	BLADDER REPAIR KIT, Occupant Classification System, See Note, Right Side Only, Includes Foam, Bladder, Frame, Control Module and Harness, Passenger BACK, Front Seat
2								*J5	[DV], Right
	1AG321DVAA	1						*J5	[L5], Right
	1AG321L5AA	1						*J5	[DV], Left
	1AG331DVAA	1						*J5	[L5], Left
	1AG331L5AA	1							COVER, Front Seat Back
3								*J5	[DV], Right
	1AG301DVAA	1						*J5	[L5], Right
	1AG301L5AA	1						*J5	[DV], Left
	1AG311DVAA	1						*J5	[L5], Left
	1AG311L5AA	1							FRAME, Front Seat Cushion
4								*J5	Right
	05126322AA	1						*J5	Left
	05126323AA	1							COVER, Front Seat Cushion
5								*J5	[DV]
	0XV861DVAA	2						*J5	[L5]
	0XV861L5AA	2						*J5	FOAM, Seat CushionDrivers Side
6	05093974AA	2						*J5	WIRE KIT, Trimming
-7	05093977AA	2							

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Front Seat, Cloth, Low Back, Trim Code [F7]  
Figure IKJ-560

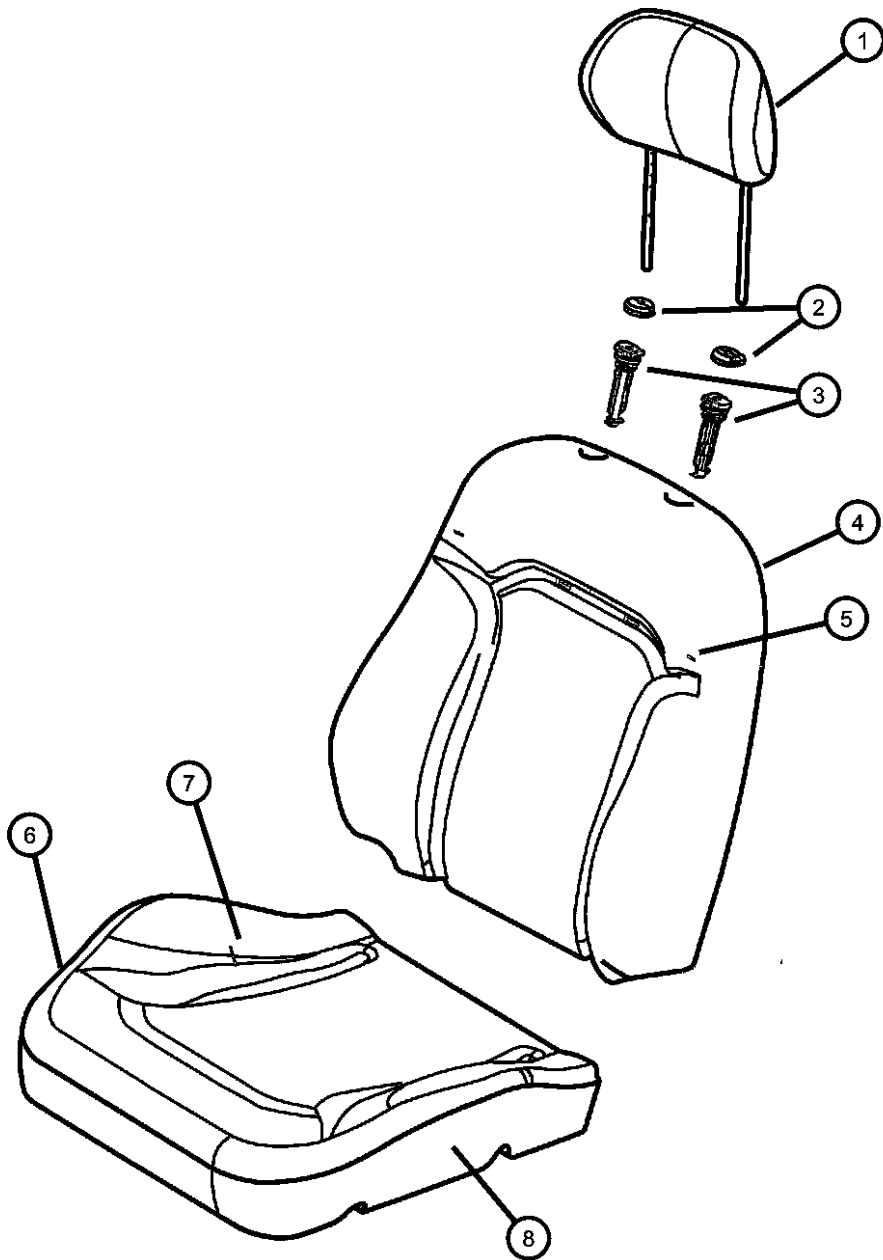


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									HEADREST, Front
	0XH171DVAA	2						*F7 [DV]	
	0XH171L5AA	2						*F7 [L5]	
2									CAP, Headrest Adjuster
	0WA49WL5AA	1						*F7 [L5], With Button	
	0WA49XD-VAA	1						*F7 [DV], With Button	
	0WA50WL5AA	1						*F7 [L5], Without Button	
	0WA50XD-VAA	1						*F7 [DV], Without Button	
3	05066563AA	2						*F7	SLEEVE, Headrest
4									BACK, Front Seat
	1AG281DVAA	1						*F7 [DV], Right	
	1AG281L5AA	1						*F7 [L5], Right	
	1AG291DVAA	1						*F7 [DV], Left	
	1AG291L5AA	1						*F7 [L5], Left	
5									COVER, Front Seat Back
	1AG261DVAA	1						*F7 [DV], Right	
	1AG261L5AA	1						*F7 [L5], Right	
	1AG271DVAA	1						*F7 [DV], Left	
	1AG271L5AA	1						*F7 [L5], Left	
6									FRAME, Front Seat Cushion
	05126322AA	1						*F7 Right	
	05126323AA	1						*F7 Left	
7									COVER, Front Seat Cushion
	0XV861DVAA	2						*F7 [DV]	
	0XV861L5AA	2						*F7 [L5]	
8	05093974AA	2						*F7	FOAM, Seat Cushion
-9	05093977AA	2						*F7	WIRE KIT, Trimming

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Front Seat, Cloth, Low Back, Trim Code [A7]  
Figure IKJ-570

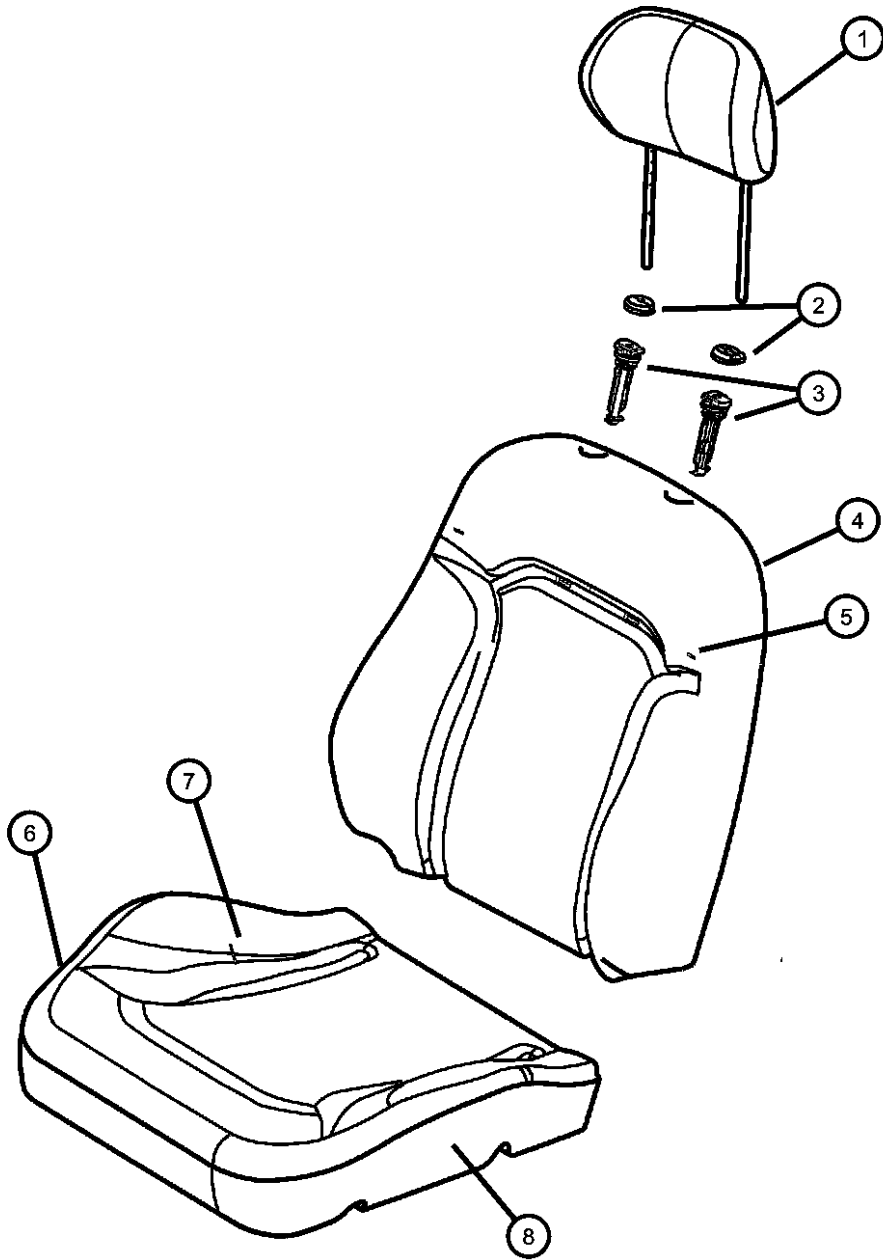

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	1AG931DVAA	1						*A7	HEADREST, Front
2									CAP, Headrest Adjuster
	0WA49XD-VAA	1						*A7	With Button
	0WA501DVAA	1						*A7	Without Button
3	05066563AA	2						*A7	SLEEVE, Headrest
4									BACK, Front Seat
	1AH001DVAA	1						*A7	Right
	1AH011DVAA	1						*A7	Left
5									COVER, Front Seat Back
	1AG981DVAA	1						*A7	Right
	1AG991DVAA	1						*A7	Left
6									FRAME, Front Seat Cushion
	05126322AA	1						*A7	Right
	05126323AA	1						*A7	Left
7	1AD951DVAA	2						*A7	COVER, Front Seat Cushion
8	05093974AA	2						*A7	FOAM, Seat Cushion
-9	05093977AA	2						*A7	WIRE KIT, Trimming

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part




**Front Seat, Cloth, Trim Code [V5]  
Figure IKJ-580**

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note; For United States/Canada vehicles only, if right side Cushion Foam is needed order Bladder Repair Kit. Do not attempt to replace the right side

-1	05126305AA	1	*V5	BLADDER REPAIR KIT, Occupant Classification System, See Note, Right Side Only
2				BACK, Front Seat
	1AE061DVAA	1	*V5	With Columbia Logo, Right
	1AE071DVAA	1	*V5	With Columbia Logo, Left
	1BC621DVAA	1	*V5	With Jeep Logo, Right
	1BC631DVAA	1	*V5	With Jeep Logo, Left
3				COVER, Front Seat Back
	1AE041DVAA	1	*V5	With Columbia Logo, Right
	1AE051DVAA	1	*V5	With Columbia Logo, Left
	1BC601DVAA	1	*V5	With Jeep Logo, Right
	1BC611DVAA	1	*V5	With Jeep Logo, Left
4				FRAME, Front Seat Cushion
	05126322AA	1	*V5	Right
	05126323AA	1	*V5	Left
5	1AD951DVAA	2	*V5	COVER, Front Seat Cushion
6	05093974AA	1	*V5	FOAM, Seat Cushion
-7	05093977AA	1	*V5	WIRE KIT, Trimming

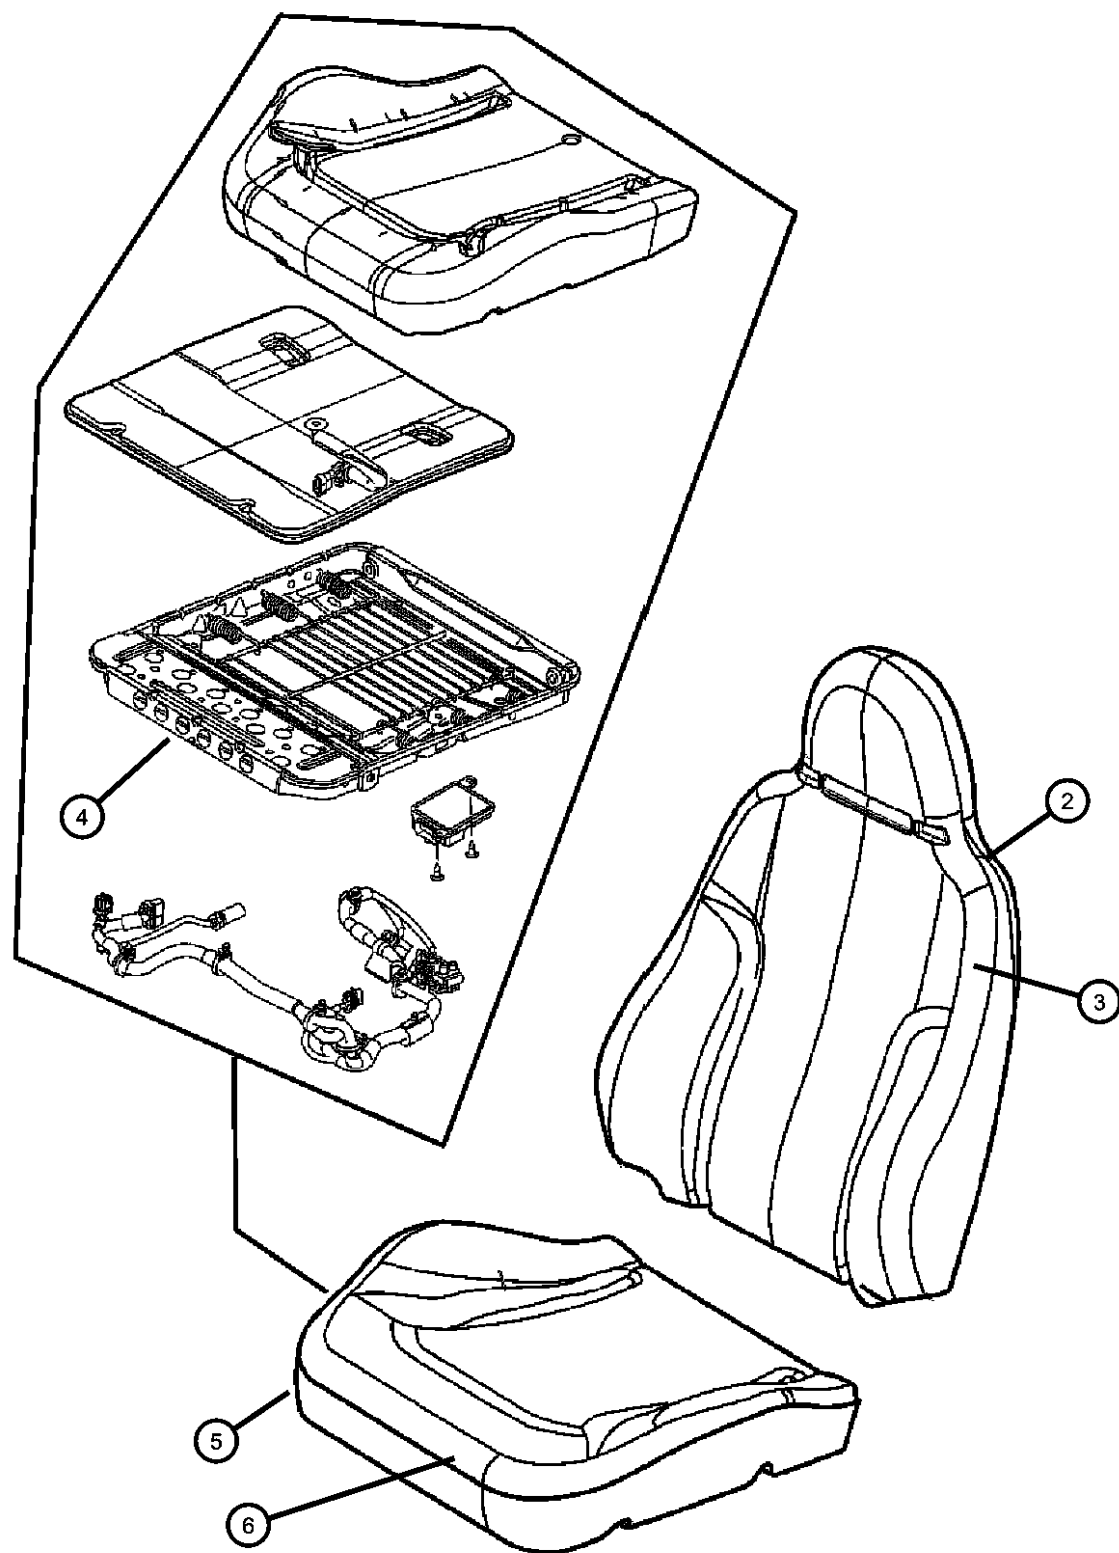

## LIBERTY (KJ)


SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part

2004 KJ

**<< RETURN TO GROUP INDEX**

Rear Seats, Trim Code [M5]  
Figure IKJ-610

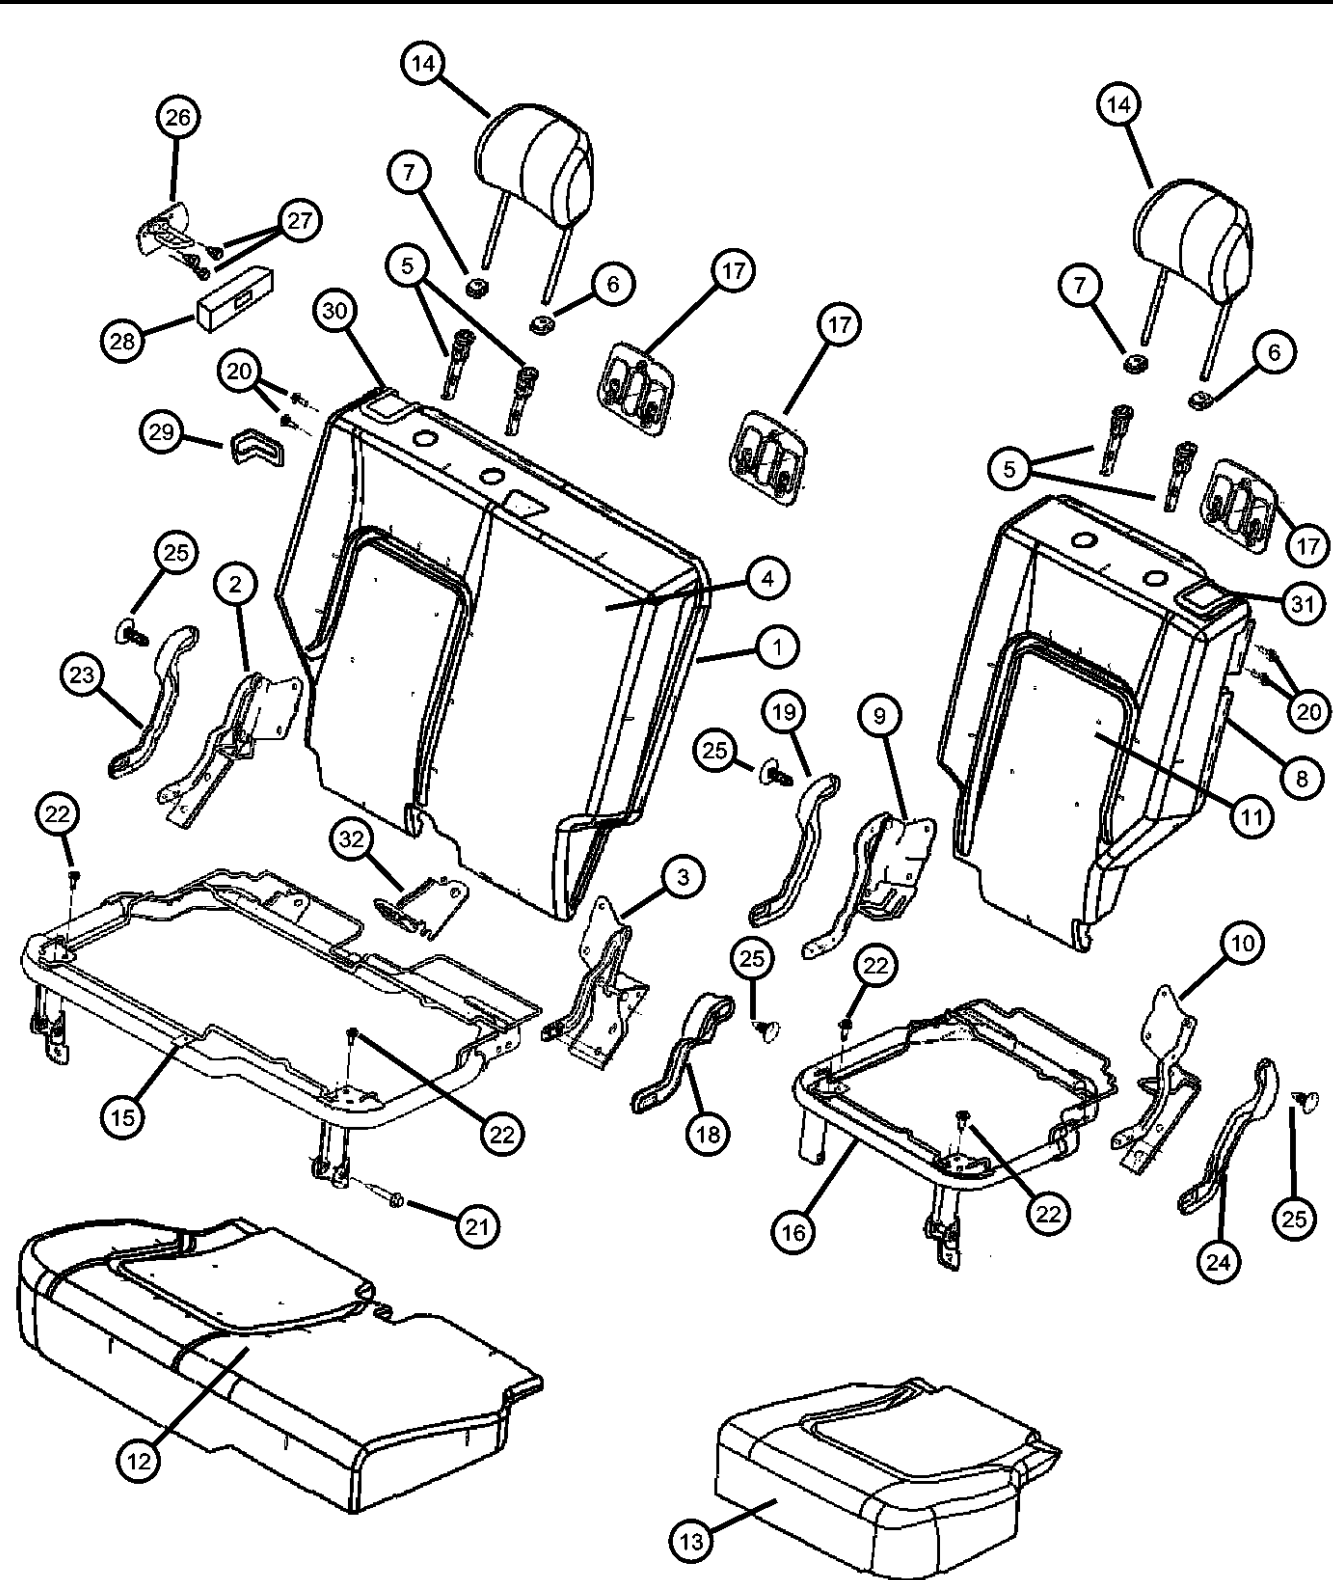


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	0YF801DVAA	1	J, T					*M5 [DV]	SEAT BACK, Rear, 65%
	0YF801L5AA	1	J, T					*M5 [L5]	
2	05071702AA	1	J, T					*M5	BRACKET AND HINGE, Rear Seat Back, 65%Right, Outboard
3	05071703AA	1	J, T					*M5	BRACKET AND HINGE, Rear Seat Back, 65%Right, Inboard
4	0YF761DVAA	1	J, T					*M5 [DV]	COVER, Rear Seat Back, 65%
	0YF761L5AA	1	J, T					*M5 [L5]	
5	05066017AA	2	J, T					*M5	SLEEVE, Headrest
6	0WA461DVAA	2	J, T					*M5 [DV]	CAP, Headrest Adjuster, With Button
	0WA461L5AA	2	J, T					*M5 [L5]	
7	0WA311DVAA	1	J, T					*M5 [DV]	CAP, Headrest Adjuster, Without Button
	0WA311L5AA	1	J, T					*M5 [L5]	
8	0YF811DVAA	1	J, T					*M5 [DV]	SEAT BACK, Rear, 35%
	0YF811L5AA	1	J, T					*M5 [L5]	
9	05071704AA	1	J, T					*M5	BRACKET AND HINGE, Rear Seat Back, 35%Left, Inboard
10	05071705AA	1	J, T					*M5	BRACKET AND HINGE, Rear Seat Back, 35%Left, Outboard
11	0YF771DVAA	1	J, T					*M5 [DV]	COVER, Rear Seat Back, 35%
	0YF771L5AA	1	J, T					*M5 [L5]	
12	0YF861DVAA	1	J, T					*M5 [DV]	COVER AND PAD, Cushion, 65%
	0YF861L5AA	1	J, T					*M5 [L5]	
13	0YF871DVAA	1	J, T					*M5 [DV]	COVER AND PAD, Cushion, 35%

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear Seats, Trim Code [M5]  
Figure IKJ-610

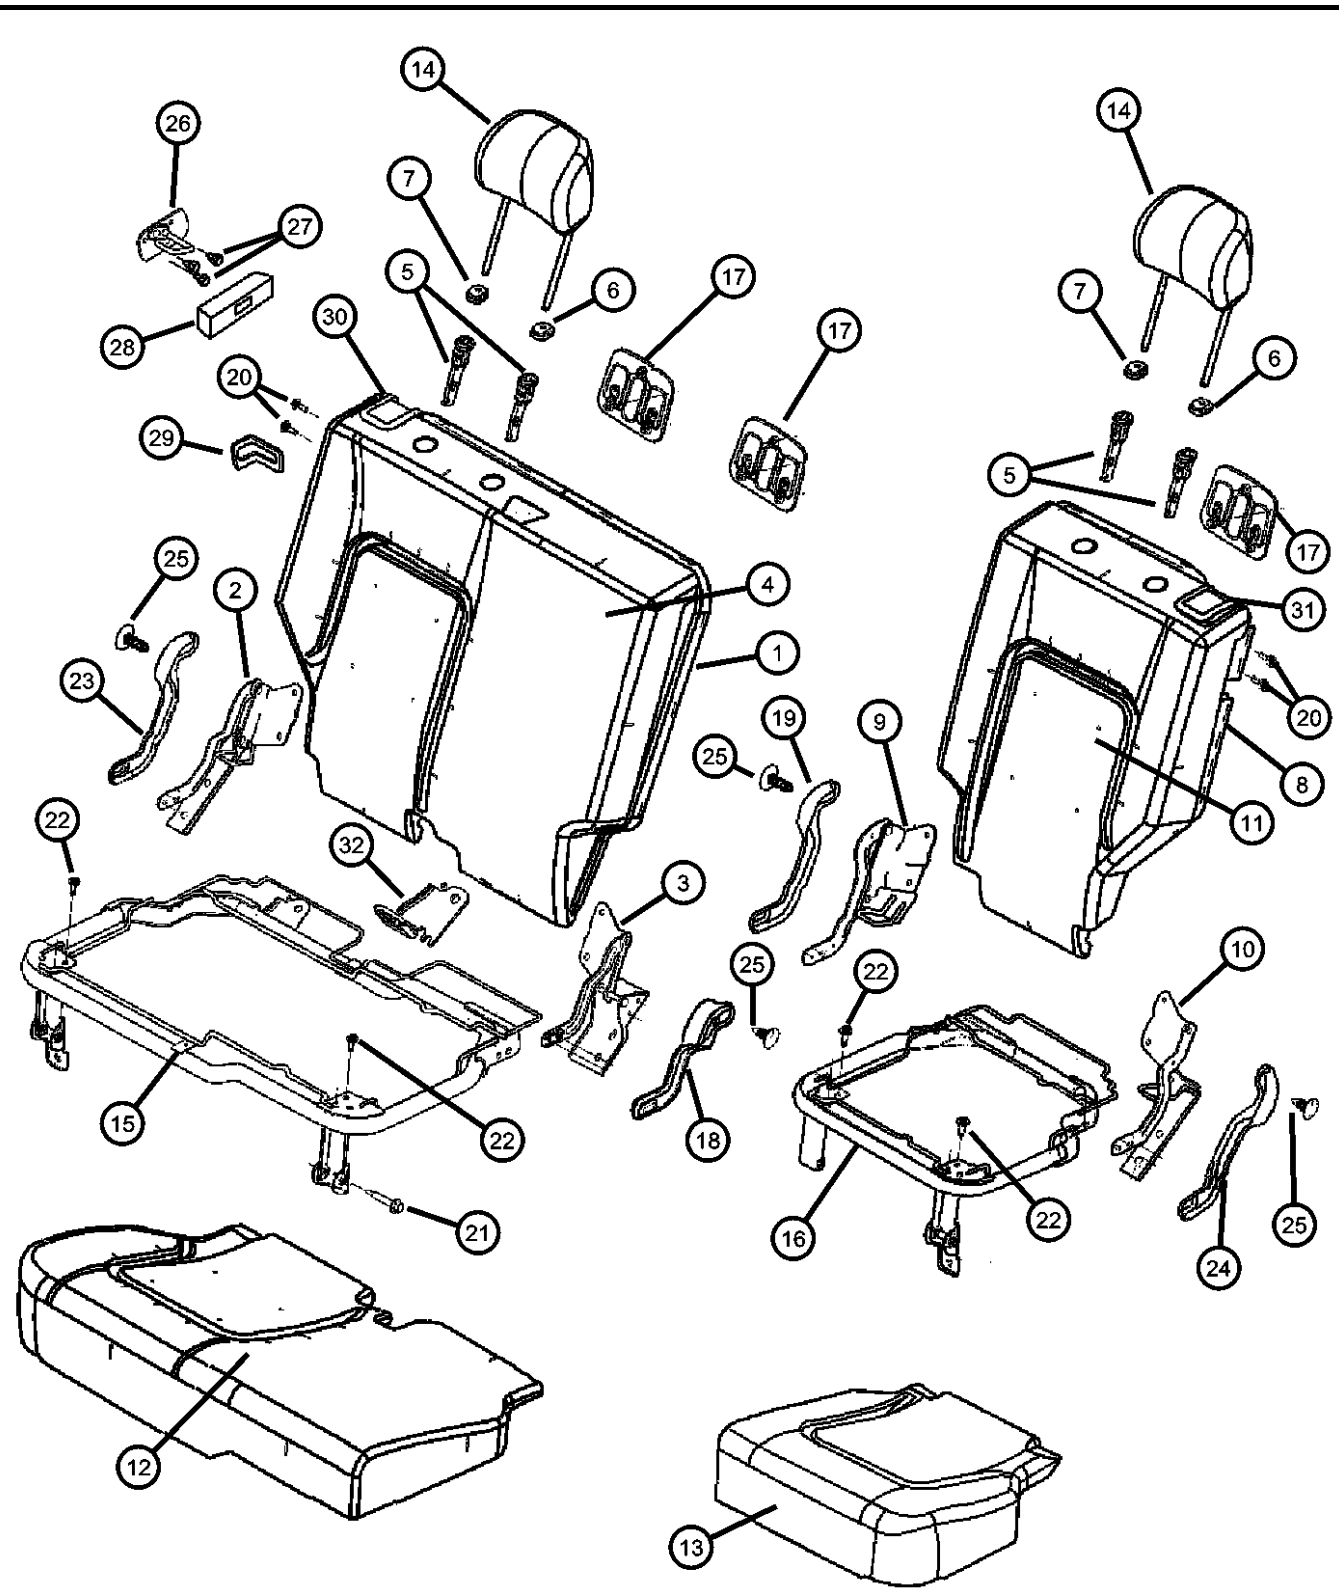


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	0YF871L5AA	1	J, T					*M5 [L5]	HEADREST, Rear
	0YF831DVAA	2	J, T					*M5 [DV]	
	0YF831L5AA	2	J, T					*M5 [L5]	
15	05072112AA	1	J, T					*M5	PANEL, Seat Cushion Base, 65%
16	05072113AA	1	J, T					*M5	PANEL, Seat Cushion Base, 35%
17									BEZEL, TETHER
18	0WB441DVAA	2	J, T					*M5 [DV]	
	0WB441L5AA	2	J, T					*M5 [L5]	
									COVER, Hinge, Right Inboard
19	0UZ45WL5AA	1	J, T					*M5 [L5]	
	0UZ45XDVAA	1	J, T					*M5 [DV]	
									COVER, Hinge, Left Inboard
20	0UZ46WL5AA	1	J, T					*M5 [L5]	
	0UZ46XDVAA	1	J, T					*M5 [DV]	
									COVER, Hinge, Left Outboard
21	05072520AA	2	J, T					*M5	BOLT, Pivot
22	05072519AA	1	J, T					*M5	BOLT, Seat
23	04761014	8	J, T					*M5	BOLT, Cushion To Adjuster
24	0UZ44WL5AA	1	J, T					*M5 [L5]	
	0UZ44XDVAA	1	J, T					*M5 [DV]	
									COVER, Hinge, Right Outboard
25	0UZ47WL5AA	1	J, T					*M5 [L5]	
	0UZ47XDVAA	1	J, T					*M5 [DV]	
									COVER, Hinge, Left Outboard
26	0WA51WL5AA	2	J, T					*M5 [L5]	
	0WA51XD-VAA	2	J, T					*M5 [DV]	
									PIN, Push
	55352816AB	1							STRIKER, Seat Back Latch Right

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Rear Seats, Trim Code [M5]  
Figure IKJ-610

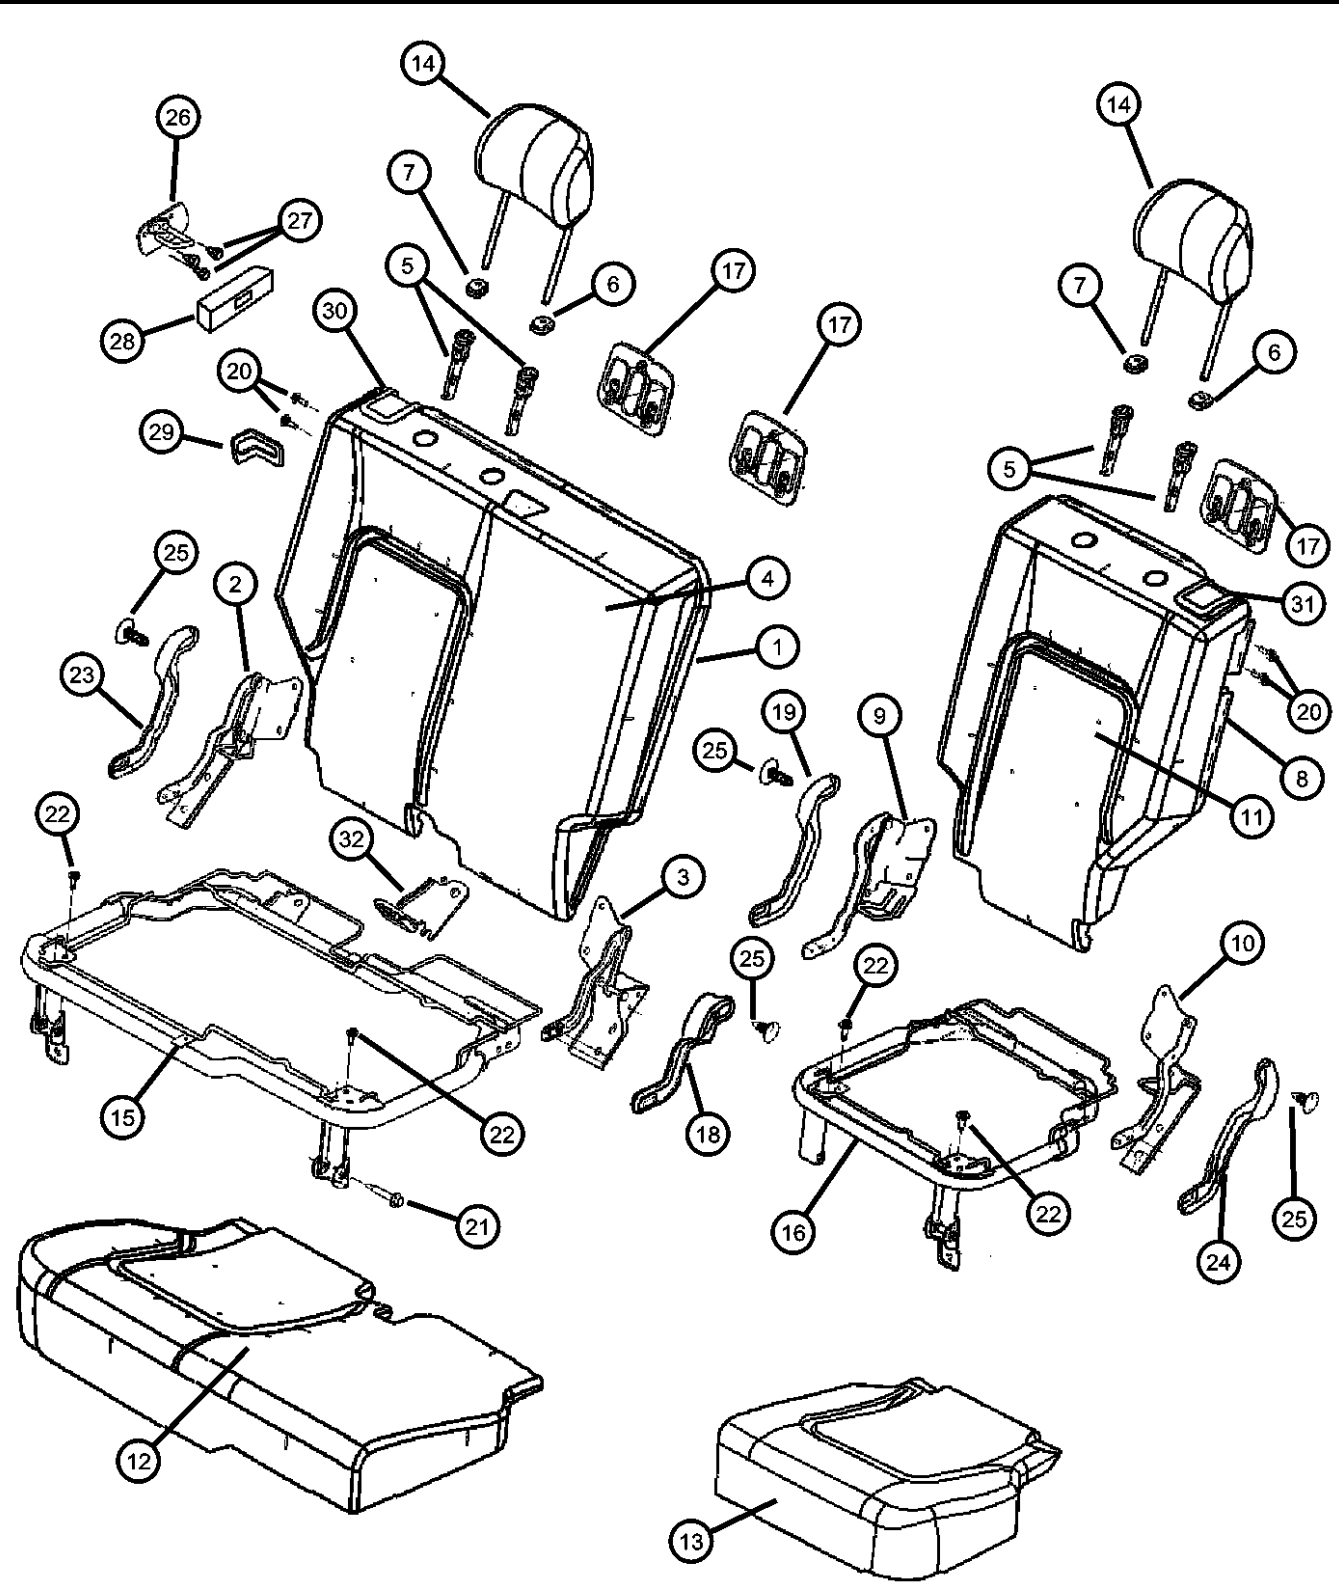

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	55352817AB	1							Left
27	06505434AA	6							SCREW, M8-1.25
28	55352839AC	2							BEZEL, Seat Latch
29									BEZEL, Seat Latch
	0WA92WL8AA	1	J, T					*M5	[L5]
	0WA92XD-VAA	1	J, T					*M5	[DV]
30									CONTROL, SEAT RELEASE, With Cable and Latch
	0XF781DVAB	1	J, T					*M5	[DV], 65% Side
	0XF781L5AB	1	J, T					*M5	[L5], 65% Side
31									CONTROL, SEAT RELEASE, With Latch
	0XF791DVAB	1	J, T					*M5	[DV], 35% Side
	0XF791L5AB	1	J, T					*M5	[L5], 35% Side
32	05134366AA	1	J, T					*M5	BRACKET, Child Tether Anchor

LIBERTY (KJ)


SERIES	LINE
P = Limited	J = LHD (4WD)
H = Sport	U = RHD (4WD)
M = Renegade	T = LHD (2WD)

BODY
74 = 4 Door (104.3 WB)

ENGINE	TRANSMISSION
ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
EK0 = All 3.7L	DBB = All Manual Transmissions
ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear Seat, Trim Code [DL]  
Figure IKJ-620

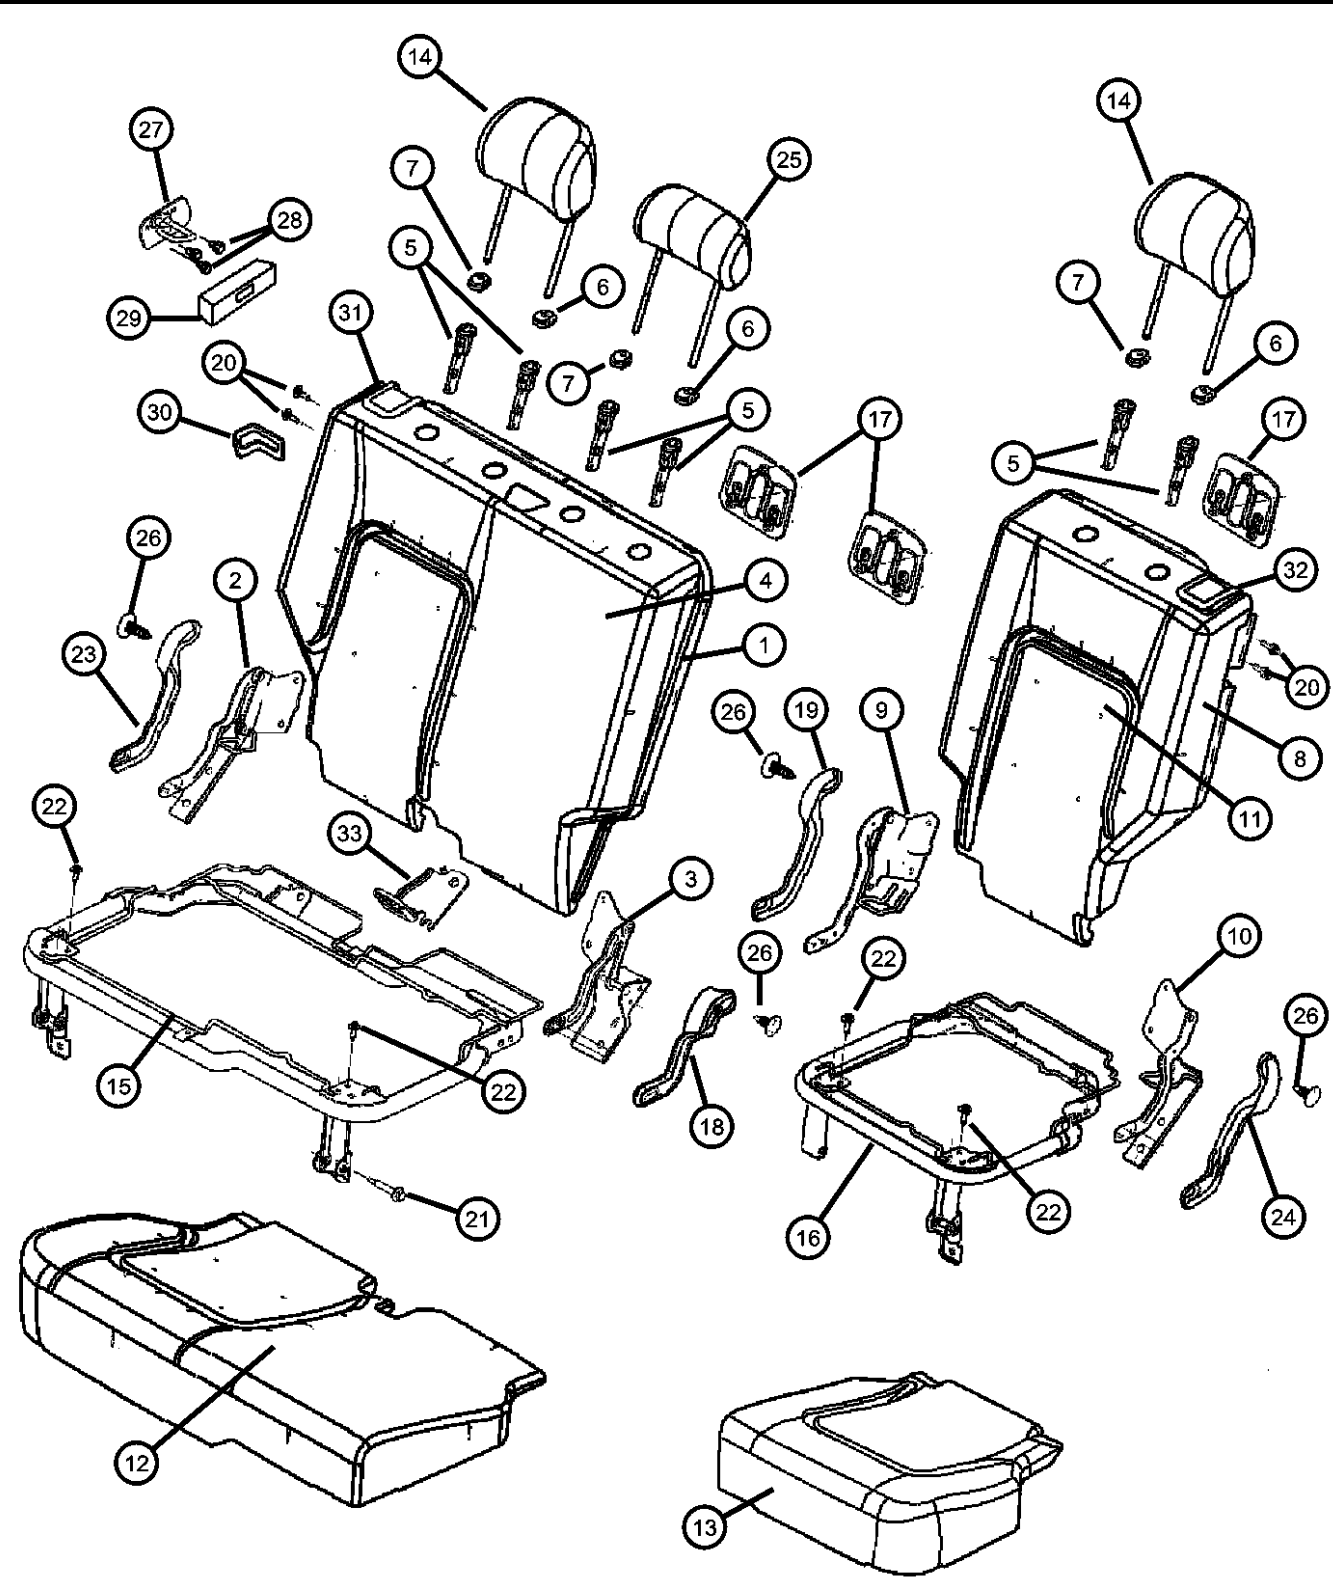


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	0WD101D2AA	1	J, T					*DL	SEAT BACK, Rear, 65% [D2], Up to 1/12/04 and After 3/2/04
	0WD101L2AA	1	J, T					*DL	[L2], Up to 1/12/04 and After 3/2/04
	0WD181DVAA	1	J, U					*DL	[DV], Export
	0WD181L2AA	1	J, U					*DL	[L2], Up to 1/12/04 and After 3/2/04, Export
	0ZD141D2AA	1	J, T					*DL	[D2], From 1/12/04 and Up to 3/2/04
	0ZD141L2AA	1	J, T					*DL	[L2], From 1/12/04 and Up to 3/2/04
	0ZD161L2AA	1	J, U					*DL	[L2], From 1/12/04 and Up to 3/2/04, Export
2	05071702AA	1	J, T					*DL	BRACKET AND HINGE, Rear Seat Back, 65% Right, Outboard
		1	J, U					*DL	Right, Outboard
3	05071703AA	1	J, U					*DL	BRACKET AND HINGE, Rear Seat Back, 65% Right, Inboard
		1	J, T					*DL	Right, Inboard
4	0WD161D2AA	1	J, T					*DL	COVER, Rear Seat Back, 65% [D2], Up to 1/12/04 and After 3/2/04
	0WD161L2AA	1	J, T					*DL	[L2], Up to 1/12/04 and After 3/2/04
	0WD191DVAA	1	J, U					*DL	[DV], Export
	0WD191L2AA	1	J, U					*DL	[L2], Up to 1/12/04 and After 3/2/04, Export
	0ZD181D2AA	1	J, T					*DL	[D2], From 1/12/04 and Up to 3/2/04
	0ZD181L2AA	1	J, T					*DL	[L2], From 1/12/04 and Up to 3/2/04
	0ZD201L2AA	1	J, U					*DL	[L2], From 1/12/04 and Up to 3/2/04
5	05066017AA	2	J, U						SLEEVE, Headrest
								*DL	Export

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Rear Seat, Trim Code [DL]  
Figure IKJ-620

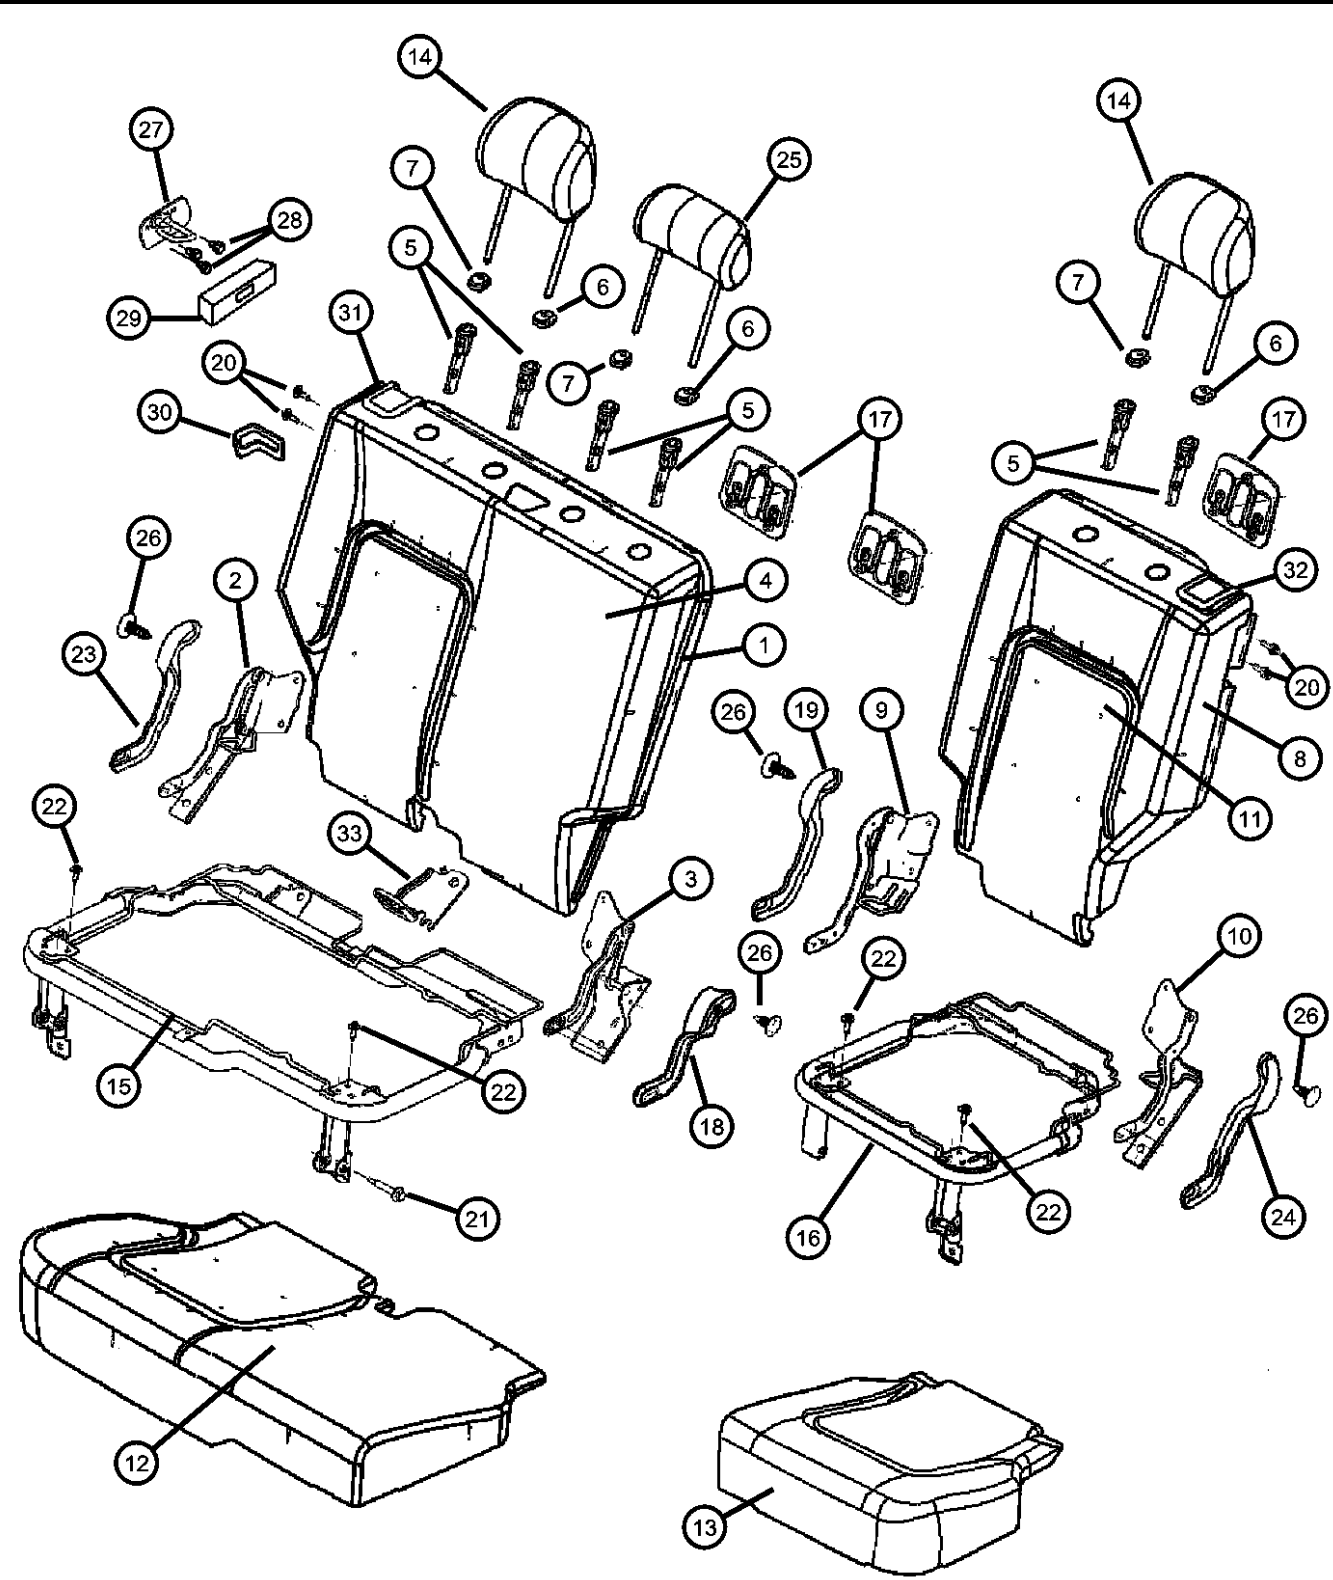

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
6		2	J, T					*DL	CAP, Headrest Adjuster, With Button
	0WA461DVAA	2	J, U					*DL	[DV], Export
	0WA461L2AA	1	J, U					*DL	[L2], Export
7		2	J, T					*DL	[D2, L2]
									CAP, Headrest Adjuster, Without Button
	0WA311DVAA	4	J, U					*DL	[DV], Export
8	0WA311L2AA	3	J, U					*DL	[L2], Export
		2	J, T					*DL	[D2, L2]
									SEAT BACK, Rear, 35%
9	0WD111D2AA	1	J, T					*DL	[D2], Up to 1/12/04 and After 3/2/04
	0WD111DVAA	1	J, U					*DL	[DV], Export
	0WD111L2AA	1	J, U					*DL	[L2], Up to 1/12/04 and After 3/2/04, Export
10		1	J, T					*DL	[L2], Up to 1/12/04 and After 3/2/04
	0ZD151D2AA	1	J, T					*DL	[D2], From 1/12/04 and Up to 3/2/04
	0ZD151L2AA	1	J, T					*DL	[L2], From 1/12/04 and Up to 3/2/04
11		1	J, U					*DL	[L2], From 1/12/04 and Up to 3/2/04, Export
									BRACKET AND HINGE, Rear Seat Back, 35%
	05071704AA	1	J, U					*DL	Left, Inboard, Export
12		1	J, T					*DL	Left, Inboard
									BRACKET AND HINGE, Rear Seat Back, 35%
	05071705AA	1	J, U					*DL	Left, Outboard, Export
13		1	J, T					*DL	Left, Outboard
									COVER, Rear Seat Back, 35%
	0WD171D2AA	1	J, T					*DL	[D2], Up to 1/12/04 and After 3/2/04

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				EDO = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Rear Seat, Trim Code [DL]  
Figure IKJ-620

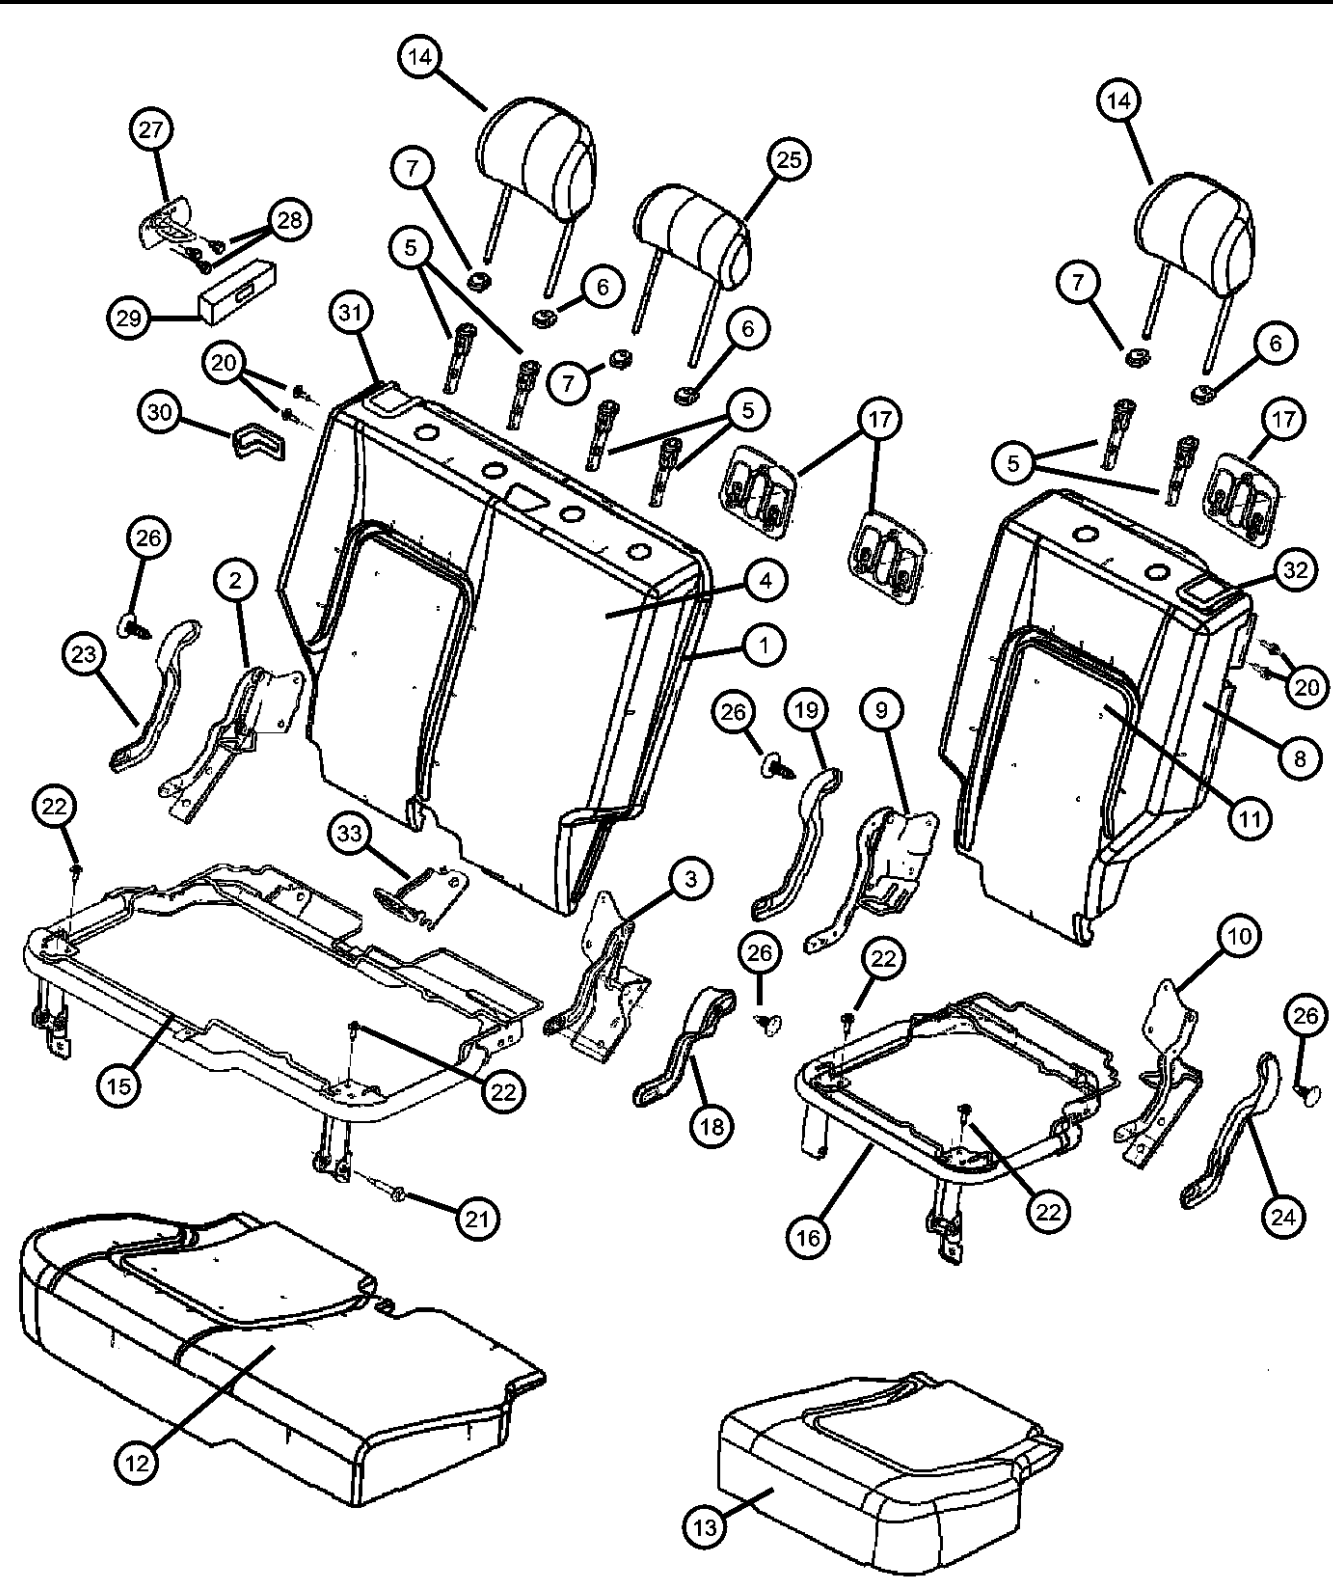


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	0WD171DVAA	1	J, U					*DL	[DV], Export
	0WD171L2AA	1	J, U					*DL	[L2], Up to 1/12/04 and After 3/2/04, Export
		1	J, T					*DL	[L2], Up to 1/12/04 and After 3/2/04
	0ZD191D2AA	1	J, T					*DL	[D2], From 1/12/04 and Up to 3/2/04
	0ZD191L2AA	1	J, T					*DL	[L2], From 1/12/04 and Up to 3/2/04
		1	J, U					*DL	[L2], From 1/12/04 and Up to 3/2/04
12									COVER AND PAD, Cushion, 65%
	0UZ261DVAA	1	J, U					*DL	[DV], Export
	0UZ261L2AA	1	J, U					*DL	[L2], Up to 1/12/04 and After 3/2/04, Export
		1	J, T					*DL	[D2], Up to 1/12/04 and After 3/2/04
		1	J, T					*DL	[L2], Up to 1/12/04 and After 3/2/04
	0ZD061L2AA	1	J, T					*DL	[D2], From 1/12/04 and Up to 3/2/04
		1	J, T					*DL	[L2], From 1/12/04 and Up to 3/2/04
		1	J, U					*DL	[L2], From 1/12/04 and Up to 3/2/04
13									COVER AND PAD, Cushion, 35%
	0UZ271DVAA	1	J, U					*DL	[DV], Export
	0UZ271L2AA	1	J, U					*DL	[L2], Up to 1/12/04 and After 3/2/04, Export
		1	J, T					*DL	[D2], Up to 1/12/04 and After 3/2/04
		1	J, T					*DL	[L2], Up to 1/12/04 and After 3/2/04
	0ZD071L2AA	1	J, T					*DL	[L2], From 1/12/04 and Up to 3/2/04
		1	J, T					*DL	[D2], From 1/12/04 and Up to 3/2/04
		1	J, U					*DL	[L2], From 1/12/04 and Up to 3/2/04

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16v	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear Seat, Trim Code [DL]  
Figure IKJ-620

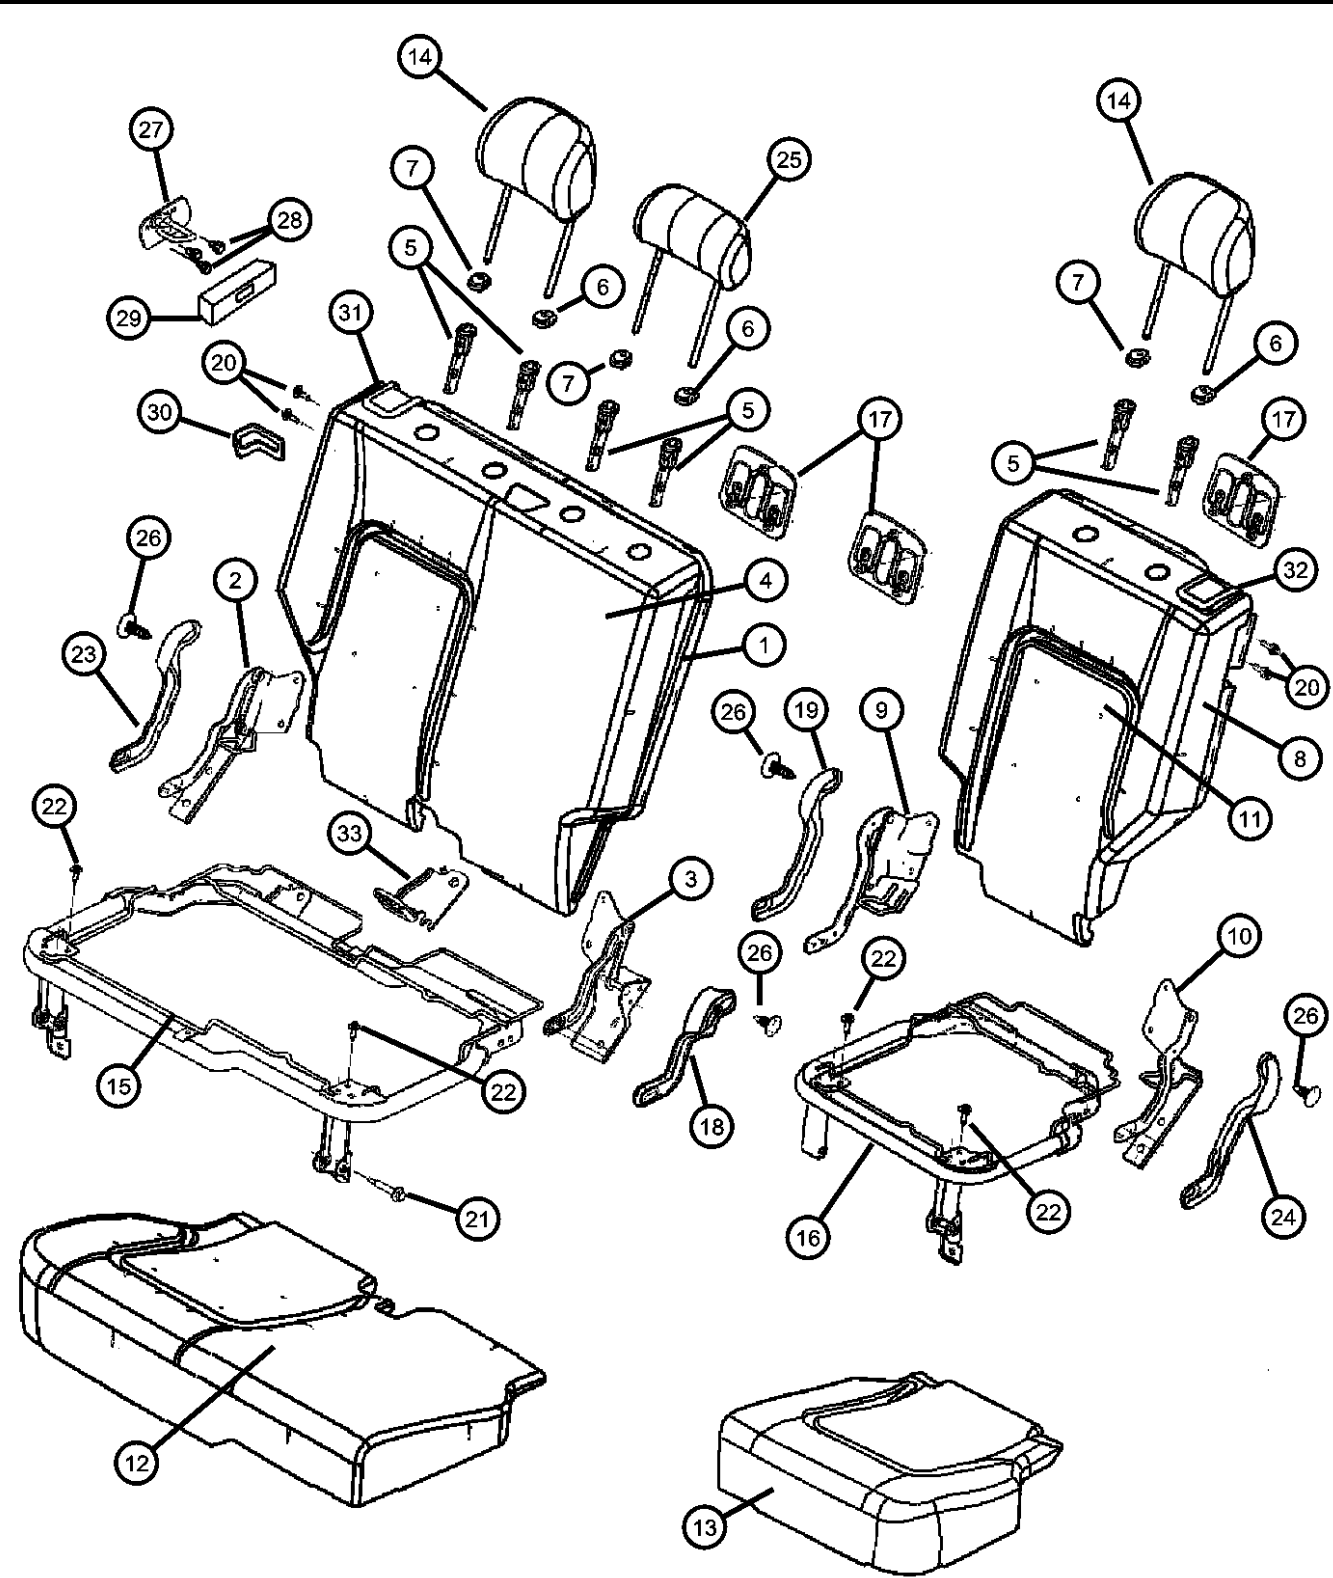


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	0XP641DVAA	1	J, U					*DL	HEADREST, Rear
	0XP641L2AA	2	J, T					*DL	[DV], Export
		2	J, U					*DL	[D2, L2],
								*DL	[L2], Export
15	05072112AA	1	J, U					*DL	PANEL, Seat Cushion Base, 65%
		1	J, T					*DL	Export
16	05072113AA	1	J, U					*DL	PANEL, Seat Cushion Base, 35%
		1	J, T					*DL	Export
17	0WB441DVAA	2	J, T					*DL	BEZEL, TETHER
		2	J, U					*DL	[D2]
	0WB441L2AA	1	J, U					*DL	[DV], Export
	0WB441L5AA	2	J, T					*DL	[L2], Export
								*DL	[L2]
18	0UZ45TL2AA	1	J, T					*DL	COVER, Hinge
		1	J, U					*DL	[D2, L2]
	0UZ45XDVAA	1	J, U					*DL	[L2], Export
								*DL	[DV], Export
19	0UZ46TL2AA	1	J, U					*DL	COVER, Hinge
		1	J, T					*DL	[L2], Export
	0UZ46XDVAA	1	J, U					*DL	[D2, L2],
								*DL	[DV], Export
20	05072520AA	2	J, U					*DL	BOLT, Pivot
		2	J, T					*DL	Export
21	05072519AA	1	J, U					*DL	BOLT, Seat
		1	J, T					*DL	Export
22								*DL	BOLT, Cushion To Adjuster

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16v	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
			EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Rear Seat, Trim Code [DL]  
Figure IKJ-620

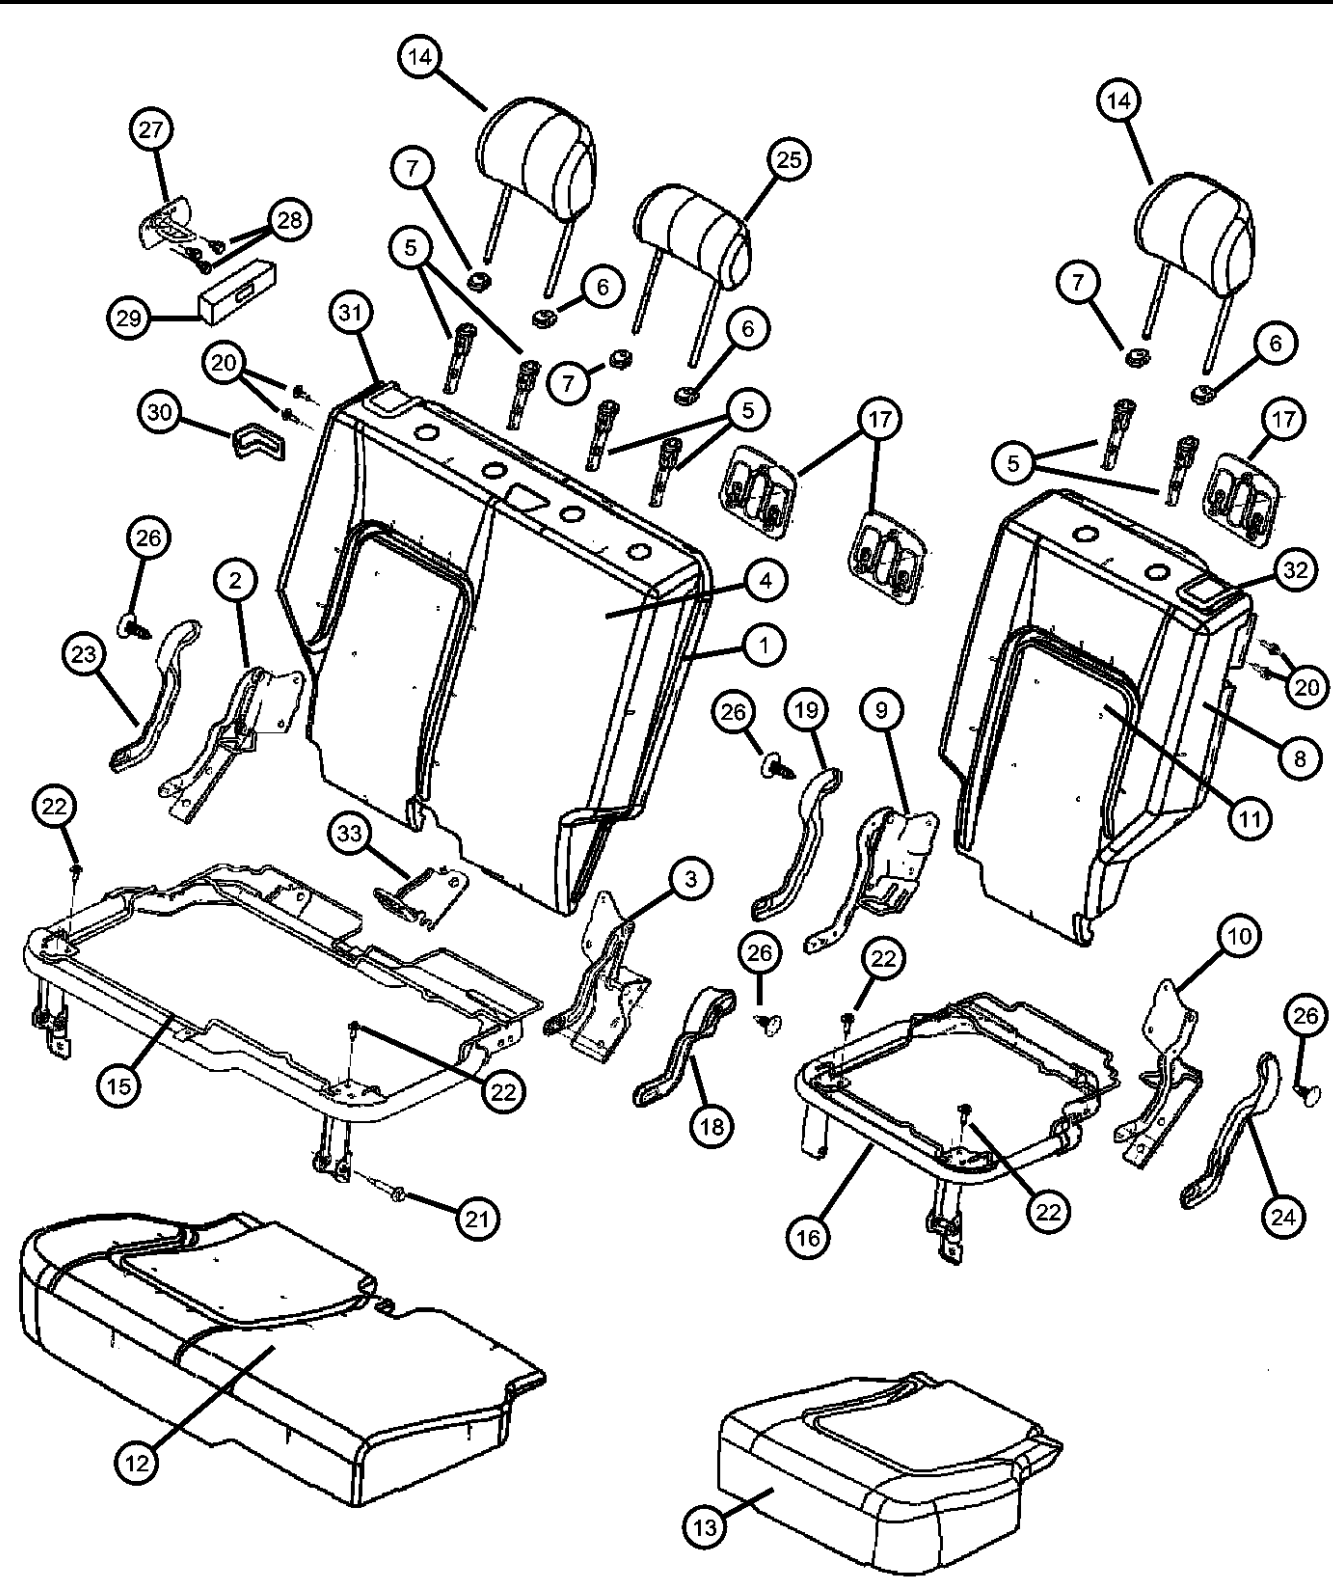


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
23	04761014	8	J, U					*DL	Export
		8	J, T					*DL	
									COVER, Hinge
	0UZ44TL2AA	1	J, U					*DL	[L2], Export
24		1	J, T					*DL	[D2, L2],
	0UZ44XDVAA	1	J, U					*DL	[DV], Export
									COVER, Hinge
	0UZ47TL2AA	1	J, U					*DL	[L2], Export
25		1	J, T					*DL	[D2, L2],
	0UZ47XDVAA	1	J, U					*DL	[DV], Export
									HEADREST, Rear
	0WA481DVAA	1	J, U					*DL	[DV], Export
26	0WA481L2AA	1	J, U					*DL	[L2], Export
									PIN, Push
	0WA511L2AA	2	J, U					*DL	[L2], Export
		2	J, T					*DL	[D2, L2],
27	0WA51XD-VAA	2	J, U					*DL	[DV], Export
									STRIKER, Seat Back Latch
	55352816AB	1							Right
	55352817AB	1							Left
28	06505434AA	6							SCREW, M8-1.25
29	55352839AC	2							BEZEL, Seat Latch
30									BEZEL, Seat Latch
	0WA92WL8AA	1	J, U					*DL	[L2], Export
		1	J, T					*DL	[L2],
	0WA92XD-VAA	1	J, U					*DL	[DV], Export
31		1	J, T					*DL	[D2]
									CONTROL, SEAT RELEASE, With Cable and Latch

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Rear Seat, Trim Code [DL]  
Figure IKJ-620

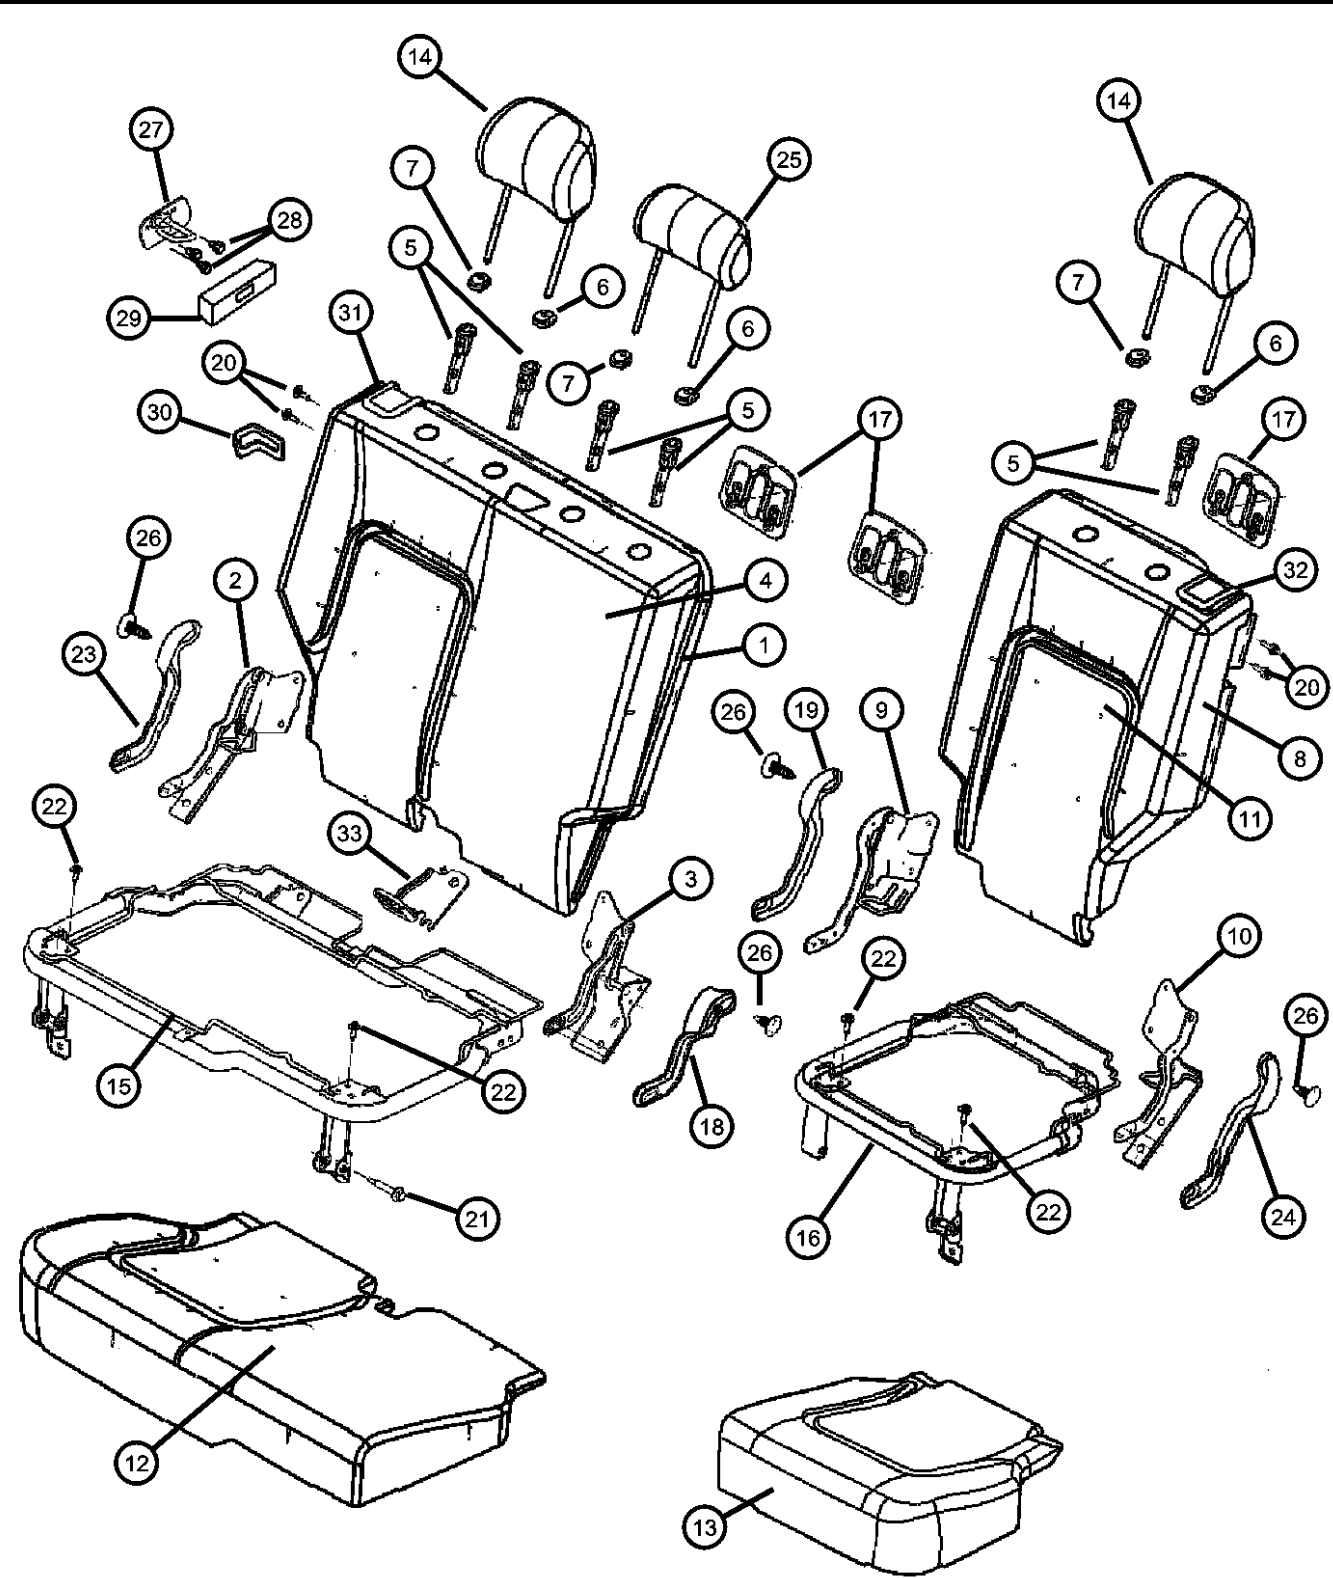


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	0XF781DVAB	1	J, U					*DL	[DV], Export
	0XF781L2AB	1	J, T					*DL	[D2, L2],
		1	J, U					*DL	[L2], Export
32									CONTROL, SEAT RELEASE, With Latch
	0XF791DVAB	1	J, U					*DL	[DV], Export
	0XF791L2AB	1	J, T					*DL	[D2, L2],
		1	J, U					*DL	[L2], Export
33									BRACKET, Child Tether Anchor
	05134366AA	1	J, T					*DL	
		1	J, U					*DL	

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear Seat, Trim Code [XJ]  
Figure IKJ-630

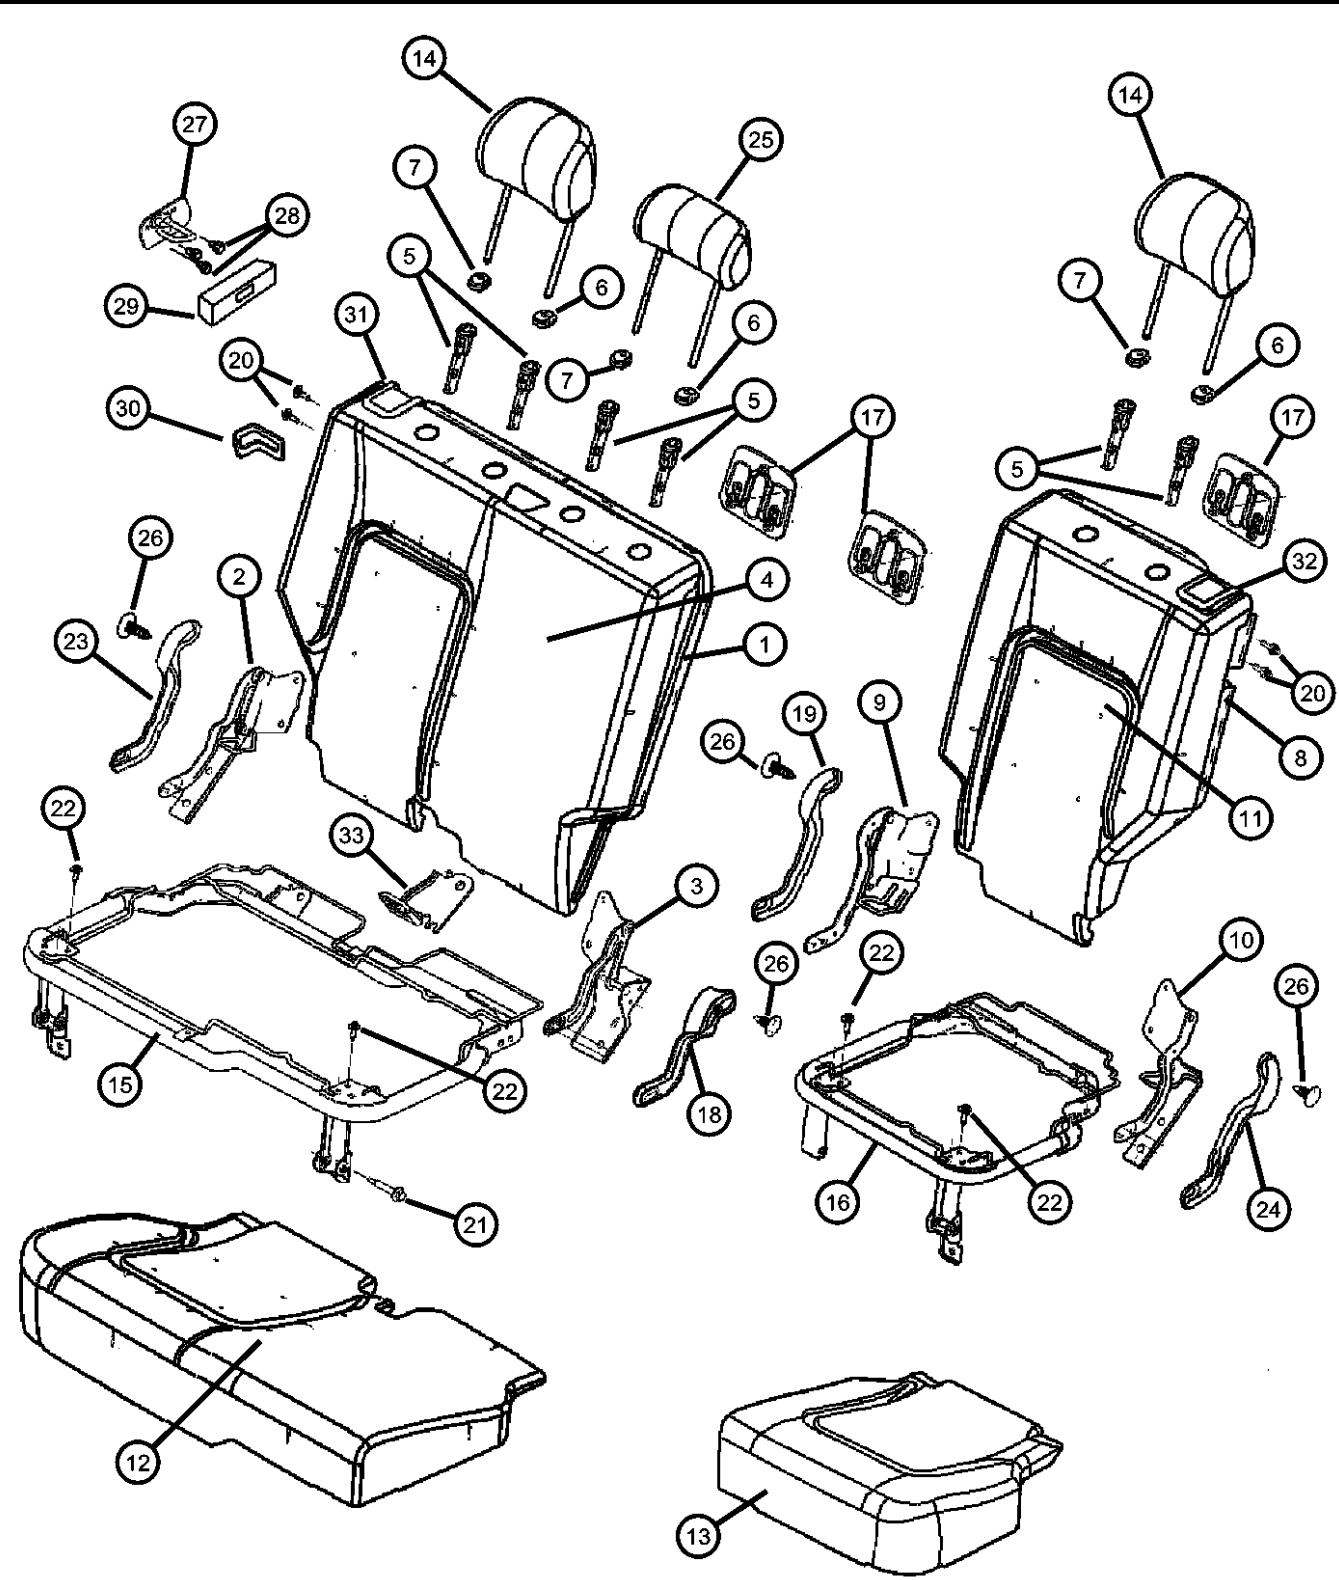


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	0YG881DVAA	1	J, T					*XJ	SEAT BACK, Rear, 65% [DV]
	0YG881L5AA	1	J, T					*XJ	[L5]
	0YG921DVAA	1	J, U					*XJ	[DV], Export
	0YG921L5AA	1	J, U					*XJ	[L5], Export
2	05071702AA	1	J, T					*XJ	BRACKET AND HINGE, Rear Seat Back, 65% Right, Outboard
		1	J, U					*XJ	Right, Outboard
3	05071703AA	1	J, U					*XJ	BRACKET AND HINGE, Rear Seat Back, 65% Right, Inboard
		1	J, T					*XJ	, Inboard
4	0YG861DVAA	1	J, T					*XJ	COVER, Rear Seat Back, 65% [DV]
	0YG861L5AA	1	J, T					*XJ	[L5]
	0YG901DVAA	1	J, U					*XJ	[DV], Export
	0YG901L5AA	1	J, U					*XJ	[L5], Export
5	05066017AA	2	J, T					*XJ	SLEEVE, Headrest
		4	J, U					*XJ	
6	0WA461DVAA	1	J, T					*XJ	CAP, Headrest Adjuster, With Button [DV]
		1	J, U					*XJ	[DV], Export
		1	J, T					*XJ	[L5]
		1	J, U					*XJ	[L5], Export
7	0WA311DVAA	3	J, U					*XJ	CAP, Headrest Adjuster, Without Button [DV], Export
		1	J, T					*XJ	[DV],
		3	J, U					*XJ	[L5], Export
		1	J, T					*XJ	[L5]

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DOHC 16v SMPI	DDD = Transmission - 5-Speed HD	Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v	Turbo Diesel	DG4 = Transmission-Multi-Speed	Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl	Turbo Diesel	DG6 = Transmission-4-Spd.	Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel		DGQ = Transmission-5-Spd Automatic	5-45RFE
				EK0 = All 3.7L		DBB = All Manual Transmissions	
				ED0 = All 2.4L		DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Rear Seat, Trim Code [XJ]  
Figure IKJ-630

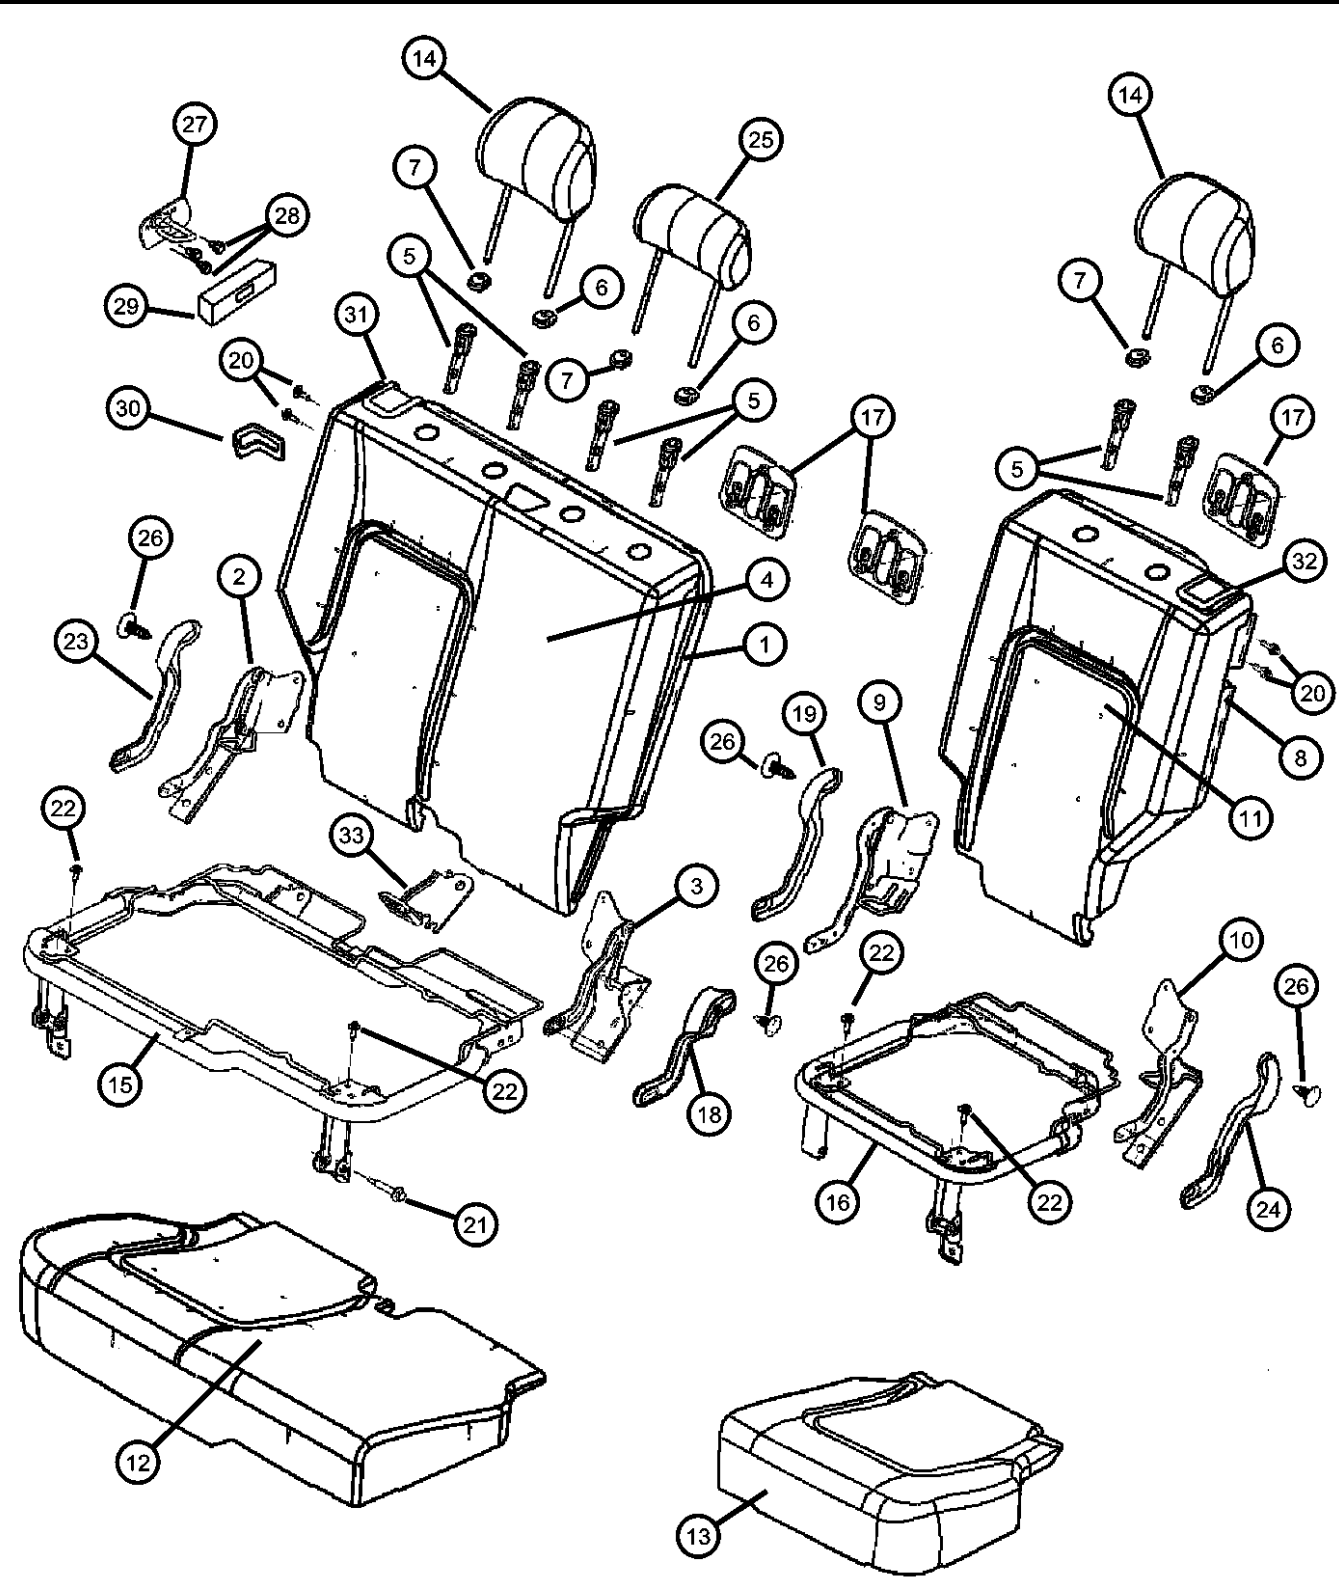


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
8	0YG891DVAA	1	J, T					*XJ	SEAT BACK, Rear, 35% [DV]
		1	J, U					*XJ	[DV], Export
	0YG891L5AA	1	J, T					*XJ	[L5]
		1	J, U					*XJ	[L5], Export
9	05071704AA	1	J, U					*XJ	BRACKET AND HINGE, Rear Seat Back, 35% Left, Inboard
		1	J, T					*XJ	Left, Inboard
10	05071705AA	1	J, U					*XJ	BRACKET AND HINGE, Rear Seat Back, 35% Left, Outboard
		1	J, T					*XJ	Left, Outboard
11	0YG871DVAA	1	J, T					*XJ	COVER, Rear Seat Back, 35% [DV]
		1	J, U					*XJ	[DV]
	0YG871L5AA	1	J, T					*XJ	[L5]
		1	J, U					*XJ	[L5]
12	0YG521DVAA	1	J, T					*XJ	COVER AND PAD, Cushion, 65% [DV]
		1	J, U					*XJ	[DV]
	0YG521L5AA	1	J, U					*XJ	[L5]
		1	J, T					*XJ	[L5]
13	0YG531DVAA	1	J, T					*XJ	COVER AND PAD, Cushion, 35% [DV]
		1	J, U					*XJ	[DV]
	0YG531L5AA	1	J, T					*XJ	[L5]
		1	J, U					*XJ	[L5]
14	0XP751DVAA	2	J, T					*XJ	HEADREST, Rear [DV]
		2	J, U					*XJ	[DV]

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Rear Seat, Trim Code [XJ]  
Figure IKJ-630

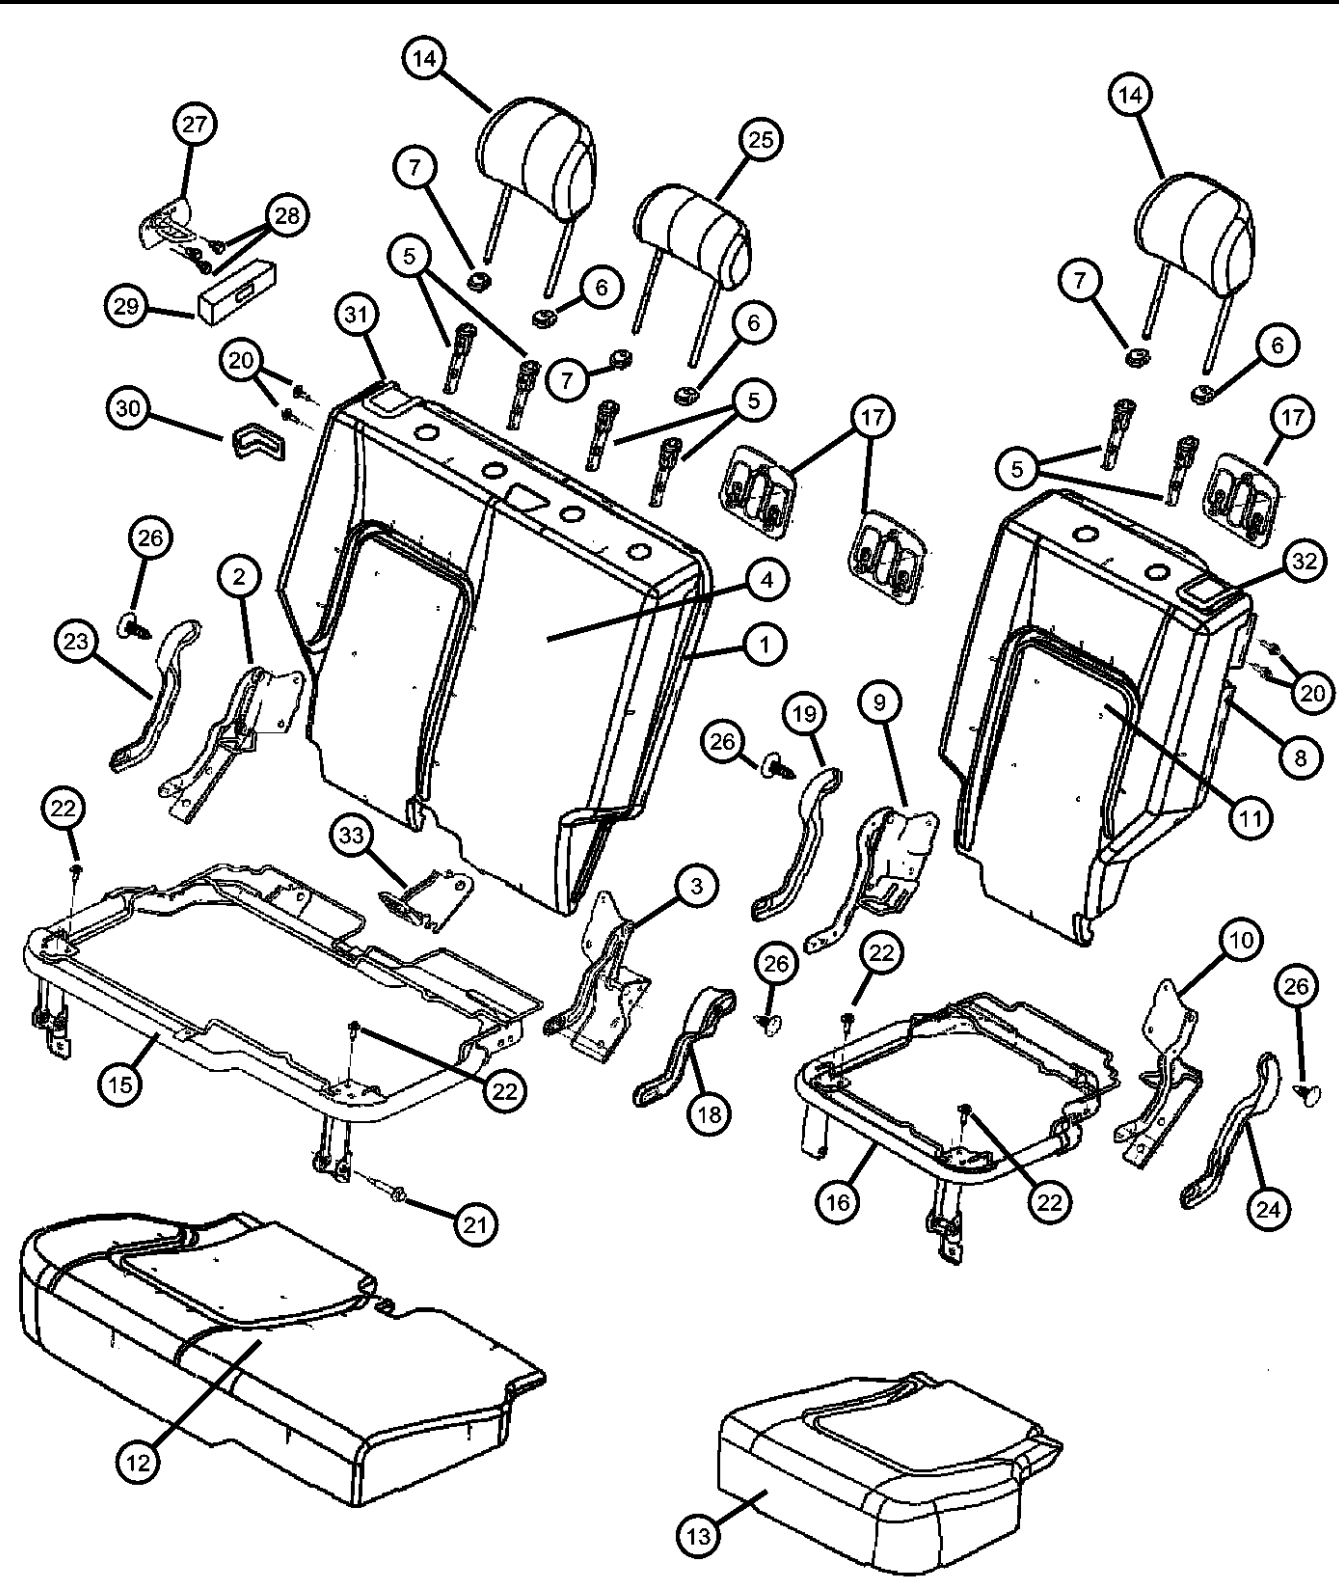


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
15	0XP751L5AA	2	J, T					*XJ	[L5]
		2	J, U					*XJ	[L5]
									PANEL, Seat Cushion Base, 65%
	05072112AA	1	J, U					*XJ	
16		1	J, T					*XJ	
	05072113AA	1	J, U					*XJ	PANEL, Seat Cushion Base, 35%
17		1	J, T					*XJ	
	0WB441DVAA	2	J, T					*XJ	BEZEL, TETHER
		2	J, U					*XJ	[DV]
	0WB441L5AA	2	J, T					*XJ	[L5]
18		2	J, U					*XJ	[L5]
	0UZ45WL5AA	1	J, T					*XJ	COVER, Hinge, Right Inboard
		1	J, U					*XJ	[L5]
	0UZ45XDVAA	1	J, U					*XJ	[DV]
19		1	J, T					*XJ	[DV]
	0UZ46WL5AA	1	J, T					*XJ	COVER, Hinge, Left Inboard
		1	J, U					*XJ	[L5]
	0UZ46XDVAA	1	J, T					*XJ	[DV]
20		1	J, U					*XJ	[DV]
	05072520AA	2	J, T					*XJ	BOLT, Pivot
		2	J, U					*XJ	
21	05072519AA	1	J, U					*XJ	BOLT, Seat
		1	J, T					*XJ	
22									BOLT, Cushion To Adjuster

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EKO = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Rear Seat, Trim Code [XJ]  
Figure IKJ-630

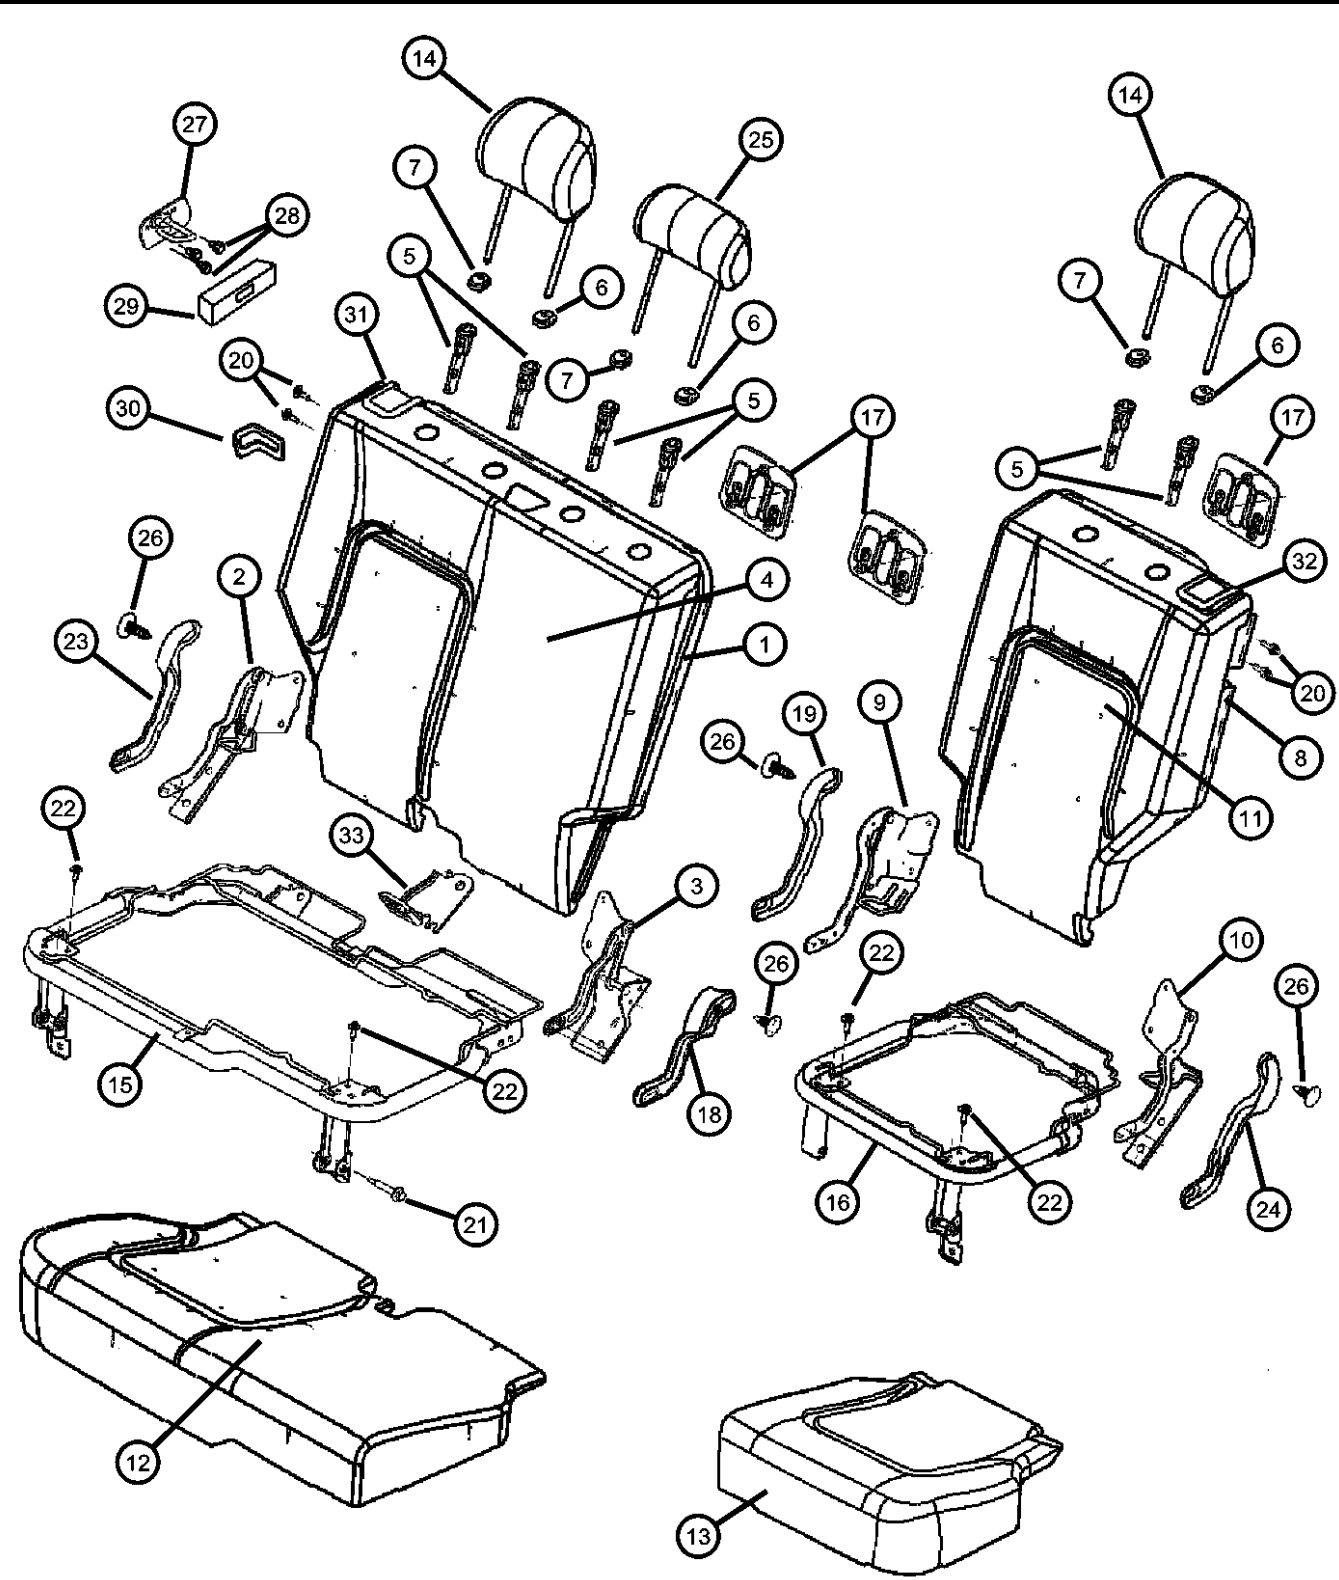


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
23	04761014	8	J, T					*XJ	
		8	J, U					*XJ	
									COVER, Hinge, Right Outboard
	0UZ441DVAA	1	J, T					*XJ	[DV]
		1	J, U					*XJ	[DV]
24	0UZ441L5AA	1	J, U					*XJ	[L5]
		1	J, T					*XJ	[L5]
									COVER, Hinge, Left Outboard
	0UZ47WL5AA	1	J, T					*XJ	[L5]
		1	J, U					*XJ	[L5]
25	0UZ47XDVAA	1	J, T					*XJ	[DV]
		1	J, U					*XJ	[DV]
									HEADREST, Rear
	0XP761DVAA	1	J, U					*XJ	[DV]
	0XP761L5AA	1	J, U					*XJ	[L5]
26									PIN, Push
	0WA51WL5AA	2	J, T					*XJ	[L5]
		2	J, U					*XJ	[L5]
	0WA51XD-VAA	2	J, T					*XJ	[DV]
		2	J, U					*XJ	[DV]
27									STRIKER, Seat Back Latch
	55352816AB	1							Right
	55352817AB	1							Left
28	06505434AA	6							SCREW, M8-1.25
29	55352839AC	2							BEZEL, Seat Latch
30									BEZEL, Seat Latch
	0WA921DVAA	1	J, T					*XJ	[DV]
	0WA921L5AA	1	J, T					*XJ	[L5]
	0WA92WL8AA	2	J, U					*XJ	[L5]

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16v	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part


Rear Seat, Trim Code [XJ]  
Figure IKJ-630

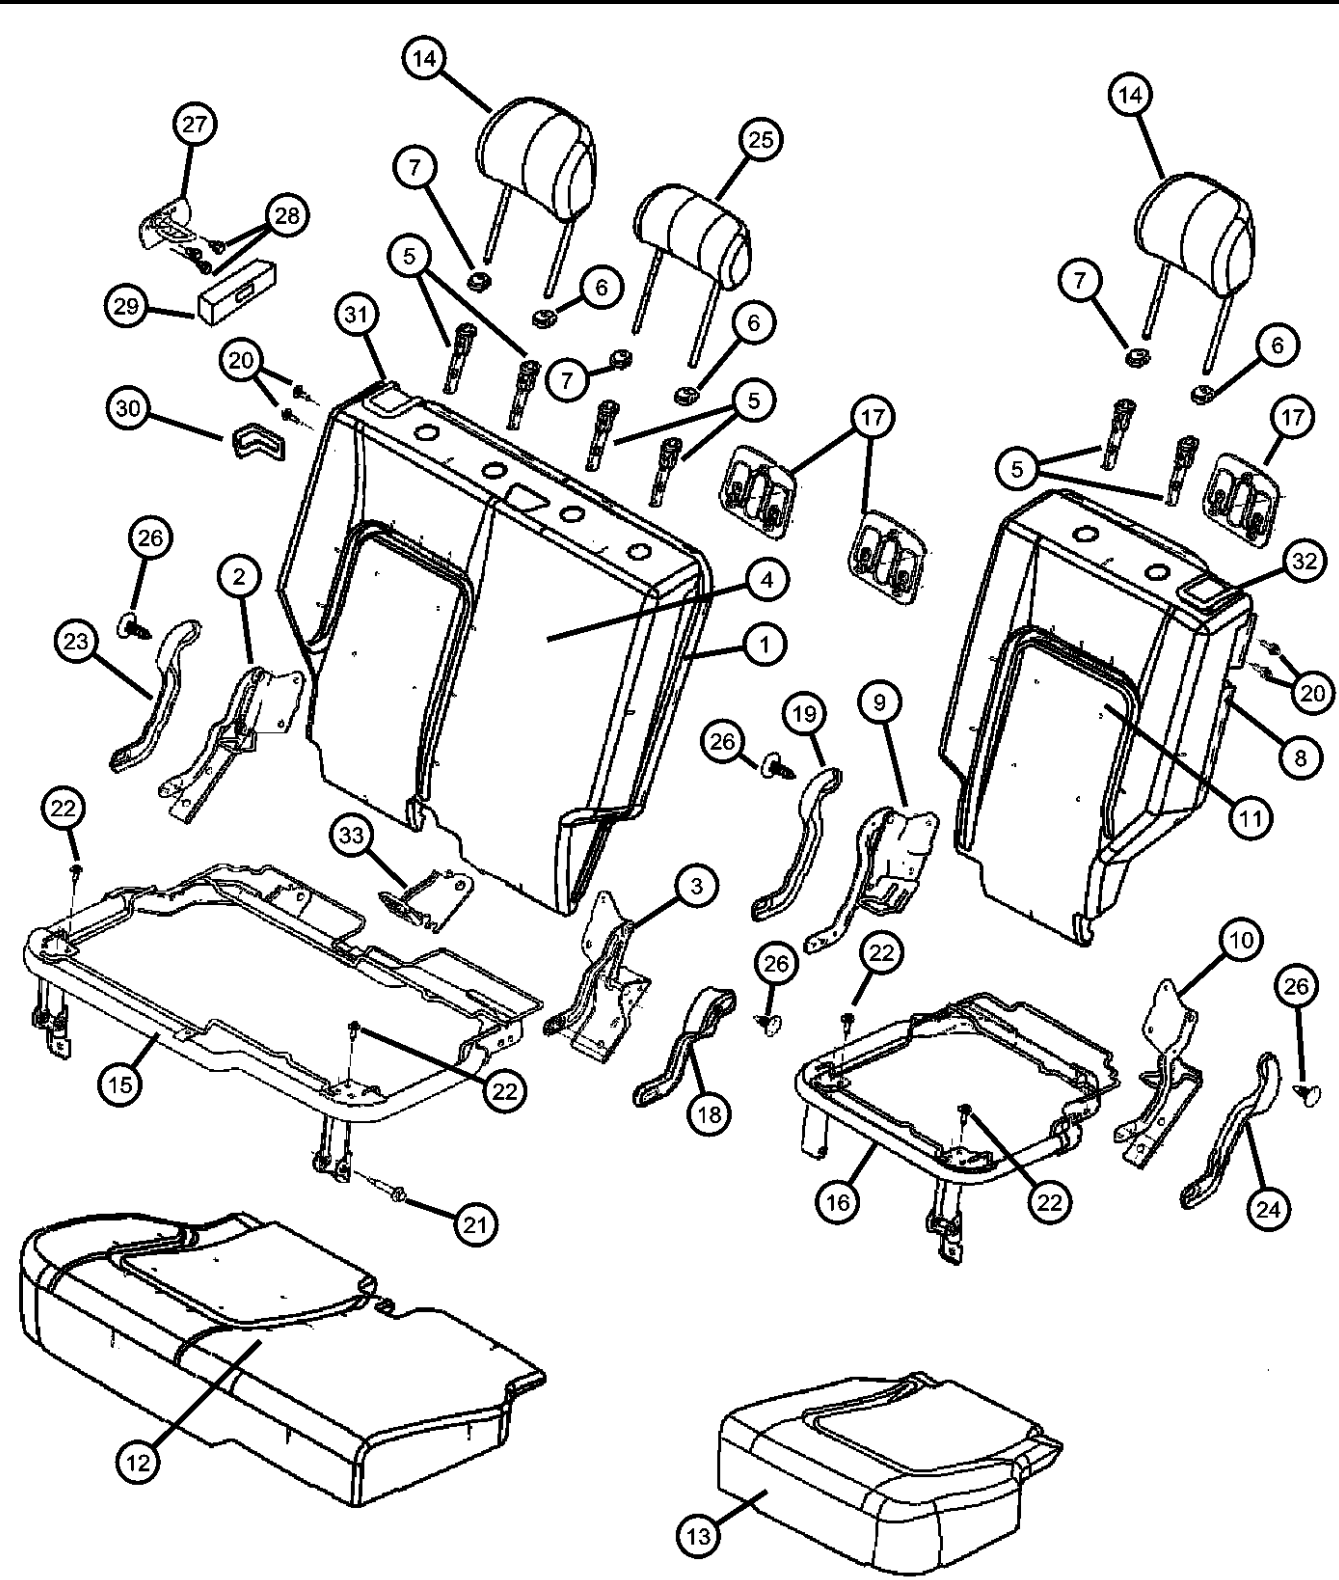

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
31	0WA92XD-VAA	2	J, U					*XJ [DV]	CONTROL, SEAT RELEASE, With Cable and Latch
	0XF781DVAB	1	J, T					*XJ [DV]	
	0XF781L5AB	1	J, U					*XJ [L5]	
		1	J, T					*XJ [L5]	
32	0XF791DVAB	1	J, T					*XJ [DV]	CONTROL, SEAT RELEASE, With Latch
	0XF791L5AB	1	J, U					*XJ [DV]	
		1	J, T					*XJ [L5]	
		1	J, U					*XJ [L5]	
33	05134366AA	1	J, U					*XJ	BRACKET, Child Tether Anchor
		1	J, T					*XJ	

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Rear Seat, Trim Code [E7]  
Figure IKJ-640

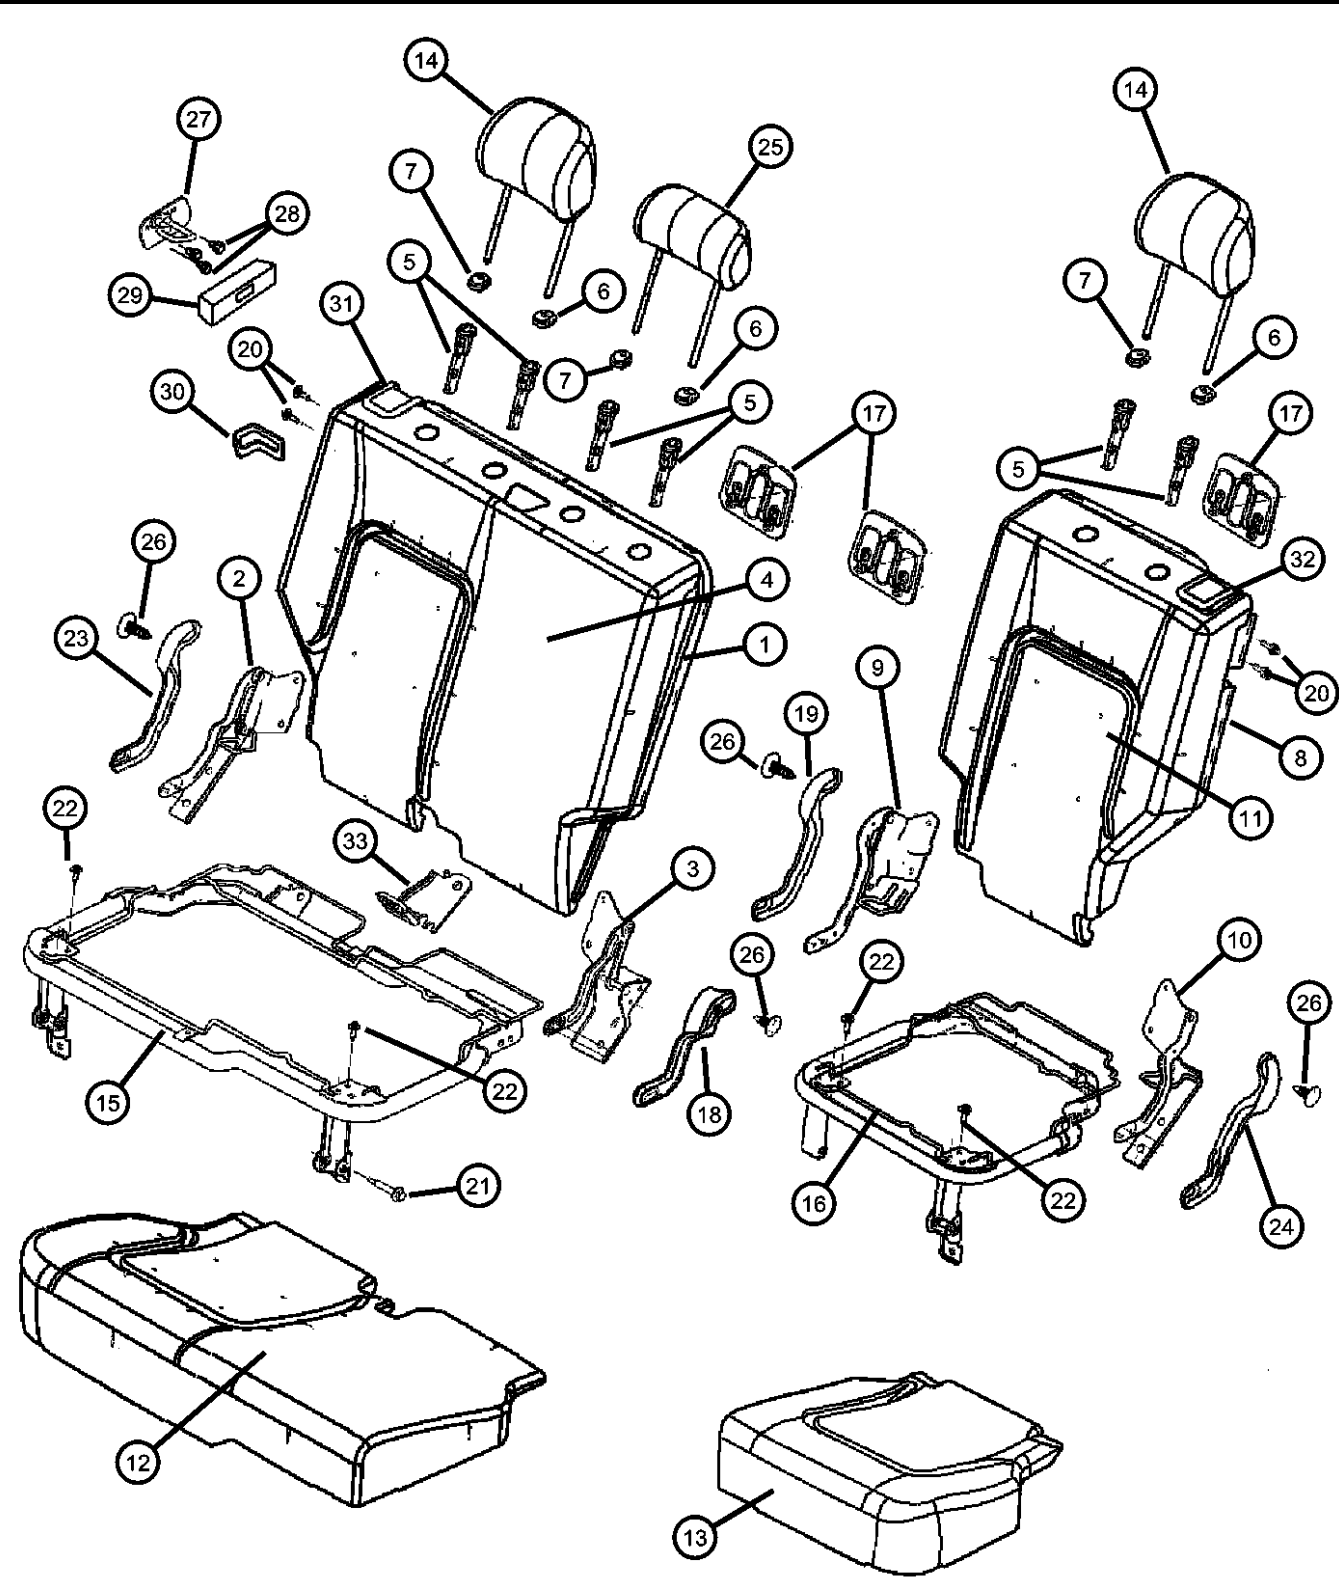


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	0YF841DVAA	1	J, U					*E7 [DV]	SEAT BACK, Rear, 65%
	0YF841L5AA	1	J, U					*E7 [L5]	
2	05071702AA	1	J, U					*E7	BRACKET AND HINGE, Rear Seat Back, 65%Right, Outboard
3	05071703AA	1	J, U					*E7	BRACKET AND HINGE, Rear Seat Back, 65%Right, Inboard
4	0YF821DVAA	1	J, U					*E7 [DV]	COVER, Rear Seat Back, 65%
	0YF821L5AA	1	J, U					*E7 [L5]	
5	05066017AA	4	J, U					*E7	SLEEVE, Headrest
6	0WA461DVAA	2	J, U					*E7 [DV]	CAP, Headrest Adjuster, With Button
	0WA461L5AA	2	J, U					*E7 [L5]	
7	0WA311DVAA	3	J, U					*E7 [DV]	CAP, Headrest Adjuster, Without Button
	0WA311L5AA	3	J, U					*E7 [L5]	
8	0YF811DVAA	1	J, U					*E7 [DV]	SEAT BACK, Rear, 35%
	0YF811L5AA	1	J, U					*E7 [L5]	
9	05071704AA	1	J, U					*E7	BRACKET AND HINGE, Rear Seat Back, 35%Left, Inboard
10	05071705AA	1	J, U					*E7	BRACKET AND HINGE, Rear Seat Back, 35%Left, Outboard
11	0YF771DVAA	1	J, U					*E7 [DV]	COVER, Rear Seat Back, 35%
	0YF771L5AA	1	J, U					*E7 [L5]	
12	0YF861DVAA	1	J, U					*E7 [DV]	COVER AND PAD, Cushion, 65%
	0YF861L5AA	1	J, U					*E7 [L5]	
13	0YF871DVAA	1	J, U					*E7 [DV]	COVER AND PAD, Cushion, 35%

LIBERTY (KJ)	LINE	BODY	ENGINE	TRANSMISSION
SERIES				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6 Turbo Diesel	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Rear Seat, Trim Code [E7]  
Figure IKJ-640

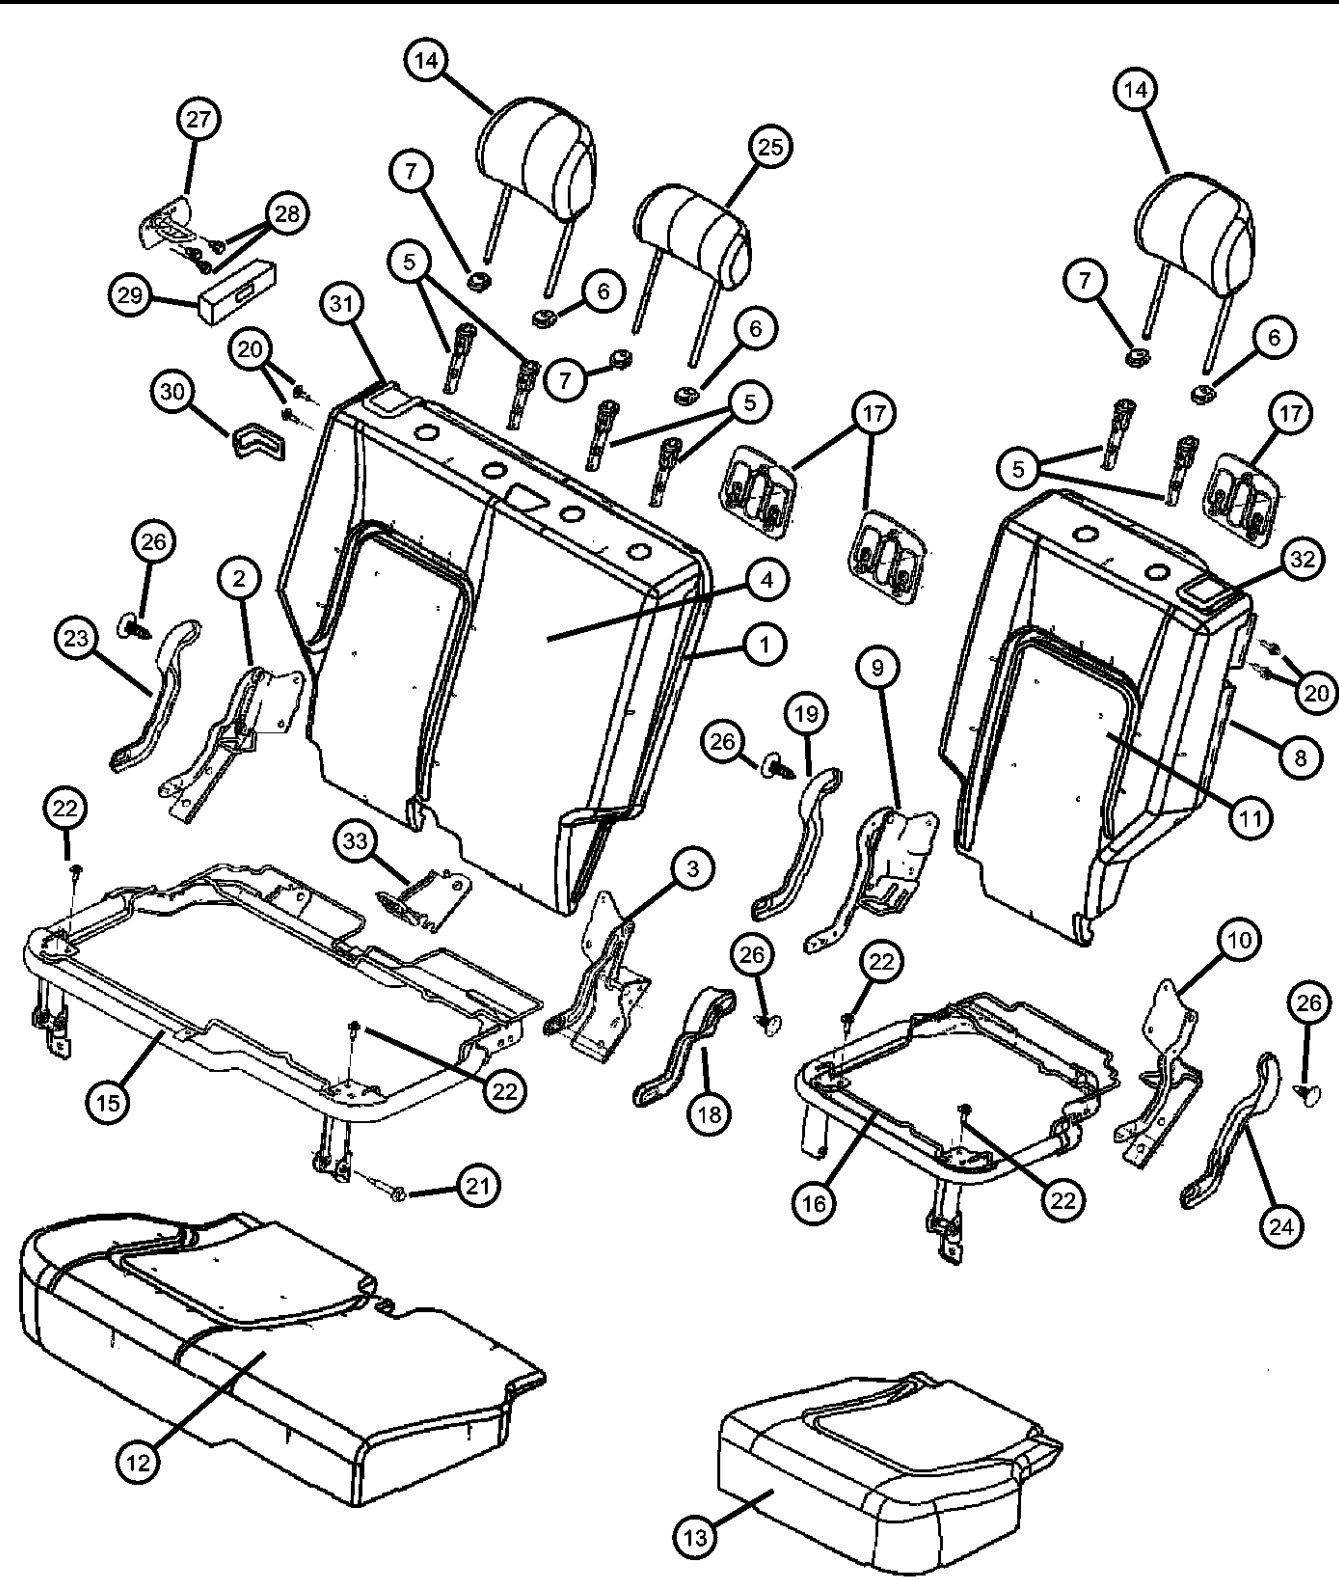


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	0YF871L5AA	1	J, U					*E7 [L5]	HEADREST, Rear
	0YF831DVAA	2	J, U					*E7 [DV]	
	0YF831L5AA	2	J, U					*E7 [L5]	
15	05072112AA	1	J, U					*E7	PANEL, Seat Cushion Base, 65%
16	05072113AA	1	J, U					*E7	PANEL, Seat Cushion Base, 35%
17									BEZEL, TETHER
	0WB441DVAA	2	J, U					*E7 [DV]	
	0WB441L5AA	2	J, U					*E7 [L5]	
18									COVER, Hinge
	0UZ45WL5AA	1	J, U					*E7 [L5], Right, Inboard	
	0UZ45XDVAA	1	J, U					*E7 [DV], Right, Inboard	
19									COVER, Hinge
	0UZ46WL5AA	1	J, U					*E7 [L5], Left, Inboard	
	0UZ46XDVAA	1	J, U					*E7 [DV], Left, Inboard	
20	05072520AA	2	J, U					*E7	BOLT, Pivot
21	05072519AA	1	J, U					*E7	BOLT, Seat
22	04761014	8	J, U					*E7	BOLT, Cushion To Adjuster
23									COVER, Hinge
	0UZ441DVAA	1	J, U					*E7 [DV], Right, Outboard	
	0UZ441L5AA	1	J, U					*E7 [L5], Right, Outboard	
24									COVER, Hinge
	0UZ47WL5AA	1	J, U					*E7 [L5], Left, Outboard	
	0UZ47XDVAA	1	J, U					*E7 [DV], Left, Outboard	
25									HEADREST, Rear
	0YF781DVAA	1	J, U					*E7 [DV]	
	0YF781L5AA	1	J, U					*E7 [L5]	
26									PIN, Push
	0WA51WL5AA	2	J, U					*E7 [L5]	

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16v	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear Seat, Trim Code [E7]  
Figure IKJ-640

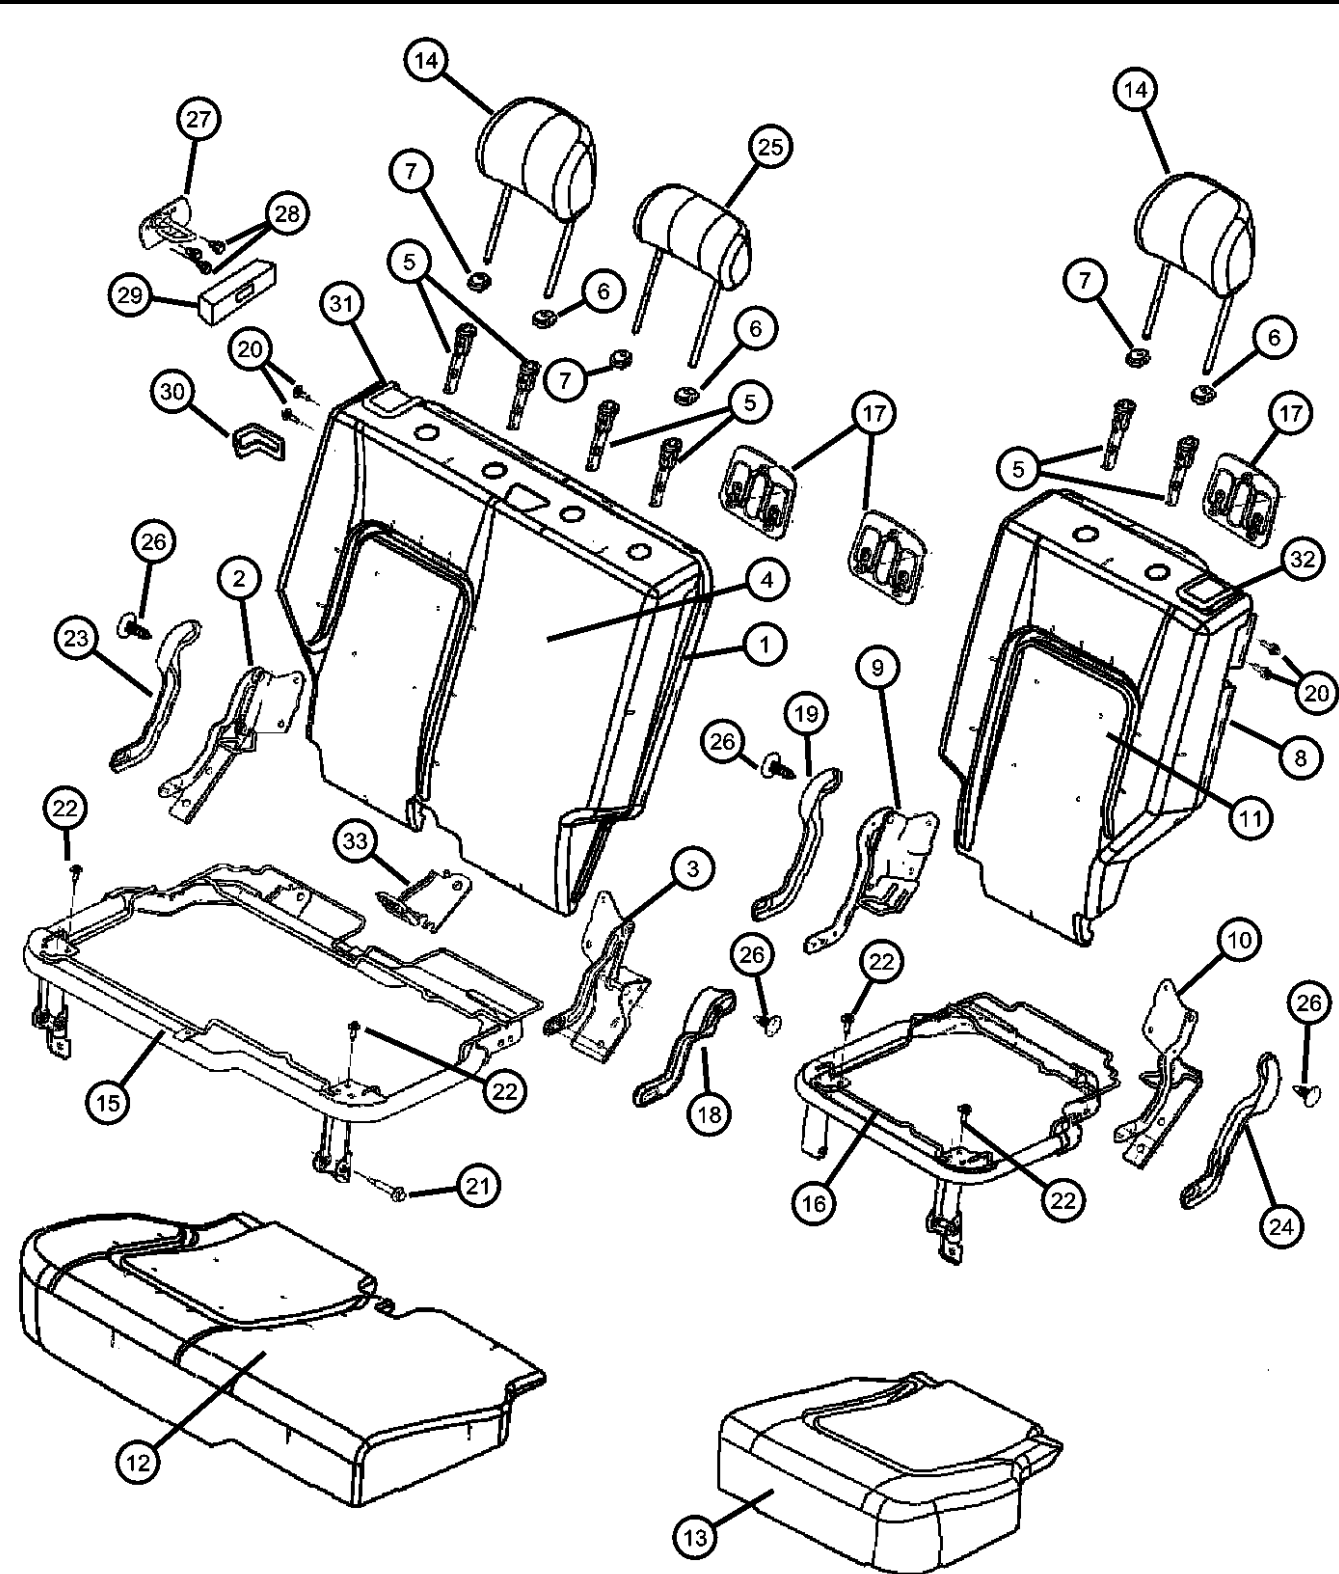


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
27	OWA51XD-VAA	2	J, U					*E7 [DV]	STRIKER, Seat Back Latch
	55352816AB	1							Right
	55352817AB	1							Left
28	06505434AA	6							SCREW, M8-1.25
29	55352839AC	2							BEZEL, Seat Latch
30									BEZEL, Seat Latch
31	OWA921DVAA	1	J, U					*E7 [DV]	CONTROL, SEAT RELEASE, With Cable and Latch
	OWA921L5AA	1	J, U					*E7 [L5]	
	0XF781DVAB	1	J, U					*E7 [DV]	CONTROL, SEAT RELEASE, With Latch
	0XF781L5AB	1	J, U					*E7 [L5]	
32	0XF791DVAB	1	J, U					*E7 [DV]	CONTROL, SEAT RELEASE, With Latch
	0XF791L5AB	1	J, U					*E7 [L5]	
33	05134366AA	1	J, U					*E7	BRACKET, Child Tether Anchor

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear Seat, Trim Code [J5]  
Figure IKJ-650

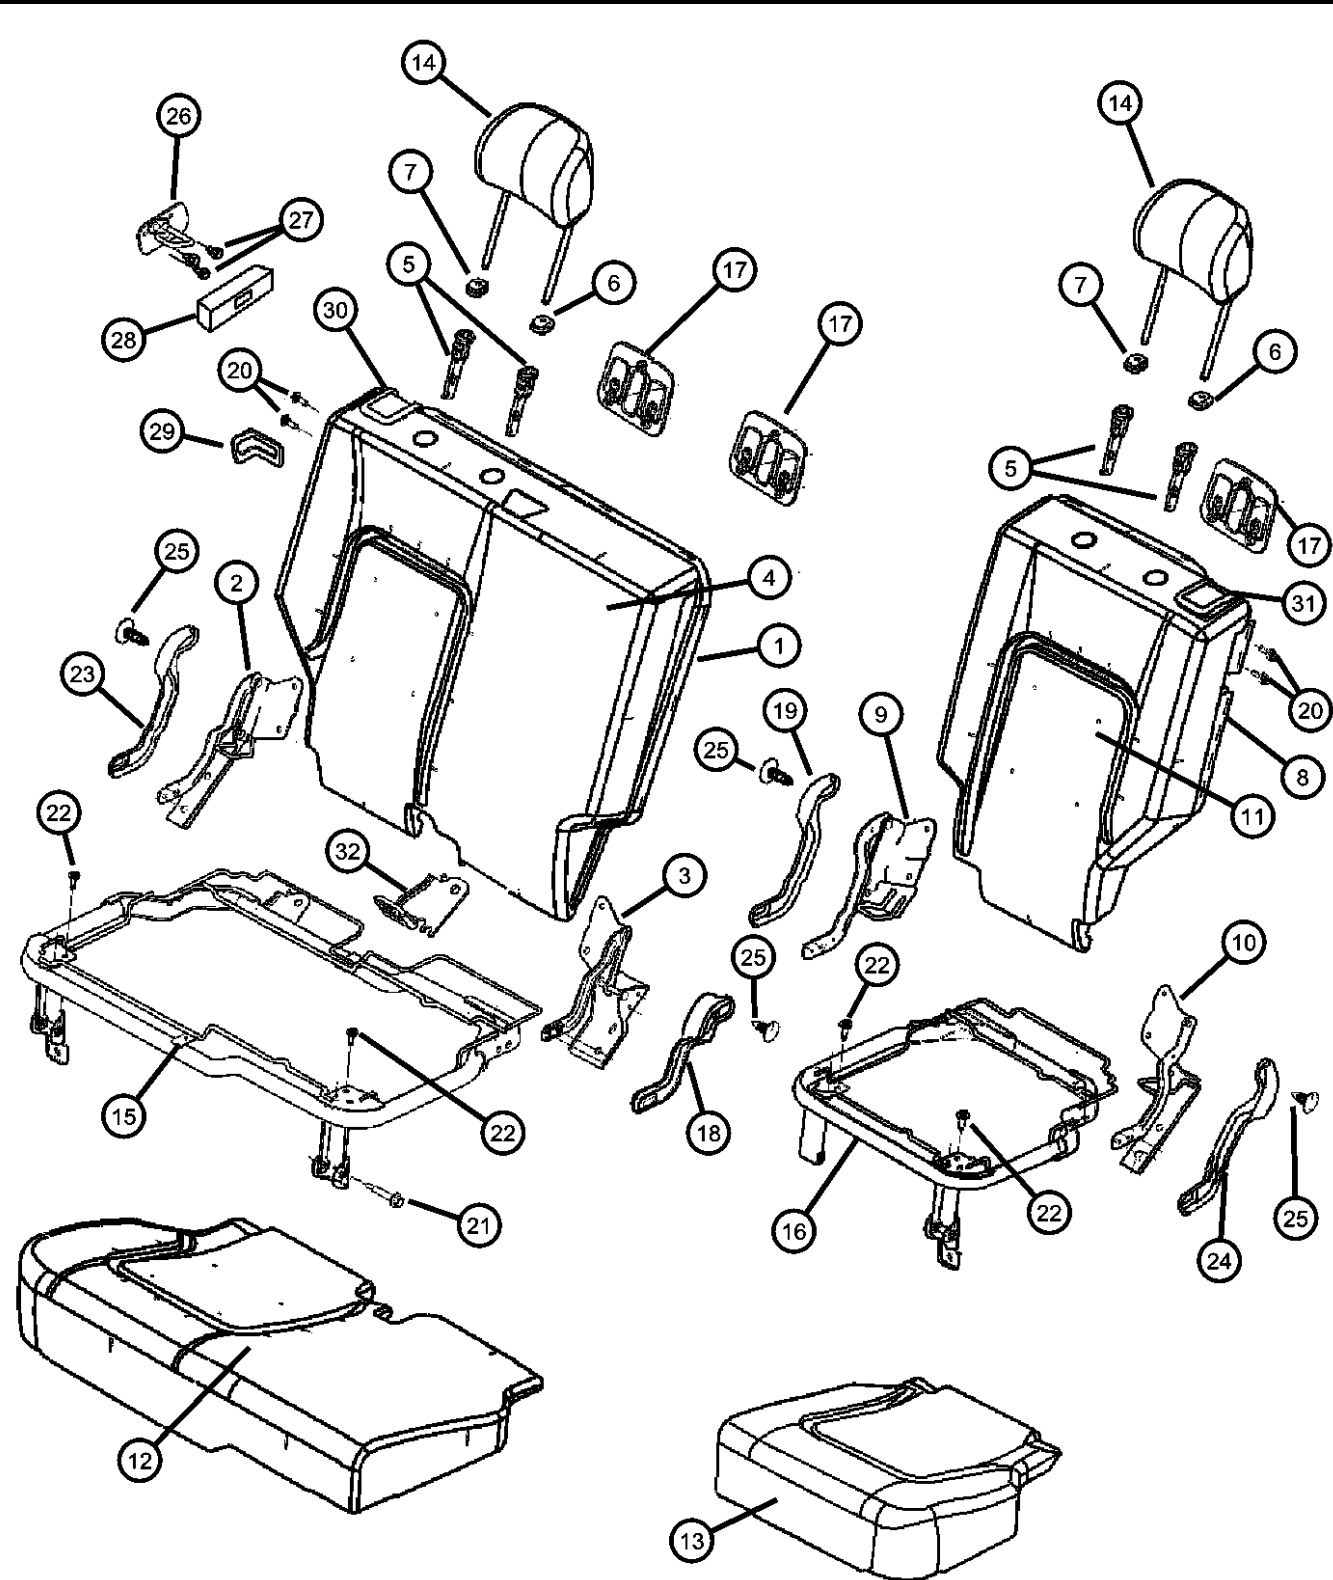


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	0XG601DVAA	1						*J5	SEAT BACK, Rear, 65% [DV]
	0XG601L5AA	1						*J5	[L5]
	05071702AA	1						*J5	BRACKET AND HINGE, Rear Seat Back, 65%Right, Outboard
2	05071703AA	1						*J5	BRACKET AND HINGE, Rear Seat Back, 65%Right, Inboard
3	0XG581DVAA	1						*J5	COVER, Rear Seat Back, 65% [DV]
	0XG581L5AA	1						*J5	[L5]
	05066017AA	2						*J5	SLEEVE, Headrest
4	0WA461DVAA	1						*J5	CAP, Headrest Adjuster, With Button [DV]
	0WA461L5AA	1						*J5	[L5]
	0WA311DVAA	1						*J5	CAP, Headrest Adjuster, Without Button [DV]
	0WA311L5AA	1						*J5	[L5]
5	0XG611DVAA	1						*J5	SEAT BACK, Rear, 35% [DV]
	0XG611L5AA	1						*J5	[L5]
	05071704AA	1						*J5	BRACKET AND HINGE, Rear Seat Back, 35%Left, Inboard
6	05071705AA	1						*J5	BRACKET AND HINGE, Rear Seat Back, 35%Left, Outboard
	0XG591DVAA	1						*J5	COVER, Rear Seat Back, 35% [DV]
	0XG591L5AA	1						*J5	[L5]
7	0XG541DVAA	1						*J5	COVER AND PAD, Cushion, 65% [DV]
	0XG541L5AA	1						*J5	[L5]
	0XG551DVAA	1						*J5	COVER AND PAD, Cushion, 35% [DV]

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Rear Seat, Trim Code [J5]  
Figure IKJ-650

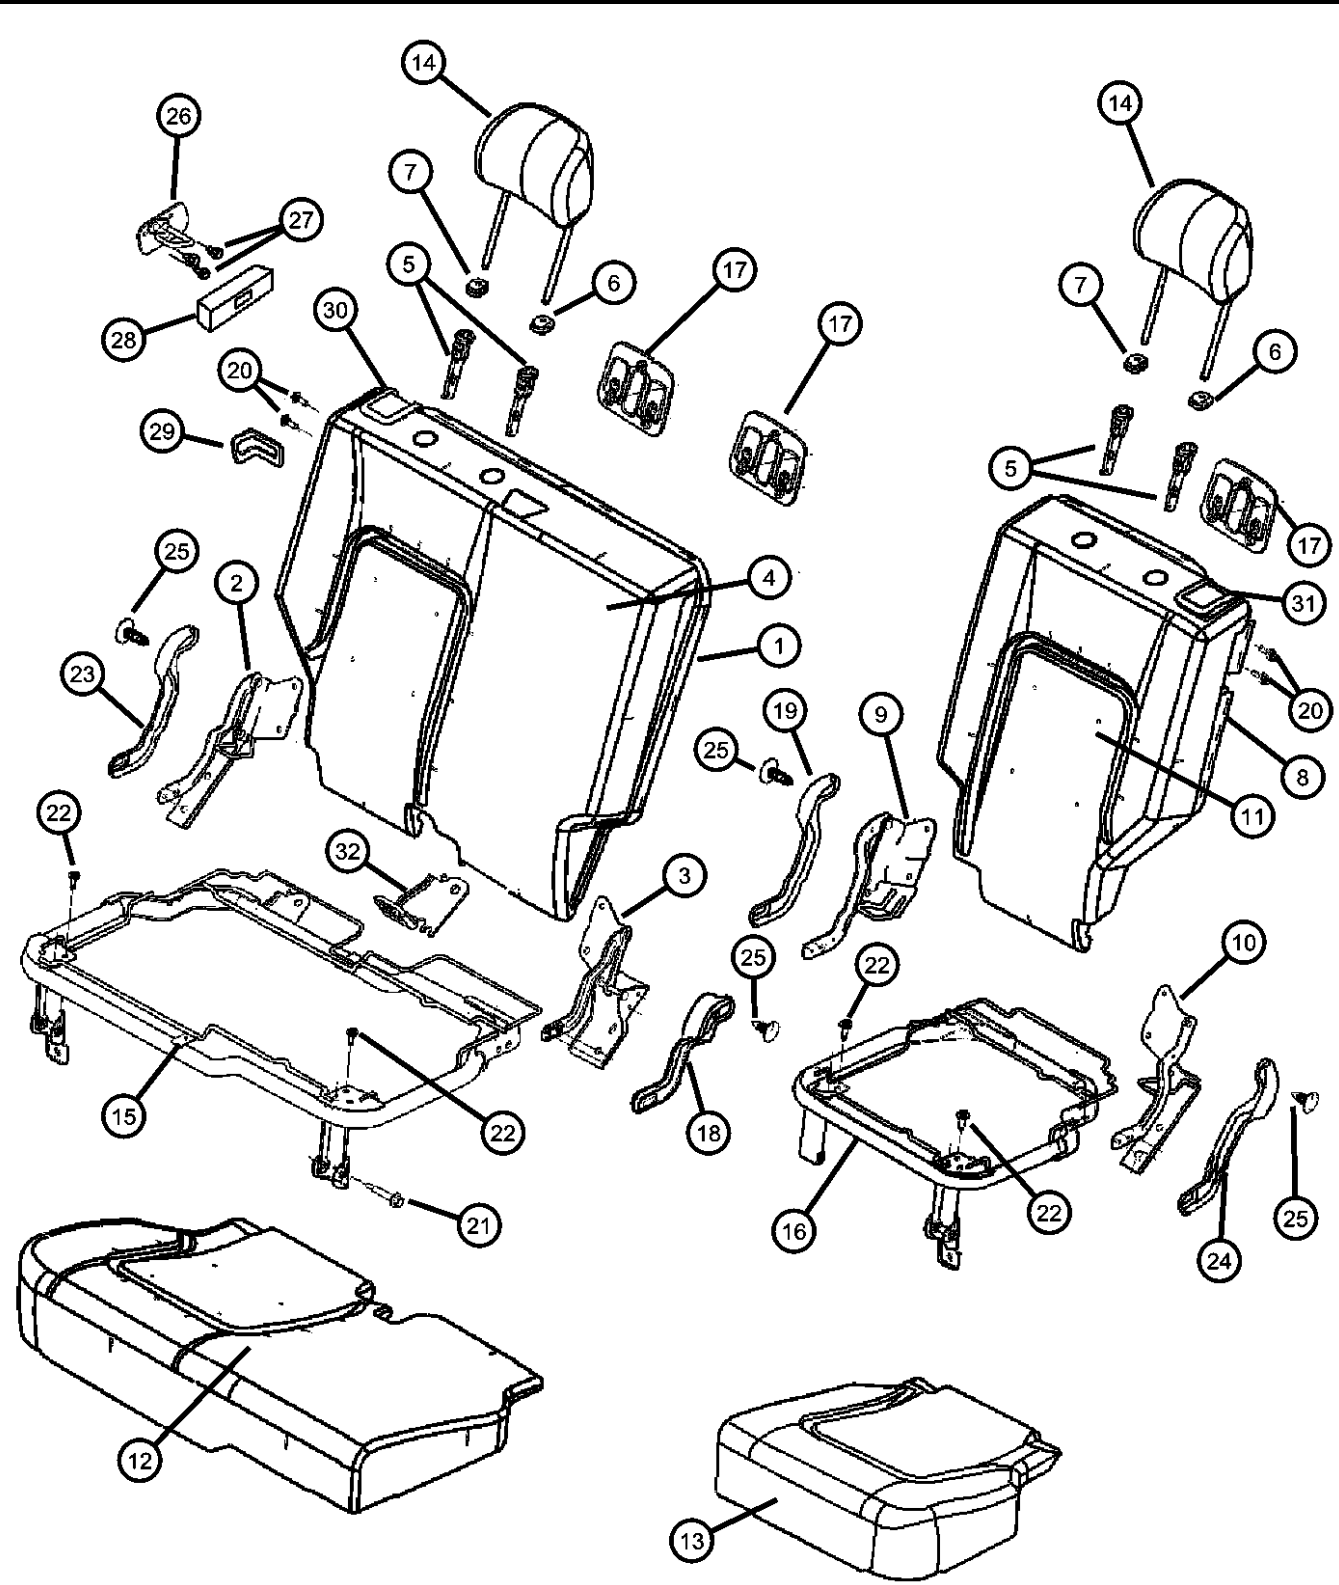

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	0XG551L5AA	1						*J5 [L5]	HEADREST, Rear
	0XG561DVAA	2						*J5 [DV]	
	0XG561L5AA	2						*J5 [L5]	
15	05072112AA	1						*J5	PANEL, Seat Cushion Base, 65%
16	05072113AA	1						*J5	PANEL, Seat Cushion Base, 35%
17									BEZEL, TETHER
	0WB441DVAA	2						*J5 [DV]	
	0WB441L5AA	2						*J5 [L5]	
18									COVER, Hinge
	0UZ45WL5AA	1						*J5 [L5], Right, Inboard	
	0UZ45XDVAA	1						*J5 [DV], Right, Inboard	
19									COVER, Hinge
	0UZ46WL5AA	1						*J5 [L5], Left, Inboard	
	0UZ46XDVAA	1						*J5 [DV], Left, Inboard	
20	05072520AA	2						*J5	BOLT, Pivot
21	05072519AA	1						*J5	BOLT, Seat
22	04761014	8						*J5	BOLT, Cushion To Adjuster
23									COVER, Hinge
	0UZ44WL5AA	1						*J5 [L5], Right, Outboard	
	0UZ44XDVAA	1						*J5 [DV], Right, Outboard	
24									COVER, Hinge
	0UZ47WL5AA	1						*J5 [L5], Left, Outboard	
	0UZ47XDVAA	1						*J5 [DV], Left, Outboard	
25									PIN, Push
	0WA51XD-VAA	30						*J5 [L5]	
		30						*J5 [DV]	
26									STRIKER, Seat Back Latch
	55352816AB	1							Right

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16v	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EKO = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions


Rear Seat, Trim Code [J5]  
Figure IKJ-650

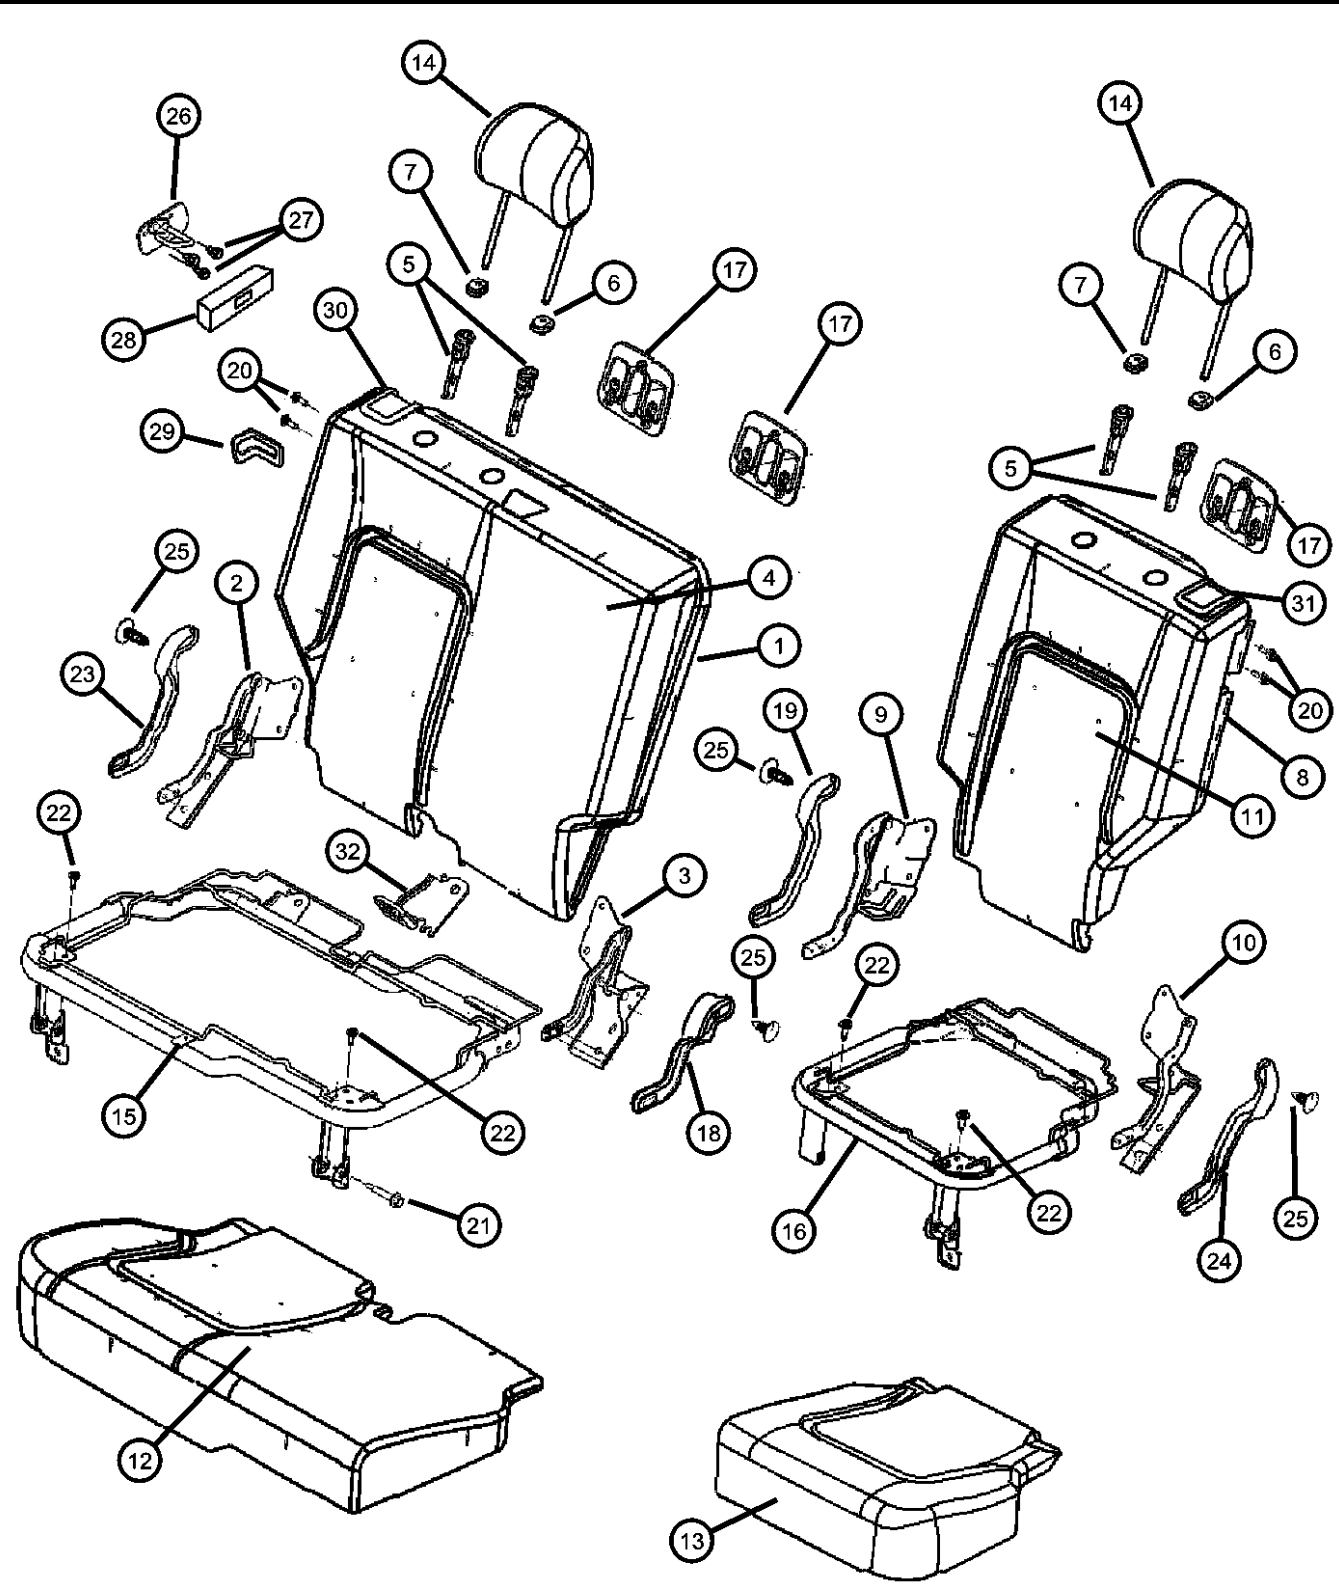

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	55352817AB	1							Left
27	06505434AA	6							SCREW, M8-1.25
28	55352839AC	2							BEZEL, Seat Latch
29									BEZEL, Seat Latch
	0WA92WL8AA	2						*J5	[L5]
	0WA92XD-VAA	2						*J5	[DV]
30									CONTROL, SEAT RELEASE, With Cable and Latch
	0XF781DVAB	1						*J5	[DV]
	0XF781L5AB	1						*J5	[L5]
31									CONTROL, SEAT RELEASE, With Latch
	0XF791DVAB	1						*J5	[DV]
	0XF791L5AB	1						*J5	[L5]
32	05134366AA	1						*J5	BRACKET, Child Tether Anchor

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

Rear Seat, Trim Code [F7]  
Figure IKJ-660

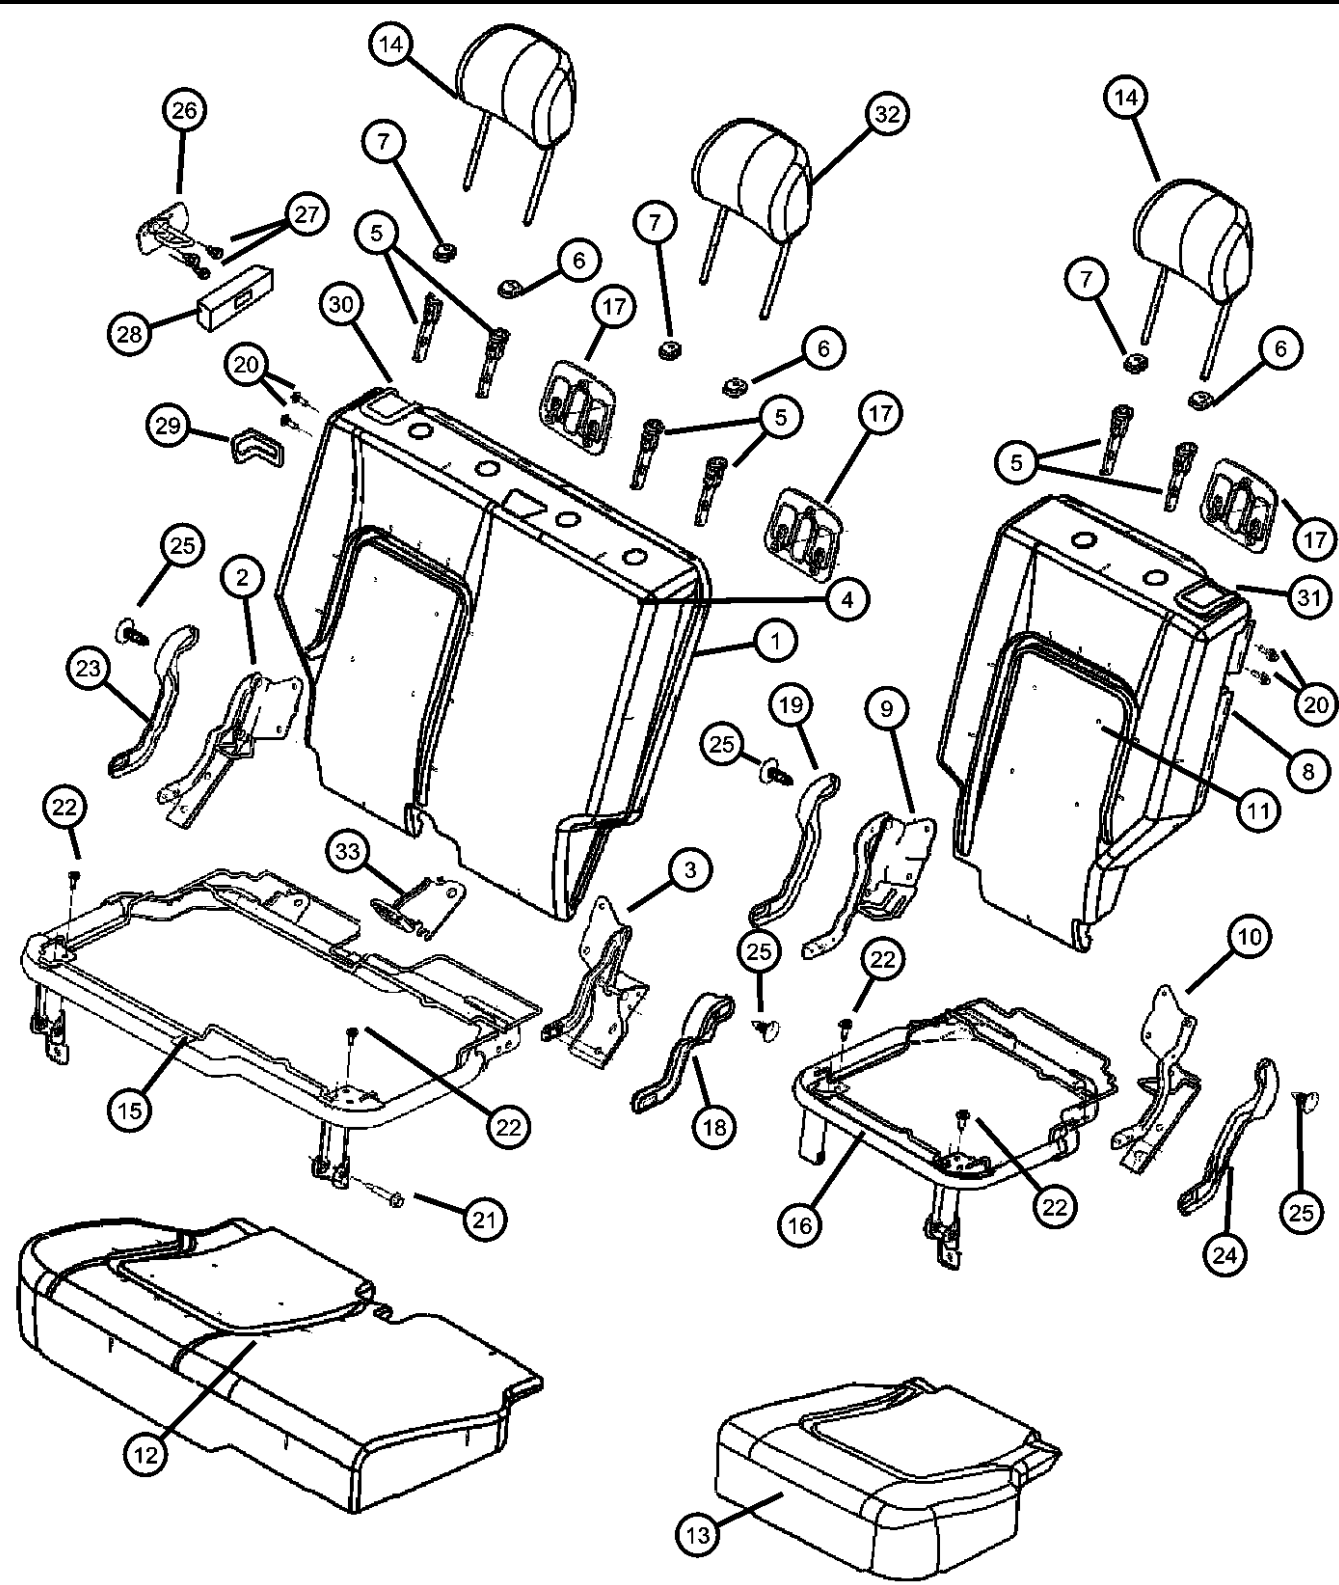


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	0XH241DVAA	1						*F7 [DV]	SEAT BACK, Rear, 65%
	0XH241L5AA	1						*F7 [L5]	
	05071702AA	1						*F7	BRACKET AND HINGE, Rear Seat Back, 65%Right, Outboard
3	05071703AA	1						*F7	BRACKET AND HINGE, Rear Seat Back, 65%Right, Inboard
4	0XH261DVAA	1						*F7 [DV]	COVER, Rear Seat Back, 65%
	0XH261L5AA	1						*F7 [L5]	
	05066017AA	2						*F7	SLEEVE, Headrest
6	0WA461DVAA	1						*F7 [DV]	CAP, Headrest Adjuster, With Button
	0WA461L5AA	1						*F7 [L5]	
	0WA311DVAA	1						*F7 [DV]	CAP, Headrest Adjuster, Without Button
	0WA311L5AA	1						*F7 [L5]	
8	0XG611DVAA	1						*F7 [DV]	SEAT BACK, Rear, 35%
	0XG611L5AA	1						*F7 [L5]	
	05071704AA	1						*F7	BRACKET AND HINGE, Rear Seat Back, 35%Left, Inboard
10	05071705AA	1						*F7	BRACKET AND HINGE, Rear Seat Back, 35%Left, Outboard
	0XG591DVAA	1						*F7 [DV]	COVER, Rear Seat Back, 35%
	0XG591L5AA	1						*F7 [L5]	
12	0XG541DVAA	1						*F7 [DV]	COVER AND PAD, Cushion, 65%
	0XG541L5AA	1						*F7 [L5]	
	0XG551DVAA	1						*F7 [DV]	COVER AND PAD, Cushion, 35%

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part


Rear Seat, Trim Code [F7]  
Figure IKJ-660

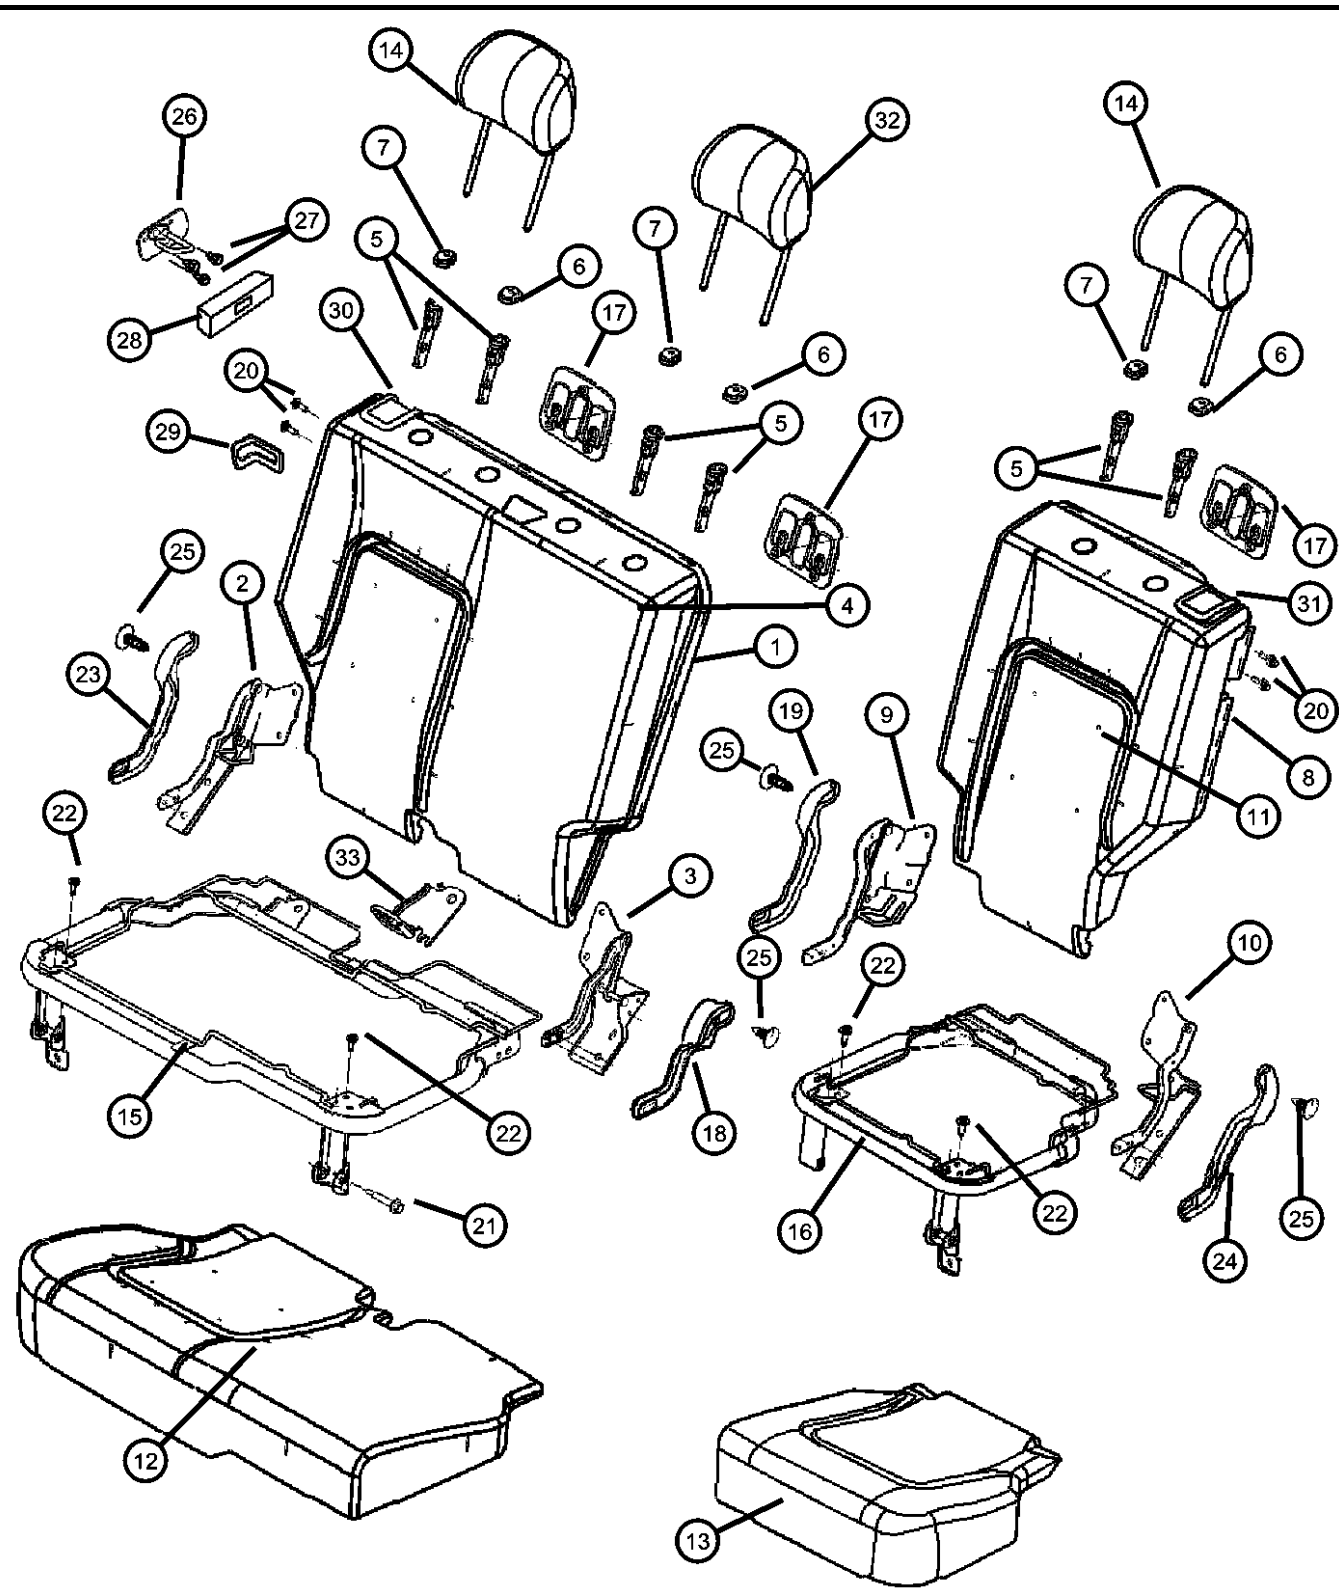

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	0XG551L5AA	1						*F7 [L5]	HEADREST, Rear
	0XG561DVAA	2						*F7 [DV]	
	0XG561L5AA	2						*F7 [L5]	
15	05072112AA	1						*F7	PANEL, Seat Cushion Base, 65%
16	05072113AA	1						*F7	PANEL, Seat Cushion Base, 35%
17									BEZEL, TETHER
18	0WB441DVAA	1						*F7 [DV]	COVER, Hinge
	0WB441L5AA	1						*F7 [L5]	
19	0UZ45WL5AA	1						*F7 [L5], Right, Inboard	COVER, Hinge
	0UZ45XDVAA	1						*F7 [DV], Right, Inboard	
20	0UZ46WL5AA	1						*F7 [L5], Left, Inboard	COVER, Hinge
	0UZ46XDVAA	1						*F7 [DV], Left, Inboard	
21	05072520AA	2						*F7	BOLT, Pivot
22	05072519AA	1						*F7	BOLT, Seat
23	04761014	8						*F7	BOLT, Cushion To Adjuster
24	0UZ44WL5AA	1						*F7 [L5], Right, Outboard	COVER, Hinge
	0UZ44XDVAA	1						*F7 [DV], Right, Outboard	
25	0UZ47WL5AA	1						*F7 [L5], Left, Outboard	COVER, Hinge
	0UZ47XDVAA	1						*F7 [DV], Left, Outboard	
26	0WA51WL5AA	30						*F7 [L5]	PIN, Push
	0WA51XD-VAA	30						*F7 [DV]	
	55352816AB	1							STRIKER, Seat Back Latch Right

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

Rear Seat, Trim Code [F7]  
Figure IKJ-660

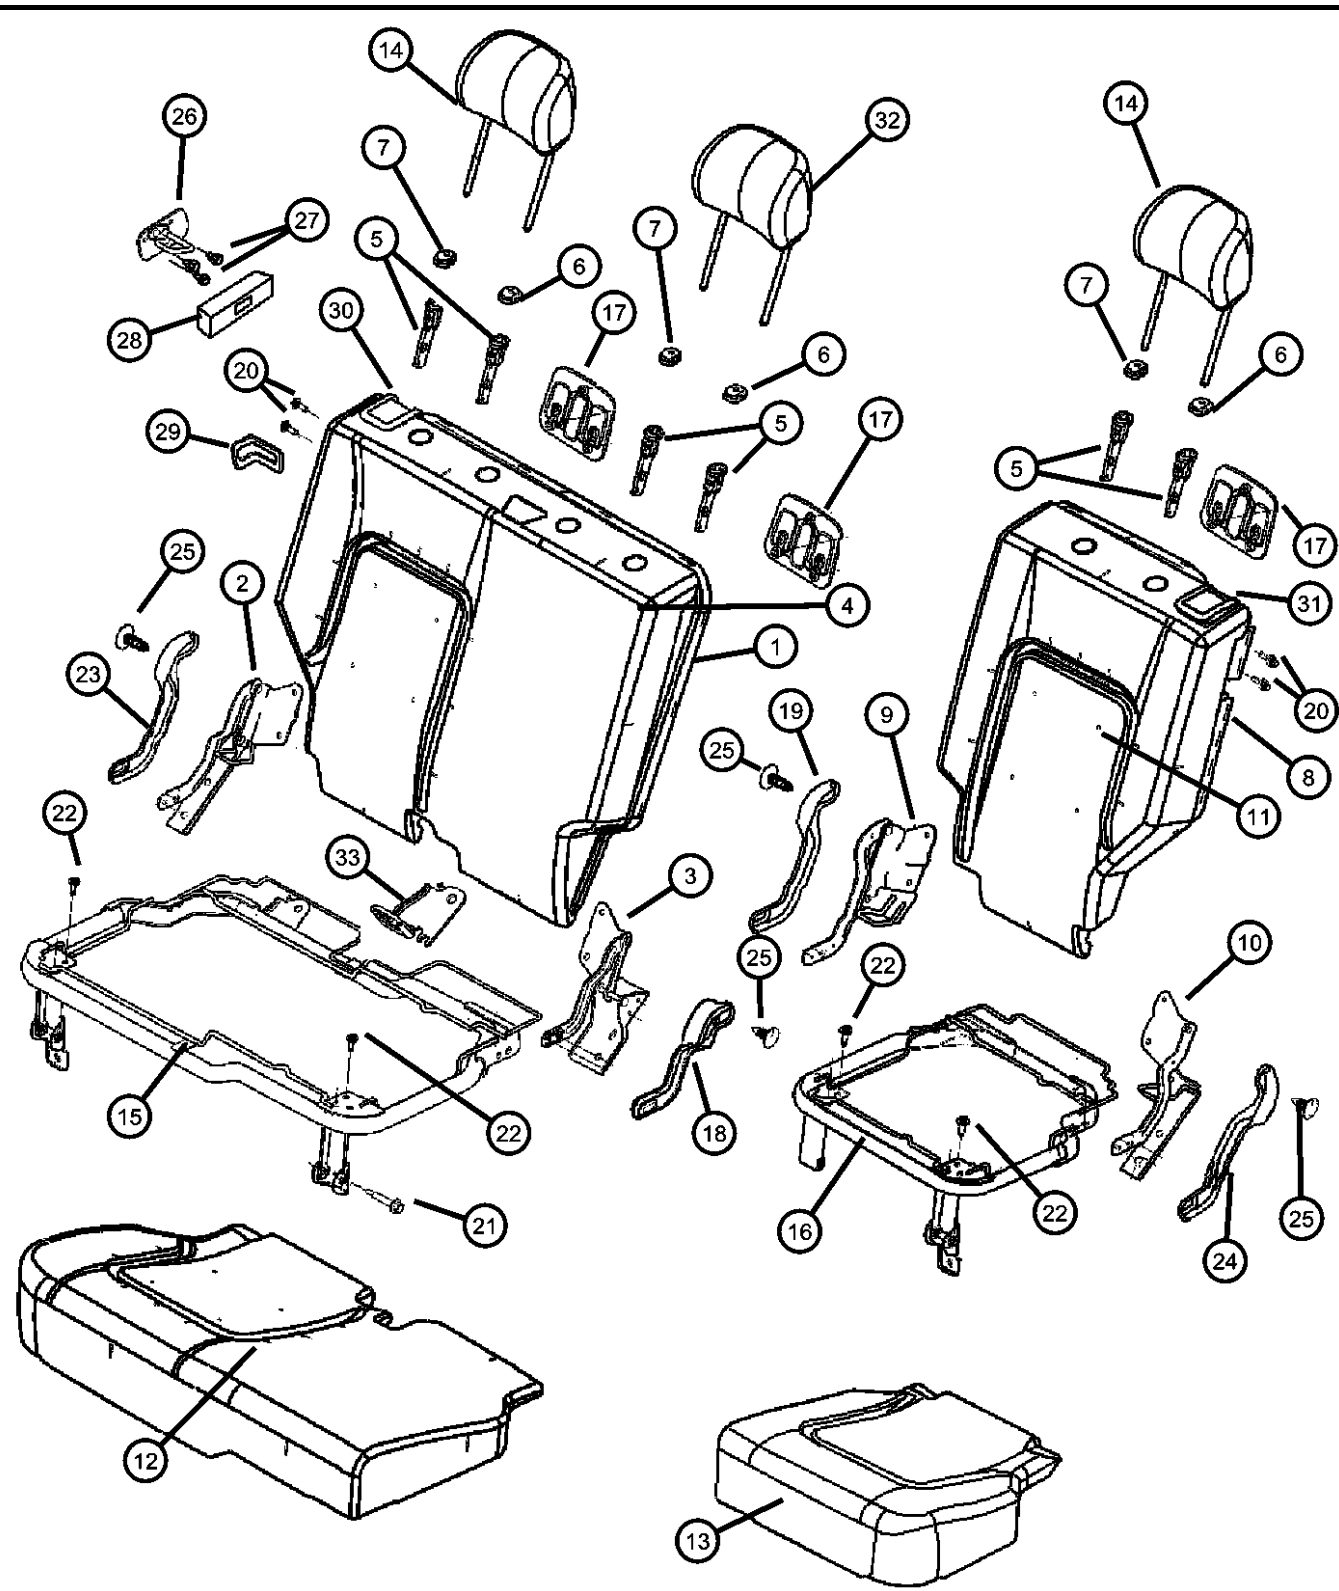


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	55352817AB	1							Left
27	06505434AA	6							SCREW, M8-1.25
28	55352839AC	2							BEZEL, Seat Latch
29									BEZEL, Seat Latch
	0WA92WL8AA	1						*F7	[L5]
	0WA92XD-VAA	1						*F7	[DV]
30									CONTROL, SEAT RELEASE, With Cable and Latch
	0XF781DVAB	1						*F7	[DV]
	0XF781L5AB	1						*F7	[L5]
31									CONTROL, SEAT RELEASE, With Latch
	0XF791DVAB	1						*F7	[DV]
	0XF791L5AB	1						*F7	[L5]
32									HEADREST, Rear, Center
	0XH201DVAA	1						*F7	[DV]
	0XH201L5AA	1						*F7	[L5]
33	05134366AA	1						*F7	BRACKET, Child Tether Anchor

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions




Rear Seat, Trim Code [A7]  
Figure IKJ-670

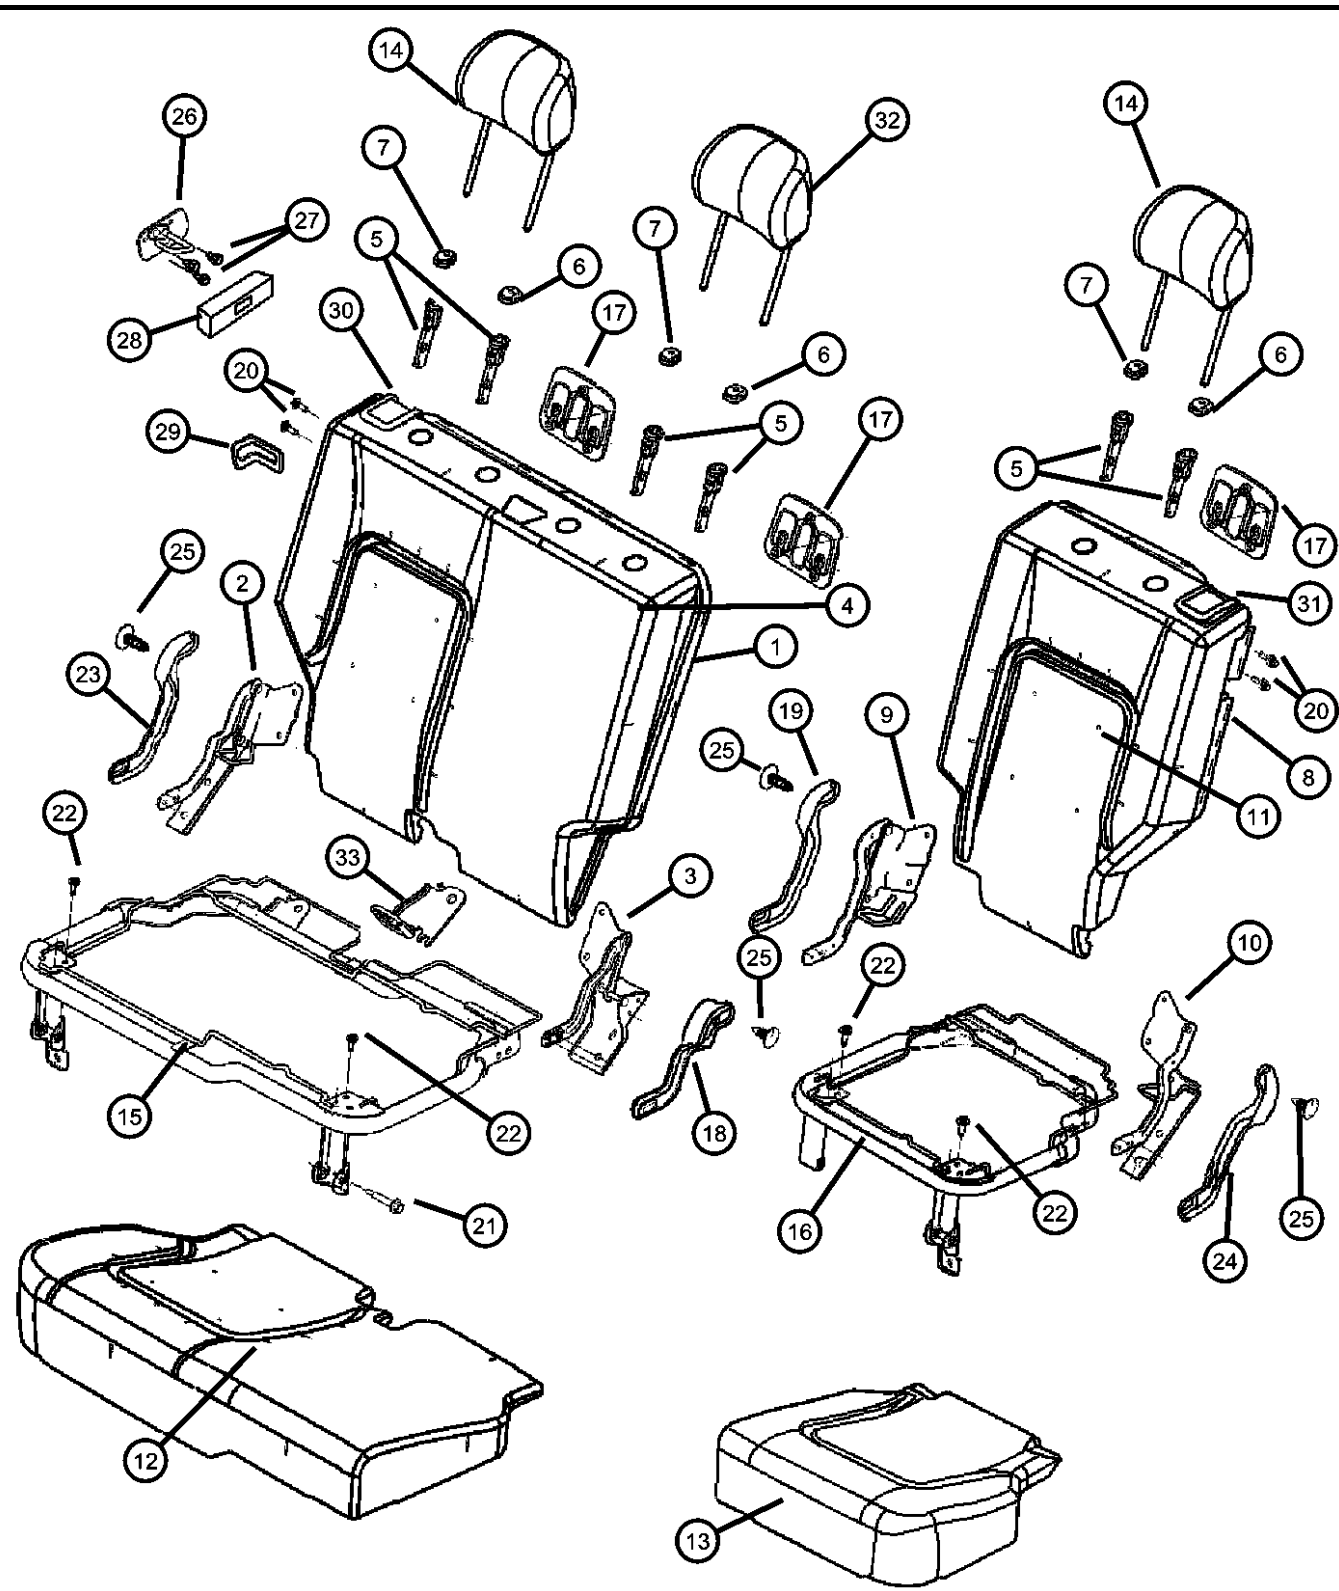

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	1AG941DVAA	1						*A7	SEAT BACK, Rear, 65%
2	05071702AA	1						*A7	BRACKET AND HINGE, Rear Seat Back, 65%Right, Outboard
3	05071703AA	1						*A7	BRACKET AND HINGE, Rear Seat Back, 65%
4	1AG961DVAA	1						*A7	COVER, Rear Seat Back, 65%
5	05066017AA	2						*A7	SLEEVE, Headrest
6	0WA461DVAA	1						*A7	CAP, Headrest Adjuster, With Button
7	0WA311DVAA	1						*A7	CAP, Headrest Adjuster, Without Button
8	1AE031DVAA	1						*A7	SEAT BACK, Rear, 35%
9	05071704AA	1						*A7	BRACKET AND HINGE, Rear Seat Back, 35%Left, Inboard
10	05071705AA	1						*A7	BRACKET AND HINGE, Rear Seat Back, 35%Left, Outboard
11	1AE011DVAA	1						*A7	COVER, Rear Seat Back, 35%
12	1AD981DVAA	1						*A7	COVER AND PAD, Cushion, 65%
13	1AD991DVAA	1						*A7	COVER AND PAD, Cushion, 35%
14	1AE091DVAA	2						*A7	HEADREST, Rear
15	05072112AA	1						*A7	PANEL, Seat Cushion Base, 65%
16	05072113AA	1						*A7	PANEL, Seat Cushion Base, 35%
17	0WB441DVAA	1						*A7	BEZEL, TETHER
18	0UZ451DVAA	1						*A7	COVER, HingeRight, Inboard
19	0UZ46XDVAA	1						*A7	COVER, HingeLeft, Inboard
20	05072520AA	2						*A7	BOLT, Pivot
21	05072519AA	1						*A7	BOLT, Seat
22	04761014	8						*A7	BOLT, Cushion To Adjuster
23	0UZ44XDVAA	1						*A7	COVER, HingeRight, Outboard
24	0UZ47XDVAA	1						*A7	COVER, HingeLeft, Outboard
25	0WA51XD-VAA	30						*A7	PIN, Push
26	55352816AB	1							STRIKER, Seat Back Latch Right

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

Rear Seat, Trim Code [A7]  
Figure IKJ-670

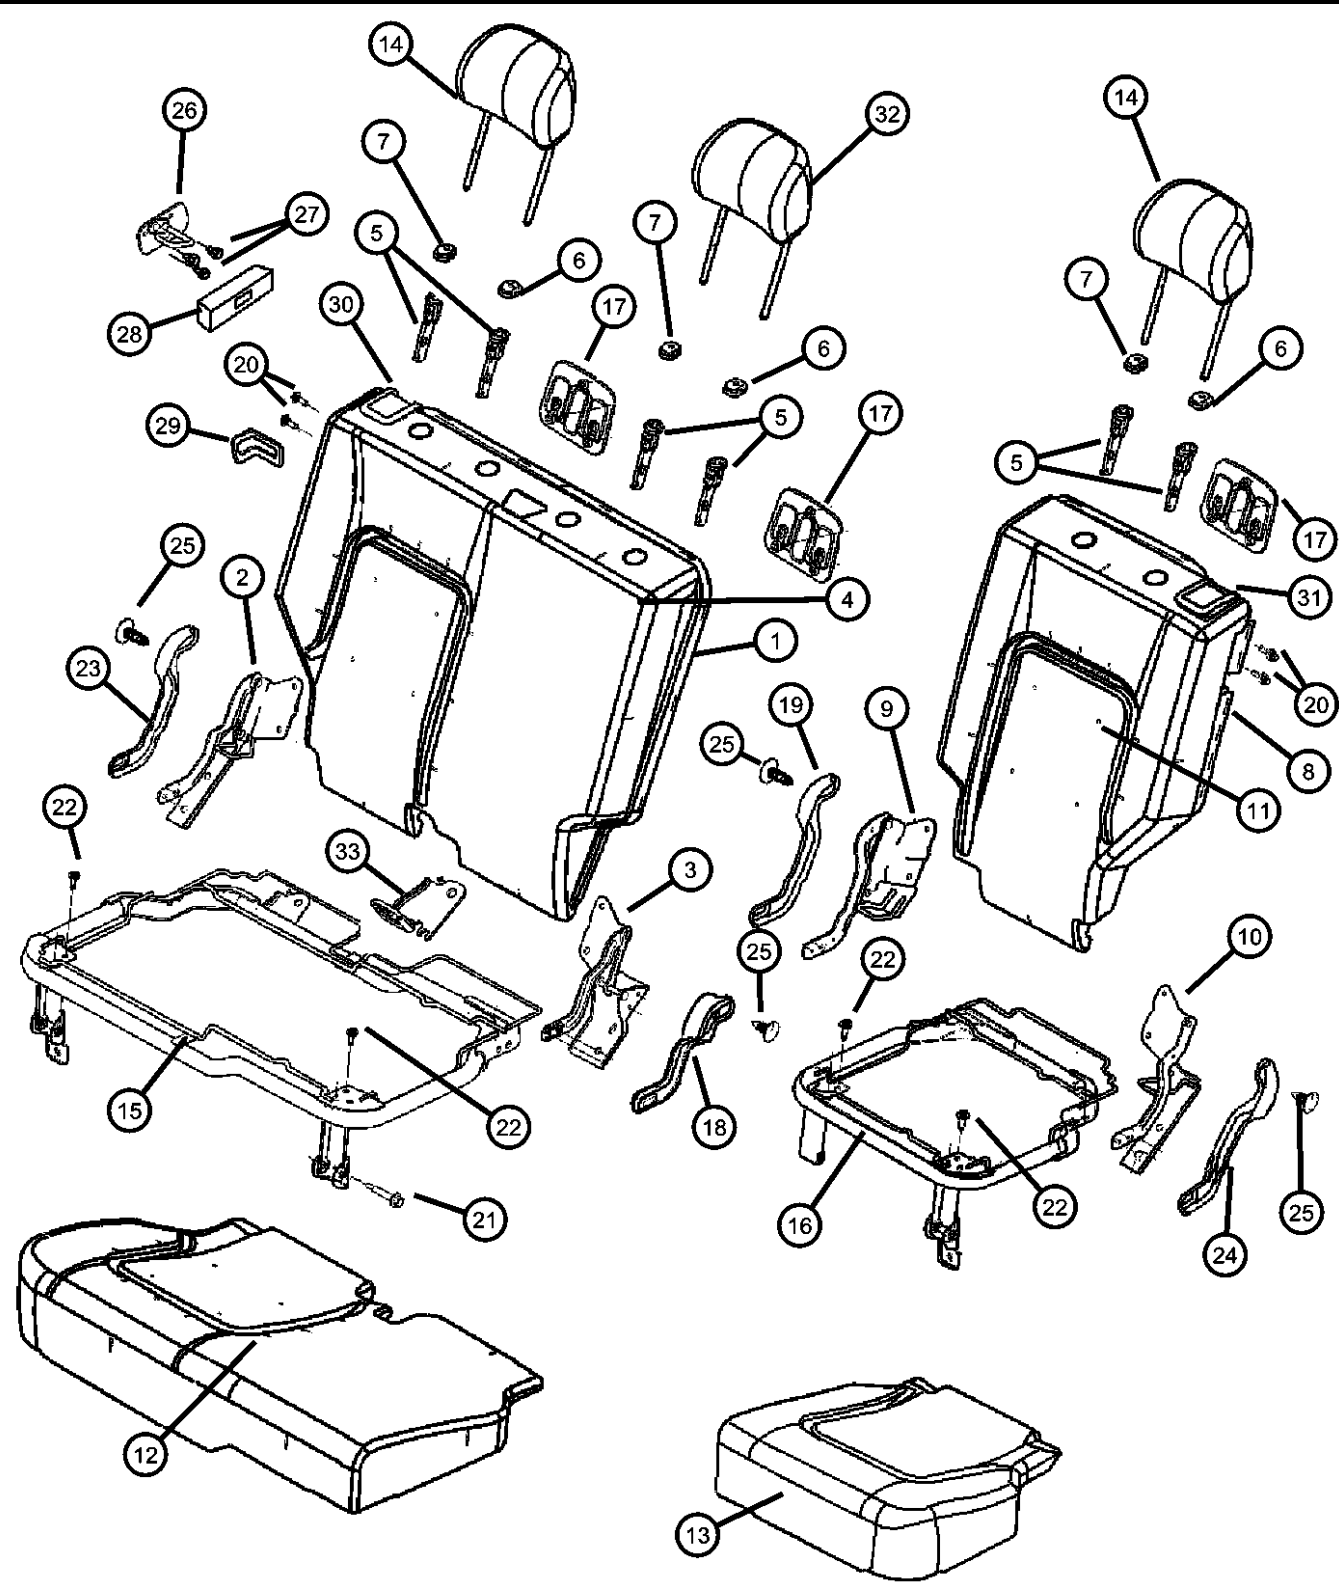


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	55352817AB	1							Left
27	06505434AA	6							SCREW, M8-1.25
28	55352839AC	2							BEZEL, Seat Latch
29	0WA92XD-VAA	1						*A7	BEZEL, Seat Latch
30	0XF781DVAB	1						*A7	CONTROL, SEAT RELEASE, With Cable and Latch
31	0XF781DVAB	1						*A7	CONTROL, SEAT RELEASE, With Latch
32	1AG951DVAA	1						*A7	HEADREST, Rear, Center
33	05134366AA	1						*A7	BRACKET, Child Tether Anchor

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear Seat, Trim Code [V5]  
Figure IKJ-680

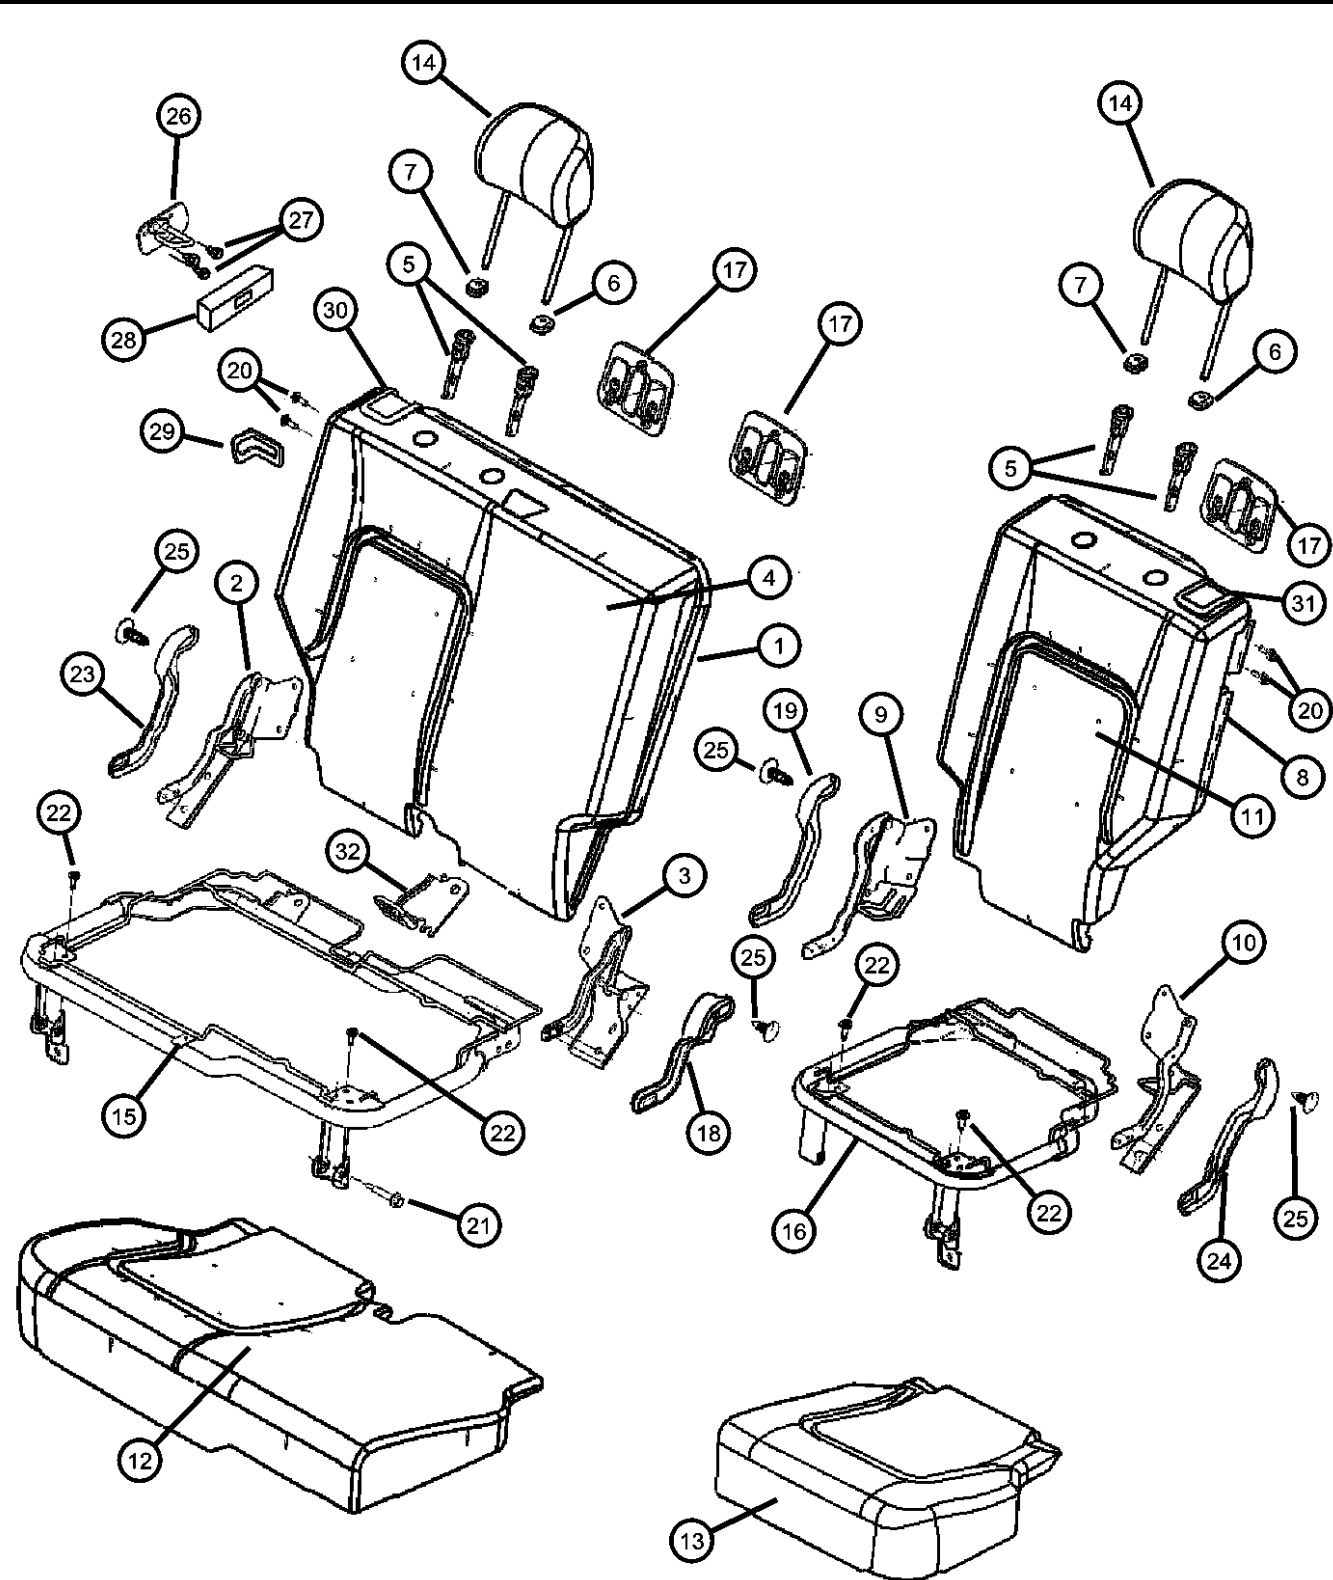


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	1AE021DVAA	1						*V5	SEAT BACK, Rear, 65%
2	05071702AA	1						*V5	BRACKET AND HINGE, Rear Seat Back, 65%Right, Outboard
3	05071703AA	1						*V5	BRACKET AND HINGE, Rear Seat Back, 65%Right, Inboard
4	1AE001DVAA	1						*V5	COVER, Rear Seat Back, 65%
5	05066017AA	2						*V5	SLEEVE, Headrest
6	0WA461DVAA	1						*V5	CAP, Headrest Adjuster, With Button
7	0WA311DVAA	1						*V5	CAP, Headrest Adjuster, Without Button
8	1AE031DVAA	1						*V5	SEAT BACK, Rear, 35%
9	05071704AA	1						*V5	BRACKET AND HINGE, Rear Seat Back, 35%
10	05071705AA	1						*V5	BRACKET AND HINGE, Rear Seat Back, 35%
11	1AE011DVAA	1						*V5	COVER, Rear Seat Back, 35%
12	1AD981DVAA	1						*V5	COVER AND PAD, Cushion, 65%
13	1AD991DVAA	1						*V5	COVER AND PAD, Cushion, 35%
14	1AE091DVAA	2						*V5	HEADREST, Rear
15	05072112AA	1						*V5	PANEL, Seat Cushion Base, 65%
16	05072113AA	1						*V5	PANEL, Seat Cushion Base, 35%
17	0WB441DVAA	2						*V5	BEZEL, TETHER
18	0UZ451DVAA	1						*V5	COVER, Hinge
19	0UZ461DVAA	1						*V5	COVER, Hinge
20	05072520AA	2						*V5	BOLT, Pivot
21	05072519AA	1						*V5	BOLT, Seat
22	04761014	1						*V5	BOLT, Cushion To Adjuster
23	0UZ44XDVAA	1						*V5	COVER, Hinge
24	0UZ471DVAA	1						*V5	COVER, Hinge
25	0WA51XD-VAA	2						*V5	PIN, Push
26	55352816AB	1							STRIKER, Seat Back Latch Right

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear Seat, Trim Code [V5]  
Figure IKJ-680

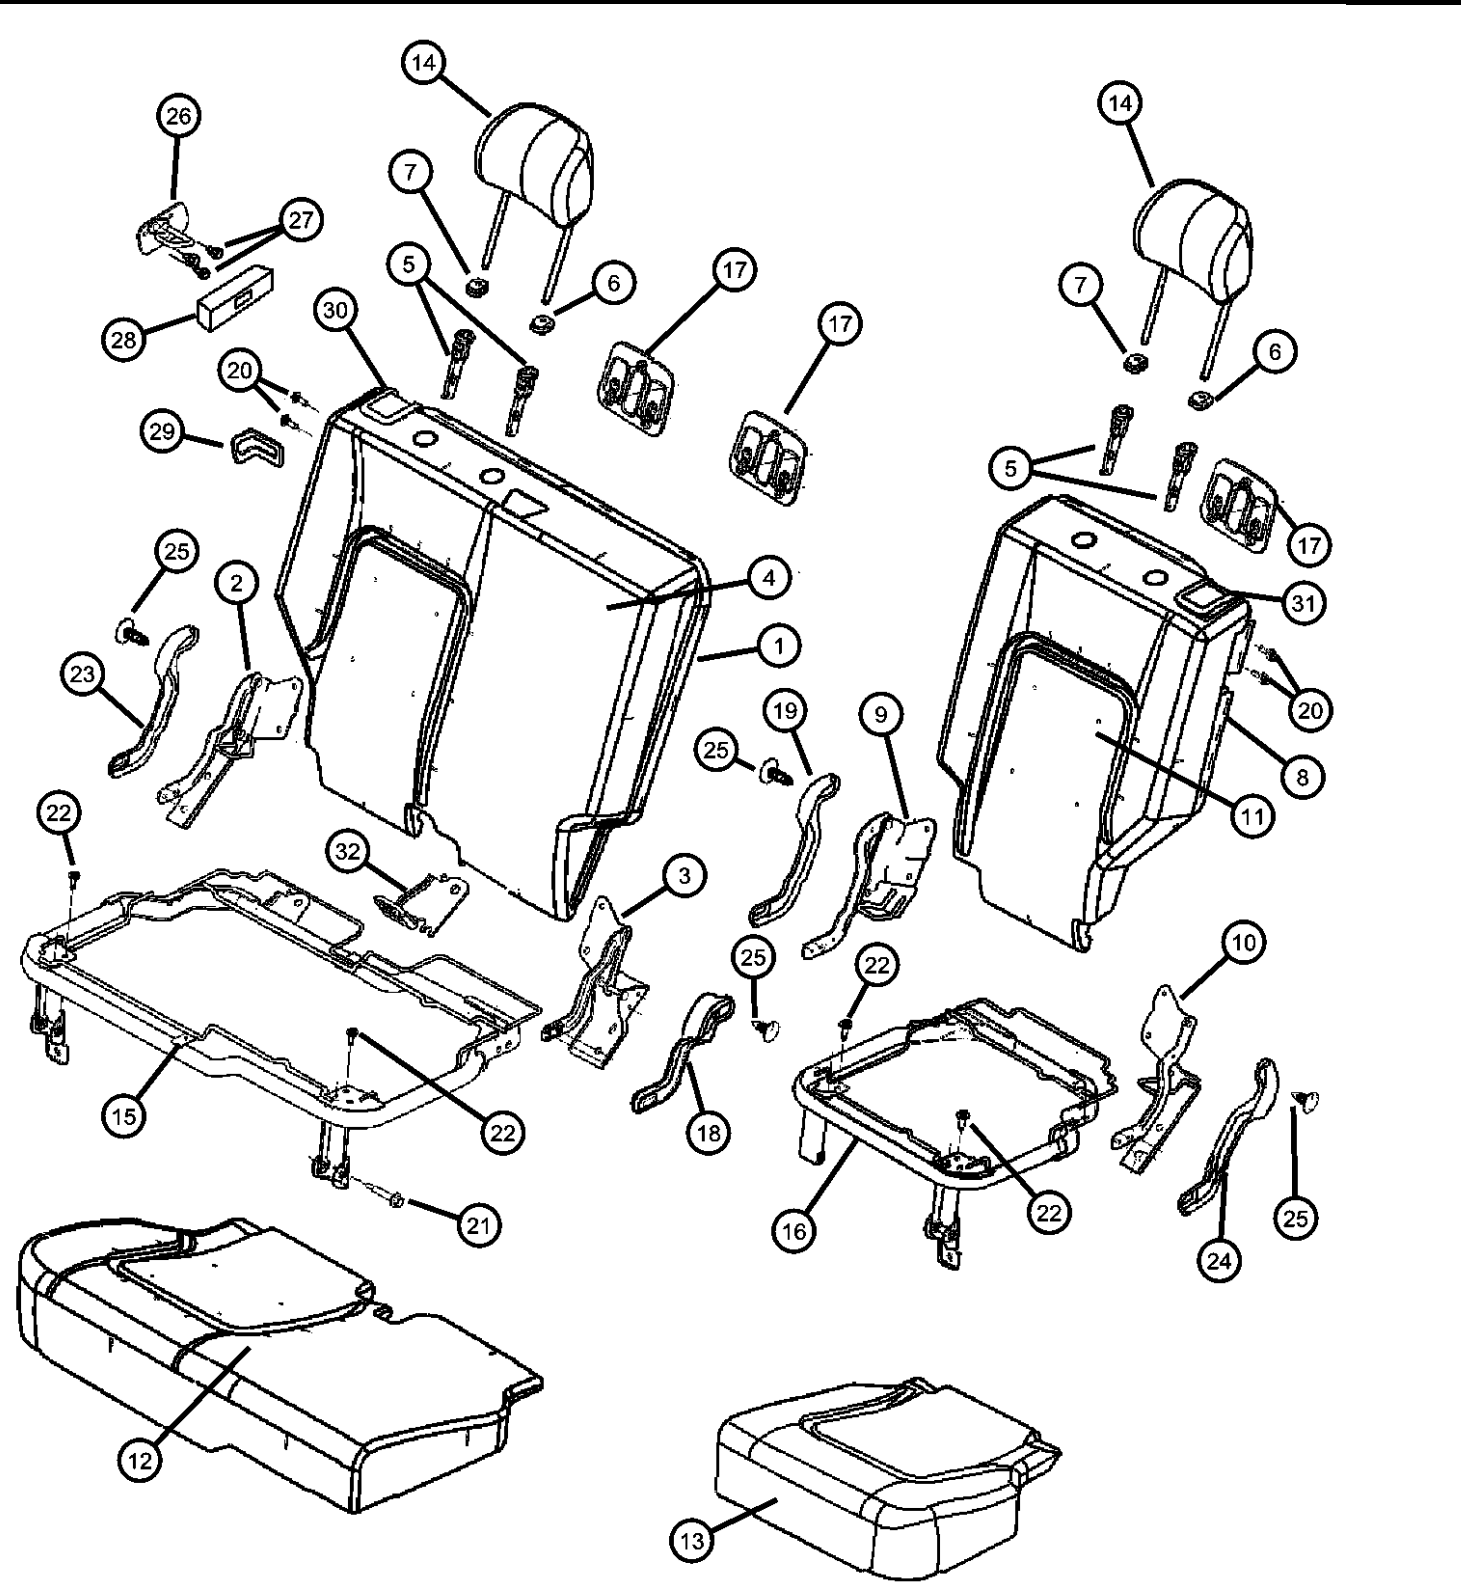


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	55352817AB	1							Left
27	06505434AA	6							SCREW, M8-1.25
28	55352839AC	2							BEZEL, Seat Latch
29	0WA92XD-VAA	1						*V5	BEZEL, Seat Latch
30	0XF781DVAB	1						*V5	CONTROL, SEAT RELEASE, With Cable and Latch
31	0XF791DVAB	1						*V5	CONTROL, SEAT RELEASE, With Latch
32	05134366AA	1						*V5	BRACKET, Child Tether Anchor

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

# Seat Belts, Front Figure IKJ-710

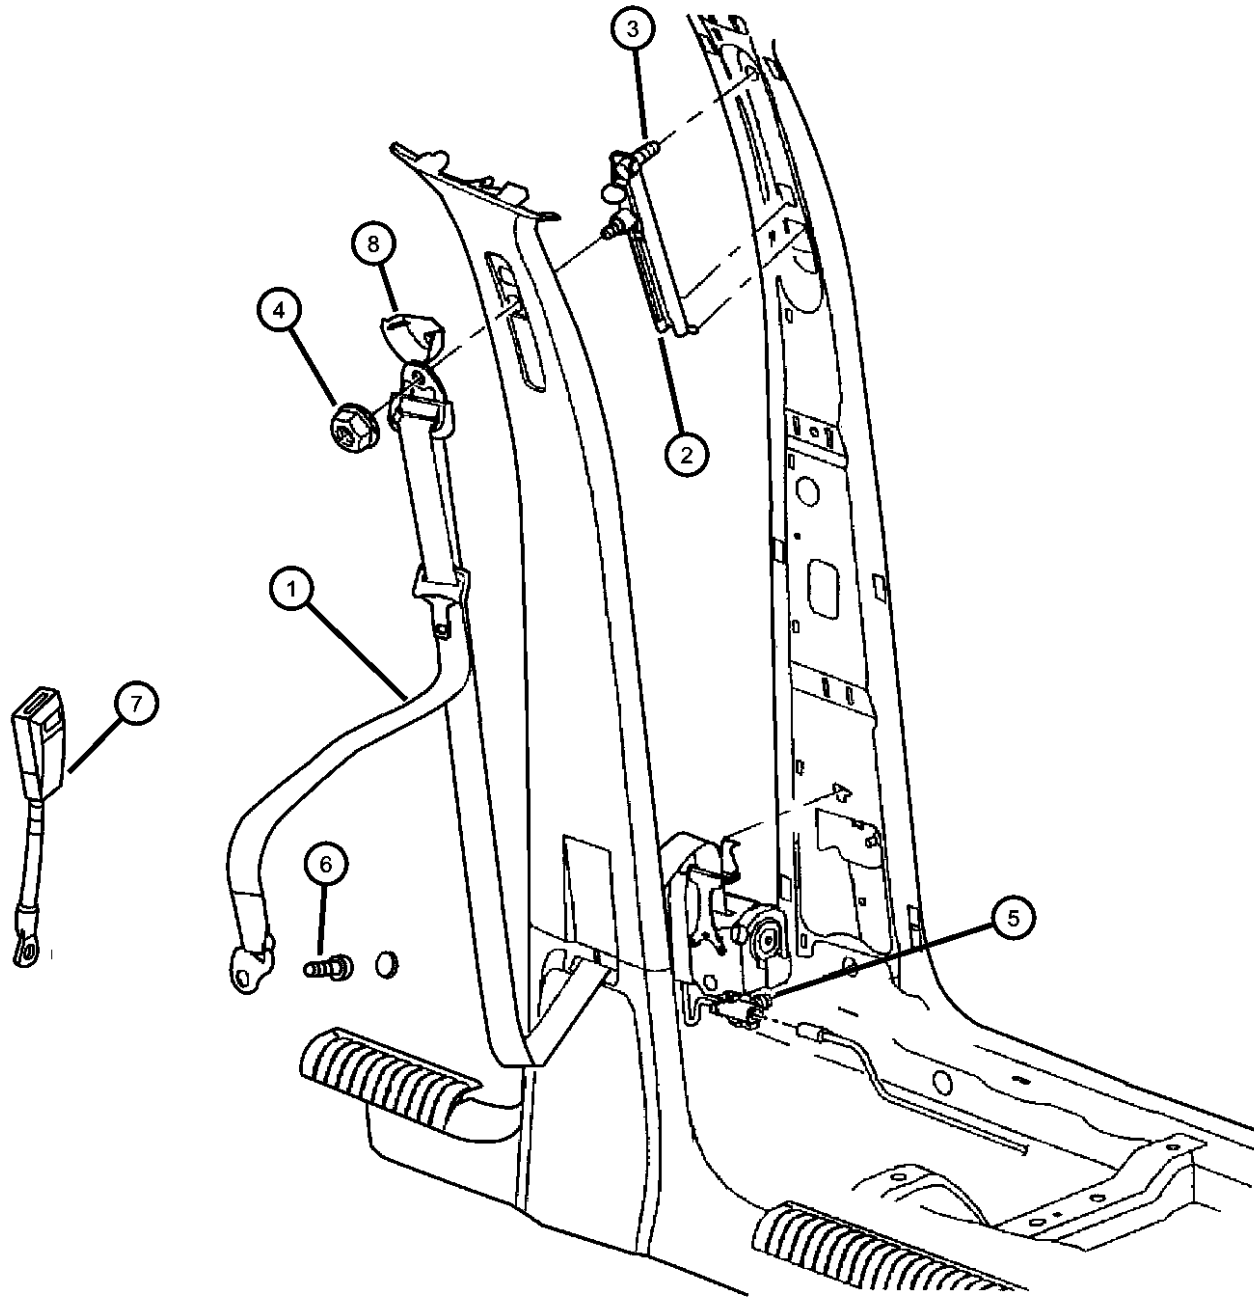

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5GZ061DVAL	1	J, U					*O0	SEAT BELT, Front Outer [DV, L2, L5], Right, Export
	5GZ071DVAH	1	J, U					*O0	[DV, L2, L5], Left, Export
	5HG331DVAJ	1	J, T					*O0	[DV, D2], Left
	5HG331L8AJ	1	J, T					*O0	[L2, L5], Left
	5JL401DVAA	1	J, T					*O0	[DV, D2], Right
	5JL401L8AA	1	J, T					*O0	[L2, L5], Right
2	55315033AC	2							ADJUSTER, Seat Belt Turning Loop
3	06506475AA	2							BOLT, Seat Belt
4	06506002AA	2							NUT, M10x1.5
5	06505867AA	2							SCREW, SEAT BELT
6	06507968AA	1	J, U					*O0	BOLT, Seat Belt
7	5JW101DVAA	1						*J5	SEAT BELT, Front Inner [DV], Passenger
		1	J, T					*XJ	[DV], Domestic, Passenger
		1	J, T					*M5	[DV], Passenger
		1						*V5	Passenger
		1	J, T					*DL	[D2], Domestic & Mexico, Passenger
	5JW101L5AA	1						*J5	[L5], Passenger
		1	J, T					*M5	[L5], Passenger
		1	J, T					*XJ	[L5], Domestic, Passenger
	5JW771DVAA	2						*F7	[DV, L5], Export, Driver and Passenger
		1						*J5	[DV], Driver
		2	J, U					*XJ	[DV, L2], Export, Driver and Passenger
		2	J, U					*DL	[DV, L2], Export, Driver and Passenger
		2	J, U					*E7	[DV, L5], Export, Driver and Passenger
		1	J, T					*DL	[D2], Domestic & Mexico, Driver
		1						*V5	Driver

## LIBERTY (KJ)

### SERIES

P = Limited  
H = Sport  
M = Renegade

### LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

### BODY

74 = 4 Door (104.3 WB)

### ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16v  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L

### TRANSMISSION


DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

<< RETURN TO GROUP INDEX


Seat Belts, Front  
Figure IKJ-710

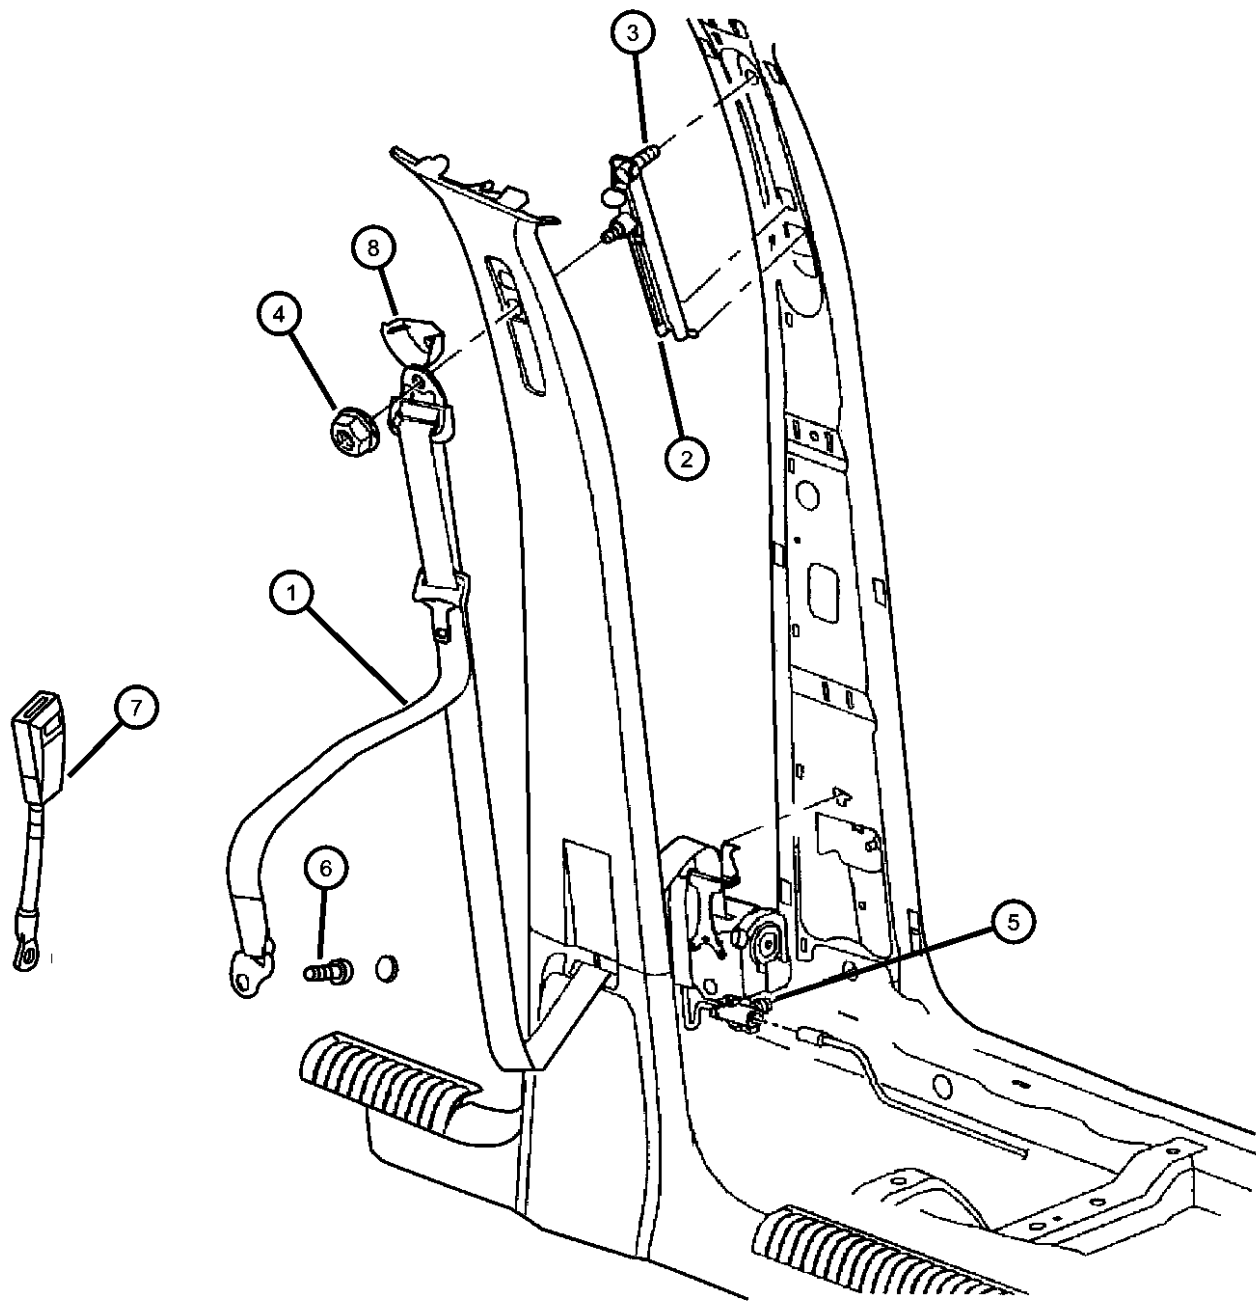

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	J, T					*XJ	[DV], Domestic, Driver
		2						*A7	
		1	J, T					*M5	[DV], Driver
	5JW771L5AA	1						*J5	[L5], Driver
		1	J, T					*DL	[L2], Domestic & Mexico, Driver
		1	J, T					*M5	[L5], Driver
		1	J, T					*XJ	[L5], Domestic, Driver
8									COVER, Seat Belt Turning Loop
	0ZL811DVAA	1	J, T					*O0	[D2, DV]
		1	J, U					*O0	[DV, L2, L5], Export
	0ZL811L8AA	1	J, T					*O0	[L2, L5]
-9	05086227AA	1	J, T					*O0	EXTENDER, Seat Belt

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

**Seat Belts, Rear**  
**Figure IKJ-720**

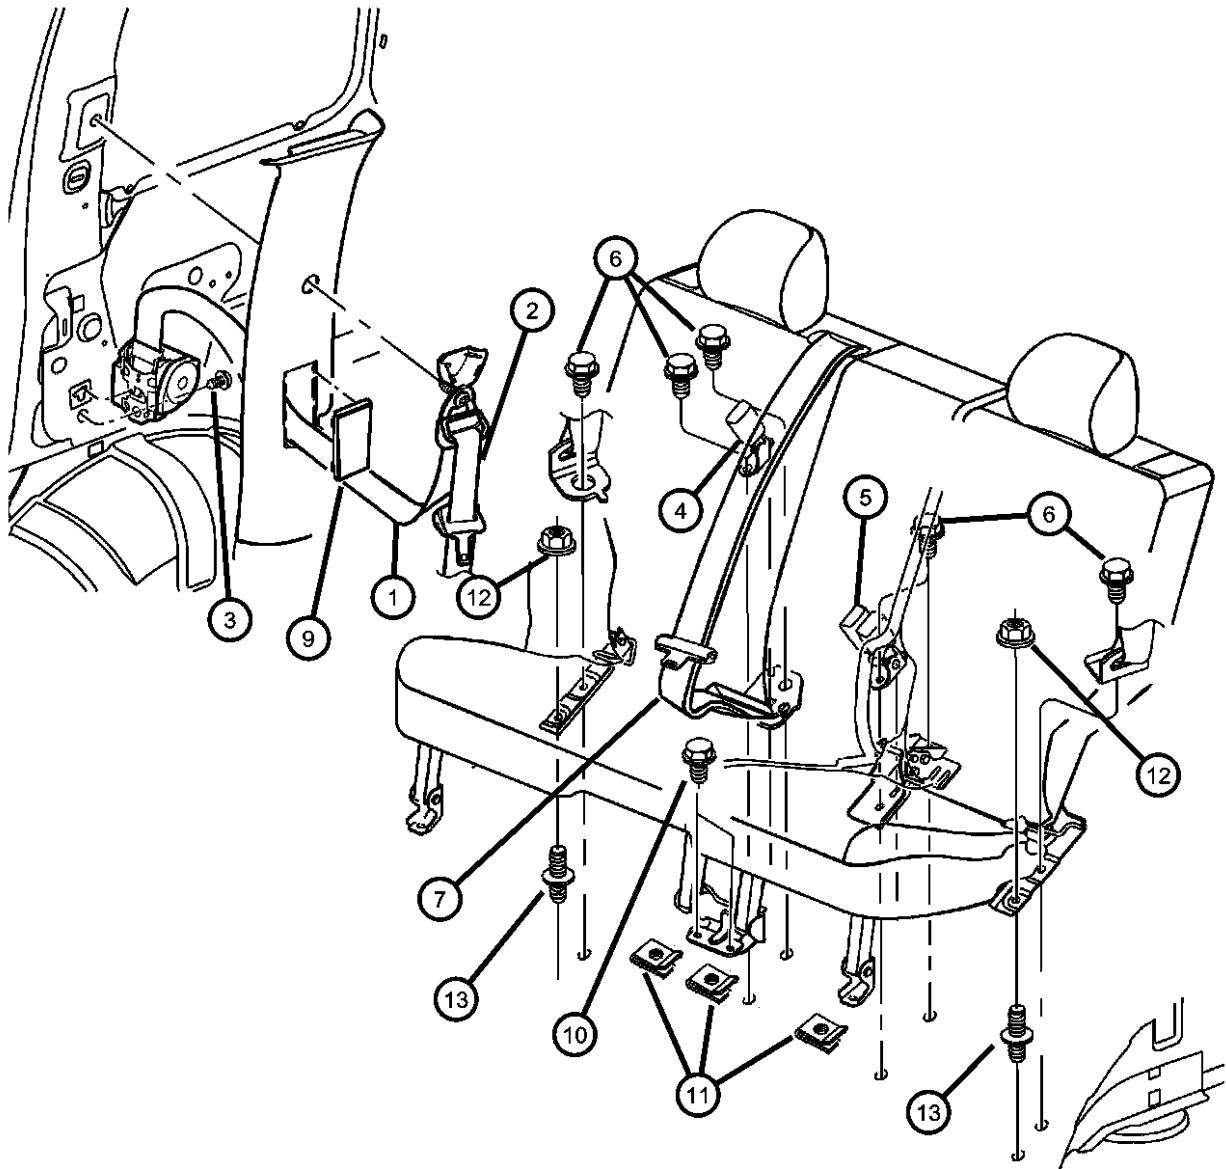


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									SEAT BELT, Rear Outer
	5GE521DVAJ	1	J, U					*O0	[DV, L2], Right, Export
	5GE531DVAJ	1	J, U					*O0	[DV, L2], Left, Export
	5HG361DVAI	1	J, T					*O0	[D2, DV], Right
	5HG361L8AI	1	J, T					*O0	[L2, L5], Right
	5HG371DVAI	1	J, T					*O0	[D2, DV], Left
	5HG371L8AI	1	J, T					*O0	[L2, L5], Left
2									BOLT, Seat Belt
	06506911AA	1	J, U					*O0	Export
		1	J, T					*O0	
3	06505867AA	2							SCREW, SEAT BELT
4									SEAT BELT, Buckle Half
	5GU581DVAE	1	J, U					*O0	[DV, L2, L5], Export
		1	J, T					*O0	[D2, DV],
	5GU581L5AE	1	J, T					*O0	[L2, L5]
5									SEAT BELT, Two Buckles
	5GE491DVAE	1	J, U					*O0	[DV, L2, L5], Export
		1	J, T					*O0	[D2, DV],
	5GE491L5AE	1	J, T					*O0	[L2, L5]
6	06506791AA	6							SCREW, Seat
7									SEAT BELT, RR CNTR SHOULDER
	5GE481DVAE	1						*F7	[DV], Export
		1	J, U					*DL	[DV], Export
		1	J, U					*E7	[DV], Export
		1	J, U					*XJ	[DV]
		1						*A7	
	5GE481L2AE	1						*F7	[L5], Export
		1	J, U					*DL	[L2], Export
	5GE481L5AE	1	J, U					*E7	[L2], Export
		1	J, U					*XJ	[L5]

<b>LIBERTY (KJ)</b>					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			ENO = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required    - = Non illustrated part

Seat Belts, Rear  
Figure IKJ-720

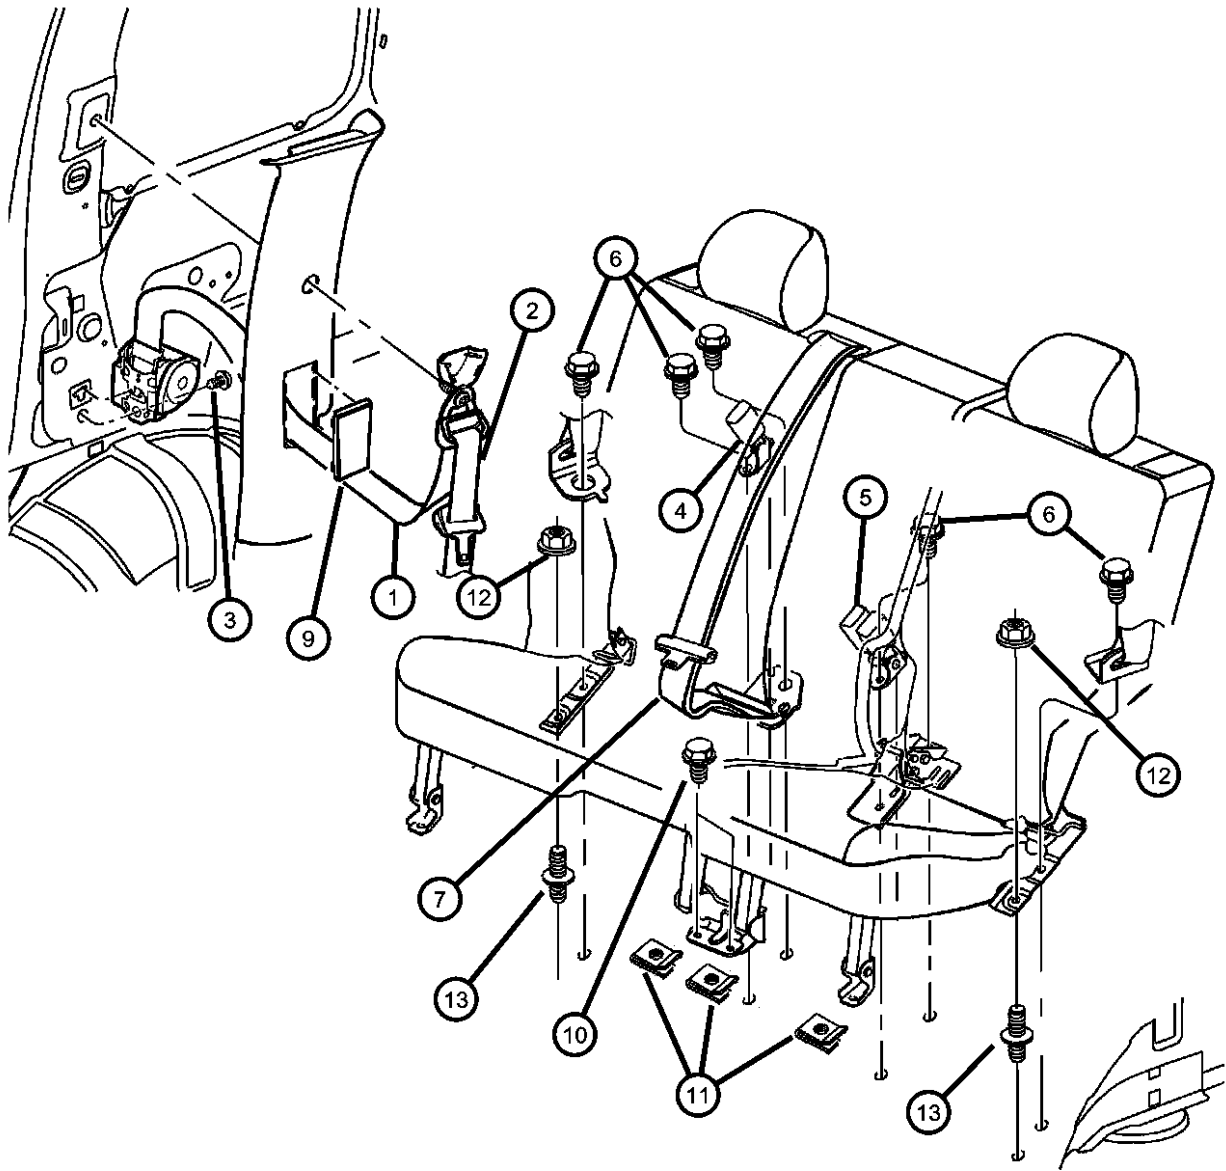

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5HK441D2AC	1	J, T					*DL	[D2, DV]
	5HK441DVAC	1						*J5	[DV]
		1	J, T					*XJ	[DV]
		1	J, T					*M5	[DV]
		1						*V5	
	5HK441L2AC	1	J, T					*DL	[L2]
	5HK441L5AC	1						*J5	[L5]
		1	J, T					*XJ	[L5]
		1	J, T					*M5	[L5]
-8									BUTTON, BELT WEBBING
	0YQ76XDVAA	1	J, T					*DL	
		1	J, T					*XJ	
		1	J, T					*M5	
		1						*L5	
		1	J, U					*E7	
		1						*K7	
		1	J, U					*DL	
		1	J, U					*XJ	
9									COVER, C Pillar
	0WR16WL5AA	1						*O0	[L2, L5], Right
	0WR16XD-VAA	1						*O0	[D2, DV], Right
	0WR17WL5AA	1						*O0	[L2, L5], Left
	0WR17XD-VAA	1						*O0	[D2, DV], Left
10	06101232	4							BOLT, Hex Flange Head, M8x1.25x25
11	06101283	4							U-NUT, M8x1.25
12	06507170AA	2							BOLT, Seat
13	06507170AA	2							STUD, M12x1.75x81.50, (NOT SERVICED)
-14									EXTENDER, Seat Belt


LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16v		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				ENO = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part



Seat Belts, Rear  
Figure IKJ-720

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	05086227AA	1	J, U						*O0
		1	J, T						*O0

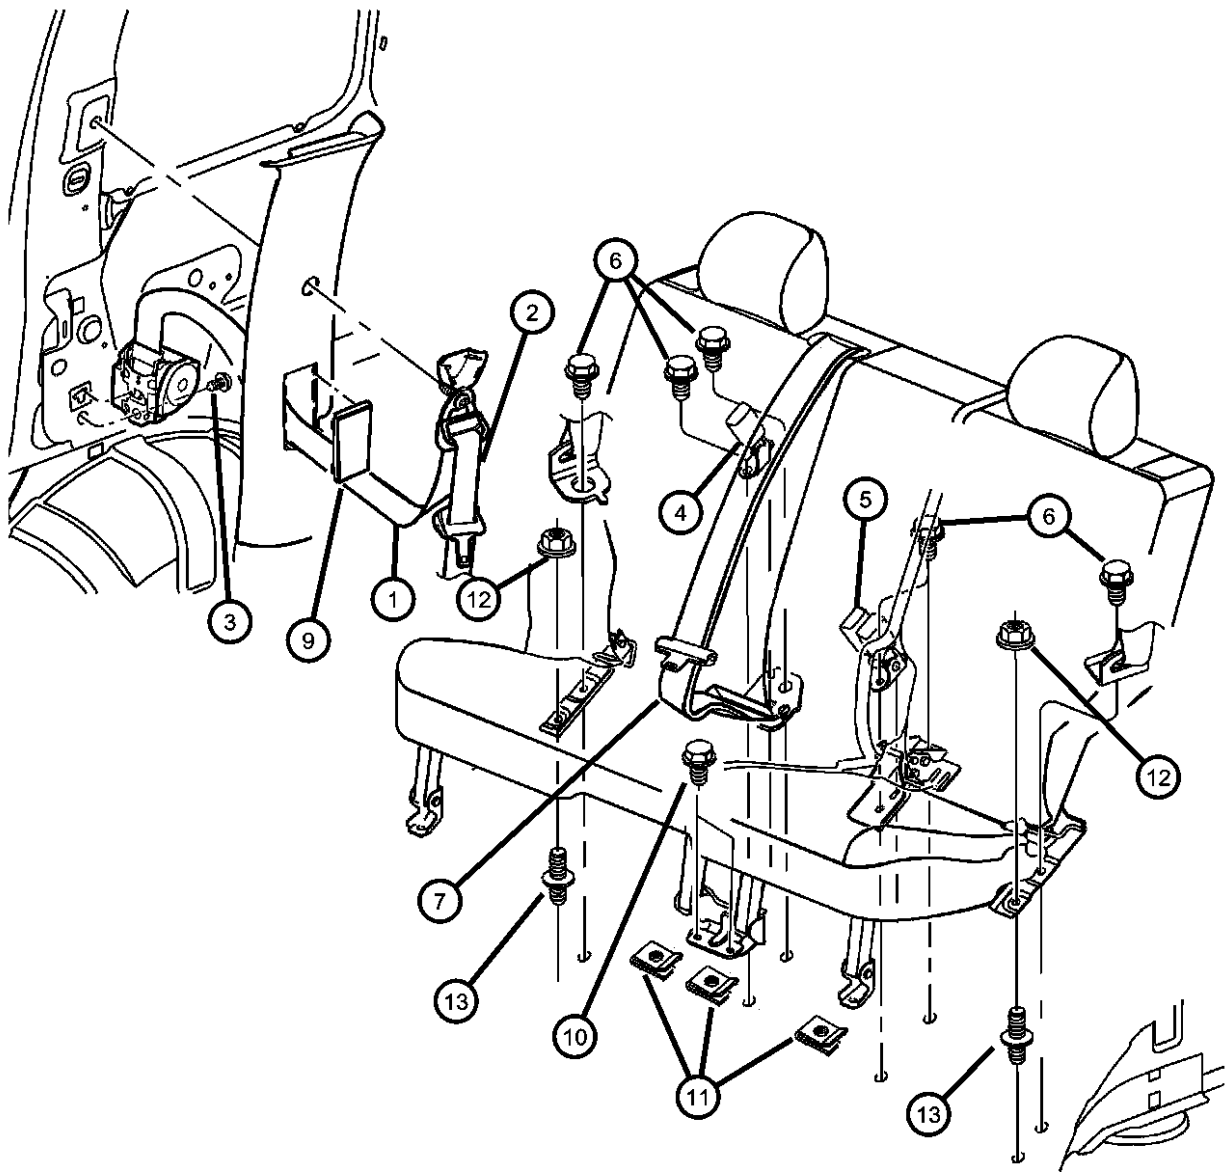

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)			DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
				ENJ = Engine -2.5L 4 Cyl 16V	Manual
				Turbo Diesel	DG4 = Transmission-Multi-Speed
				ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
				Turbo Diesel	DG6 = Transmission-4-Spd.
				ENO = 4Cyl Turbo Diesel	Automatic, 42RLE
				EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
				ED0 = All 2.4L	5-45RFE
					DBB = All Manual Transmissions
					DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Recliner and Adjuster  
Figure IKJ-810

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	1								SHIELD, Seat Adjuster, Manual Seat
	0ZH781DVAA	1						*V5	Right
		1						*J5	[DV], Right
		1						*F7	[DV], Right
		1	J, T					*M5	[DV], Right
		1						*A7	Right
		1	J, T					*XJ	[DV], Right
		1	J, U					*E7	[DV], Right
		1	J, U					*XJ	[DV], Right
	0ZH781L5AA	1						*J5	[L5], Right
		1						*F7	[L5], Right
		1	J, T					*M5	[L5], Right
		1	J, U					*E7	[L5], Right
		1	J, T					*XJ	[L5], Right
		1	J, U					*XJ	[L5], Right
	0ZH791DVAA	1						*J5	[DV], Left
		1						*F7	[DV], Left
		1	J, T					*M5	[DV], Left
		1	J, T					*XJ	[DV], Left
		1	J, U					*XJ	[DV], Left
		1						*V5	Left
		1	J, U					*E7	[DV], Left
		1						*A7	Left
	0ZH791L5AA	1						*J5	[L5], Left
		1						*F7	[L5], Left
		1	J, U					*XJ	[L5], Left
		1	J, T					*XJ	[L5], Left
		1	J, U					*E7	[L5], Left
		1	J, T					*M5	[L5], Left
2									ADJUSTER, Manual Seat
<div><div>LIBERTY (KJ) SERIES P = Limited H = Sport M = Renegade</div><div>LINE J = LHD (4WD) U = RHD (4WD) T = LHD (2WD)</div><div>BODY 74 = 4 Door (104.3 WB)</div><div>ENGINE ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel ENO = 4Cyl Turbo Diesel EKO = All 3.7L EDO = All 2.4L</div><div>TRANSMISSION DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions</div></div>									

Recliner and Adjuster  
Figure IKJ-810

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	05072104AA	1						*F7	Passenger
		1						*J5	Passenger
		1	J, U					*E7	Passenger
		1	J, U					*XJ	Passenger
		1						*V5	Passenger
		1	J, T					*XJ	Passenger
		1						*A7	Passenger
		1	J, T					*M5	Passenger
	05072107AA	1						*F7	Driver
		1	J, T					*M5	Driver
		1						*V5	Driver
		1						*J5	Driver
		1						*A7	Driver
		1	J, T					*XJ	Driver
		1	J, U					*E7	Driver
	05072107AB	1	J, U					*XJ	Driver
	3								RISER, Seat
	05072756AA	1	J, T					*M5	Passenger
		1						*V5	Passenger
		1						*J5	Passenger
		1						*F7	Passenger
		1						*A7	Passenger
	05072757AA	1						*J5	Driver
		1						*F7	Driver
		1	J, U					*E7	Passenger
		1						*V5	Driver
		1	J, T					*M5	Driver
		1						*A7	Driver
		1	J, U					*E7	Driver
	0UZ481DVAA	1	J, T					*XJ	[DV], Passenger

**LIBERTY (KJ)**  
SERIES      LINE  
P = Limited      J = LHD (4WD)  
H = Sport      U = RHD (4WD)  
M = Renegade      T = LHD (2WD)

**BODY**  
74 = 4 Door (104.3 WB)

**ENGINE**  
ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L

**TRANSMISSION**  
DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

Recliner and Adjuster  
Figure IKJ-810

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	J, U					*XJ	[DV], Passenger, Export
	0UZ481L5AA	1	J, U					*XJ	[L5], Passenger, Export
		1	J, T					*XJ	[L5], Passenger
	0UZ48XDVAA	1	J, T					*M5	[DV, L5], Used With Power Driver Seat, Passenger
	0UZ491DVAA	1	J, T					*XJ	[DV], Driver
		1	J, U					*XJ	[DV], Driver, Export
	0UZ491L5AA	1	J, U					*XJ	[L5], Driver, Export
		1	J, T					*XJ	[L5], Driver
	4								ADJUSTER, Manual Seat
	05072105AA	1						*J5	Passenger, Manual
		1						*F7	Passenger, Manual
		1						*V5	Passenger, Manual
		1	J, T					*M5	Passenger, Manual
		1						*A7	Passenger, Manual
		1	J, U					*E7	Passenger, Manual
		1	J, T					*XJ	Passenger, Manual
	05072106AA	1	J, U					*XJ	Passenger, Manual
		1						*J5	Driver, Manual
		1						*F7	Driver, Manual
		1	J, T					*XJ	Driver, Manual
		1	J, U					*XJ	Driver, Manual
		1						*V5	Driver, Manual
		1						*A7	Driver, Manual
		1	J, U					*E7	Driver, Manual
		1	J, T					*M5	Driver, Manual
	5								HANDLE, Towel Bar
	05072003AA	2	J, T					*M5	
		2						*J5	
		2	J, T					*XJ	
<div><div>LIBERTY (KJ) SERIES P = Limited H = Sport M = Renegade</div><div>LINE J = LHD (4WD) U = RHD (4WD) T = LHD (2WD)</div><div>BODY 74 = 4 Door (104.3 WB)</div><div>ENGINE ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel ENO = 4Cyl Turbo Diesel EKO = All 3.7L EDO = All 2.4L</div><div>TRANSMISSION DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions</div></div>									

AR = use ase required - = Non illustrated part

Recliner and Adjuster  
Figure IKJ-810

										ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
												2	J, U					*E7	
												2	J, U					*XJ	
												2						*F7	
												1	J, T					*M5	
												1						*V5	
												2						*A7	
										6									BOLT, Recliner
											05072128AA	8	J, T					*XJ	
												8	J, T					*DL	
												8	J, U					*E7	
												8						*F7	
												8	J, U					*DL	
												8	J, U					*XJ	
												8	J, T					*M5	
												8						*V5	
												8						*A7	
												8						*J5	
										7									BOLT, Recliner
											05093647AA	8	J, T					*M5	
												8	J, T					*XJ	
												8						*J5	
												8	J, U					*E7	
												8						*F7	
												8	J, T					*DL	
												8	J, U					*DL	
												8	J, U					*XJ	
												8						*V5	
												8						*A7	
										8									CABLE, Recliner
											05127463AA	2	J, T					*M5	
LIBERTY (KJ)																			
SERIES										LINE									
P = Limited										J = LHD (4WD)									
H = Sport										U = RHD (4WD)									
M = Renegade										T = LHD (2WD)									
										BODY									
										74 = 4 Door (104.3 WB)									
										ENGINE									
										ED1 = Engine - 2.4L 4 Cyl									
										DOHC 16v SMPI									
										EKG = Engine - 3.7L V6									
										ENJ = Engine -2.5L 4 Cyl 16V									
										Turbo Diesel									
										ENR = Engine - 2.8L 4 Cyl									
										Turbo Diesel									
										EN0 = 4Cyl Turbo Diesel									
										EKO = All 3.7L									
										ED0 = All 2.4L									
										TRANSMISSION									
										DDD = Transmission - 5-Speed HD									
										Manual									
										DDK = Transmission - 5-Speed HD									
										Manual									
										DG4 = Transmission-Multi-Speed									
										Auto, 45RFE									
										DG6 = Transmission-4-Spd.									
										Automatic, 42RLE									
										DGQ = Transmission-5-Spd Automatic									
										5-45RFE									
										DBB = All Manual Transmissions									
										DG0 = All Automatic Transmissions									


AR = use ase required - = Non illustrated part

Recliner and Adjuster  
Figure IKJ-810

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		2	J, T					*XJ	
		2	J, U					*E7	
		2	J, U					*XJ	
		2	J, U					*DL	
		2	J, T					*DL	
		2						*J5	
		2						*F7	
		2						*V5	
		2						*A7	
	9								SHIELD, Seat Adjuster
	0UZ421DVAA	1	J, U					*DL	[DV], Passenger, Inboard
	0UZ42TL2AA	1	J, U					*DL	[L2], Passenger, Inboard
	0UZ42WL5AA	1						*J5	[L5], Passenger, Inboard
		1						*F7	[L5], Passenger, Inboard
		1	J, T					*DL	[D2, L2], Passenger, Inboard
		1	J, U					*E7	[L5], Passenger, Inboard
		1	J, T					*M5	[L5], Passenger, Inboard
		1	J, U					*XJ	[L5], Passenger, Inboard
	0UZ42XDVAA	1						*J5	[DV], Passenger, Inboard
		1	J, T					*XJ	[L5], Passenger, Inboard
		1	J, U					*E7	[DV], Passenger, Inboard
		1						*F7	[DV], Passenger, Inboard
		1	J, U					*XJ	[DV], Passenger, Inboard
		1						*V5	Passenger, Inboard
		1						*A7	Passenger, Inboard
		1	J, T					*M5	[DV], Passenger, Inboard
		1	J, T					*XJ	[DV], Passenger, Inboard
	0UZ43TL2AA	1	J, T					*DL	[D2, L2], Driver, Inboard
		1	J, U					*DL	[L2], Driver, Inboard
	0UZ43WL5AA	1	J, U					*E7	[L5], Driver, Inboard
<div><div>LIBERTY (KJ) SERIES P = Limited H = Sport M = Renegade</div><div>LINE J = LHD (4WD) U = RHD (4WD) T = LHD (2WD)</div><div>BODY 74 = 4 Door (104.3 WB)</div><div>ENGINE ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel ENO = 4Cyl Turbo Diesel EKO = All 3.7L EDO = All 2.4L</div><div>TRANSMISSION DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions</div></div>									

AR = use ase required - = Non illustrated part

Recliner and Adjuster  
Figure IKJ-810

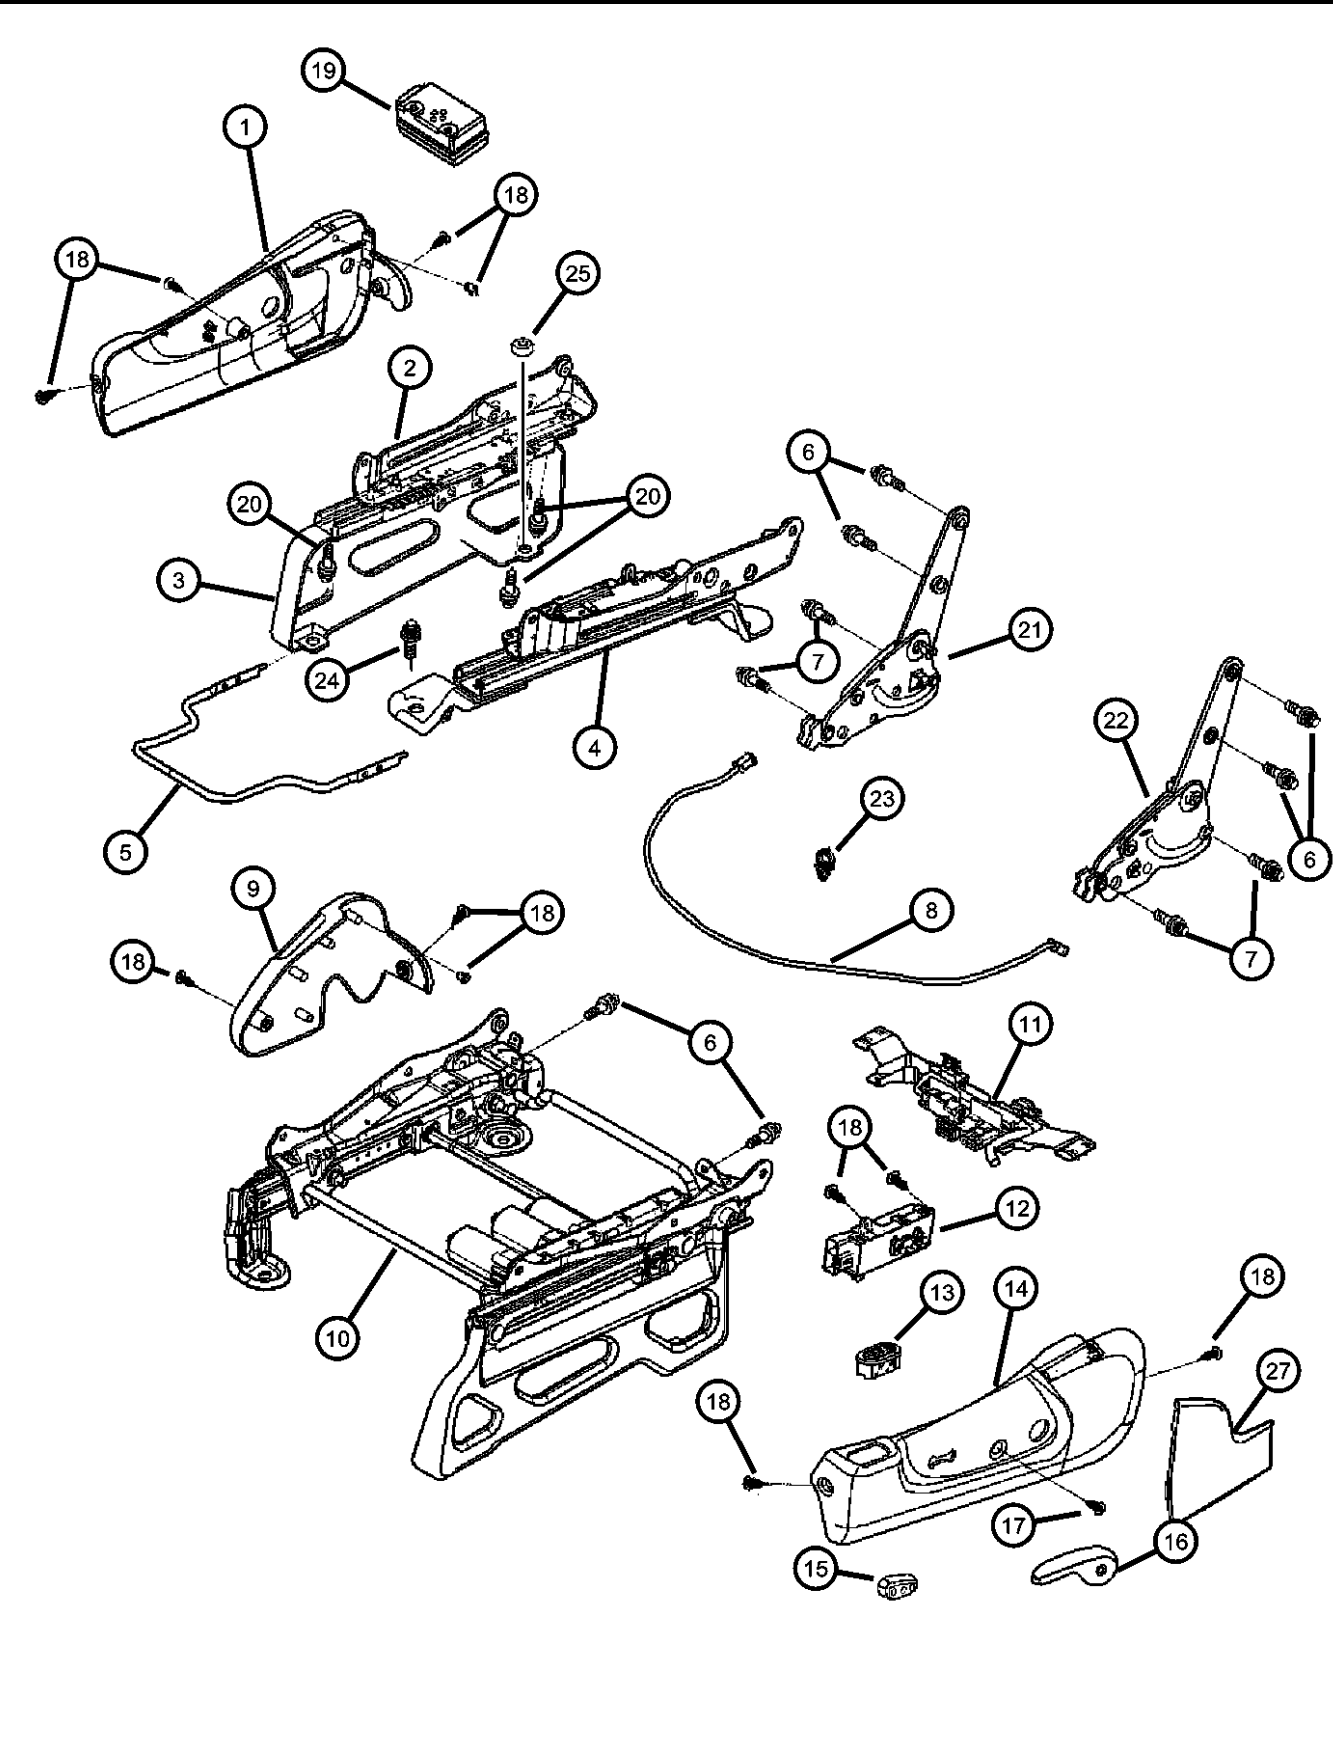
ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION	
	0UZ43XDVAA	1	J, T					*M5	[L5], Driver, Inboard	
		1	J, U					*XJ	[L5], Driver, Inboard	
		1							*J5	[L5], Driver, Inboard
		1	J, T					*XJ	[L5], Driver, Inboard	
		1							*F7	[L5], Driver, Inboard
		1	J, T					*M5	[DV], Driver, Inboard	
		1	J, U					*DL	[DV], Driver, Inboard	
		1	J, U					*E7	[DV], Driver, Inboard	
		1						*J5	[DV], Driver, Inboard	
		1	J, T					*XJ	[DV], Driver, Inboard	
	10	0WZ34DX9AA	1	J, U					*XJ	[DV], Driver, Inboard
			1						*V5	Driver, Inboard
		0WZ34WL8AA	1	J, U					*F7	[DV], Driver, Inboard
			1	J, T					*A7	Driver, Inboard
		0WZ34XD-VAA	1	J, U					ADJUSTER, Power Seat	
			1	J, U					*A7	Passenger
		0WZ35DX9AA	1	J, U					*F7	[DV, L5], Passenger
			1	J, T					*DL	[L2], Passenger
		0WZ35WL8AA	1	J, U					*DL	[L2] RHD, Driver
			1	J, U					*XJ	[L5], Passenger
	1		J, U					*XJ	[DV], Passenger	
	1		J, U					*DL	[DV], Passenger	
	1		J, T					*DL	[D2] RHD, Driver	
	<div><div>LIBERTY (KJ) SERIES P = Limited H = Sport M = Renegade</div><div>LINE J = LHD (4WD) U = RHD (4WD) T = LHD (2WD)</div></div> <div><div>BODY 74 = 4 Door (104.3 WB)</div><div>ENGINE ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel ENO = 4Cyl Turbo Diesel EKO = All 3.7L EDO = All 2.4L</div><div>TRANSMISSION DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions</div></div>									

Recliner and Adjuster  
Figure IKJ-810

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	0WZ35XD-VAA	1	J, T					*DL	[L2] RHD, Passenger
		1	J, T					*DL	[D2] RHD, Passenger
		1	J, U					*DL	[DV], Driver
		1	J, T					*XJ	[DV], Driver
		1	J, U					*XJ	[DV], Driver
		1	J, T					*M5	[DV, L5], Driver
	11								WIRING, Power Seat
	05127453AA	1	J, U					*DL	Non-Heated, Left, Power
		1						*J5	, Left, Power
		1						*F7	Left, Power
		1	J, U					*XJ	Left, Power
		1						*A7	Non-Heated, Left, Power
		1	J, T					*XJ	Left, Power
		1	J, T					*M5	Left, Power
	05127454AA	1	J, T					*DL	Non-Heated, Left, Power
	05127455AA	1	J, T					*DL	Non-Heated, Domestic, Right, Power
		1	J, U					*DL	Heated, Left, Power
	05127456AA	1	J, T					*DL	Heated, Left, Power
	05127462AA	1	J, U					*DL	Heated, Domestic, Right, Power
		1						*DL	Non-Heated, Export, Right, Power
12		1	J, U					*F7	Right, Power
		1	J, U					*XJ	Right, Power
		1	J, T					*A7	Non-Heated, Right, Power
	05127464AA	1	J, U					*DL	Non-Heated, Mexico, Right, Power
		1	J, T					*DL	Heated, Expot, Right, Power
		1	J, T					*DL	Heated, Mexico, Right, Power
	55352782AA	1	J, T						SWITCH, Seat
								*M5	
<div><div><div>LIBERTY (KJ)</div><div>SERIES</div><div>P = Limited</div><div>H = Sport</div><div>M = Renegade</div></div><div><div>LINE</div><div>J = LHD (4WD)</div><div>U = RHD (4WD)</div><div>T = LHD (2WD)</div></div><div><div>BODY</div><div>74 = 4 Door (104.3 WB)</div></div><div><div>ENGINE</div><div>ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI</div><div>EKG = Engine - 3.7L V6</div><div>ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel</div><div>ENR = Engine - 2.8L 4 Cyl Turbo Diesel</div><div>ENO = 4Cyl Turbo Diesel</div><div>EK0 = All 3.7L</div><div>ED0 = All 2.4L</div></div><div><div>TRANSMISSION</div><div>DDD = Transmission - 5-Speed HD Manual</div><div>DDK = Transmission - 5-Speed HD Manual</div><div>DG4 = Transmission-Multi-Speed Auto, 45RFE</div><div>DG6 = Transmission-4-Spd. Automatic, 42RLE</div><div>DGQ = Transmission-5-Spd Automatic 5-45RFE</div><div>DBB = All Manual Transmissions</div><div>DG0 = All Automatic Transmissions</div></div></div>									



Recliner and Adjuster  
Figure IKJ-810

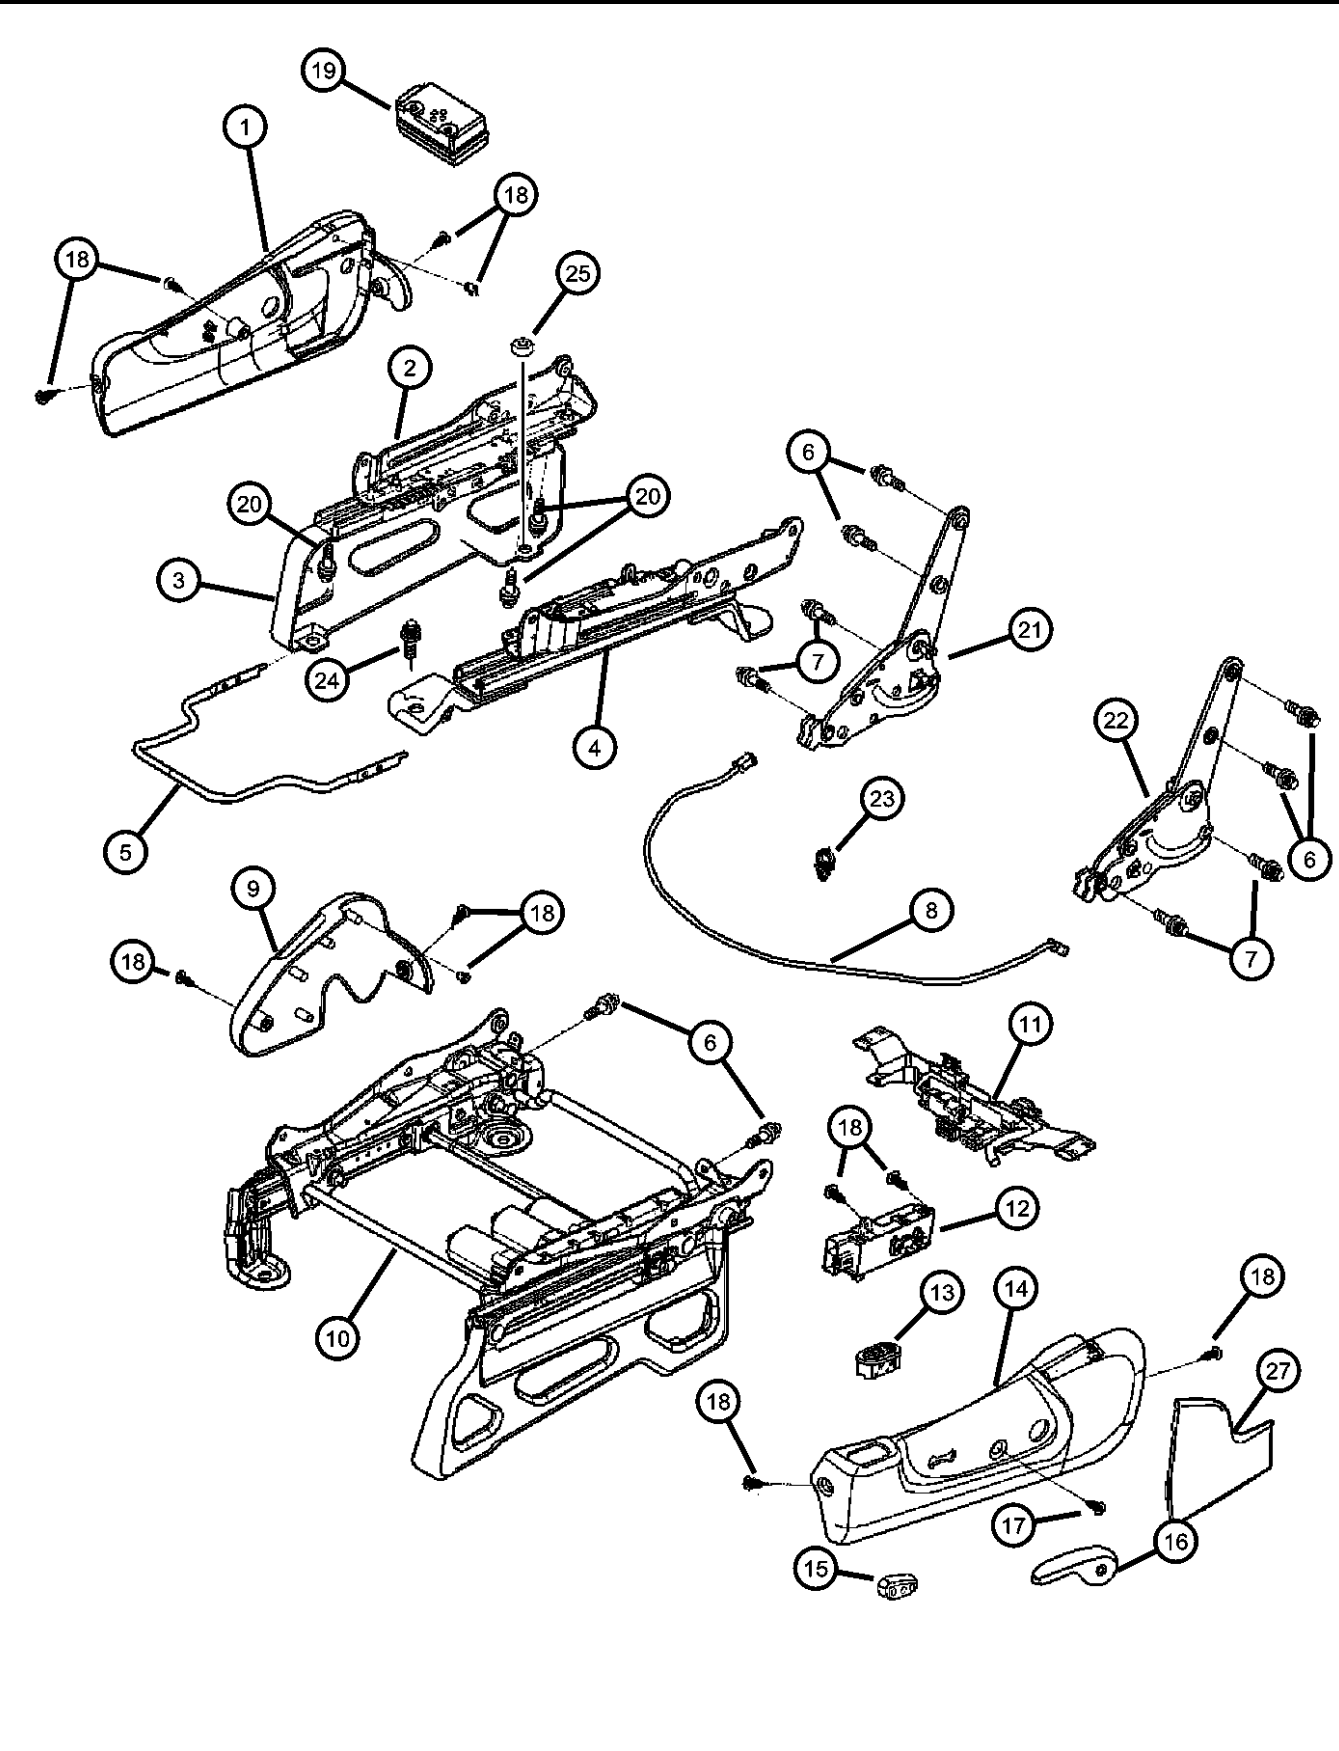ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	J, T					*XJ	
		2	J, U					*XJ	
		2	J, U					*DL	
		2						*F7	
		1						*J5	
		2	J, T					*DL	
		2						*A7	
	13								SWITCH, Heated Seat
	5GW44DX9AB	2	J, T					*DL	
		2	J, U					*DL	
14									SHIELD, Seat Adjuster, Power Seat
	0ZH841DVAA	1						*F7	[DV], Non-Heated, Right
		1	J, U					*DL	[DV], Non-Heated, Right
		1	J, U					*XJ	[DV], Non-Heated, Right
		1						*A7	Right
	0ZH841L2AA	1	J, T					*DL	[D2, L2], Non-Heated, Right
		1	J, U					*DL	[L2], Non-Heated, Right
	0ZH841L5AA	1						*F7	[L5], Non-Heated, Right
		1	J, U					*XJ	[L5], Non-Heated, Right
	0ZH851DVAA	1						*J5	[DV], Non-Heated, Left
		1						*F7	[DV], Non-Heated, Left
		1	J, T					*M5	[DV], Non-Heated, Left
		1	J, U					*XJ	[DV], Non-Heated, Left
		1						*A7	Left
		1	J, T					*XJ	[DV], Non-Heated, Left
		1	J, U					*DL	[DV], Non-Heated, Left
	0ZH851L2AA	1	J, T					*DL	[D2, L2], Non-Heated, Left
		1	J, U					*DL	[L2], Non-Heated, Left
	0ZH851L5AA	1						*J5	[L5], Non-Heated, Left
<div><div><div>LIBERTY (KJ)</div><div>SERIES</div><div>P = Limited H = Sport M = Renegade</div></div><div><div>LINE</div><div>J = LHD (4WD) U = RHD (4WD) T = LHD (2WD)</div></div><div><div>BODY</div><div>74 = 4 Door (104.3 WB)</div></div><div><div>ENGINE</div><div>ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel EN0 = 4Cyl Turbo Diesel EKO = All 3.7L ED0 = All 2.4L</div></div><div><div>TRANSMISSION</div><div>DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions</div></div></div>									

Recliner and Adjuster  
Figure IKJ-810

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1						*F7	[L5], Non-Heated, Left
		1	J, T					*XJ	[L5], Non-Heated, Left
		1	J, T					*M5	[L5], Non-Heated, Left
		1	J, U					*XJ	[L5], Non-Heated, Left
	0ZH861DVAA	1	J, U					*DL	[DV], Heated, Right
	0ZH861L2AA	1	J, U					*DL	[L2], Heated, Right
		1	J, T					*DL	[D2, L2], Heated, Right
	0ZH871DVAA	1	J, U					*DL	[DV], Heated, Left
	0ZH871L2AA	1	J, U					*DL	[L2], Heated, Left
		1	J, T					*DL	[D2, L2], Heated, Left
	15								KNOB, Power Seat Switch
	04607042AB	1						*F7	Right
		1	J, T					*DL	Right
		1	J, U					*DL	Right
	04607043AB	1	J, T					*M5	Left
		1	J, T					*XJ	Left
		1						*A7	Right
		1	J, U					*XJ	Right
		1	J, U					*DL	Left
		1	J, T					*DL	Left
		1	J, U					*XJ	Left
		1						*A7	Left
		1						*F7	Left
		1						*J5	Left
	16								HANDLE, Recliner
	0UZZ281DVAB	1						*J5	[DV], Right
		1						*F7	[DV], Right
		1	J, U					*DL	[DV], Right
		1	J, T					*M5	[DV], Right
		1						*V5	[DV], Right
<div><div>LIBERTY (KJ) SERIES P = Limited H = Sport M = Renegade</div><div>LINE J = LHD (4WD) U = RHD (4WD) T = LHD (2WD)</div><div>BODY 74 = 4 Door (104.3 WB)</div><div>ENGINE ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel ENO = 4Cyl Turbo Diesel EKO = All 3.7L EDO = All 2.4L</div><div>TRANSMISSION DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions</div></div>									

AR = use ase required - = Non illustrated part

Recliner and Adjuster  
Figure IKJ-810

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	J, U					*E7	[DV], Right
		1	J, U					*XJ	[DV], Right
		1						*A7	[DV], Right
		1	J, T					*XJ	[DV], Right
	0UZ281L2AB	1	J, U					*DL	[L2], Right
		1	J, T					*DL	[D2, L2], Right
	0UZ281L5AB	1						*J5	[L5], Right
		1						*F7	[L5], Right
		1	J, T					*M5	[L5], Right
		1	J, U					*E7	[L5], Right
		1	J, U					*XJ	[L5], Right
		1	J, T					*XJ	[L5], Right
	0UZ291DVAB	1						*J5	[DV], Left
		1						*F7	[DV], Left
		1	J, T					*XJ	[DV], Left
		1	J, U					*E7	[DV], Left
		1	J, U					*DL	[DV], Left
		1						*V5	[DV], Left
		1	J, T					*M5	[DV], Left
		1	J, U					*XJ	[DV], Left
	0UZ291L2AB	1	J, U					*DL	[L2], Left
		1	J, T					*DL	[D2, L2], Left
		1						*A7	[DV], Left
	0UZ291L5AB	1						*J5	[L5], Left
		1						*F7	[L5], Left
		1	J, T					*M5	[L5], Left
		1	J, U					*E7	[L5], Left
		1	J, U					*XJ	[L5], Left
		1	J, T					*XJ	[L5], Left
	17								SCREW, Recliner Handle
<div><div>LIBERTY (KJ) SERIES P = Limited H = Sport M = Renegade</div><div>LINE J = LHD (4WD) U = RHD (4WD) T = LHD (2WD)</div><div>BODY 74 = 4 Door (104.3 WB)</div><div>ENGINE ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel EN0 = 4Cyl Turbo Diesel EK0 = All 3.7L ED0 = All 2.4L</div><div>TRANSMISSION DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions</div></div>									

Recliner and Adjuster  
Figure IKJ-810

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION	
	05072127AB	2	J, T					*M5		
		2	J, T					*XJ		
		2	J, U					*E7		
		2	J, U					*XJ		
		2	J, U					*DL		
		2	J, T					*DL		
		2						*J5		
		2						*F7		
		2						*V5		
		2						*A7		
	18									SCREW, Trim
	05072741AA	8	J, T					*M5		
		8	J, T					*XJ		
		8	J, U					*E7		
		8	J, U					*XJ		
		8	J, U					*DL		
		8	J, U					*DL		
		8						*J5		
		8						*F7		
		8						*V5		
		8						*A7		
	19								MODULE, Heated Seat Control	
	56010113AA	1	J, T					*DL		
		1	J, U					*DL		
20	06101452	4							SCREW AND WASHER, Hex Head, M8x1.25x20	
21	05072020AA								RECLINER, Front Seat Back	
		1						*J5	Right, Outboard	
		1						*F7	Right, Outboard	
		1	J, U					*XJ	Right, Outboard	
<div><div><div>LIBERTY (KJ)</div><div>SERIES</div><div>P = Limited H = Sport M = Renegade</div></div><div><div>LINE</div><div>J = LHD (4WD) U = RHD (4WD) T = LHD (2WD)</div></div><div><div>BODY</div><div>74 = 4 Door (104.3 WB)</div></div><div><div>ENGINE</div><div>ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI EKG = Engine - 3.7L V6 ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel ENR = Engine - 2.8L 4 Cyl Turbo Diesel EN0 = 4Cyl Turbo Diesel EK0 = All 3.7L ED0 = All 2.4L</div></div><div><div>TRANSMISSION</div><div>DDD = Transmission - 5-Speed HD Manual DDK = Transmission - 5-Speed HD Manual DG4 = Transmission-Multi-Speed Auto, 45RFE DG6 = Transmission-4-Spd. Automatic, 42RLE DGQ = Transmission-5-Spd Automatic 5-45RFE DBB = All Manual Transmissions DG0 = All Automatic Transmissions</div></div></div>										

Recliner and Adjuster  
Figure IKJ-810

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION	
		1	J, T					*XJ	Right, Outboard	
		1	J, U					*E7	Right, Outboard	
		1						*V5	Right, Outboard	
		1						*A7	Right, Outboard	
		1	J, T					*M5	Right, Outboard	
		1	J, T					*DL	Right, Outboard	
		1	J, U					*DL	Right, Outboard	
	05072022AA	1	J, U					*DL	Left, Inboard	
		1						*J5	Left, Inboard	
		1						*F7	Left, Inboard	
		1	J, T					*M5	Left, Inboard	
		1	J, U					*XJ	Left, Inboard	
		1	J, T					*XJ	Left, Inboard	
		1	J, U					*E7	Left, Inboard	
		1	J, T					*DL	Left, Inboard	
		1						*A7	Left, Inboard	
		1						*V5	Left, Inboard	
	22									RECLINER, Front Seat Back
	05072021AA	1	J, U						*DL	Right, Inboard
		1	J, T						*DL	Right, Inboard
	1							*J5	Right, Inboard	
	1	J, U						*E7	Right, Inboard	
	1							*F7	Right, Inboard	
	1	J, T						*XJ	Right, Inboard	
	1							*A7	Right, Inboard	
	1	J, U						*XJ	Right, Inboard	
	1	J, T						*M5	Right, Inboard	
	1							*V5	Right, Inboard	
05072023AA	1	J, U						*DL	Left, Outboard	
	1	J, T						*DL	Left, Outboard	

LIBERTY (KJ)

SERIES

P = Limited

H = Sport

M = Renegade

LINE

J = LHD (4WD)

U = RHD (4WD)

T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI

EKG = Engine - 3.7L V6

ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel

ENR = Engine - 2.8L 4 Cyl Turbo Diesel

ENO = 4Cyl Turbo Diesel

EK0 = All 3.7L

ED0 = All 2.4L

TRANSMISSION

DDD = Transmission - 5-Speed HD Manual

DDK = Transmission - 5-Speed HD Manual

DG4 = Transmission-Multi-Speed Auto, 45RFE

DG6 = Transmission-4-Spd. Automatic, 42RLE

DGQ = Transmission-5-Spd Automatic 5-45RFE


DBB = All Manual Transmissions

DG0 = All Automatic Transmissions

Recliner and Adjuster  
Figure IKJ-810


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION	
		1						*F7	Left, Outboard	
		1						*J5	Left, Outboard	
		1	J, T					*XJ	Left, Outboard	
		1	J, T					*M5	Left, Outboard	
		1	J, U					*E7	Left, Outboard	
		1	J, U					*XJ	Left, Outboard	
		1						*V5	Left, Outboard	
		1						*A7	Left, Outboard	
	23									CLIP, Cable
	05072013AA	4	J, T					*M5		
		4	J, T					*XJ		
		4	J, U					*E7		
		4	J, U					*XJ		
		4	J, U					*DL		
		4	J, T					*DL		
		4						*J5		
		4						*F7		
		4						*A7		
		4						*V5		
24	06506791AA	6							SCREW, Seat	
25	06507170AA	2							BOLT, Seat	
-26	04754806	1	U						BRACKET, Attaches Flare to Front Outboard Riser, Japan Only	
27									COVER, Seat Belt Anchor	
	5JX80TL2AA	1						*O0	[D2, L2], Right	
	5JX80WL5AA	1						*O0	[L5], Right	
	5JX80XDVAA	1						*O0	[DV], Right	
	5JX81TL2AA	1						*O0	[D2, L2], Left	
	5JX81XDVAA	1						*O0	[DV], Left	
	5JX81WL5AA	1						*O0	[L5], Left	
<div><div><div>LIBERTY (KJ)</div><div>SERIES</div><div>P = Limited</div><div>H = Sport</div><div>M = Renegade</div></div><div><div>LINE</div><div>J = LHD (4WD)</div><div>U = RHD (4WD)</div><div>T = LHD (2WD)</div></div></div> <div><div>BODY</div><div>74 = 4 Door (104.3 WB)</div></div> <div><div>ENGINE</div><div>ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI</div><div>EKG = Engine - 3.7L V6</div><div>ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel</div><div>ENR = Engine - 2.8L 4 Cyl Turbo Diesel</div><div>ENO = 4Cyl Turbo Diesel</div><div>EK0 = All 3.7L</div><div>ED0 = All 2.4L</div></div> <div><div>TRANSMISSION</div><div>DDD = Transmission - 5-Speed HD Manual</div><div>DDK = Transmission - 5-Speed HD Manual</div><div>DG4 = Transmission-Multi-Speed Auto, 45RFE</div><div>DG6 = Transmission-4-Spd. Automatic, 42RLE</div><div>DGQ = Transmission-5-Spd Automatic 5-45RFE</div><div>DBB = All Manual Transmissions</div><div>DG0 = All Automatic Transmissions</div></div>										

Swing Gate Trim Panel  
Figure IKJ-1010

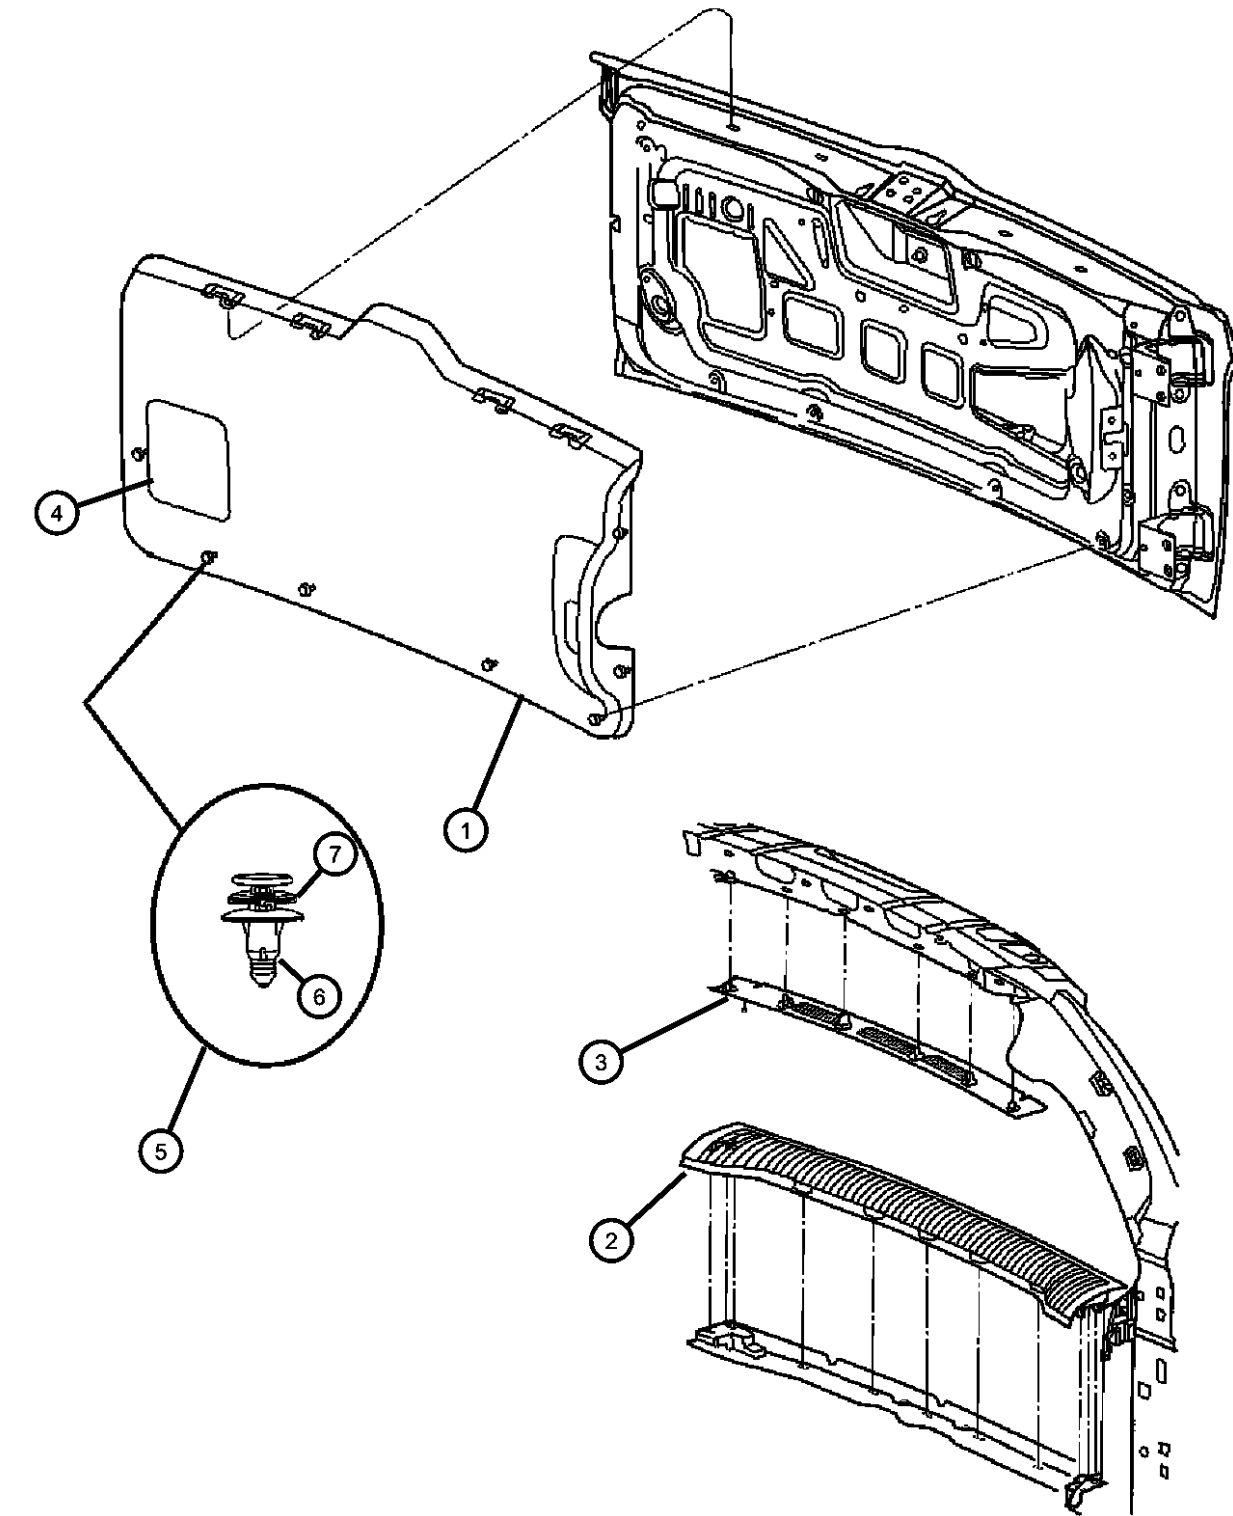
										ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
										1	5GE89WL5AJ	1						*O0	PANEL, Liftgate Lower
											5GE89XDVAJ	1						*O0	[L2, L5] [D2, DV]
										2	5GE73WL5AJ	1						*O0	PLATE, Liftgate Scuff, Lower
											5GE73XDVAJ	1						*O0	[L2, L5] [D2, DV]
										3	5GP80WL5AI	1						*O0	MOLDING, Headliner
											5GP80XDVAI	1						*O0	[L2, L5] [D2, DV]
										4	0WZ20WL5AA	1						*O0	PANEL, Liftgate Glass Latch
											0WZ20XD-VAA	1						*O0	[L2, L5] [D2, DV]
										5	05023173AA	9						*O0	RETAINER, Trim Panel
										6	05023174AA	9						*O0	PIN, Push
										7	05023175AA	9						*O0	GROMMET
										<div><div>LIBERTY (KJ)</div><div><div>SERIES</div><div>P = Limited</div><div>H = Sport</div><div>M = Renegade</div></div><div><div>LINE</div><div>J = LHD (4WD)</div><div>U = RHD (4WD)</div><div>T = LHD (2WD)</div></div><div><div>BODY</div><div>74 = 4 Door (104.3 WB)</div></div><div><div>ENGINE</div><div>ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI</div><div>EKG = Engine - 3.7L V6</div><div>ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel</div><div>ENR = Engine - 2.8L 4 Cyl Turbo Diesel</div><div>ENO = 4Cyl Turbo Diesel</div><div>EK0 = All 3.7L</div><div>ED0 = All 2.4L</div></div><div><div>TRANSMISSION</div><div>DDD = Transmission - 5-Speed HD Manual</div><div>DDK = Transmission - 5-Speed HD Manual</div><div>DG4 = Transmission-Multi-Speed Auto, 45RFE</div><div>DG6 = Transmission-4-Spd. Automatic, 42RLE</div><div>DGQ = Transmission-5-Spd Automatic 5-45RFE</div><div>DBB = All Manual Transmissions</div><div>DG0 = All Automatic Transmissions</div></div></div>									
										AR = use ase required    - = Non illustrated part									

# Group - SKJ

## Body Sheet Metal Except Doors

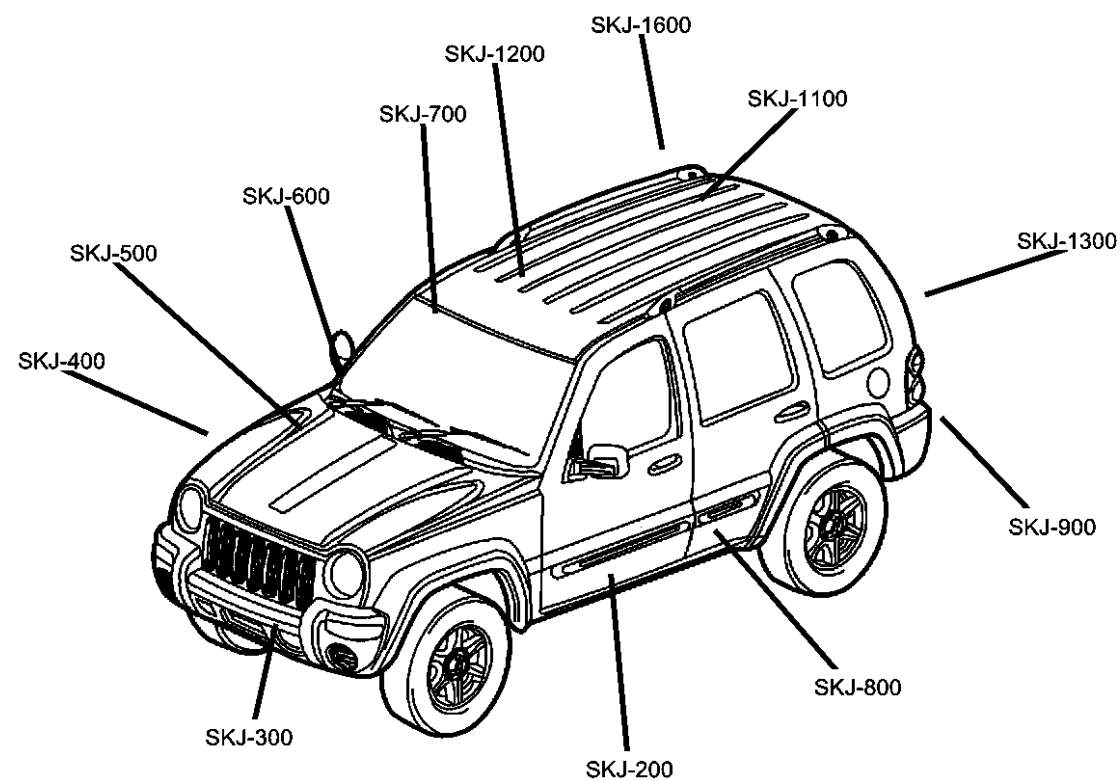


**SKJ-1100**  
Roof Panels



**SKJ-1200**  
Sunroof




**SKJ-1300**  
Liftgate Panel

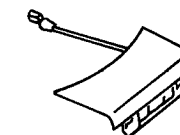

**SKJ-1600**  
Luggage Rack




**SKJ-200**  
Floor Pans

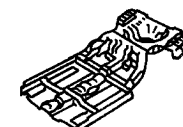


**SKJ-300**  
Plugs




**SKJ-400**  
Front Fenders

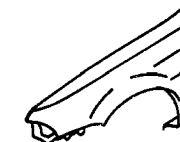


**SKJ-500**  
Hood & Hood Release

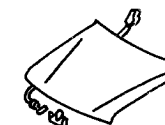


**SKJ-600**  
Cowl and Dash Panel



**SKJ-700**  
Glass and Rear View Mirror



**SKJ-800**  
Aperture Panel

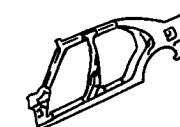

**SKJ-900**  
Quarter Panel and Pillar






Group - SKJ Body Sheet Metal Except Doors

Illustration Title	Group-Fig. No.
<b>Floor Pans</b>	
Front Floor Pan.....	Fig. SKJ - 210
Rear Floor Pan .....	Fig. SKJ - 220
Plates, Underbody Skid.....	Fig. SKJ - 230
<b>Plugs</b>	
Plugs .....	Fig. SKJ - 310
<b>Front Fenders</b>	
Front Fender.....	Fig. SKJ - 410
<b>Hood &amp; Hood Release</b>	
Hood, Latch and Hinges .....	Fig. SKJ - 510
<b>Cowl and Dash Panel</b>	
Cowl and Dash Panel.....	Fig. SKJ - 610
<b>Glass and Rear View Mirror</b>	
Windshield, Quarter Window, Backlite and Mirror .....	Fig. SKJ - 710
<b>Aperture Panel</b>	
Panels, Body Side.....	Fig. SKJ - 810
<b>Quarter Panel and Pillar</b>	
Panels, Rear Quarter .....	Fig. SKJ - 910
Fuel Filler Housing and Door.....	Fig. SKJ - 920
<b>Roof Panels</b>	
Roof Panel.....	Fig. SKJ - 1110
<b>Sunroof</b>	
Sunroof.....	Fig. SKJ - 1210
<b>Liftgate Panel</b>	
Swing Gate, Latch, and Hinges .....	Fig. SKJ - 1310
<b>Luggage Rack</b>	
Luggage Rack.....	Fig. SKJ - 1610

Front Floor Pan  
Figure SKJ-210

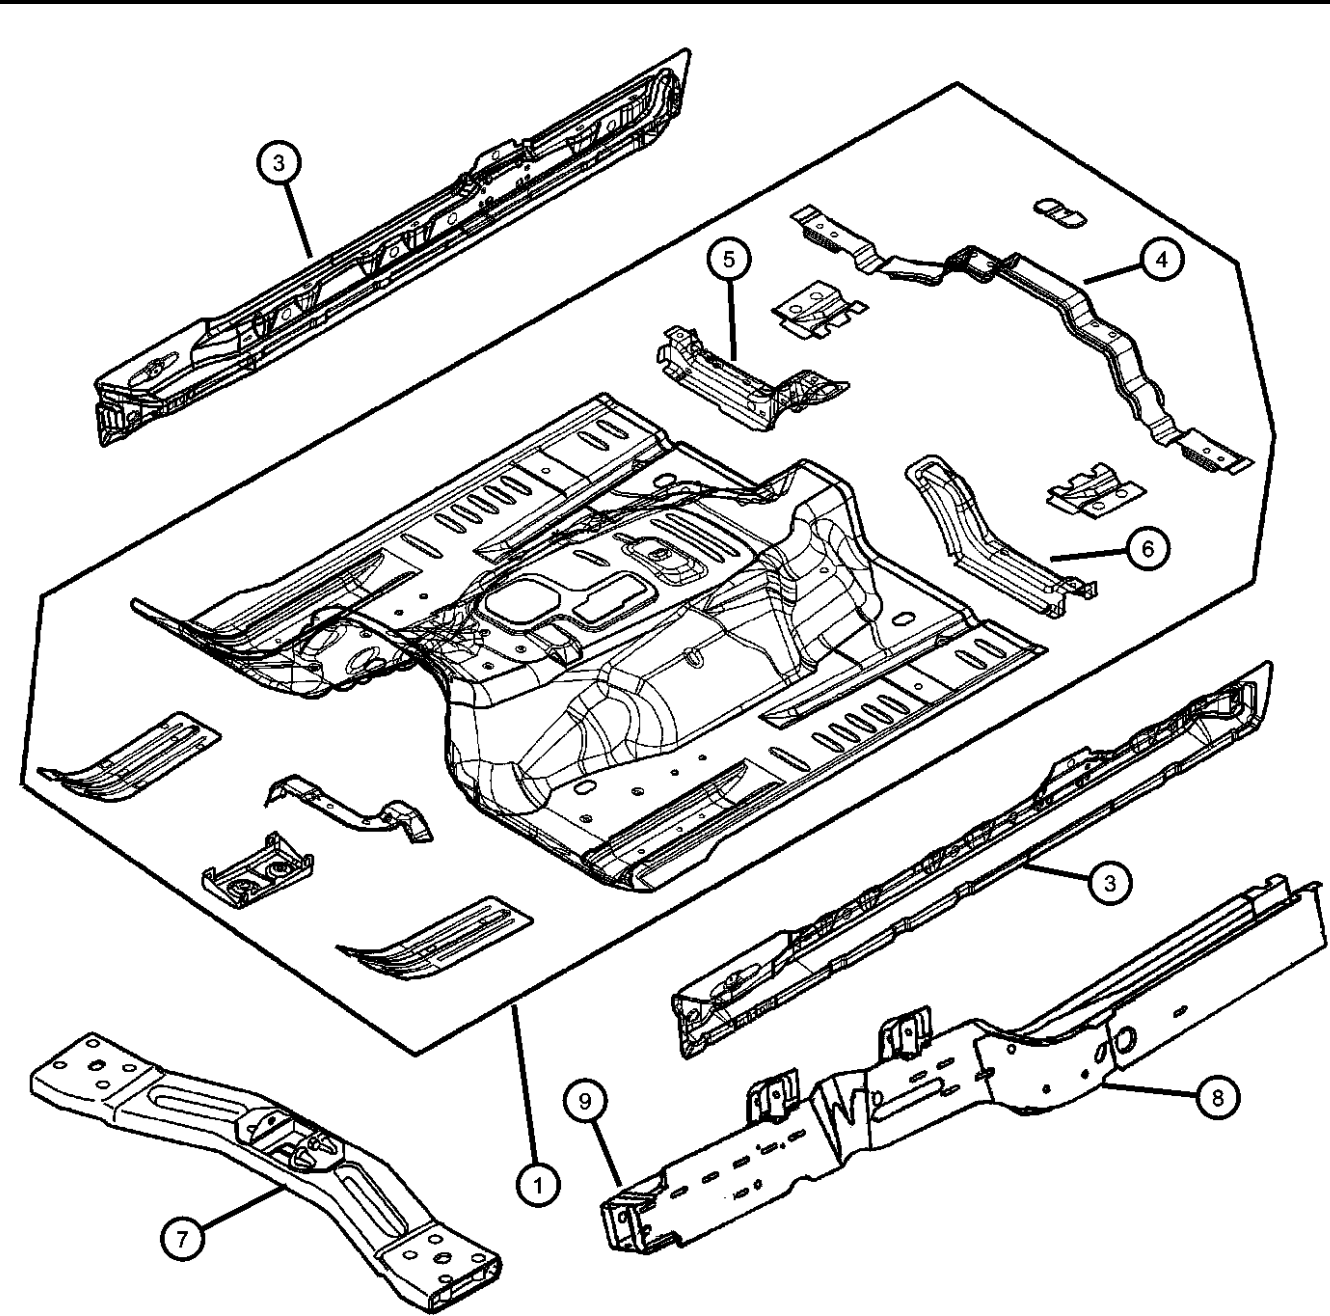


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55360589AB	1							PAN, Floor
-2	06507033AA	4							STUD, Sled Attachment
3									SILL, Body Side
	55176878AD	1							Right
	55176879AD	1							Left
4	56052085AA	1							CROSSMEMBER, Front Seat Retention, Rear
5	56052086AA	2							CROSSMEMBER, Front Seat RetentionRight
6	56052087AA	2							CROSSMEMBER, Front Seat RetentionLeft
7									CROSSMEMBER, Transmission
	52128702AA	1							Diesel
	52128707AA	1							PANEL, Sill
8									Right
	05103422AA	1							Left
	05103423AA	1							
9	55360168AA	1	J, T, U		74				BRACKET, Frame Rail
-10	55176760AB	1	J, T, U		74				BRACKET, Frame Rail, Radiator to crossmember bracket

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear Floor Pan  
Figure SKJ-220

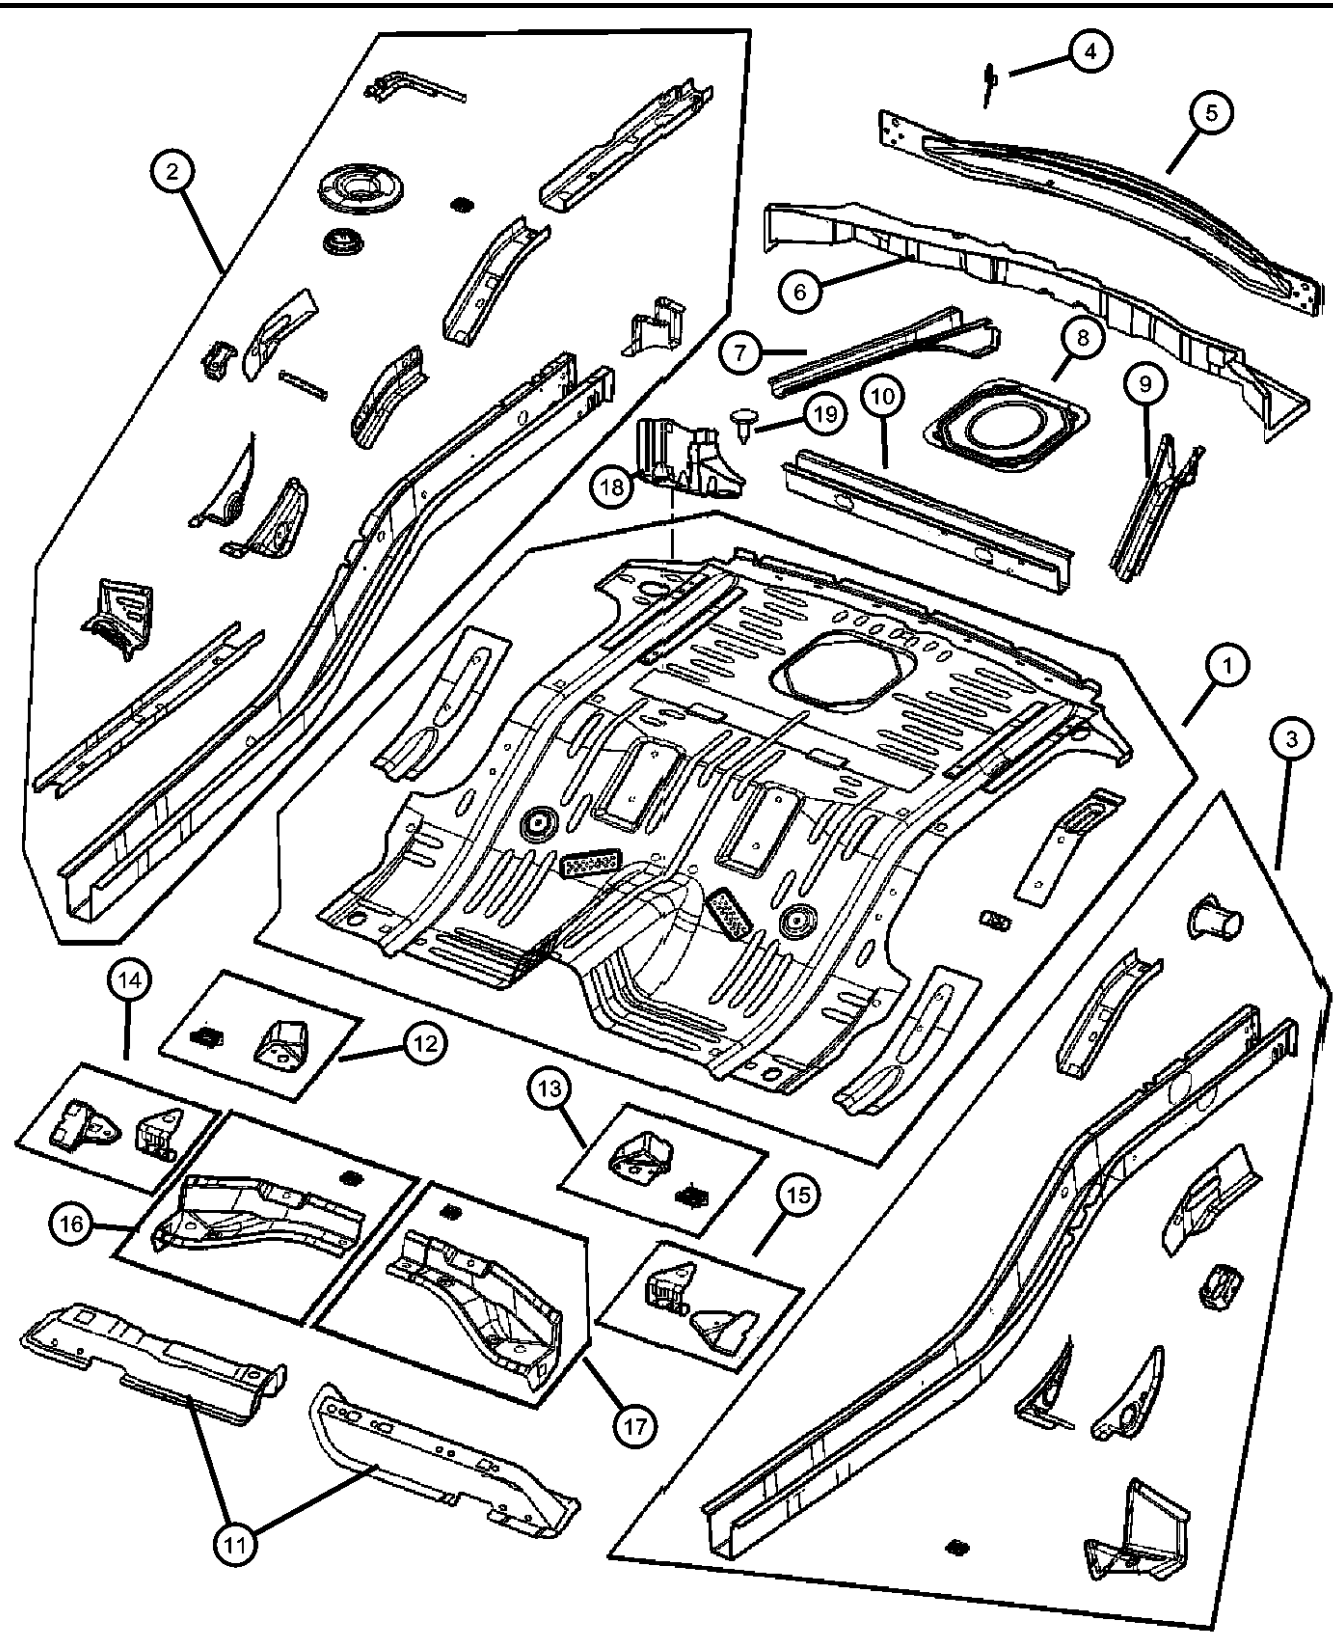


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55360015AE	1							PAN, Floor
2	05080850AA	1							SILL, RearRight
3	05080851AB	1							SILL, RearLeft
4									BAFFLE, Air
	55360260AA	1							Right
	55360261AA	1							Left
5	55360371AA	1							REINFORCEMENT, Liftgate Opening
6	55176846AA	1							CROSSMEMBER, Floor Pan
7	56022913AB	1							SUPPORT, Fuel Tank
8	55360187AA	1							DOOR, Fuel Fill
9	56022914AB	1							SUPPORT, Fuel Tank
10	56022915AB	1							CROSSMEMBER, Floor Pan
11									CROSSMEMBER, Floor Pan
	55360062AA	1							Right
	55360063AA	1							Left
12	05073062AA	2							REINFORCEMENT, Rear SeatRight
13	05073063AA	1							REINFORCEMENT, Rear SeatLeft
14	05073060AA	1							BRACKET, Control ArmRight
15	05073061AA	2							BRACKET, Control ArmLeft
16	05073058AA	1							CROSSMEMBER, Rear FloorRight
17	05073059AA	1							CROSSMEMBER, Rear FloorLeft
18									GUSSET, Side Member
	55360368AC	1							Right
	55360369AD	1							Left
19	06507345AA	4							PIN, Push

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Plates, Underbody Skid  
Figure SKJ-230

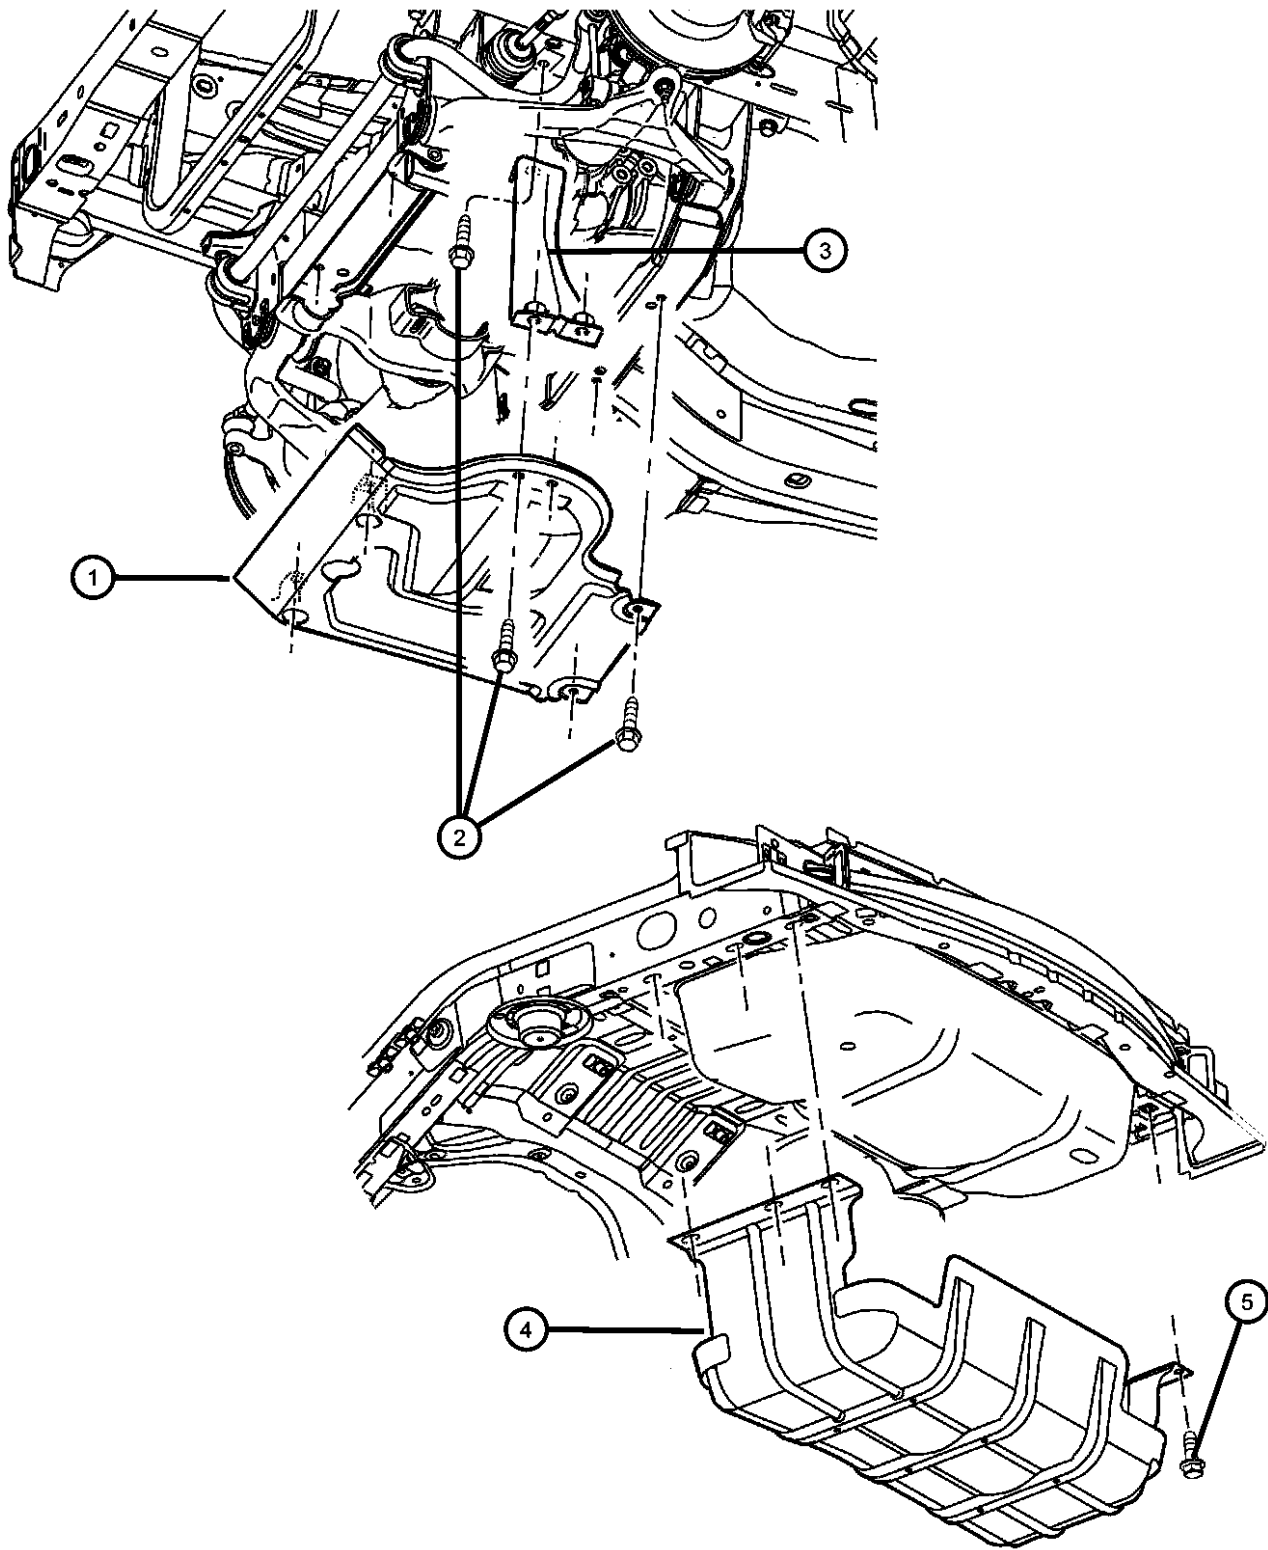


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	52128539AC	1	J, U						SKID PLATE, Front
2	52128539AC	1							SCREW, M10x1.5x30, (NOT SERVICED)
3									BRACKET, Skid Plate
	52128544AA	1	J, U						Right
	52128545AA	1	J, U						Left
4	52100332AF	1							PLATE, Skid
5	06502557	6							BOLT, Hex Flange Head, M12x1.75x40

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Plugs  
Figure SKJ-310

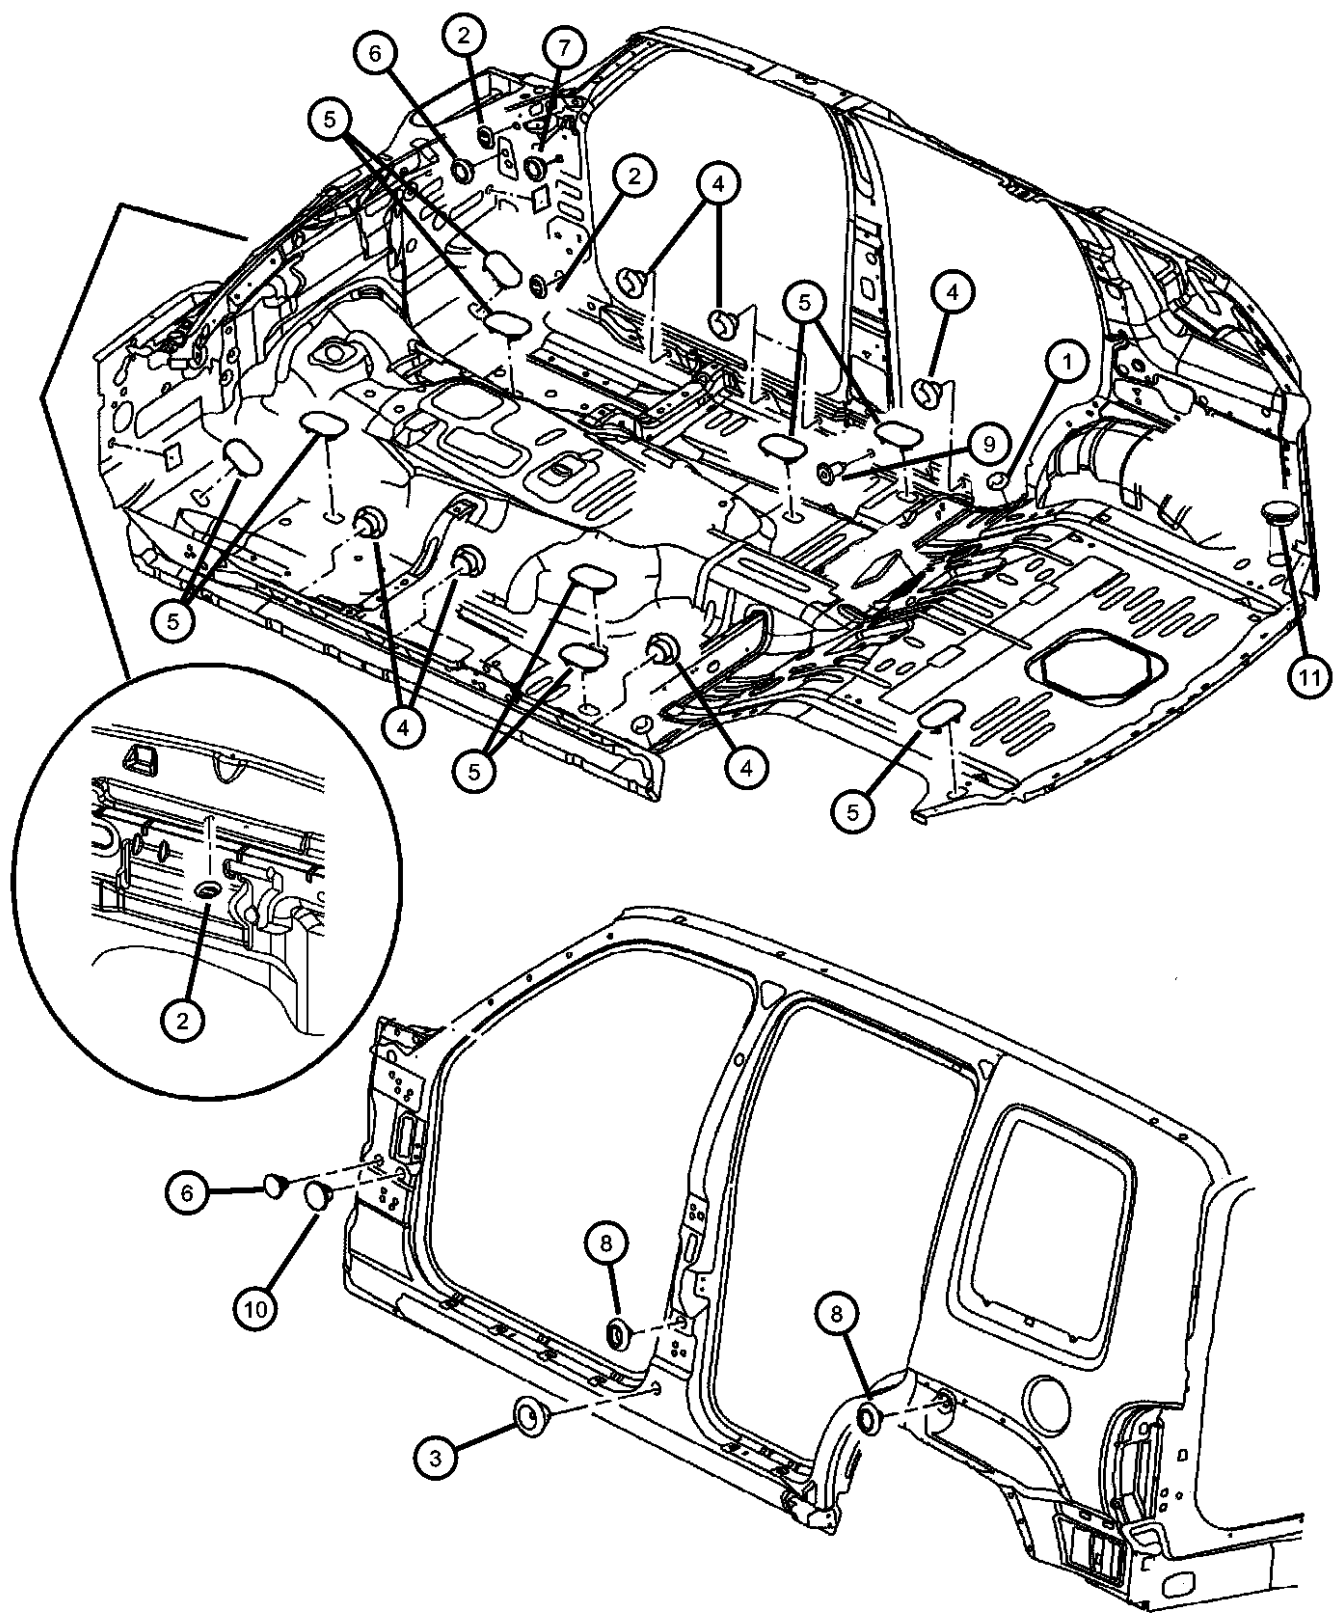

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	04780615AB	2							PLUG, Body, .75 DiameterRear Floor Pan
2	04716933	2							PLUG, Body Side Aperture
3	04780194	2							PLUG, Body Side Outer
4	04780615AB	8							PLUG, Body, .75 Diameter
5	04646971	4							PLUG, Floor Pan
6	55136859AA	2							PLUG, Plastic, Expandable
7	04780615AB	2							PLUG, Body, .75 Diameter
8	55176729AA	4							PLUG
9	35026594	2							PLUG, Floor Pan, .187 Rubber
10	35026594	2							PLUG, Plastic Expandable, 25mm, (NOT SERVICED)
11	56010048AB	1							PLUG

LIBERTY (KJ)

SERIES	LINE
P = Limited	J = LHD (4WD)
H = Sport	U = RHD (4WD)
M = Renegade	T = LHD (2WD)

BODY
74 = 4 Door (104.3 WB)

ENGINE
ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI
EKG = Engine - 3.7L V6
ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel
ENR = Engine - 2.8L 4 Cyl Turbo Diesel
ENO = 4Cyl Turbo Diesel
EK0 = All 3.7L
ED0 = All 2.4L

TRANSMISSION
DDD = Transmission - 5-Speed HD Manual
DDK = Transmission - 5-Speed HD Manual
DG4 = Transmission-Multi-Speed Auto, 45RFE
DG6 = Transmission-4-Spd. Automatic, 42RLE
DGQ = Transmission-5-Spd Automatic 5-45RFE
DBB = All Manual Transmissions
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Front Fender  
Figure SKJ-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55177100AD	1							FENDER, Front Right
	55177101AD	1							Left
2	55360236AB	1							BRACKET, Fender Right
	55360237AB	1							Left
3	55177414AE	1							REINFORCEMENT, Fender Right
	55177415AE	1							Left
4	55360144AG	1							LINER, Front Fender Right
	55360145AG	1							Left
5	55155988AB	2							BRACKET, Fender AppliqueFront
6									APPLIQUE, Fender Wheel Opening
	5GG96HS5AG	1							[K3A], Sport, Right
	5GG97HS5AG	1							[K3A], Sport, Left
	5GH00TZZAG	1							[K5], Paint as Required, Limited, Right
	5GH01TZZAG	1							[K5], Paint as Required, Limited, Left
	5HV45AF-MAD	1							[K4C], Left
	5HV45AJCAD	1							[K4K], Left
	5HV45DX8AD	1							[K4X], Left
	5HV45WS2AD	1							[K4S], Left
	5HV46AF-MAD	1							[K4C], Right
7	5HV46AJCAD	1							[K4K], Right
	5HV46DX8AD	1							[K4X], Right
	5HV46WS2AD	1							[K4S], Right
7	06036155AA	3							PIN, Push
8	06506007AA	8							RIVET

**LIBERTY (KJ)**

SERIES	LINE
P = Limited	J = LHD (4WD)
H = Sport	U = RHD (4WD)
M = Renegade	T = LHD (2WD)

**BODY**

74 = 4 Door (104.3 WB)

**ENGINE**


ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L

**TRANSMISSION**

DDD = Transmission - 5-Speed HD Manual  
DDK = Transmission - 5-Speed HD Manual  
DG4 = Transmission-Multi-Speed Auto, 45RFE  
DG6 = Transmission-4-Spd. Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic 5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Front Fender  
Figure SKJ-410

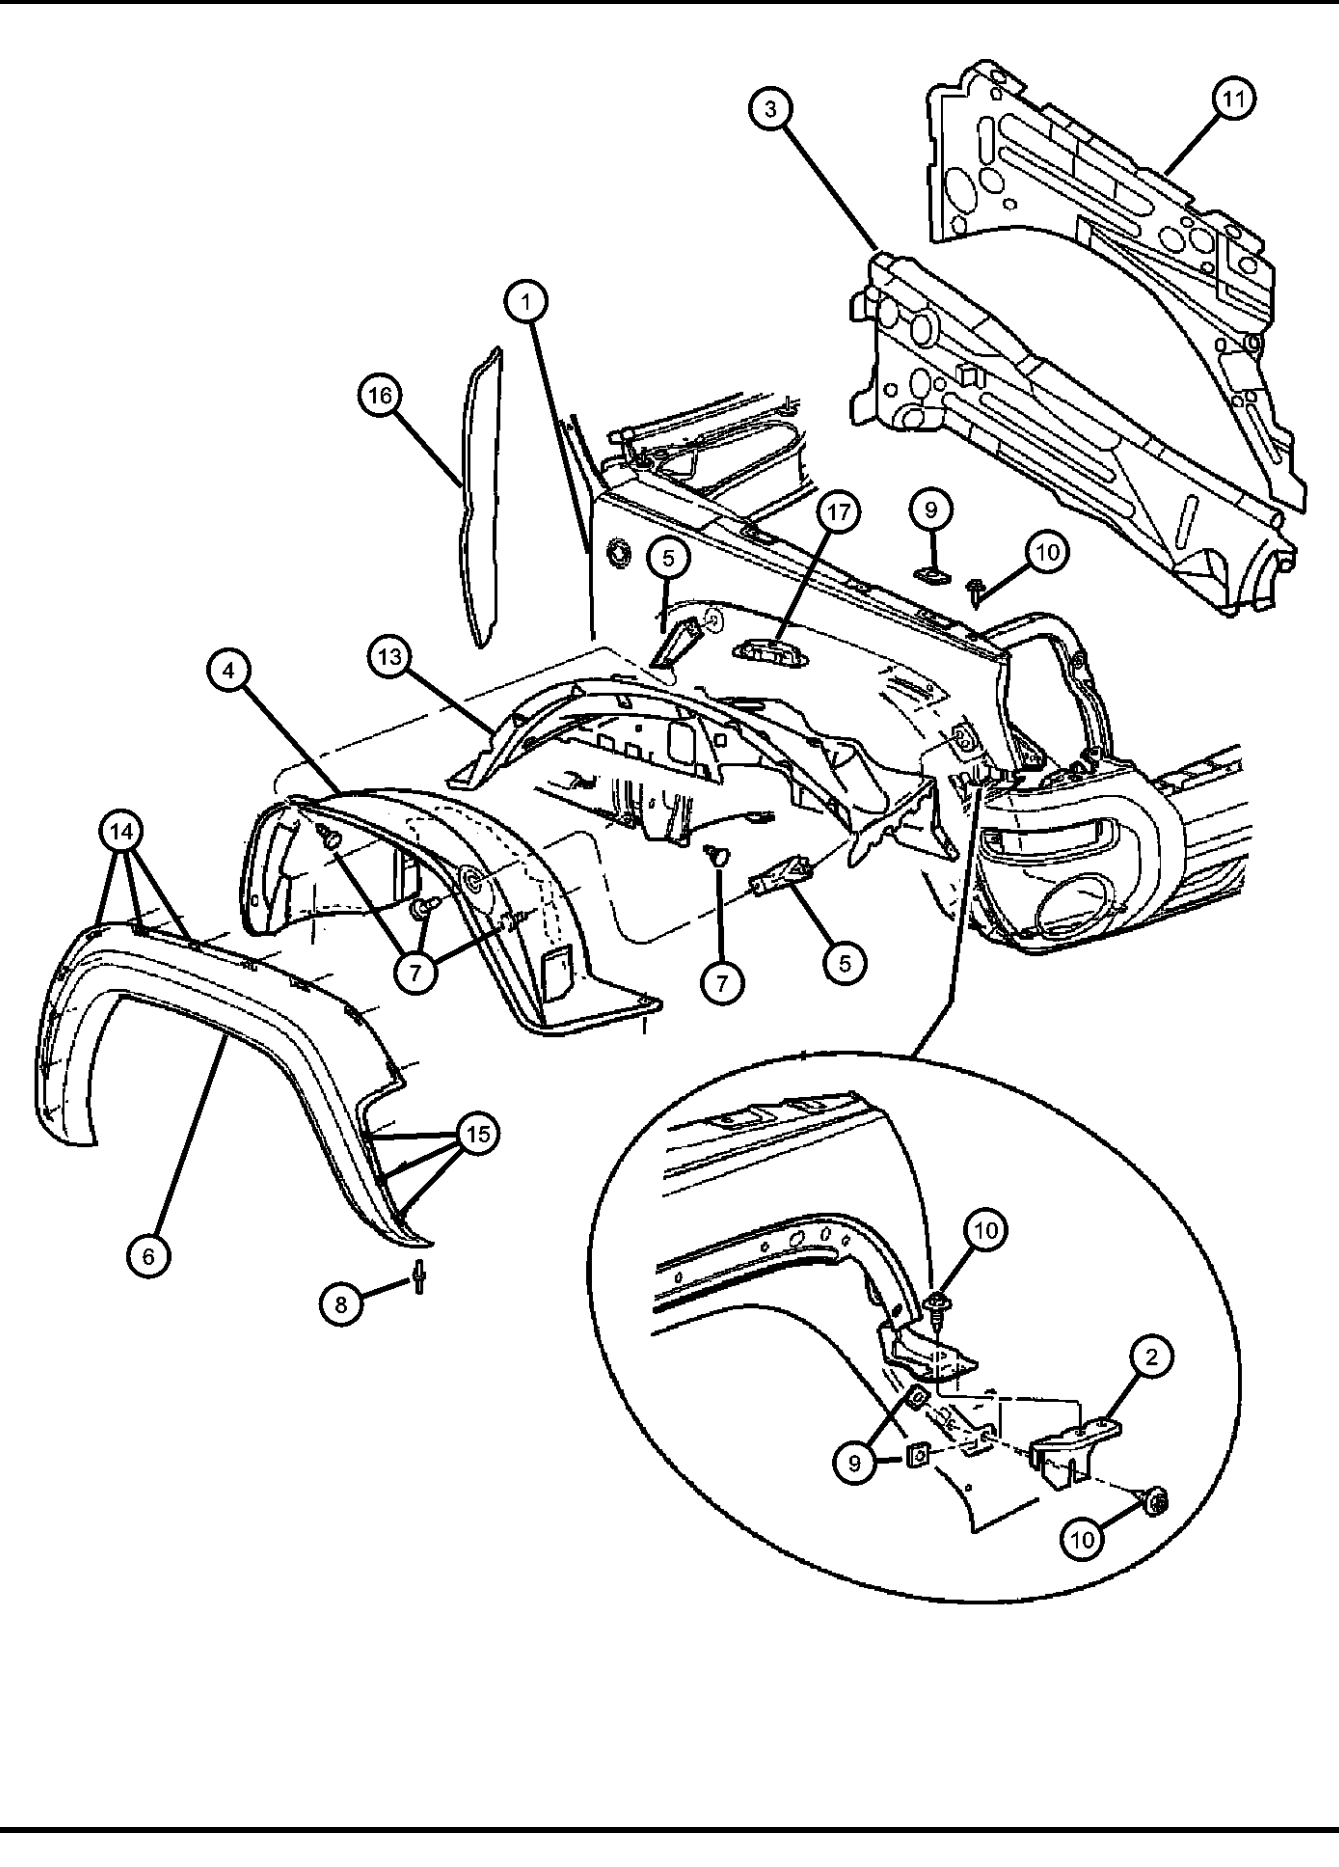ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
									
9	06504118	6							U-NUT, M6 x 1.00, M6x1.00
10	06505903AA	2							SCREW AND WASHER, Self Tapping, M6x1x22
11									PANEL, Fender, Inner
	55177016AD	1							Right
	55177017AD	1							Left
-12									BRACKET, Ballstud, Gas Prop Mounting
	55360428AB	1							Right
	55360429AB	1							Left
13									WHEELHOUSE, Front Inner
	55176858AJ	1							Right
	55176859AK	1							Left
14	55156447AB	11							PIN, Push
15	55156429AA	3							RETAINER, Applique
16	55235932AC	2							SEAL, Fender To Cowl
17	55360201AC	1							CUP, Jounce Bumper

**LIBERTY (KJ)**  
SERIES  
P = Limited  
H = Sport  
M = Renegade

LINE  
J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)


BODY  
74 = 4 Door (104.3 WB)

ENGINE  
ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L

TRANSMISSION  
DDD = Transmission - 5-Speed HD Manual  
DDK = Transmission - 5-Speed HD Manual  
DG4 = Transmission-Multi-Speed Auto, 45RFE  
DG6 = Transmission-4-Spd. Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic 5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part

Hood, Latch and Hinges  
Figure SKJ-510

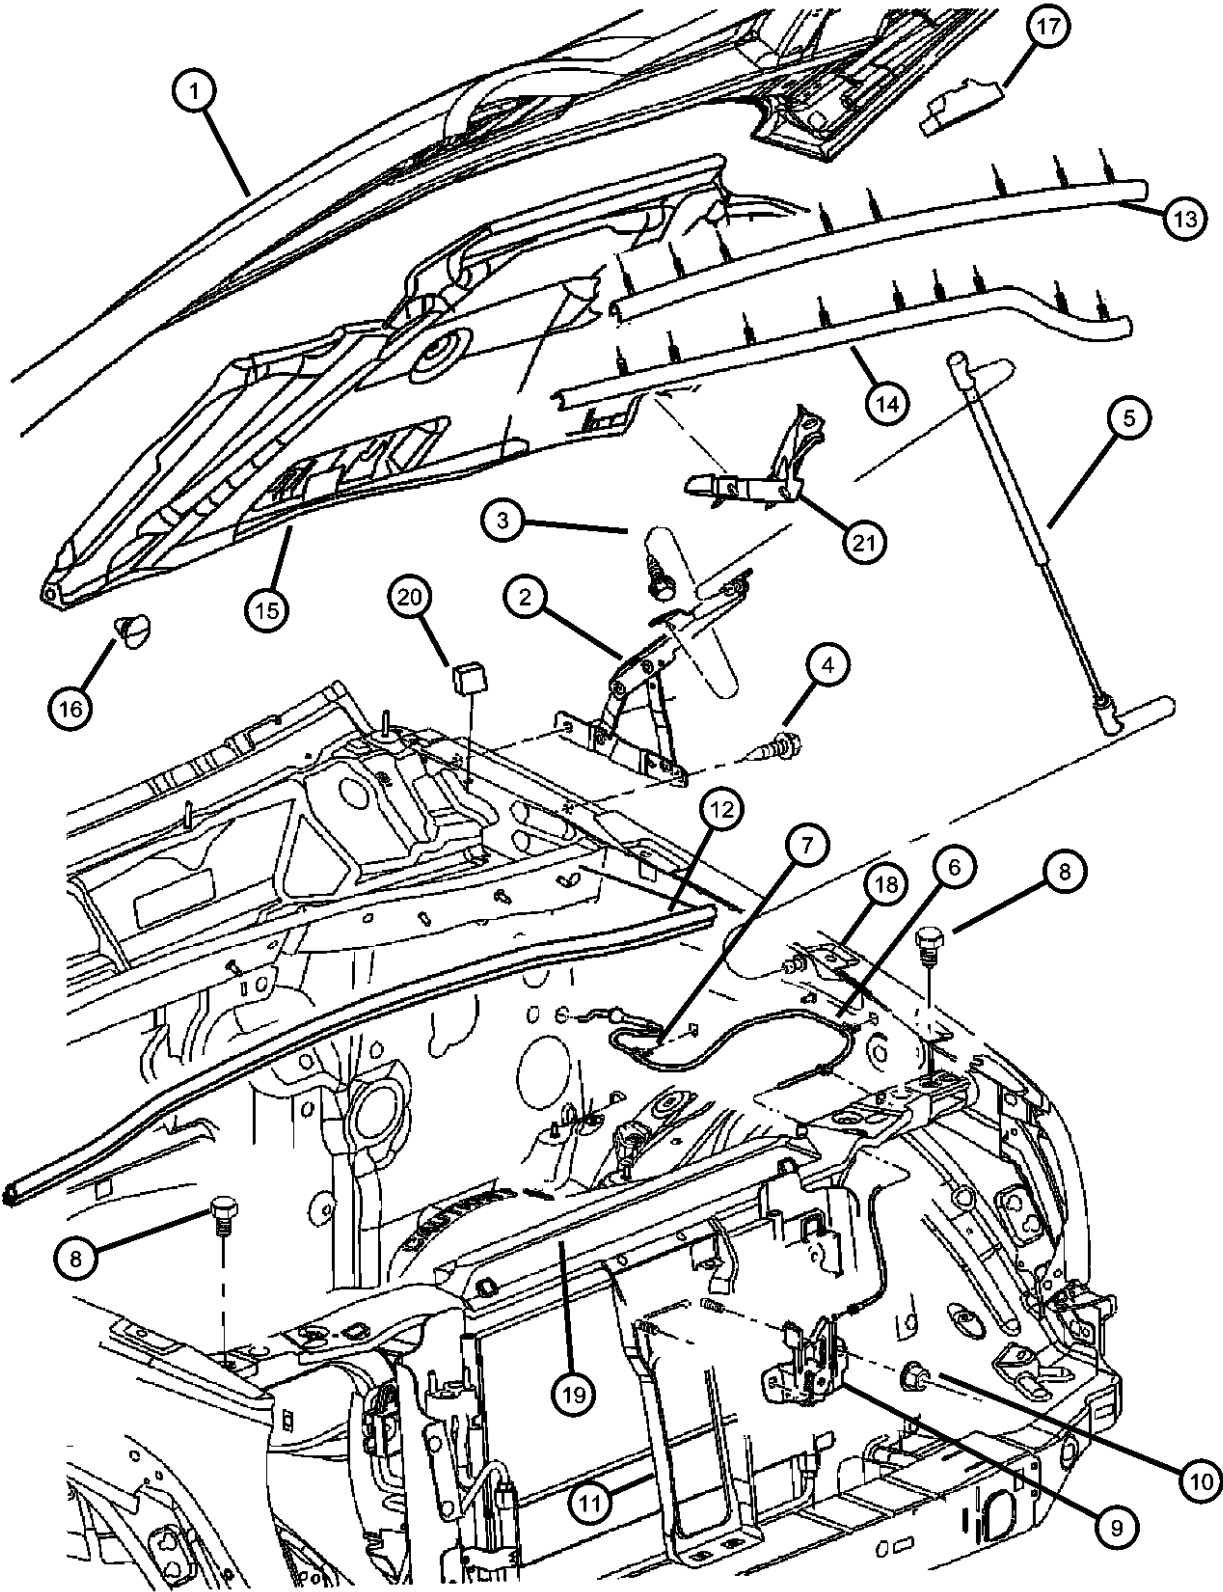


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55177200AD	1							HOOD
2									HINGE, Hood
	55176928AA	1							Right
	55176929AA	1							Left
3	55176929AA	1							SCREW AND WASHER, Hex Head, M6X1.00X19.00, (NOT SERVICED)
4	06505940AA	4							SCREW, M8-1.25
5	55360411AA	2							PROP, Hood
6	55360280AD	1							CABLE, Hood Release
7	04814094	3							CLIP, Hood Latch Release
8	04696592	2							BUMPER, Hood
9	55176926AB	1							LATCH, Hood
10	06503102	2							NUT AND WASHER, Hex Nut-Coned Washer, M6 x 1.00
11	55360229AB	1							REINFORCEMENT, Hood Latch, Used with 55176763AE, If replacing 55176763AF see specifier narrative
12	55235927AC	1							SEAL, Hood To Cowl
13	55360066AD	1							SEAL, Hood To Radiator
14	55360341AC	1							SEAL, Hood
15	55352746AF	1							INSULATION, Hood
16	06504135	8							PIN, Push In, M6.3x15 LG
17	55360258AB	2							SEAL, Hood To Plenum
18									BRACKET, Ballstud
	55360428AB	1							Right
	55360429AB	1							Left
19	55176763AE	1							CROSSMEMBER, Radiator
20									SEAL, A-Pillar Blocker
	55360542AD	1							Right
	55360543AD	1							Left
21	55360551AC	1							SEAL, Air Inlet

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Cowl and Dash Panel  
Figure SKJ-610

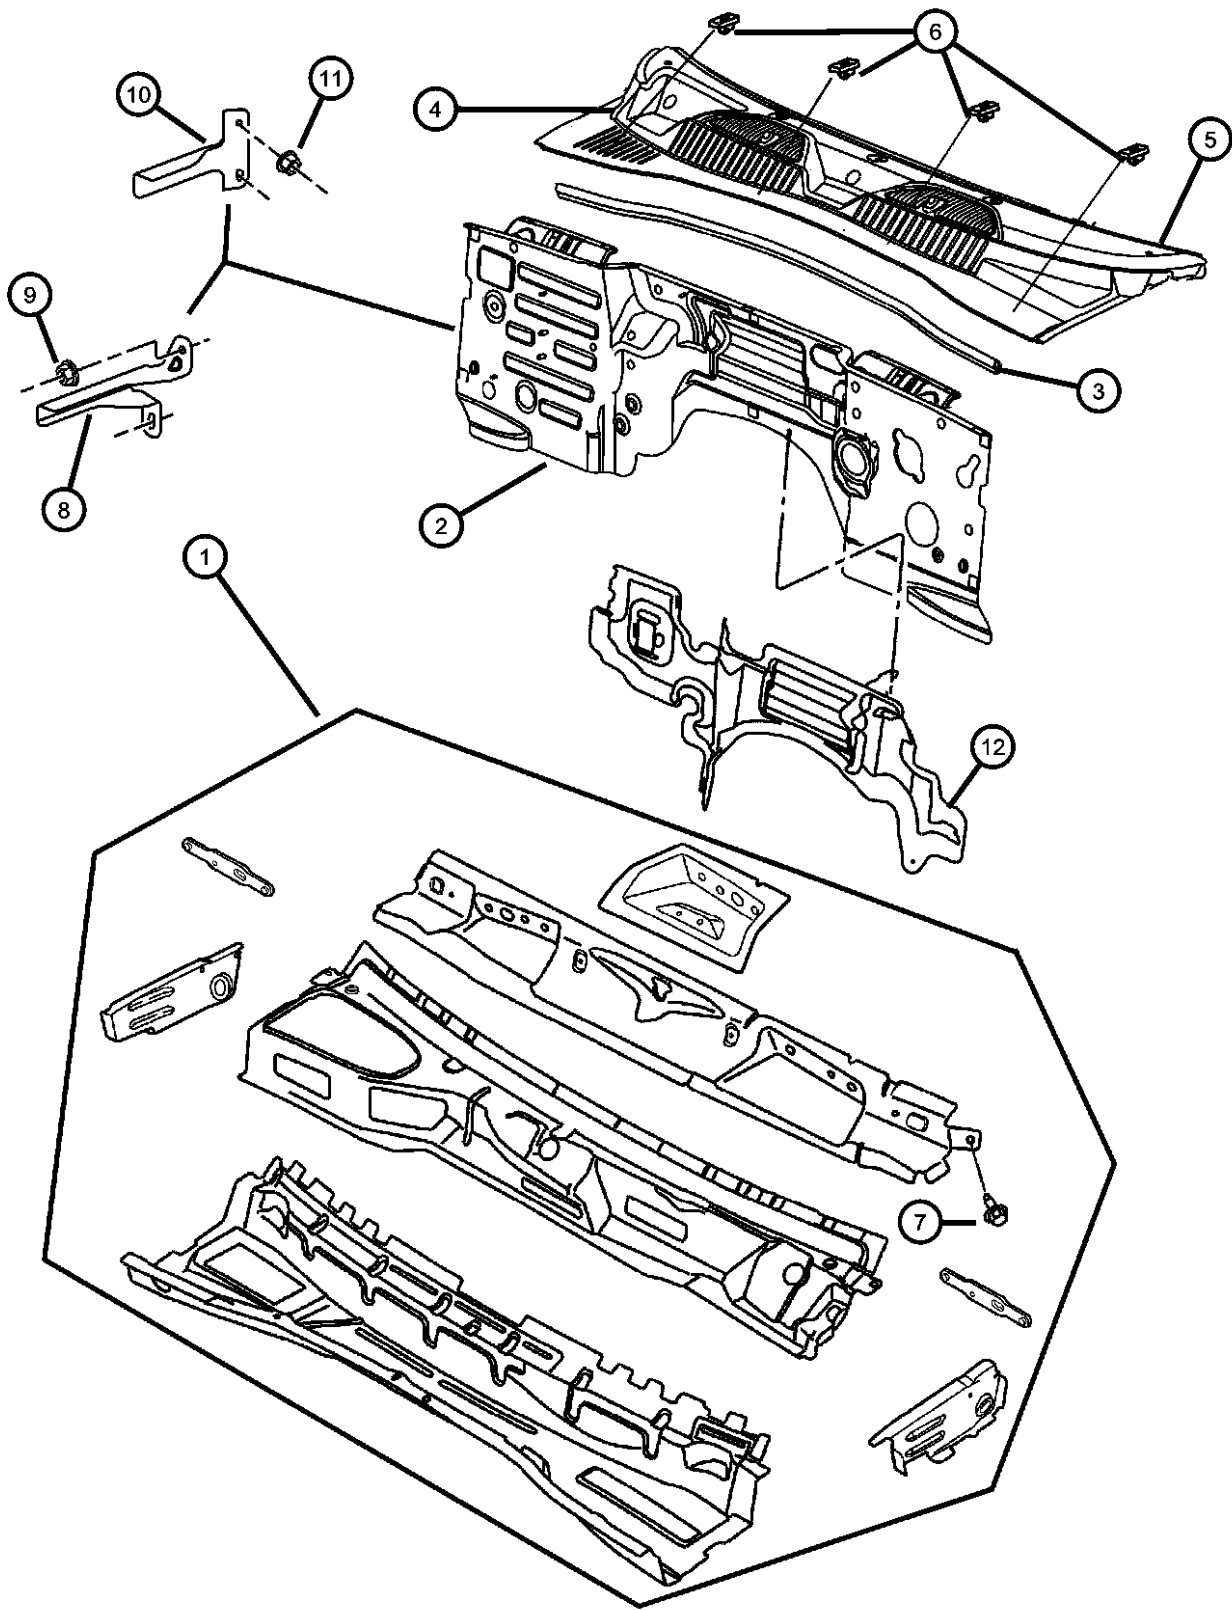


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55176767AD	1	J, T						PANEL, Plenum Complete
	55176776AD	1	U						
2	55177300AB	1	J, T						PANEL, Dash
	55177350AB	1	U						
3	55235927AC	1							SEAL, Hood To Cowl
4									COVER, Cowl Grille
	55155850AH	1	U						
	55155851AI	1	J, T						
5	05071165AA	1	J, T						SEAL, Cowl Screen To Windshield
6	06501925	4							PIN, Splash Shield
7	06503328	4							SCREW, Hex Head, M8x1.25x30
8	55360203AA	1	U						BRACKET, Coolant Recovery Bottle, RHD
9	06101467	2	U						NUT, Hex Flange, M8x1.25, RHD
10	55360202AA	1	J, T						BRACKET, Coolant Recovery Bottle
11	06104725AA	2	J, T						NUT AND WASHER, M6x1
12									INSULATION, Dash Panel
	55352720AF	1	U						
	55352847AD	1	J, T						

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Windshield, Quarter Window, Backlite and Mirror  
Figure SKJ-710

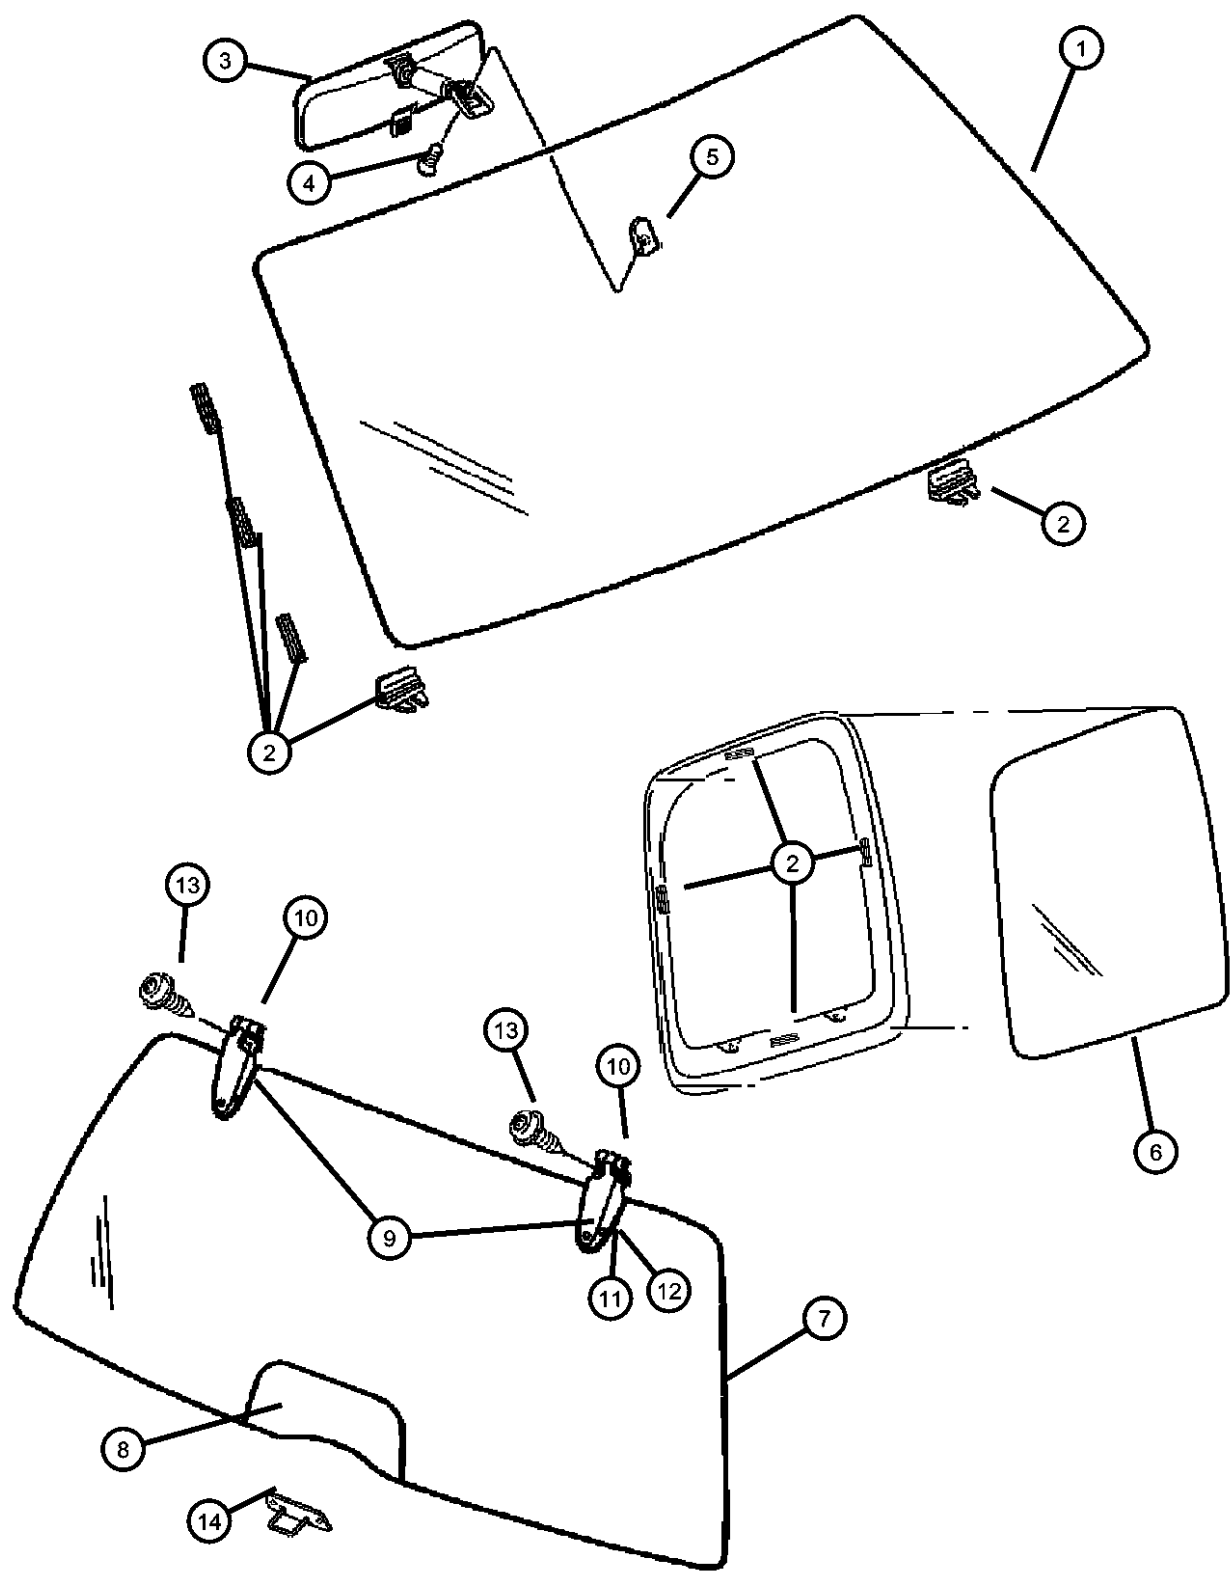


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	05093459AD DW01511GTN	1							WINDSHIELD, 30-Lite Collision Replacement Glass
2	55360509AA	4							SPACER, Windshield
3									MIRROR, Inside Rear View
	04805332AB	1							Prismatic Mirror
	55155380AB	1							Electrochromic Mirror
4	05073472AA	1							SCREW
5	55076401	1							BUTTON, Rear View Mirror
6									GLASS, Quarter
	55235920AC	1							Tinted, Right
	55235921AC	1							Tinted, Left
	55235922AC	1							Privacy, Right
	55235923AC	1							Privacy, Left
	55360054AC	1							Tinted, With Antenna, Export, Right
	55360056AC	1							Privacy, With Antenna, Export, Right
7									BACKLITE
	55360340AP	1							Tinted
	55360342AP	1							Privacy
8	55360709AA	1							PAD, Flipper Glass
9									COVER, Hinge
	55360366AE	1							Right
	55360367AE	1							Left
10									HINGE, Liftglass
	55360216AD	1							Right
	55360217AD	1							Left
11	55296025	2							SCREW, Special Head, M6x1x12.7
12	55075164	4							GASKET, Liftgate Hinge
13	06507883AA	4							SCREW, M5x.8x22.50
14	55360220AB	1							STRIKER, Liftgate Glass

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

### Windshield, Quarter Window, Backlite and Mirror Figure SKJ-710

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

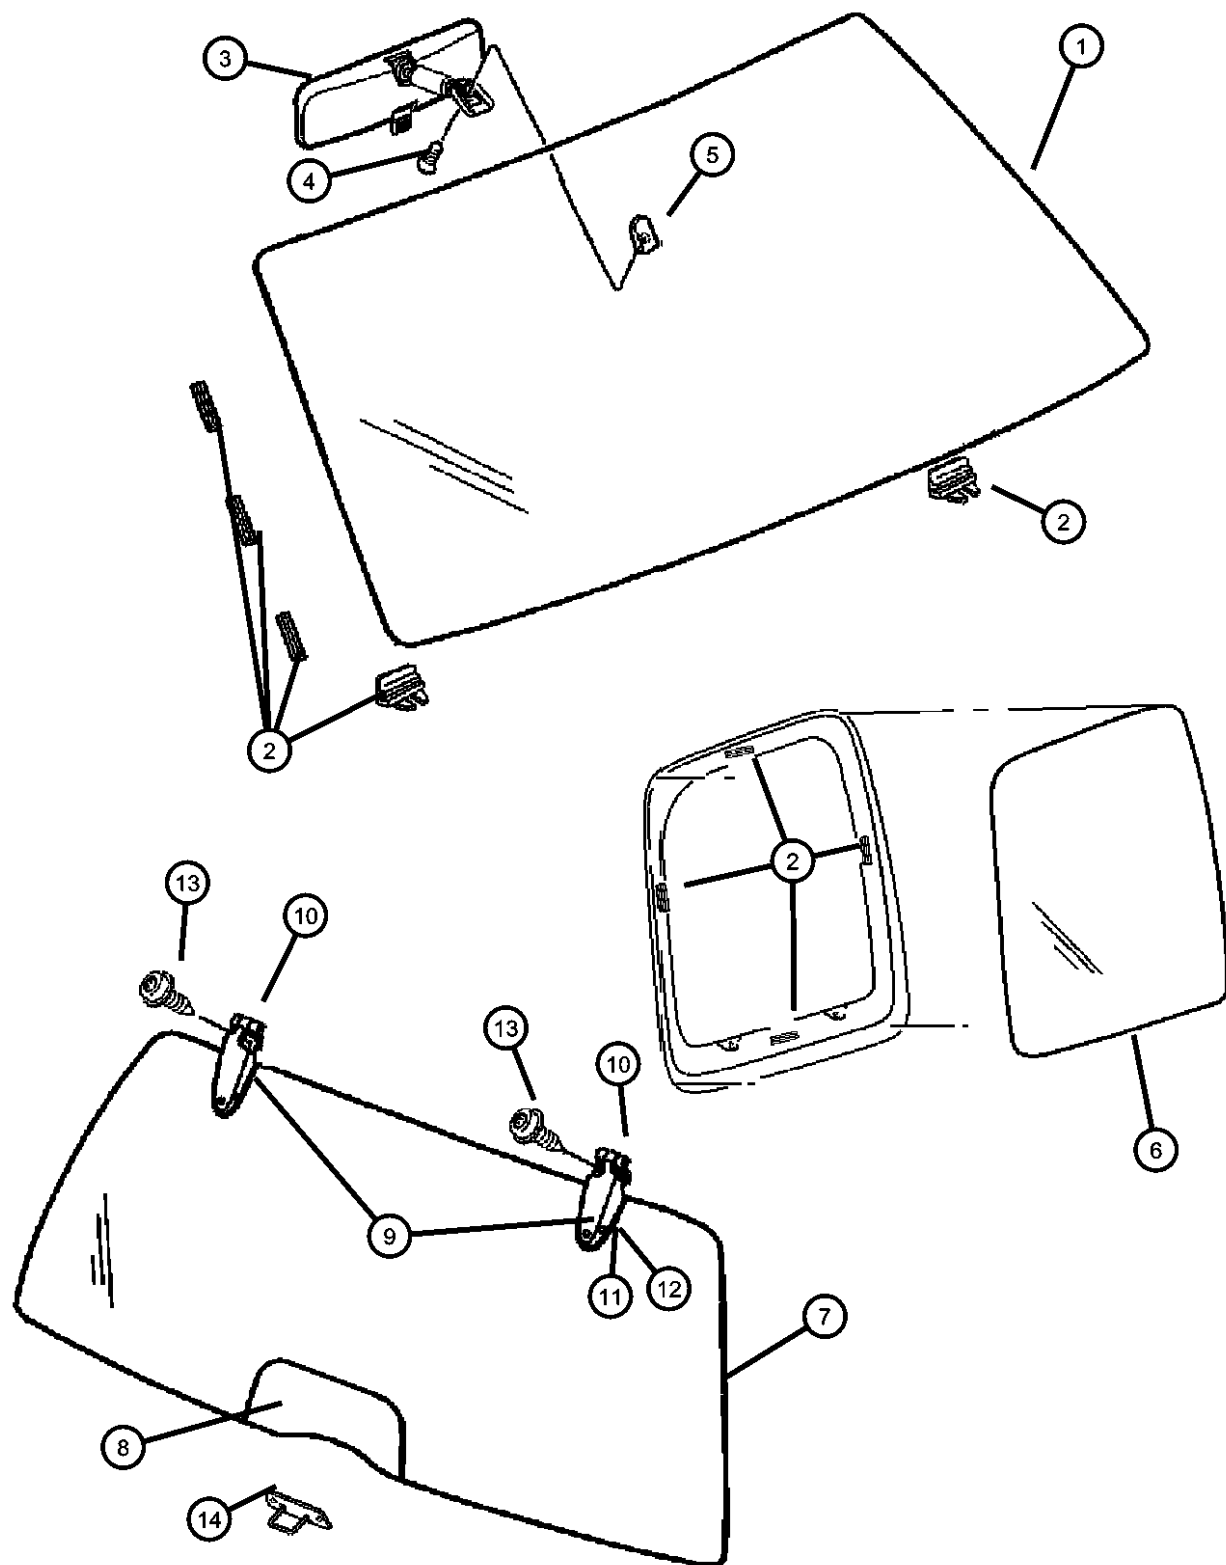

-15	06504513	2	NUT AND WASHER, Hex Nut-Coned Washer, M6 x 1.00
-16			LABEL, Flipper Glass
	55360573AA	1	Use With Tinted Glass, French
	55360582AA	1	Use With Privacy Glass, French
	55360583AA	1	Use With Privacy Glass, Arabic
-17	55360561AA	1	TAPE, Anti-Squeak

LIBERTY (KJ)

SERIES

P = Limited  
H = Sport  
M = Renegade

LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

## BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L

TRANSMISSION


DDD = Transmission - 5-Speed HD  
 Manual  
 DDK = Transmission - 5-Speed HD  
 Manual  
 DG4 = Transmission-Multi-Speed  
 Auto, 45RFE  
 DG6 = Transmission-4-Spd.  
 Automatic, 42RLE  
 DGQ = Transmission-5-Spd Automatic  
 5-45RFE  
 DDB = All Manual Transmissions  
 DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part

2004 KJ

**<< RETURN TO GROUP INDEX**

Panels, Body Side  
Figure SKJ-810

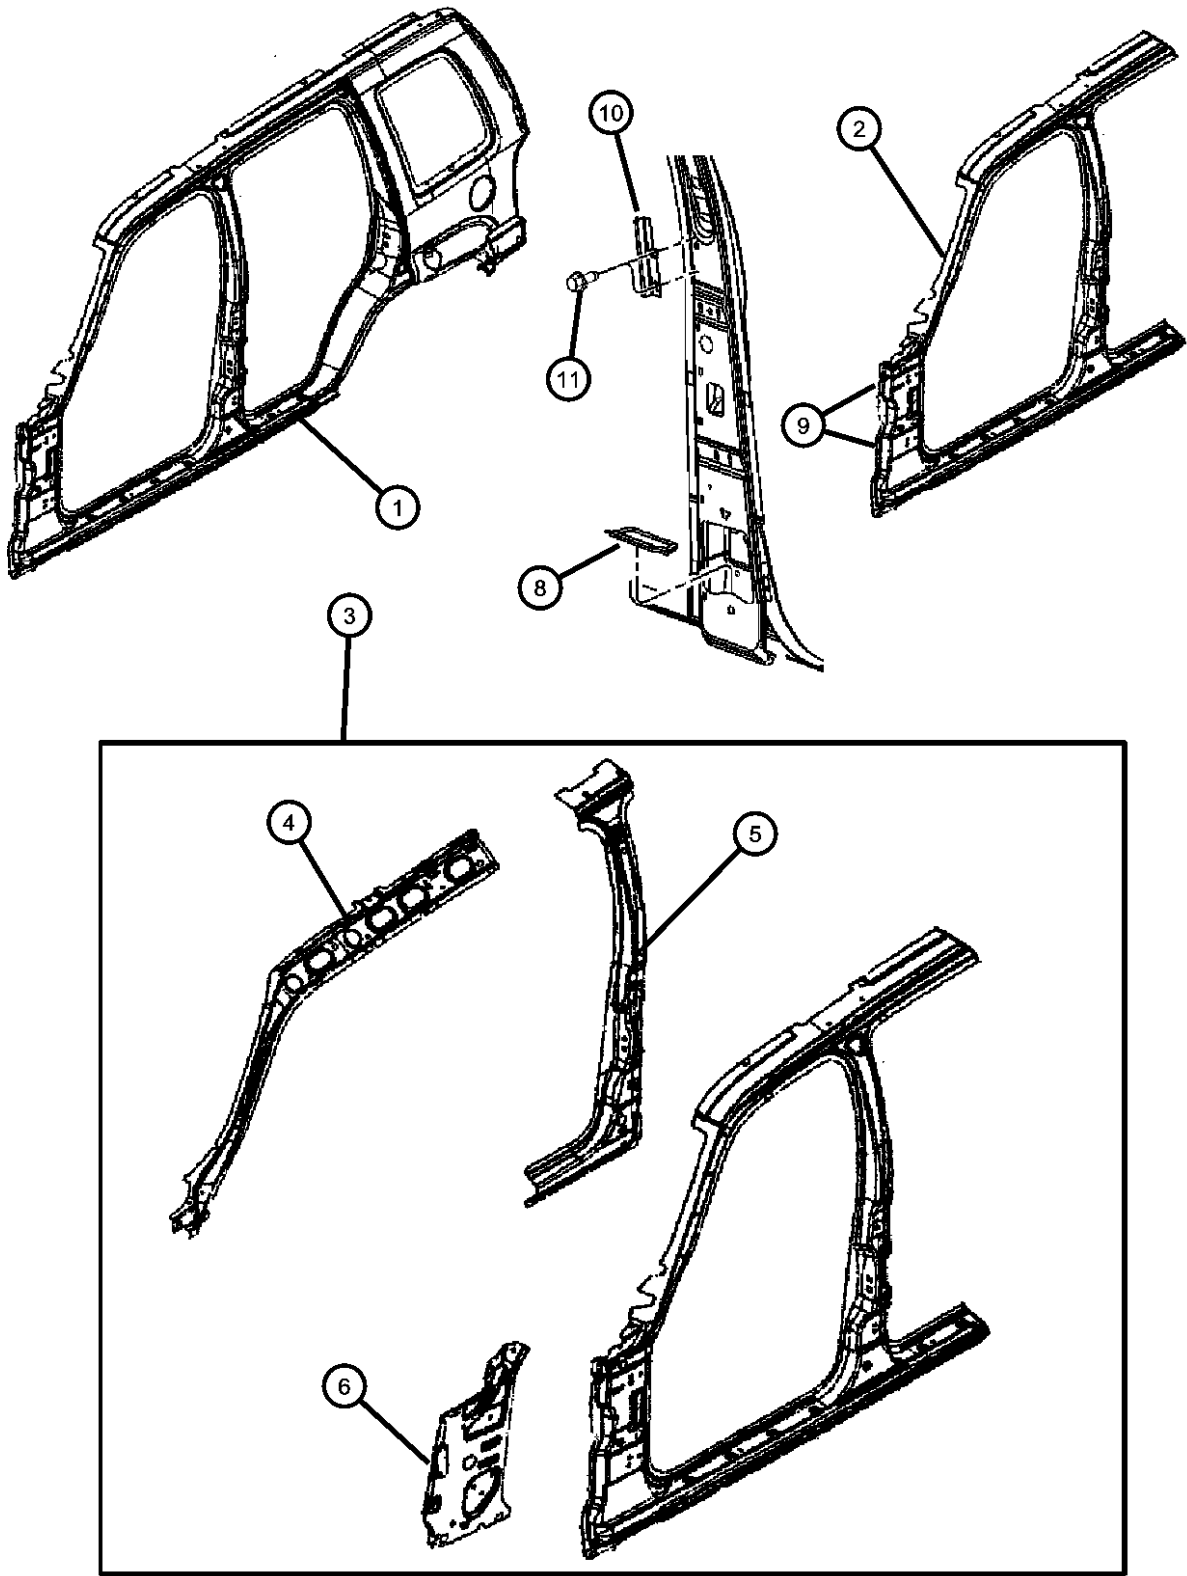

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55176962AD	1							APERTURE, Body Side, Complete Outer Right
	55176963AD	1							Left
2	05072890AB	1							PANEL PACKAGE, Body Side Aperture Front, Front Outer Only Right
	05072891AB	1							Left
3	05072888AC	1							PANEL PACKAGE, Body Side Aperture Front, Complete Inner and Outer Front Right
	05072889AC	1							Left
4	55176960AH	1							REINFORCEMENT, Front Pillar, Includes Roof Header Support Right
	55176961AH	1							Left
5	55176966AF	1							REINFORCEMENT, Center Pillar Inner Right
	55176967AF	1							Left
6	55177400AD	1							PANEL, Cowl Right
	55177401AD	1							Left
-7	06506797AA	4							STUD
8	55360196AD	1							BAFFLE, B Pillar Right
	55360197AD	1							Left
9	55360233AC	4							TAPPING PLATE, Door Hinge
10	55352862AA	1							BRACKET, Offset Impact Right
	55352863AA	1							Left
11	06101945	4							SCREW

LIBERTY (KJ)					
SERIES	LINE				
P = Limited	J = LHD (4WD)		BODY	ENGINE	TRANSMISSION
H = Sport	U = RHD (4WD)		74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
				ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

### Panels, Rear Quarter Figure SKJ-910

[illegible]

LIBERTY (KJ)

SERIES

P = Limited  
H = Sport  
M = Renegade

LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

## BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
ENO = 4Cyl Turbo Diesel  
EKO = All 3.7L  
EDO = All 2.4L

TRANSMISSION

DDD = Transmission - 5-Speed HD  
 Manual  
 DDK = Transmission - 5-Speed HD  
 Manual  
 DG4 = Transmission-Multi-Speed  
 Auto, 45RFE  
 DG6 = Transmission-4-Spd.  
 Automatic, 42RLE  
 DGQ = Transmission-5-Spd Automatic  
 5-45RFE  
 DBB = All Manual Transmissions  
 DG0 = All Automatic Transmissions

AR = use ase required    - = Non illustrated part

2004 KJ

**<< RETURN TO GROUP INDEX**

Panels, Rear Quarter  
Figure SKJ-910

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	55360146AD	1							Right
	55360147AD	1							Left
12	55037458AB	2							EXHAUSTER, Quarter Panel
13	55352854AA	1							INSULATION, Side PanelRight Side, Upper
14	55352846AA	1							INSULATION, Side PanelRight Side, Lower
15	55136998AC	1							BRACKET, Wheel House
16									BRACKET, Sill
	55360444AB	1							Right
	55360445AB	1							Left

LIBERTY (KJ)

SERIES

P = Limited  
H = Sport  
M = Renegade

LINE

J = LHD (4WD)  
U = RHD (4WD)  
T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl  
DOHC 16v SMPI  
EKG = Engine - 3.7L V6  
ENJ = Engine -2.5L 4 Cyl 16V  
Turbo Diesel  
ENR = Engine - 2.8L 4 Cyl  
Turbo Diesel  
EN0 = 4Cyl Turbo Diesel  
EKO = All 3.7L  
ED0 = All 2.4L


TRANSMISSION

DDD = Transmission - 5-Speed HD  
Manual  
DDK = Transmission - 5-Speed HD  
Manual  
DG4 = Transmission-Multi-Speed  
Auto, 45RFE  
DG6 = Transmission-4-Spd.  
Automatic, 42RLE  
DGQ = Transmission-5-Spd Automatic  
5-45RFE  
DBB = All Manual Transmissions  
DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Fuel Filler Housing and Door  
Figure SKJ-920

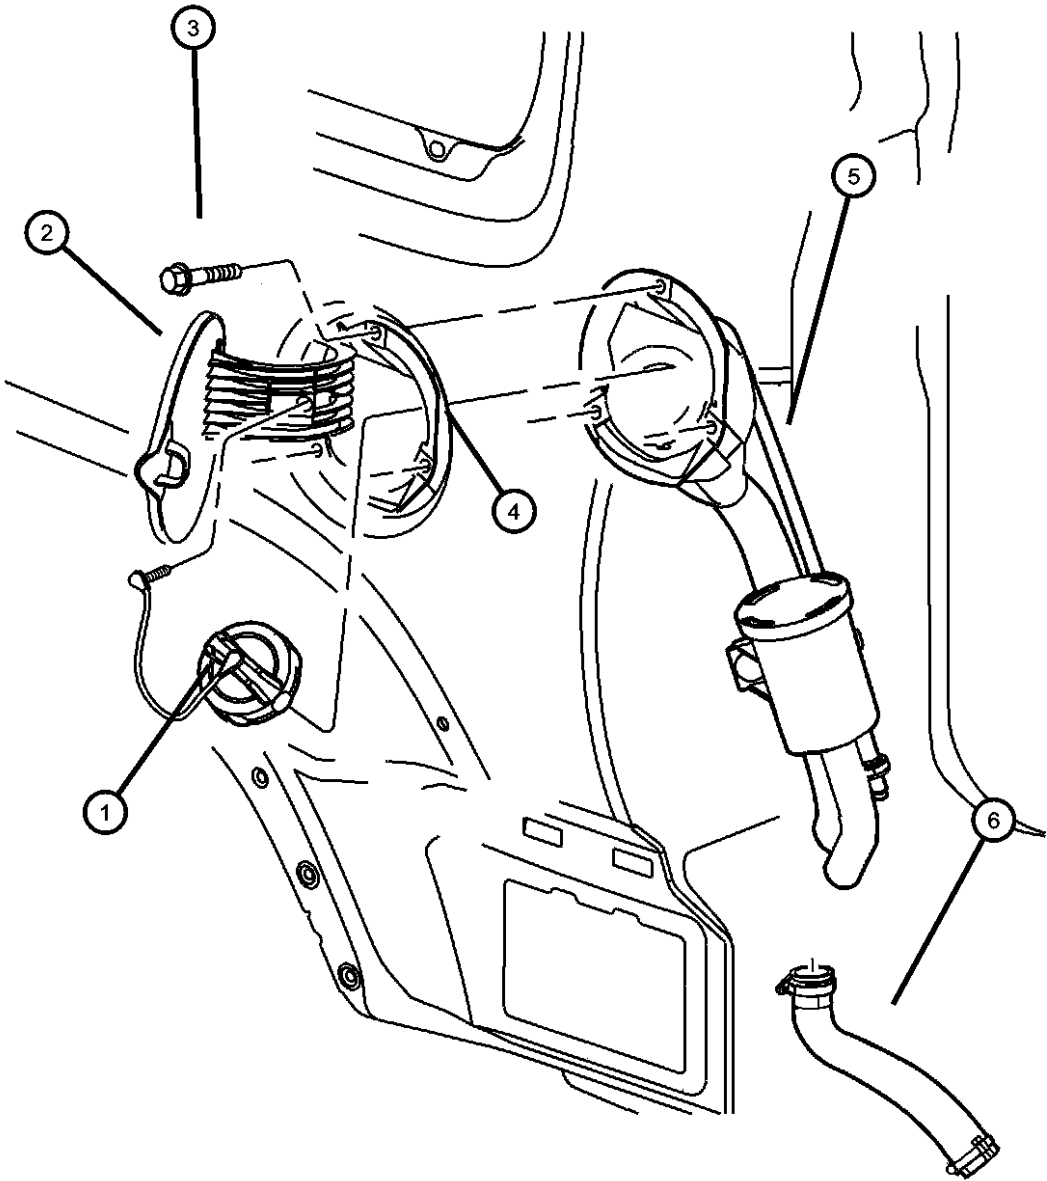


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	05015636AB	1							CAP KIT, Fuel Tank Locking
2	04674991AG	1							DOOR, Fuel Filler Manual Access
3	06035204	3							SCREW, Tapping, .19-16x.75
4	04716571AD	1							HOUSING, Fuel Filler
5									TUBE, Fuel Filler
	52128640AB	1							
	52128641AB	1							Diesel
6	52128753AA	1							HOSE, Fuel Filler
-7	04716532	1							SPRING, Fuel Filler Door

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Roof Panel  
Figure SKJ-1110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									PANEL, Roof
	55176994AC	1							Without Sunroof
	55176995AD	1							With Sunroof
2	55177022AA	1							HEADER, Roof Front
3	55360281AA	1							BOW, Roof, Without Sunroof
4	55176998AA	1							BOW, Roof
5	55176998AA	1							PUSH PIN, M6.35x18.50, (NOT SERVICED)
6	06030441	1							PIN, Retainer

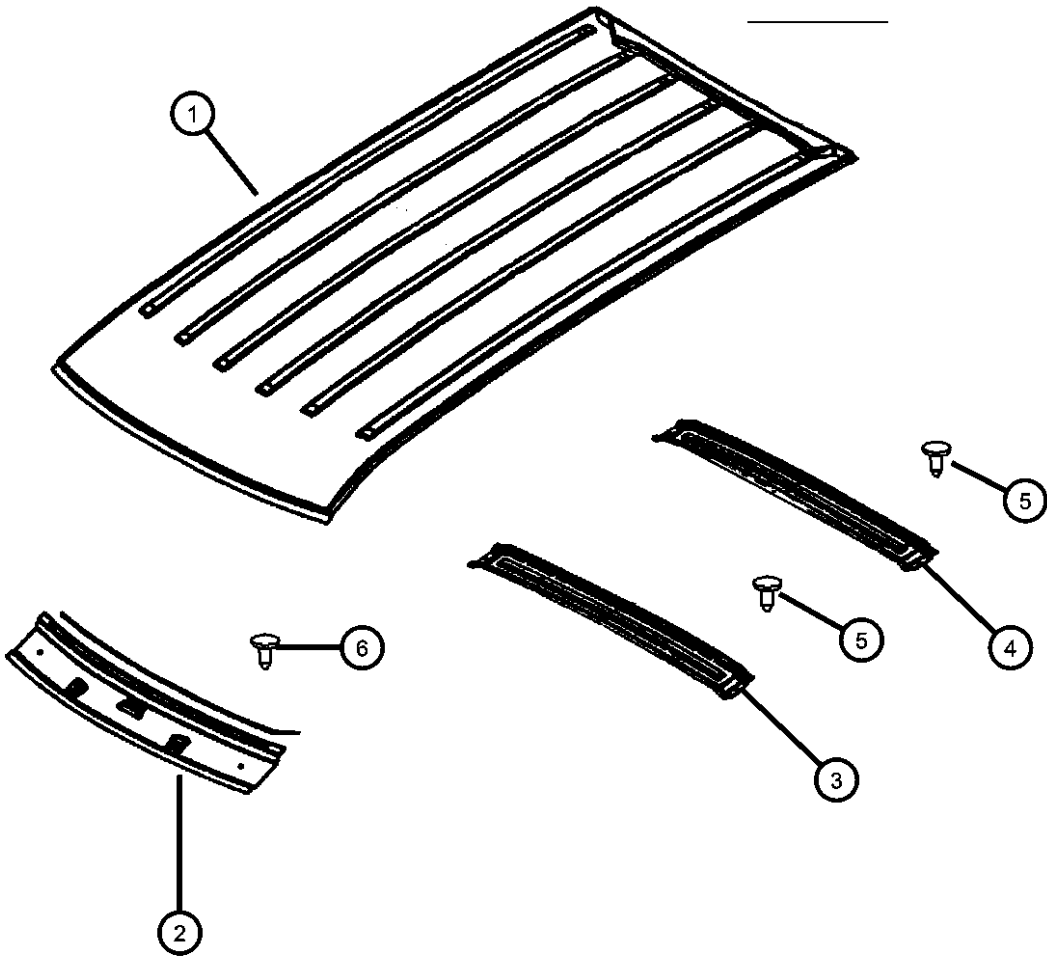


LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part



Sunroof  
Figure SKJ-1210

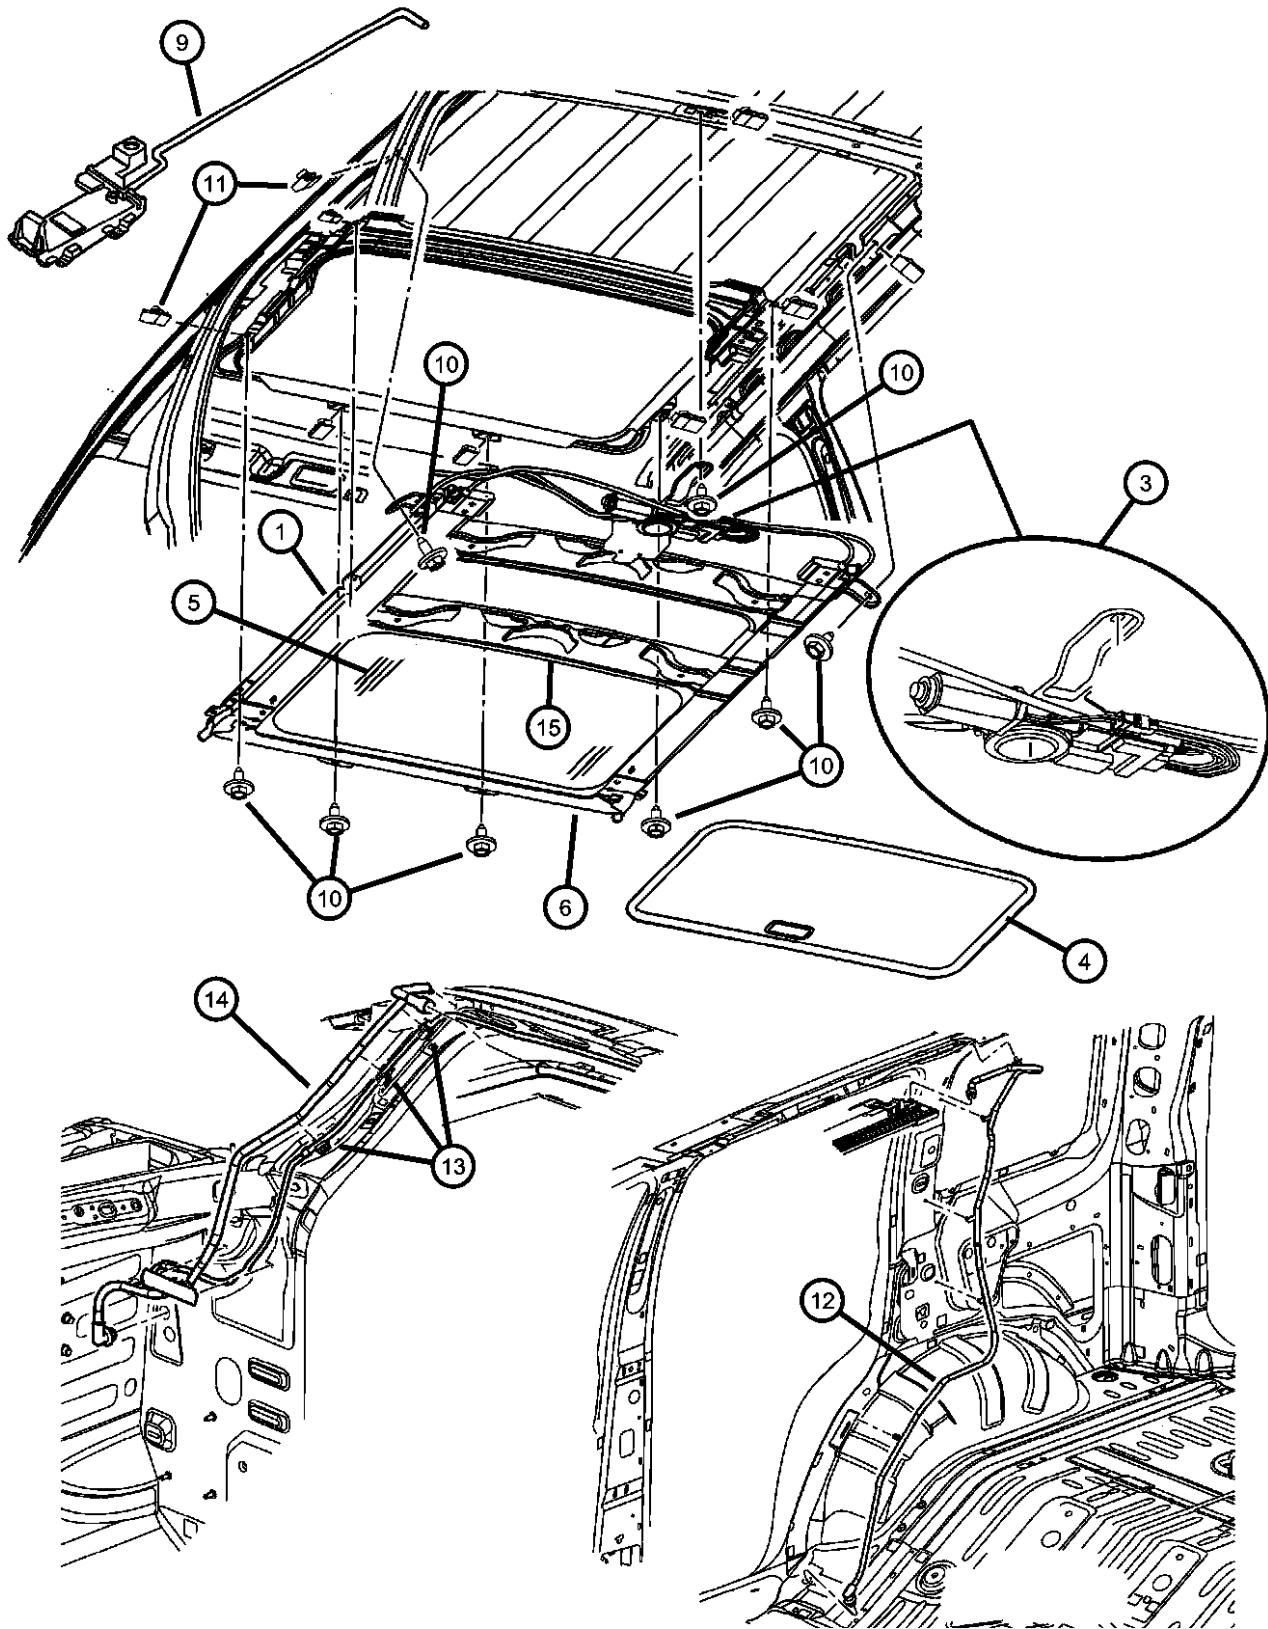


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: Guides 5066433AB attach to frame brace 5101844AA. Frame brace 5101844AA pulls sunshade open when in closed position.									
1	05101963AA	1							MODULE, Sunroof
-2	05066895AB	1							DEFLECTOR, Sunroof Wind
3	05096260AA	1							MOTOR, Sunroof, With Control Unit
4	0UX06TL2AA	1							SUNSHADE, Sunroof
5	05066892AA	1							GLASS, Sunroof
6	05066896AA	1							SEAL, Sunroof Glass
-7	0UX09TL2AA	1							TRIM LACE, Sunroof
-8	05101961AA	1							WIRING, Sunroof
9	05066433AB	1							GUIDE, Sunroof Track, Contains Right & Left Guides and 2 Push Nuts
10	06505728AA	8							SCREW AND WASHER, Hex Head, M6x1x17
11	06506035AA	10							NUT, U, M6x1.00
12									HOSE, Sunroof Drain, Rear
	55360180AF	1							Right
	55360181AF	1							Left
13	55360393AA	3							CLIP, Hose
14									HOSE, Sunroof Drain, Front
	55360178AB	1							Right
	55360179AB	1							Left
15	05101844AA	1							BRACE, WATER TROUGH

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual	
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual	
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE	
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE	
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE	
			EK0 = All 3.7L	DBB = All Manual Transmissions	
			ED0 = All 2.4L	DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

Swing Gate, Latch, and Hinges  
Figure SKJ-1310

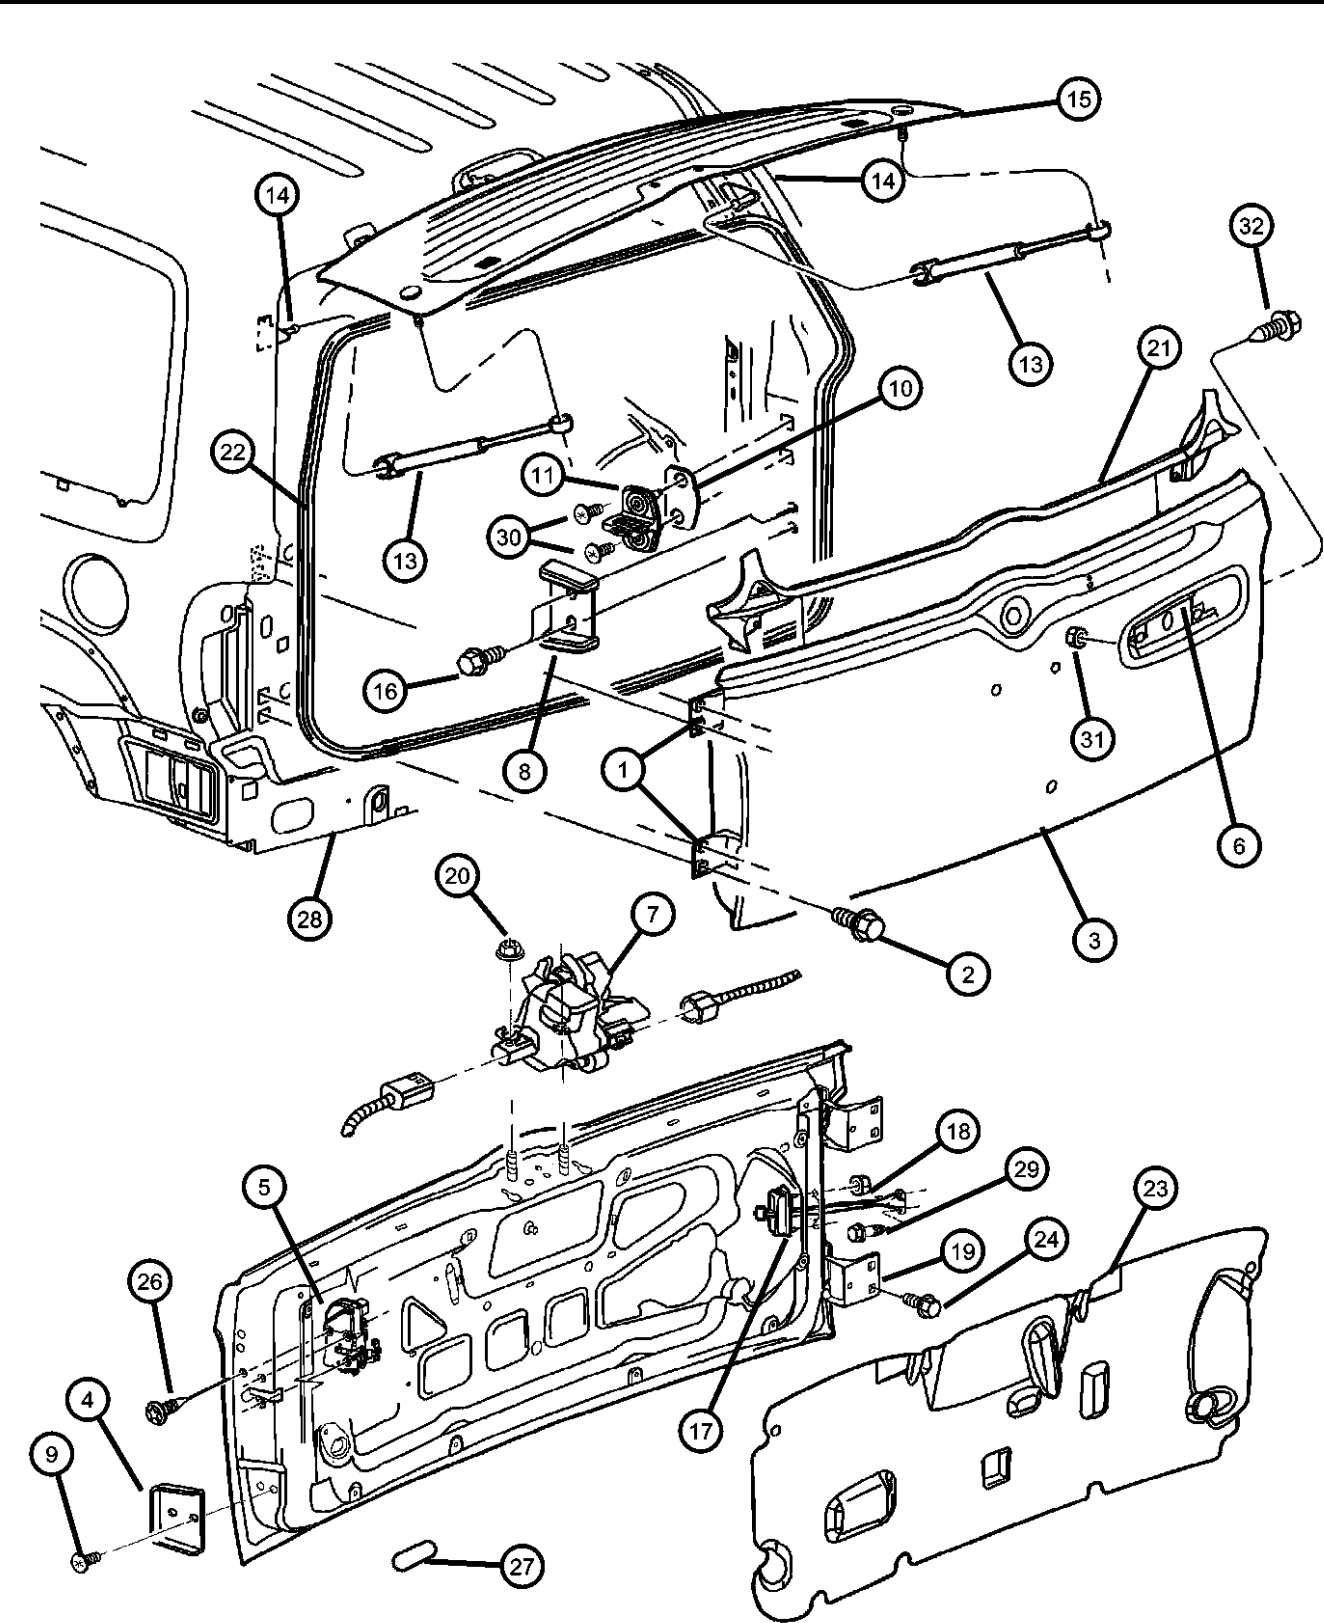

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------


Note: For Backlite Hinges and Associated Hardware, see Group SKJ Illustration 710

1									HINGE, Liftgate
	52850558AB	1							Upper
	52850559AB	1							Lower
2	52850559AB	1							SCREW, M8X1.25X42.00, (NOT SERVICED)
3	55176934AF	1							PANEL, Tailgate
4	52850562AG	1							BUMPER, Tailgate
5									LATCH, Tailgate
	55360641AA	1							Up to 1/20/04
	55360641AB	1							After 1/20/04
6	05102498AA	1							HANDLE, Exterior Tailgate
7	55360357AC	1							LATCH, Liftgate Glass
8	55360324AC	1							STABILIZER, Swing Gate
9	06507128AA	2							SCREW AND WASHER, Hex Head, M6 x 1.00 x 26.5
10	55075483	AR							SPACER, Door Latch Striker
11	04878826AA	1							STRIKER, Door
-12	06503692	2							SCREW, M8-1.25
13	55360171AB	2							GAS CYLINDER, Liftgate Glass
14	55360394AC	2							BRACKET, Ballstud
15									BACKLITE, Note: For Backlite Hinges and Associated Hardware, see Group SKJ Illustration 710
	55360340AP	1							Tinted
	55360342AP	1							Privacy
16	06507456AA	2							BOLT AND CONED WASHER, Hex Head, M6x20x14
17	55360170AB	1							ARM, Cargo Door Check
18	06503504	2							NUT AND WASHER, Hex, M6x1, Check Strap to Body
19	06503504	2							SCREW, Tapping, M6x1x20, (NOT SERVICED)

LIBERTY (KJ)		BODY		ENGINE	TRANSMISSION
SERIES	LINE				
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)			EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)			ENJ = Engine -2.5L 4 Cyl 16v Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
				ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
				ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
				EK0 = All 3.7L	DBB = All Manual Transmissions
				ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Swing Gate, Latch, and Hinges  
Figure SKJ-1310

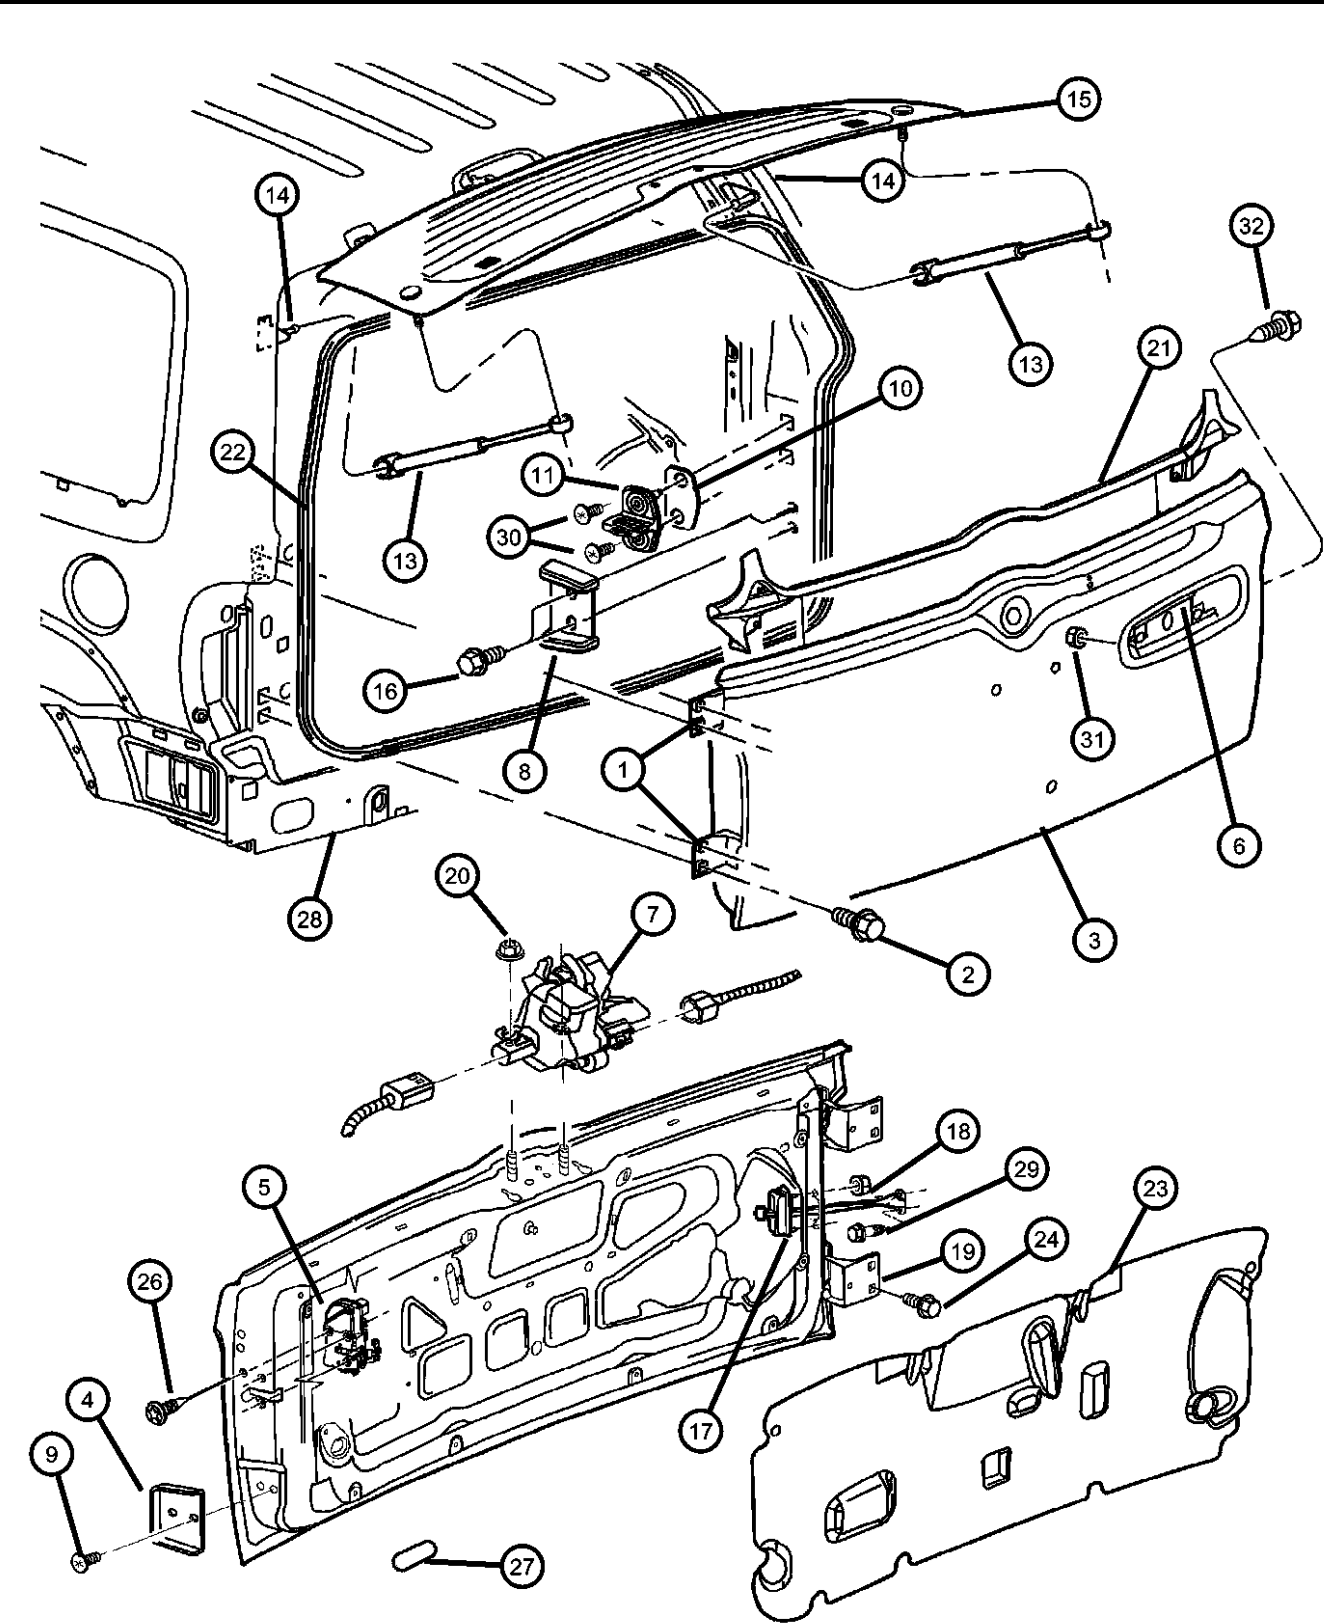


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
20	06503102	2							NUT AND WASHER, Hex Nut-Coned Washer, M6 x 1.00
21	55360065AB	1							WEATHERSEAL, Tailgate
22	55176958AG	1							WEATHERSEAL, Tailgate
23	55360309AB	1							WATERSHIELD, Liftgate Inner
24	06503328	6							SCREW, Hex Head, M8x1.25x30
-25	04520289	AR							SPACER, Door Latch Striker
26	06036364AA	3							SCREW, Oval Head, Swing Gate Latch to Swing Gate
27	04646527	2							PLUG, Deck Lid
28	55360227AD	1							PANEL, Liftgate Opening, D-Ring Shaped, Contains Rear Gate Opening and Roof Header
29	55360227AD	1							SCREW, Hex Flange Head, M6x1.00x20, (NOT SERVICED)
30	06506367AA	2							SCREW, M8-1.25
31	06503226	2							NUT, Hex Flange, M5x.8
32	06507011AA	2							SCREW

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			ENO = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Luggage Rack  
Figure SKJ-1610

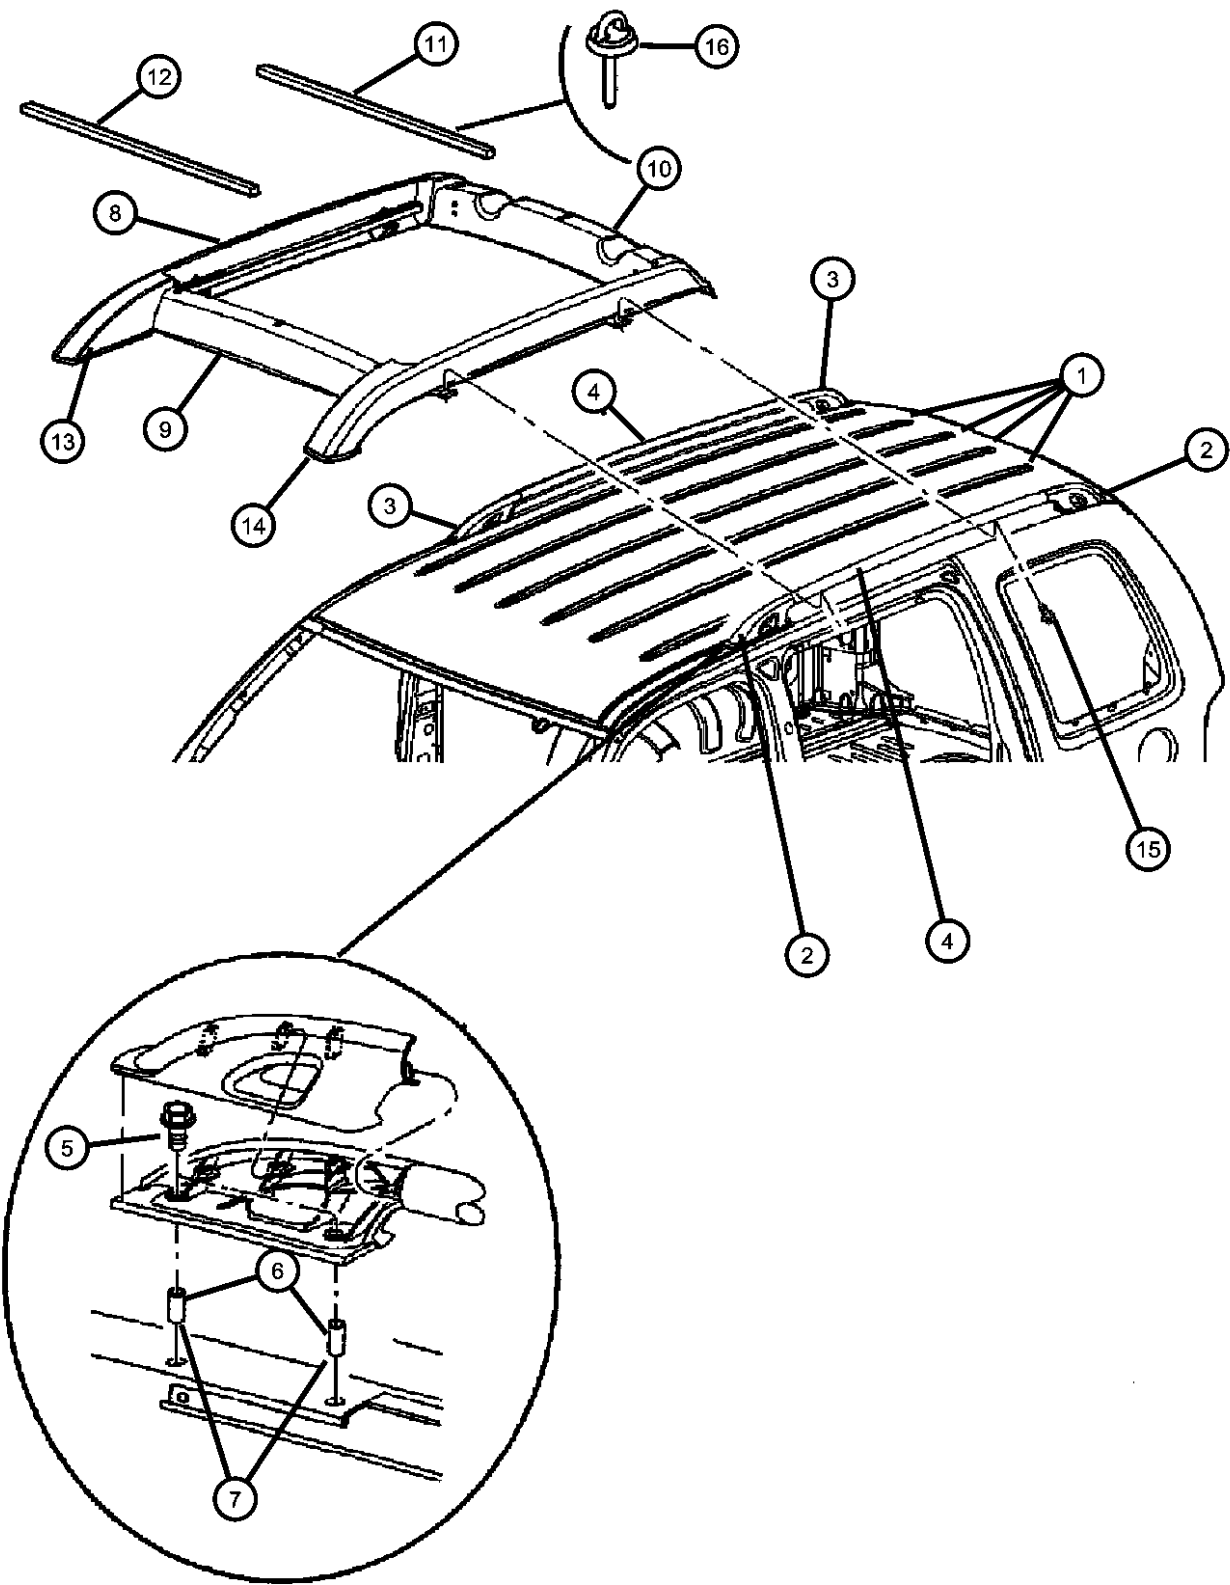

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	-------------	-----	------	--------	------	--------	-------	------	-------------

Note: Production crossrails not used. See accessory catalog for crossrail package.


1	55135987AC	4							SKID STRIP, Roof Rack
2									COVER, Luggage Rack
	55360425AE	1							Left, Front
	55360427AC	1							Left, Rear
3									COVER, Luggage Rack
	55360424AE	1							Right, Front
	55360426AC	1							Right, Rear
4									RAIL, Luggage Rack Side
	55360418AJ	1							Right
	55360419AJ	1							Left
5	06507086AA	8							SCREW
6	06503245	6							RIVET, Hex Head
7	06506489AA	2							RIVET, Round Head
8									RAIL, Luggage Rack Side
	5JA16RXFAC	1							Right
	5JA17RXFAC	1							Left
9	5JA18RXFAC	1							COVERFront
10	5JA19RXFAC	1							COVERRear
11	55156586AC	1							CROSS RAIL, Roof RackRear
12	55360526AC	1							CROSS RAIL, Roof RackFront
13	55156594AD	1							ISOLATORRight
14	55156595AD	1							ISOLATORLeft
15	06507449AA	4							SCREW
16	55156591AB	1							CAP, Screw Cover

LIBERTY (KJ)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual	
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD	
			ENJ = Engine -2.5L 4 Cyl 16V	Manual	
			Turbo Diesel	DG4 = Transmission-Multi-Speed	
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE	
			Turbo Diesel	DG6 = Transmission-4-Spd.	
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE	
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic	
			ED0 = All 2.4L	5-45RFE	
				DBB = All Manual Transmissions	
				DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part






# Group - LBLS
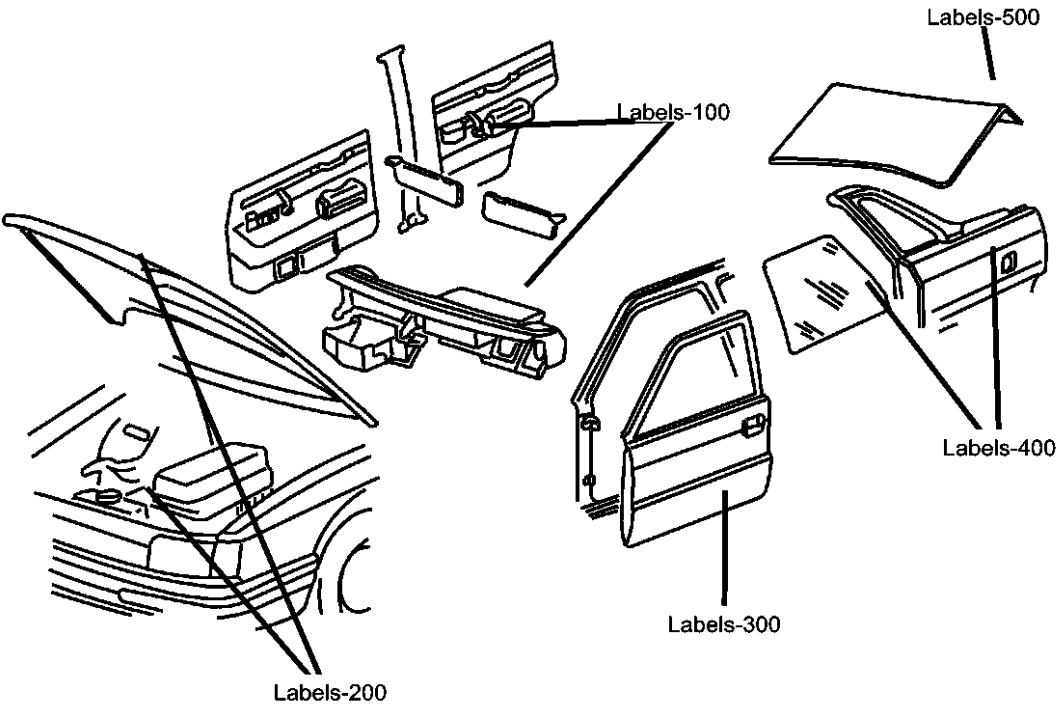
## Labels All Vehicle Locations



## Group - LBLS Labels All Vehicle Locations

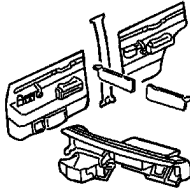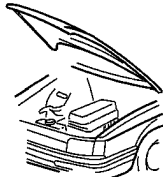Illustration Title	Group-Fig. No.
<b>Interior</b>	
Instrument Panel, Visors & Trim .....	Fig. LBLS - 110
<b>Under Hood</b>	
Engine Compartment .....	Fig. LBLS - 210
<b>Doors</b>	
Door and Pillars .....	Fig. LBLS - 310
Rear Glass.....	Fig. LBLS - 320
<b>Exterior</b>	
Fuel Door/Filler .....	Fig. LBLS - 410
<b>Rear Cargo &amp; Storage</b>	
Jack Assembly .....	Fig. LBLS - 510
Rear Cargo .....	Fig. LBLS - 520

<b>LBLS-100</b> Interior	<b>LBLS-200</b> Under Hood	<b>LBLS-300</b> Doors	<b>LBLS-400</b> Exterior
			
<b>LBLS-500</b> Rear Cargo & Storage			
			


Instrument Panel, Visors & Trim  
Figure LBL5-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	04680556AA	1							DECAL, Seat Belt Safety
2									LABEL, Air Bag Warning
	04649281AA	4							Seat Side (English-French)
	04664294AA	1							Side (English-Arabic)
	04787437AA	2							English-French
	05023540AA	2							Sun Visor (English-French)
	05023543AA	2							Sun Visor (English-Italian)
	05023548AA	2							English-Arabic
	05023743AA	2							Sun Visor (English-German)
	55197154AA	2							Export
3									LABEL, Air Bag Warning, Spanish
	04851416AA	1							Mexico
	05032545AA	2							Mexico side air bag warning
4	53015958AA	1							LABEL, Rollover Risk, English-Arabic
5	05031307AA	1							LABEL, Visor Warning, Rollover Risk, Mexico
6	55352825AA	1							LABEL, Warning, Rollover risk
-7	55352825AA	1							LABEL, Air Bag Warning, Spanish, (NOT SERVICED)
-8	04897875AA	2							LABEL, Airbag, Visor
9									LABEL, Tire Pressure
	52088962AB	1							USA / Mexico / Canada
	52088963AB	1							United Kingdom (English)
	52128593AB	1							Canada (French-English)
10	52128593AB	1							LABEL, Limited Warranty, (NOT SERVICED),
-11	56042844AD	1							LABEL, General Information, Sticker Sheet
-12	06032217	2							RIVET, .197 Grip-.187-.375, VIN plate attaching

LIBERTY (KJ)		BODY		ENGINE		TRANSMISSION	
SERIES	LINE						
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)		ED1 = Engine - 2.4L 4 Cyl		DDD = Transmission - 5-Speed HD	
H = Sport	U = RHD (4WD)			DOHC 16v SMPI		Manual	
M = Renegade	T = LHD (2WD)			EKG = Engine - 3.7L V6		DDK = Transmission - 5-Speed HD	
				ENJ = Engine -2.5L 4 Cyl 16V		Manual	
				Turbo Diesel		DG4 = Transmission-Multi-Speed	
				ENR = Engine - 2.8L 4 Cyl		Auto, 45RFE	
				Turbo Diesel		DG6 = Transmission-4-Spd.	
				EN0 = 4Cyl Turbo Diesel		Automatic, 42RLE	
				EK0 = All 3.7L		DGQ = Transmission-5-Spd Automatic	
				ED0 = All 2.4L		5-45RFE	
						DBB = All Manual Transmissions	
						DG0 = All Automatic Transmissions	

AR = use ase required - = Non illustrated part

# Engine Compartment Figure LBL5-210

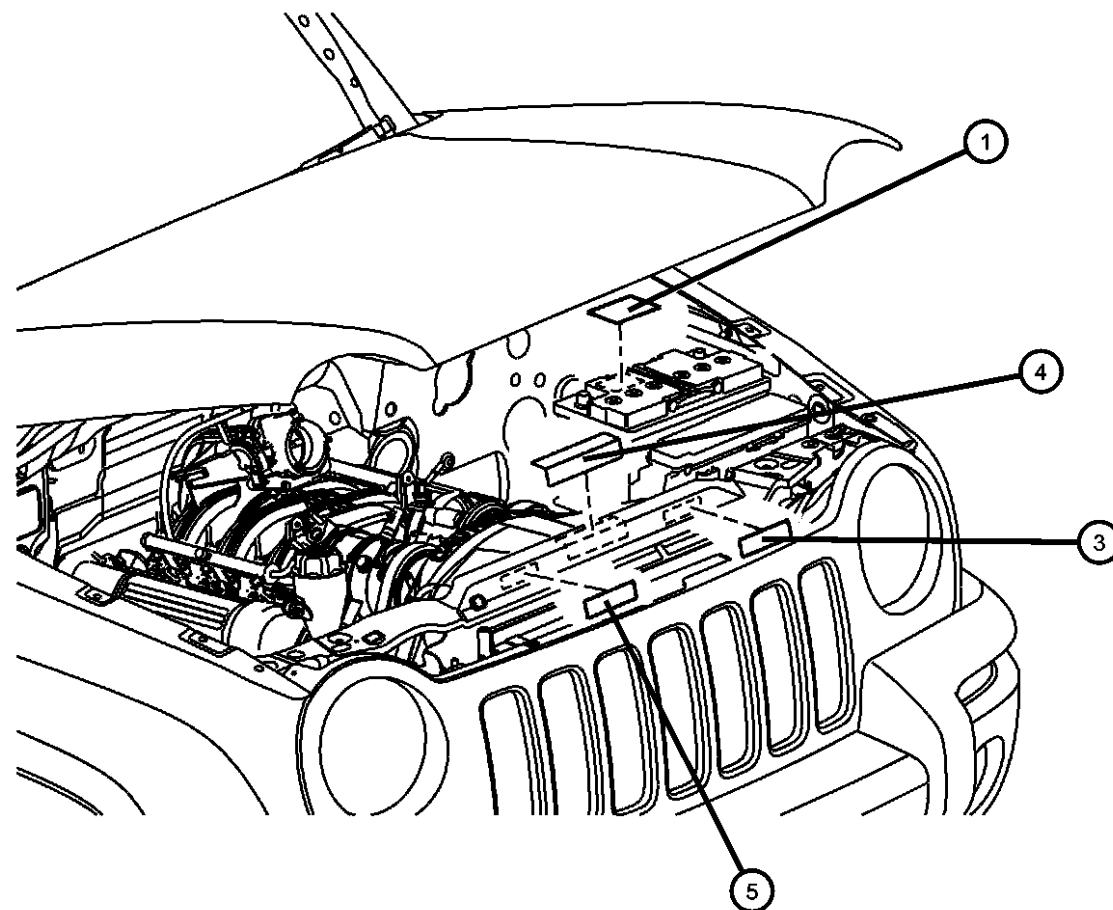

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Notes: [ED0] = 2.4L 4 Cylinder Engine [EK0] = 3.7L V6 Cylinder Engine [EN0] = 2.5L Diesel									
1									LABEL, Battery
	04606818AA	1				ED0, EK0			Export
	04793062	1				ED0, EK0			Warning, European Equipment
		1				ED0, EK0			
	05032786AA	1							Mexico
	56041046	1							French
-2	56041047	1							LABEL, Battery Jump Start, French
3									LABEL, Belt Routing
	05032784AA	1				EK0			Mexico
	53014005AA	1				EN0			
	53030960	1				EK0			
	53031758AA	1				ED0			
4									LABEL, Emission
	05271641AA	1				EK0			
	52129079AA	1				ED0			[NAS] Up to 11/14/03
	52129079AB	1				ED0			After 11/14/03 [NAS]
	52129080AA	1				EK0			[NAS][DG0]
	52129081AA	1				EK0			[NAS][DBB]
	52129082AA	1				ED0			[NA1] Up to 11/14/03
	52129082AB	1				ED0			After 11/14/03
	52129083AA	1				EK0			[NA1]
5									LABEL, Refrigerant
	55037464AD	1							
	05032796AB	1							Mexico
-6	52128784AA	1							LABEL, Warning, Brake Fluid (Arabic)
-7	05031287AA	1							LABEL, Fan Caution, Mexico

## LIBERTY (KJ)


SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Engine Compartment  
Figure LBL5-210


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-8	05032882AB	1							LABEL, Master Cylinder Reservoir, Mexico LABEL, Air Conditioning System
-9	55056343AA	1							

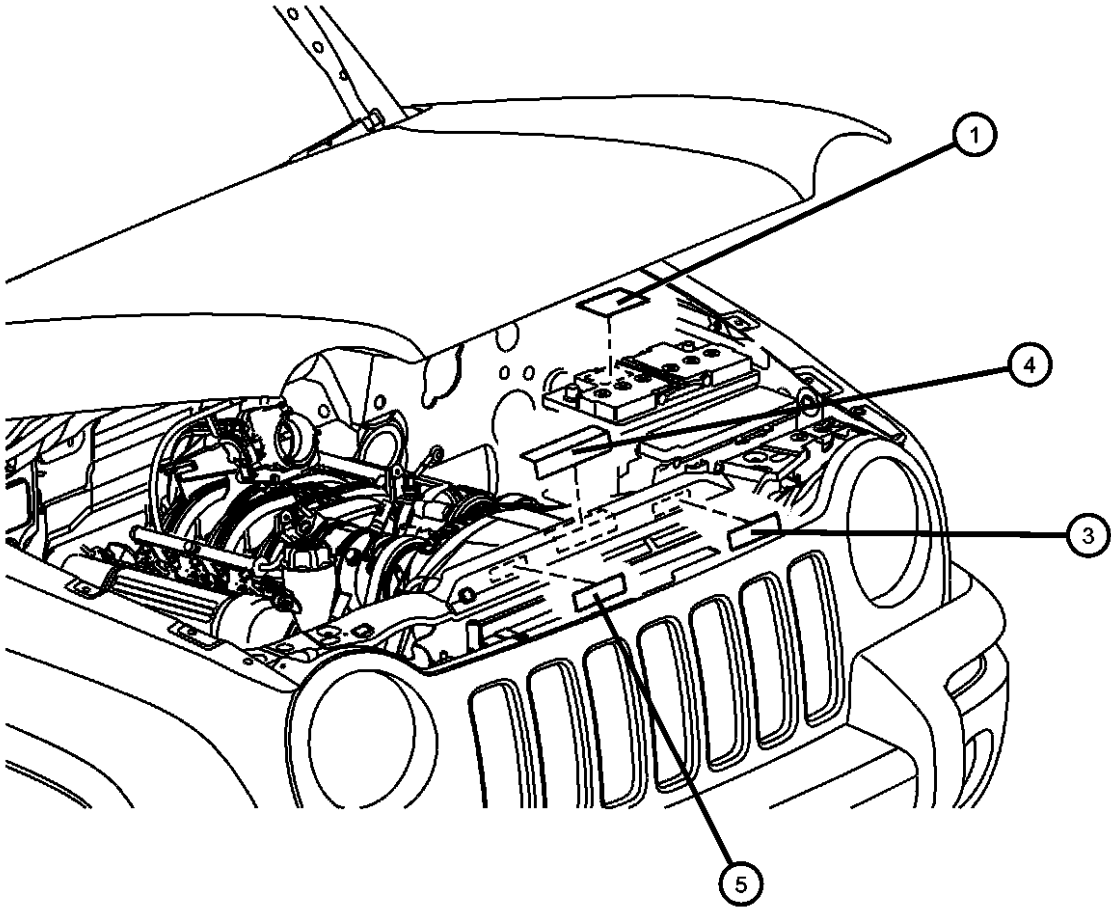

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions



Door and Pillars  
Figure LBL5-310

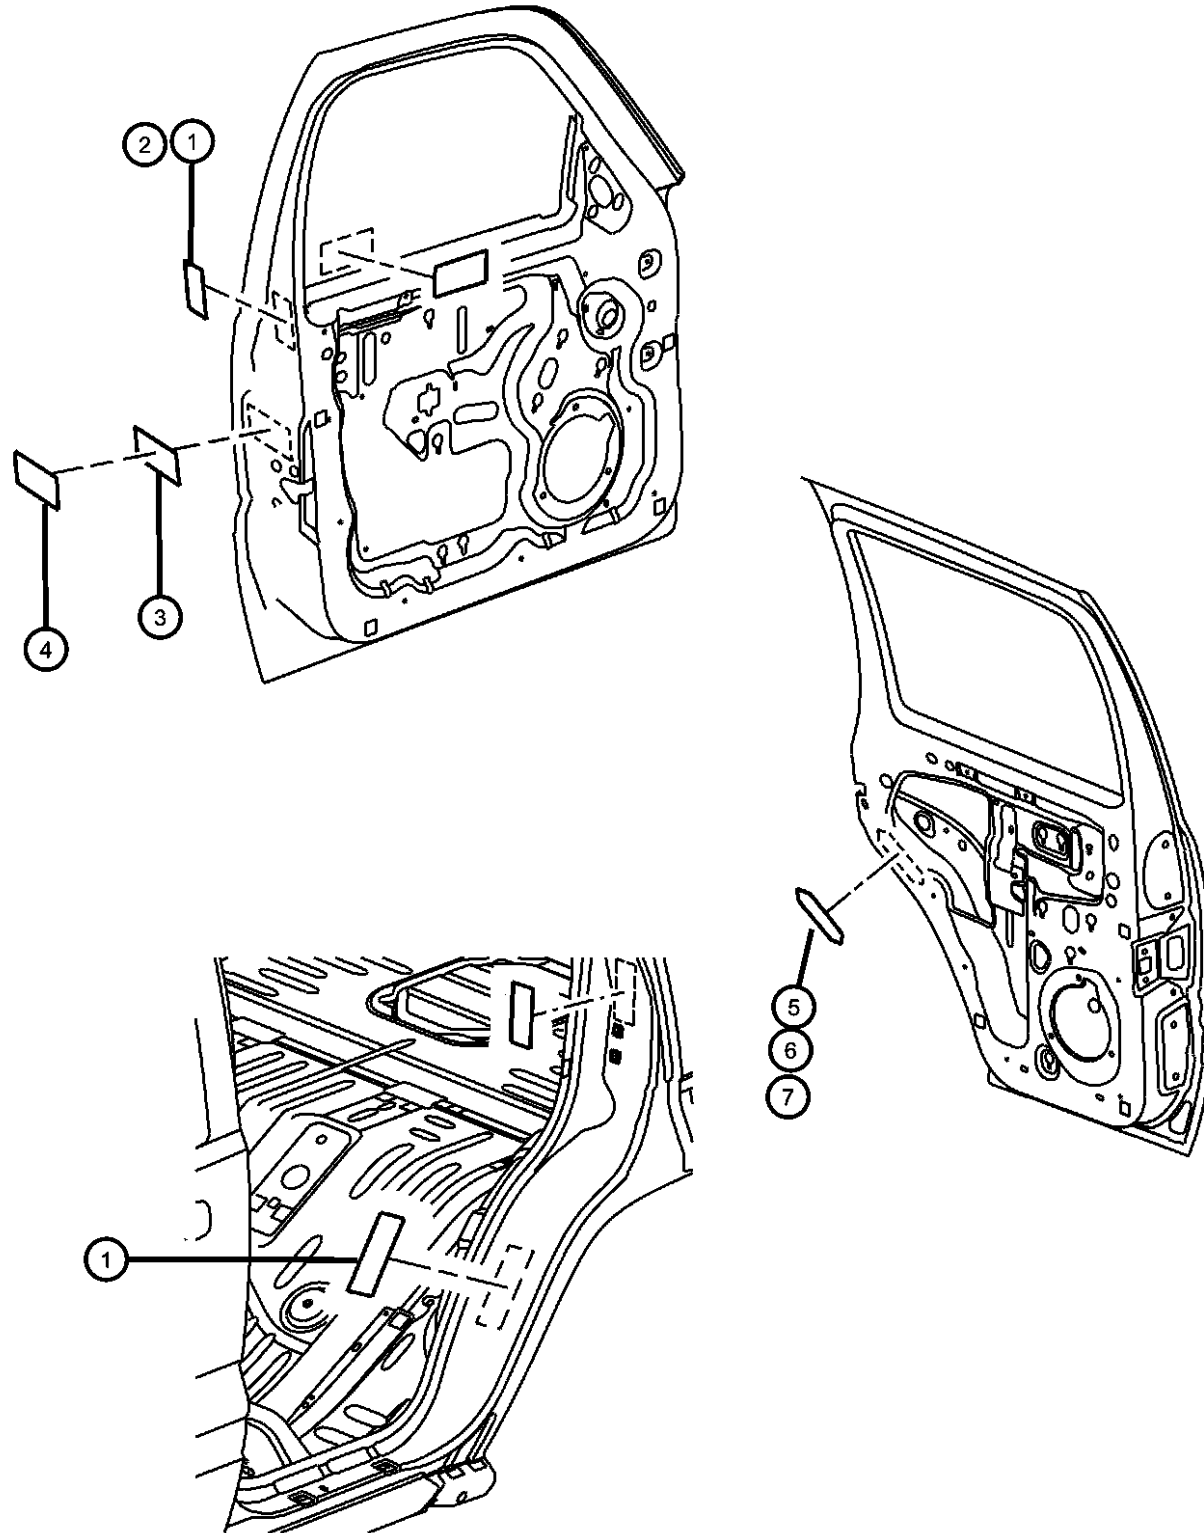

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	04649282AA	4							LABEL, Air Bag Warning
2	04898879AA	4							LABEL, Air Bag Warning, Spanish, Mexico
3	04898879AA	4							LABEL, Certification, (NOT SERVICED)
4	04040858	1							OVERLAY, Vehicle Certification
5									LABEL, Child Protection Lock, English
	04780544AA	1							Right
	04780545AA	1							Left
6									LABEL, Child Protection Lock, French
	04780546AC	1							Right
	04780547AC	1							Left
7									LABEL, Child Protection Lock
	04852524AA	1							Mexico, Right
	04852525AA	1							Mexico, Left
-8	53015960AA	1							LABEL, Exhaust Gas Warning, English & Arabic
-9									LABEL, Tire Pressure
	05271243AA	1							Mexico
	52088962AB	1							
	52088963AB	1							[ABA]
	52128593AB	1							[XLR]
-10	04851416AA	1							LABEL, Air Bag Warning, Spanish, Mexico

LIBERTY (KJ)

SERIES

P = Limited

H = Sport

M = Renegade

LINE

J = LHD (4WD)

U = RHD (4WD)

T = LHD (2WD)

BODY

74 = 4 Door (104.3 WB)

ENGINE

ED1 = Engine - 2.4L 4 Cyl

DOHC 16v SMPI

EKG = Engine - 3.7L V6

ENJ = Engine -2.5L 4 Cyl 16V

Turbo Diesel

ENR = Engine - 2.8L 4 Cyl

Turbo Diesel

EN0 = 4Cyl Turbo Diesel

EK0 = All 3.7L

ED0 = All 2.4L

TRANSMISSION

DDD = Transmission - 5-Speed HD Manual

DDK = Transmission - 5-Speed HD Manual

DG4 = Transmission-Multi-Speed

Auto, 45RFE

DG6 = Transmission-4-Spd.

Automatic, 42RLE

DGQ = Transmission-5-Spd Automatic

5-45RFE


DBB = All Manual Transmissions

DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

2004 KJ

Rear Glass  
Figure LBLS-320

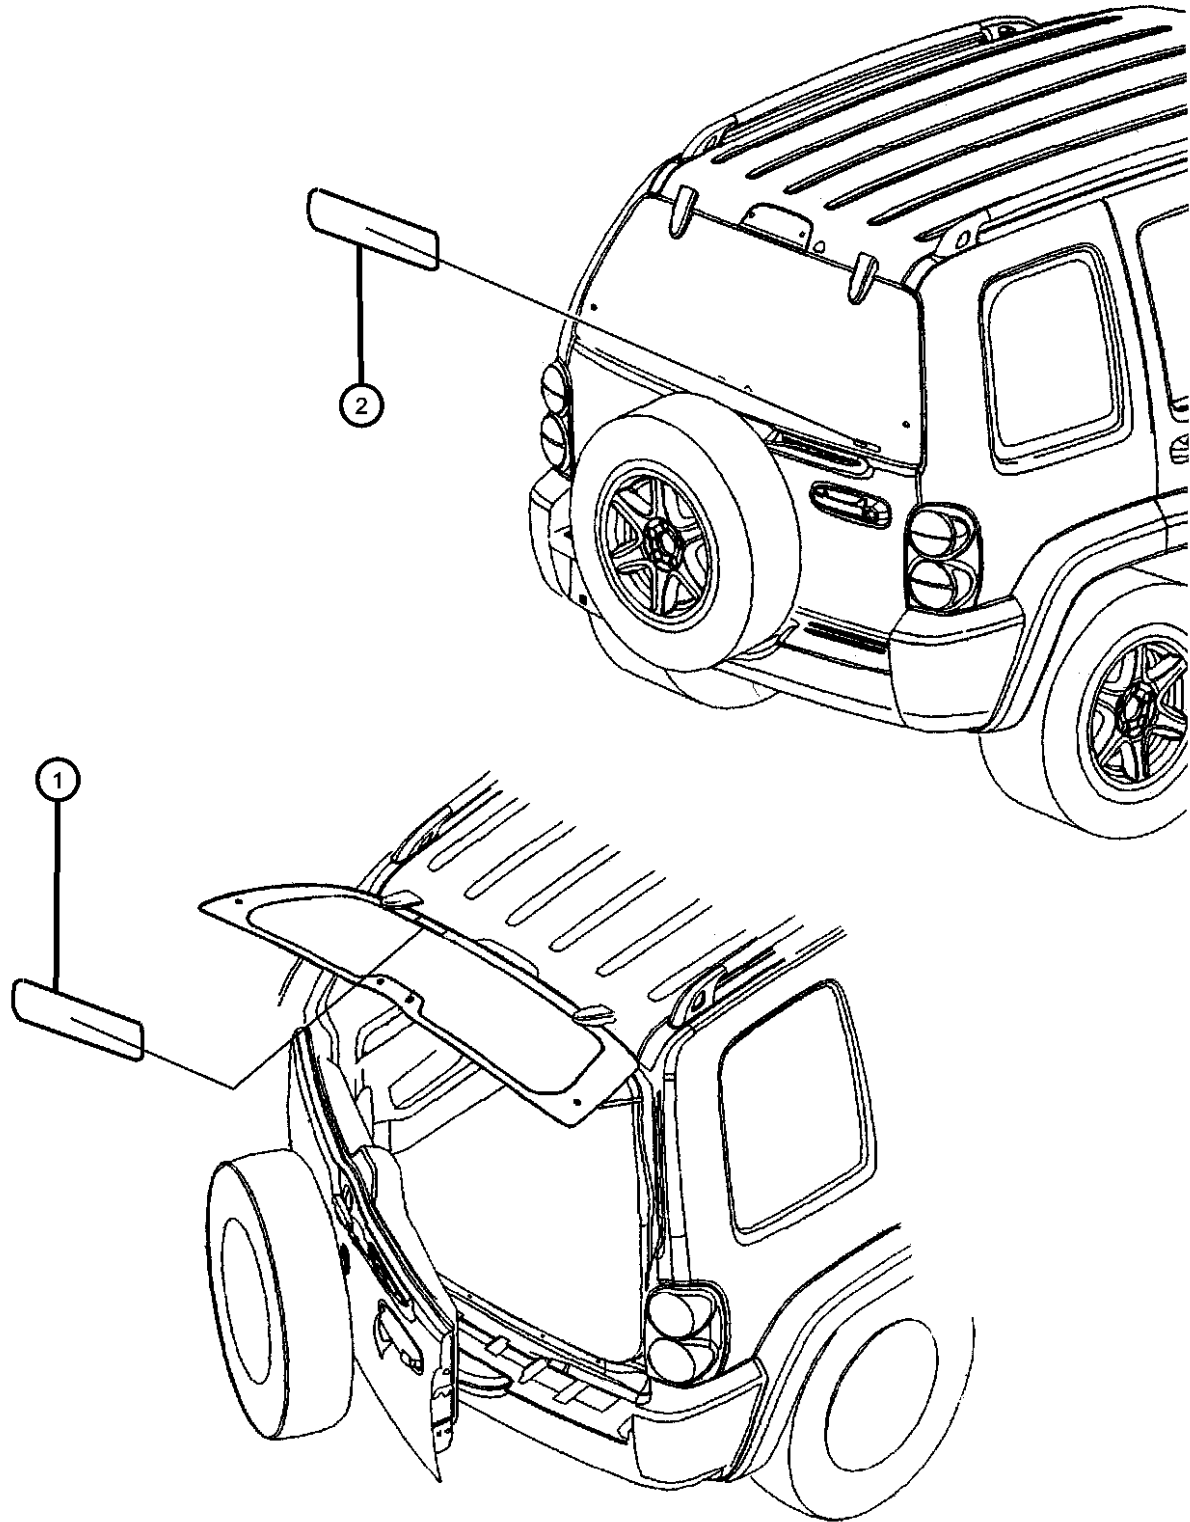


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	05032370AA	1							LABEL, Flipper Glass, Warning Mexico [GEJ,XLR] [GEG,XLR] Privacy Glass, Mideast Equipment
	55360573AA	1							
	55360582AA	1							
	55360583AA	1							
2	05032387AA	1							LABEL, Warning, Exhaust Gas Mexico
	05056223AA	1							

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions

Fuel Door/Filler  
Figure LBL5-410


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									LABEL, Fuel
	55295856	1				ED0, EK0			Gas Only
	J5464900	1				EN0			Diesel

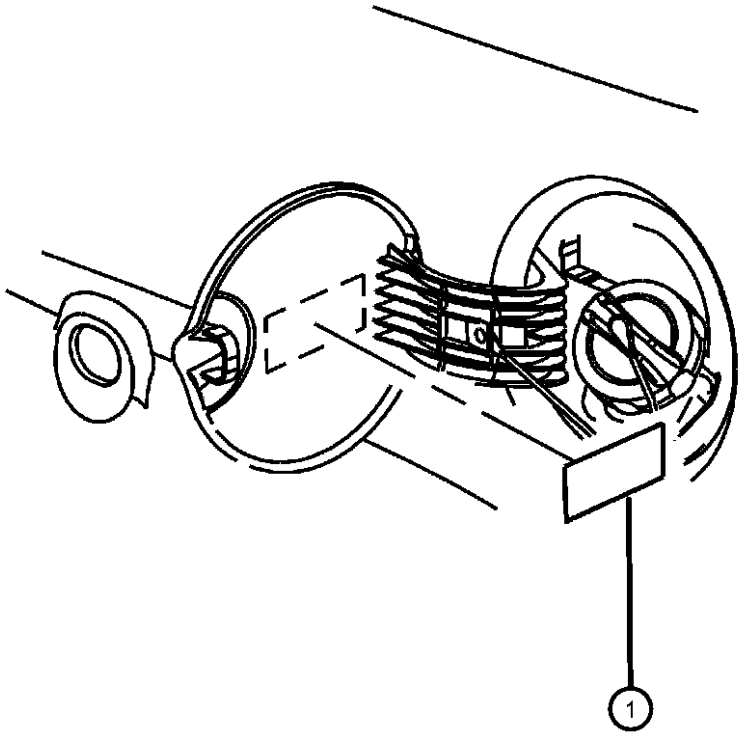

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

Jack Assembly  
Figure LBL5-510

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-1	52059371AA	1							LABEL, Jack Instructions, Australia Group
2	52110391AA	1							LABEL, Australia Group, Jack Carrier
3									LABEL, Jack Caution
	05271495AA	1							[XL5]
	52110391AB	1							English
	52110392AB	1							[XLR]
		1							[XLS]
	52110400AB	1							ABD

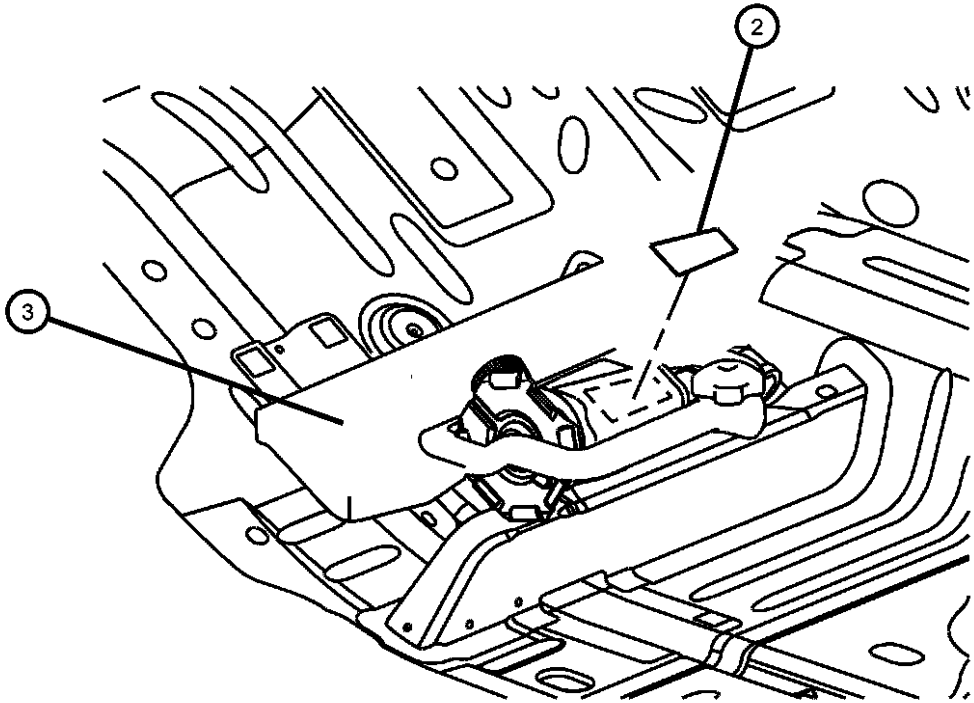


LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl DOHC 16v SMPI	DDD = Transmission - 5-Speed HD Manual
H = Sport	U = RHD (4WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD Manual
M = Renegade	T = LHD (2WD)		ENJ = Engine -2.5L 4 Cyl 16V Turbo Diesel	DG4 = Transmission-Multi-Speed Auto, 45RFE
			ENR = Engine - 2.8L 4 Cyl Turbo Diesel	DG6 = Transmission-4-Spd. Automatic, 42RLE
			EN0 = 4Cyl Turbo Diesel	DGQ = Transmission-5-Spd Automatic 5-45RFE
			EK0 = All 3.7L	DBB = All Manual Transmissions
			ED0 = All 2.4L	DG0 = All Automatic Transmissions

AR = use ase required - = Non illustrated part

Rear Cargo  
Figure LBLS-520

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									LABEL, Warning
	05271575AA	1							Cargo Organizer mexico
	55352890AA	1							Cargo Organizer (French)
	55352891AA	1							Cargo Organizer (Arabic)

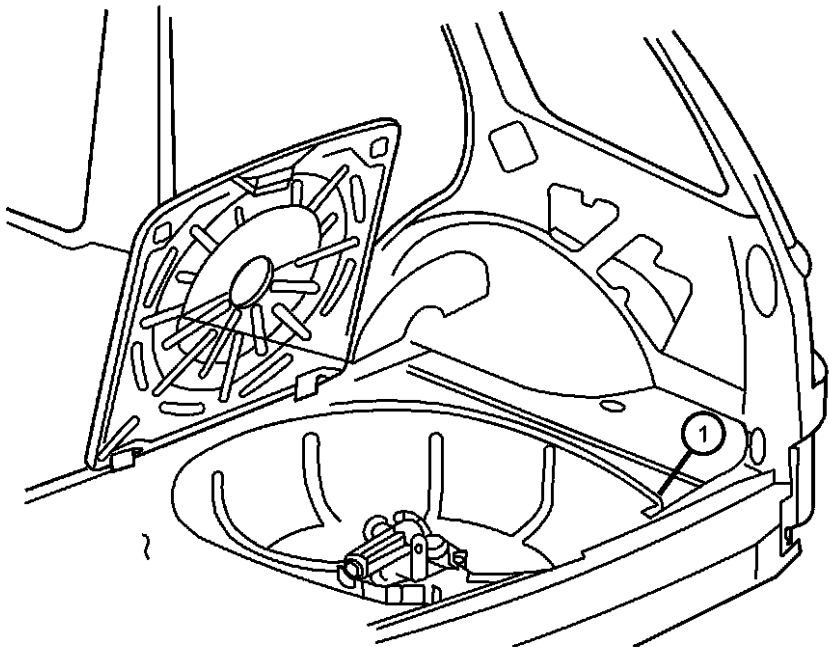

LIBERTY (KJ)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
P = Limited	J = LHD (4WD)	74 = 4 Door (104.3 WB)	ED1 = Engine - 2.4L 4 Cyl	DDD = Transmission - 5-Speed HD
H = Sport	U = RHD (4WD)		DOHC 16v SMPI	Manual
M = Renegade	T = LHD (2WD)		EKG = Engine - 3.7L V6	DDK = Transmission - 5-Speed HD
			ENJ = Engine -2.5L 4 Cyl 16V	Manual
			Turbo Diesel	DG4 = Transmission-Multi-Speed
			ENR = Engine - 2.8L 4 Cyl	Auto, 45RFE
			Turbo Diesel	DG6 = Transmission-4-Spd.
			EN0 = 4Cyl Turbo Diesel	Automatic, 42RLE
			EK0 = All 3.7L	DGQ = Transmission-5-Spd Automatic
			ED0 = All 2.4L	5-45RFE
				DBB = All Manual Transmissions
				DG0 = All Automatic Transmissions