


Instrument Panel Storage Compartment Replacement

Removal Procedure


Important: Left - Hand Drive Shown, Right - Hand Drive Similar.

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .

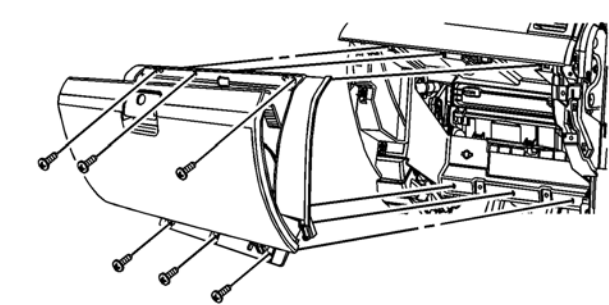

2. Remove the screws at the base of the storage compartment.
3. Open and remove the screws.
4. Disconnect the electrical connector.
5. Remove the storage compartment.

Installation Procedure

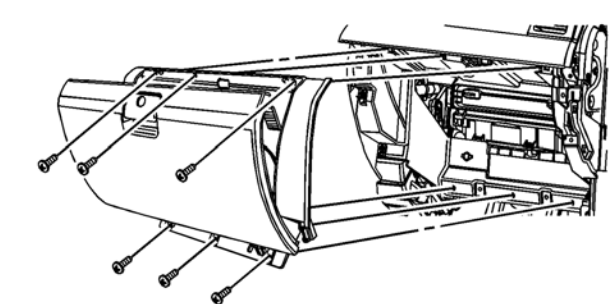

1. Position the storage compartment in the instrument panel.
2. Connect the electrical connector.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

3. Install the storage compartment with the screws.

Tighten

Tighten the storage compartment screws to 2 N·m (18 lb in).

4. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .