



Center Pillar Upper Garnish Molding Replacement

Removal Procedure

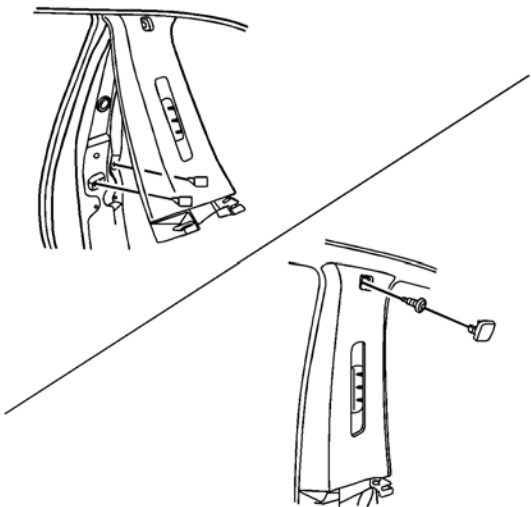

1. Remove the bolt and the upper front seat belt anchor.
2. Reposition the upper portion of the center pillar lower garnish molding.
3. Remove the screw and pry off the center pillar upper garnish molding.

Installation Procedure

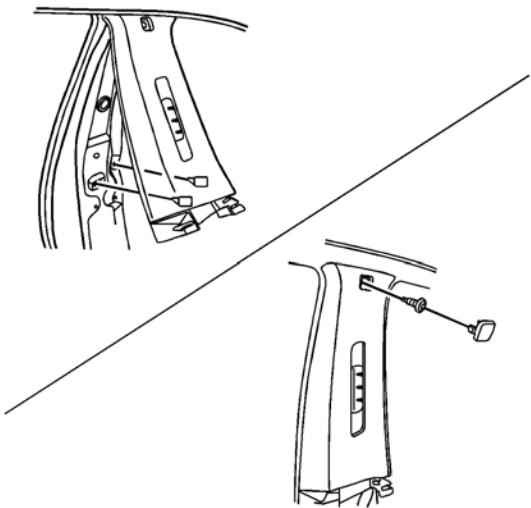

1. Install the center pillar upper garnish molding.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

2. Install the upper portion of the center pillar lower garnish molding.

Tighten

Tighten the center pillar lower garnish molding screw to 22 N·m (16 lb ft).

3. Install the upper front seat belt anchor with the bolt.

Tighten

Tighten the seat belt anchor bolt to 38 N·m (28 lb ft).