



Steering Column Trim Covers Replacement (C100/Long Body)

Removal Procedure

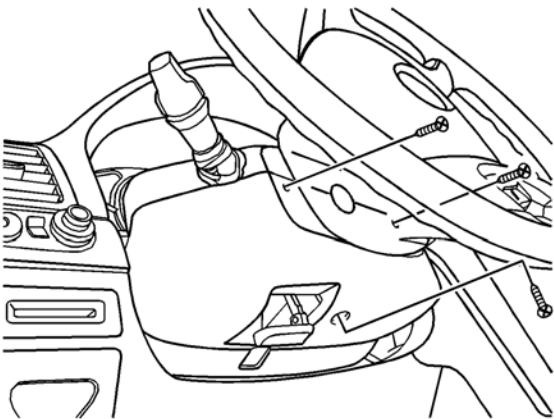


1. Remove the lower steering column cover screw.
2. Turn the steering wheel in order to expose the upper steering column cover screws. Remove the upper steering column cover screws and remove the upper steering column cover.

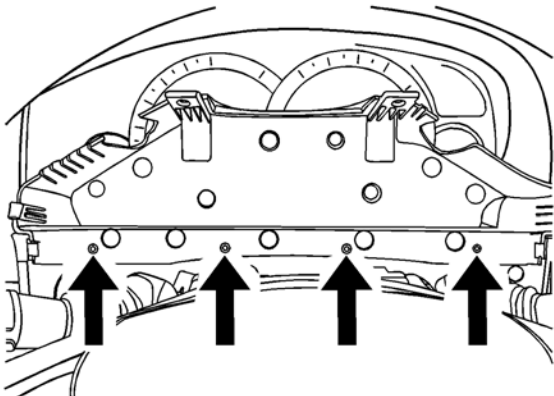

3. Remove the lower steering column cover from the cluster bezel.

Installation Procedure

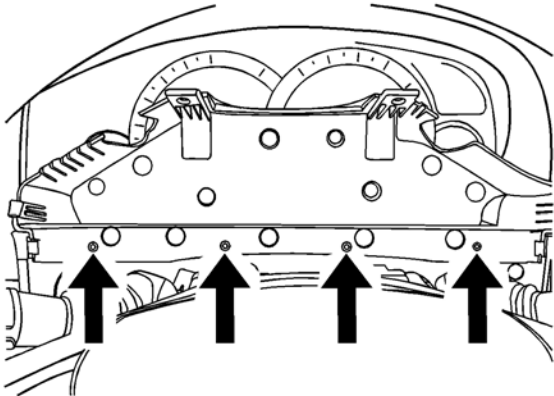

1. Install the lower steering column cover to the cluster bezel.
2. Install the upper steering column cover.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.