


Inflatable Restraint Instrument Panel Compartment Module Disable Switch Replacement

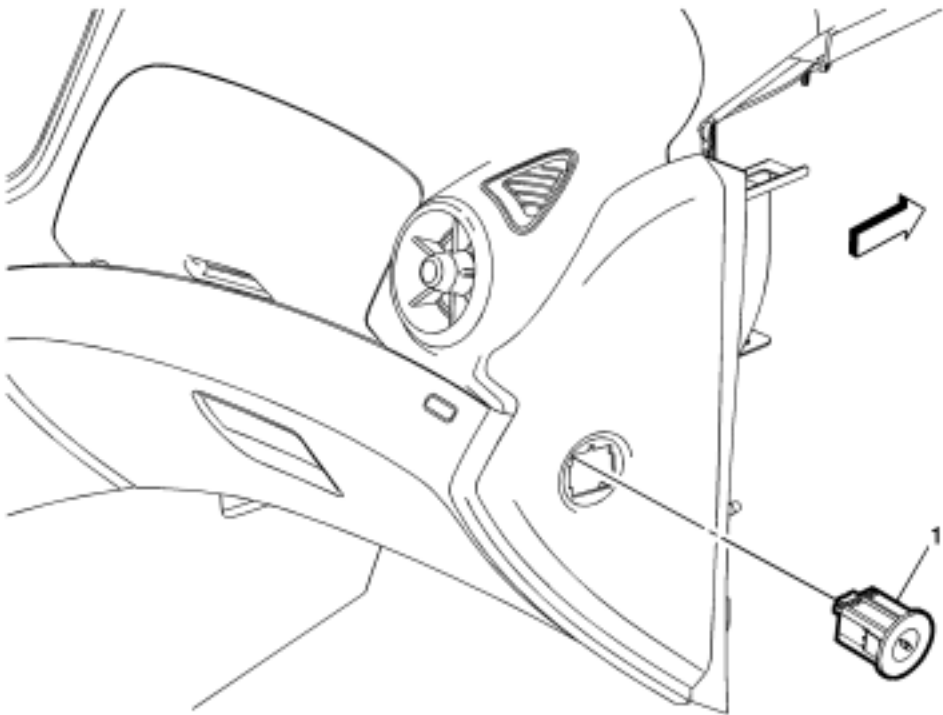

Callout	Component Name
<p>Warning: Refer to SIR Warning .</p> <p>Preliminary Procedure</p> <ol style="list-style-type: none">1. Disable the supplemental inflatable restraint (SIR) system. Refer to SIR Disabling and Enabling .2. Remove the instrument panel outer trim cover. Refer to Instrument Panel Outer Trim Cover Replacement .	
1	<p>Inflatable Restraint Instrument Panel Module Disable Switch Assembly</p> <p>Procedure</p> <ol style="list-style-type: none">1. Use a small flat bladed tool to aid in the removal of the switch from the instrument panel side trim panel.2. Disconnect the electrical connector.