




14. Extend the SIR deployment harness and adapter to full length from the deployment fixture.

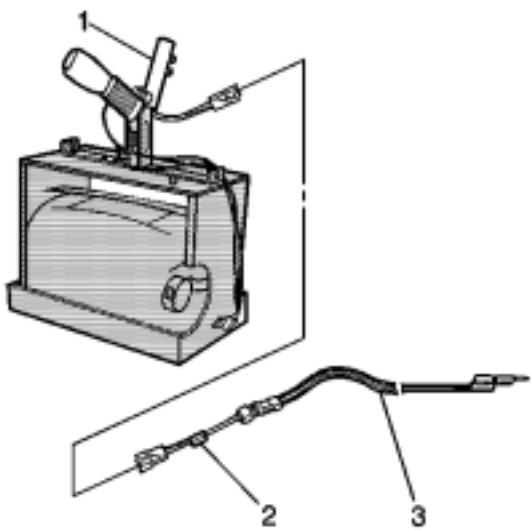

15. Connect the pretensioner (1) to the adapter (2) on the deployment harness (3).

Note: The rapid gas expansion involved with deploying a pretensioner is very loud. Notify all the people in the immediate area that you intend to deploy the seat belt pretensioner.

16. Clear the area of people.



Warning: When you are deploying a pretensioner for disposal, perform the deployment procedures in the order listed. Failure to follow the procedures in the order listed may result in personal injury.

17. Separate the 2 banana plugs on the SIR deployment harness.