


Instrument Panel Accessory Upper Trim Plate Replacement

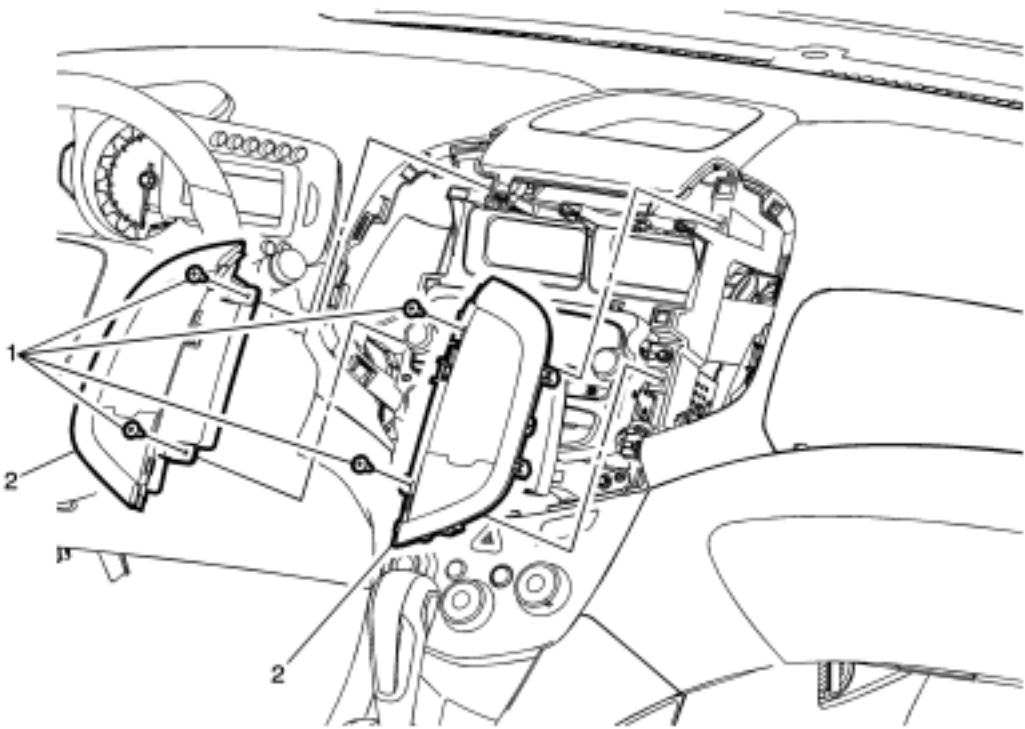

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the instrument panel center molding. Refer to Instrument Panel Center Molding Replacement .</p>	
1	<p>Instrument Panel Accessory Upper Trim Plate Fastener (Qty: 4)</p> <p>Caution: Refer to Fastener Caution .</p>
2	<p>Instrument Panel Accessory Upper Trim Plate (Qty: 2)</p> <p>Procedures</p> <p>1. Use a flat bladed plastic trim tool in order to disengage the retainers securing the accessory upper trim plates to the instrument panel assembly.</p> <p>2. When replacing the accessory trim plates, transfer all necessary components.</p>