



6.7. Remove the strut (7) from *CH-6066* holder (8).

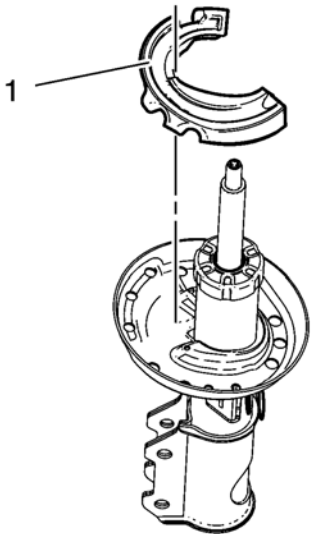


7. Remove the lower insulator (1). Inspect for damage and replace as necessary.

Assembly Procedure

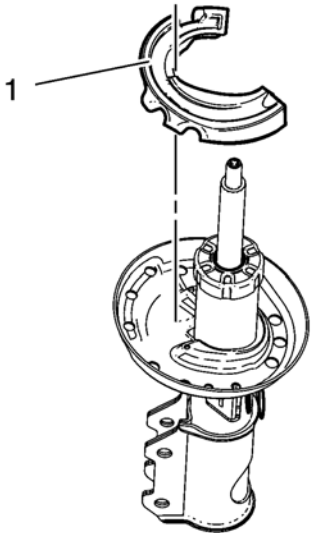

1. Install the lower insulator (1).

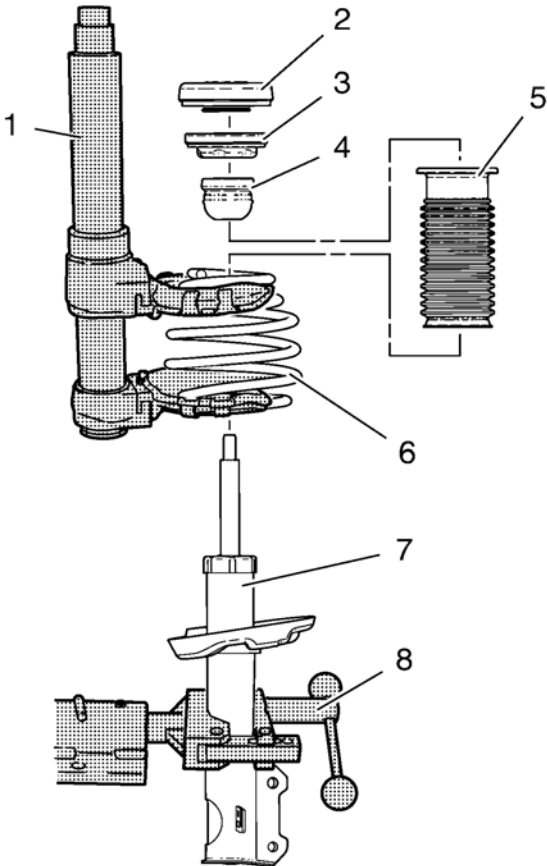

2. Install the spring strut components:
- 2.1. Install the strut (7) to the *CH-6066* holder (8).
 - 2.2. Install the spring (6) to the *CH-6068* tensioner (1), compress spring to remove the spring tension.
 - 2.3. Install the spring (6) to the strut (7).
 - 2.4. Install the insulator (5) to the strut (7).
 - 2.5. Install the bumper (4) to the strut (7).
 - 2.6. Install the strut mount bearing (3) to the strut (7).
 - 2.7. Install the mount insulator assembly (2) to the strut (7).