


- 9. Position the rocker outer panel on the vehicle.
- 10. Verify the fit of the rocker outer panel.
- 11. Clamp the rocker outer panel into position.

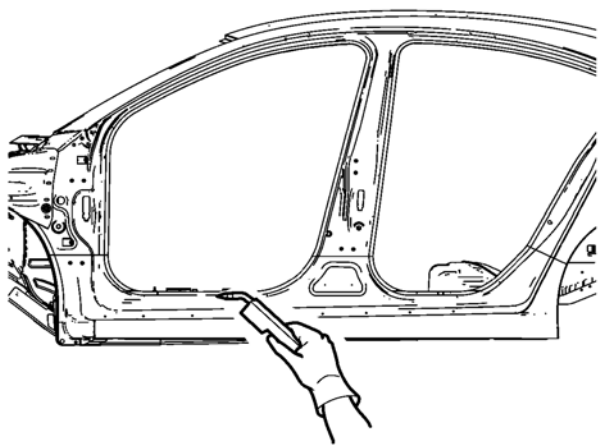

- 12. Plug weld accordingly.
- 13. To create a solid weld with minimum heat distortion, make 25 mm (1 in) stitch welds along the seam with 25 mm (1 in) gaps between them. Then go back and complete the stitch weld.
- 14. Apply the sealers and anti-corrosion materials to the repair area, as necessary. Refer to [Anti-Corrosion Treatment and Repair](#).
- 15. Paint the repaired area. Refer to [Basecoat/Clearcoat Paint Systems](#).
- 16. Install all related panels and components.
- 17. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#).
- 18. Enable the SIR system. Refer to [SIR Disabling and Enabling](#).