



- 10. Position the body lock pillar outer panel on the vehicle.
- 11. Verify the fit of the body lock pillar outer panel.
- 12. Clamp the body lock pillar outer panel into position.

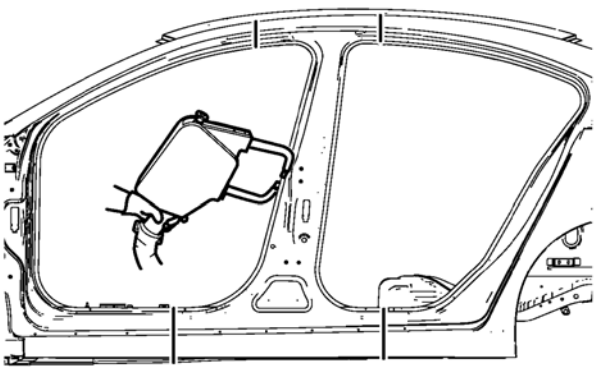

- 13. Spot weld accordingly.

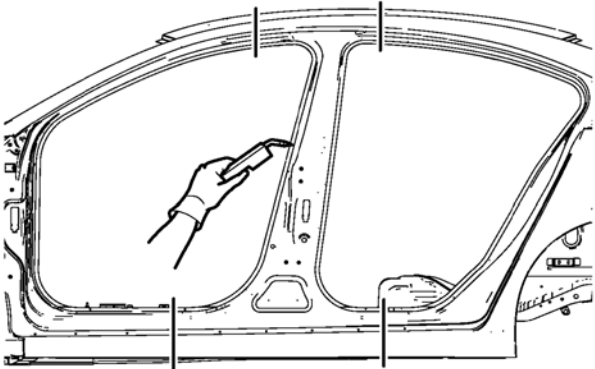

- 14. Braze accordingly.
- 15. To create a solid braze with minimum heat distortion, make 25 mm (1 in) stitch brazes along the seam with 25 mm (1 in) gaps between them. Then go back and complete the stitch braze.
- 16. Apply the sealers and anti-corrosion materials to the repair area, as necessary. Refer to [Anti-Corrosion Treatment and Repair](#).
- 17. Paint the repaired area. Refer to [Basecoat/Clearcoat Paint Systems](#).
- 18. Install all related panels and components.
- 19. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#).
- 20. Enable the SIR system. Refer to [SIR Disabling and Enabling](#).