



panel.

Note: If the location of the original plug weld holes can not be determined, space the slots every 40 mm (1½ in).

2. Clean and prepare the attaching surfaces for welding.

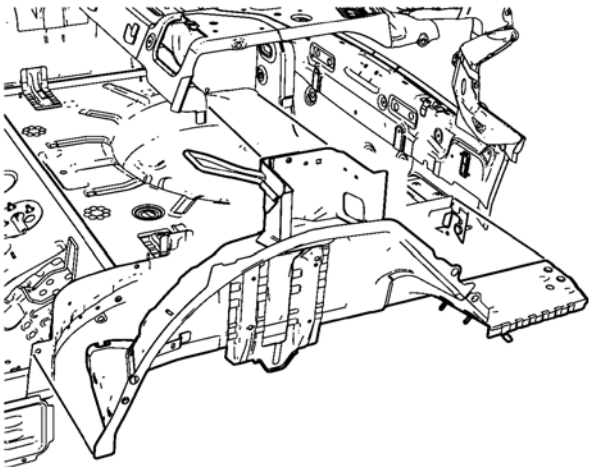

3. Position the rear inner wheelhouse on the vehicle.
4. Verify the fit of the rear inner wheelhouse.
5. Clamp the rear inner wheelhouse into position.

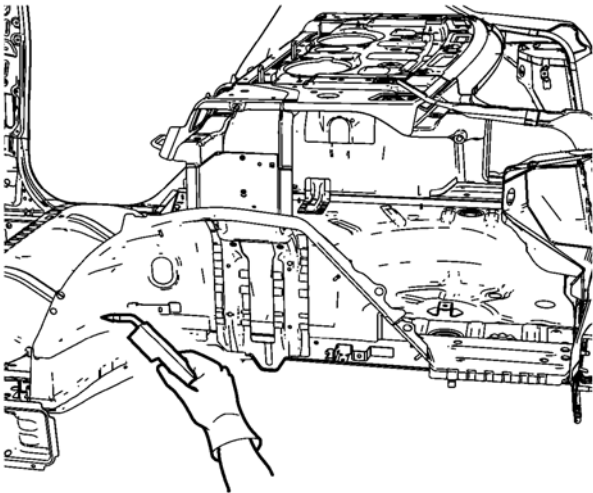

6. Braze accordingly.
7. Apply the sealers and anti-corrosion materials to the repair area, as necessary. Refer to [Anti-Corrosion Treatment and Repair](#).
8. Paint the repaired area. Refer to [Basecoat/Clearcoat Paint Systems](#).
9. Install all related panels and components.
10. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#).
11. Enable the SIR system. Refer to [SIR Disabling and Enabling](#).